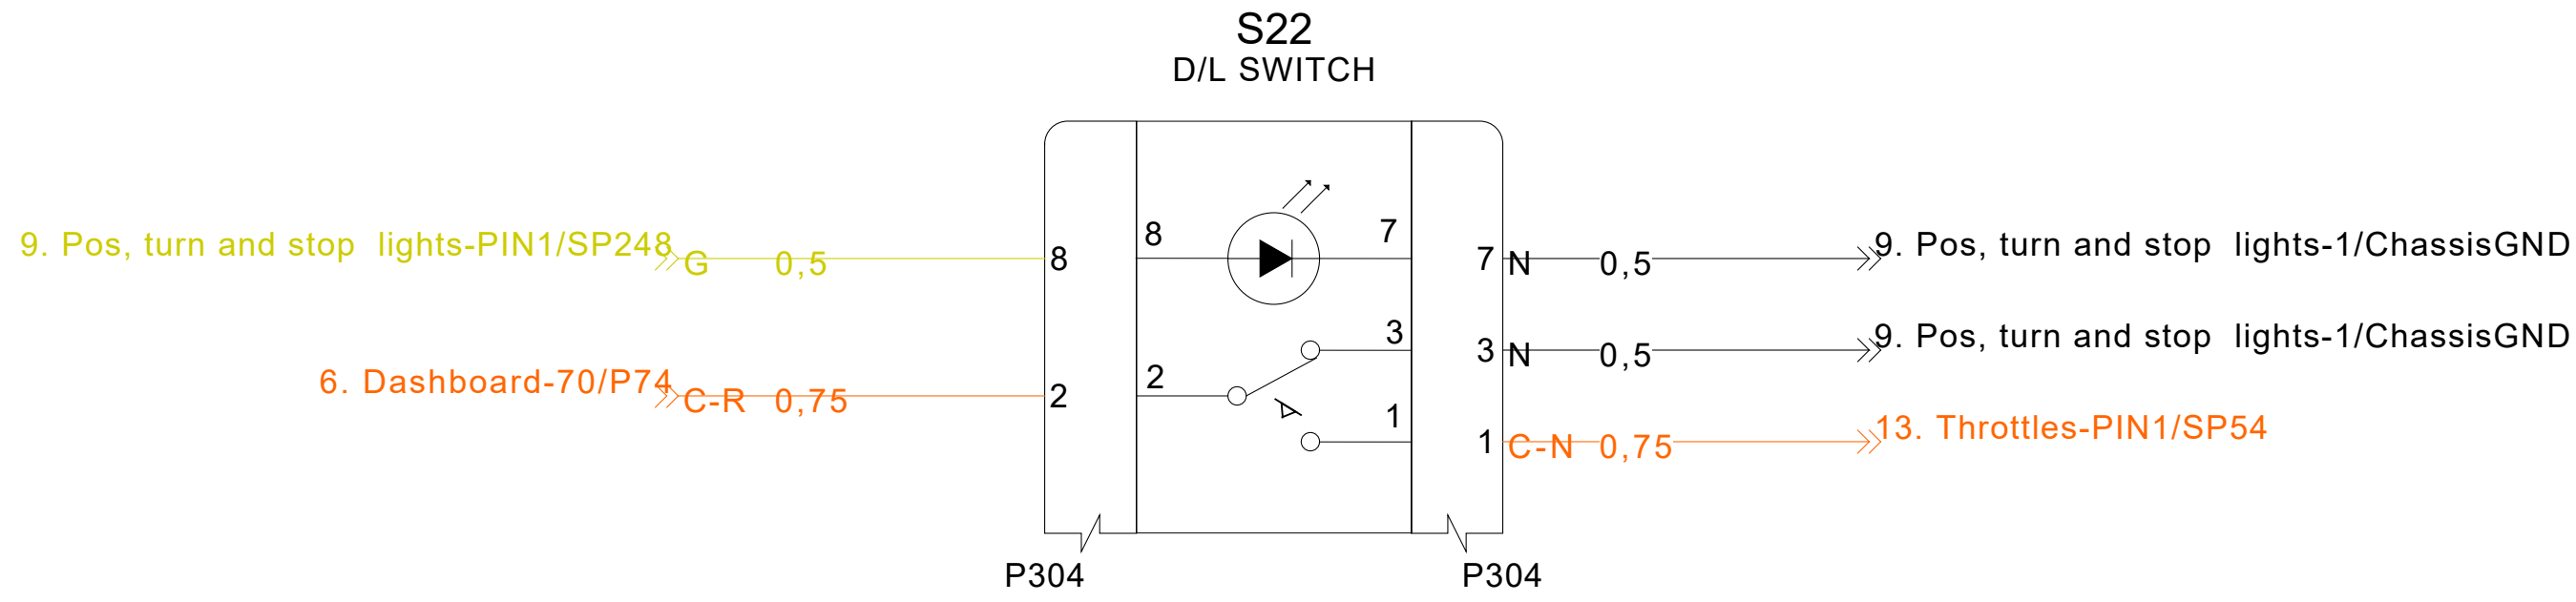
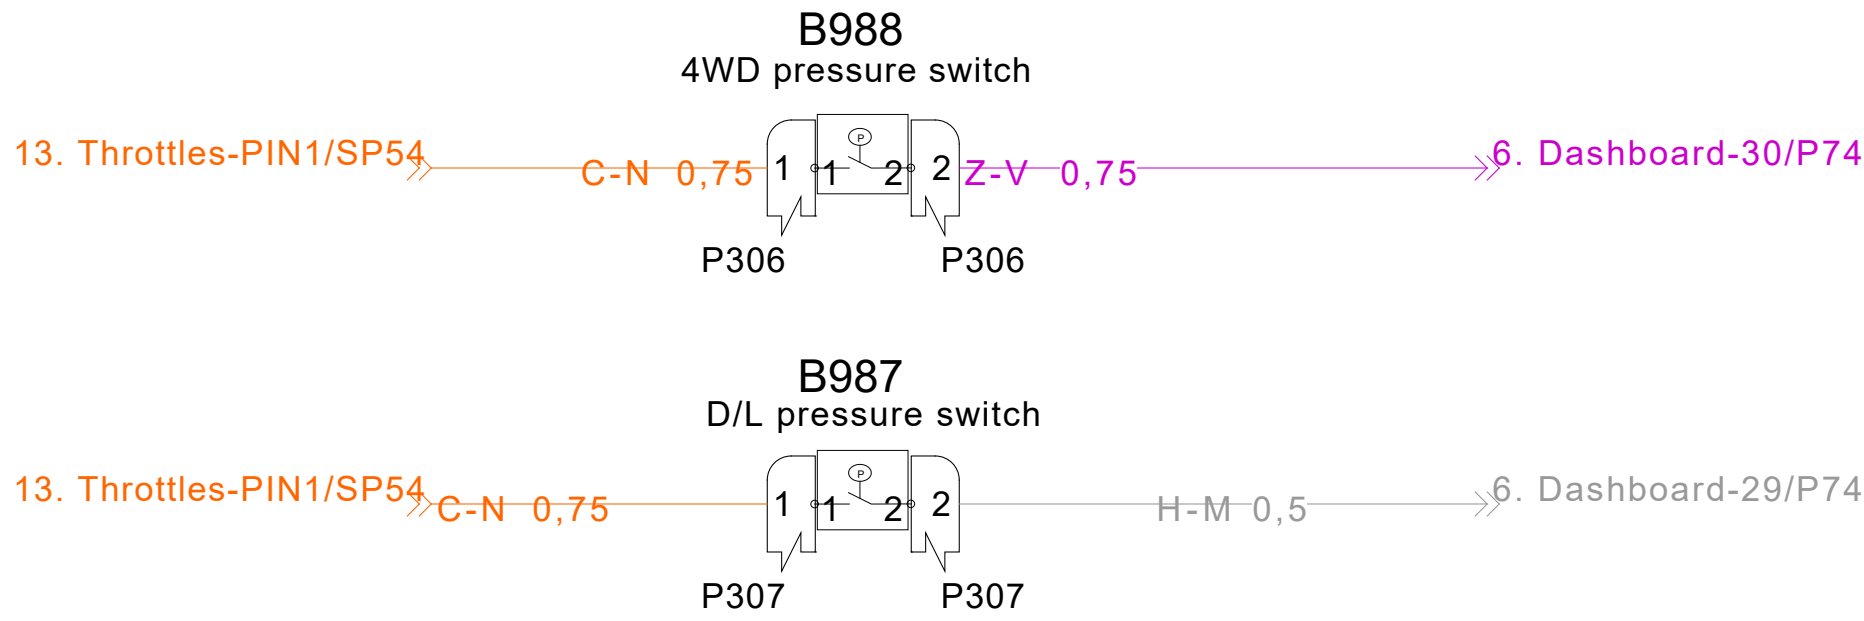
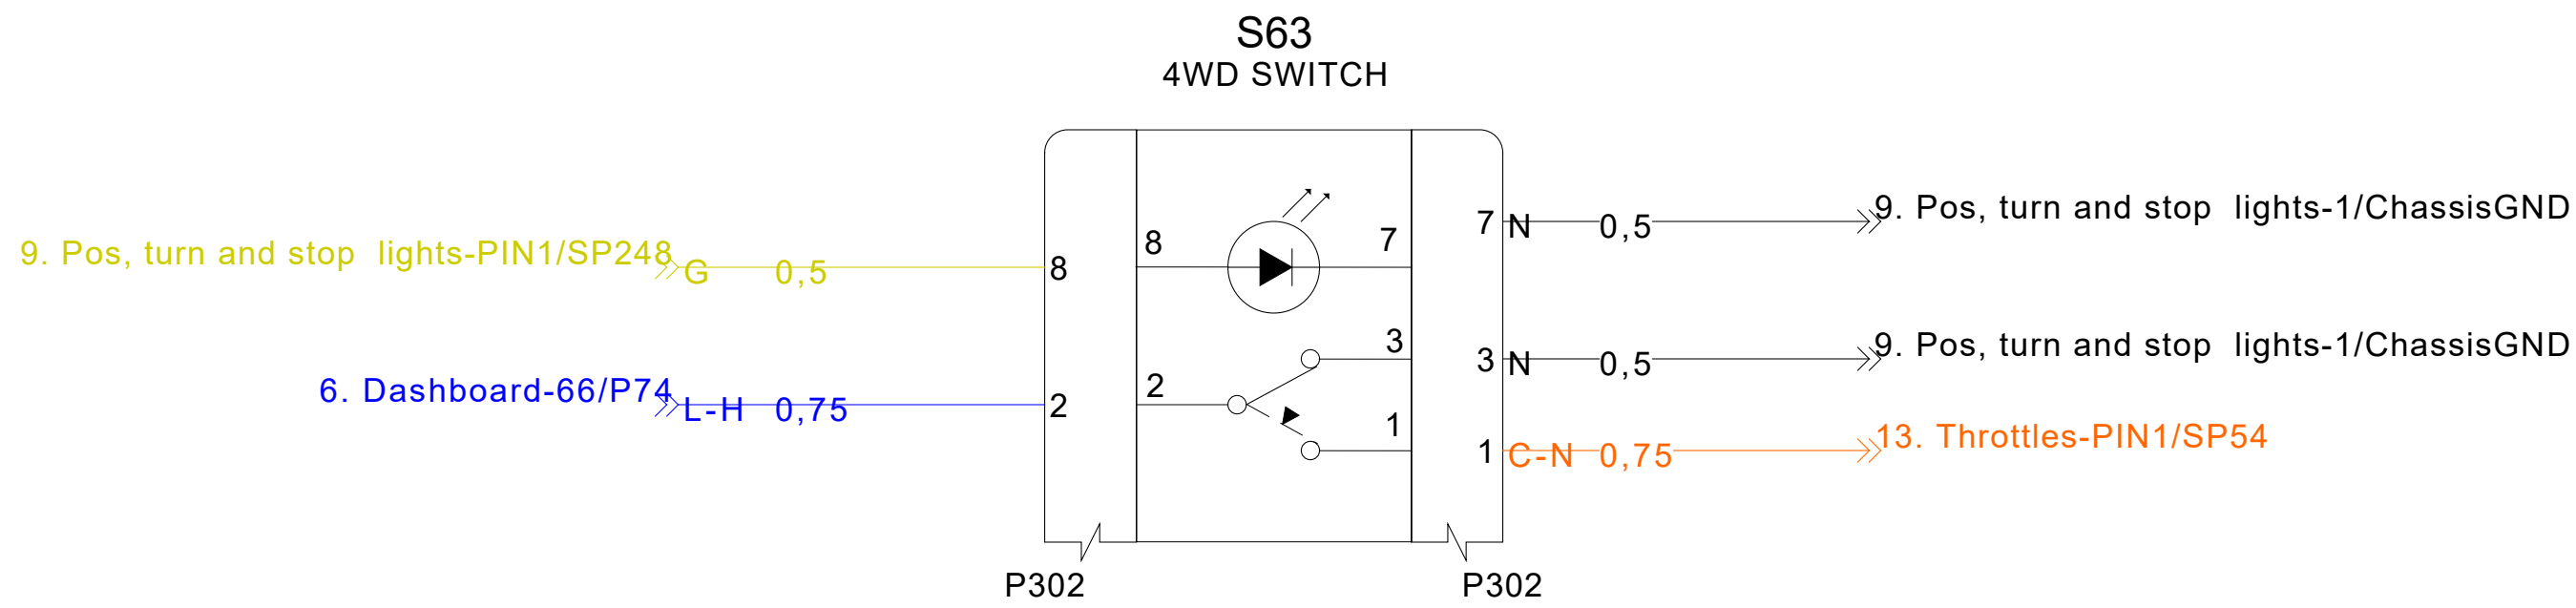


W01

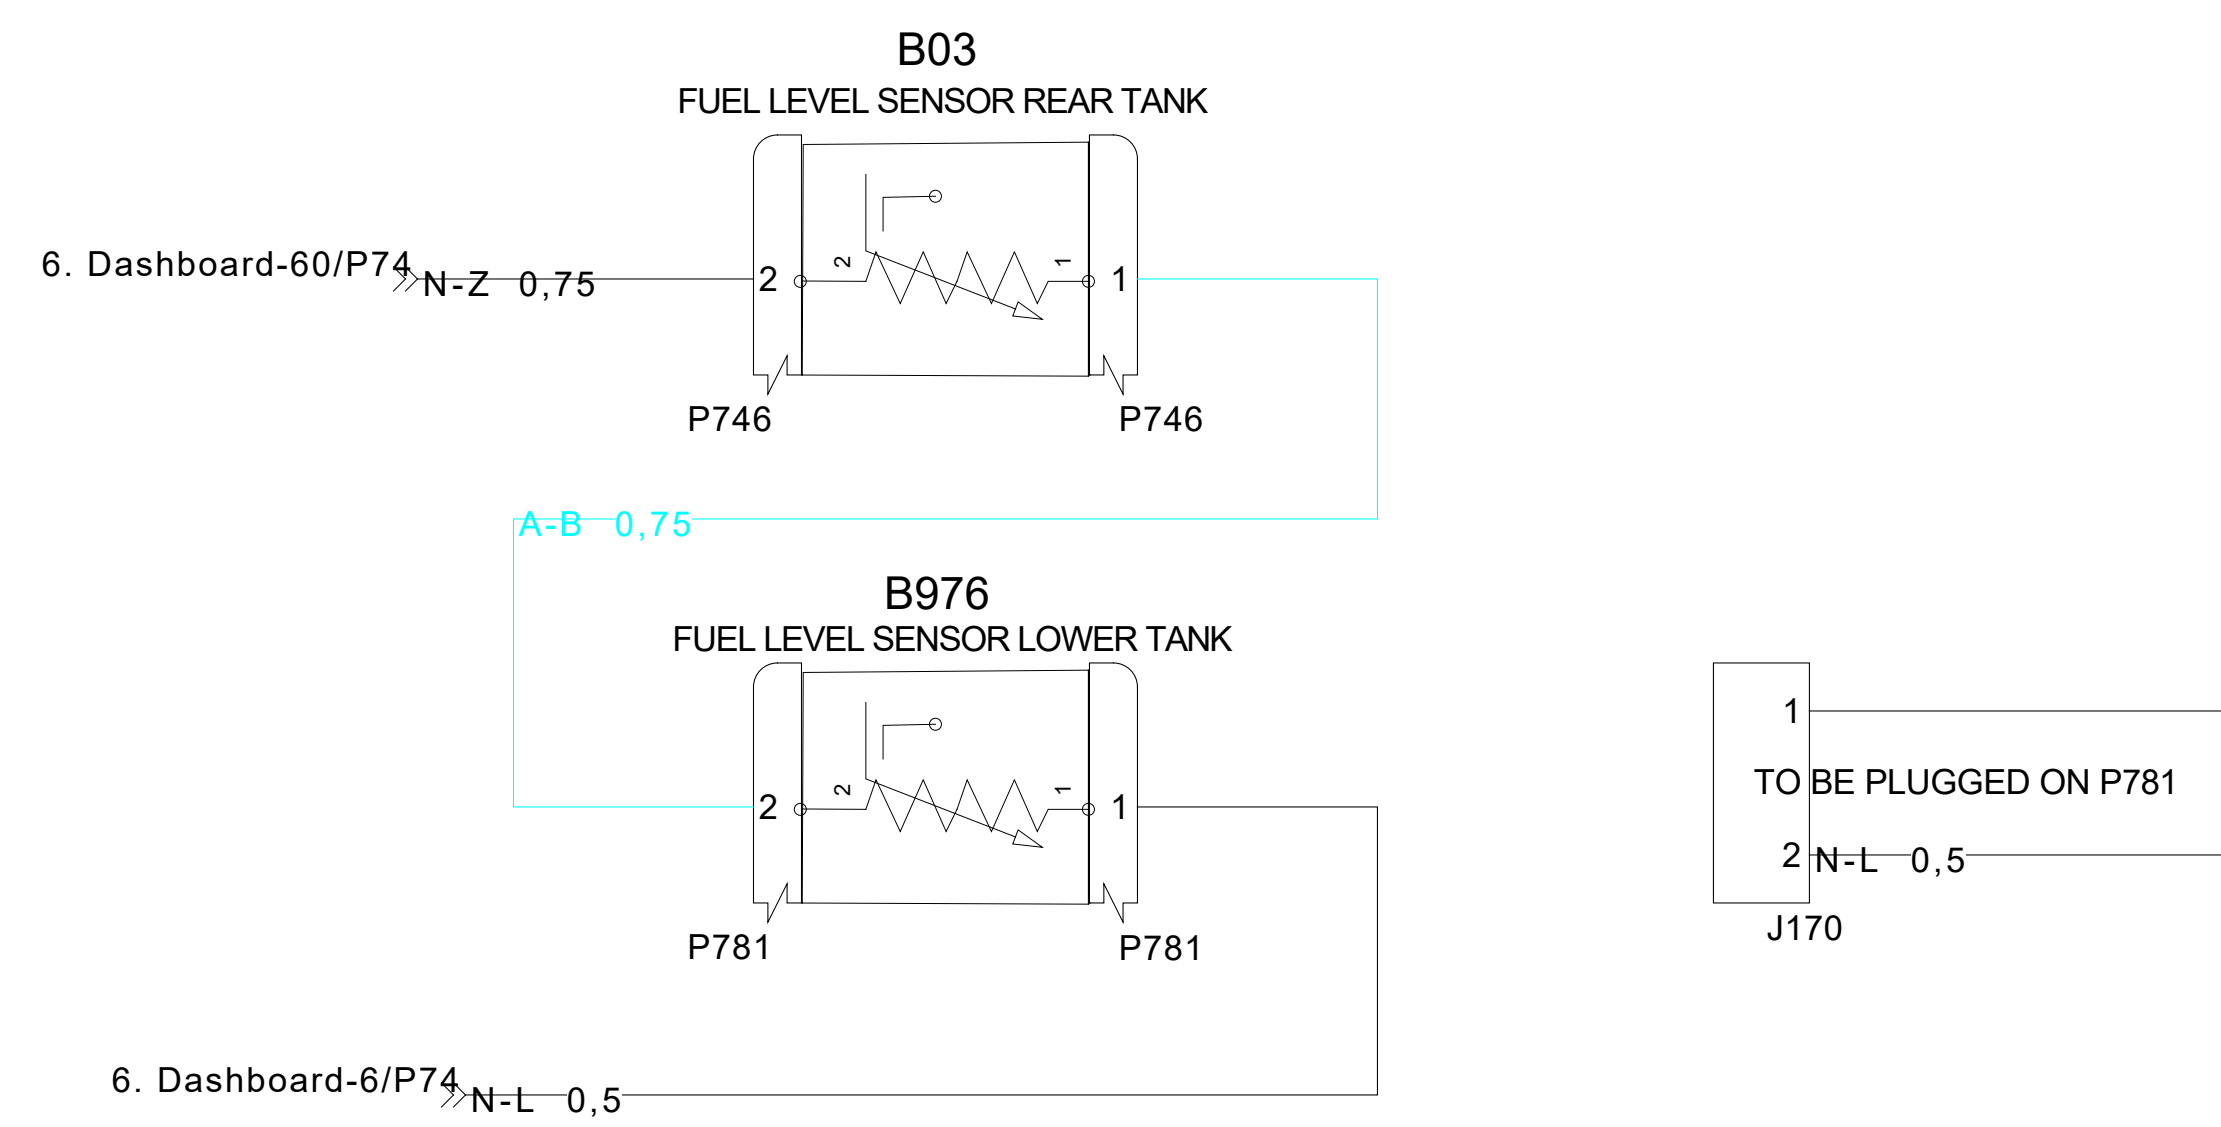


P302 - Connection to 4WD switch S63
P304 - Connection to Diff-lock switch S22
P306 - Connection to 4WD pressure switch B988
P307 - Connection to Diff-lock pressure switch B987
P358 - Connection to Diff-lock solenoid valve Y05
P359 - Connection to 4WD valve Y03


W01




P74 - Connection to Instrument panel A330
P88 - Connection to Resistance 120 Ohms R997
P649 - NOT USED



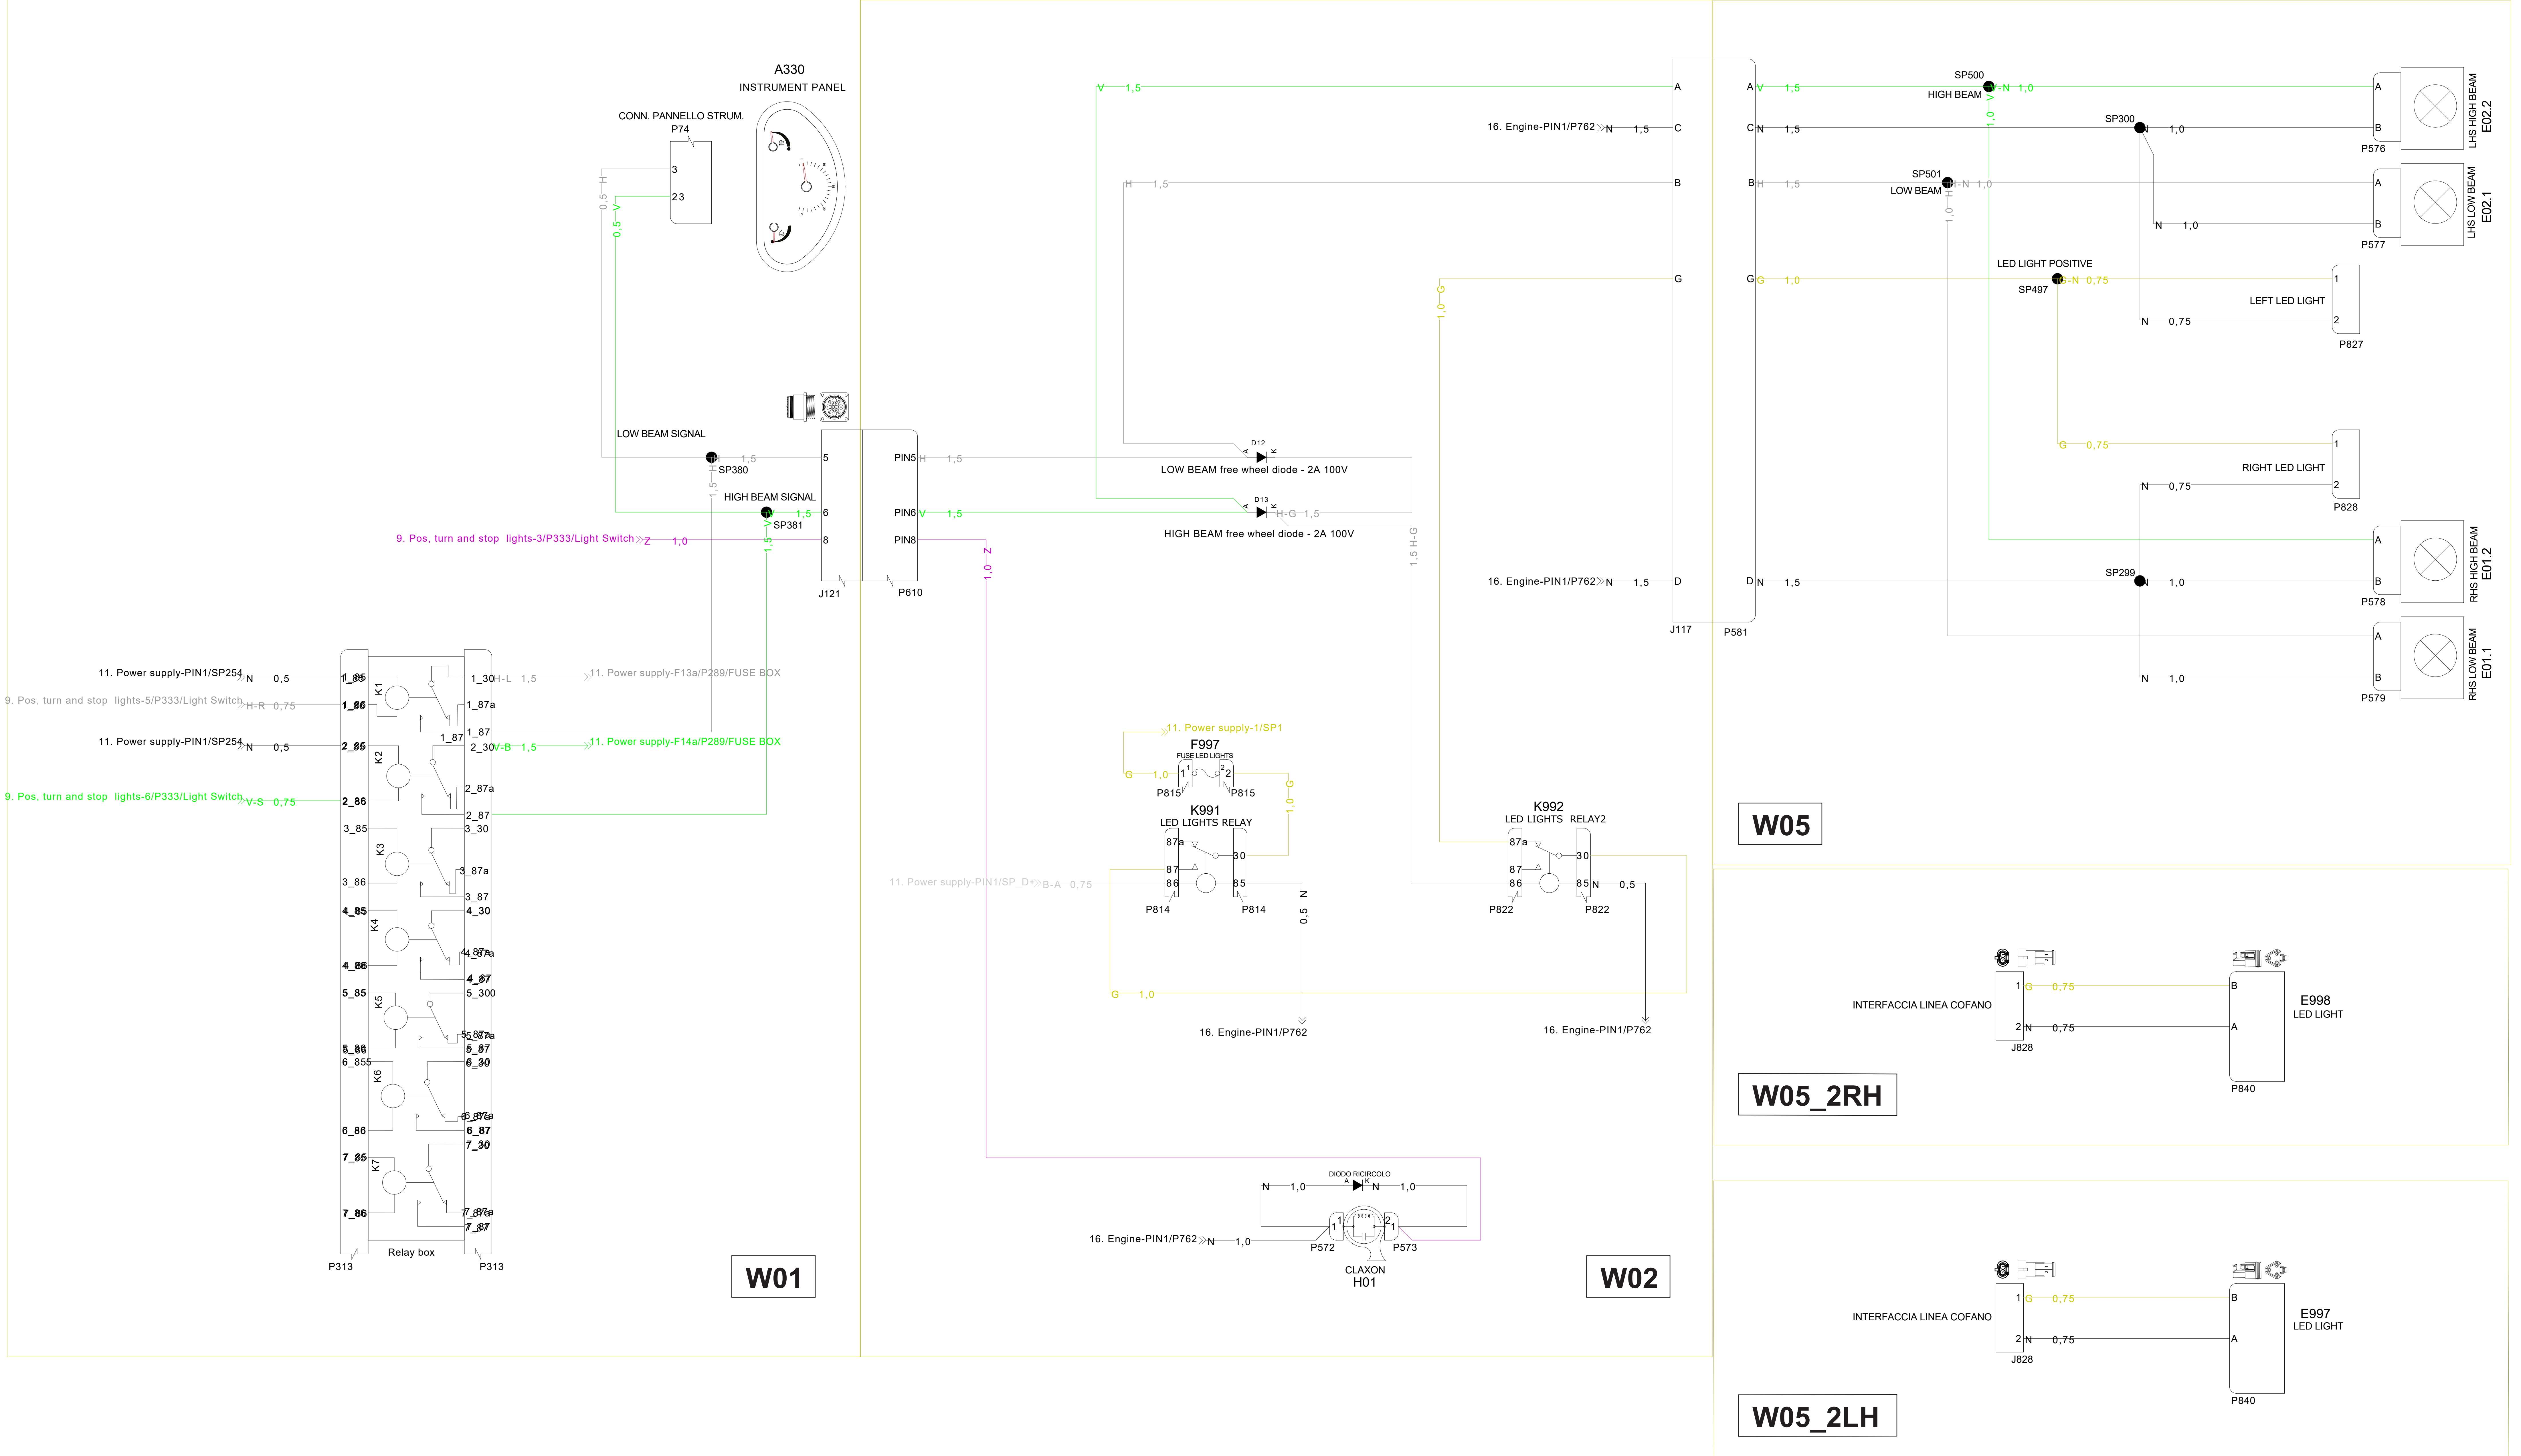SE10_AG_IN_BEACON_AIR SEAT_FUEL SENSORS_B_1_20191009




J117 - Connection to P581
J121 - Connection to P610
J828W05_2LH - Connection to P827
J828W05_2RH - Connection to P828
P74 - Connection to Instrument panel A330
P313 - Connection to Relay box
P572 - Connection to Claxon H01
P573 - Connection to Claxon H01
P576 - Connection to LHS High beam E02.2
P577 - Connection to LHS Low beam E02.1
P578 - Connection to RHS High beam E01.2
P579 - Connection to RHS Low beam E01.1
P581 - Connection to J117
P610 - Connection to J121
P814 - Connection to Led lights Relay K991
P815 - Connection to Fuse led lights F997
P822 - Connection to Led lights Relay2 K992
P827 - Connection to Interfaccia linea cofano J828W05_2LH
P828 - Connection to Interfaccia linea cofano J828W05_2RH
P840W05_2LH - Connection to Left led light E997
P840W05_2RH - Connection to Right led light E998

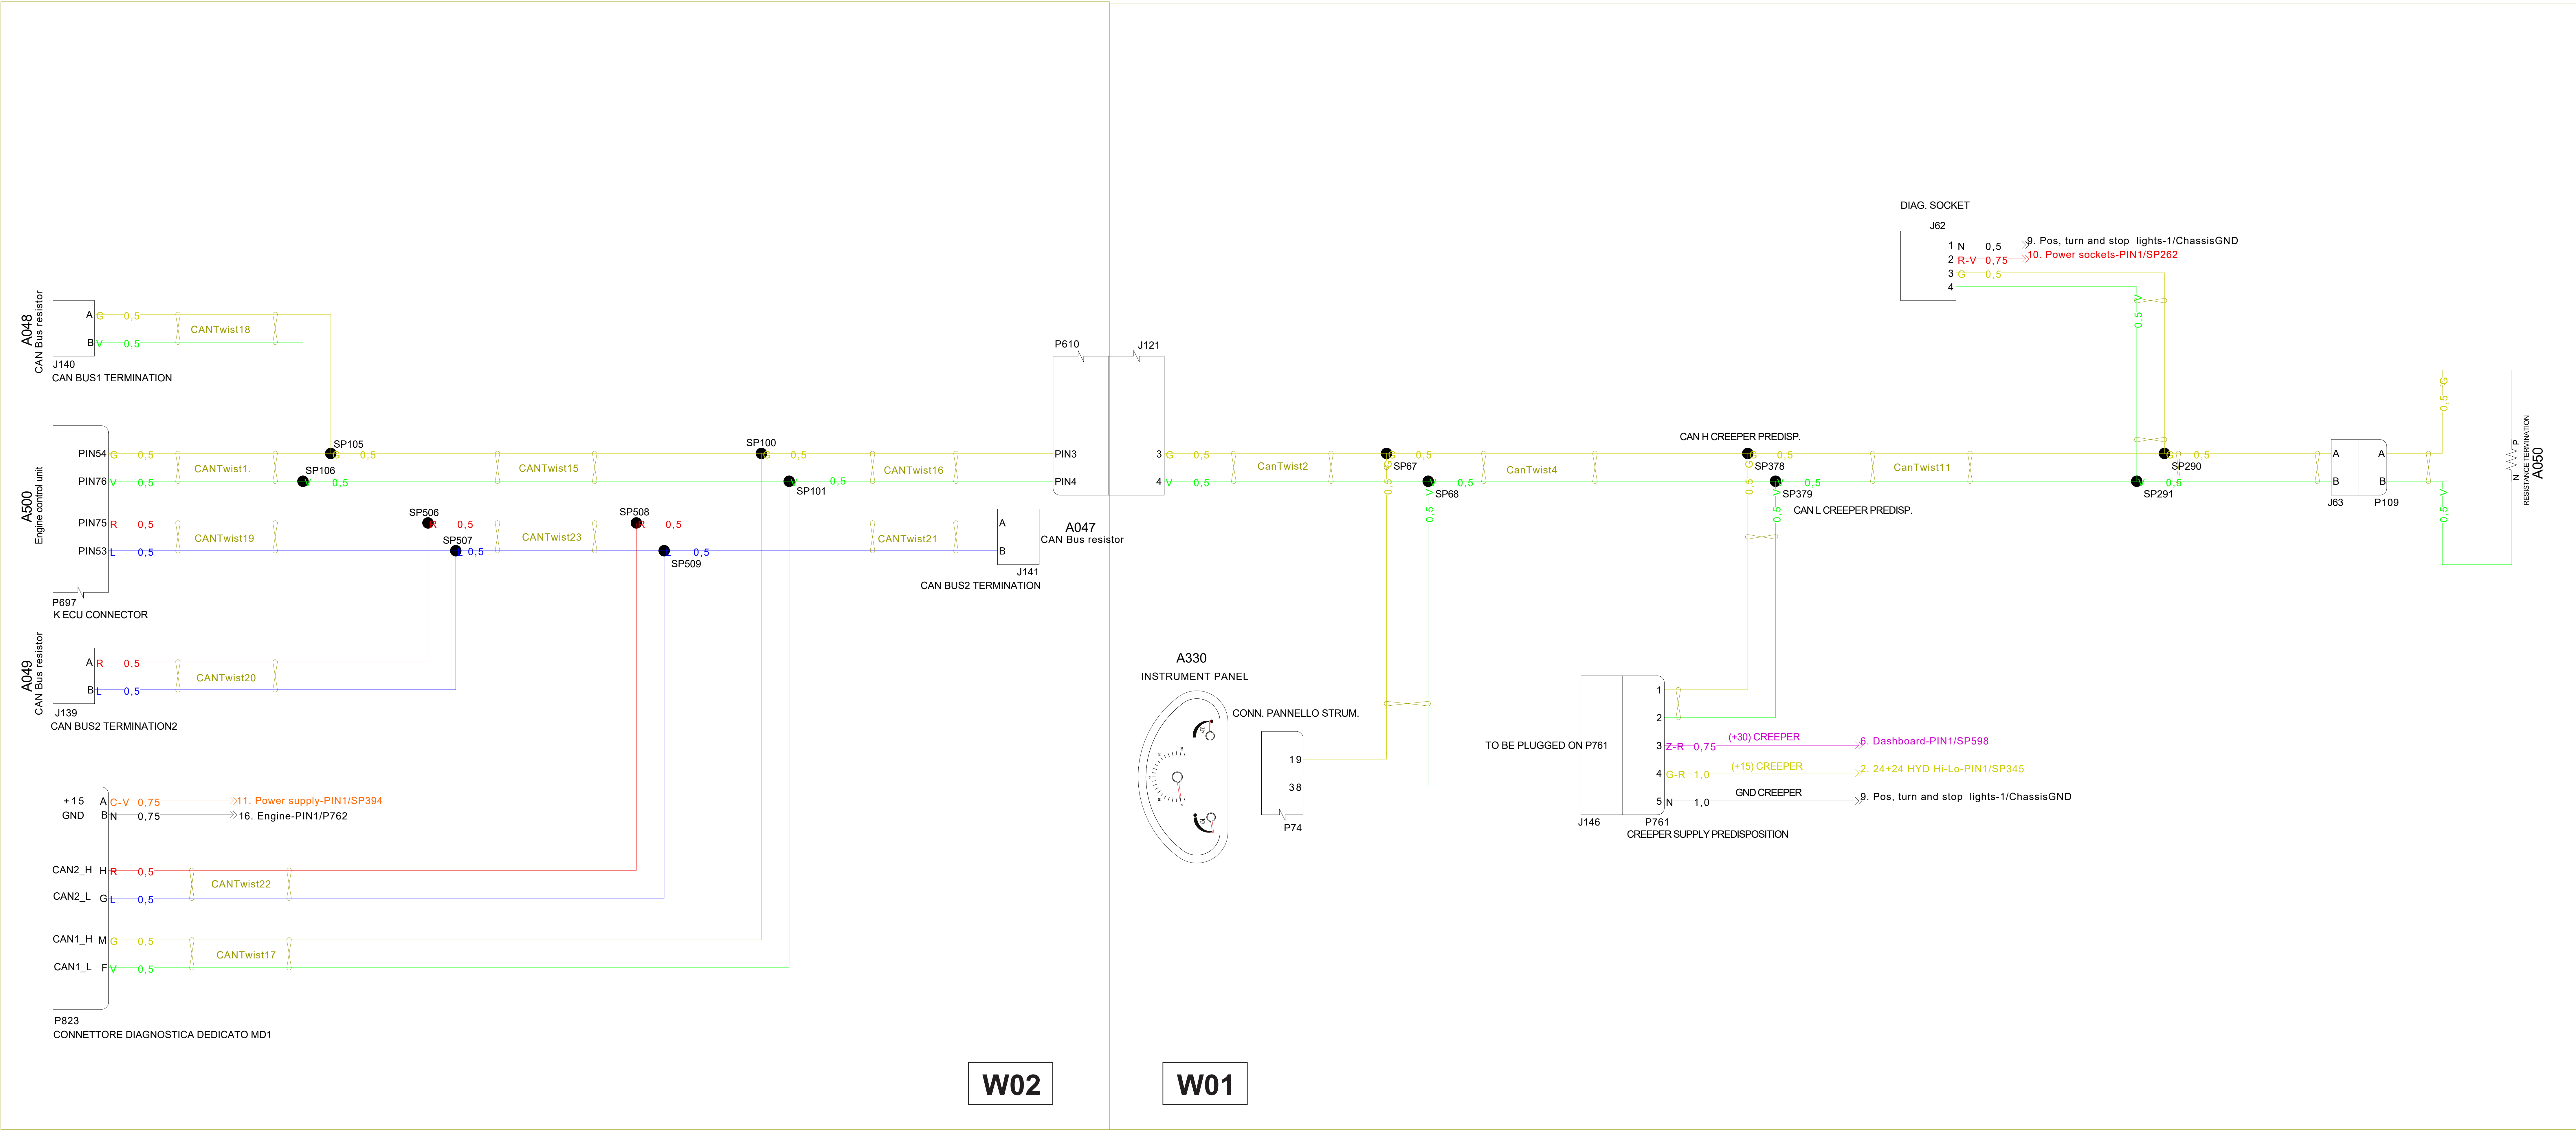


J62 - Connection to diagnostic socket
J63 - Connection to P109
J121 - Connection to P610
J139 - Connection to CAN Bus resistor A049
J140 - Connection to CAN Bus resistor A048
J141 - Connection to CAN Bus resistor A047
J146 - Connection to Creeper supply predisposition P761
P74 - Connection to Instrument panel A330
P109 - Connection to CAN Bus resistor A050
P610 - Connection to J121
P697 - Connection to Engine control unit A500
P761 - Connection to J146
P823 - Connection to diagnostic MD1

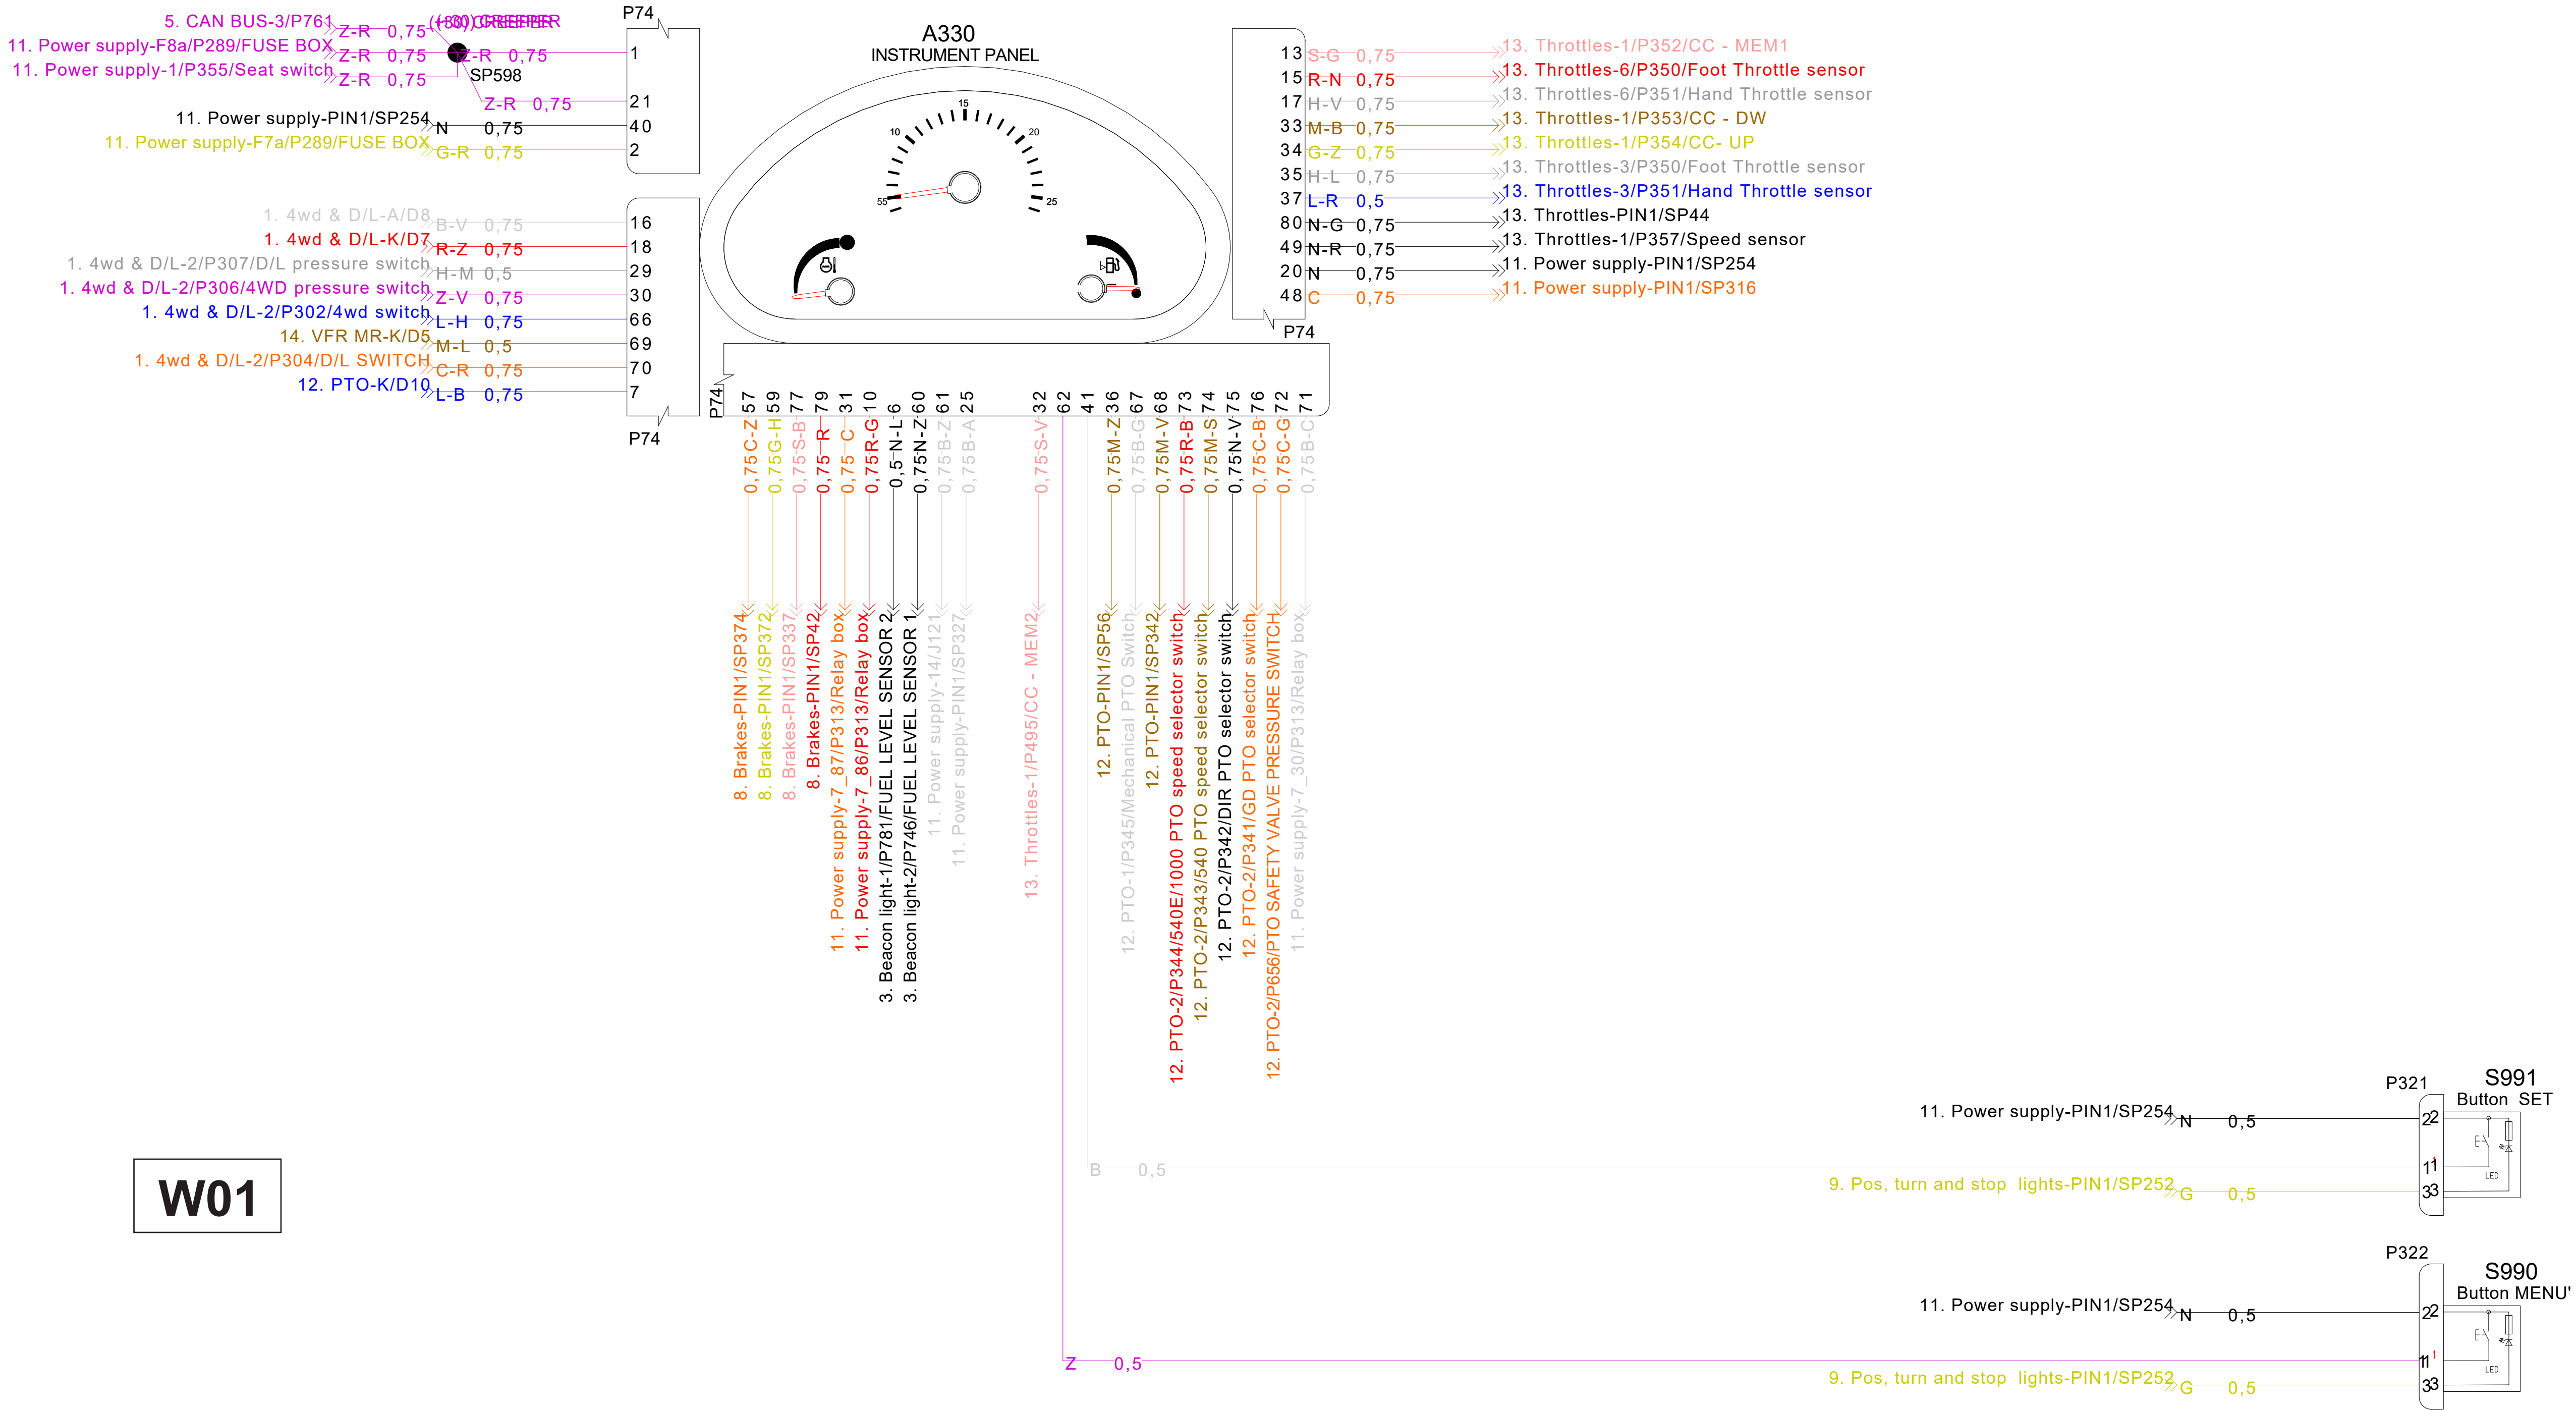
SE19_AG_IN_CANBUS_B_1_20191010




W01

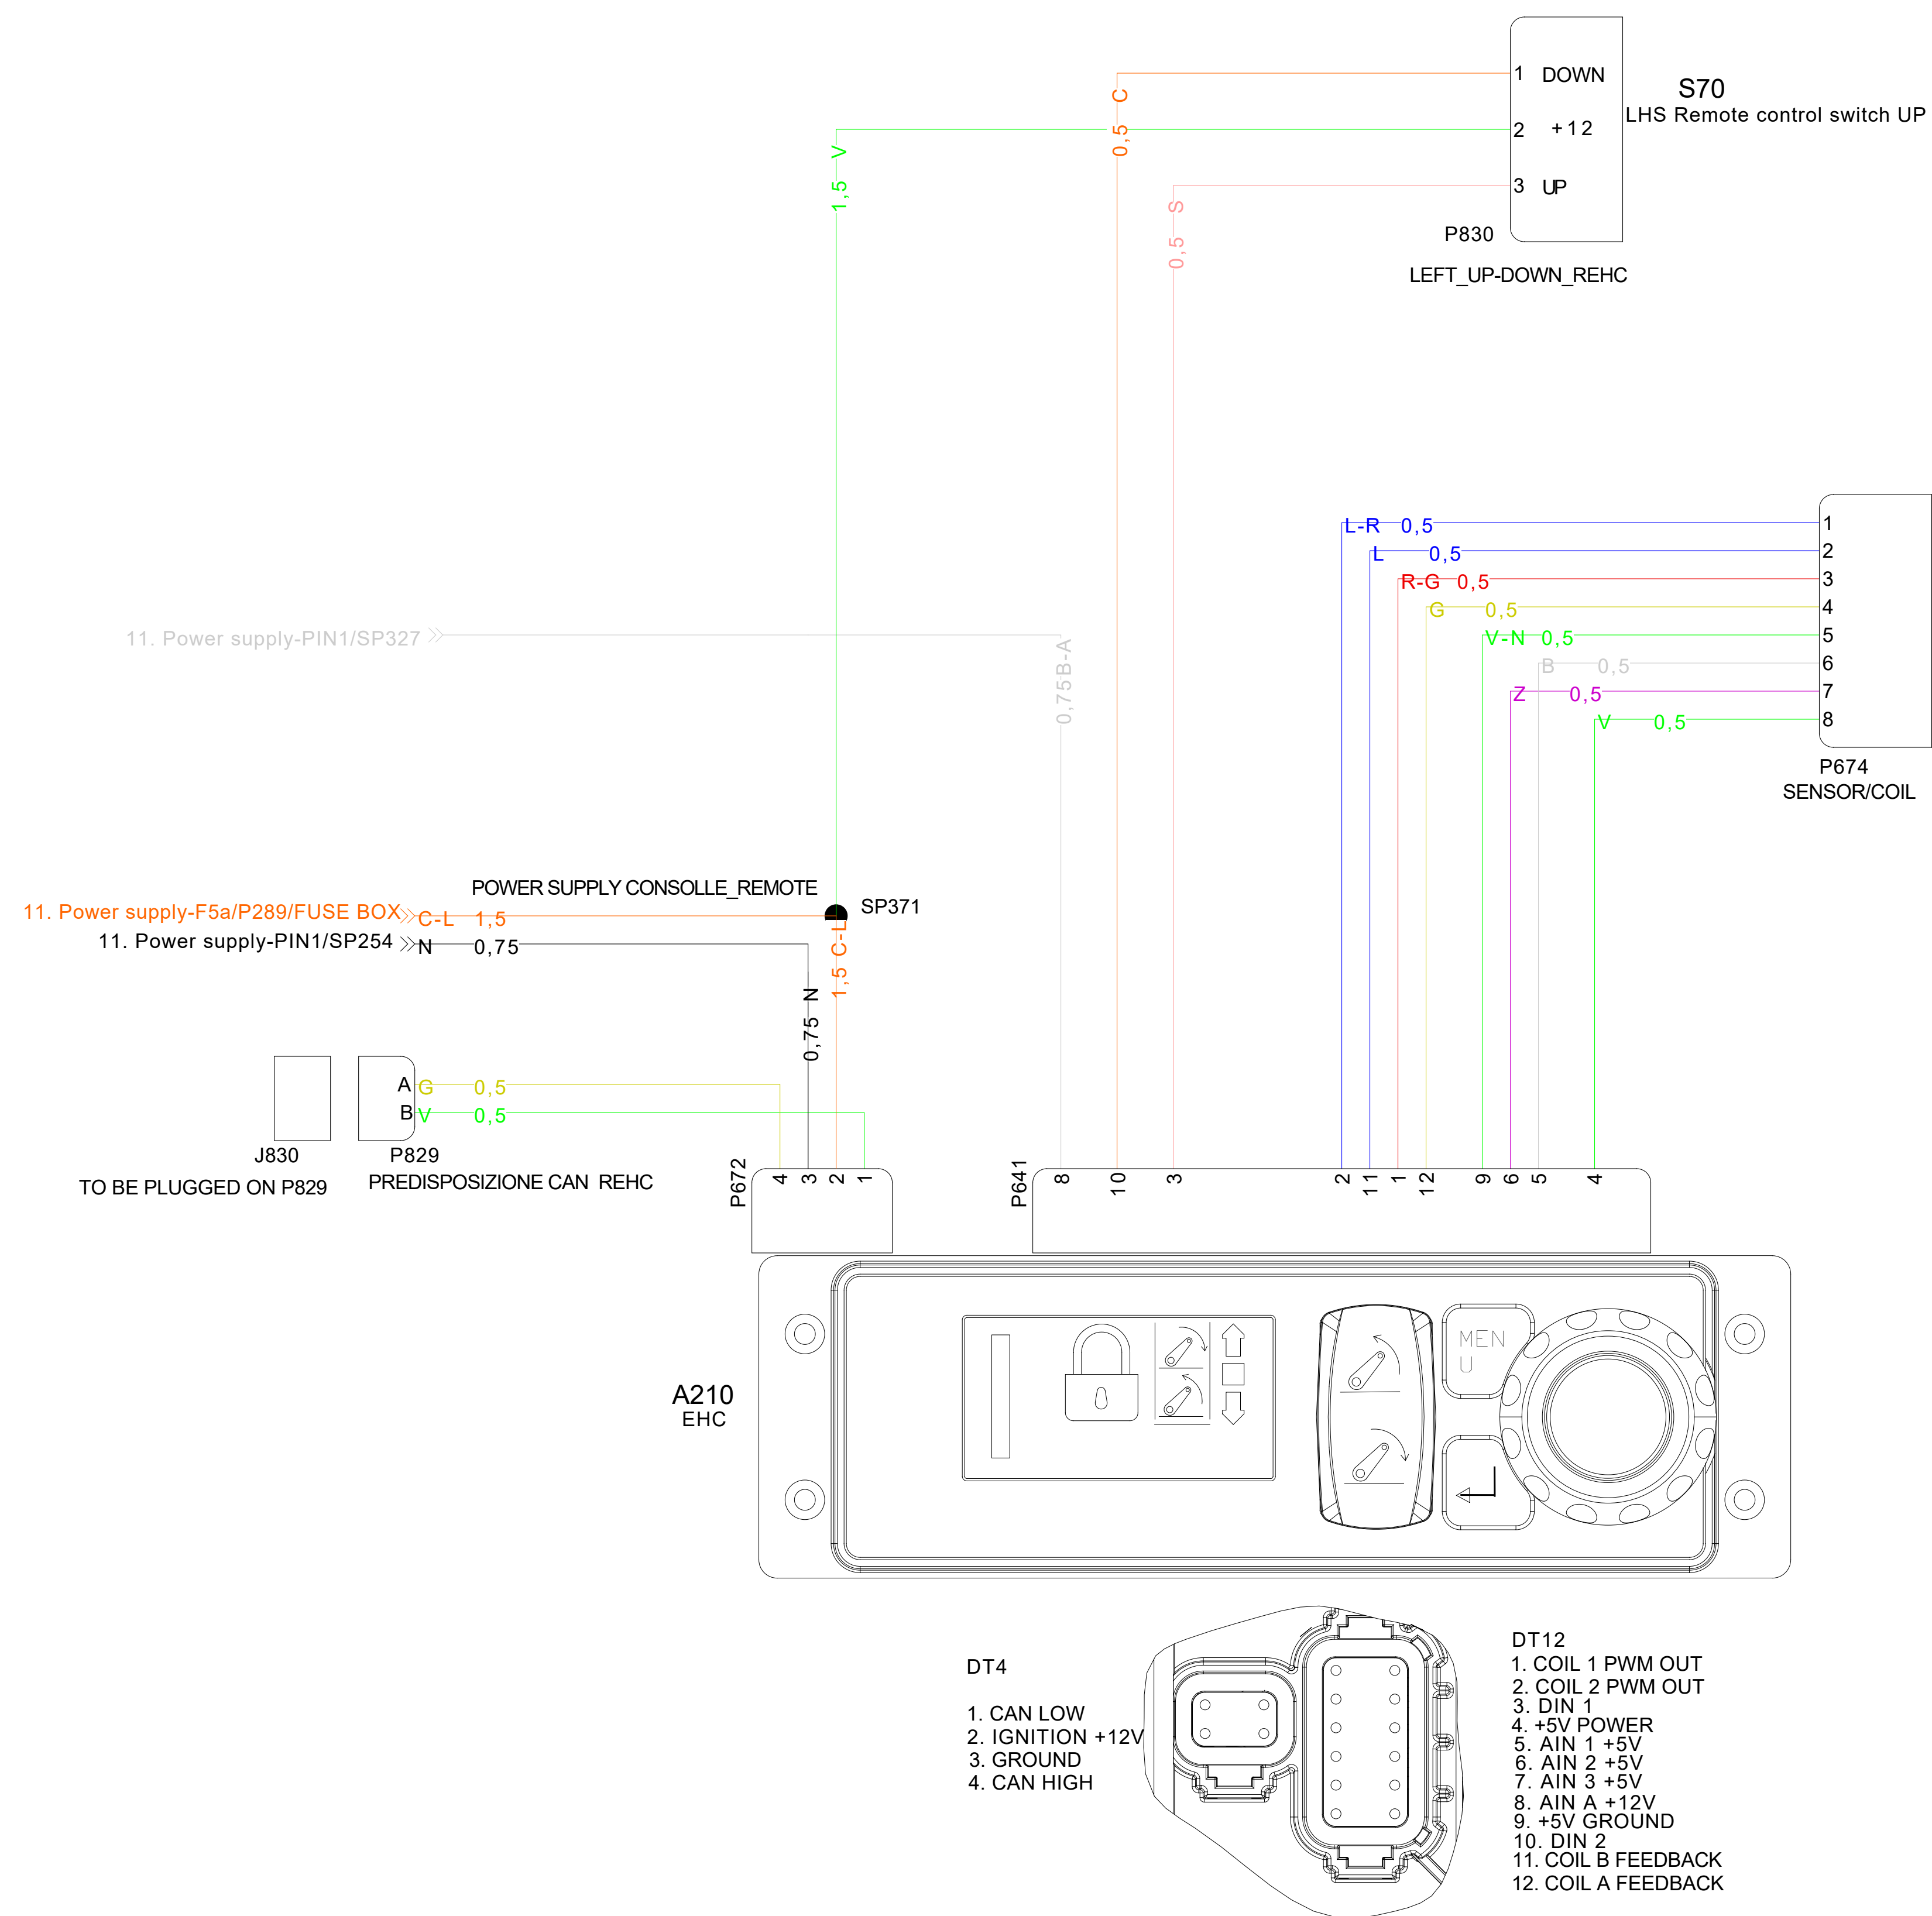

W11_1

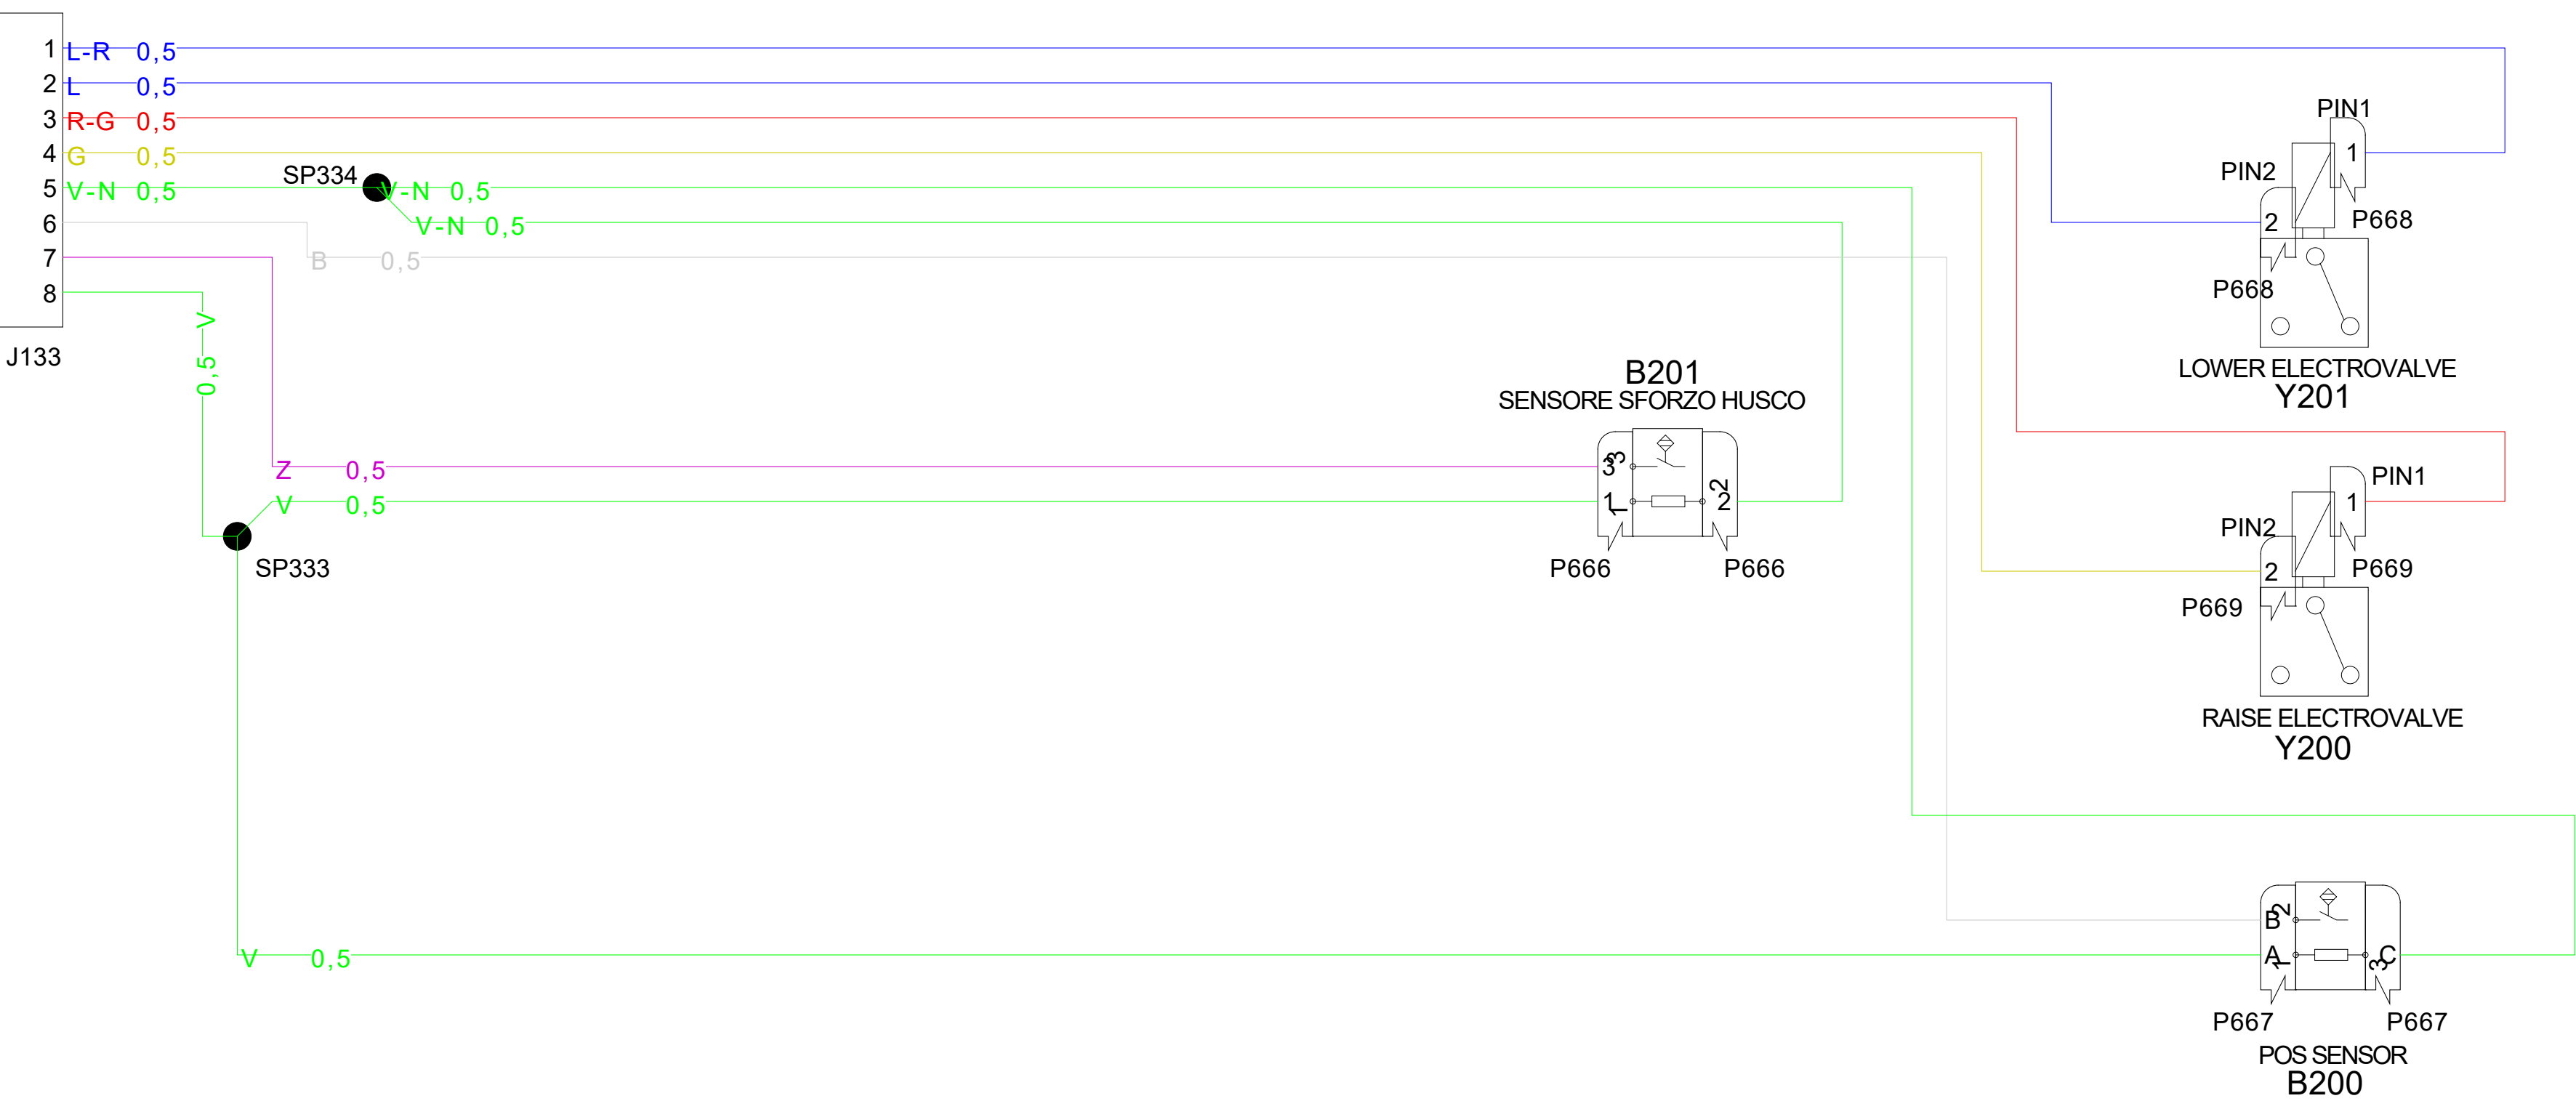


J133 - Connection to P674
J830 - Connection to Predisposizione CAN REHC P829
P666 - Connection to Electronic hitch draft sensor B201
P667 - Connection to Electronic hitch position sensor B200
P668 - Connection to Electronic hitch solenoid valve DOWN Y201
P669 - Connection to Electronic hitch solenoid valve UP Y200
P641 - Connection to Electronic hitch control unit A210
P672 - Connection to Electronic hitch control unit A210
P674 - Connection to J133
P829 - Connection to predisposizione can REHC J830
P830 - Connection to LHS Remote control switch UP S70

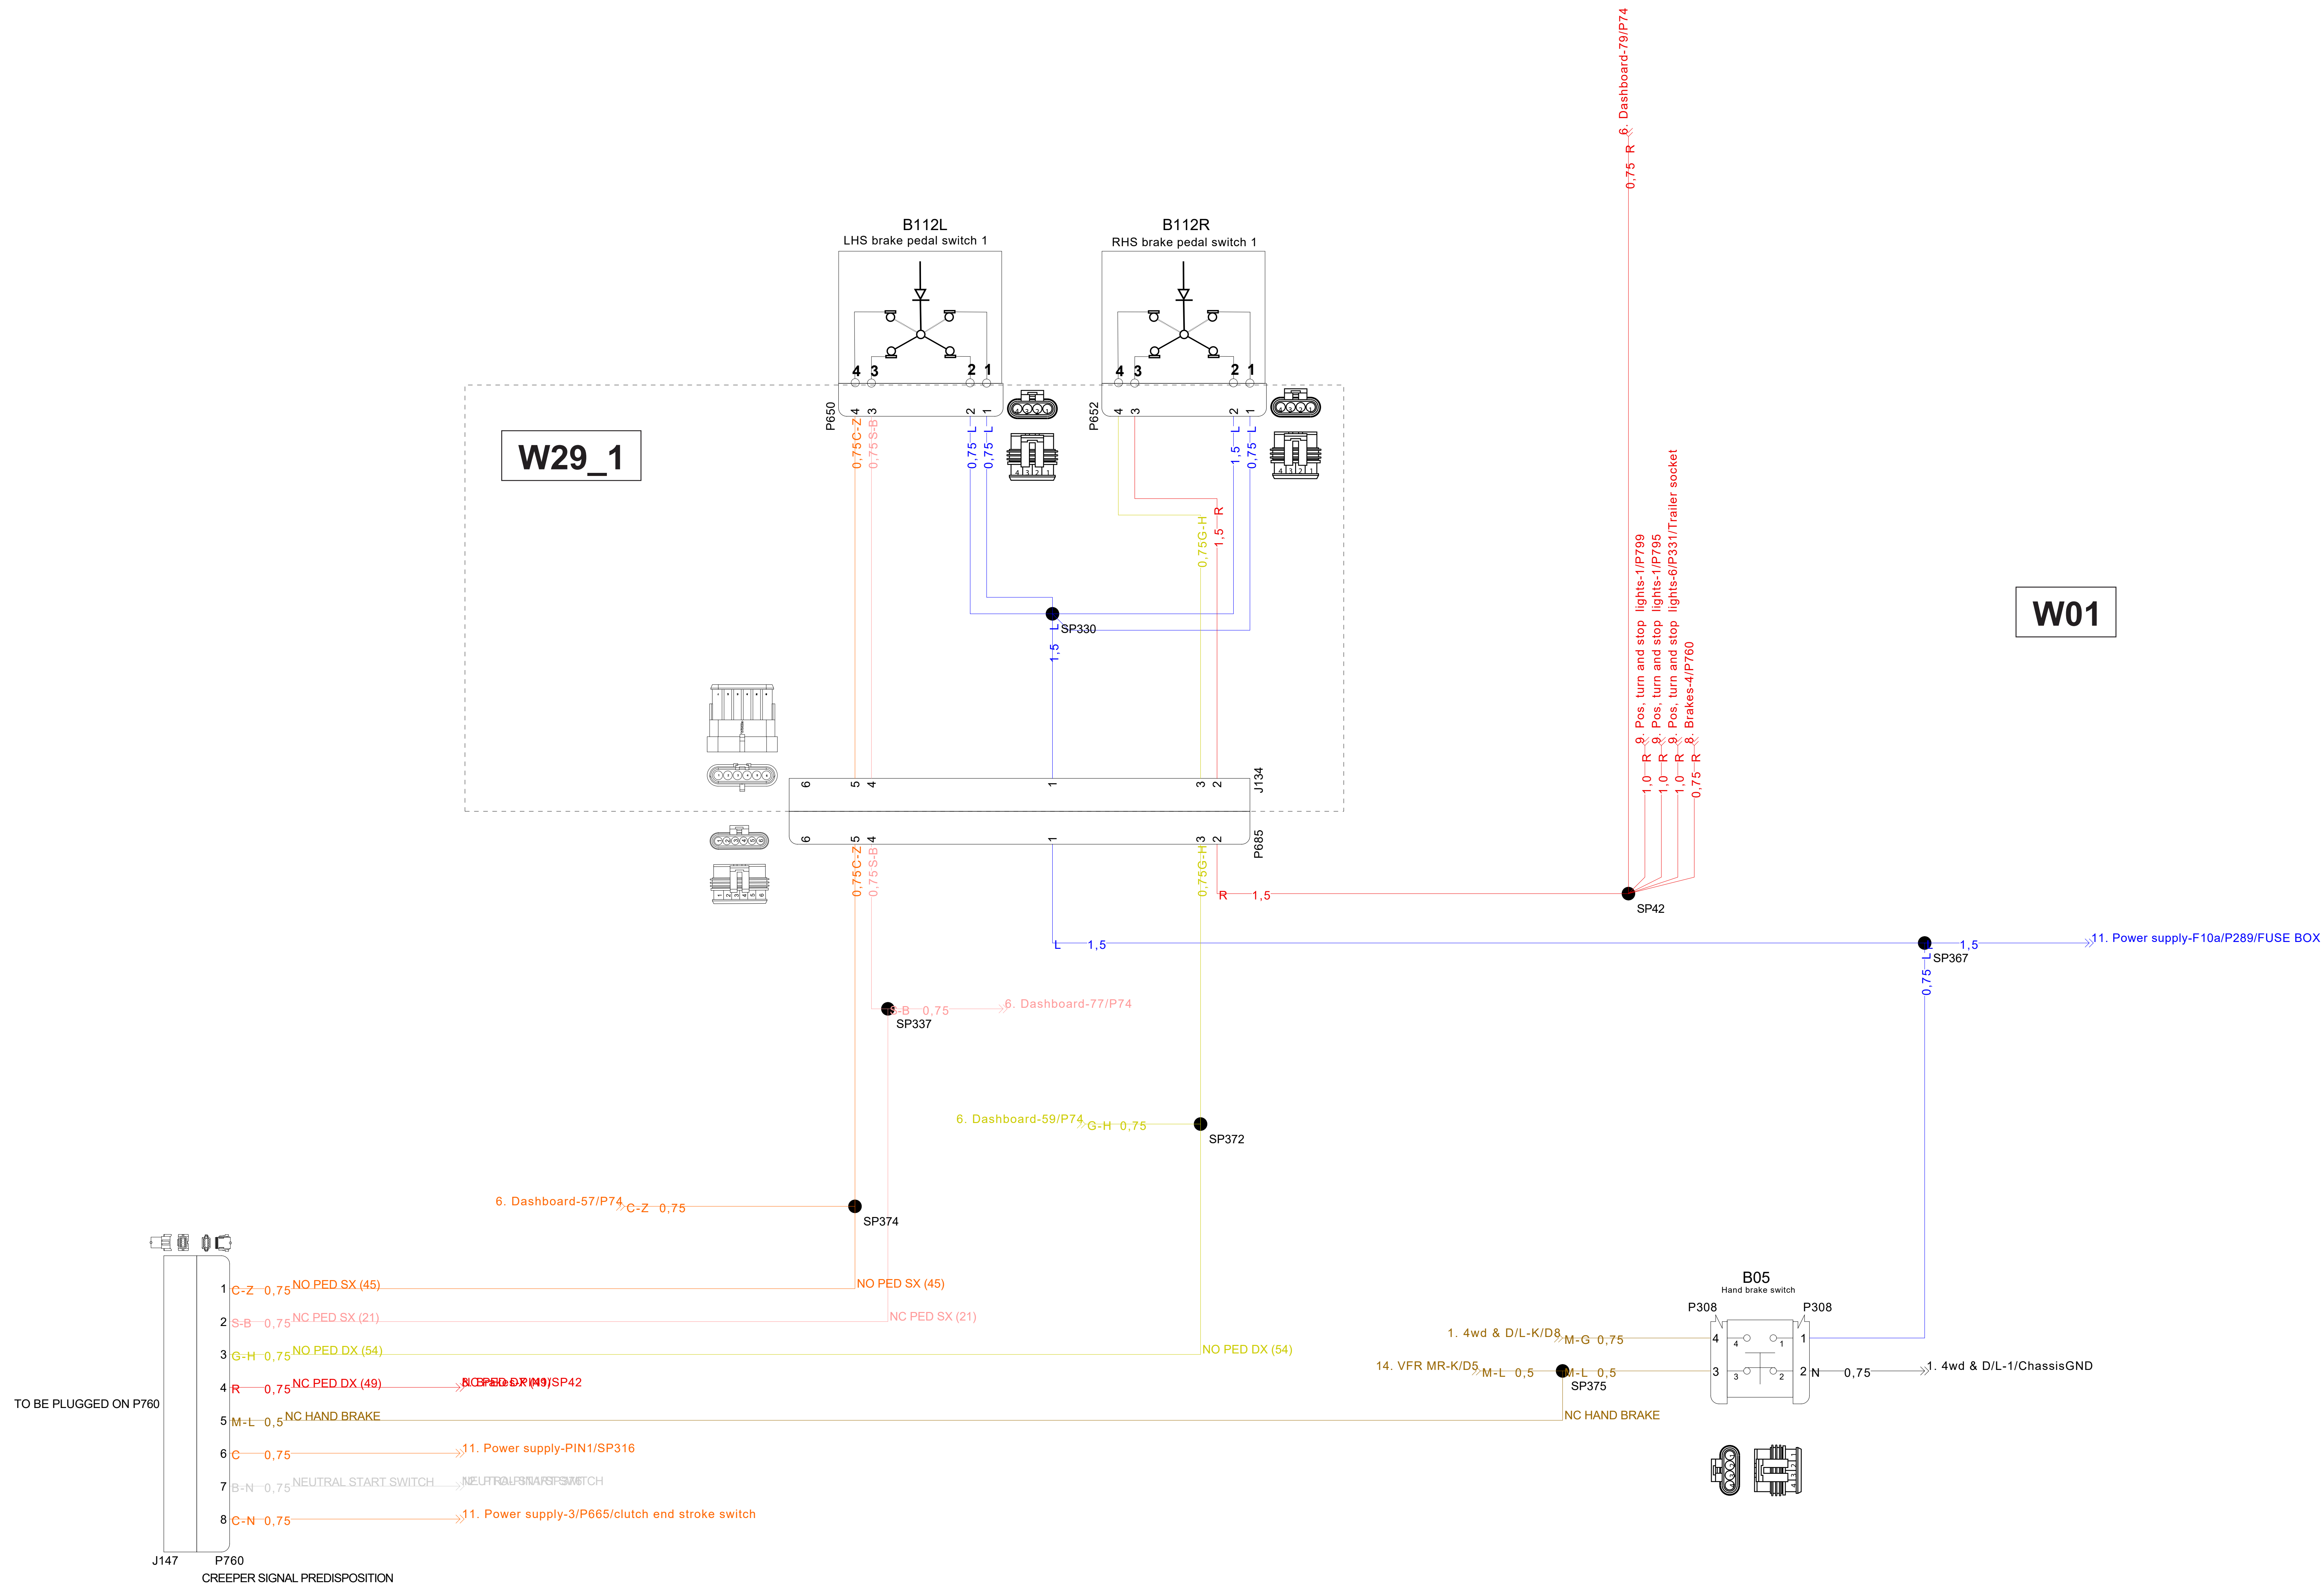


J134 - Connection to P685
J147 - Connection to Creeper signal predisposition P760
P308 - Connection to Hand brake switch B05
P652 - Connection to RHS brake pedal switch B112R
P650 - Connection to LHS brake pedal switch B112L
P685 - Connection to J134
P760 - Connection to J147



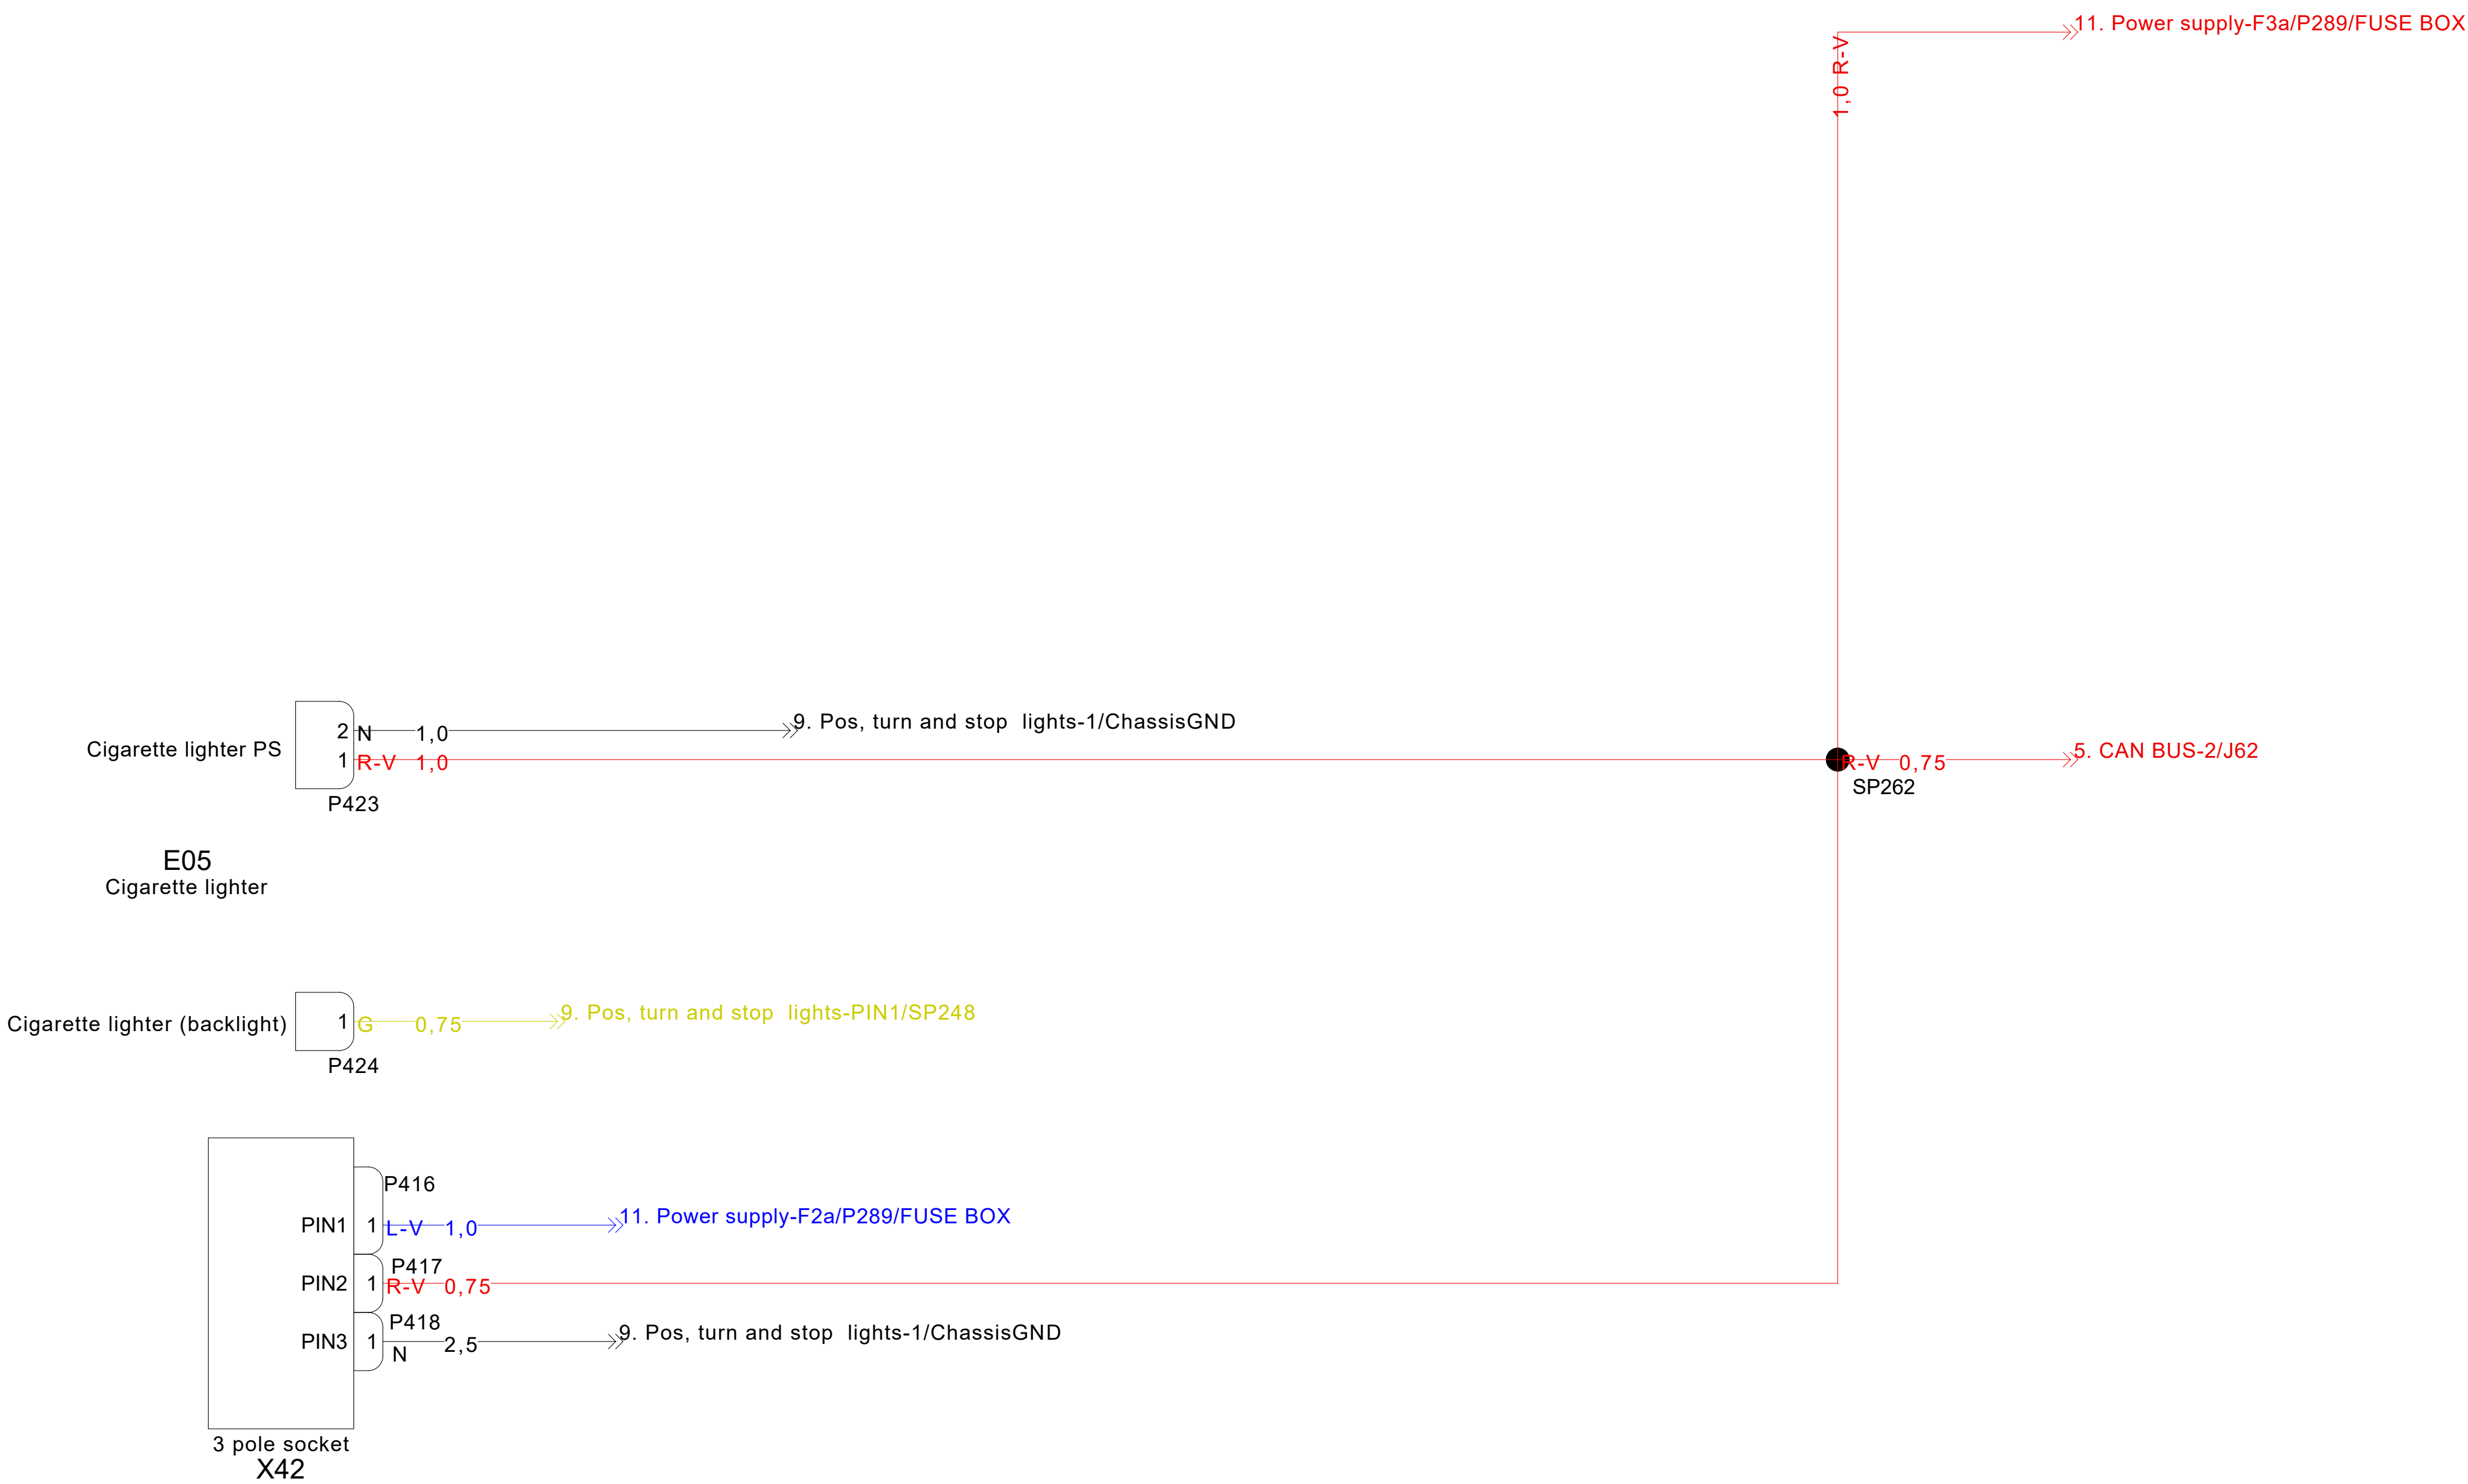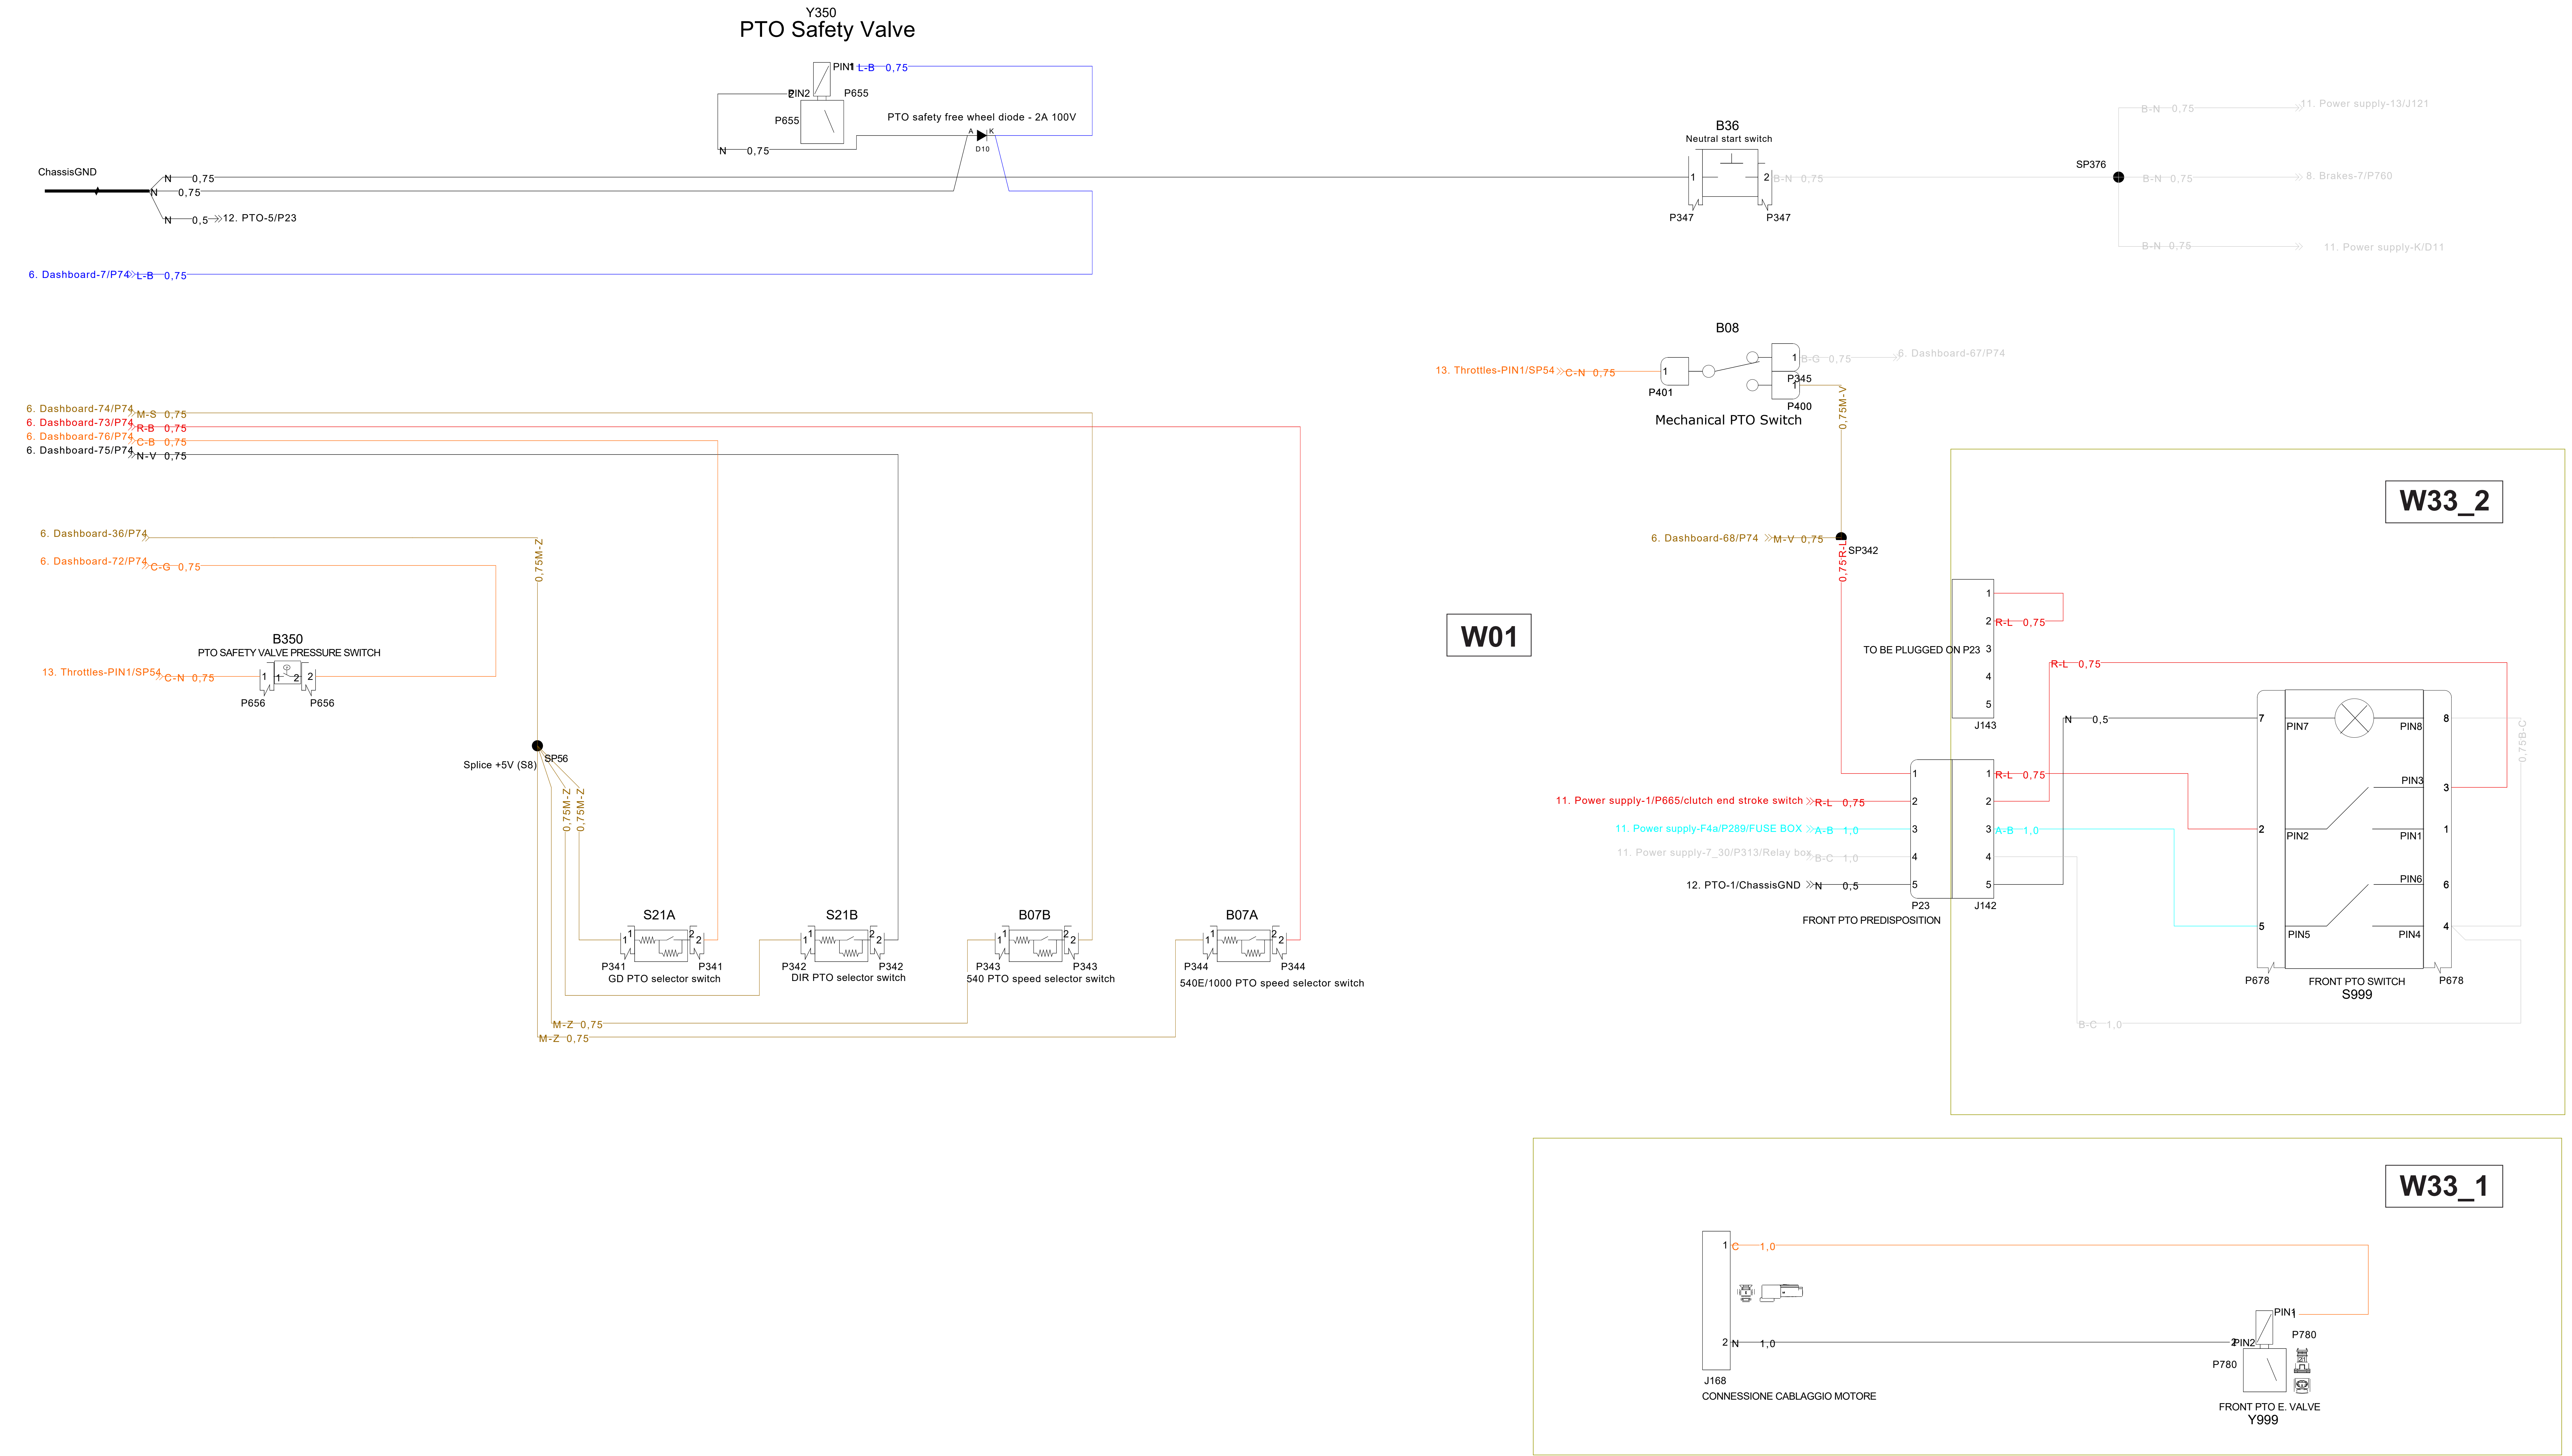
W01









W01

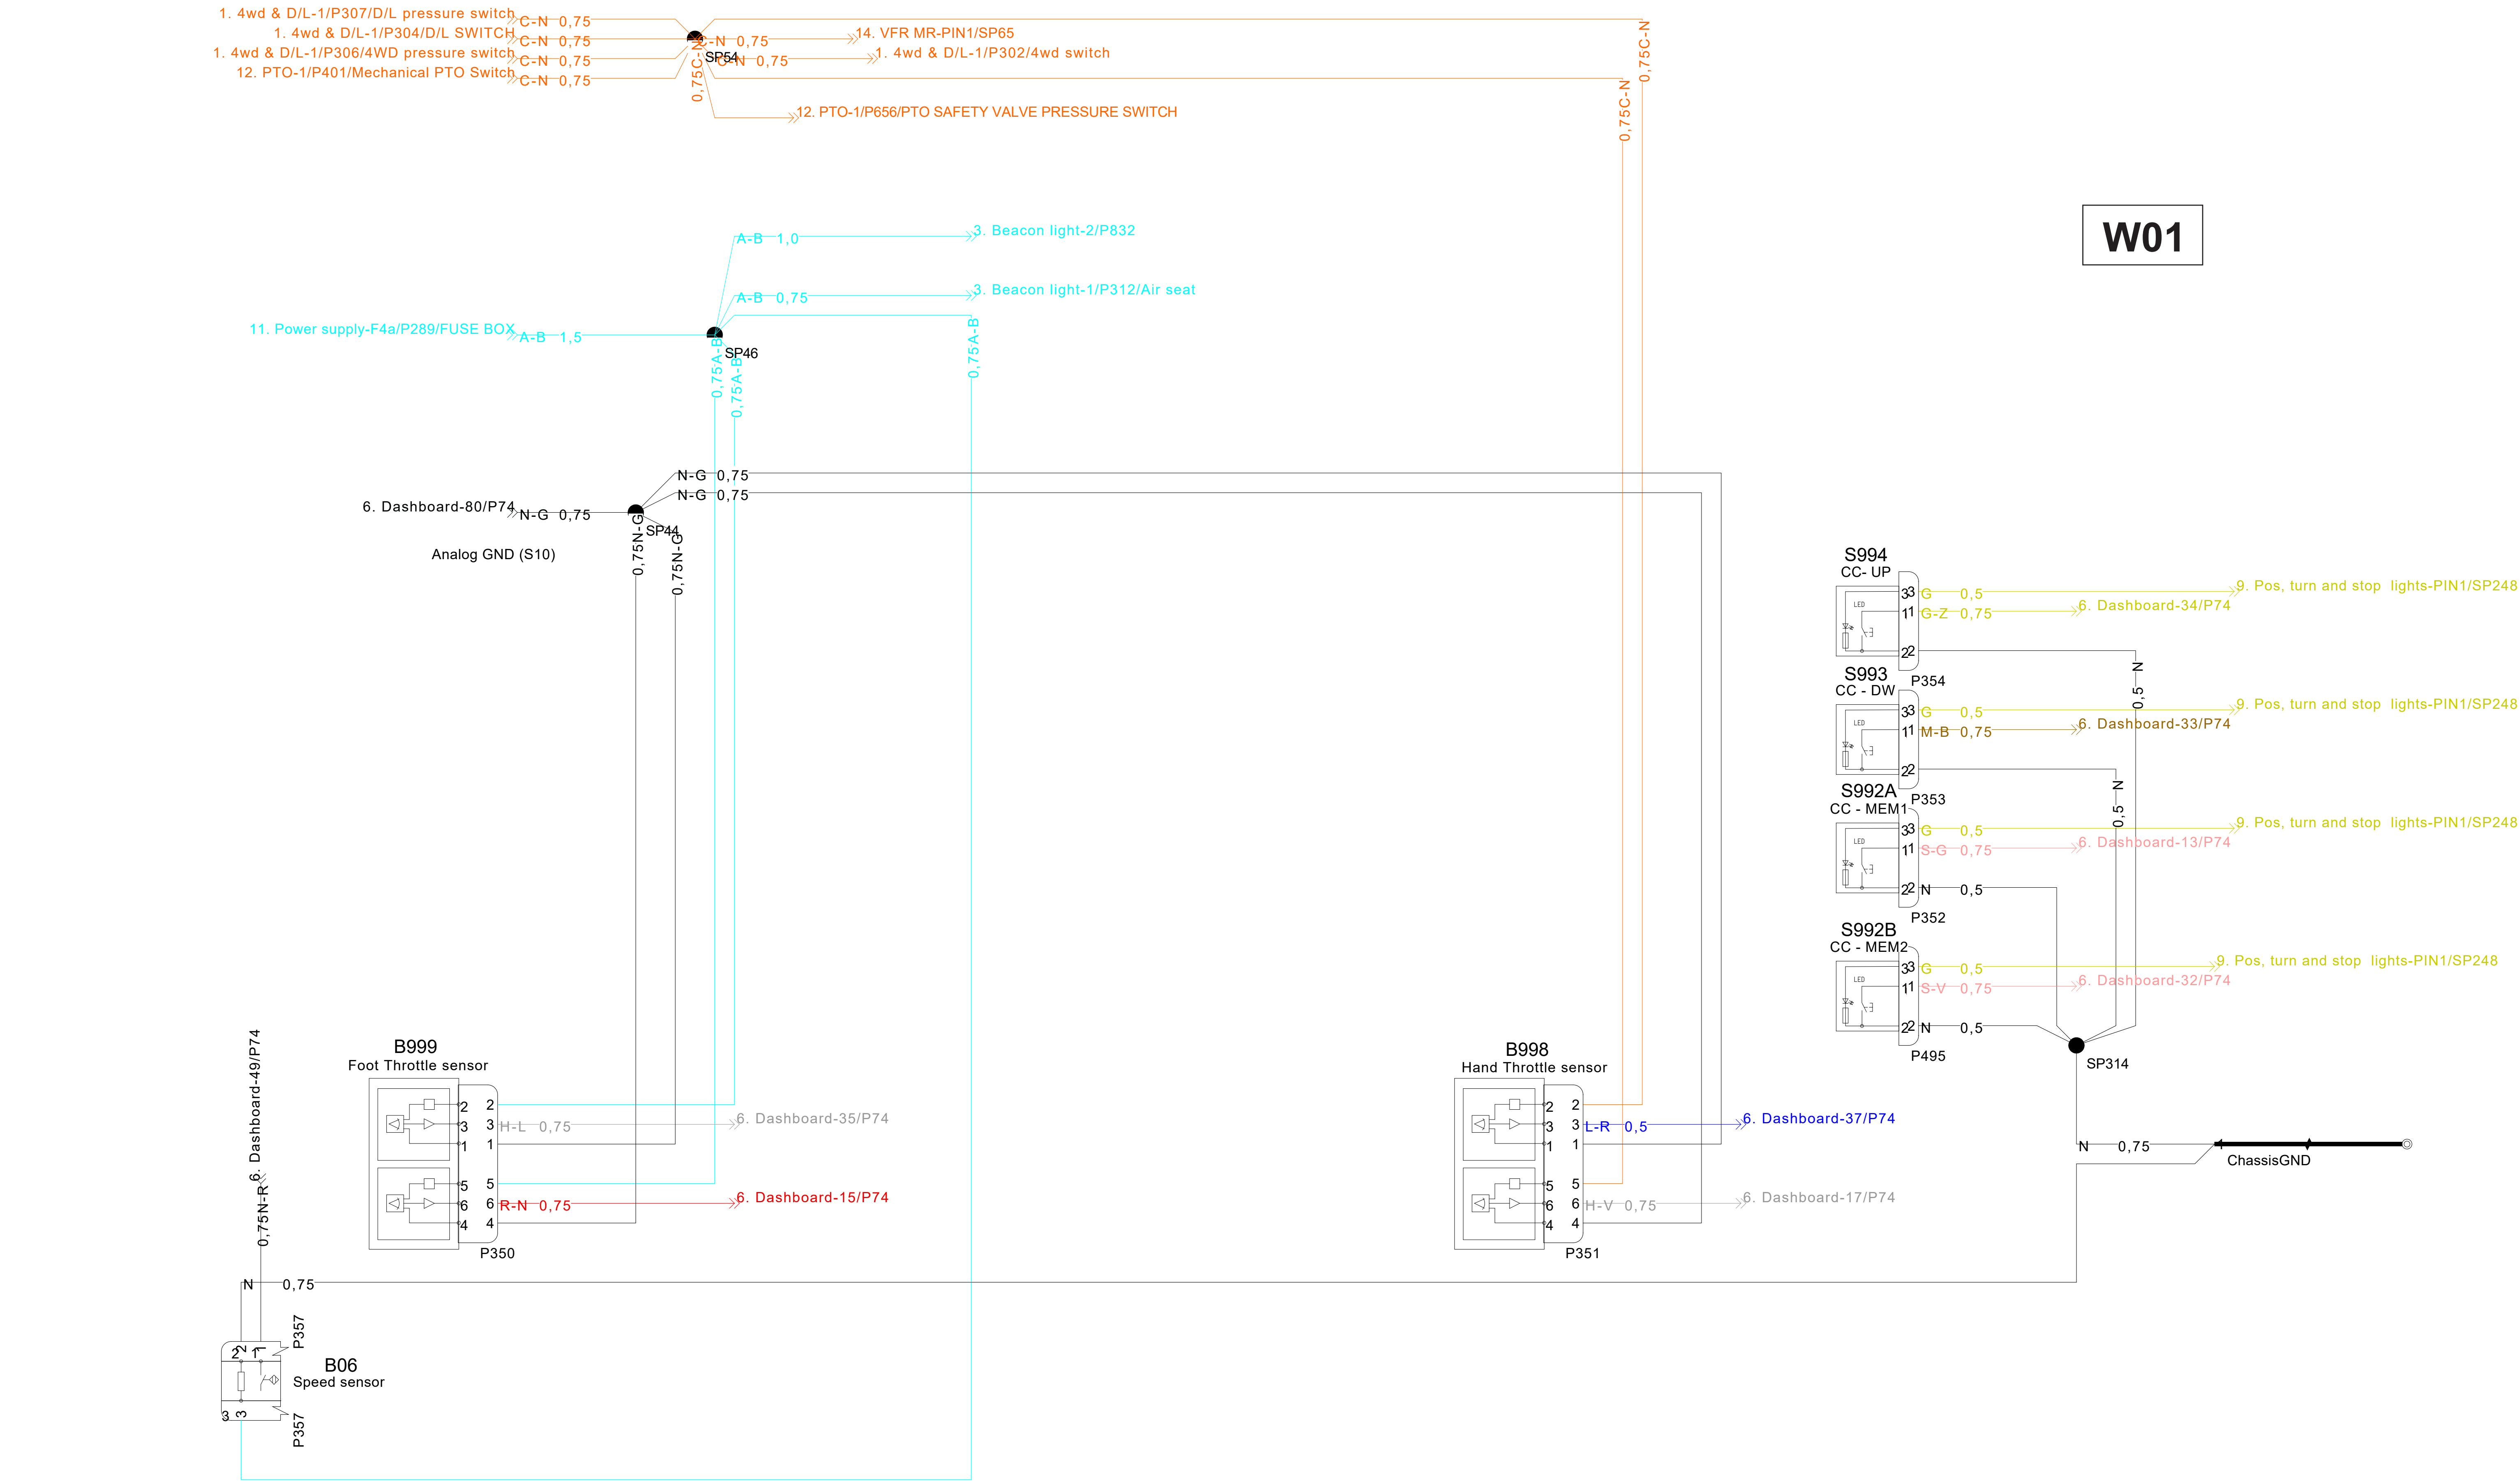


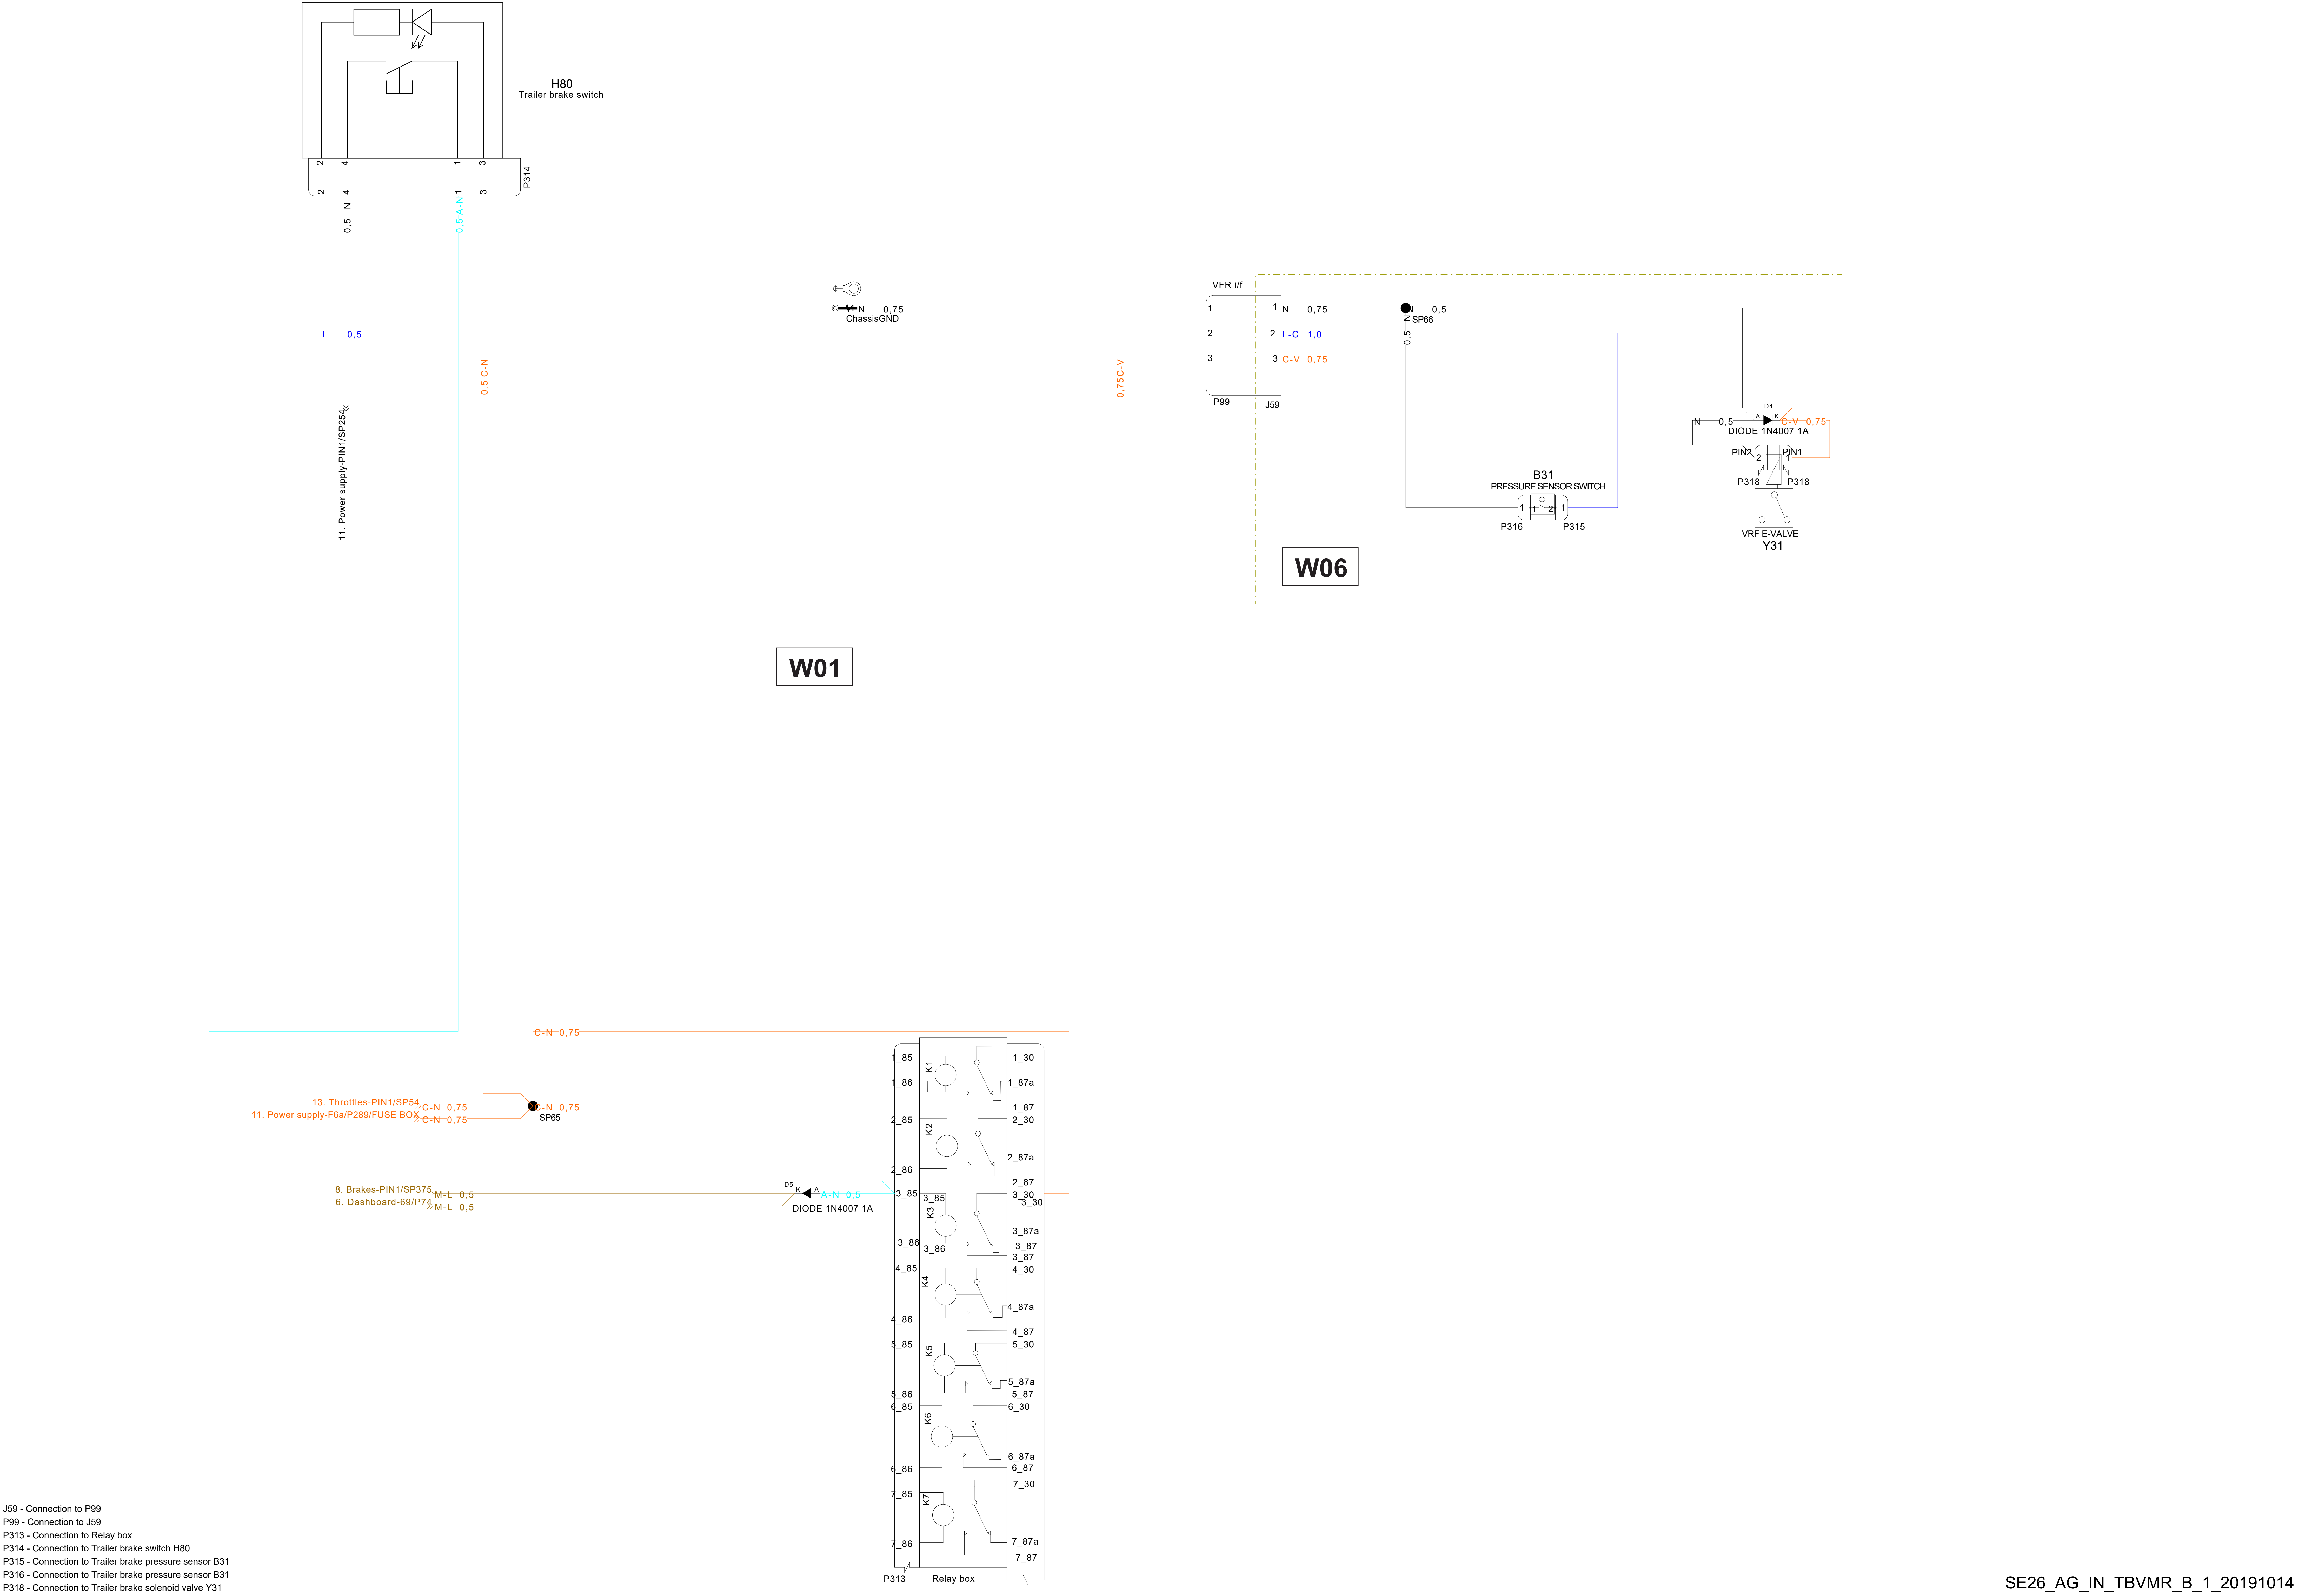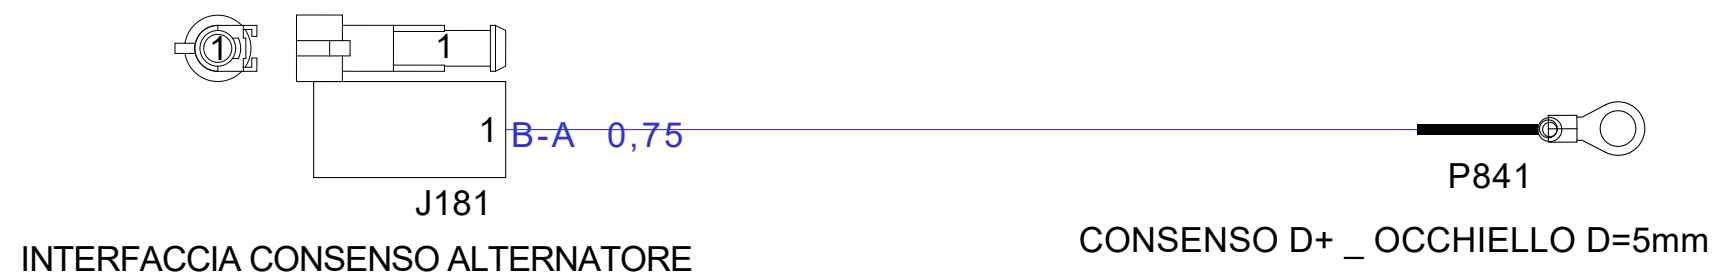
P350 - Connection to Foot throttle sensor B999
P351 - Connection to Hand throttle sensor B998
P352 - Connection to CC-MEM1 S992A
P353 - Connection to CC-DW S993
P354 - Connection to CC-UP S994
P357 - Connection to Speed Sensor B06
P495 - Connection to CC-MEM2 S992B







W02_1

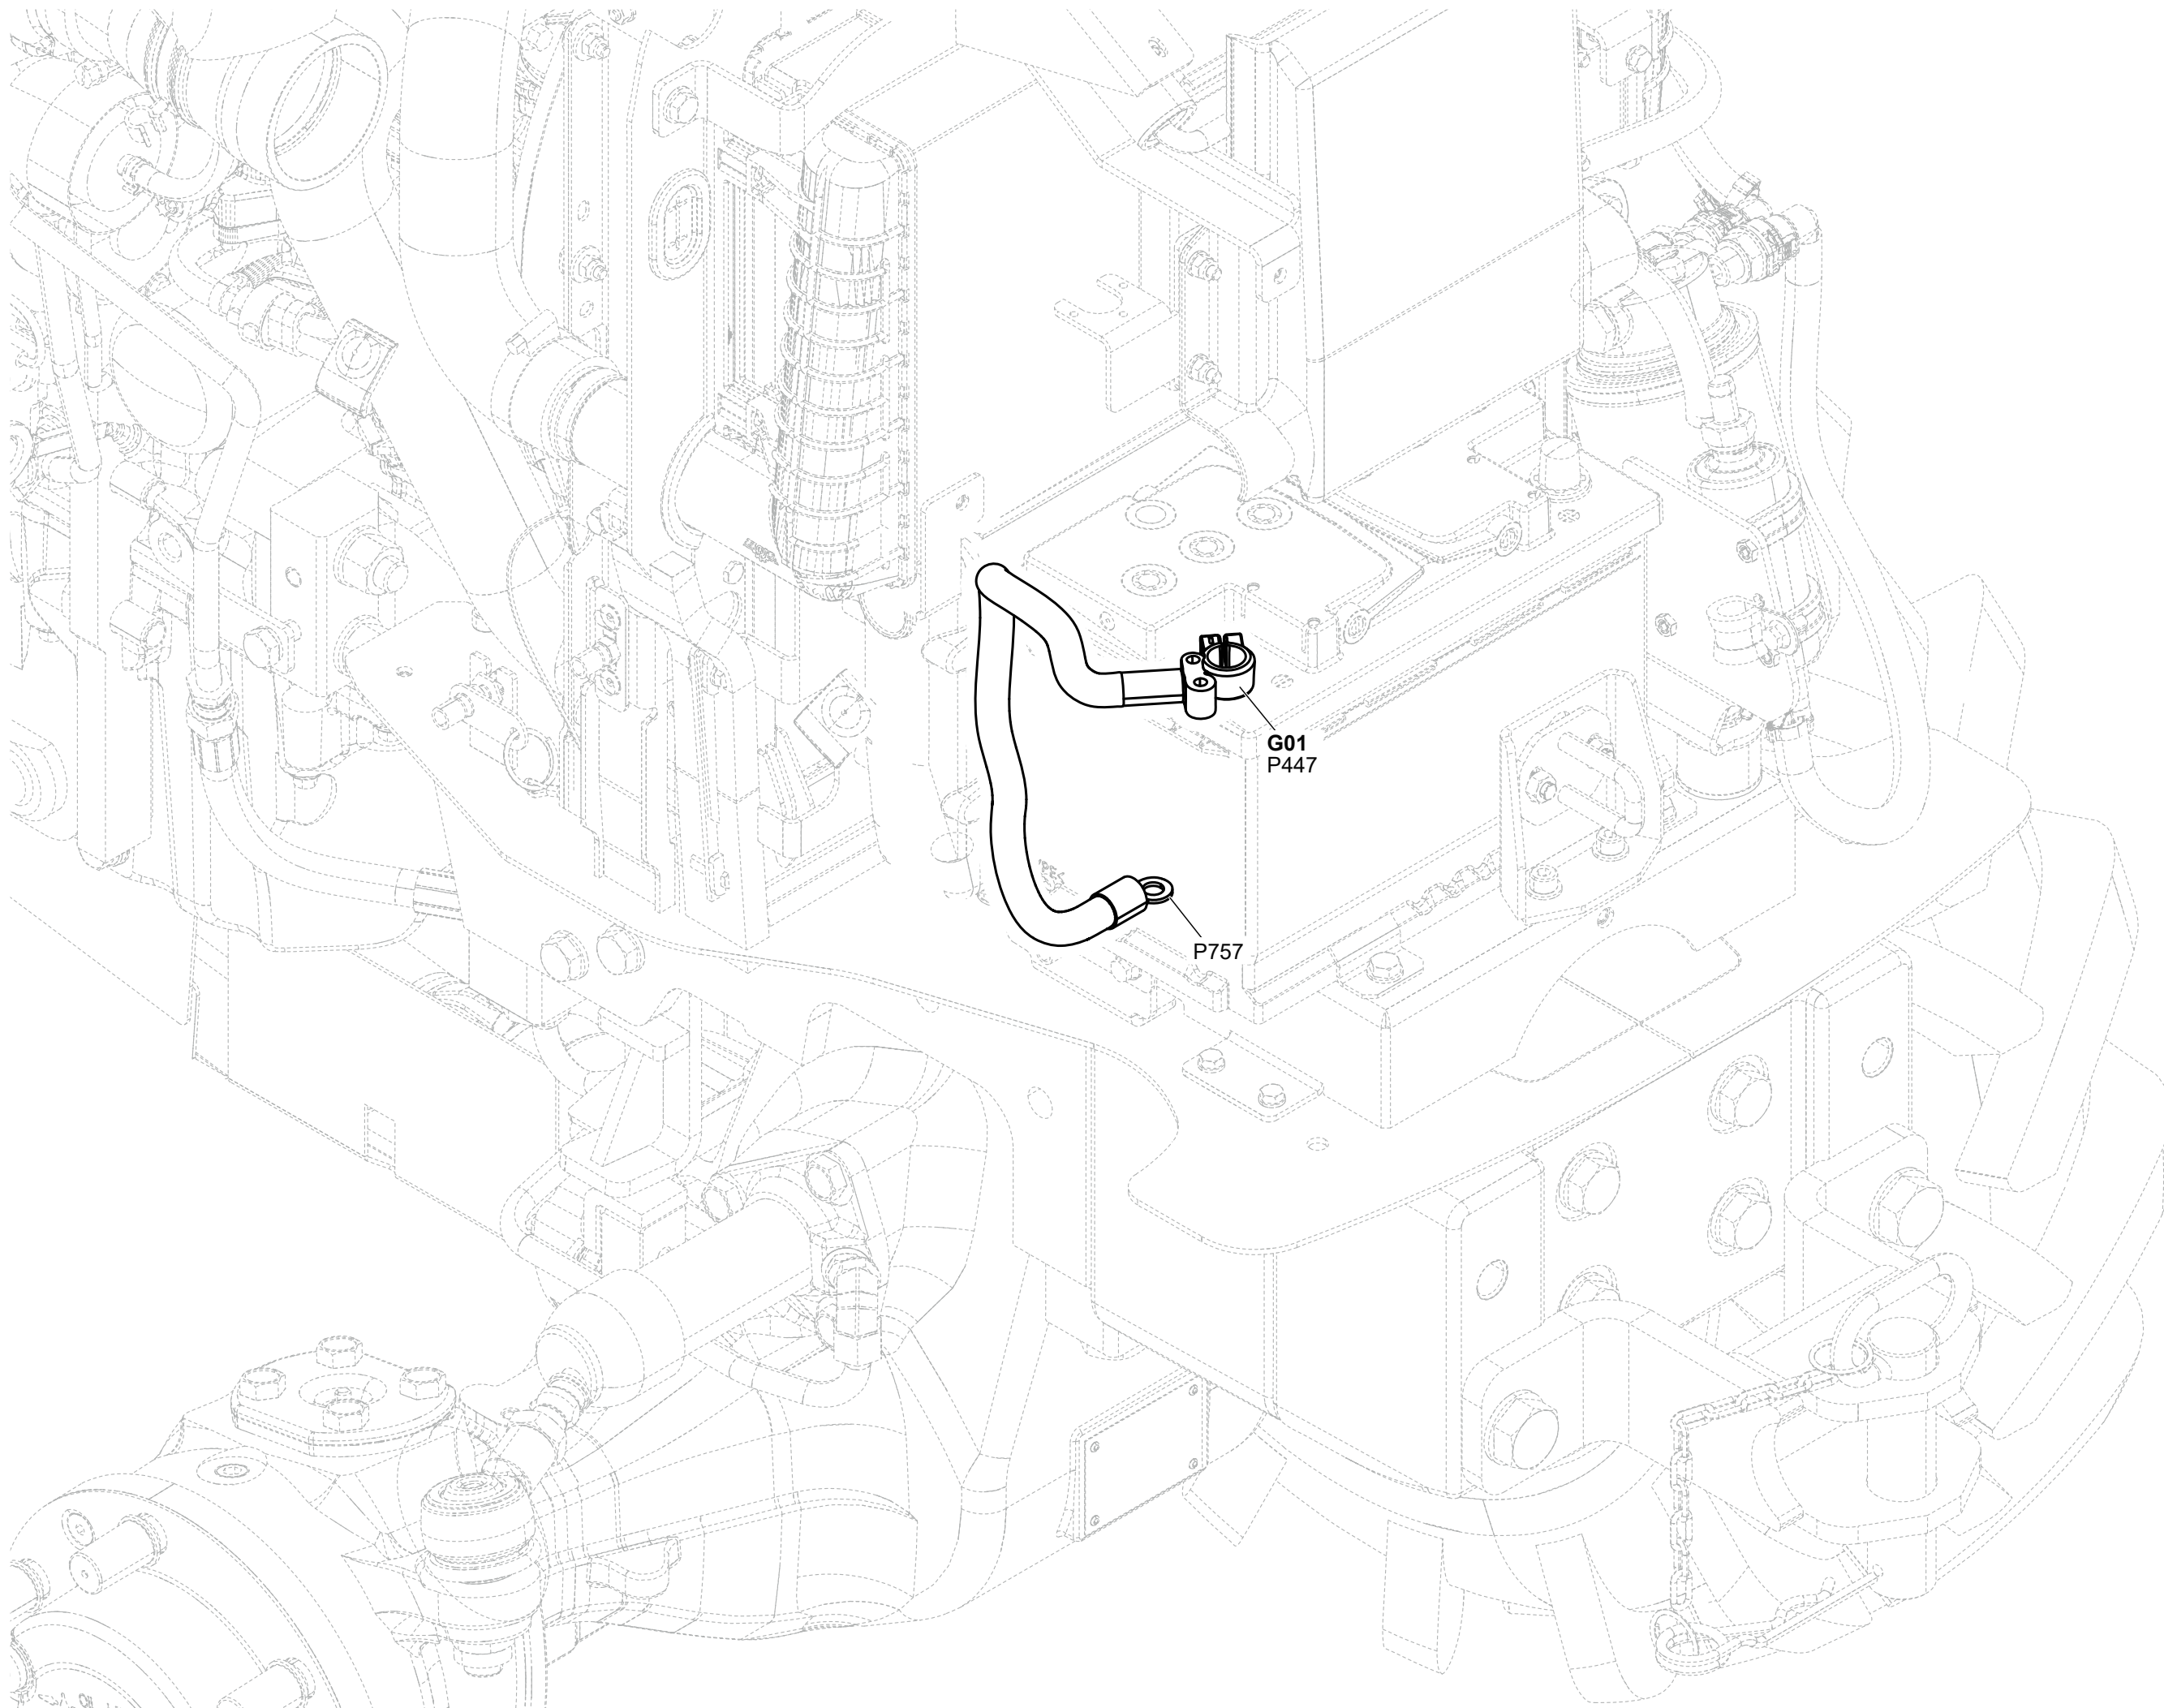

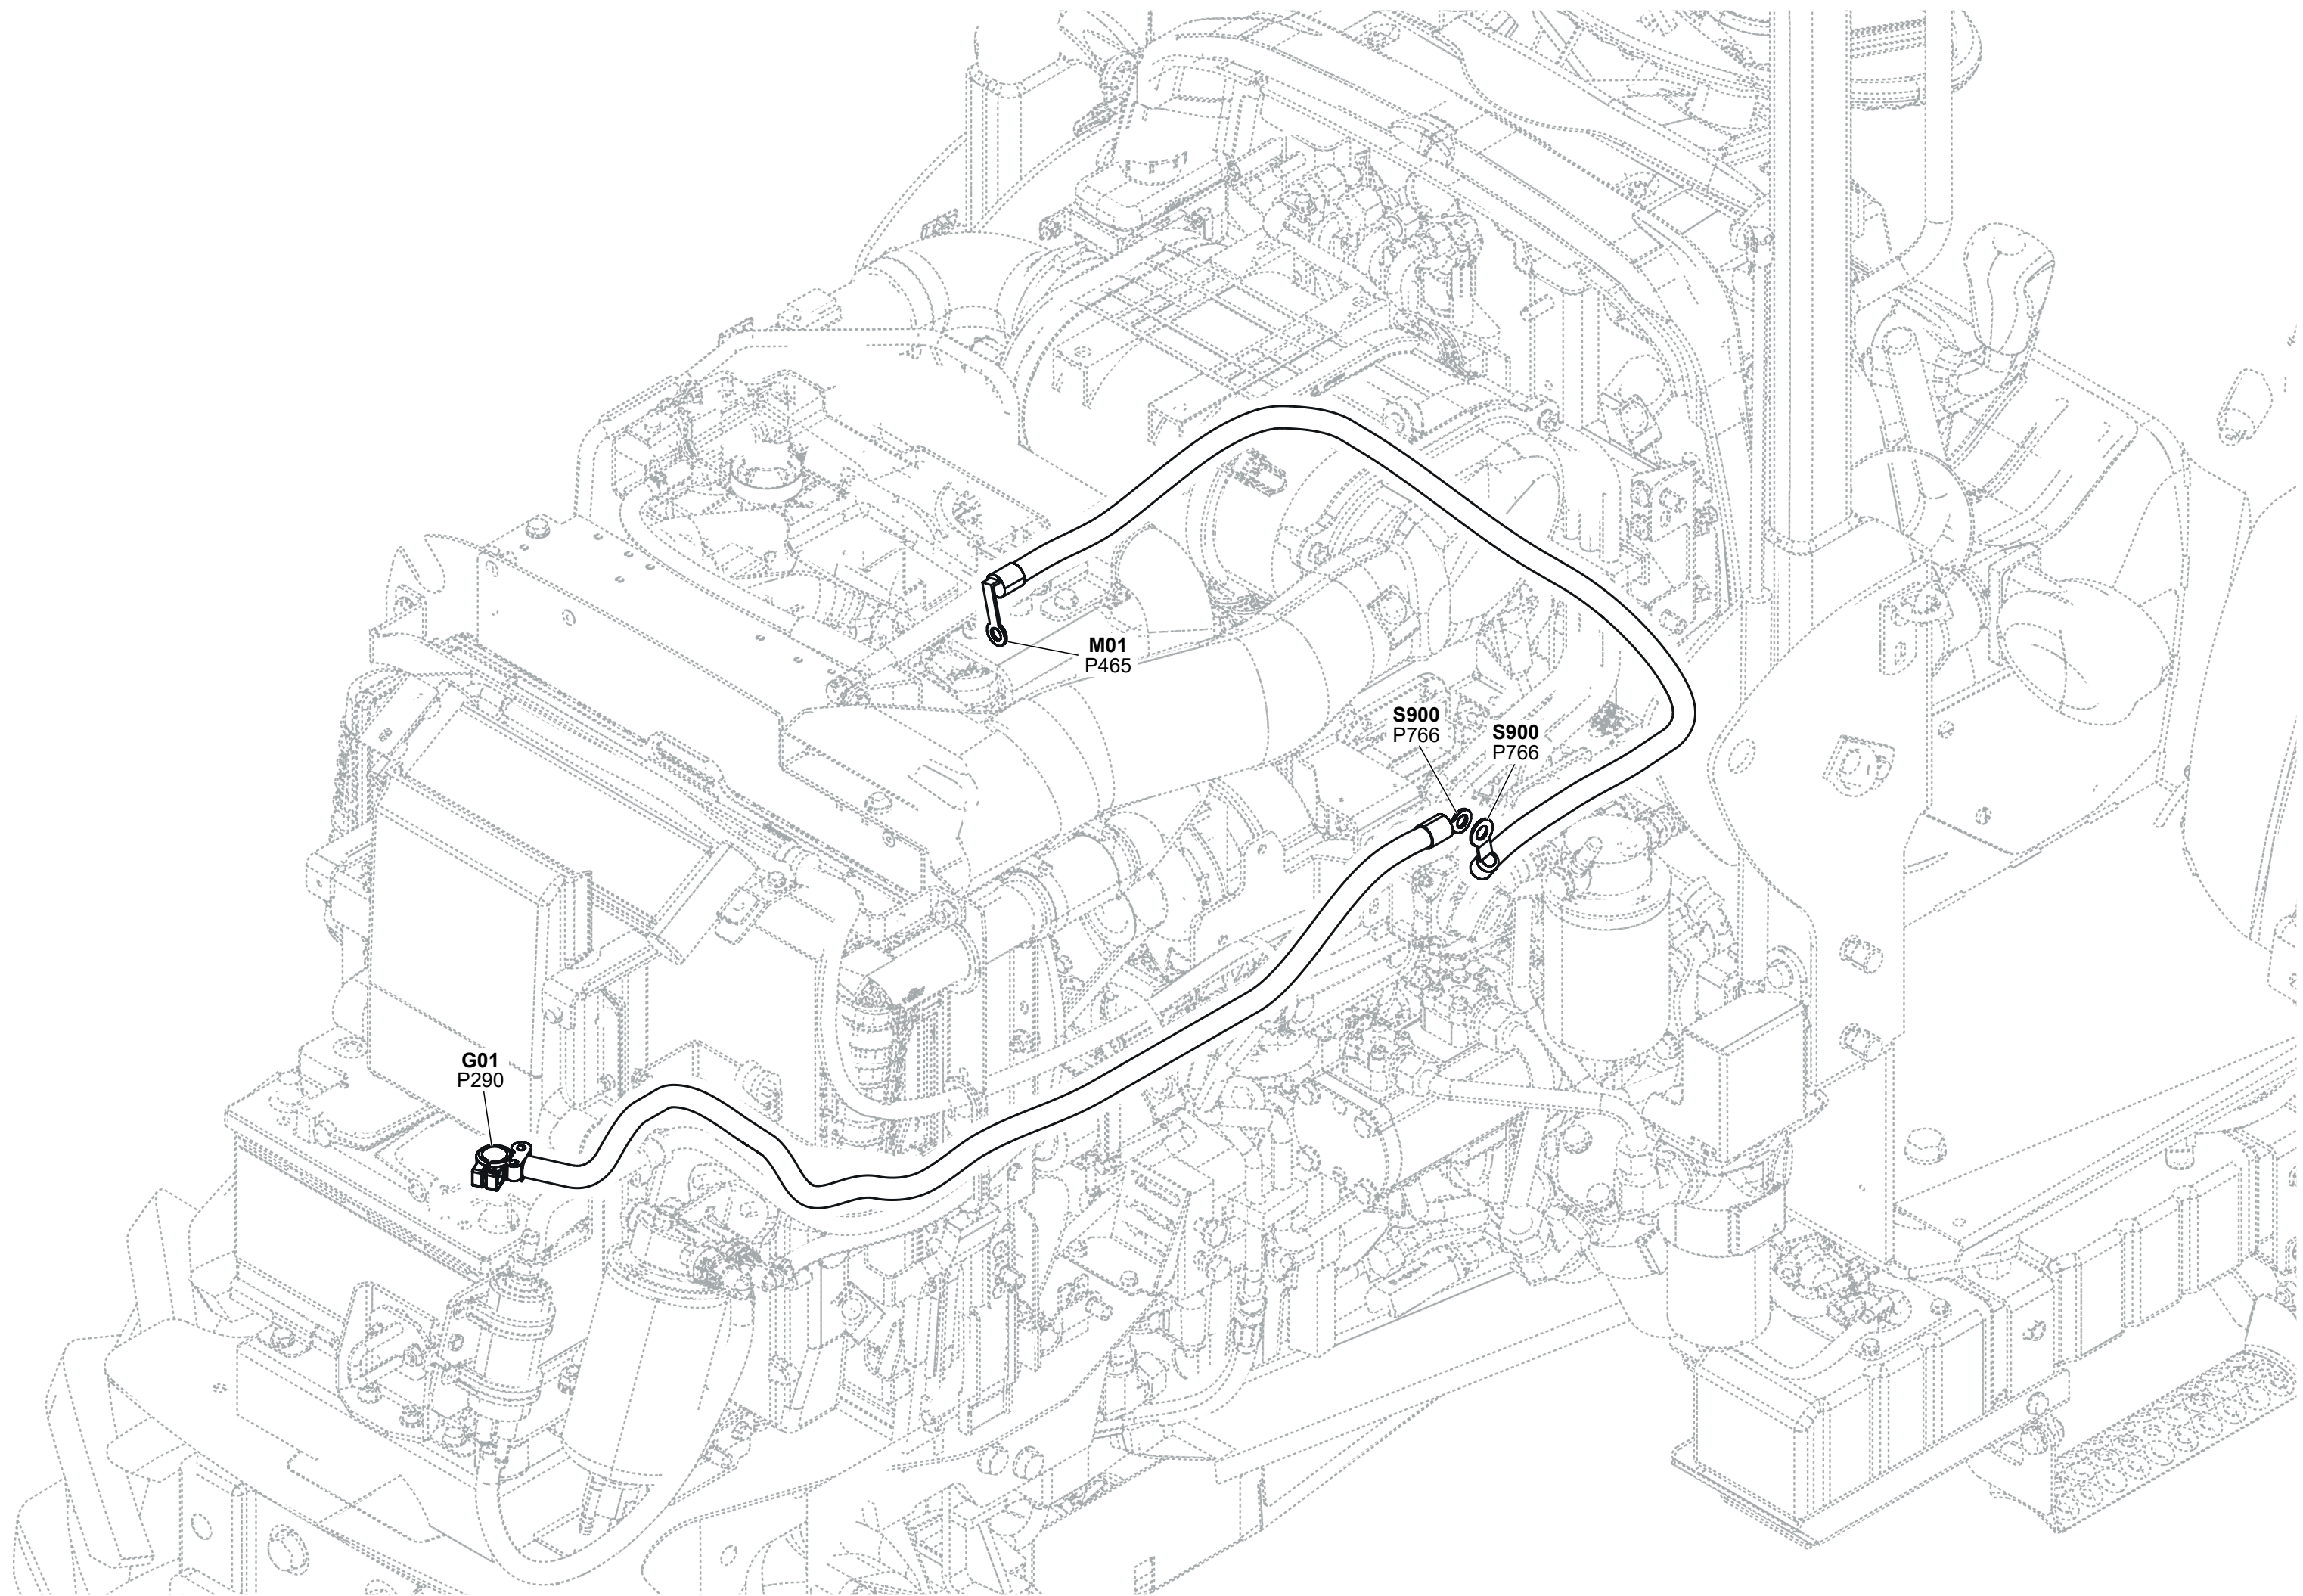

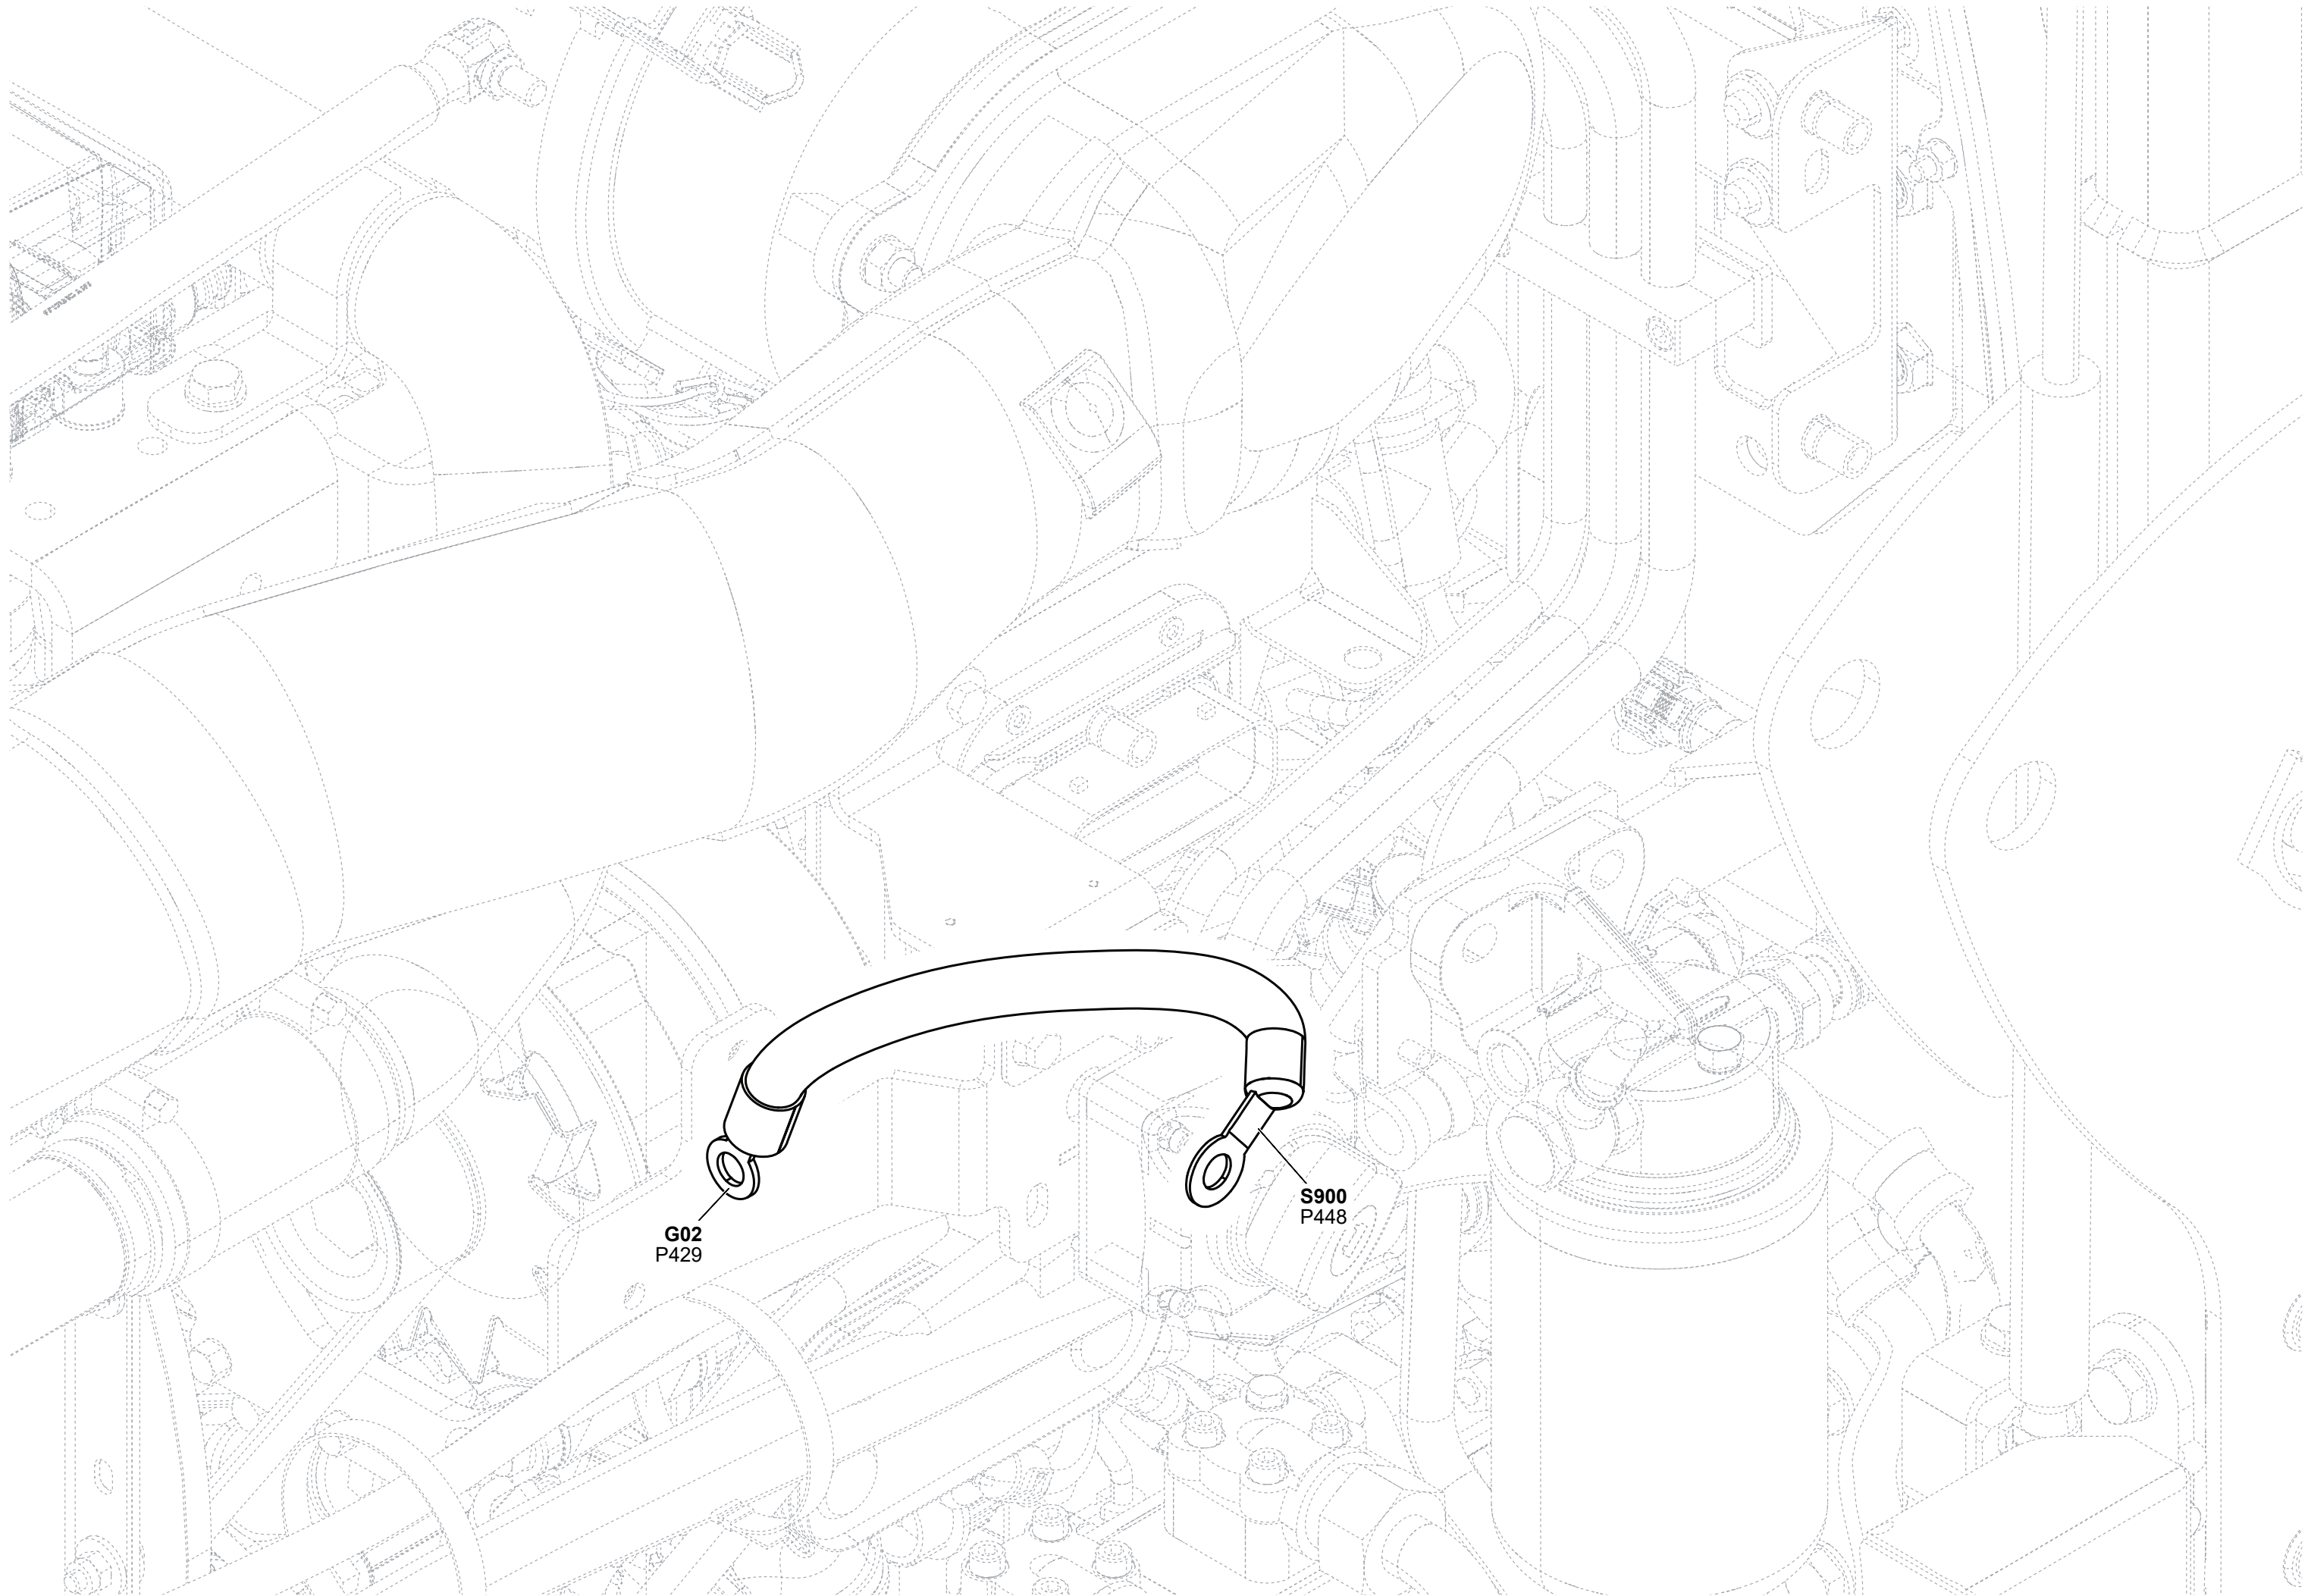

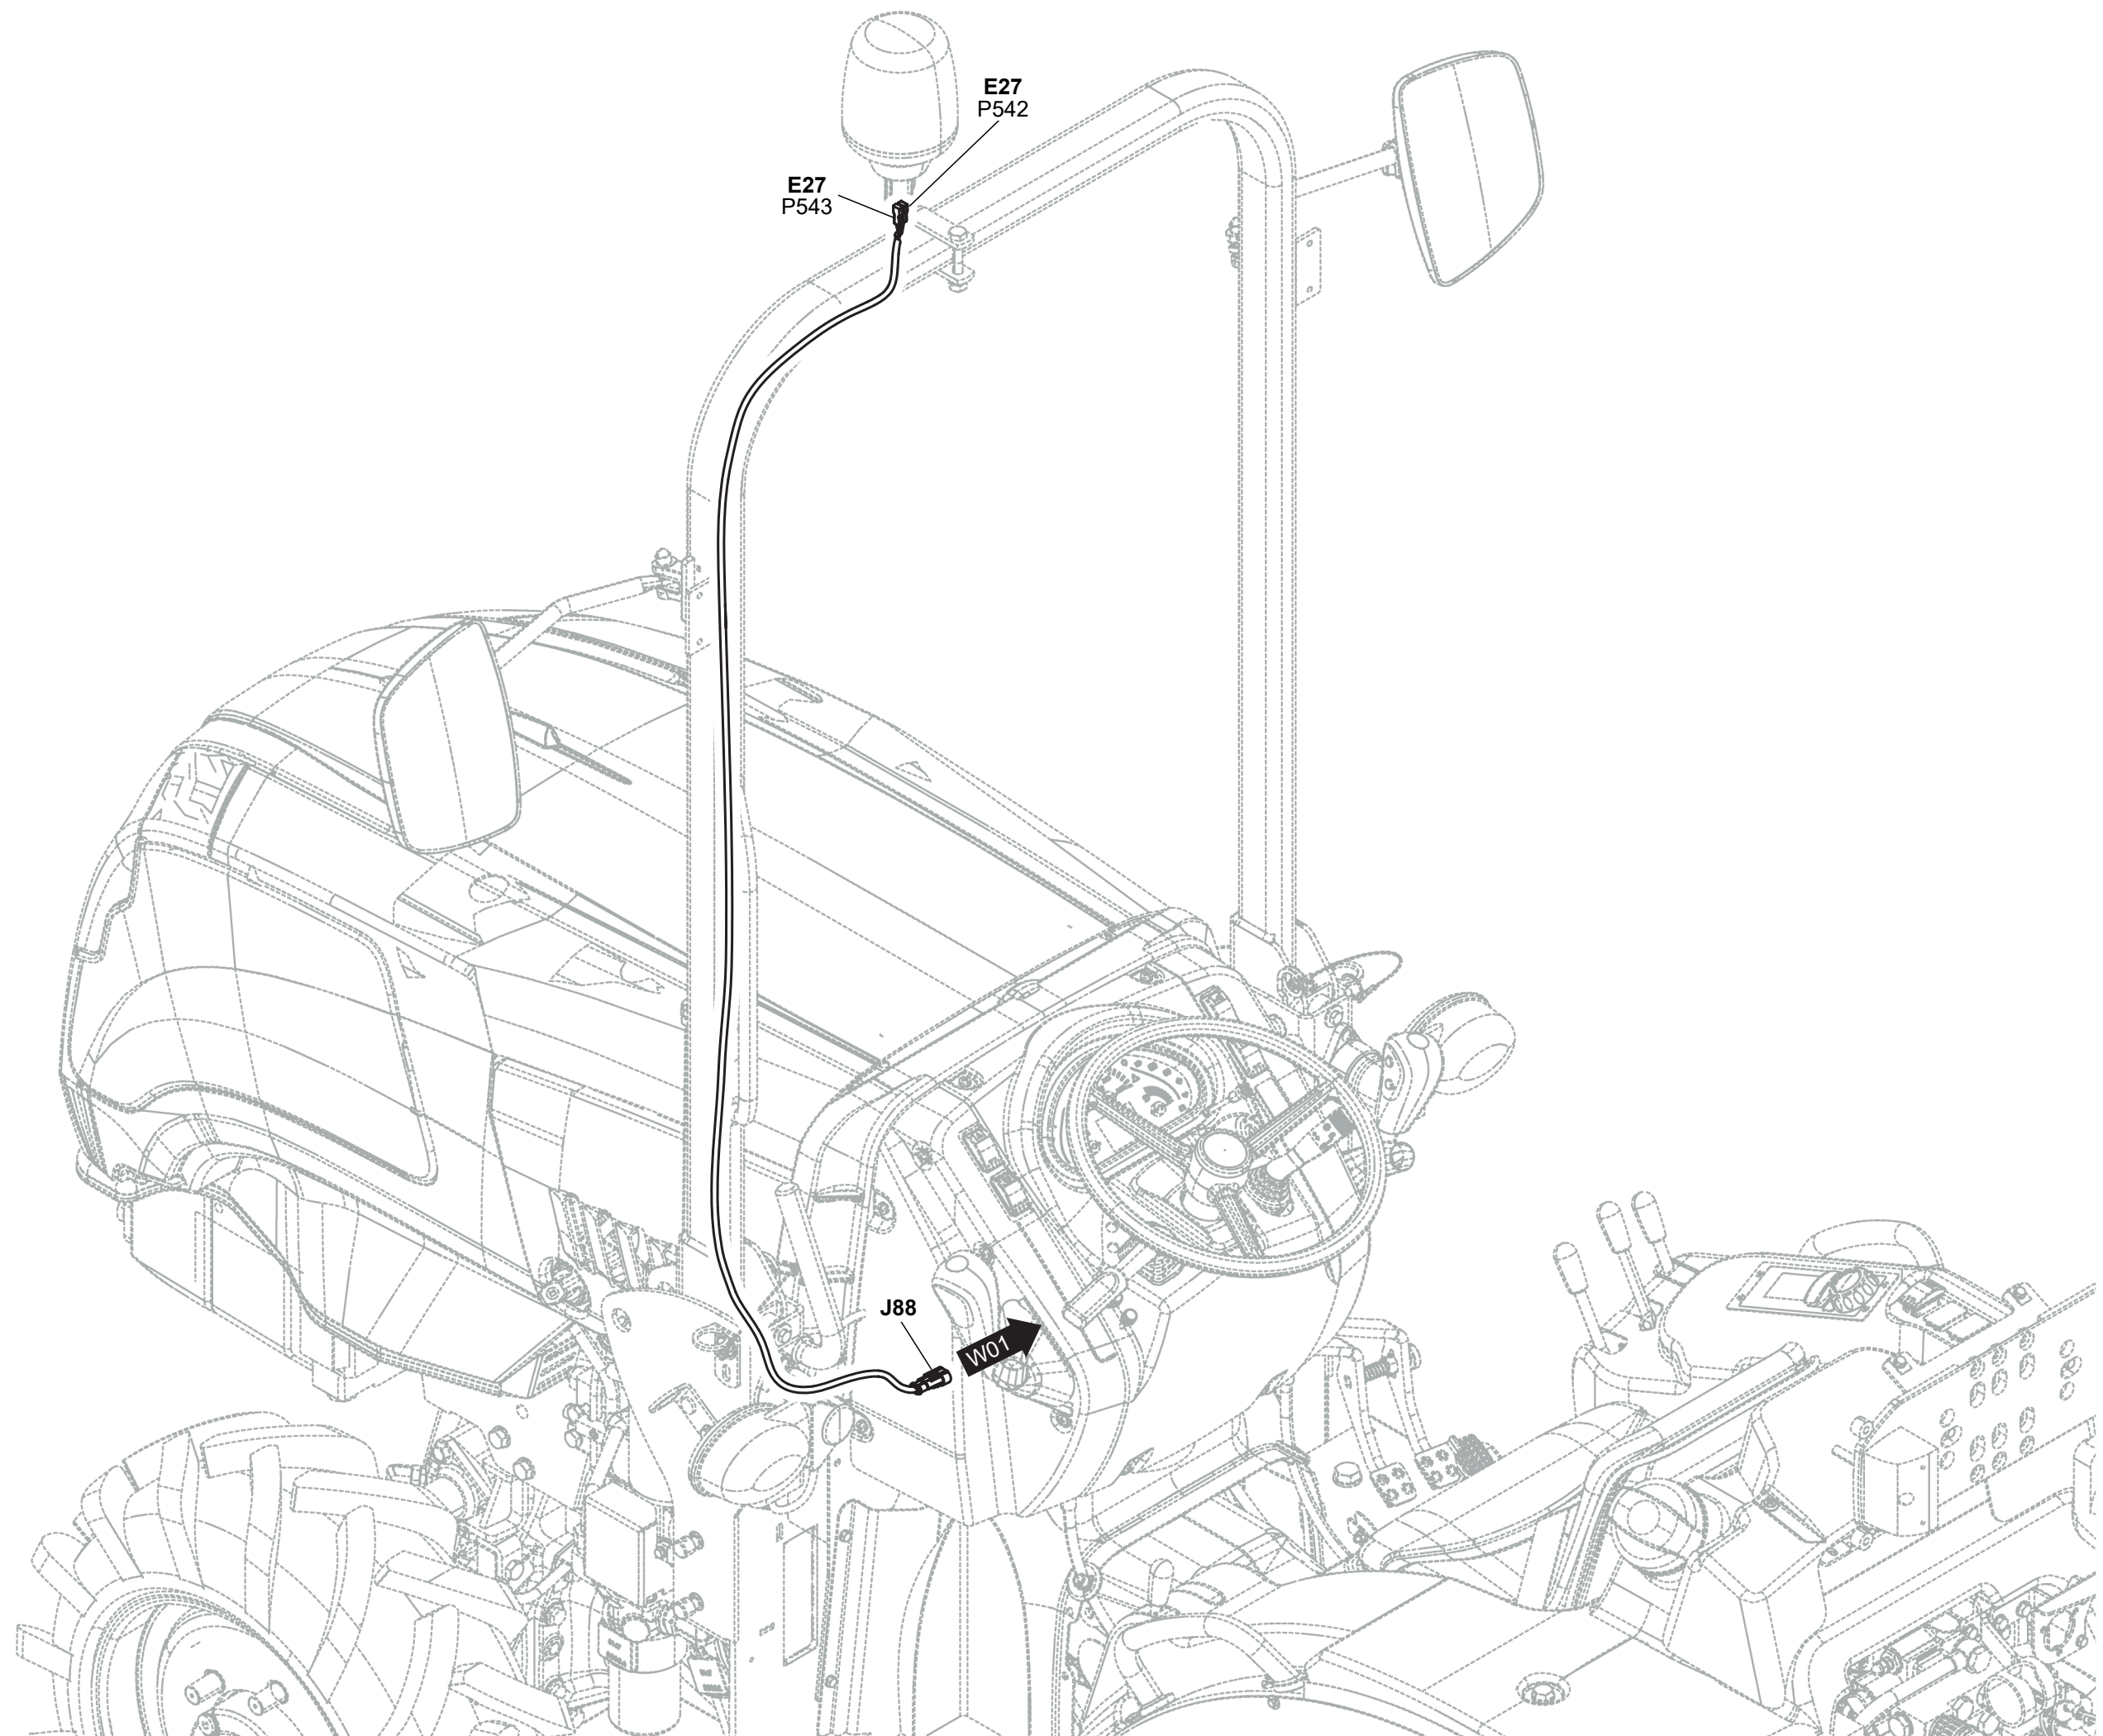



E27
P543


E27
P542


J88

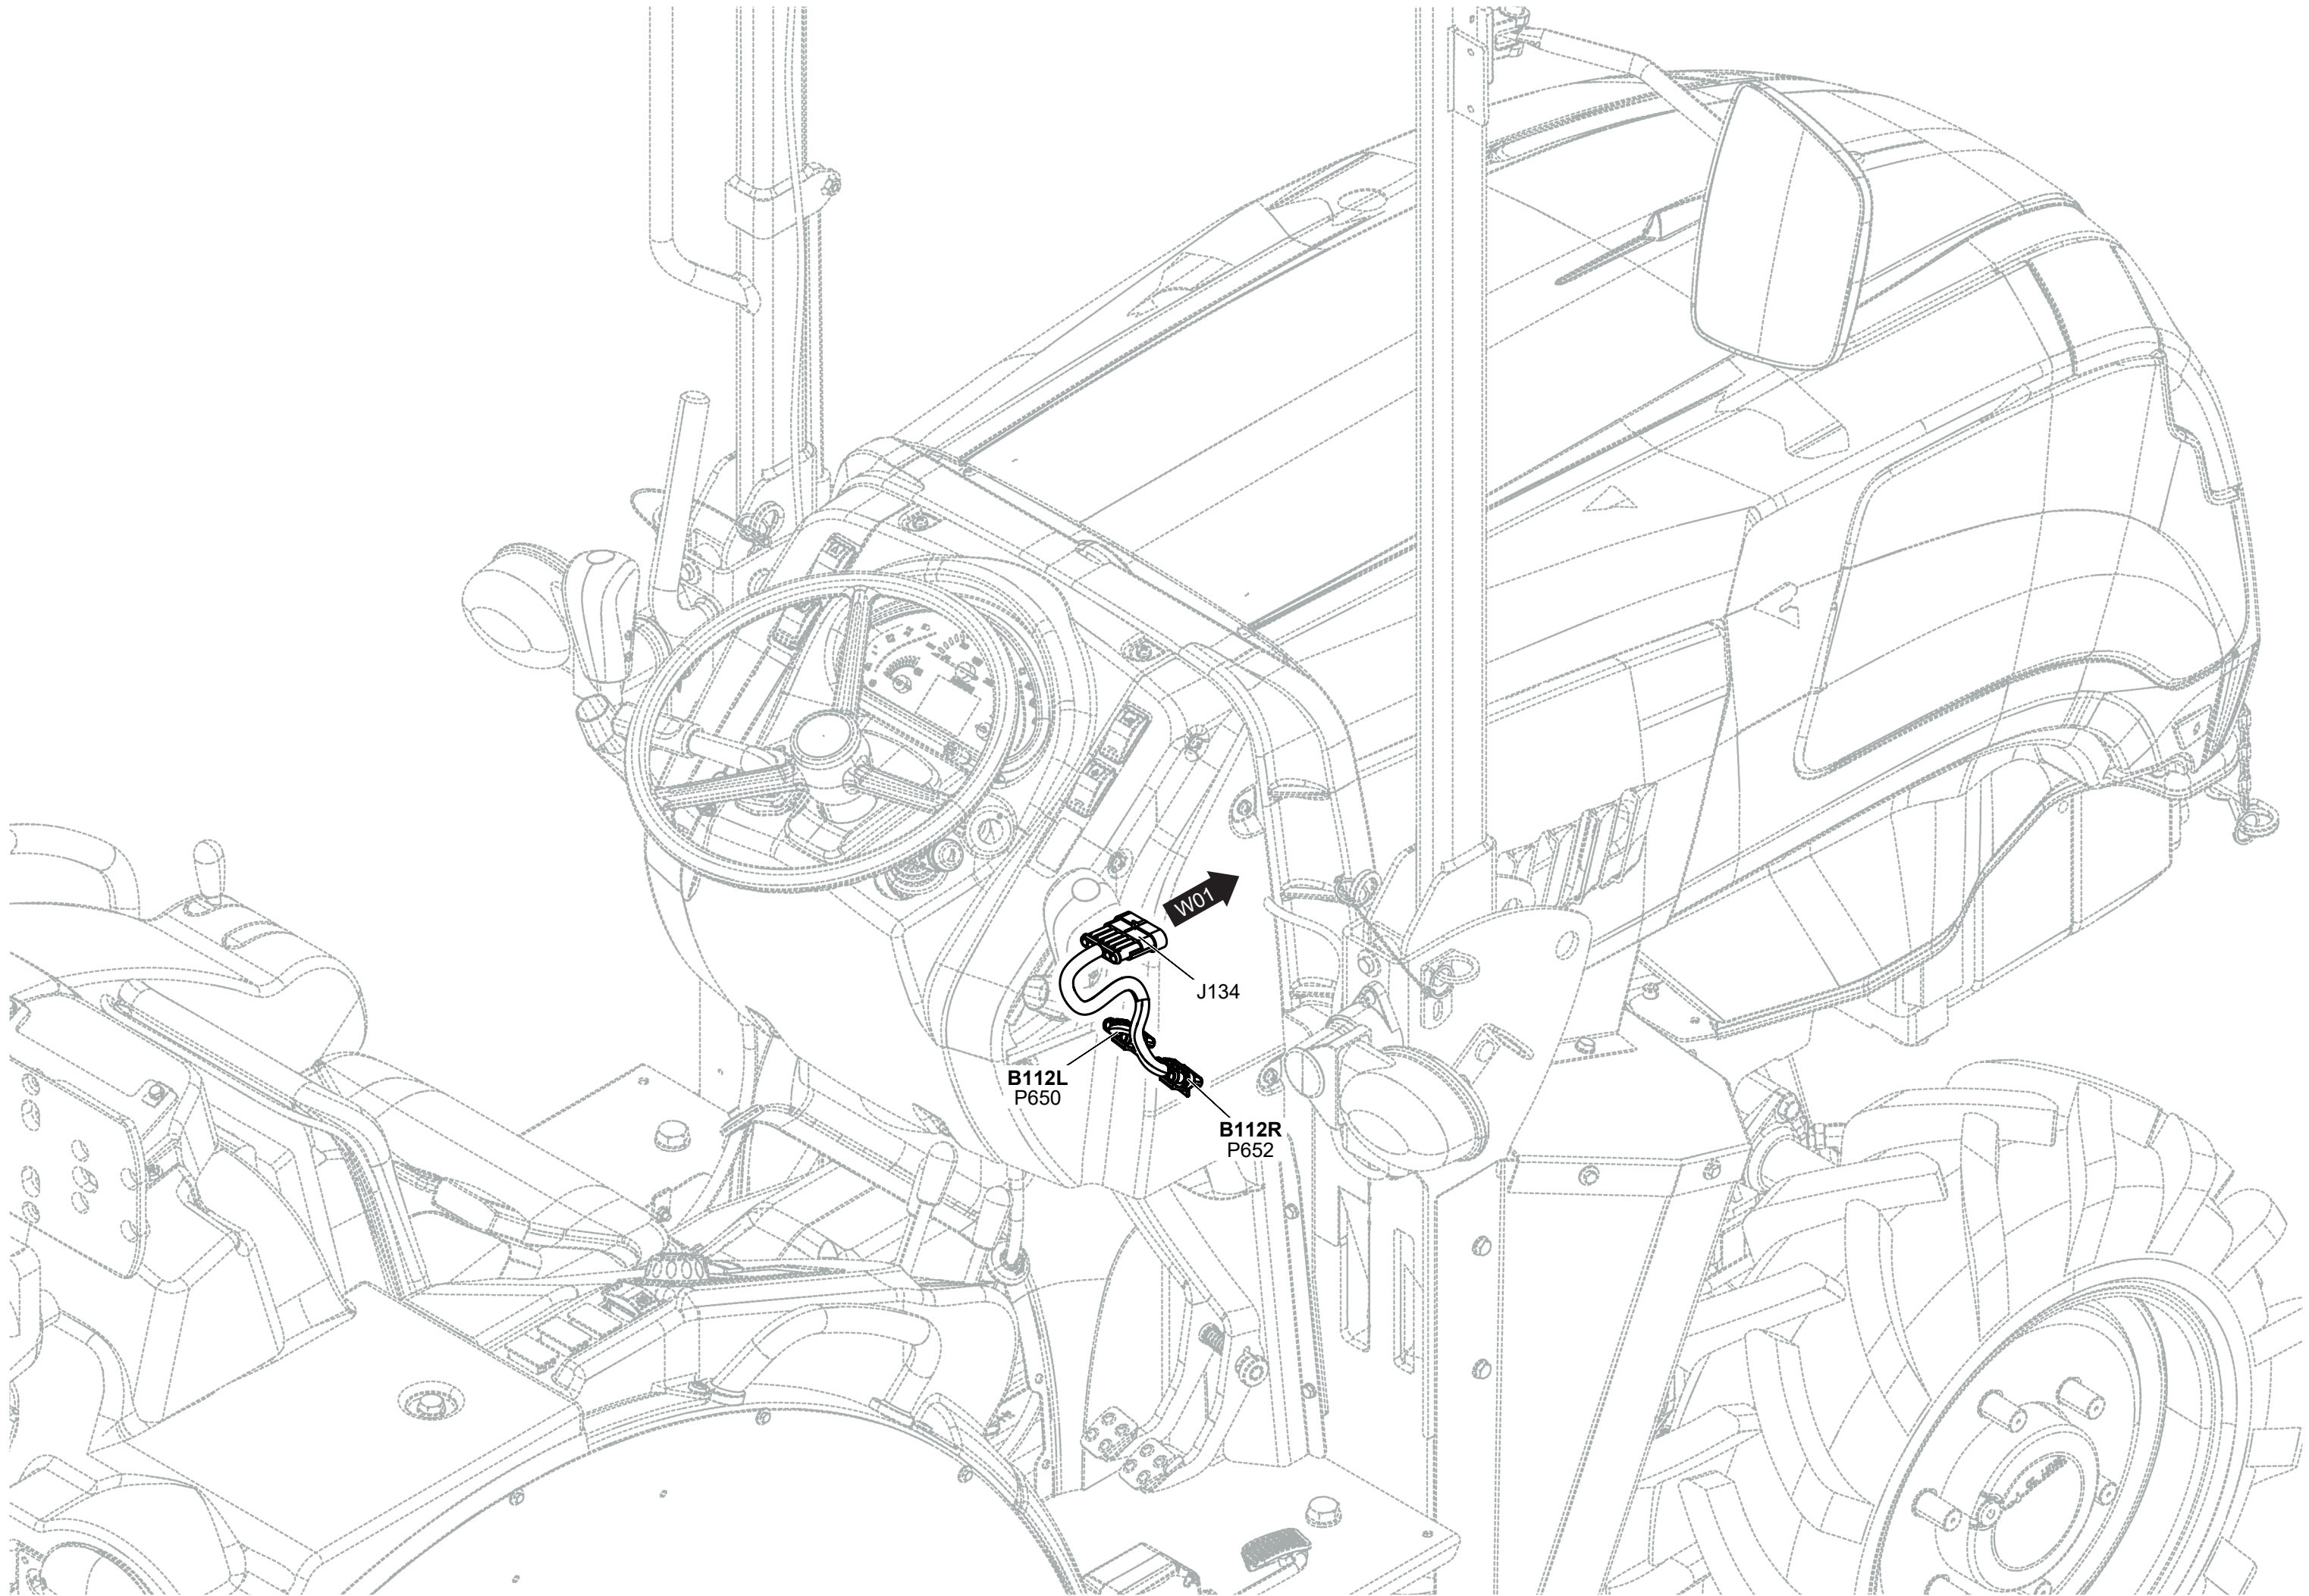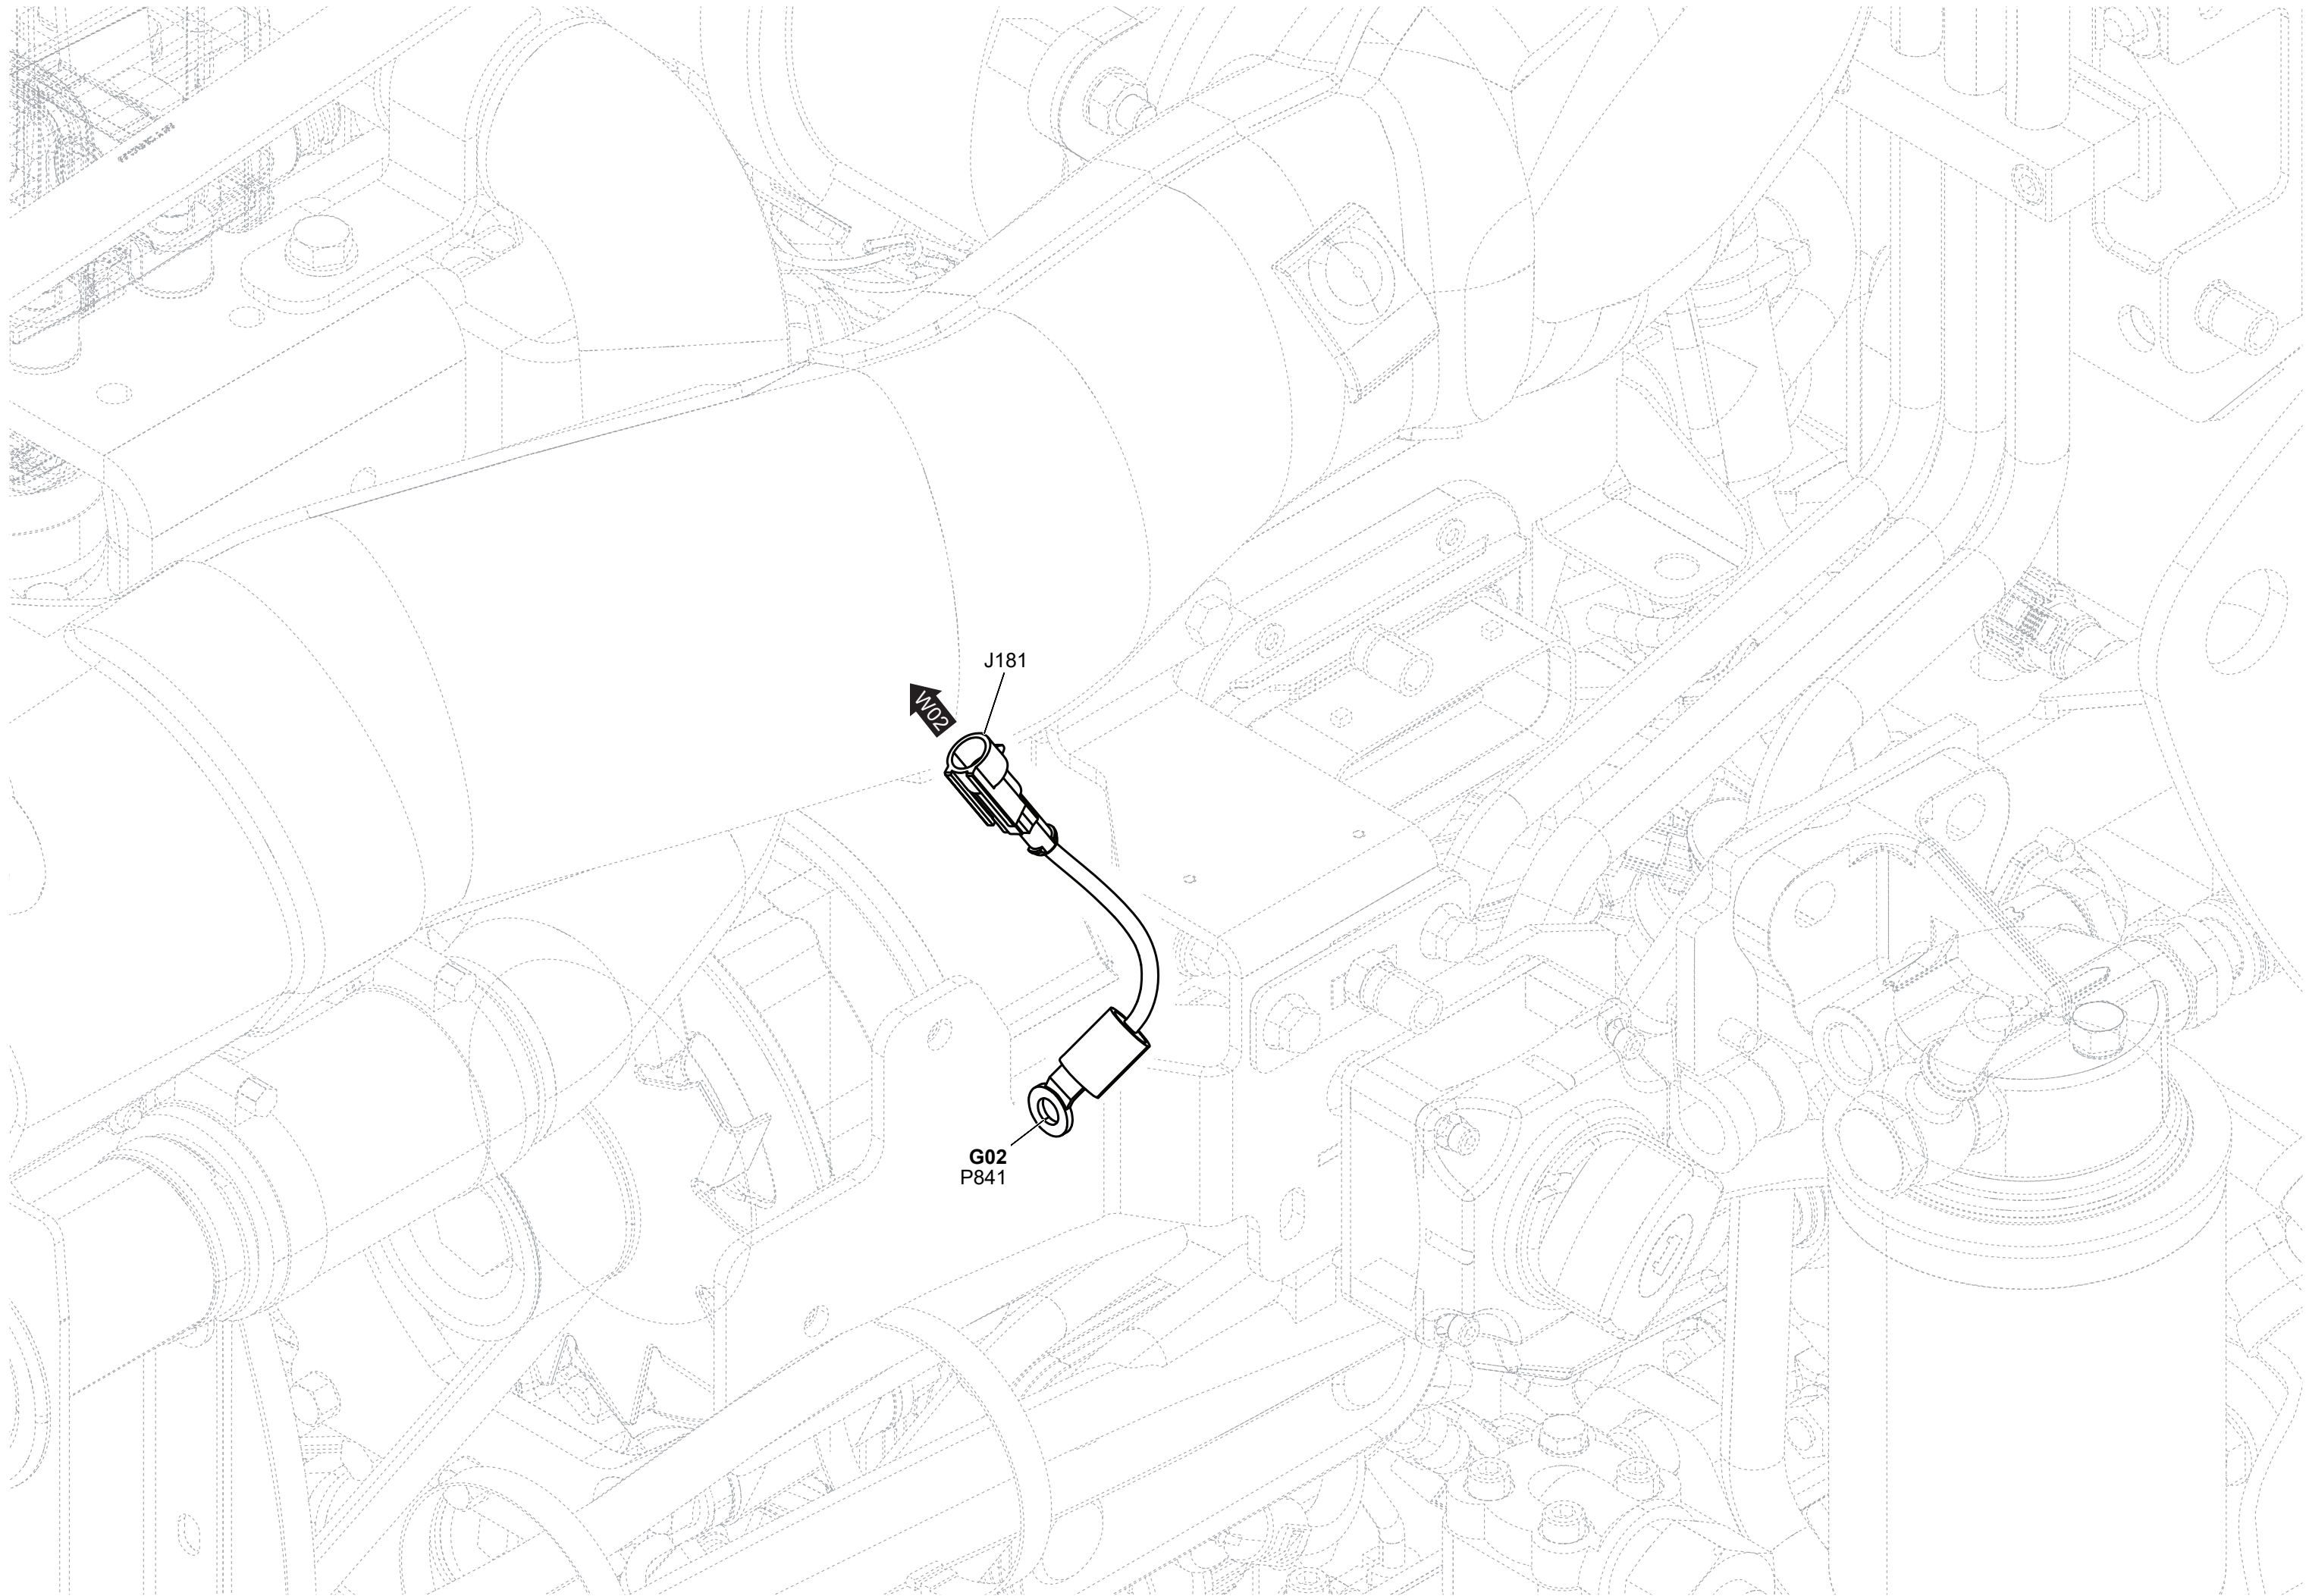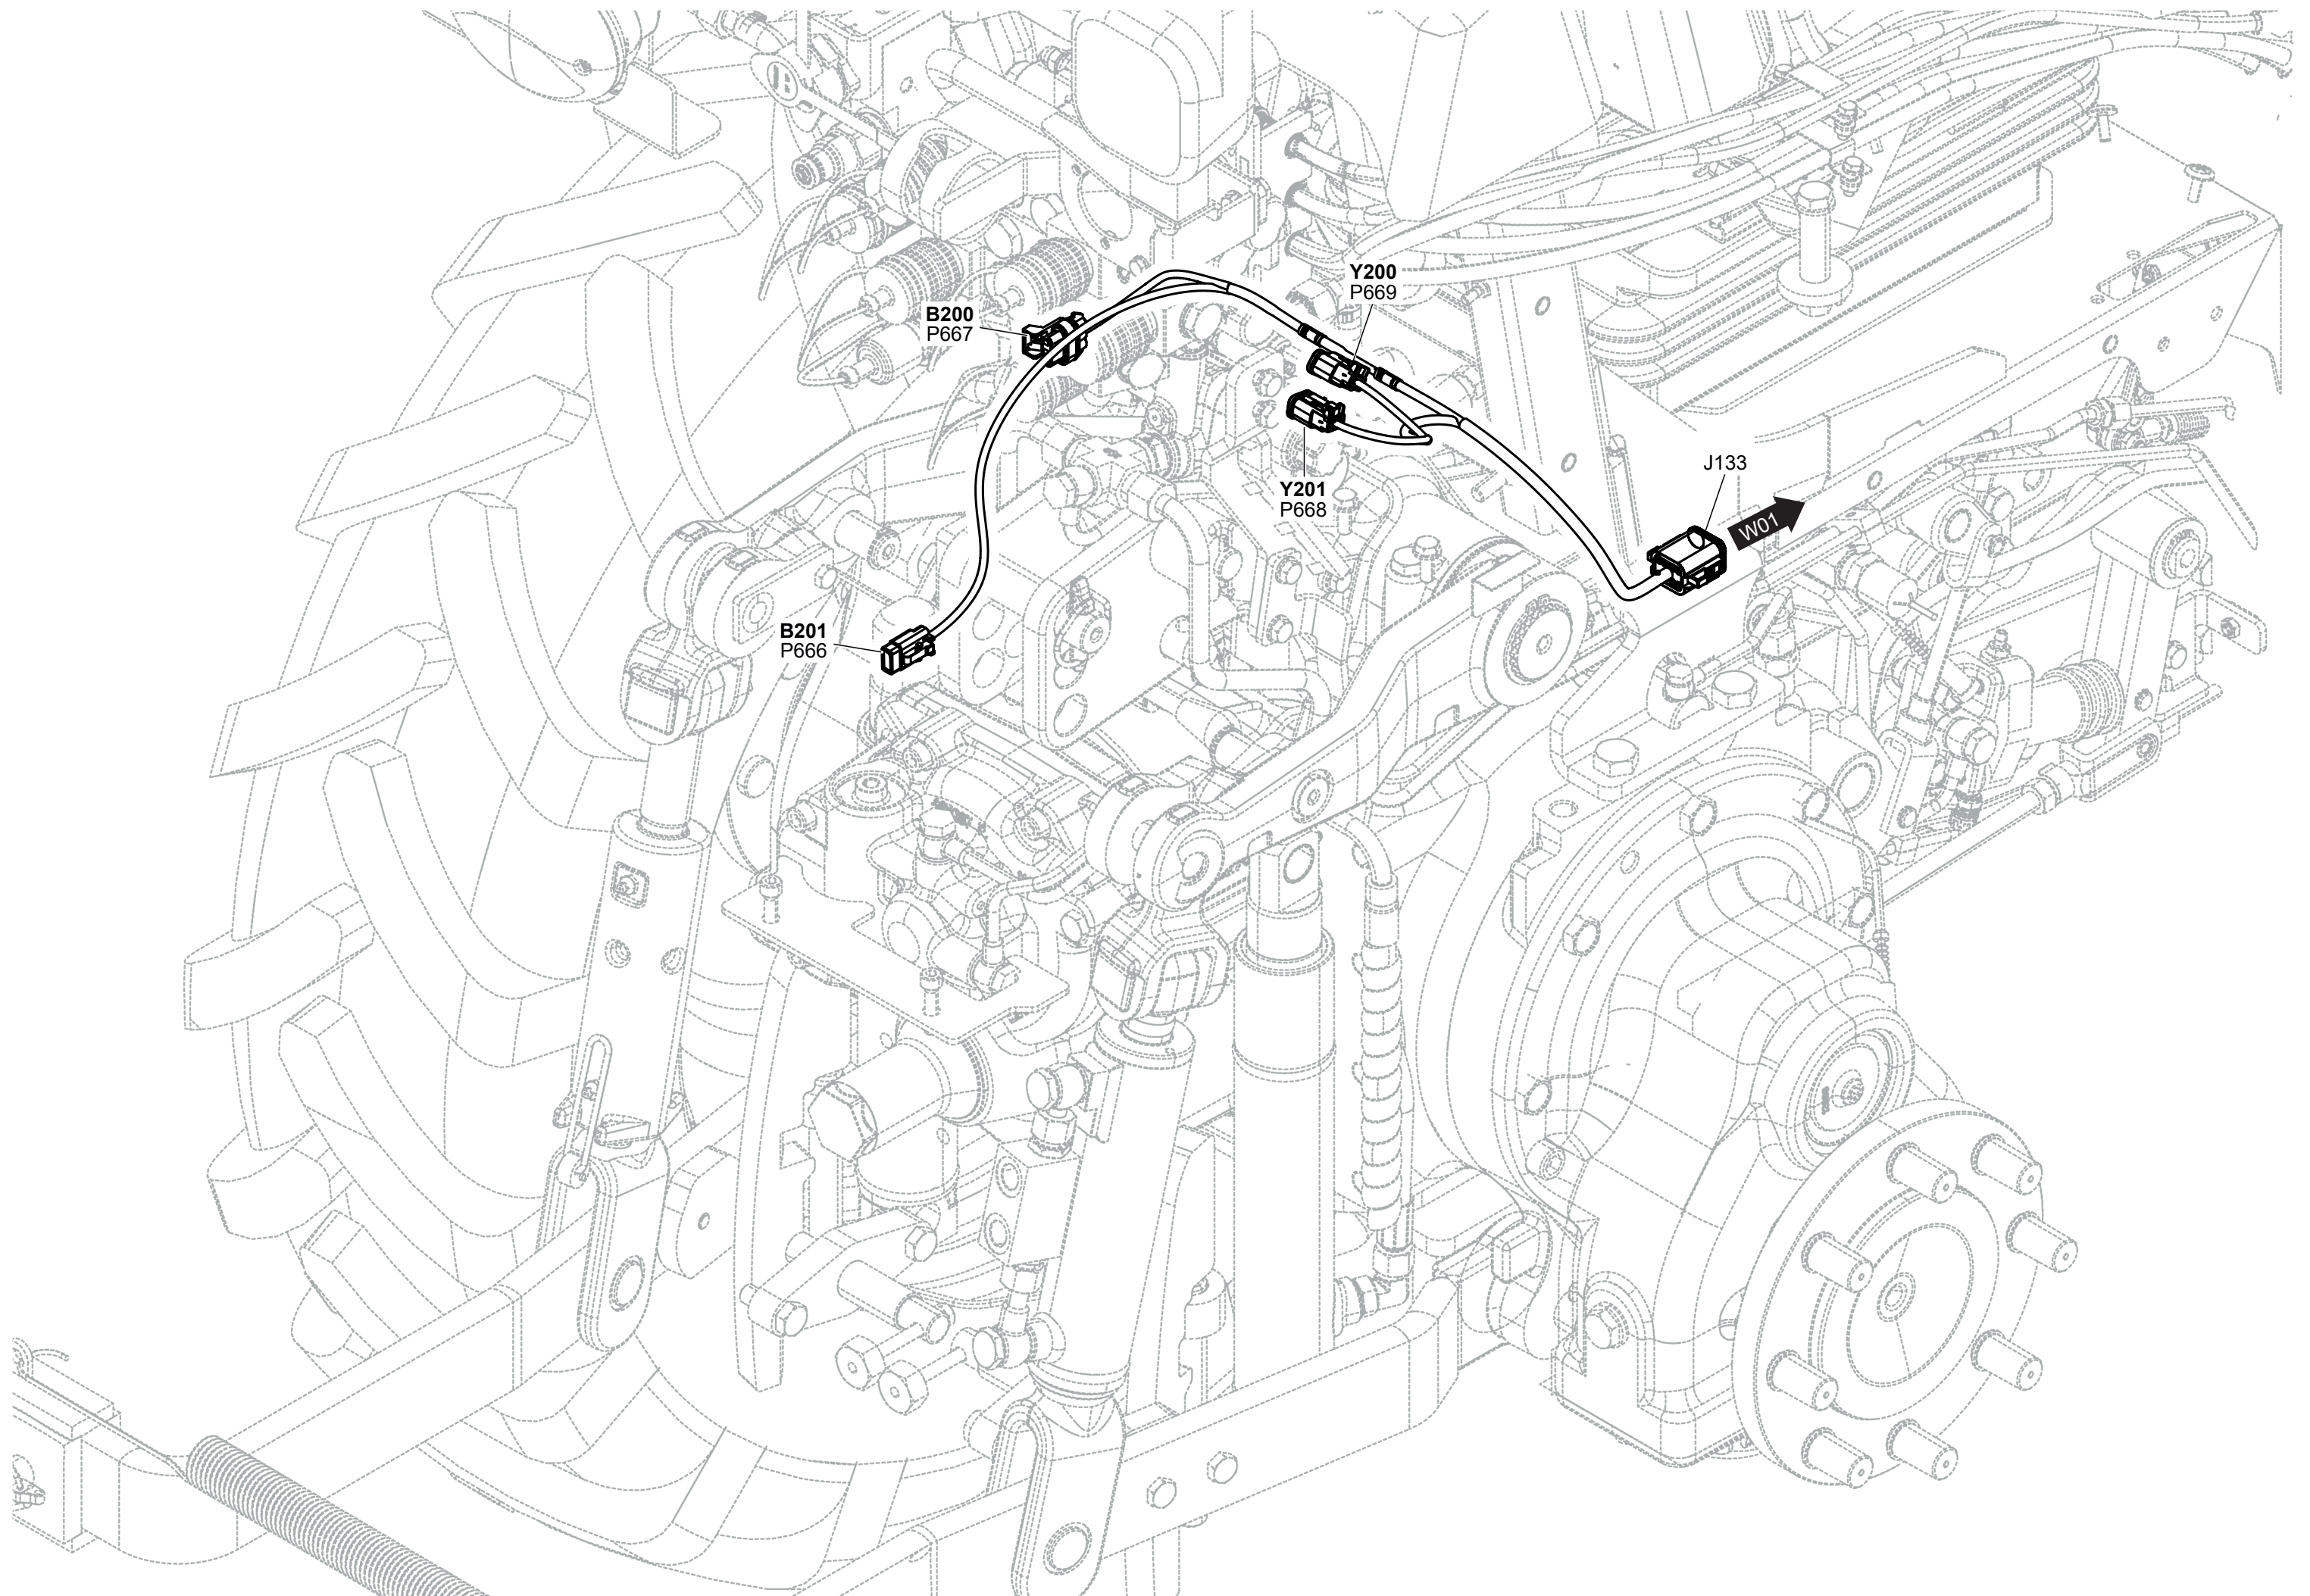 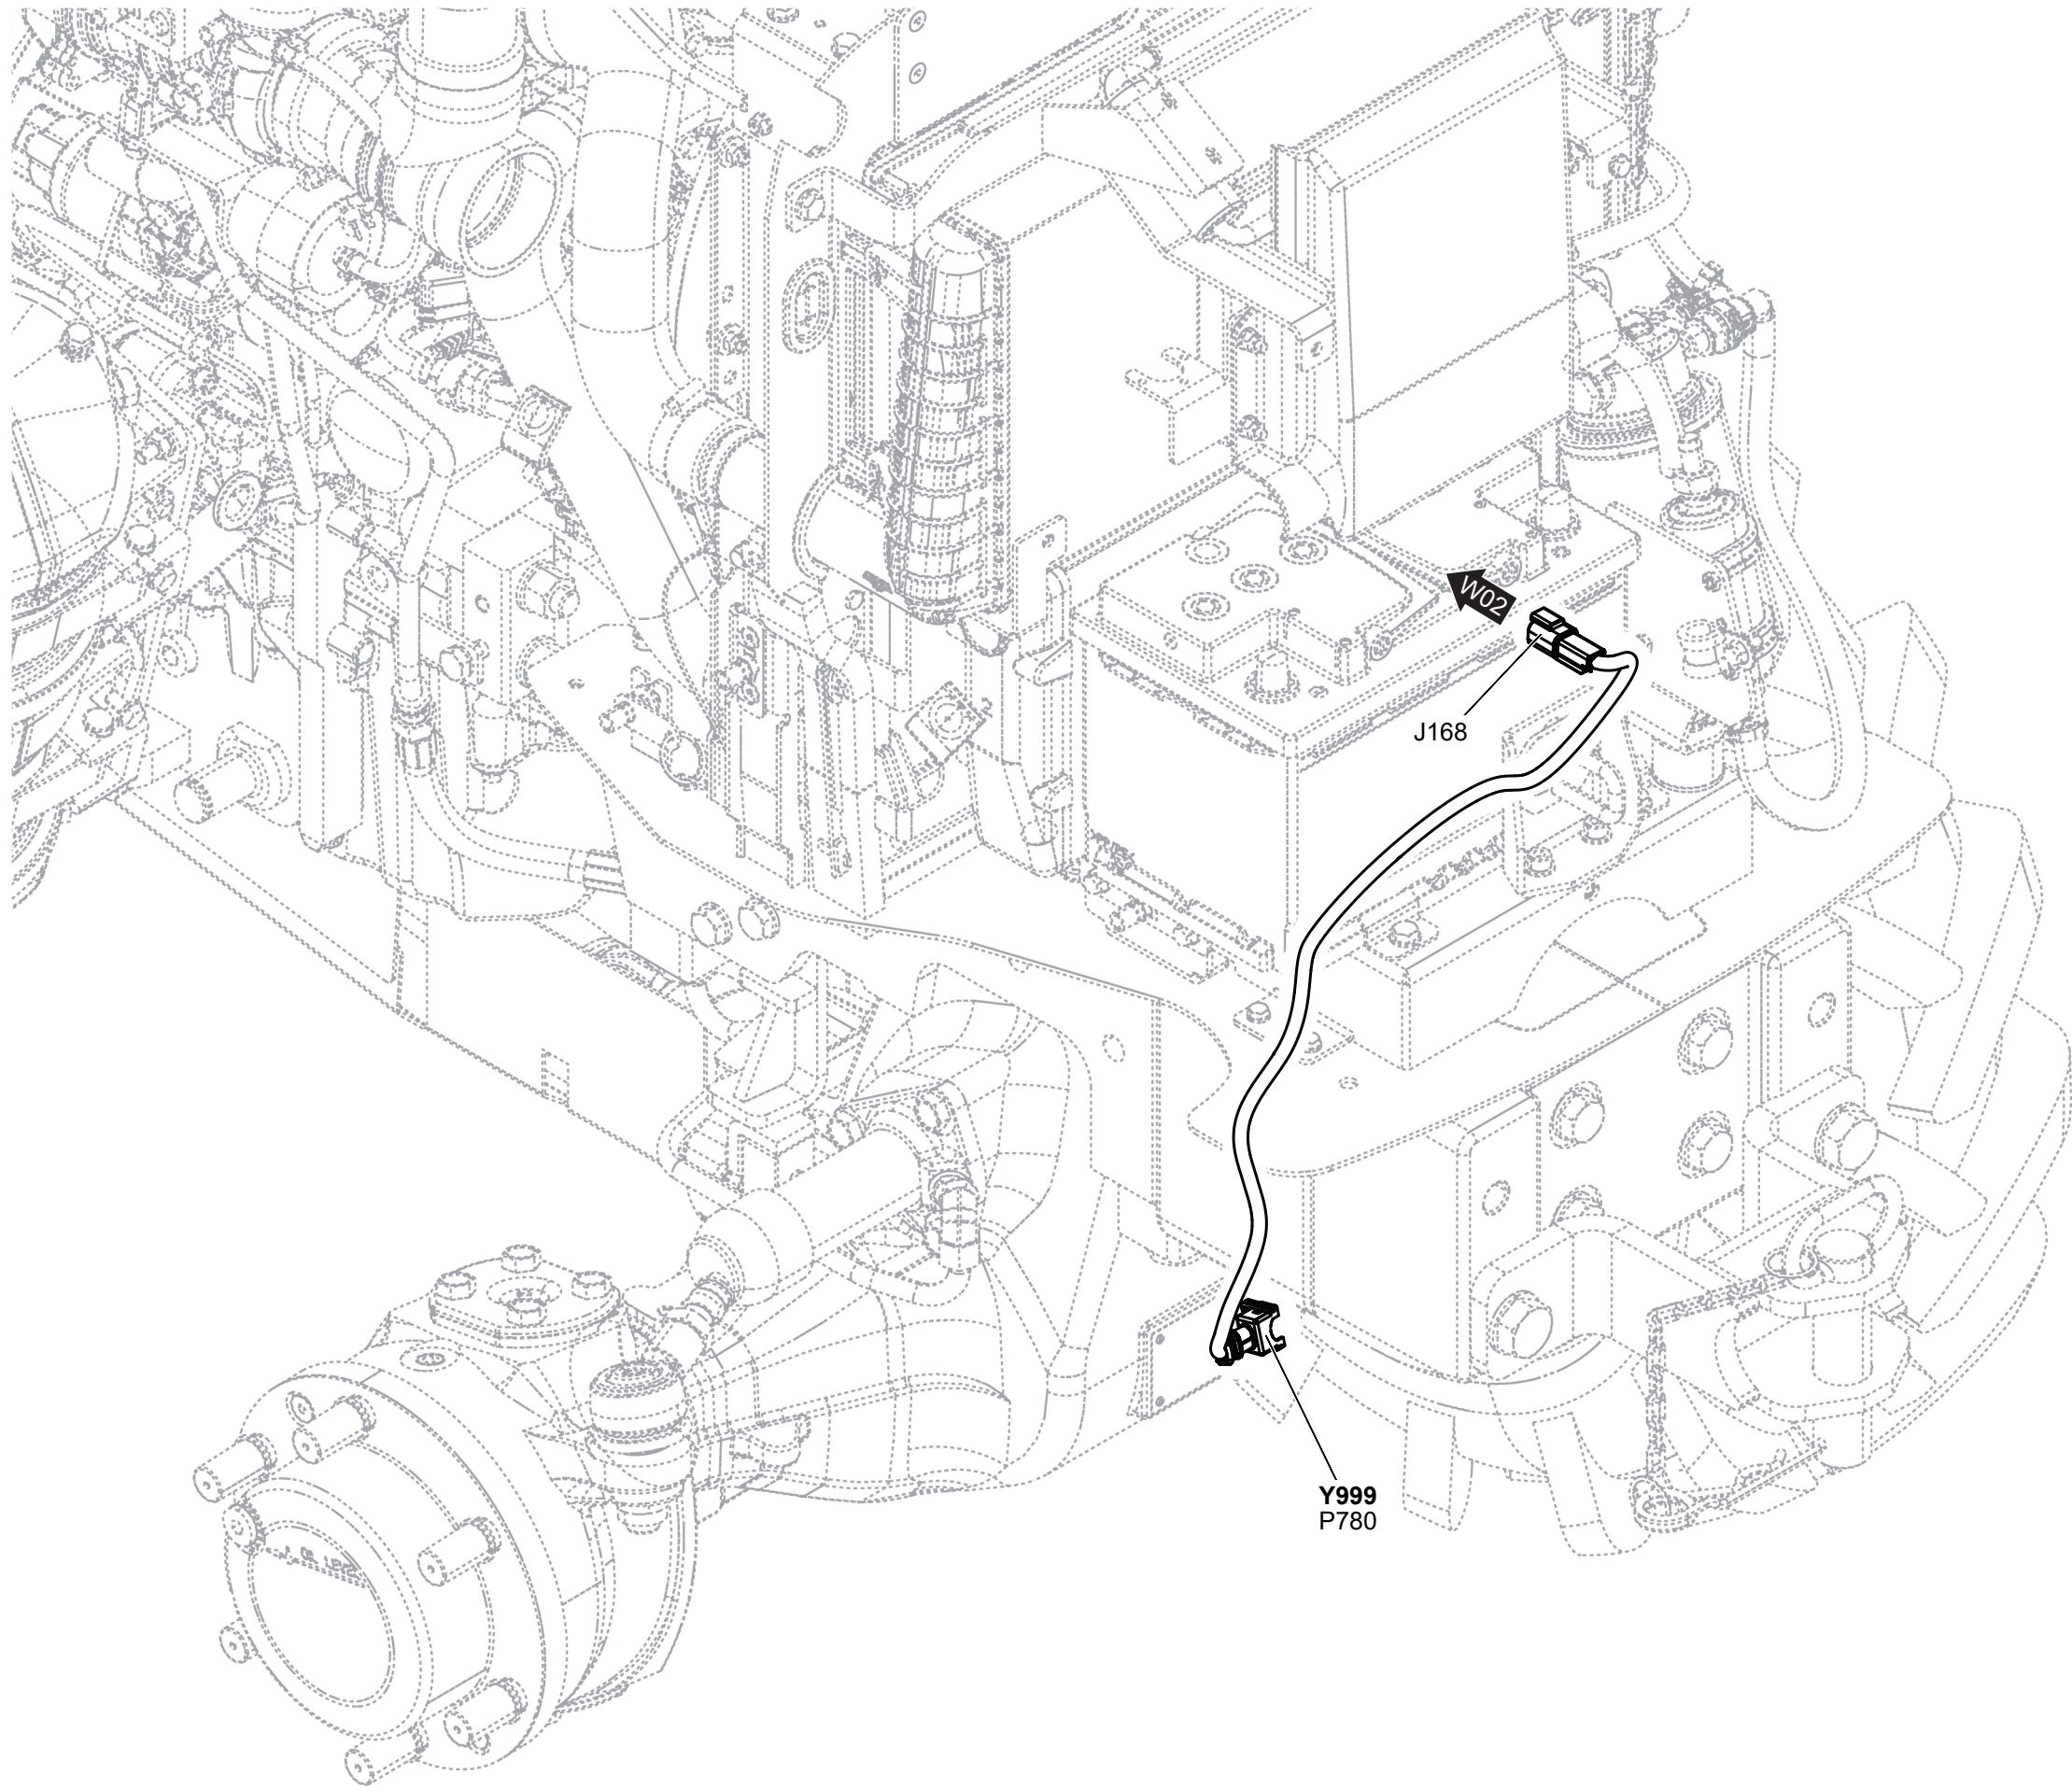
W01

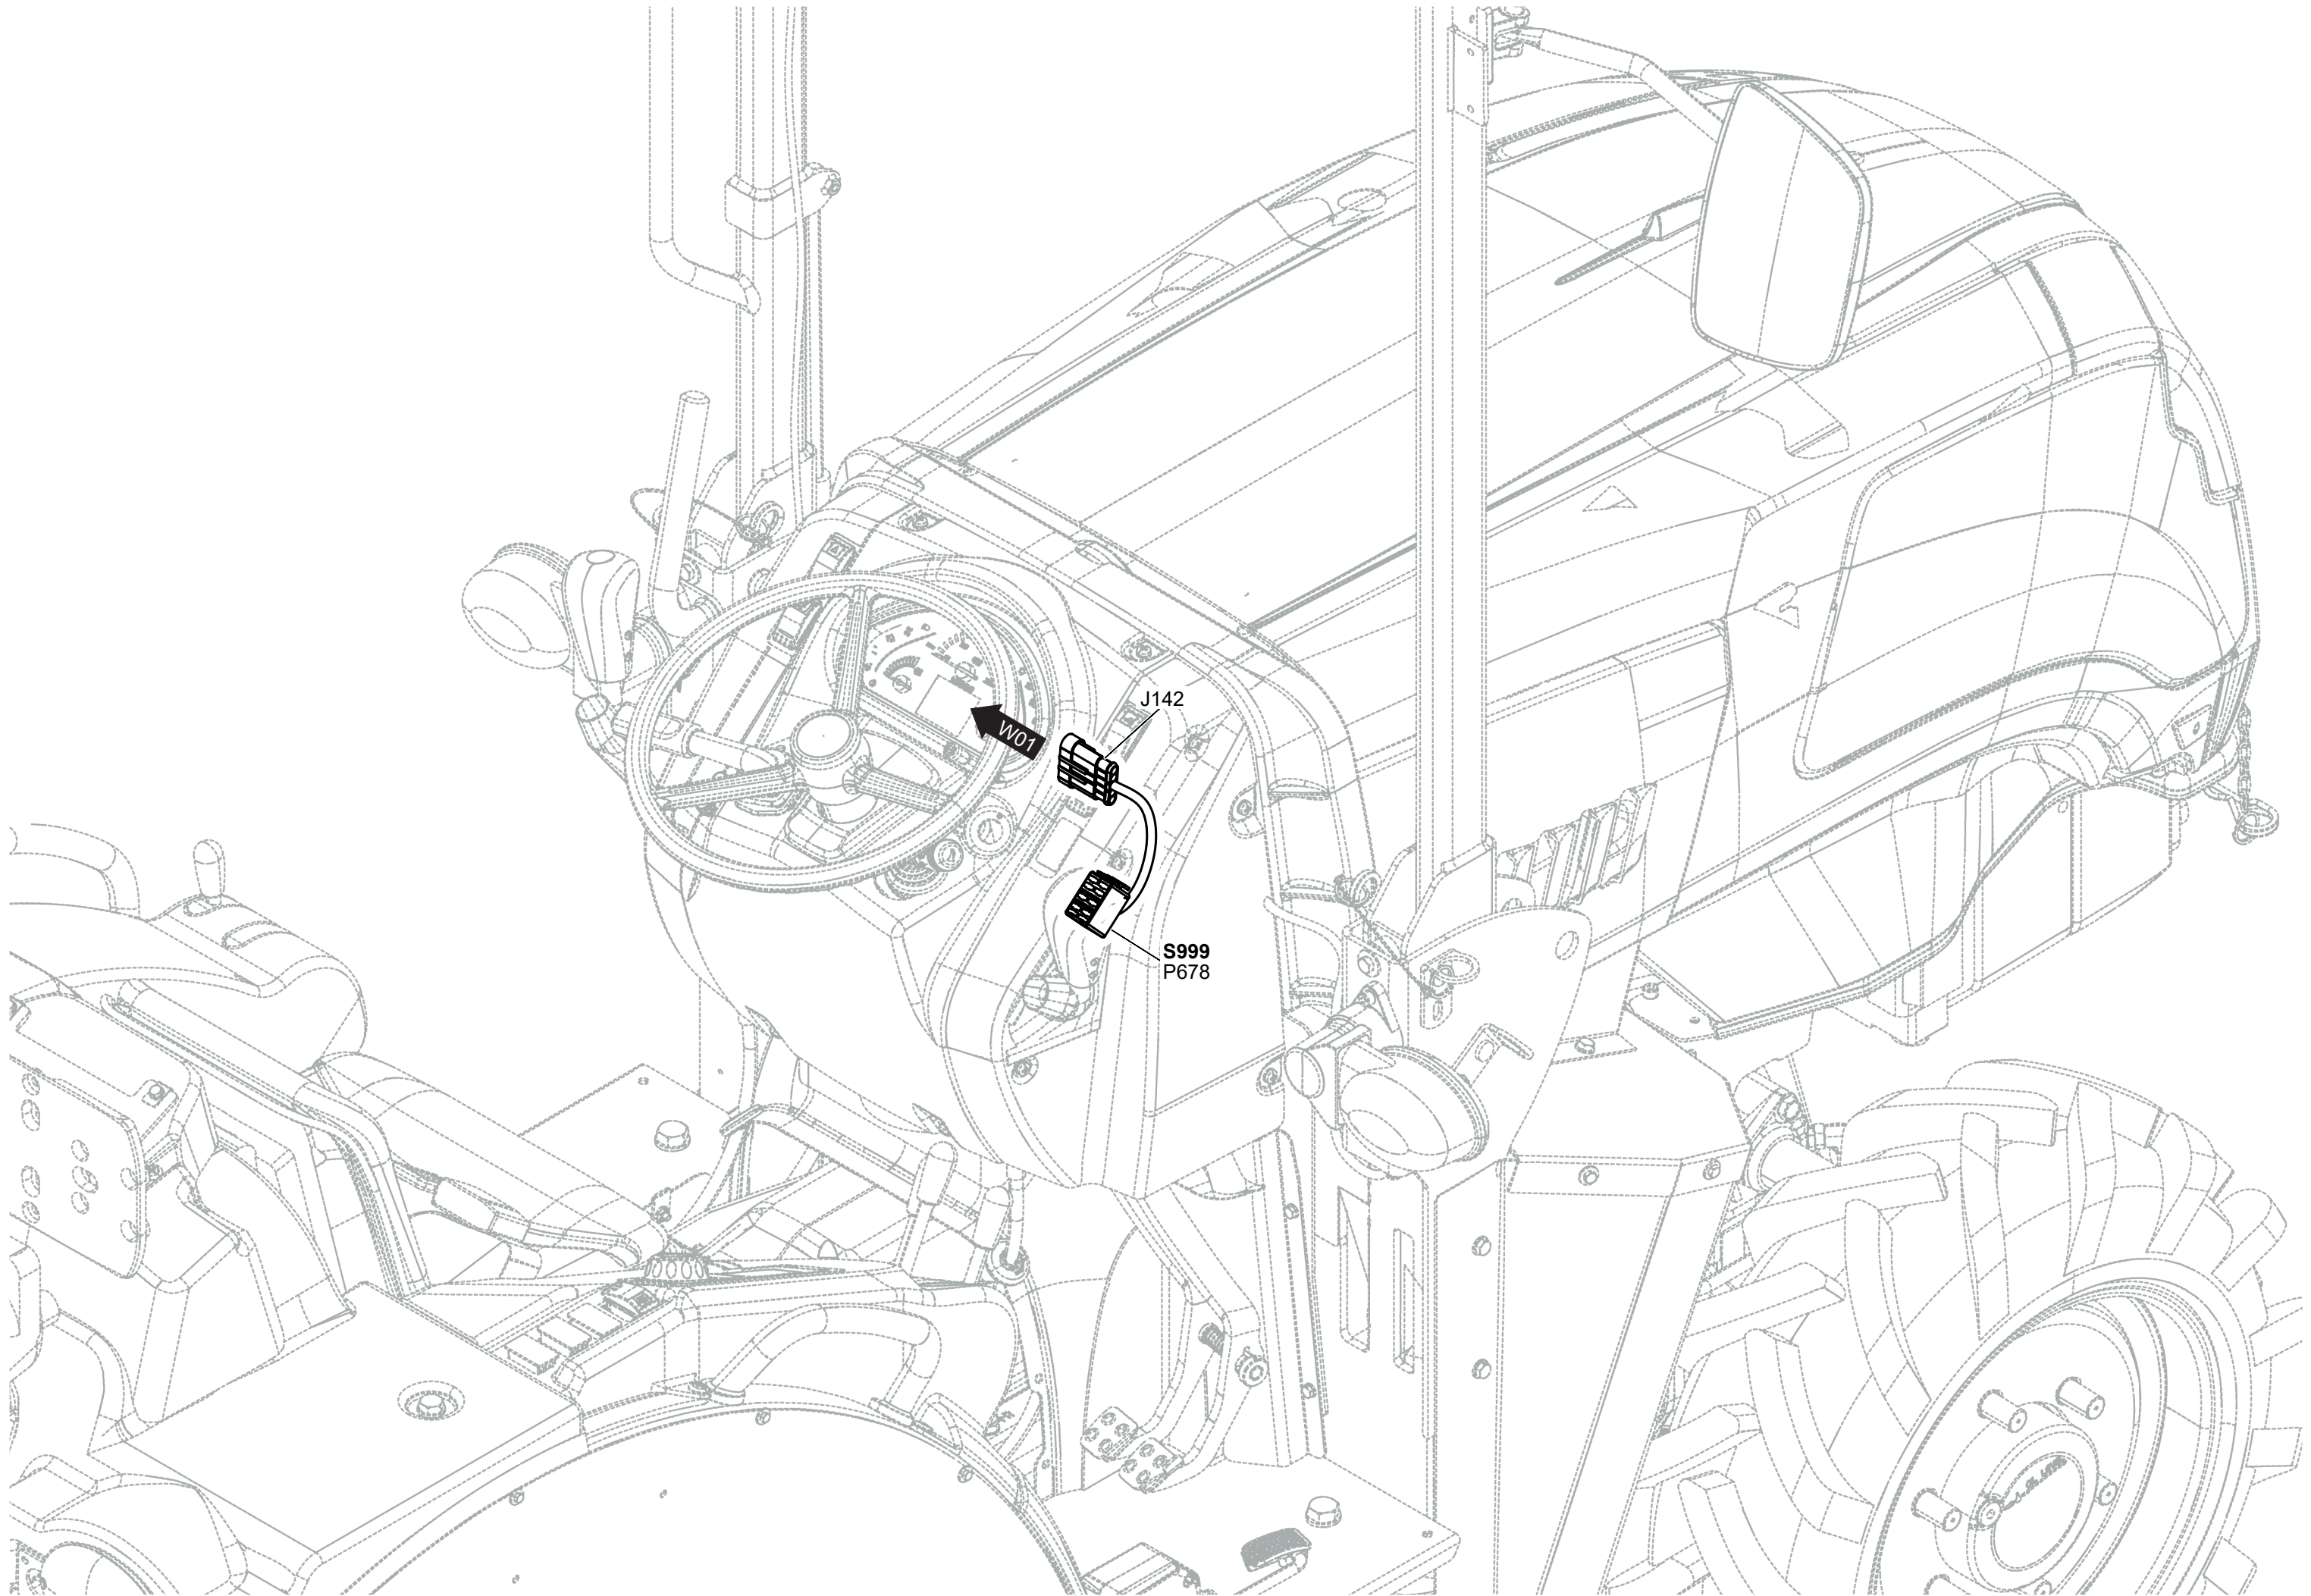


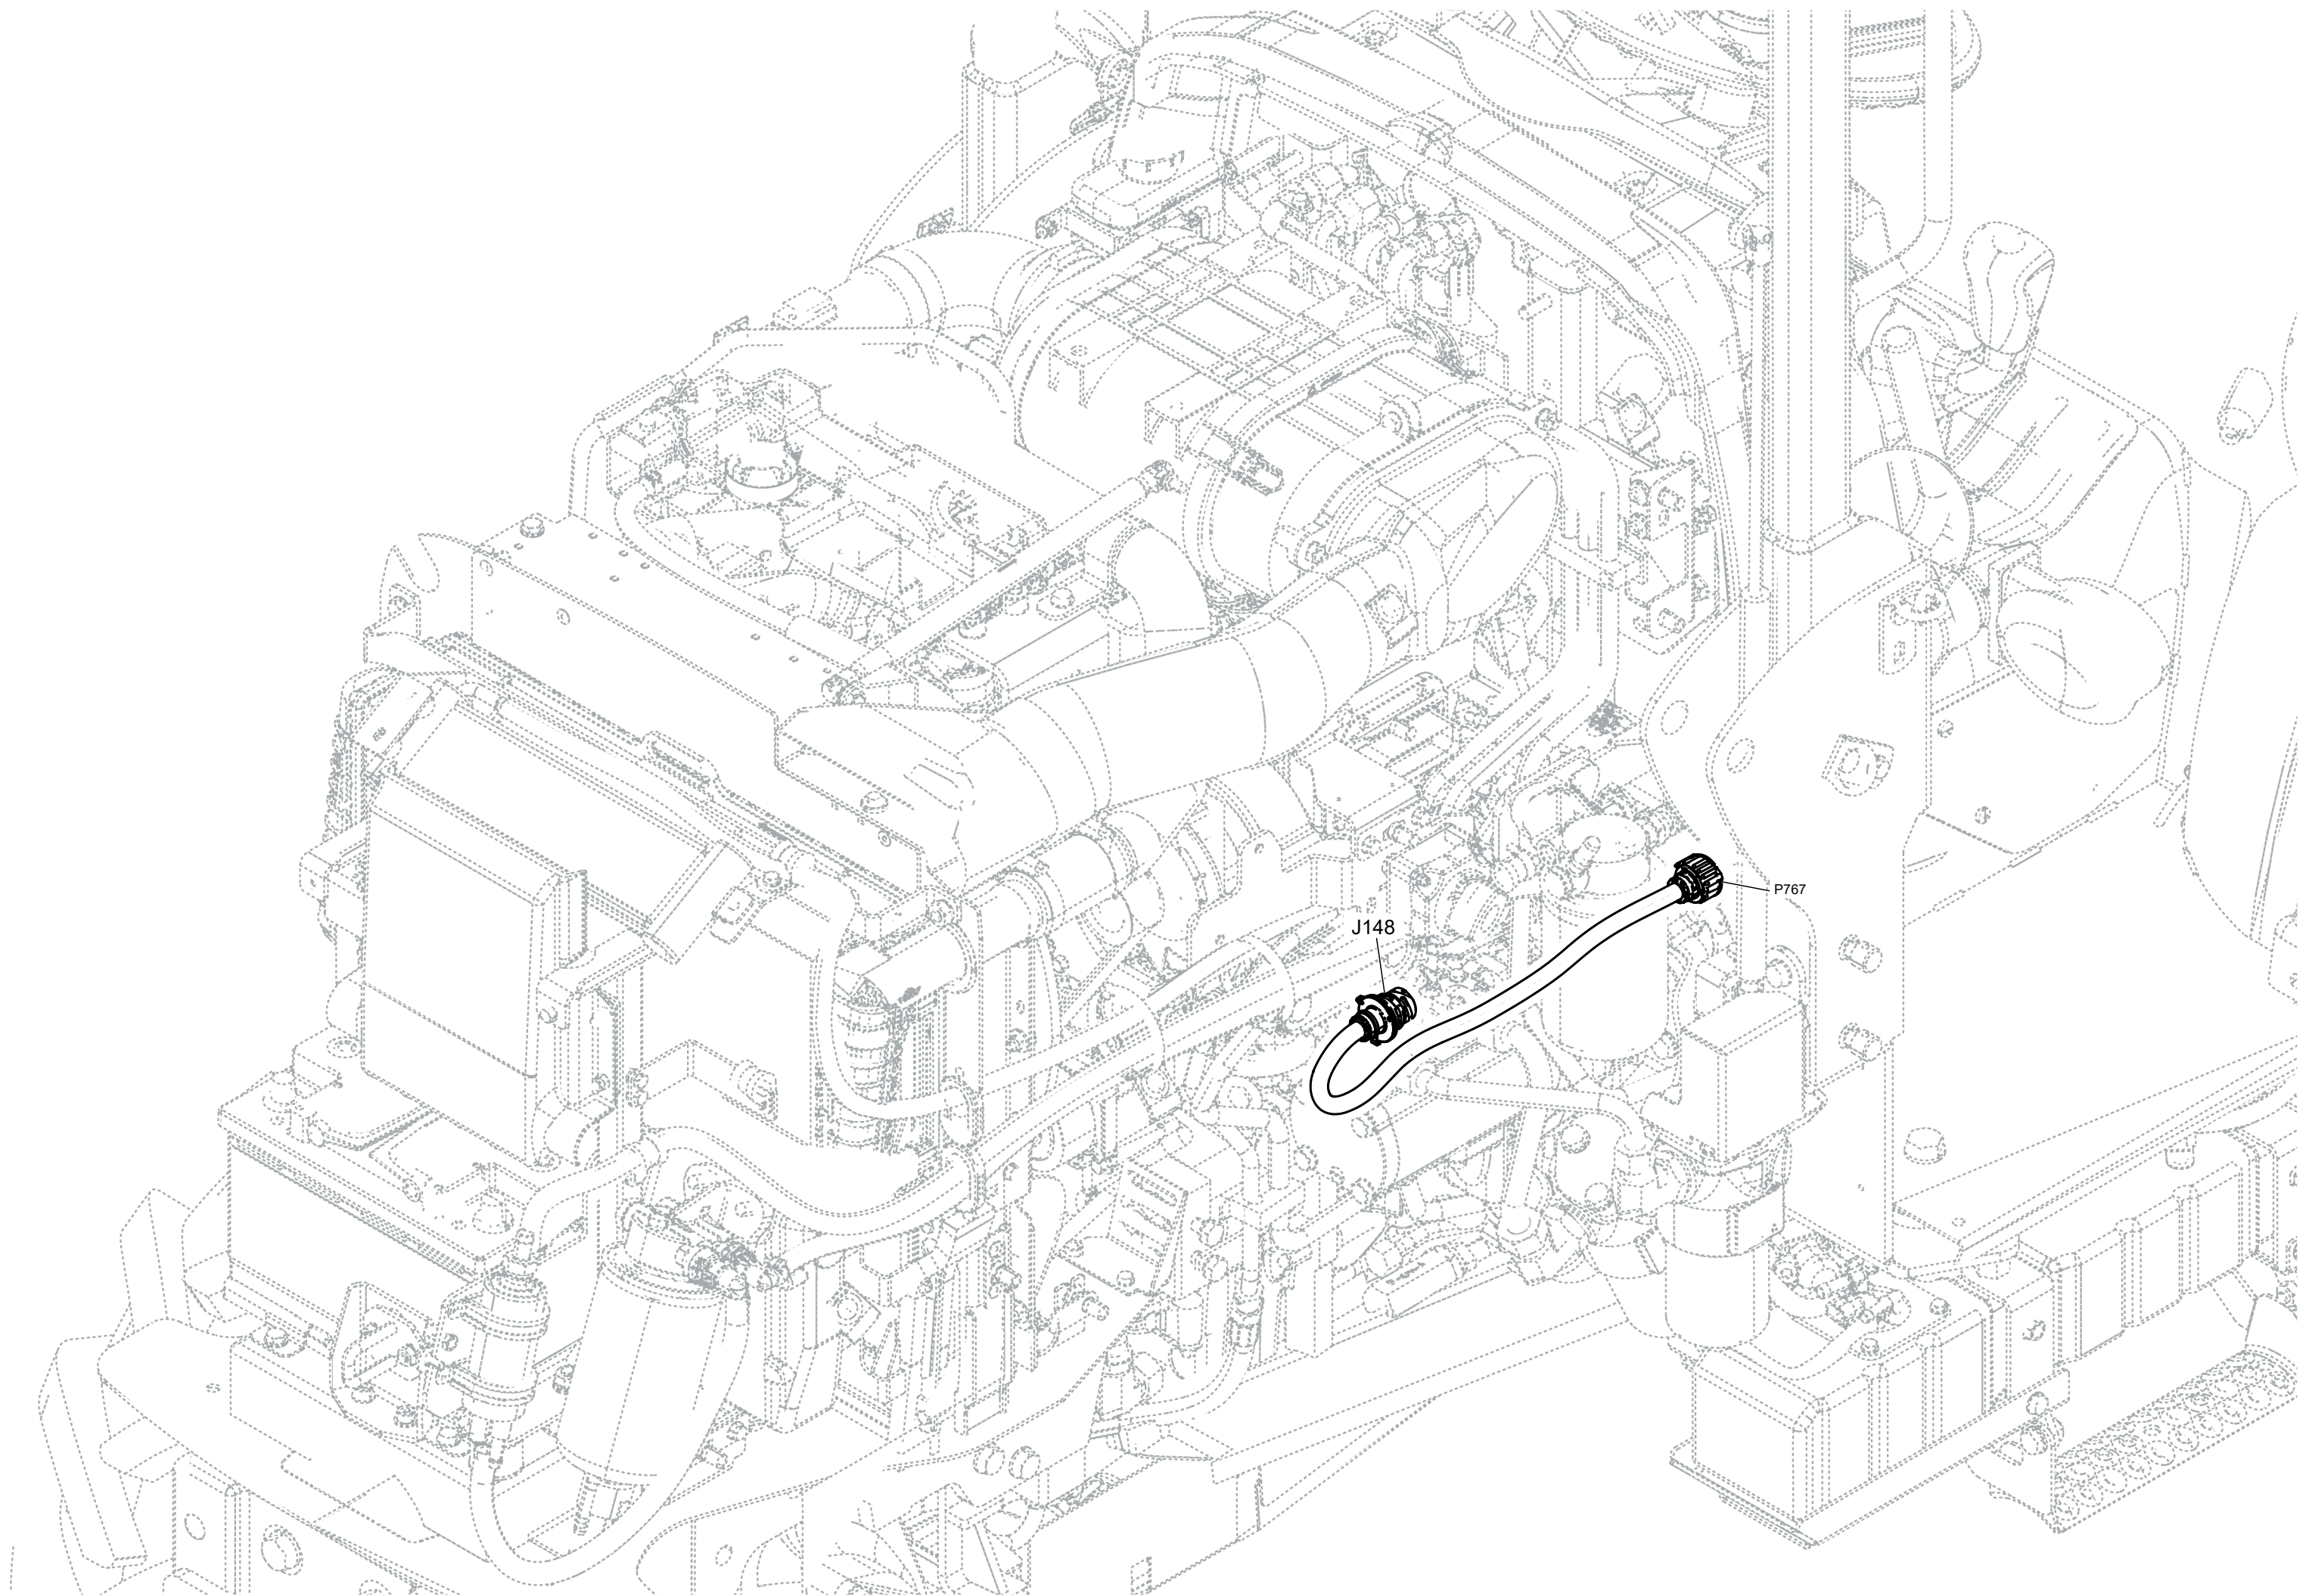


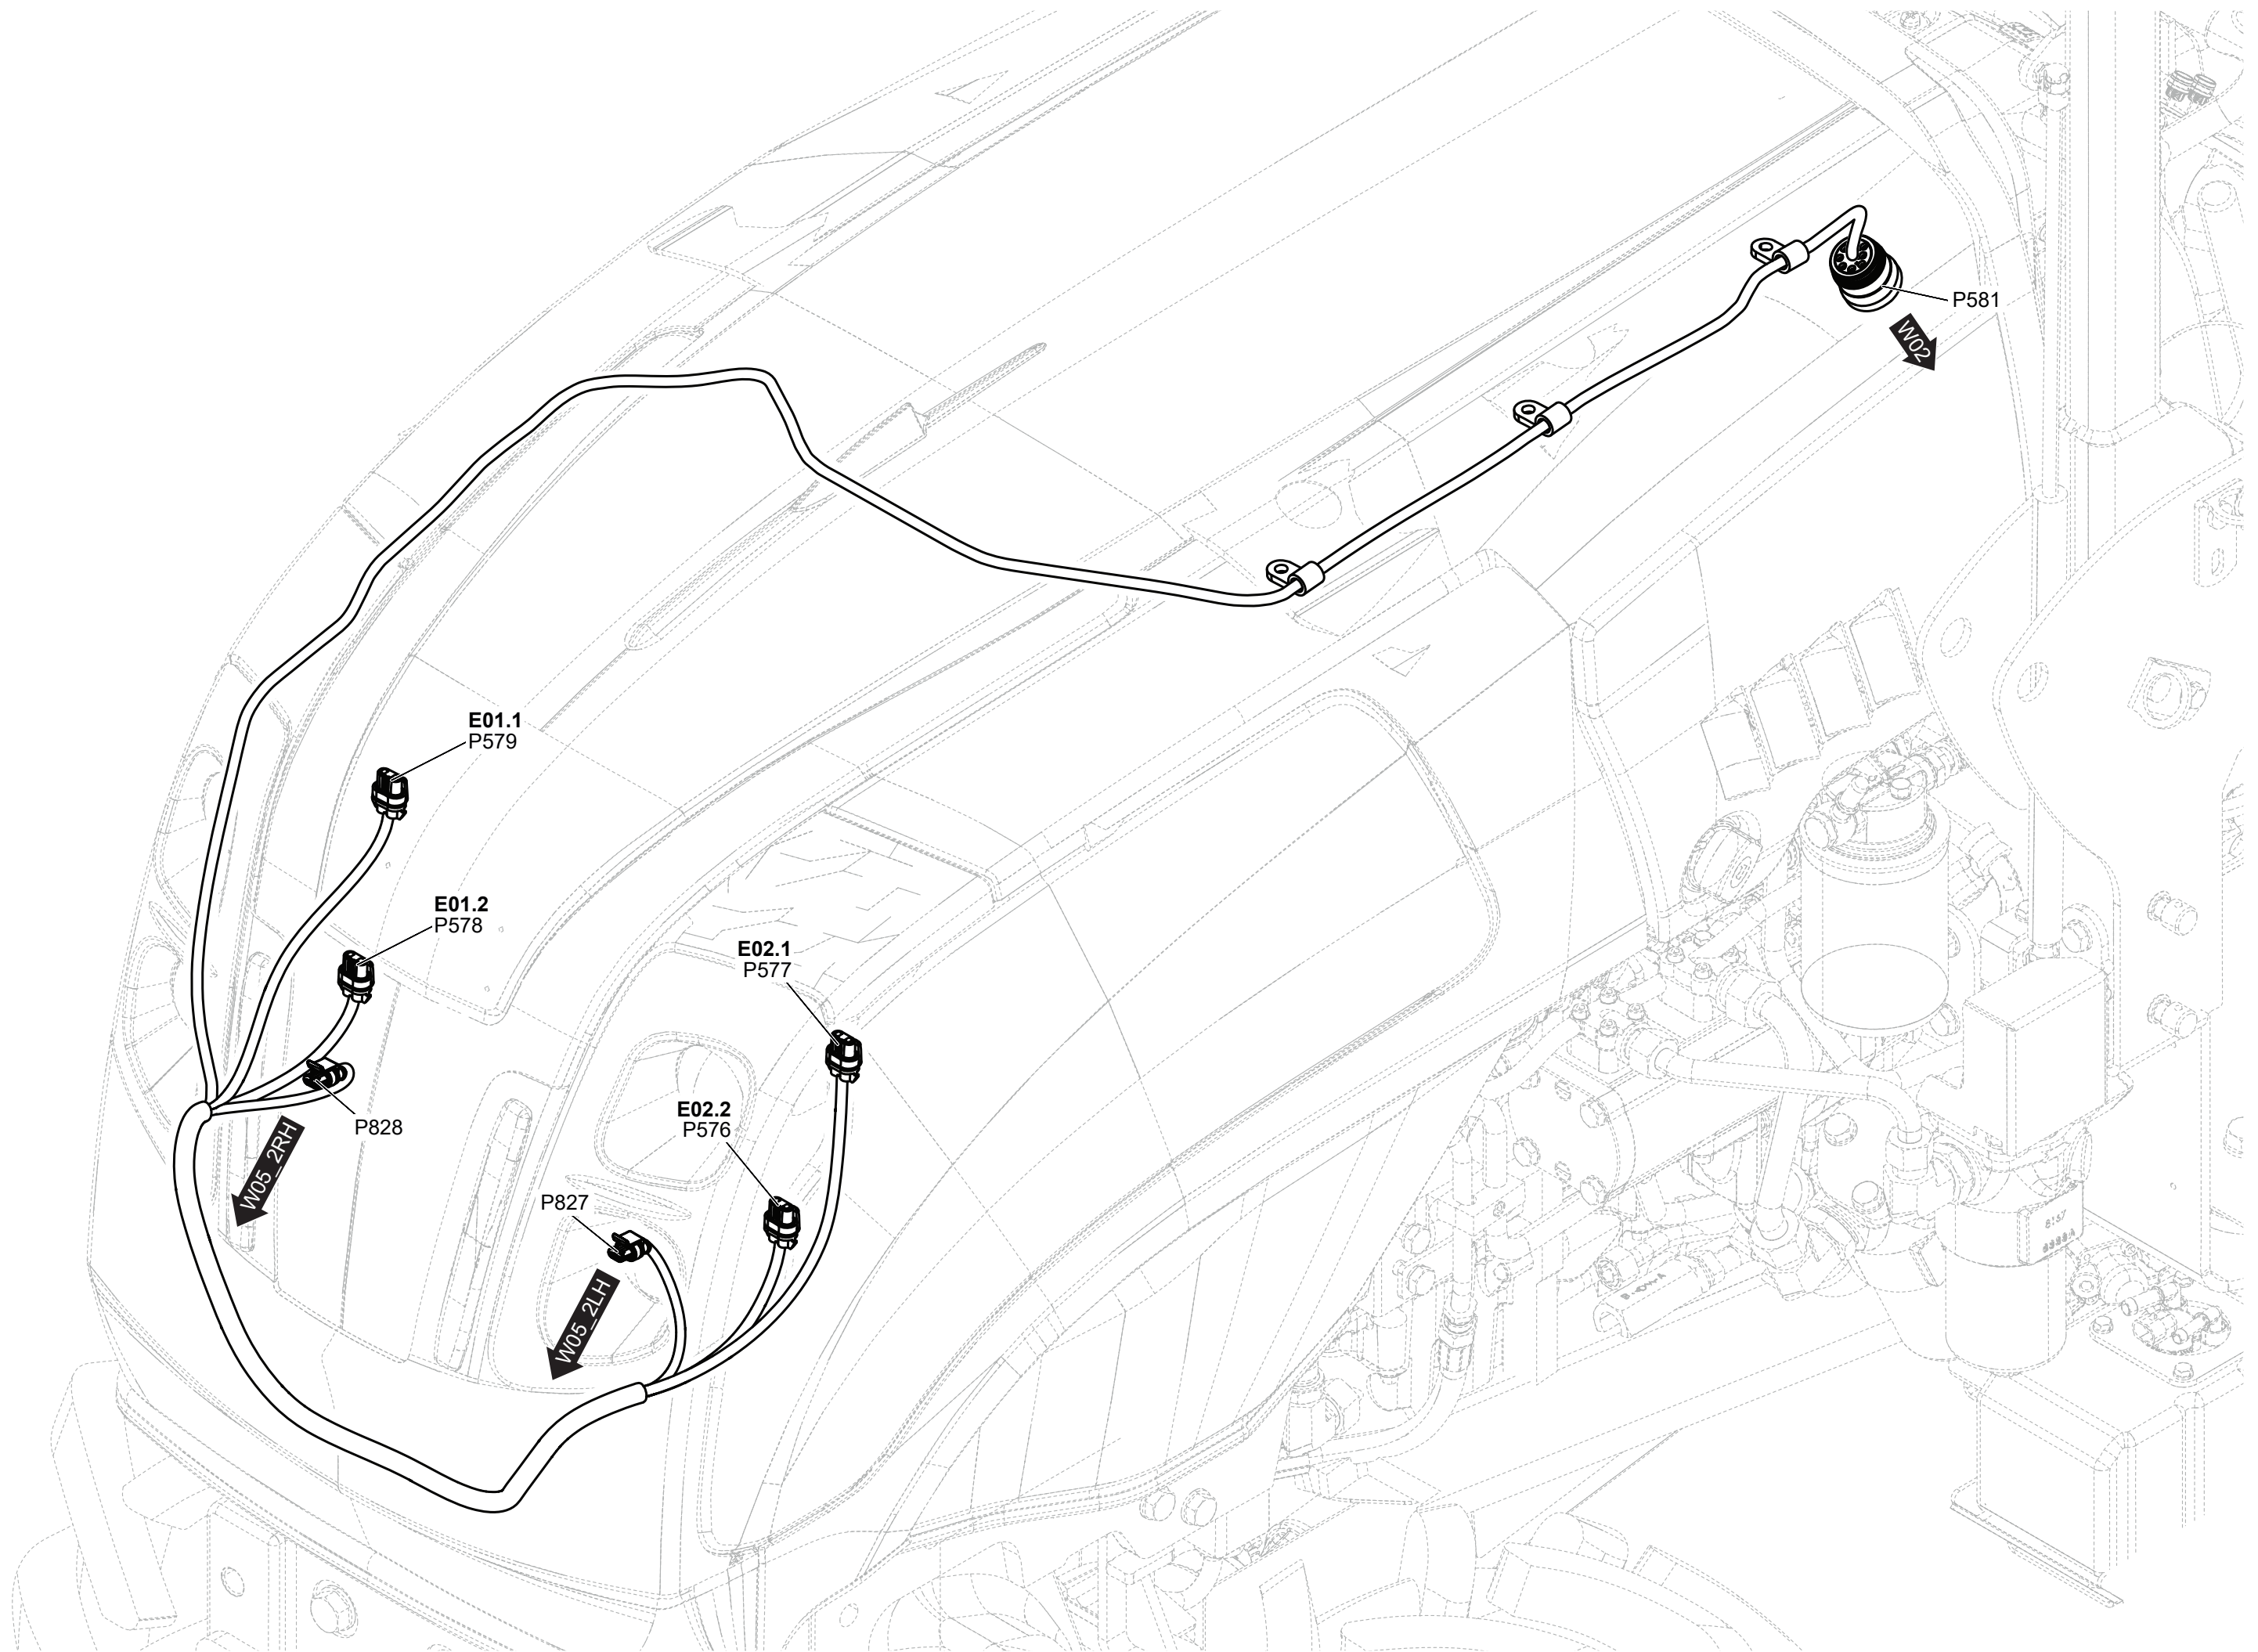


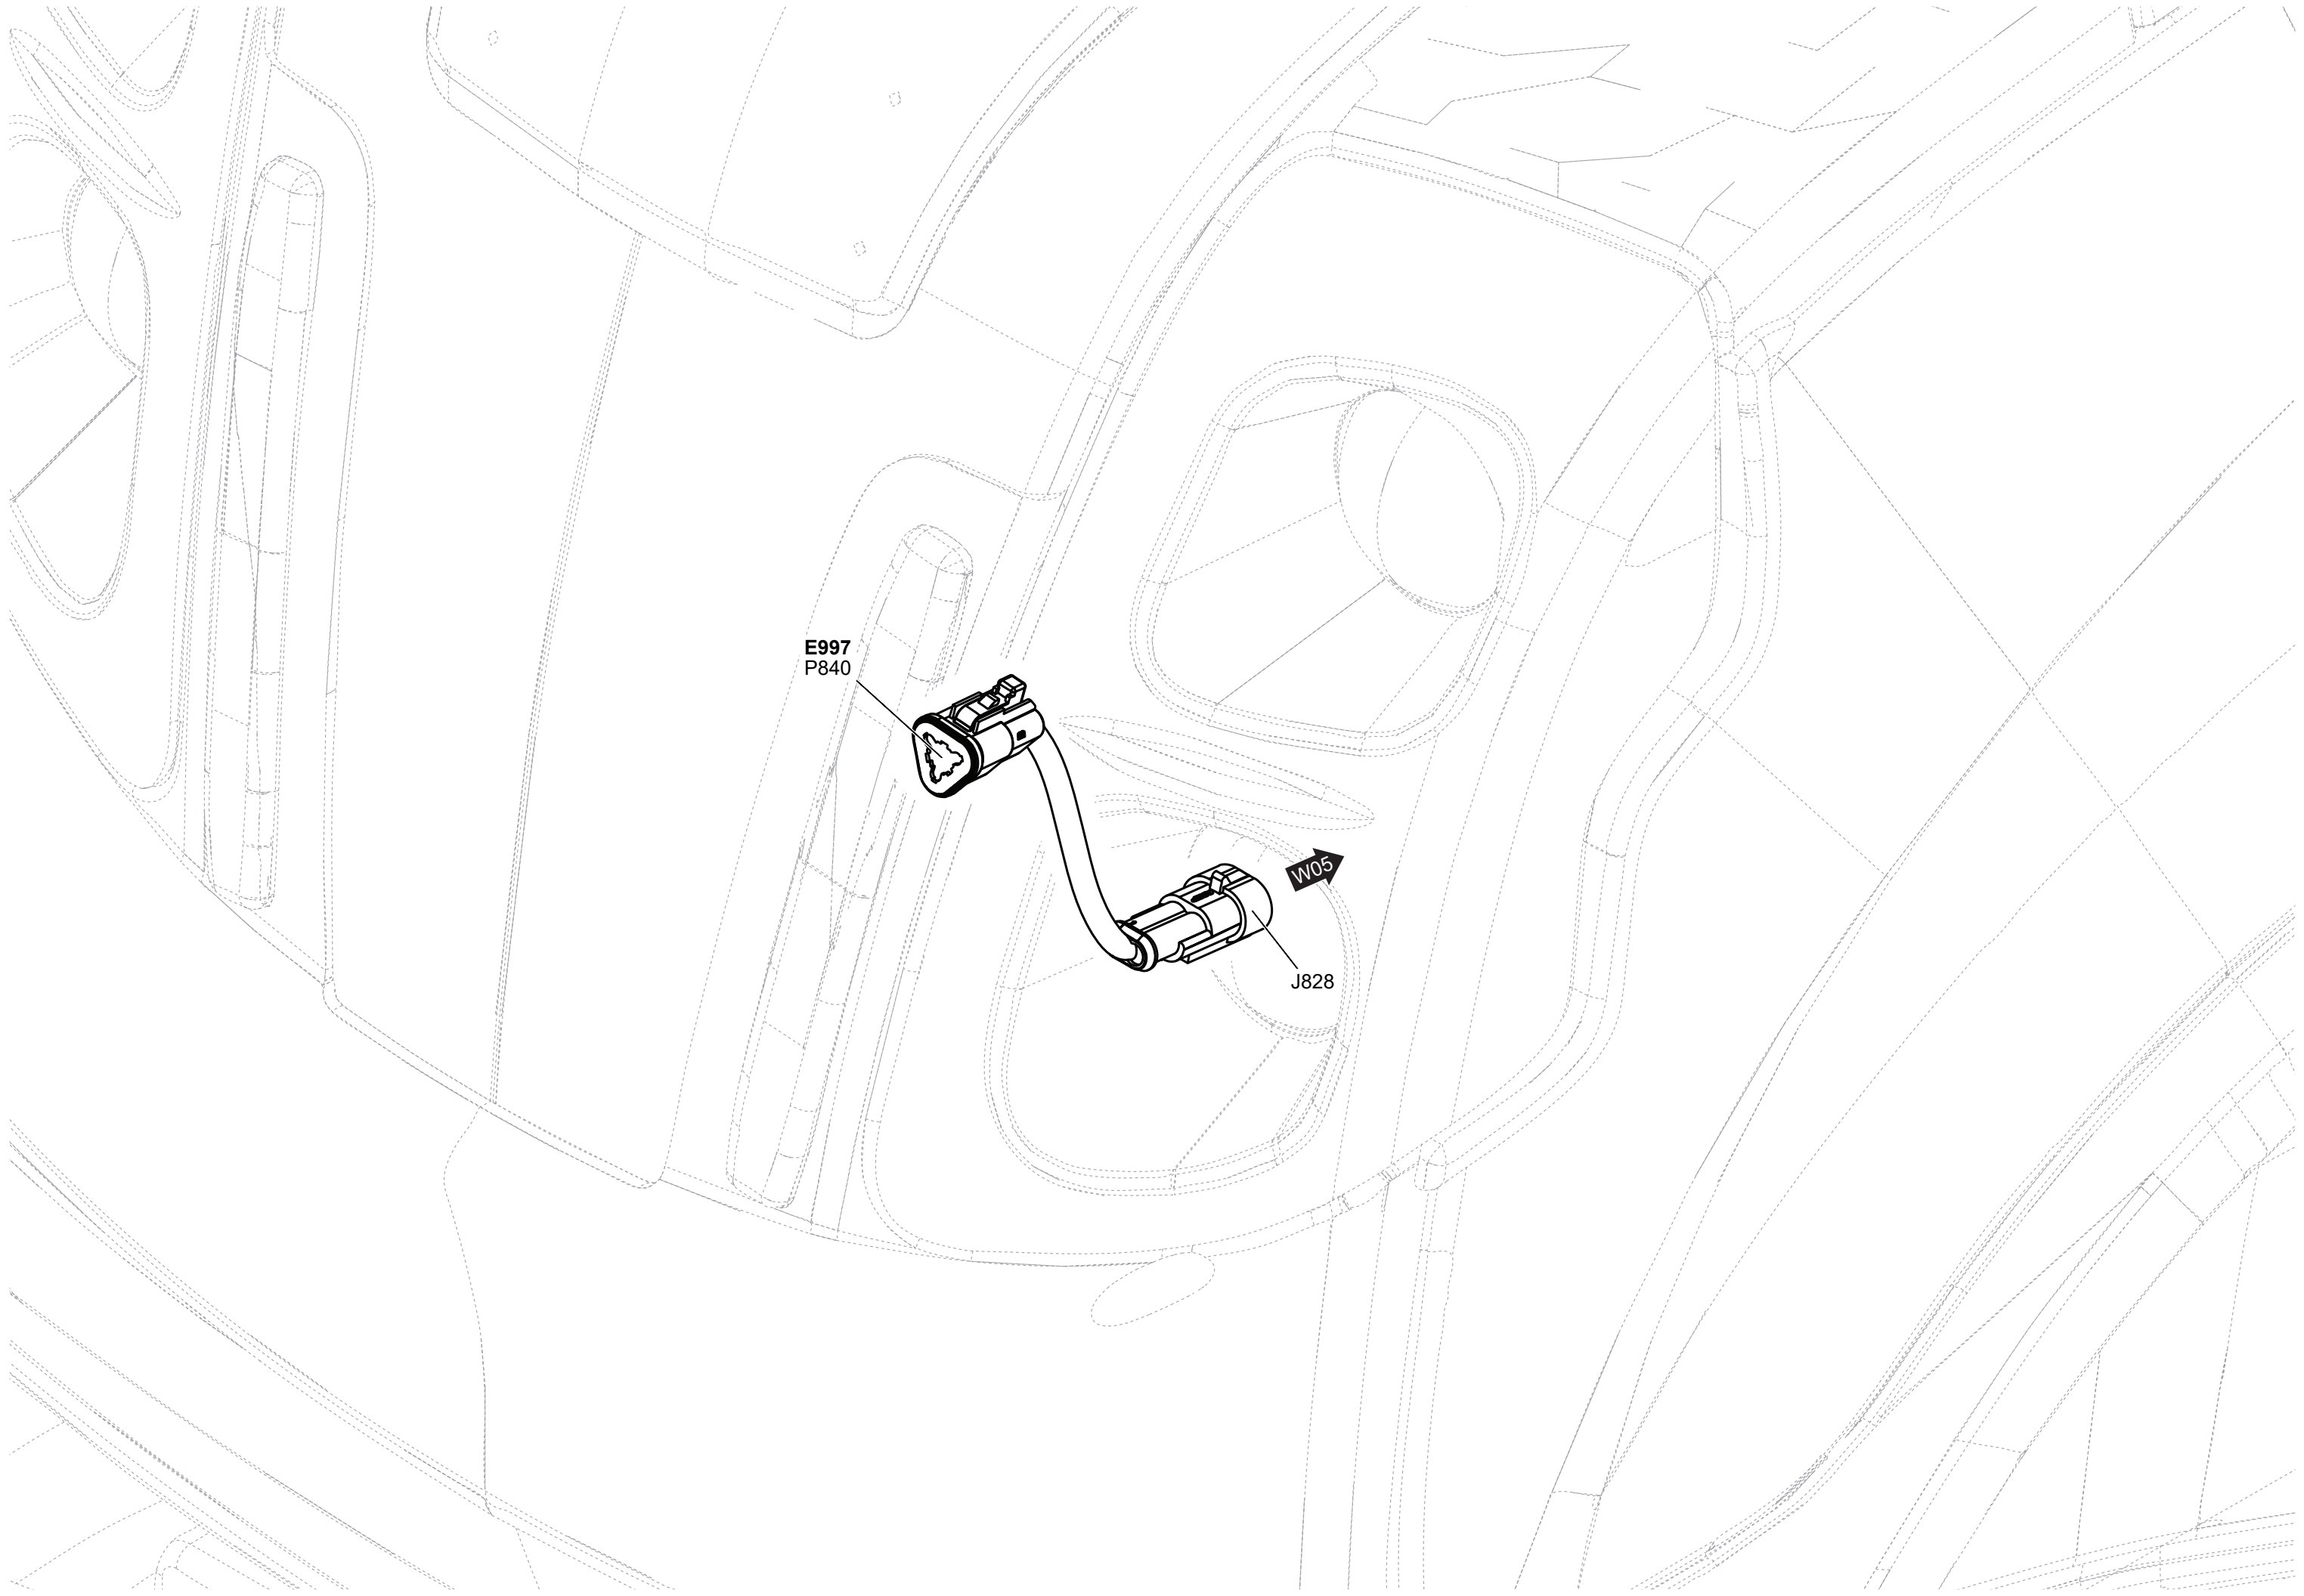















E997
P840

W05

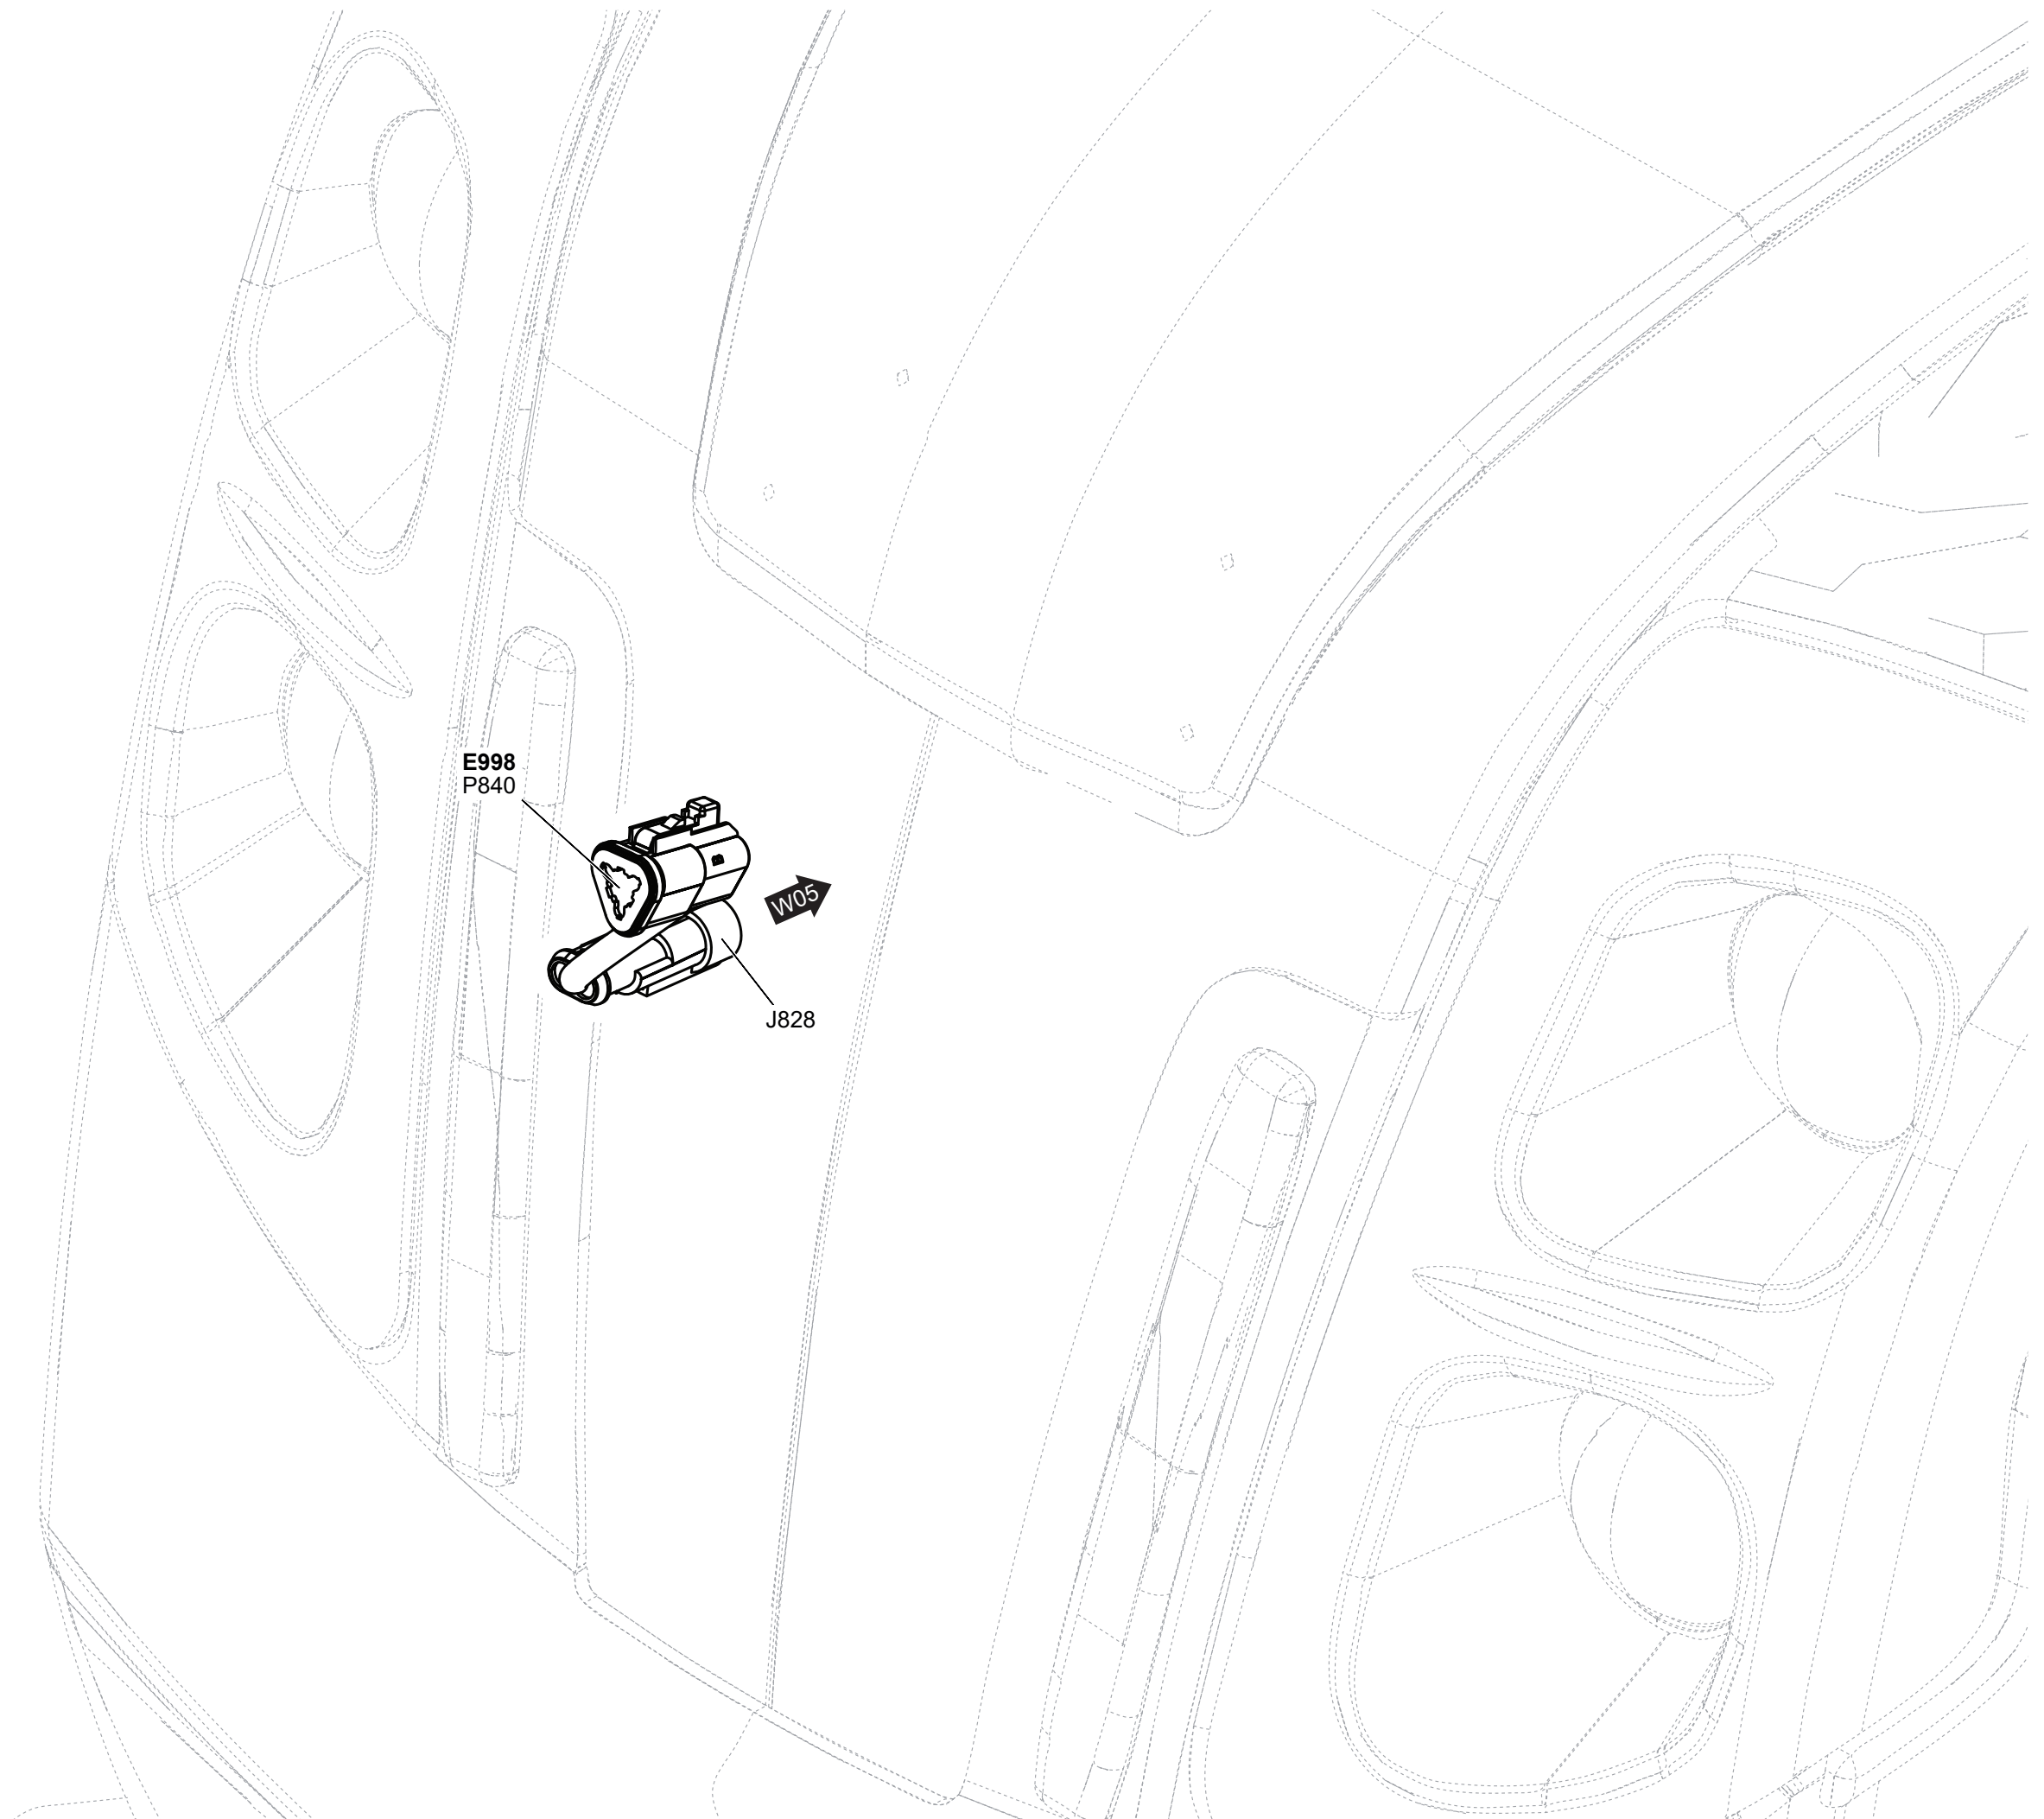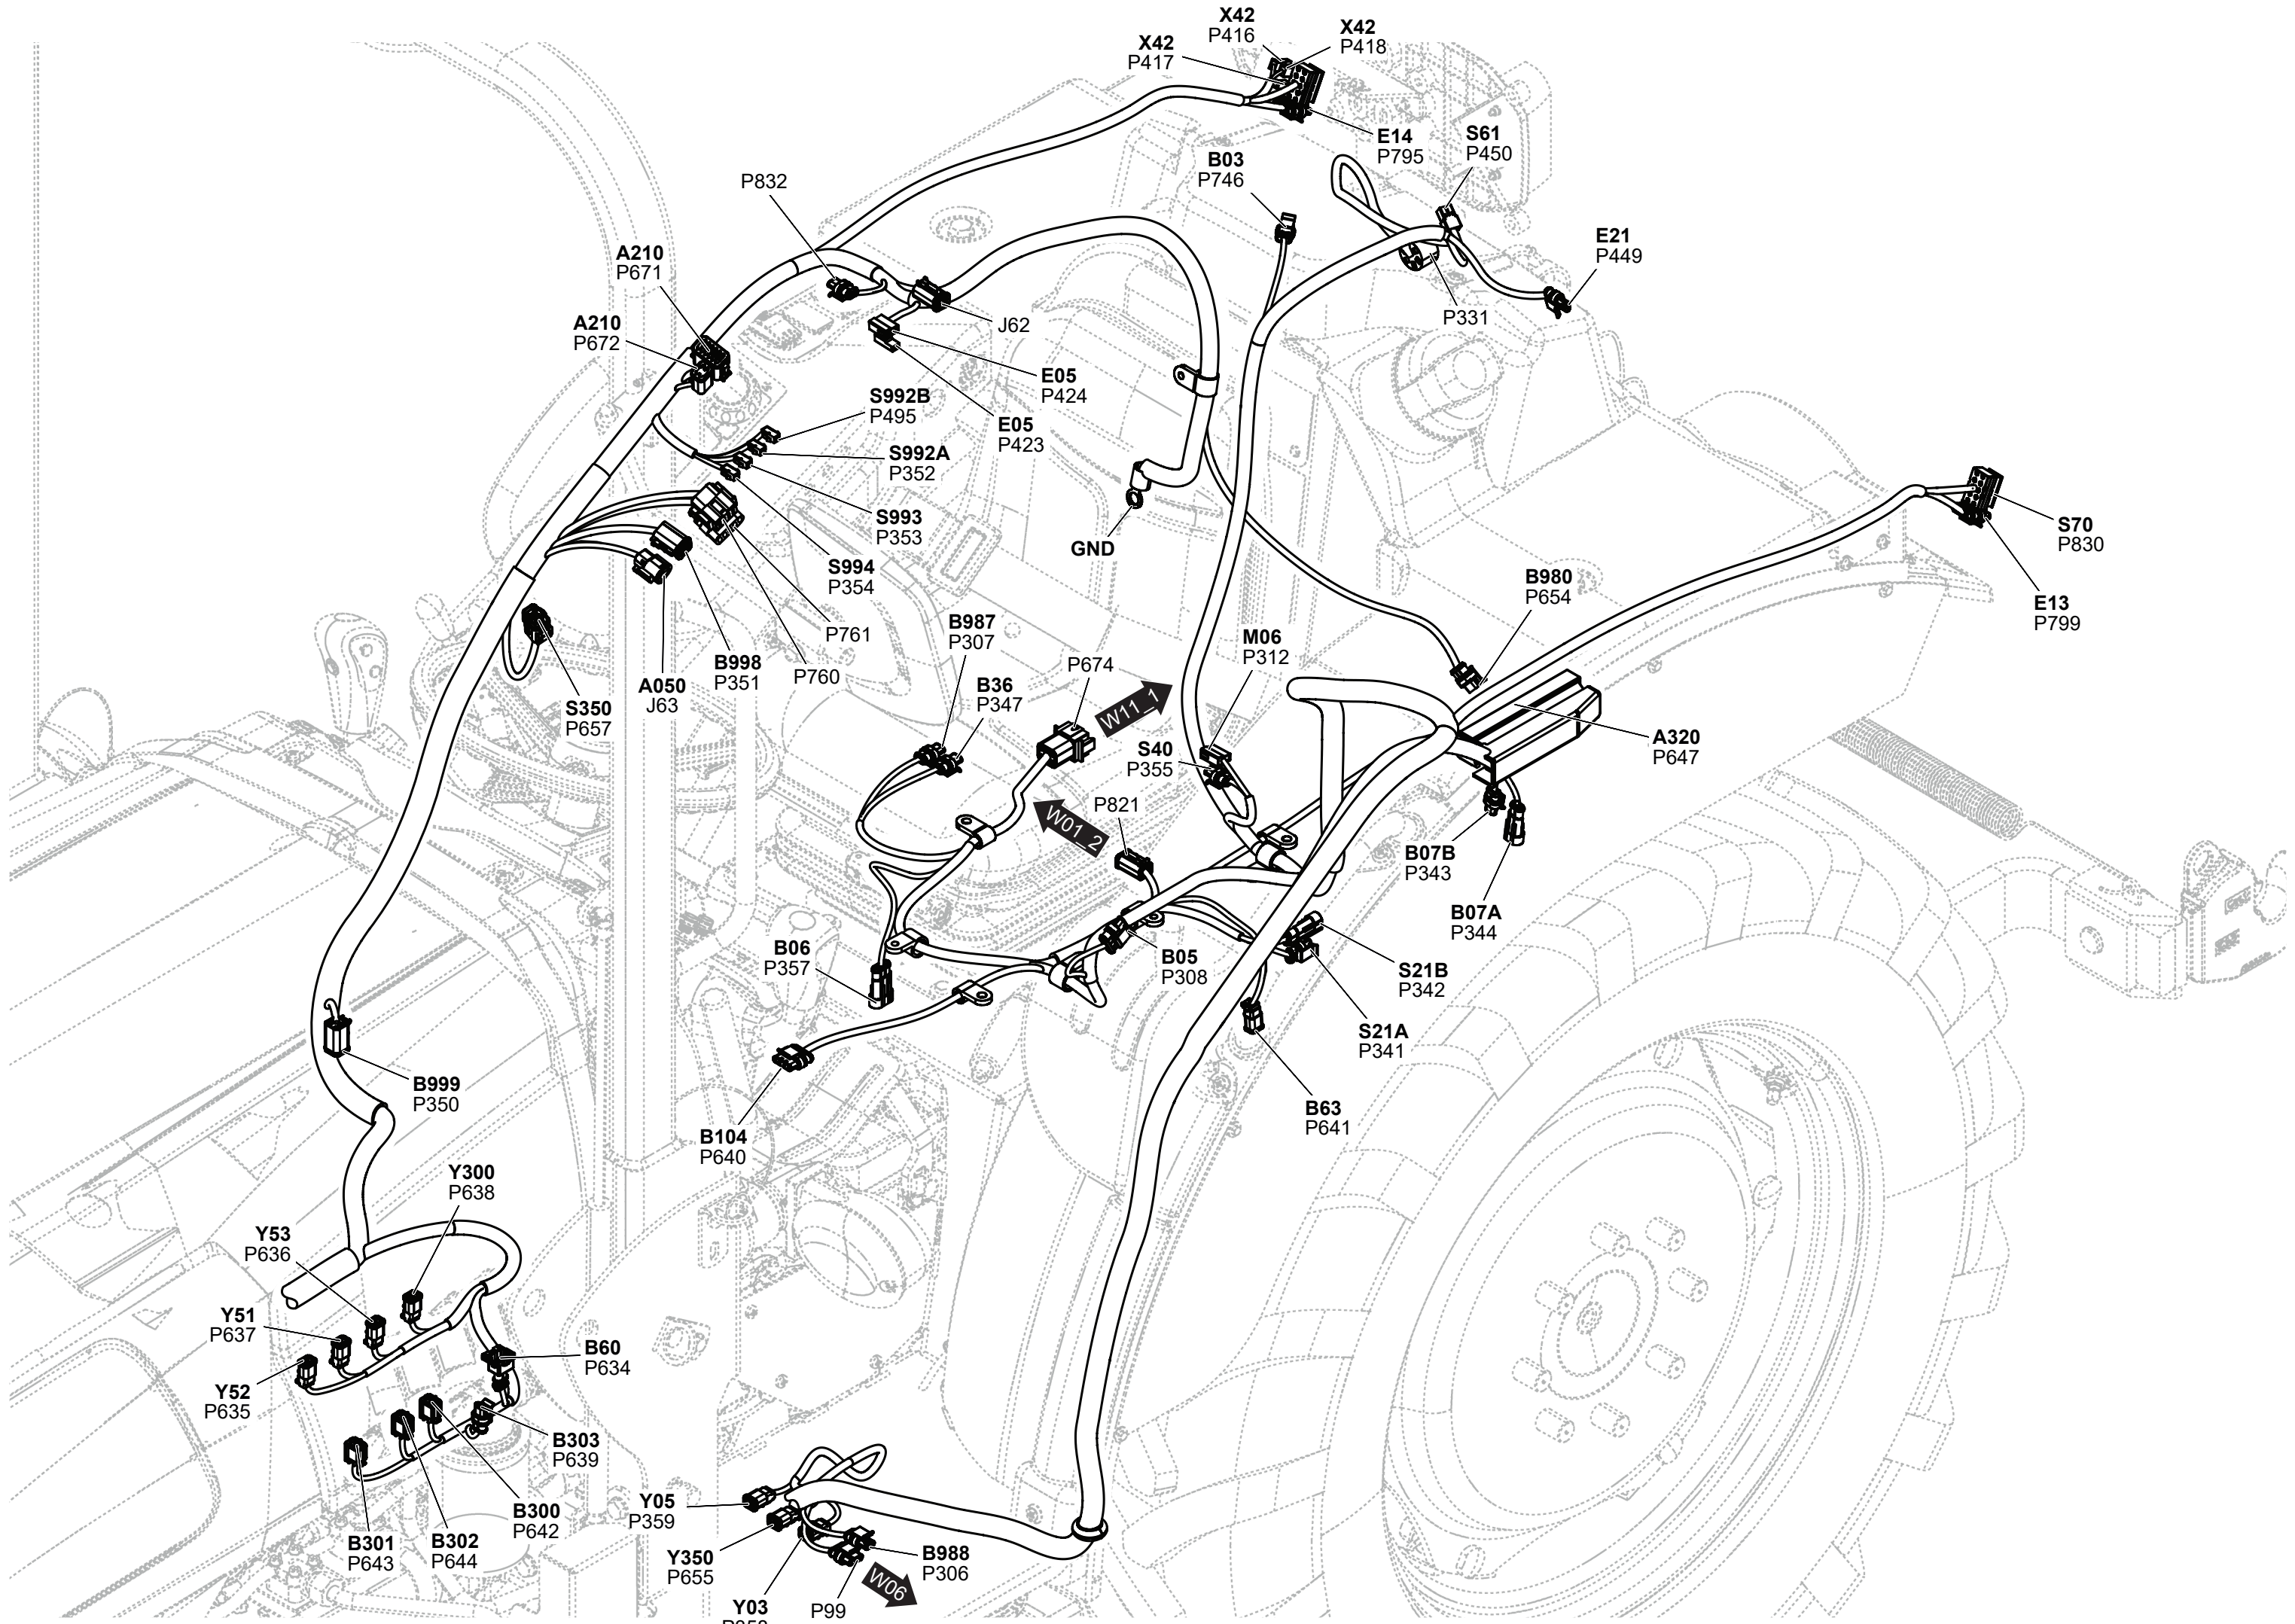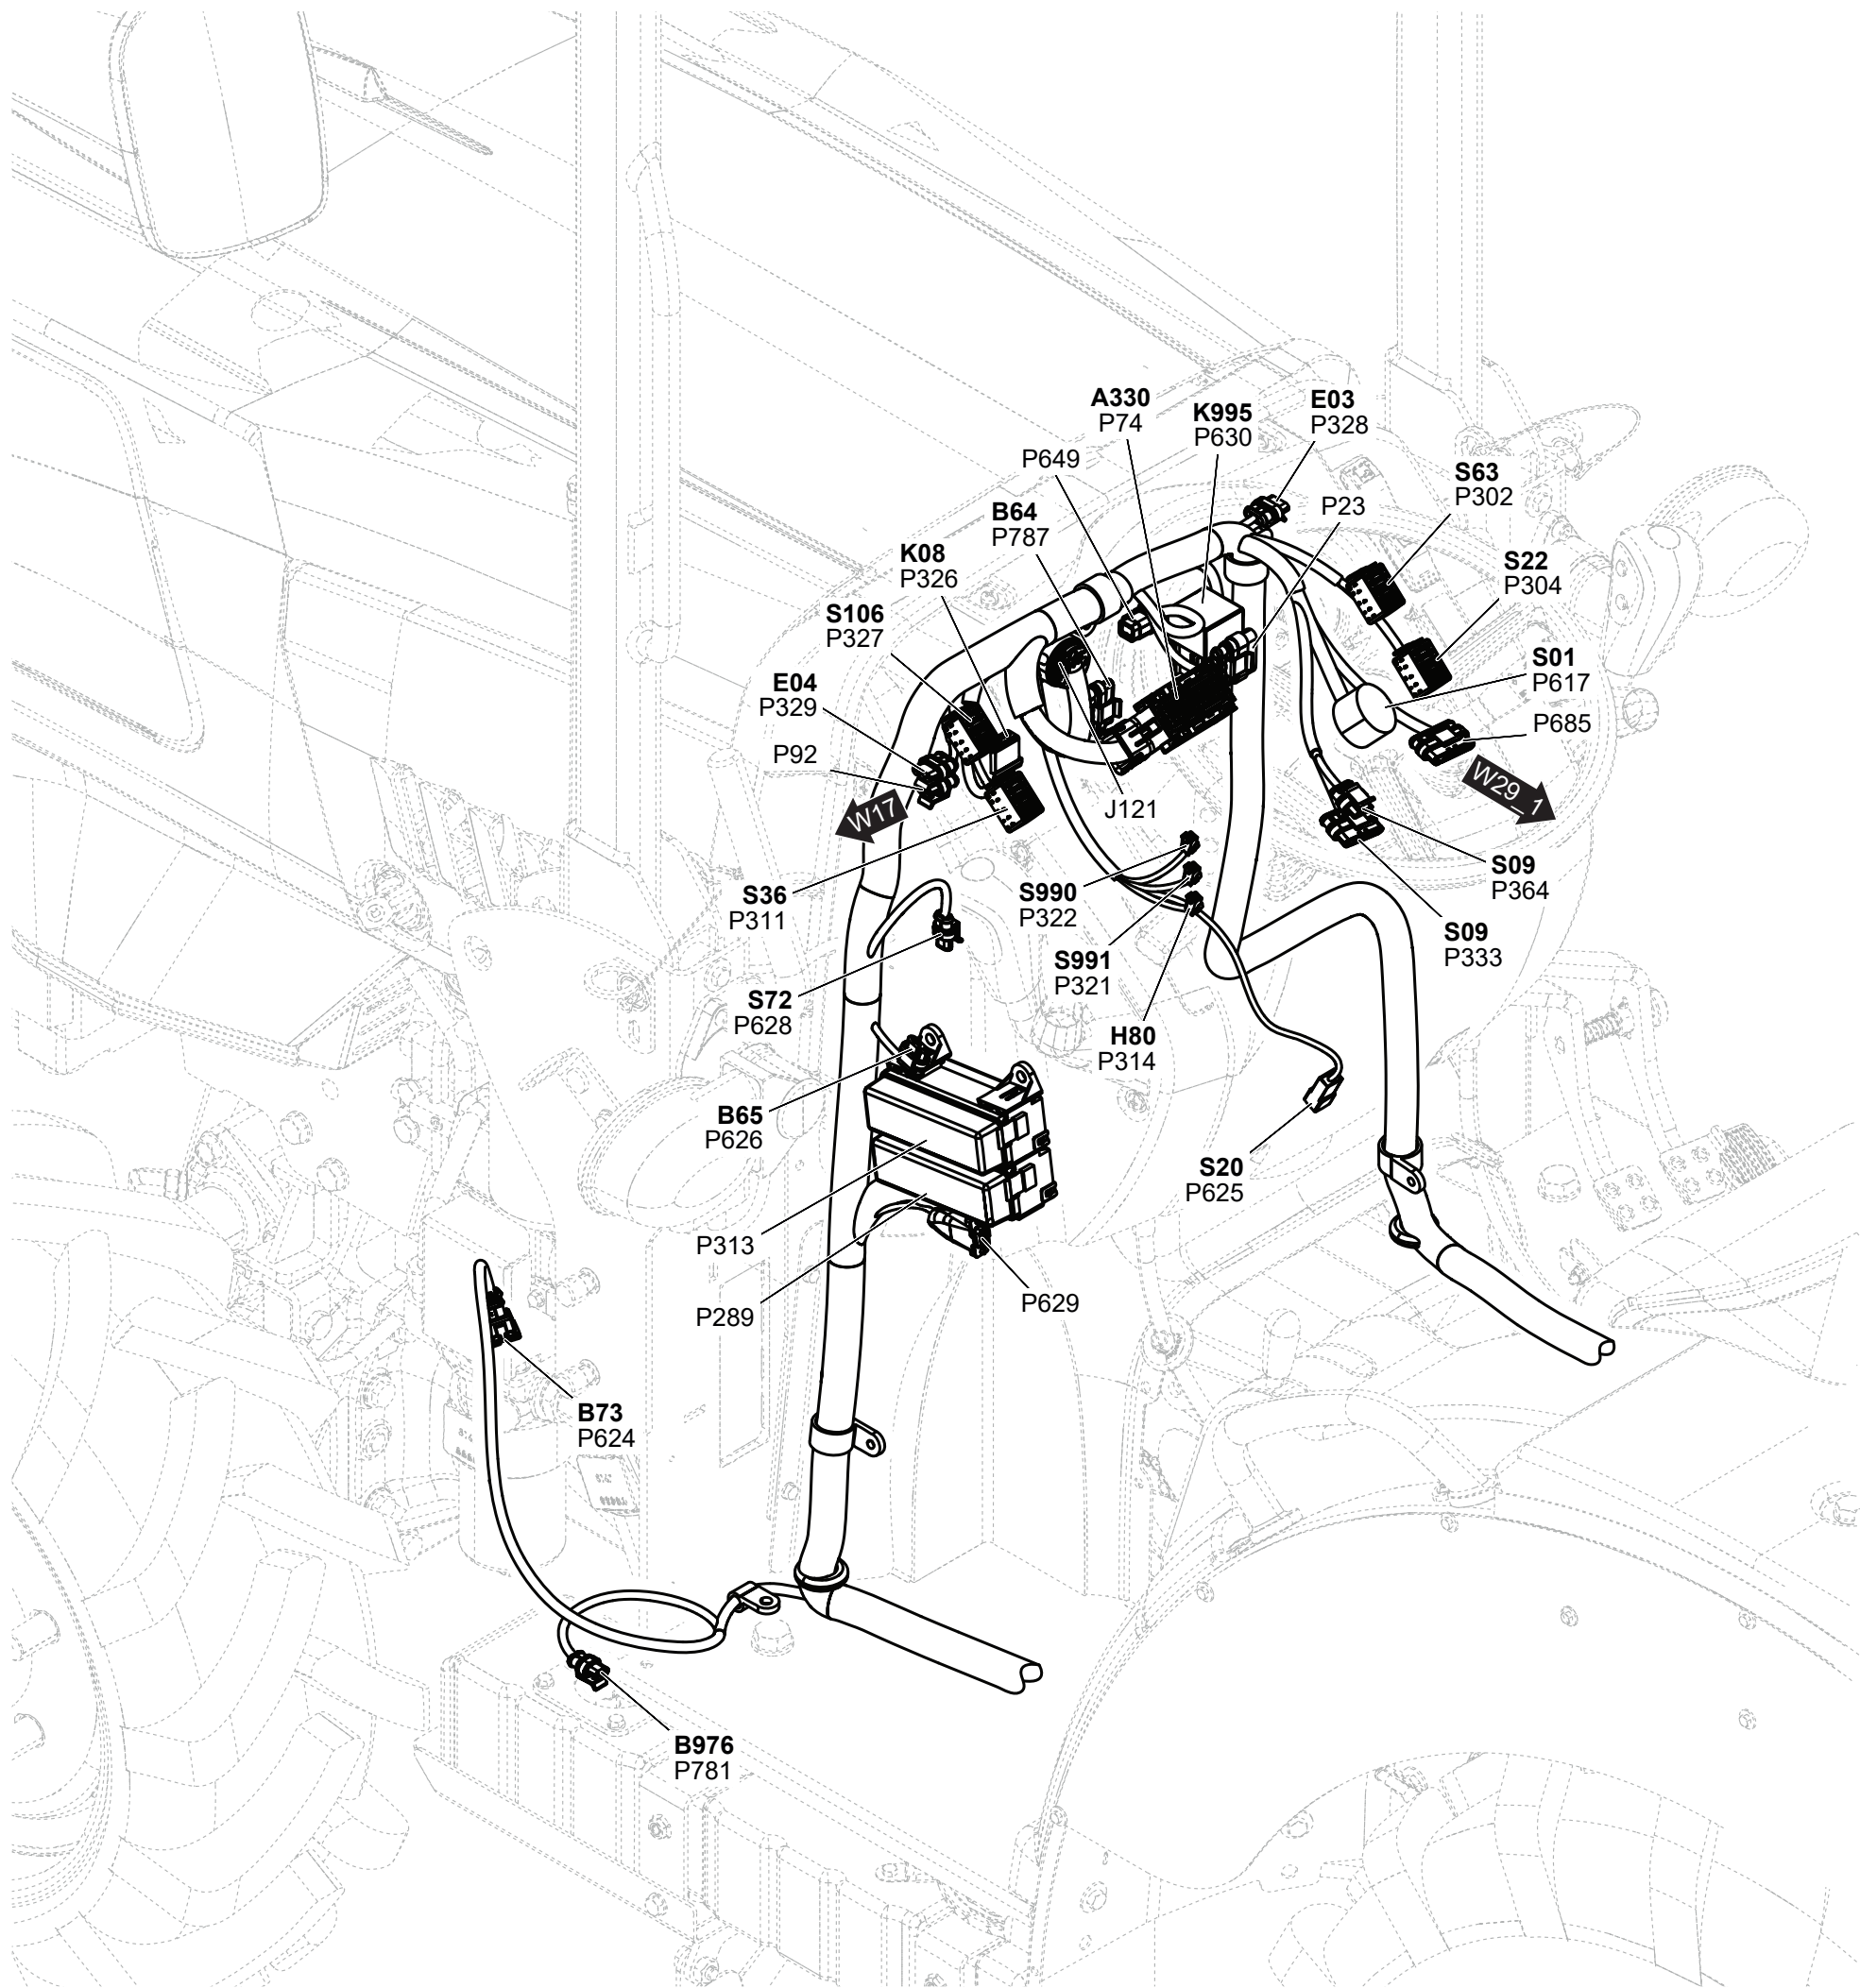
J828










REAR LH VIEW








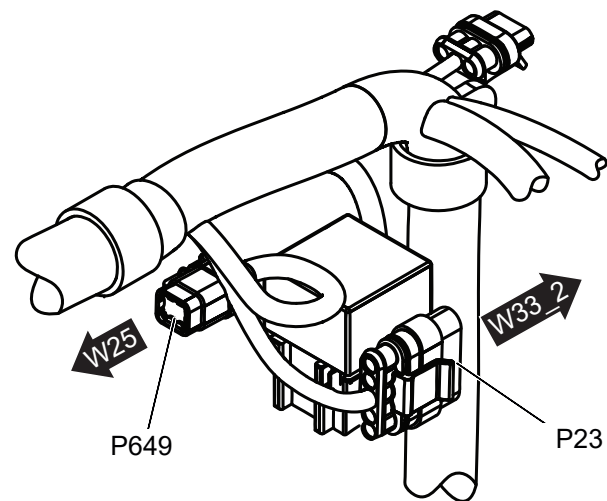










FRONT LH VIEW

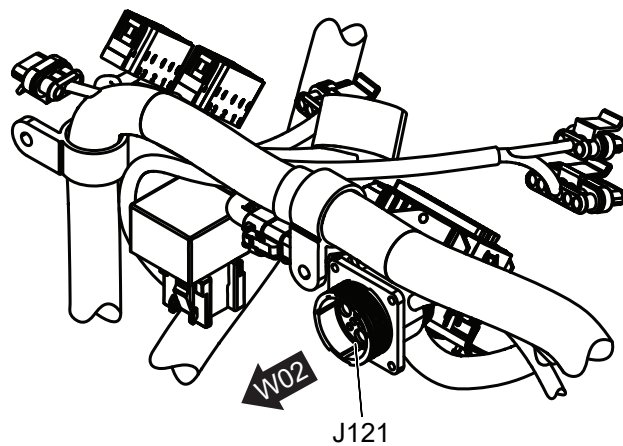

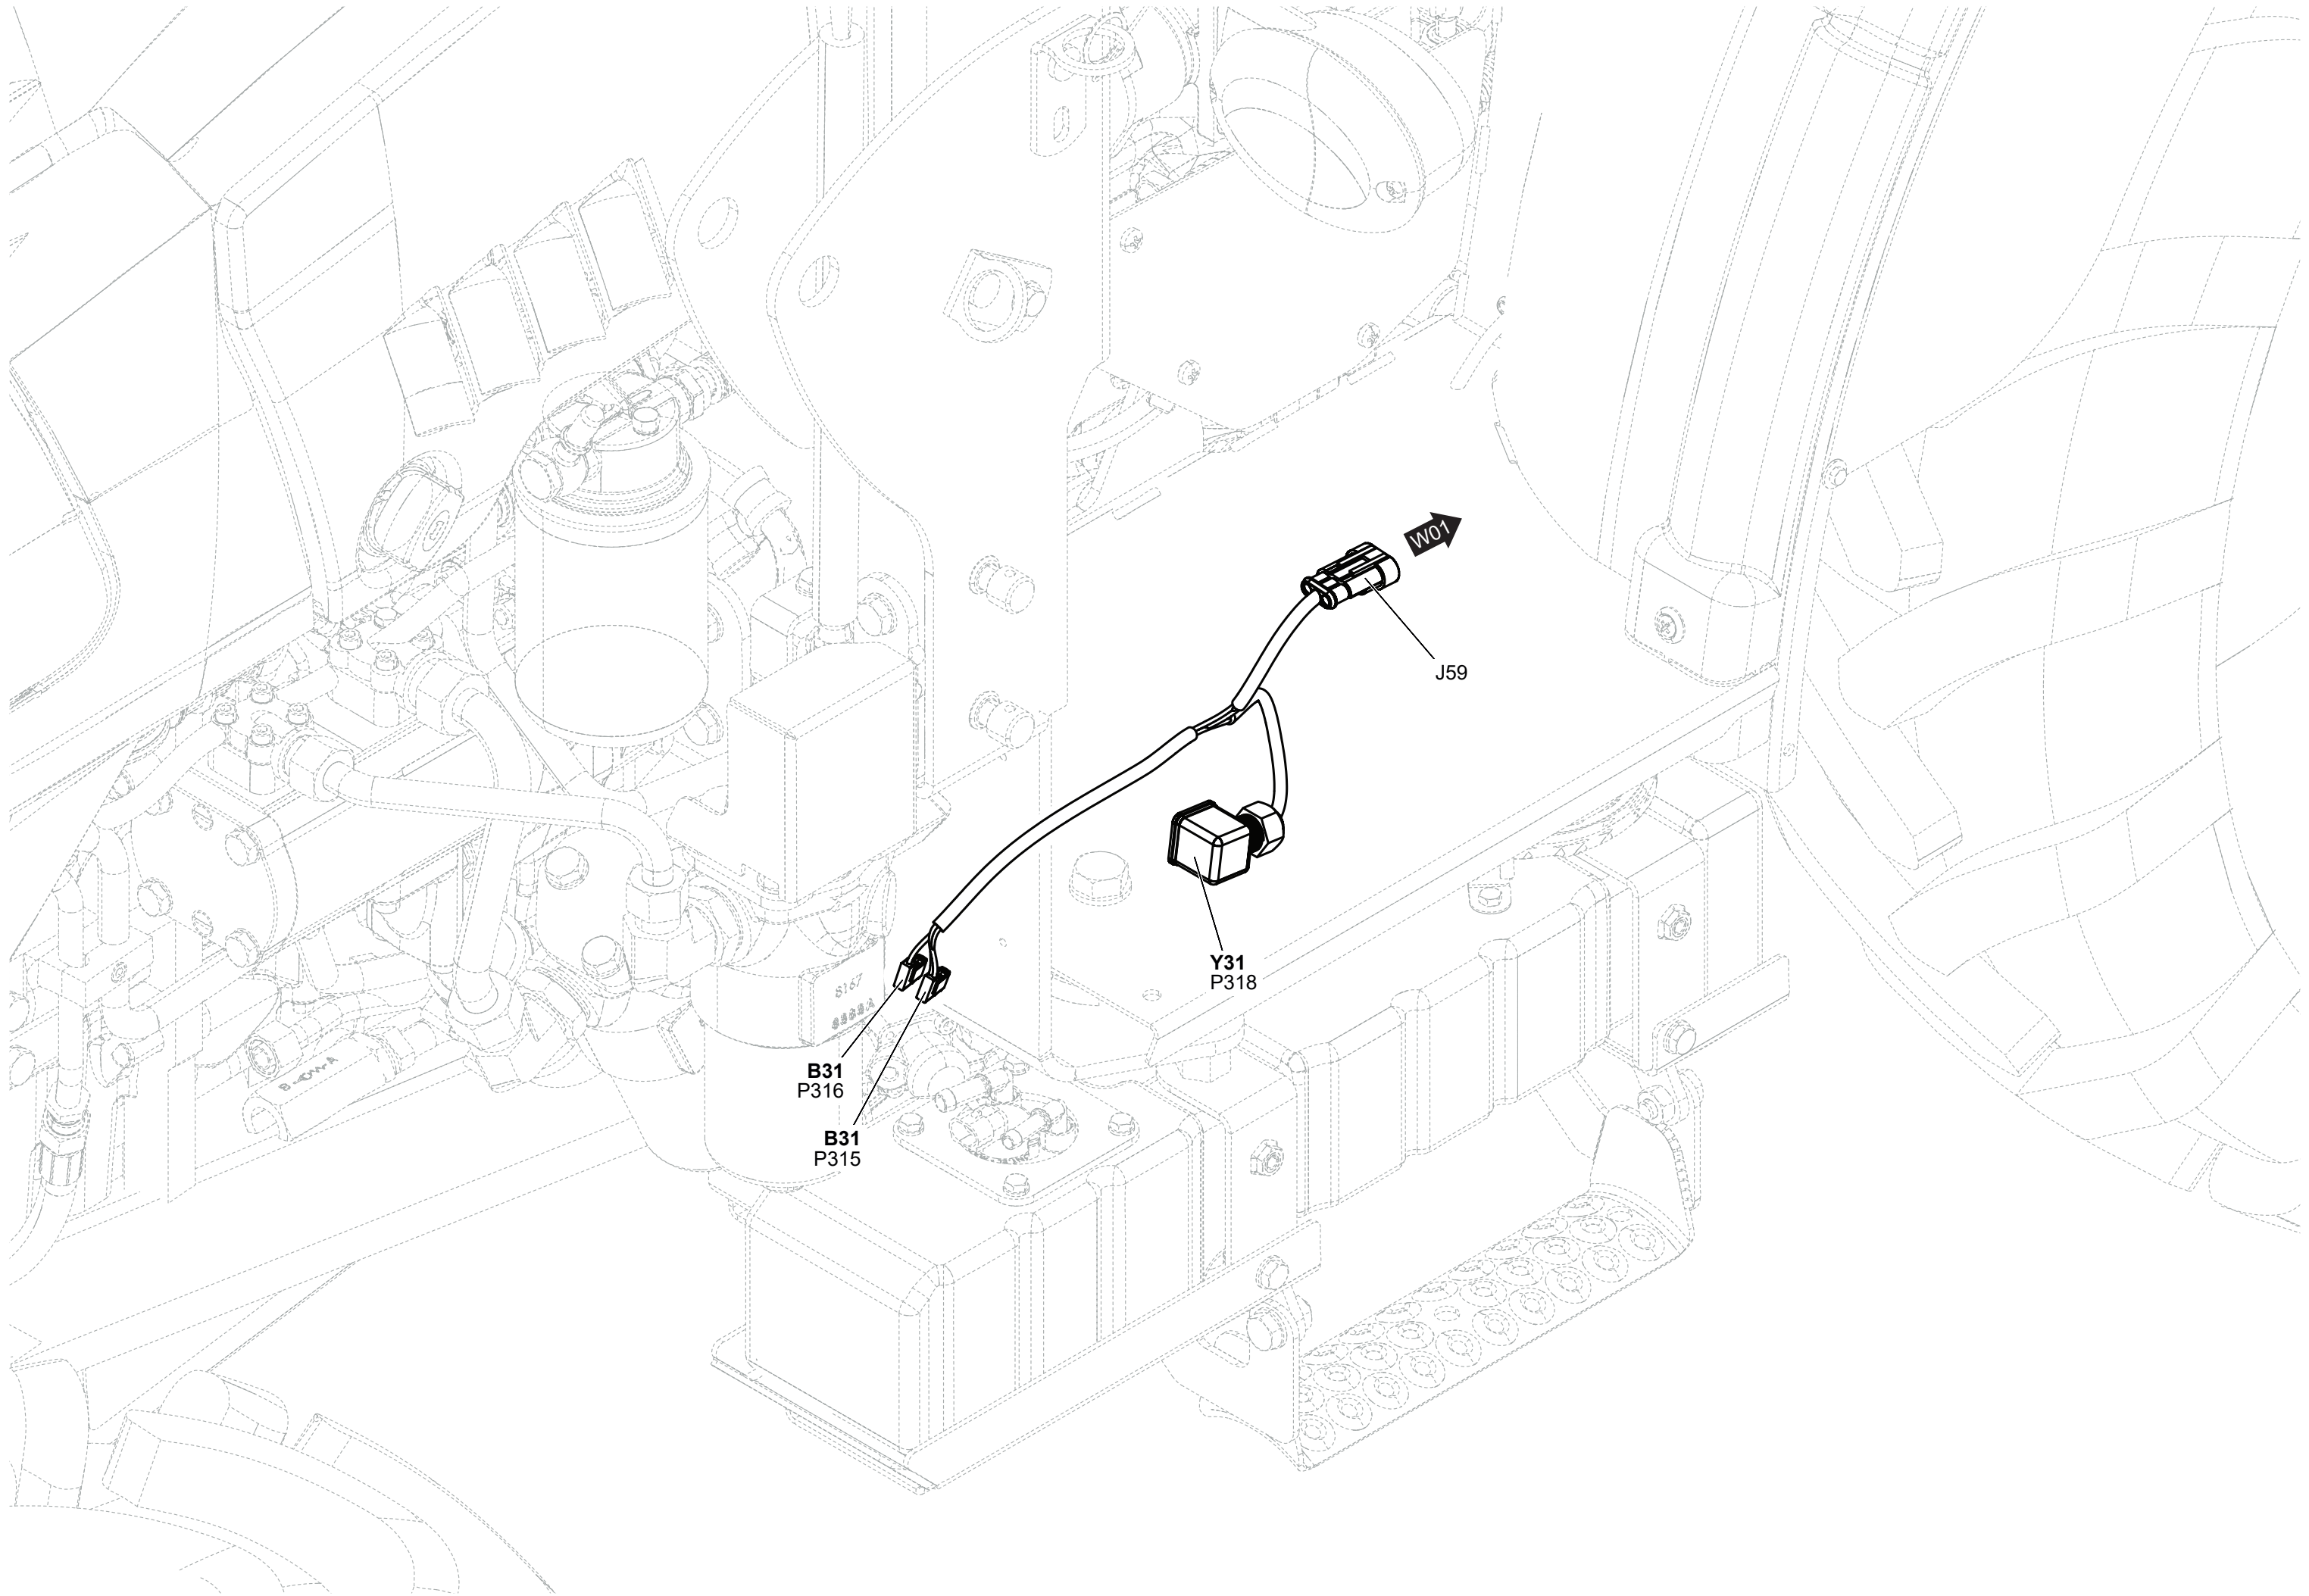


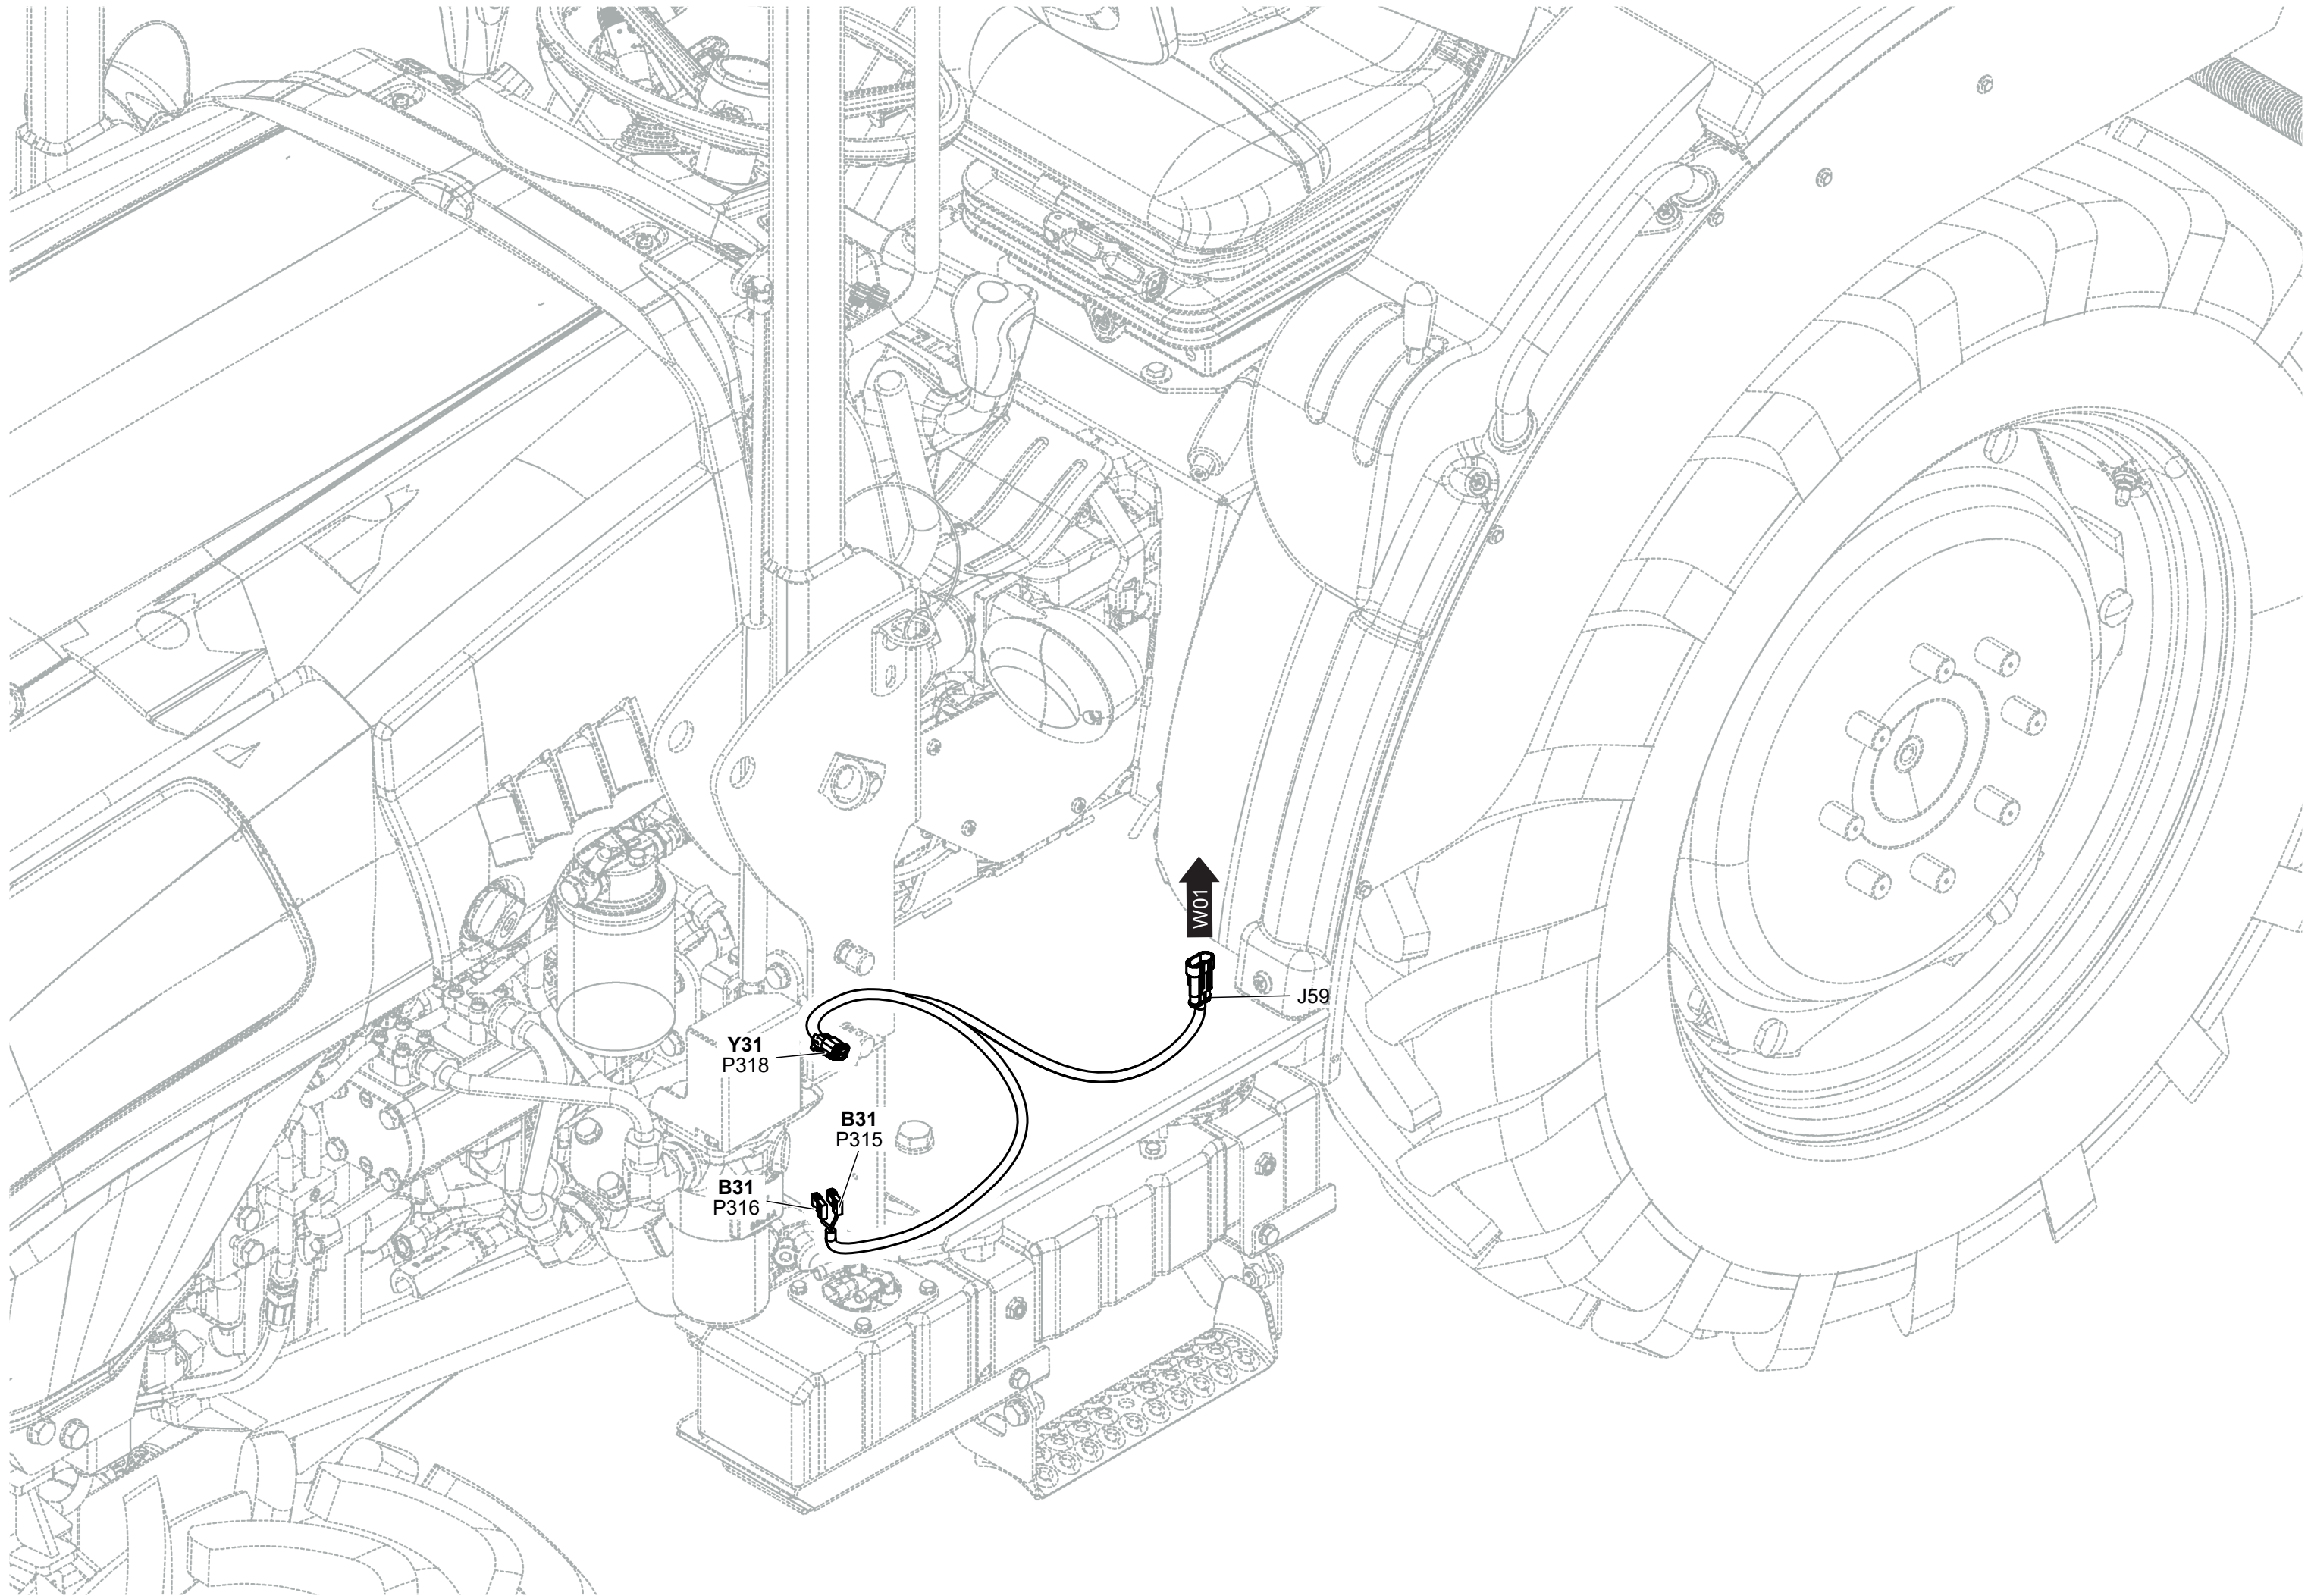

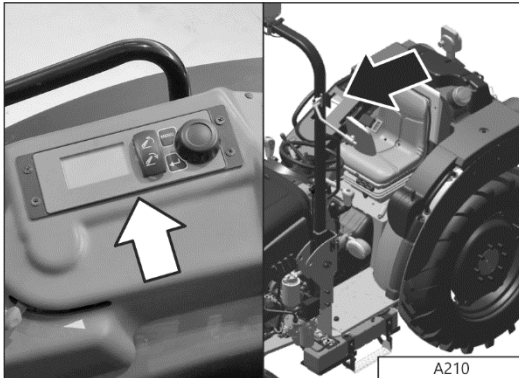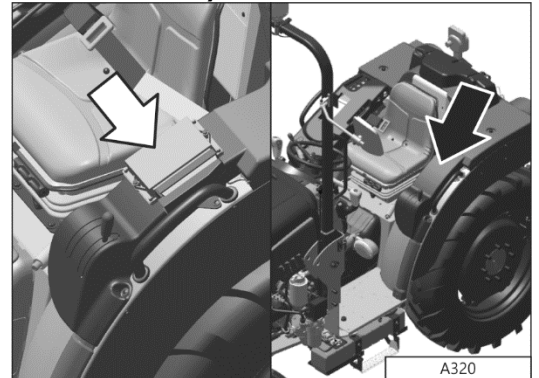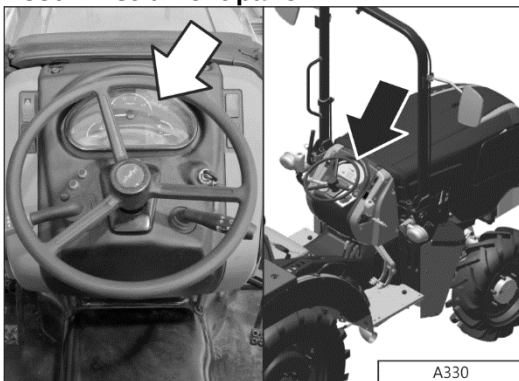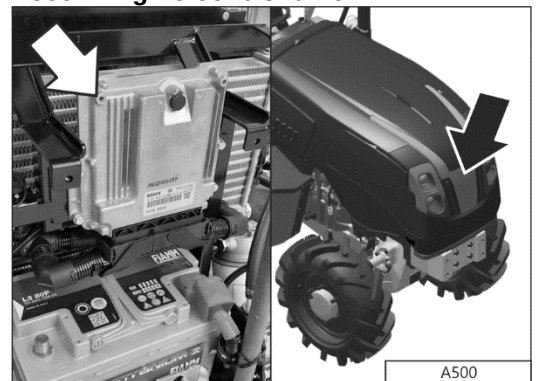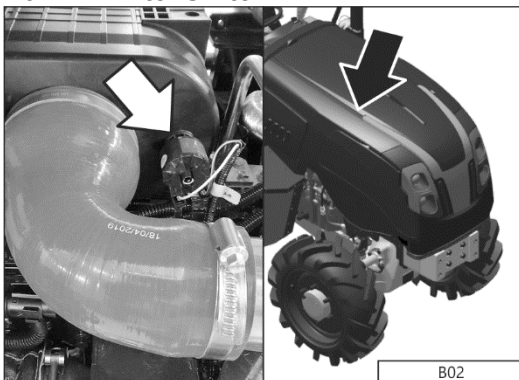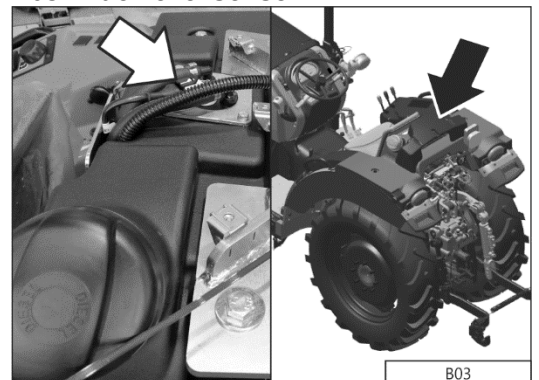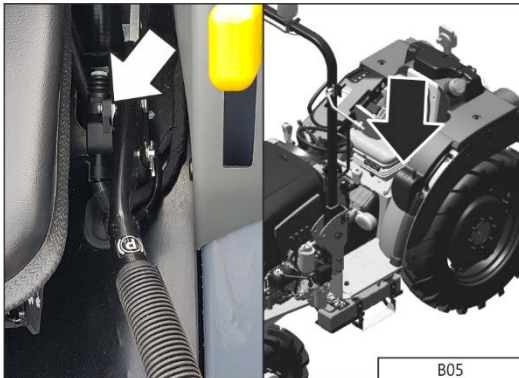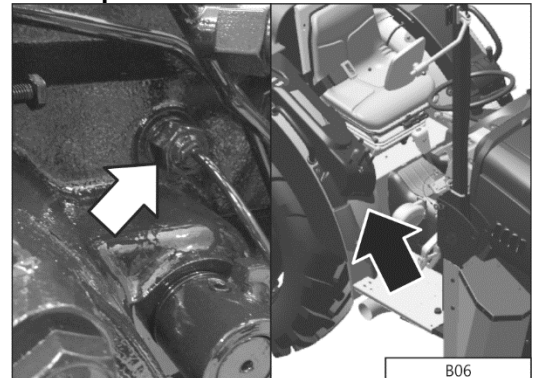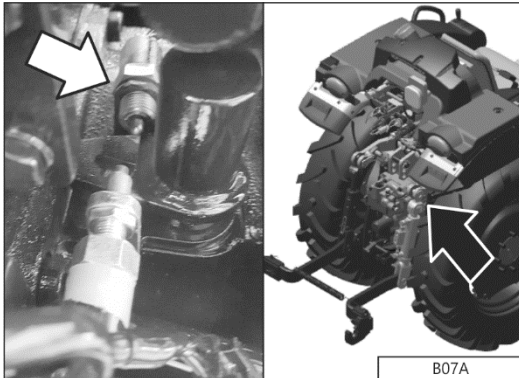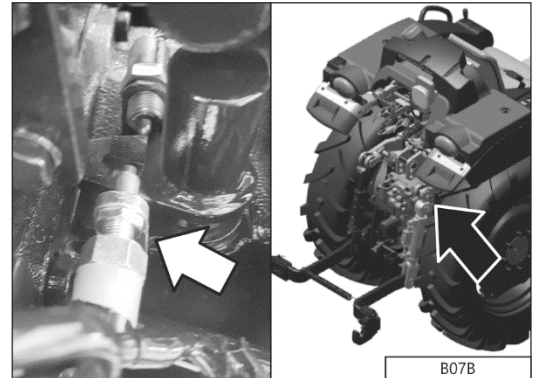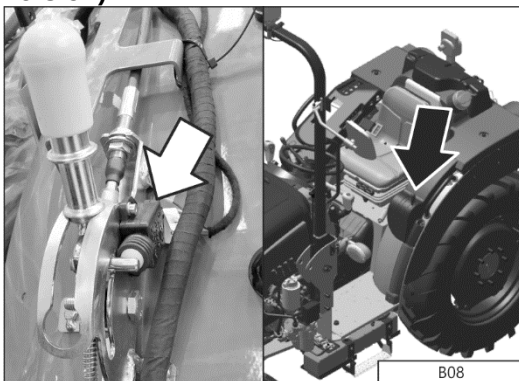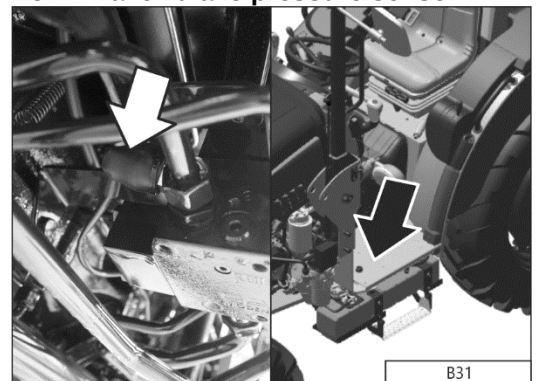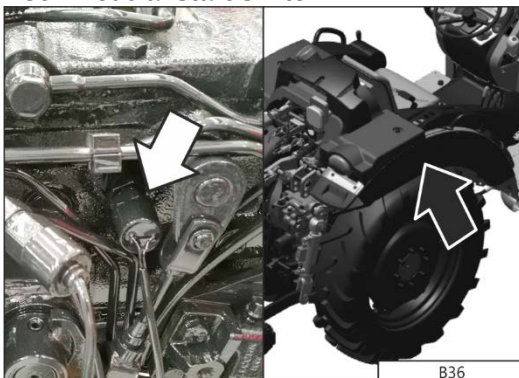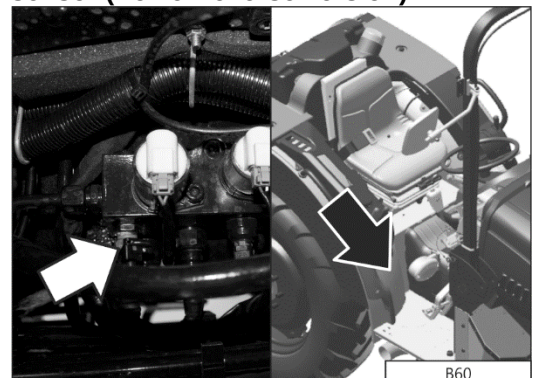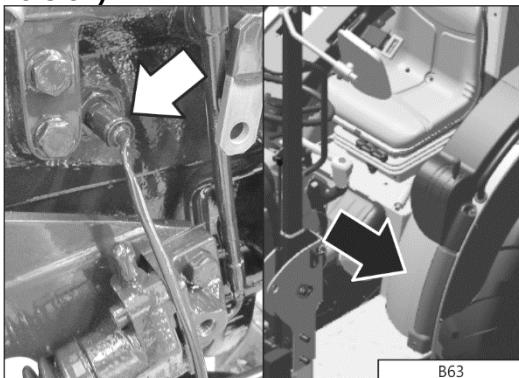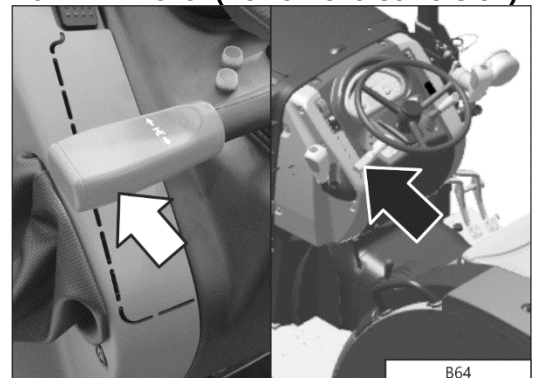
A210 - Electronic hitch control unit**A320 - Transmission control unit (Power reverse version)****A330 - Instrument panel****A500 - Engine control unit****B02 - Air filter switch****B03 - Fuel level sensor****B05 - Hand brake switch****B06 - Speed Sensor**

B07A - 540E/1000 PTO selector**B07B - 540 PTO selector****B08 - Mechanical PTO switch (Mechanical version)****B31 - Trailer brake pressure sensor****B36 - Neutral start switch****B60 - Transmission oil temperature sensor (Power reverse version)****B63 - Ranges switch (Power reverse version)****B64 - FNR lever (Power reverse version)**

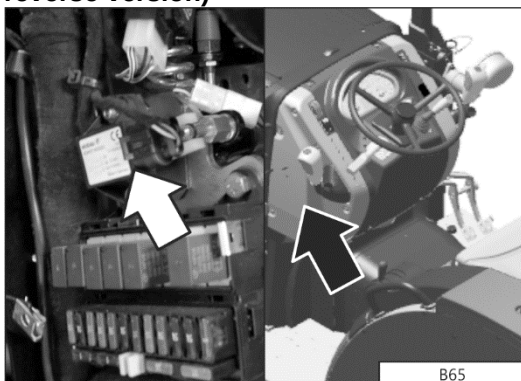
B65 - Clutch pedal position sensor (Power reverse version)



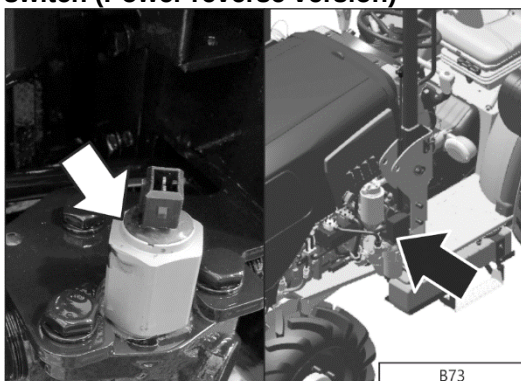
B73 - Transmission oil filter clogged switch (Power reverse version)




B112L - LHS brake pedal switch

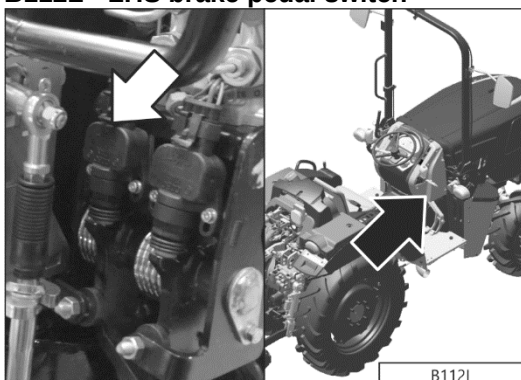


B200 - Electronic hitch position sensor

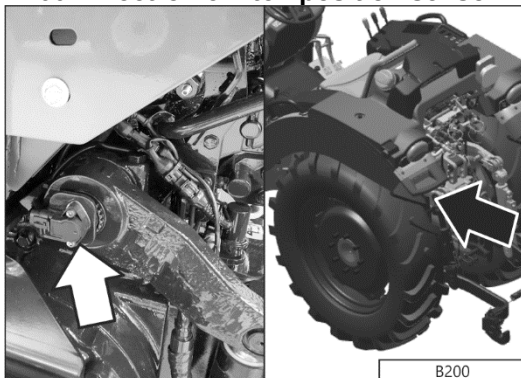


B69 - Brakes oil level switch

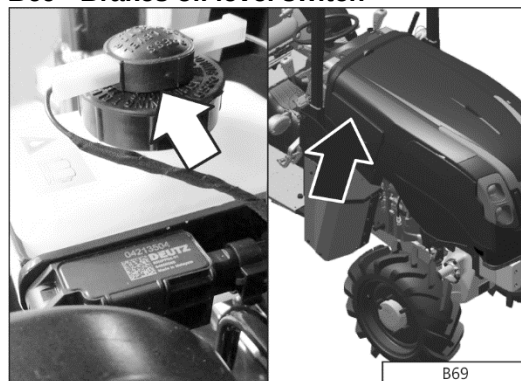

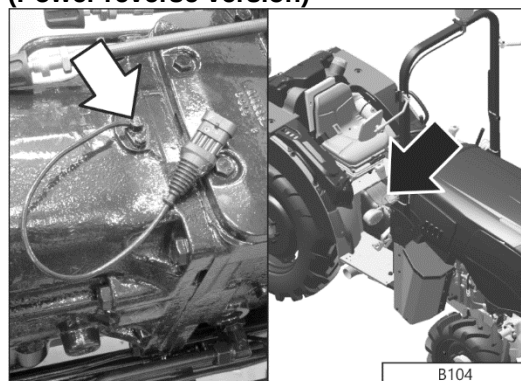
B104 - Transmission out speed signal (Power reverse version)



















B112R - RHS brake pedal switch








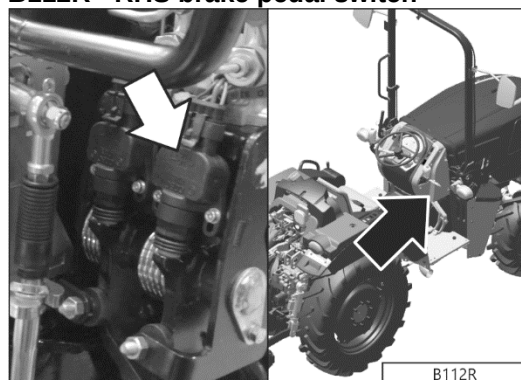










B201 - Electronic hitch draft sensor







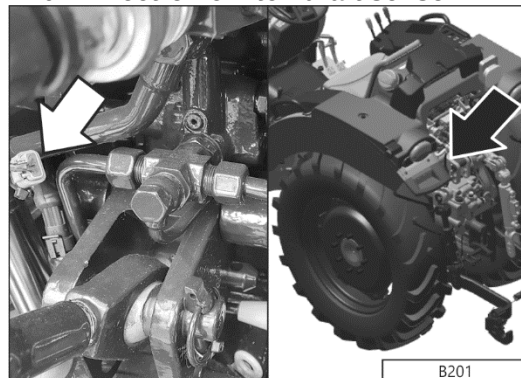


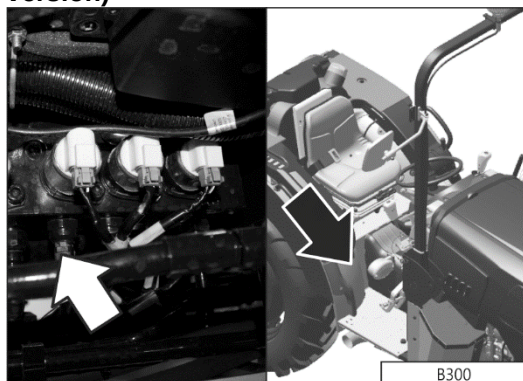
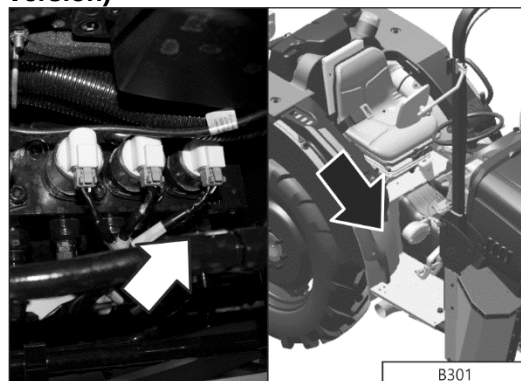
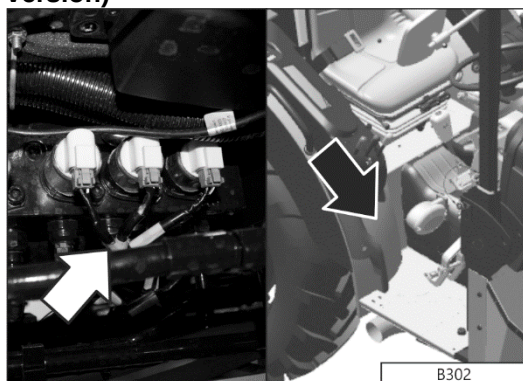
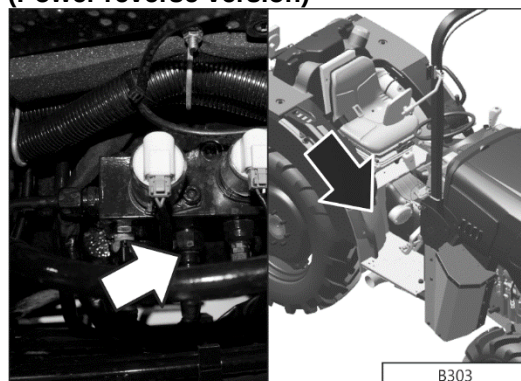
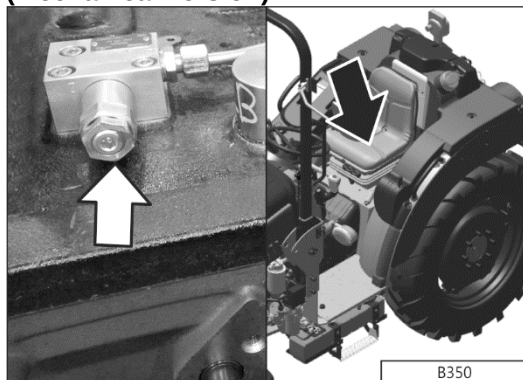
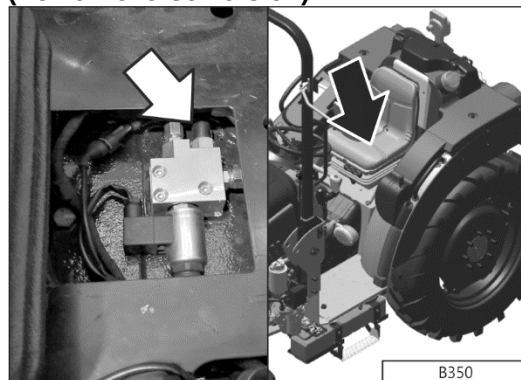
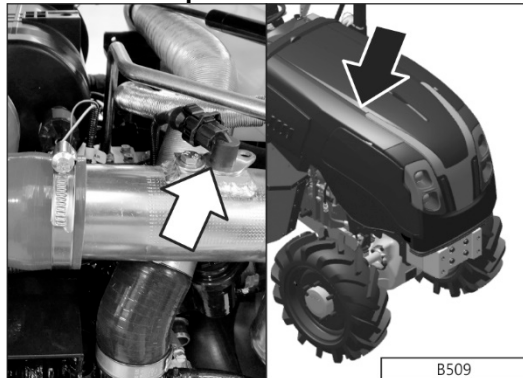
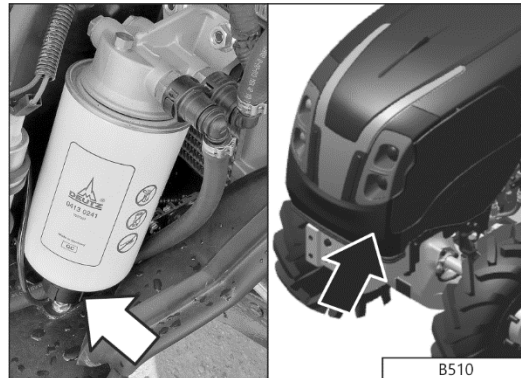
B300 - HI pressure sensor (Power reverse version)**B301 - LO pressure sensor (Power reverse version)****B302 - RV pressure sensor (Power reverse version)****B303 - Transmission oil pressure switch (Power reverse version)****B350 - PTO priority valve pressure switch (Mechanical version)****B350 - PTO priority valve pressure switch (Power reverse version)****B509 - Air temperature sensor****B510 - Water in fuel switch**

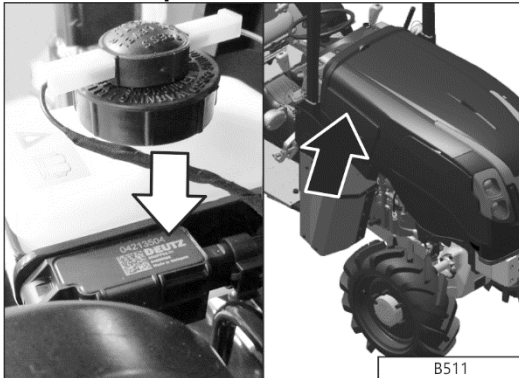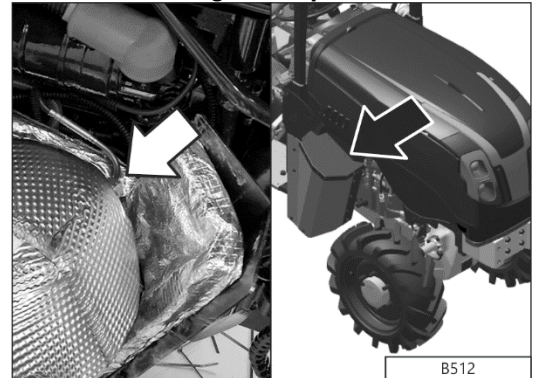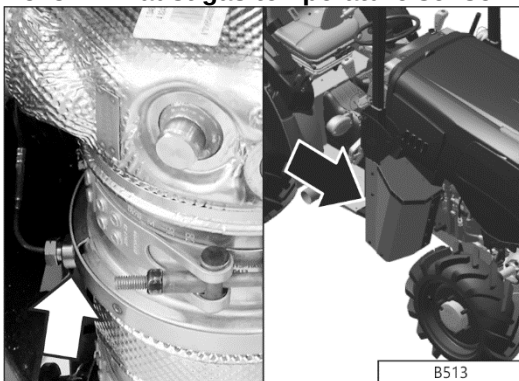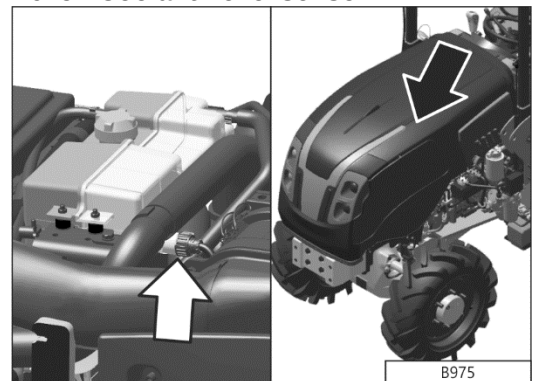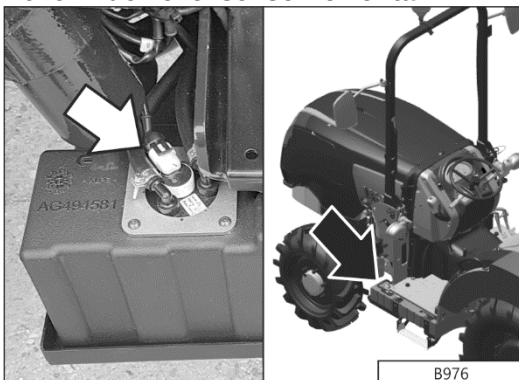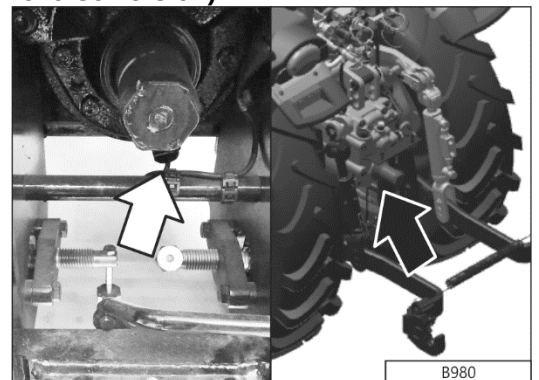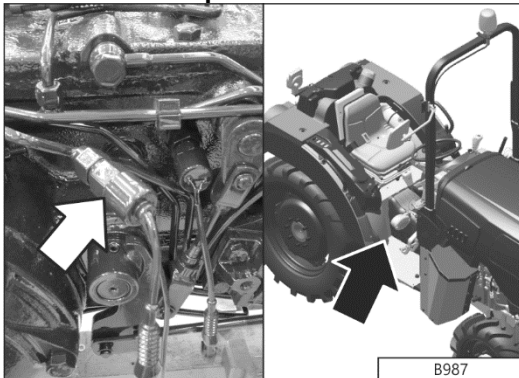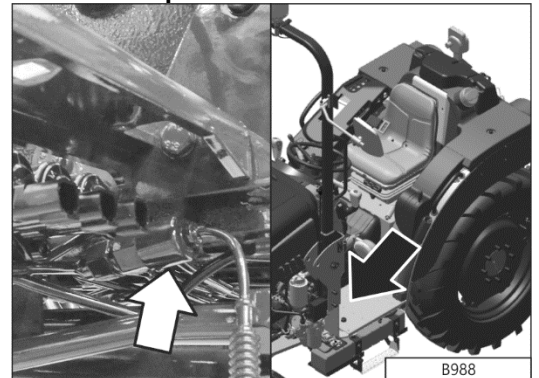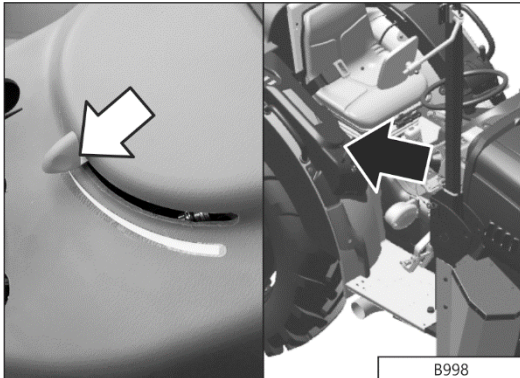
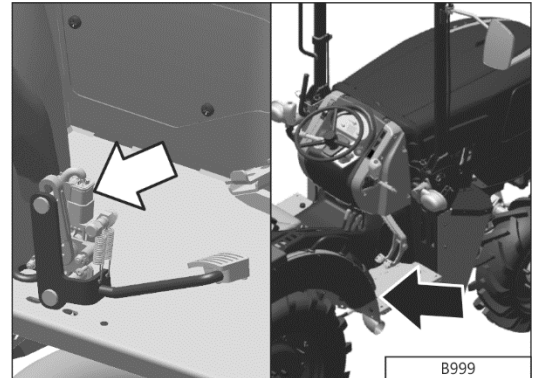
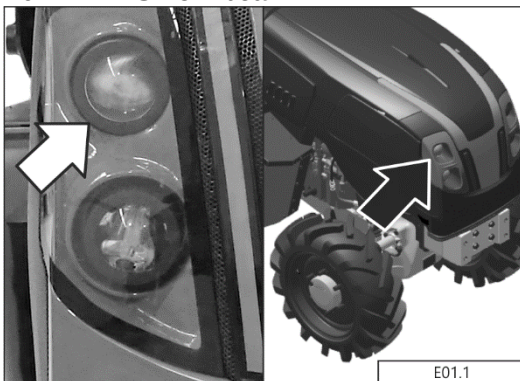
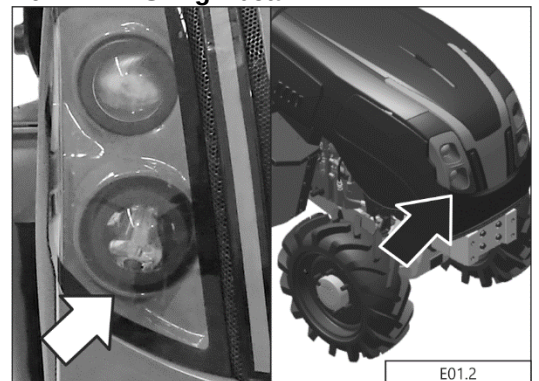
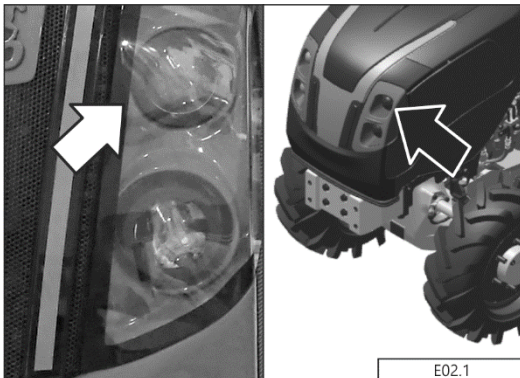
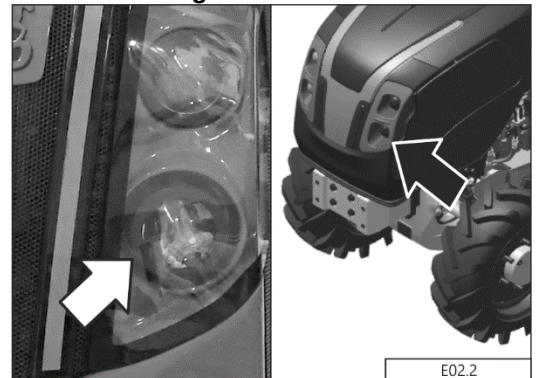
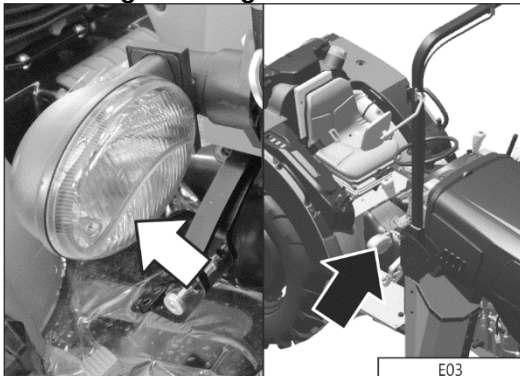
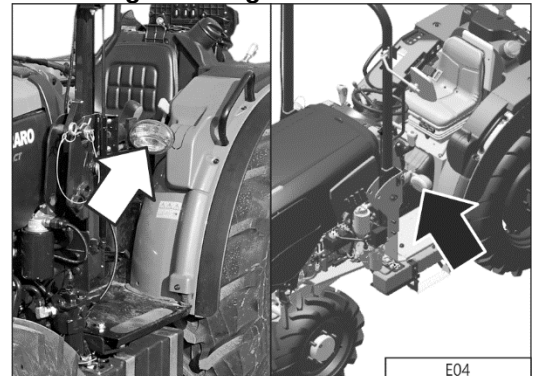
B511 - Delta pressure sensor**B512 - Exhaust gas temperature sensor 1****B513 - Exhaust gas temperature sensor 2****B975 - Coolant Level sensor****B976 - Fuel level sensor lower tank****B980 - PTO shaft output sensor (Power reverse version)****B987 - Diff-lock pressure switch****B988 - 4WD pressure switch**

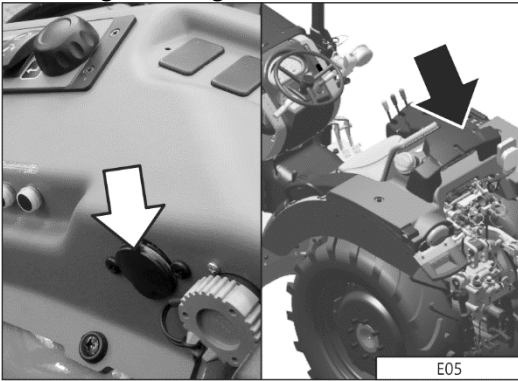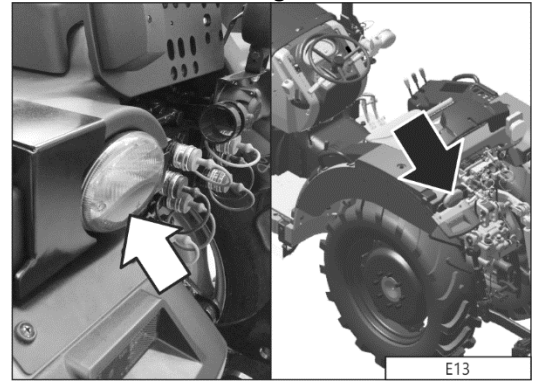
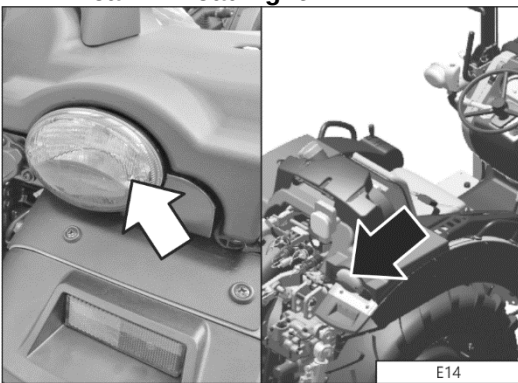
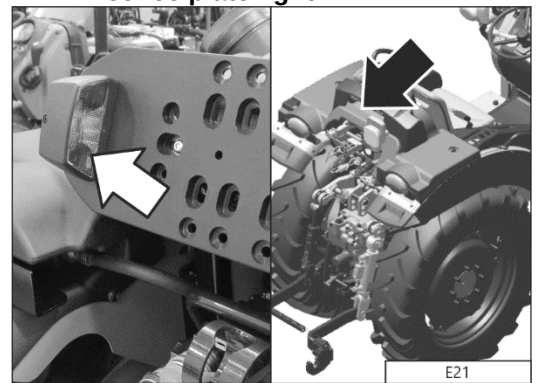
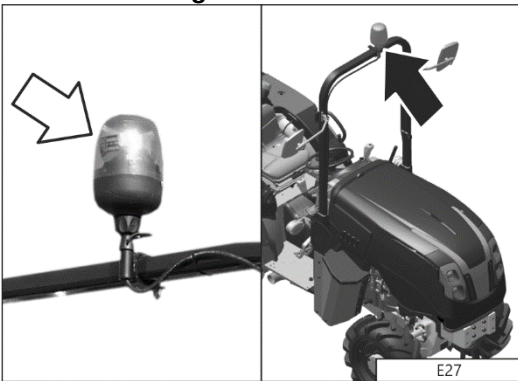
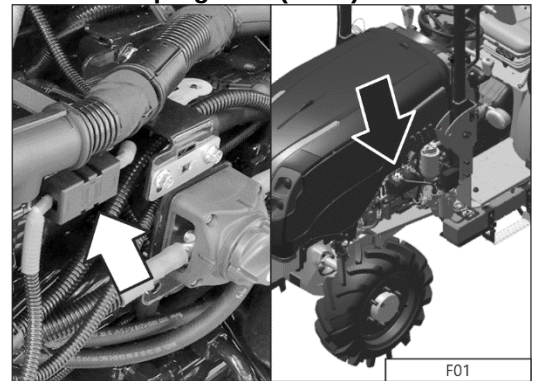
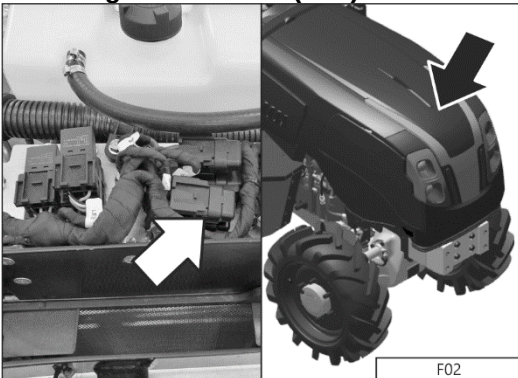
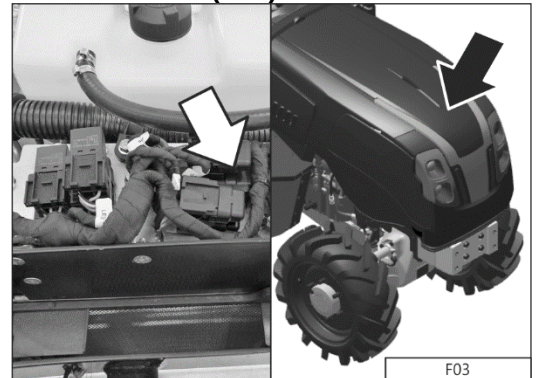
B998 - Hand throttle sensor**B999 - Foot throttle sensor****E01.1 - RHS Low beam****E01.2 - RHS High beam****E02.1 - LHS Low beam****E02.2 - LHS High beam****E03 - RH grabrail light****E04 - LH grabrail light**


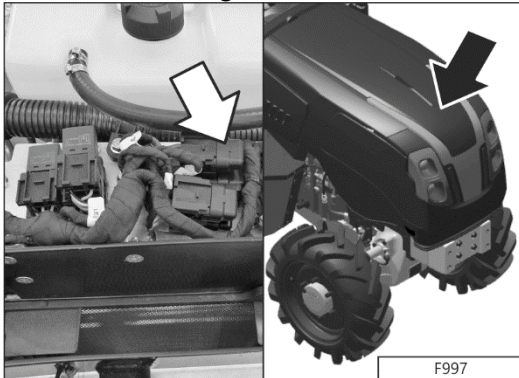
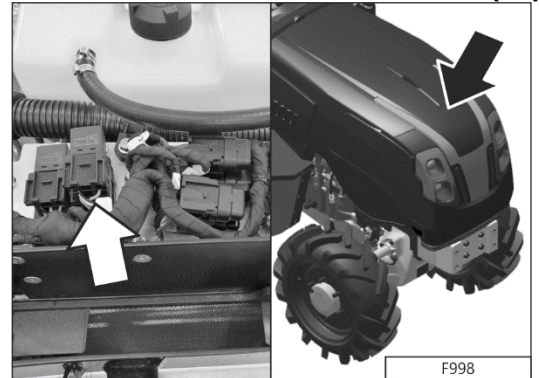
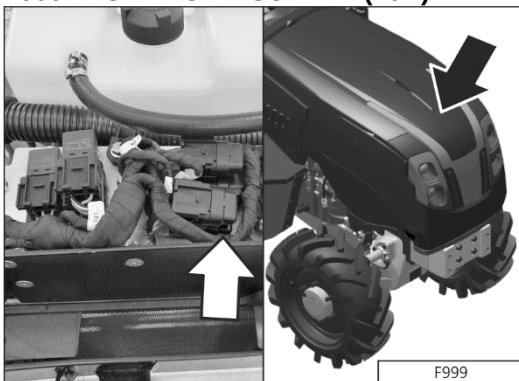
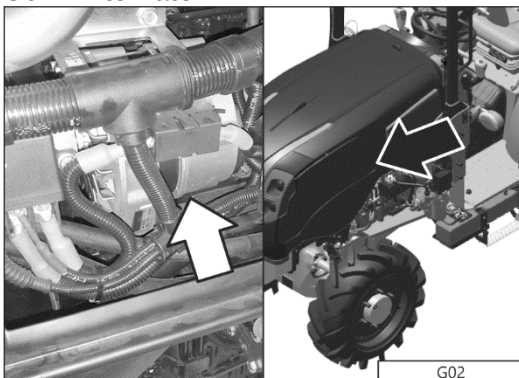
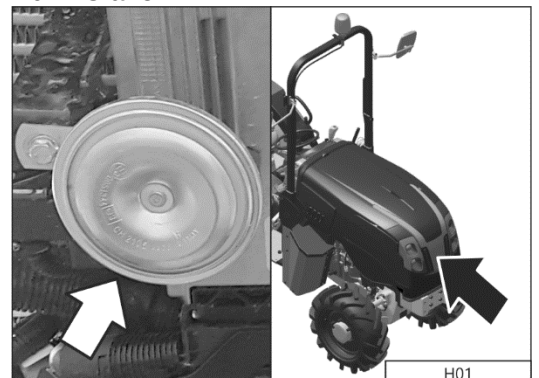
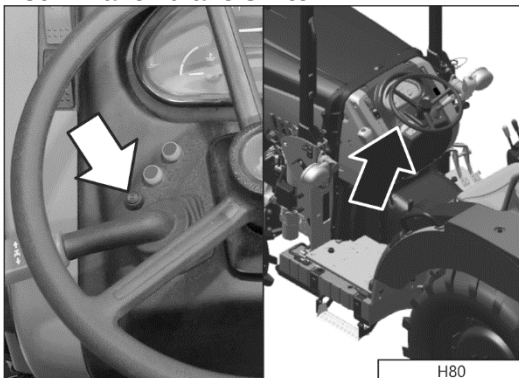
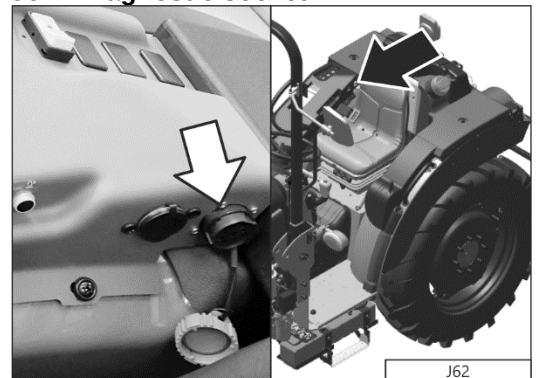
E05 - Cigarette lighter**E13 - Rear LH road light****E14 - Rear RH road light****E21 - Licence plate light****E27 - Beacon light****F01 - Glow plug fuse (150A)****F02 - Engine ECU fuse (30A)****F03 - Main fuse (50A)**

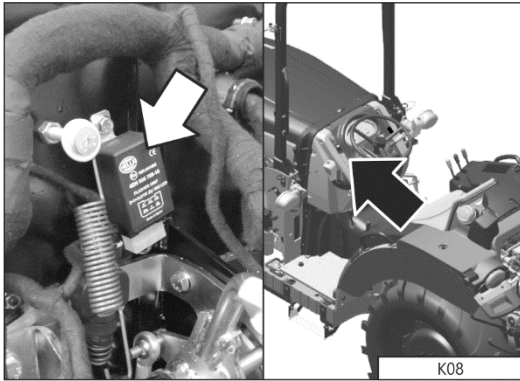
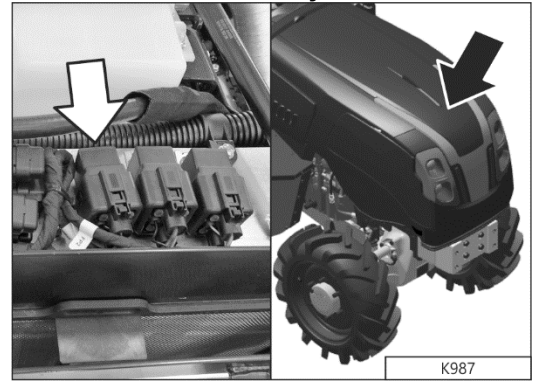
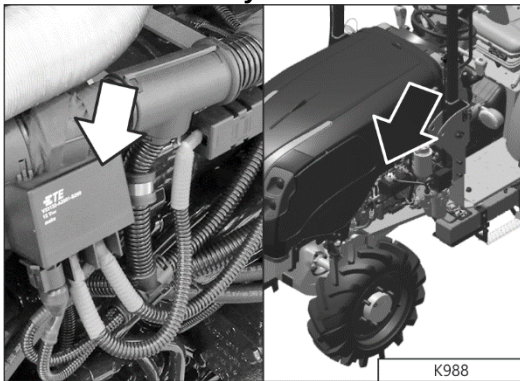
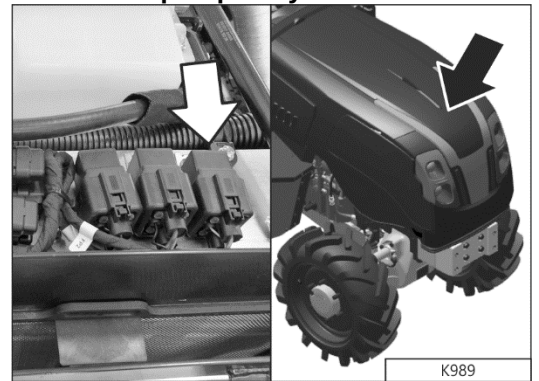
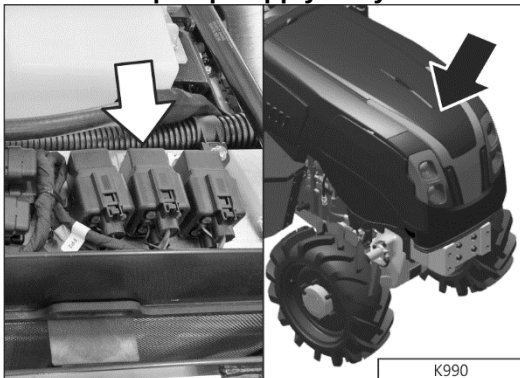
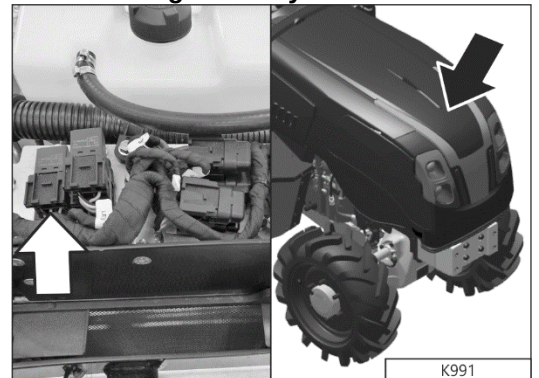
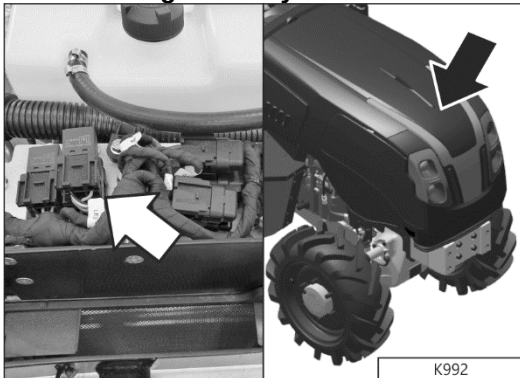
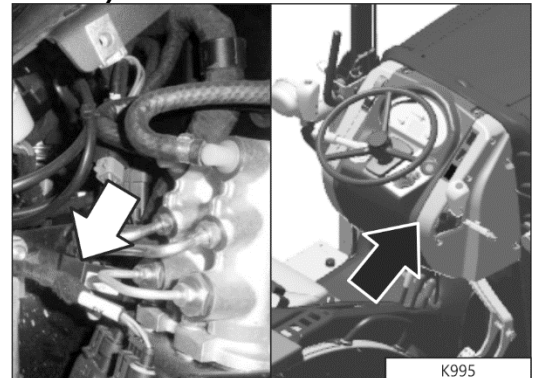
F997 - Fuse led lights**F998 - FUSE +15_FP_NEUTRAL_CAN (5A)****F999 - FUEL PUMP SUPPLY (20A)****G01 - Battery****G02 - Alternator****H01 - Claxon****H80 - Trailer brake switch****J62 - Diagnostic socket**

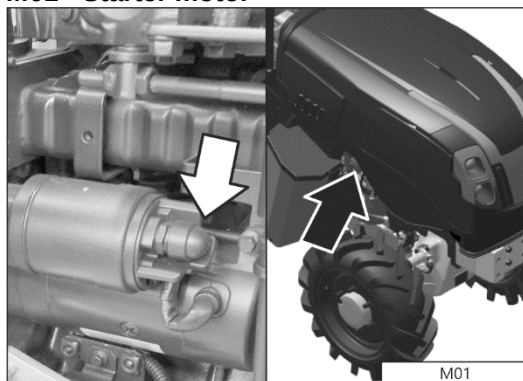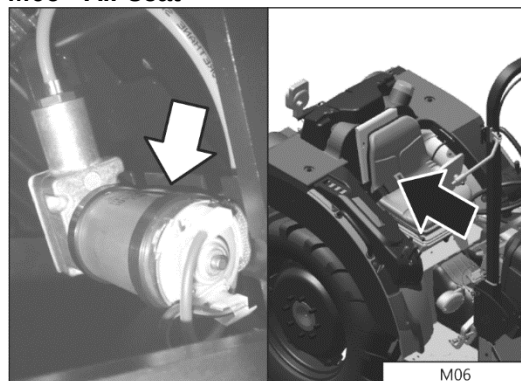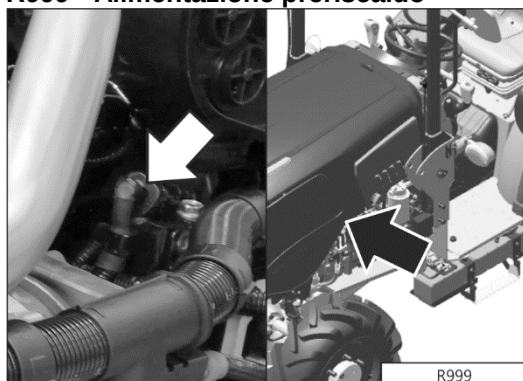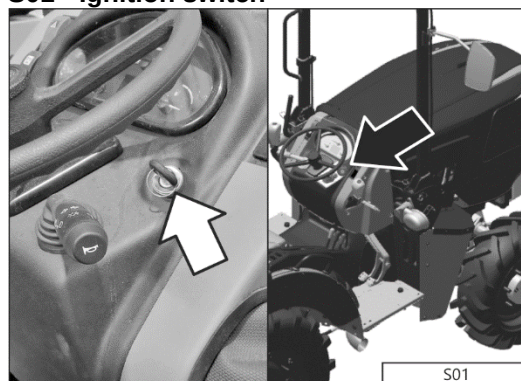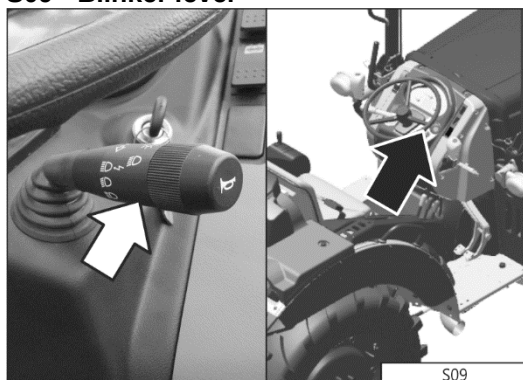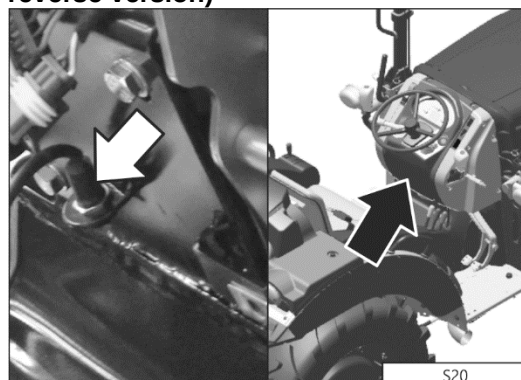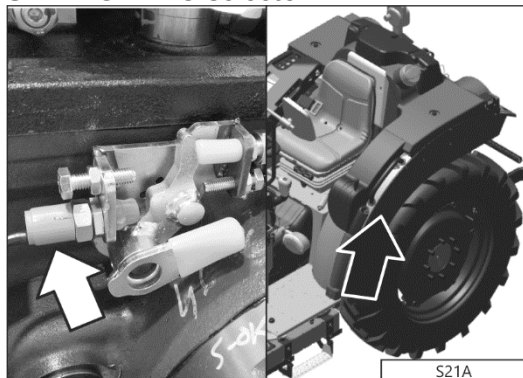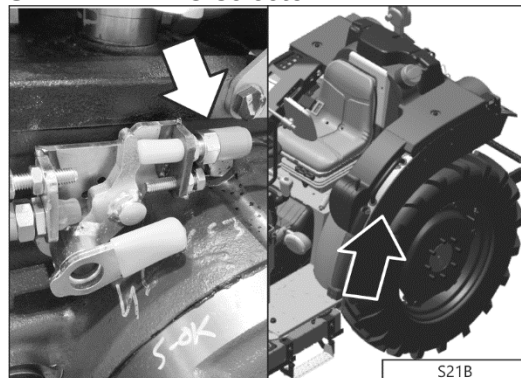K08 - Flasher unit**K987 - Neutral ECU relay****K988 - Preheat relay 150A****K989 - Fuel pump relay****K990 - Fuel pump supply relay****K991 - Led lights Relay****K992 - Led lights Relay2****K995 - PWM enabler (Power reverse version)**

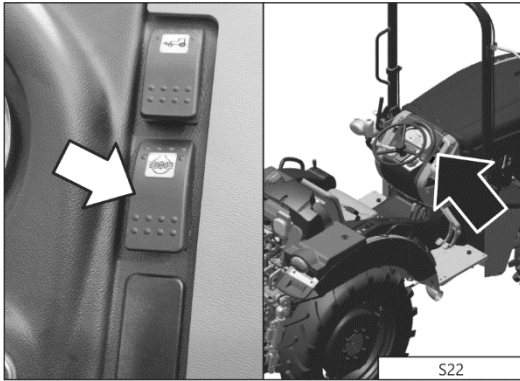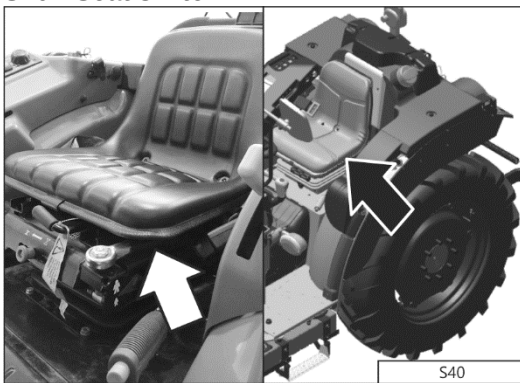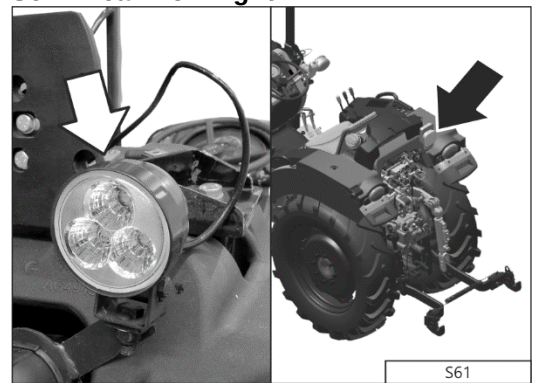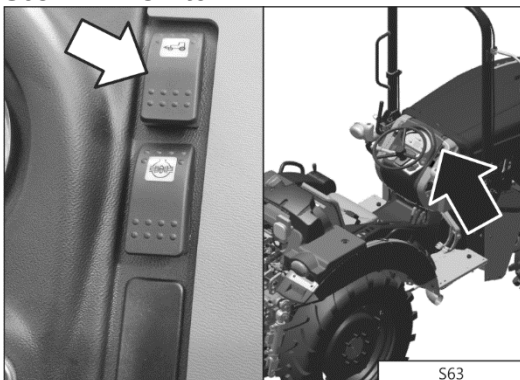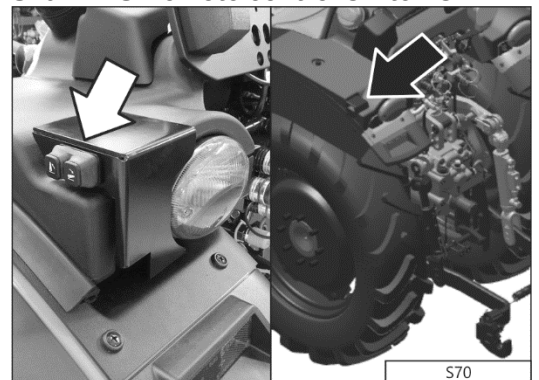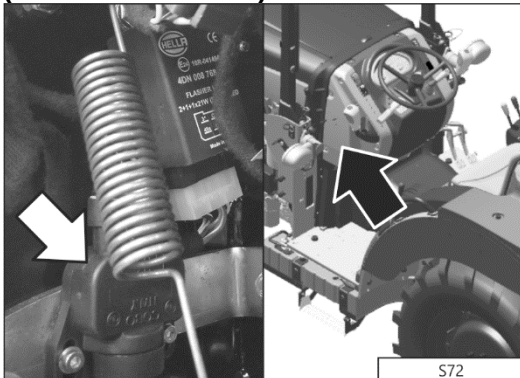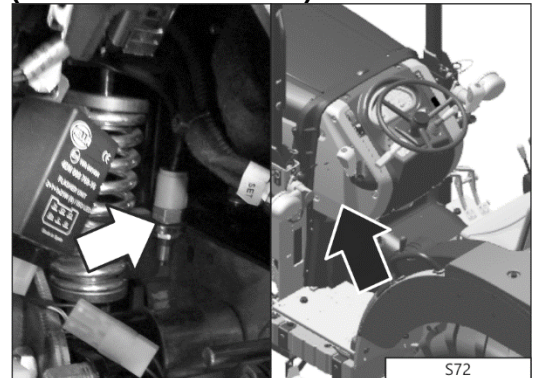
M01 - Starter motor**M06 - Air seat****R999 - Alimentazione preriscaldamento****S01 - Ignition switch****S09 - Blinker lever****S20 - Calibration hidden button (Power reverse version)****S21A - GD PTO selector****S21B - DIR PTO selector**

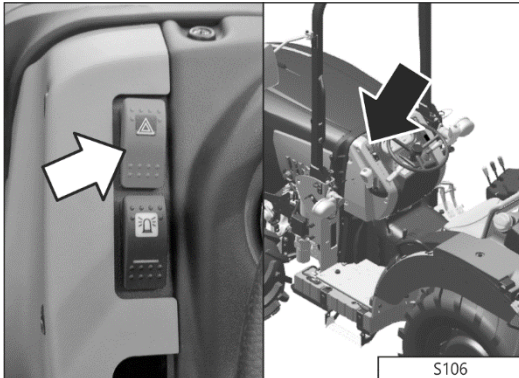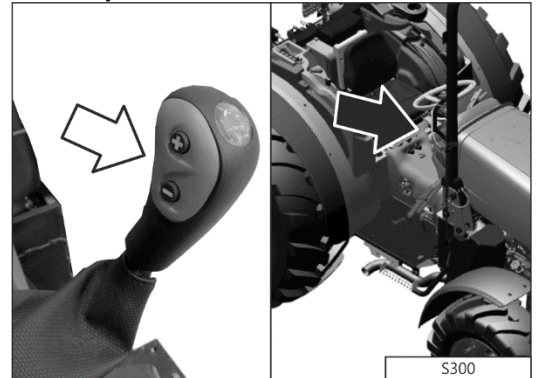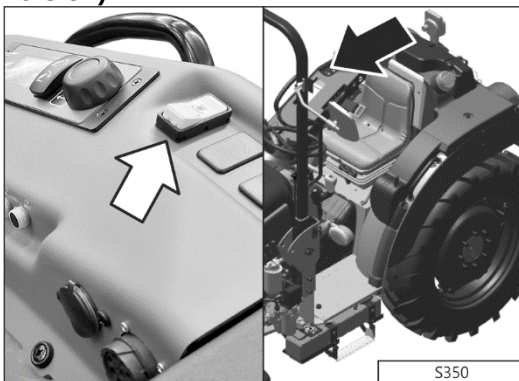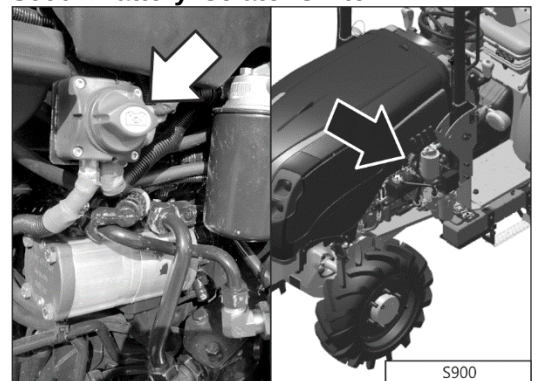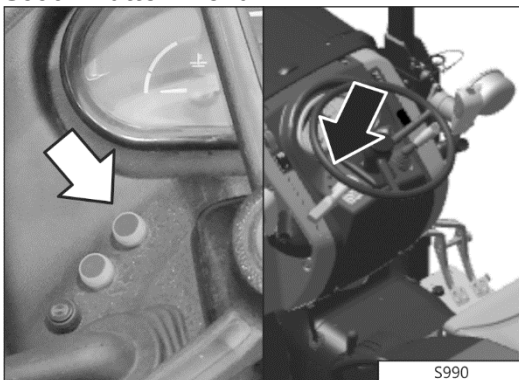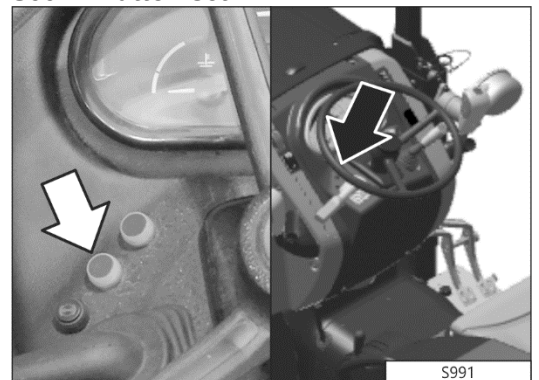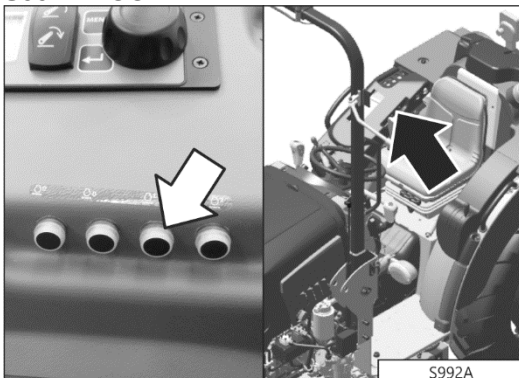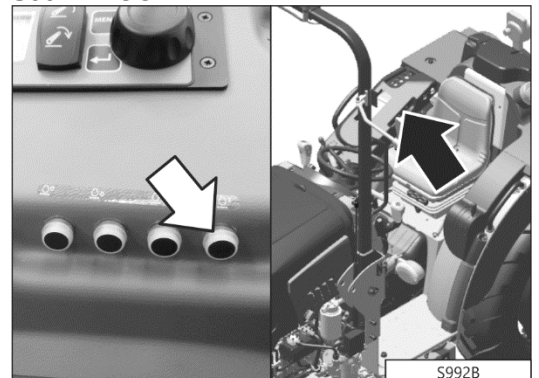S22 - Diff-lock switch**S36 - Beacon switch****S40 - Seat switch****S61 - Rear work light****S63 - 4WD switch****S70 - LHS Remote control switch UP****S72 - Clutch pedal end stroke switch
(Mechanical version)****S72 - Clutch pedal end stroke switch
(Power reverse version)**

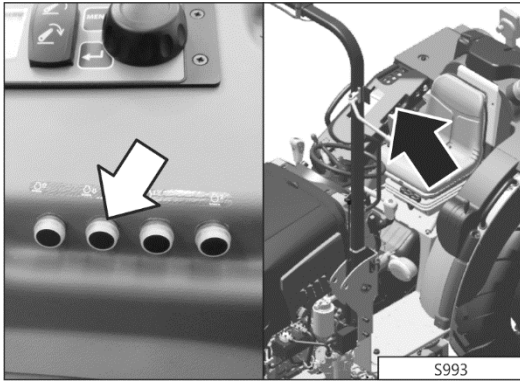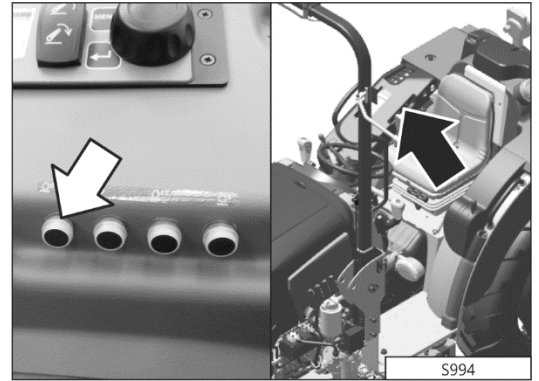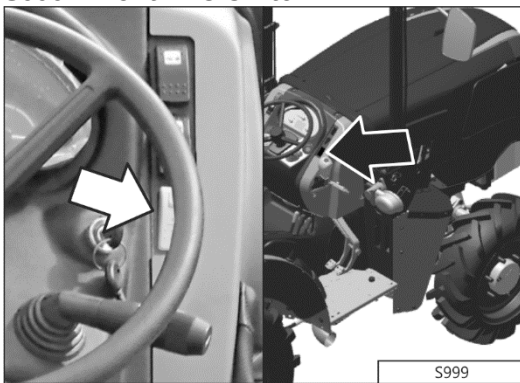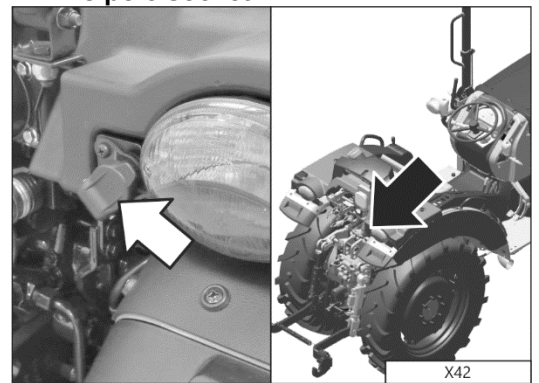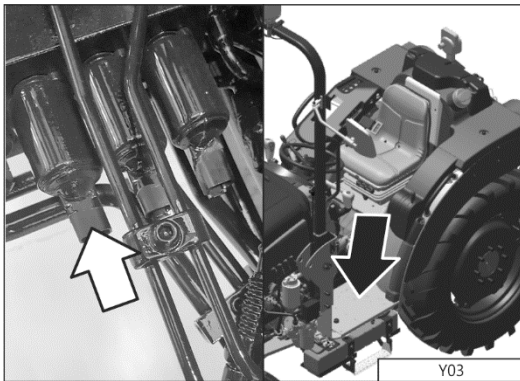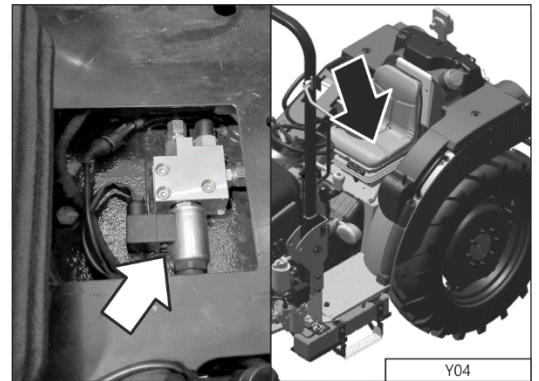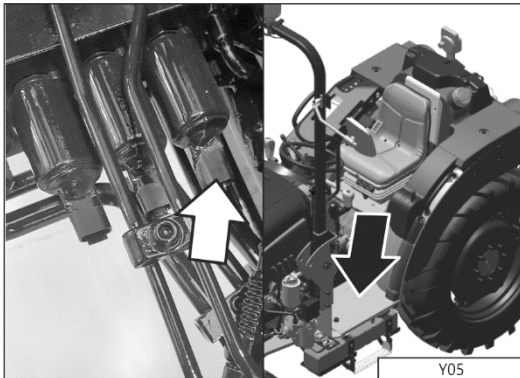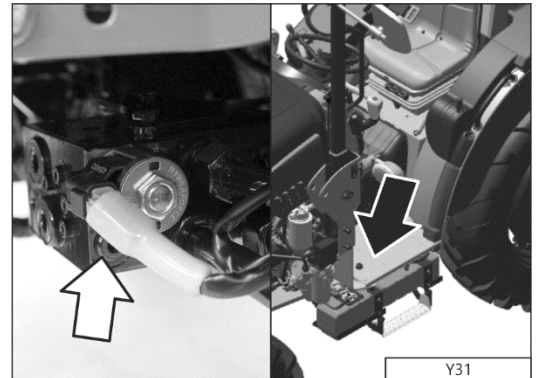
S106 - Hazard switch**S300 - HI-LO switch (Power reverse version)****S350 - Rear PTO switch (Power reverse version)****S900 - Battery isolator switch****S990 - Button menu****S991 - Button set****S992A - CC-MEM1****S992B - CC-MEM2**

S993 - CC-DW**S994 - CC-UP****S999 - Front PTO switch****X42 - 3 pole socket****Y03 - 4WD solenoid valve****Y04 - PTO main valve connection****Y05 - Diff-lock solenoid valve****Y31 - Trailer brake solenoid valve**

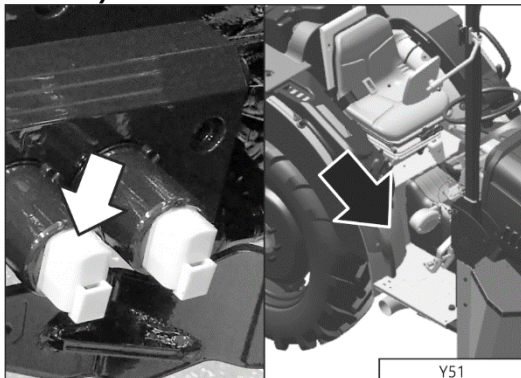
Y51 - RV solenoid valve (Power reverse version)



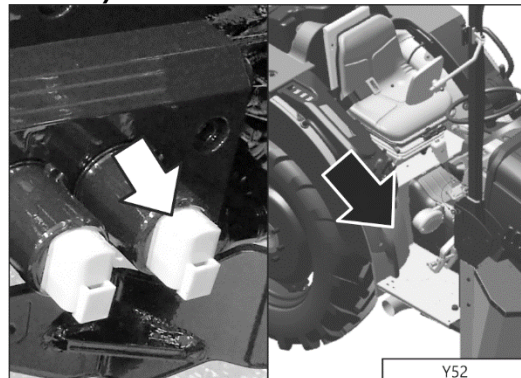
Y52 - FL solenoid valve (Power reverse version)



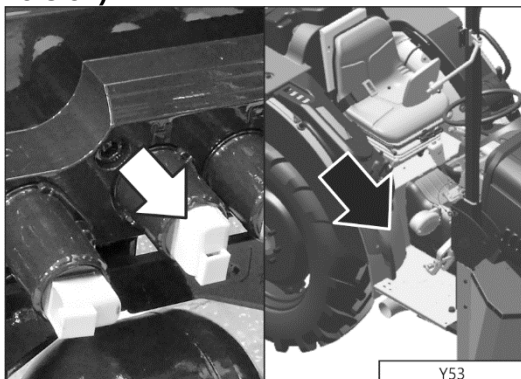
Y53 - FH solenoid valve (Power reverse version)



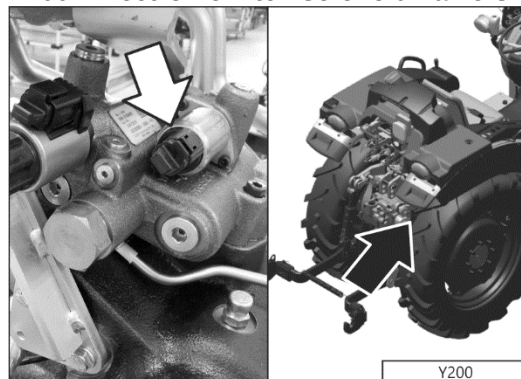
Y200 - Electronic hitch solenoid valve UP



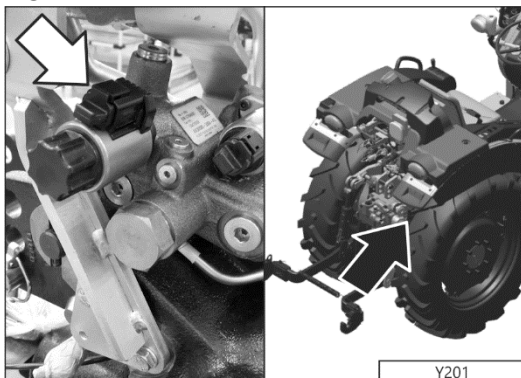
Y201 - Electronic hitch solenoid valve DOWN



Y300 - Main ring solenoid valve

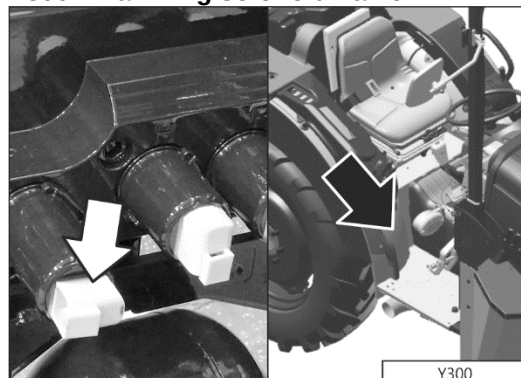

Y350 - PTO priority solenoid valve

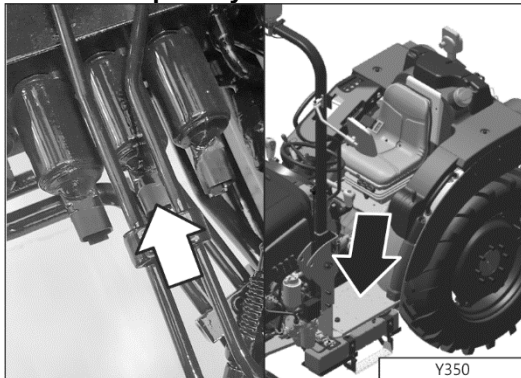

Y981 - Fuel pump

