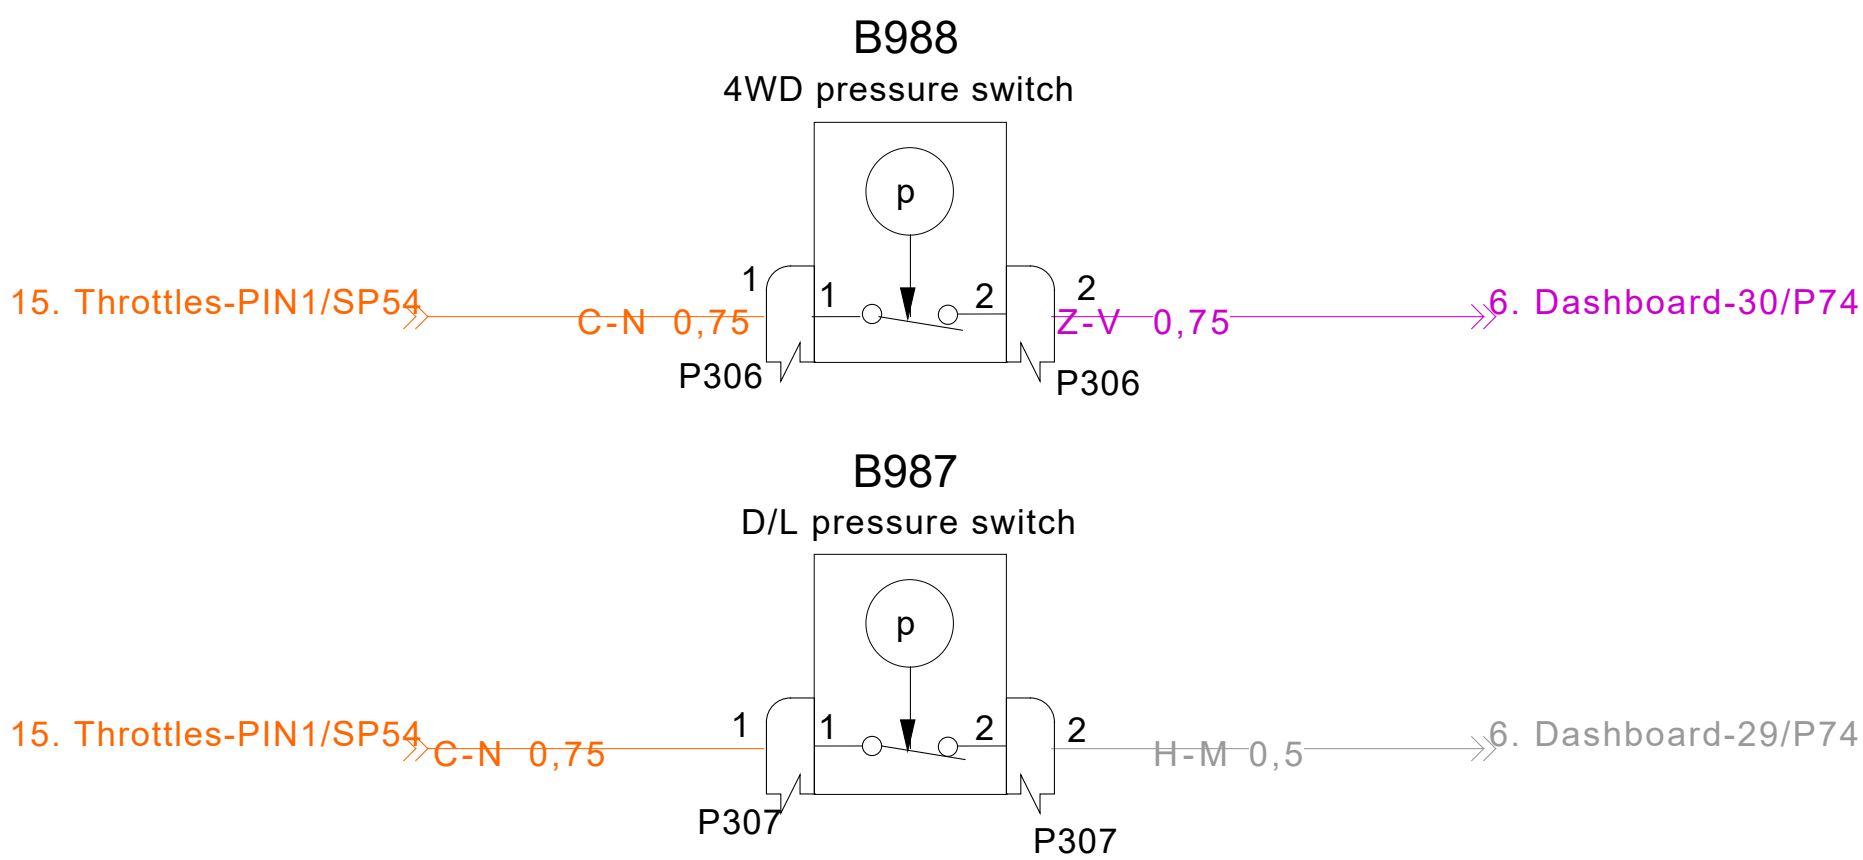
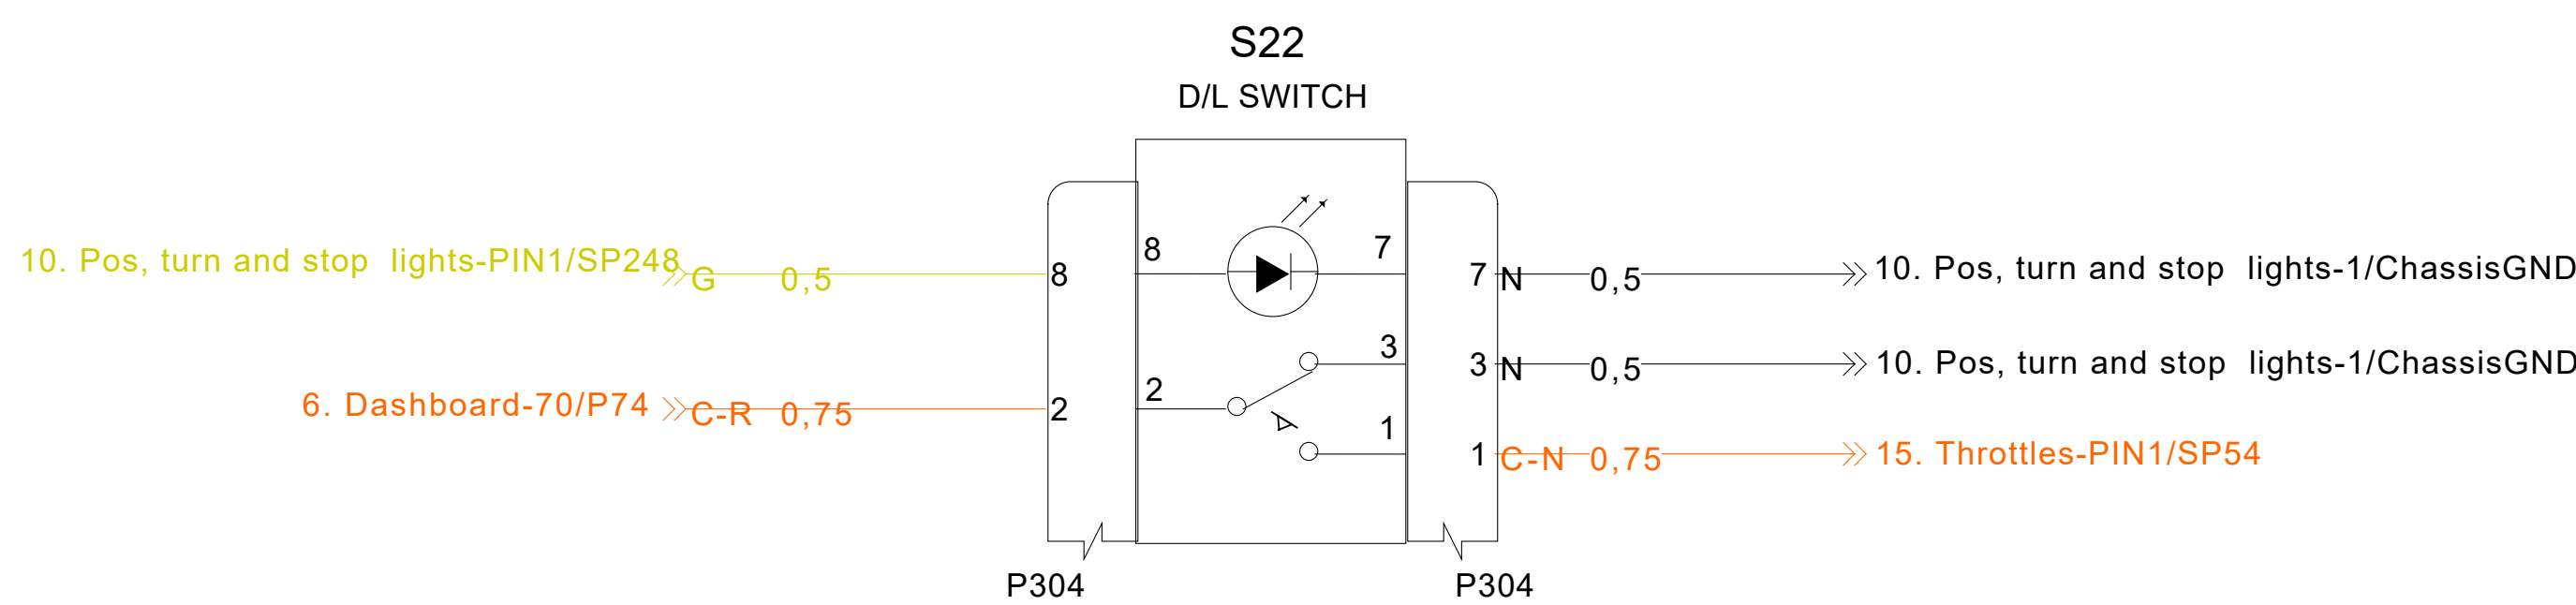
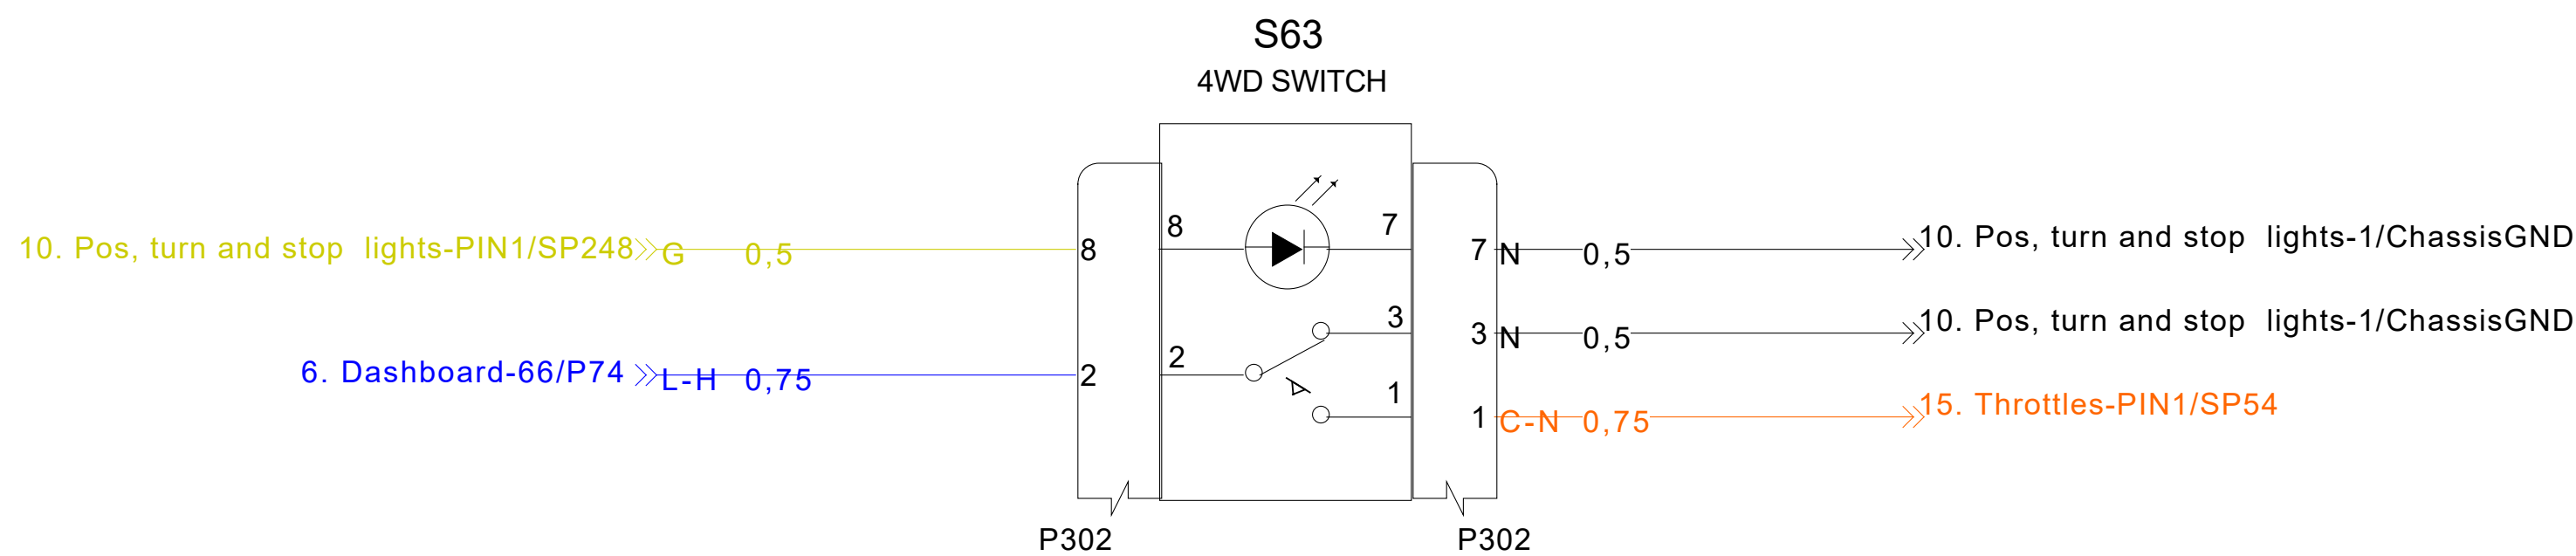
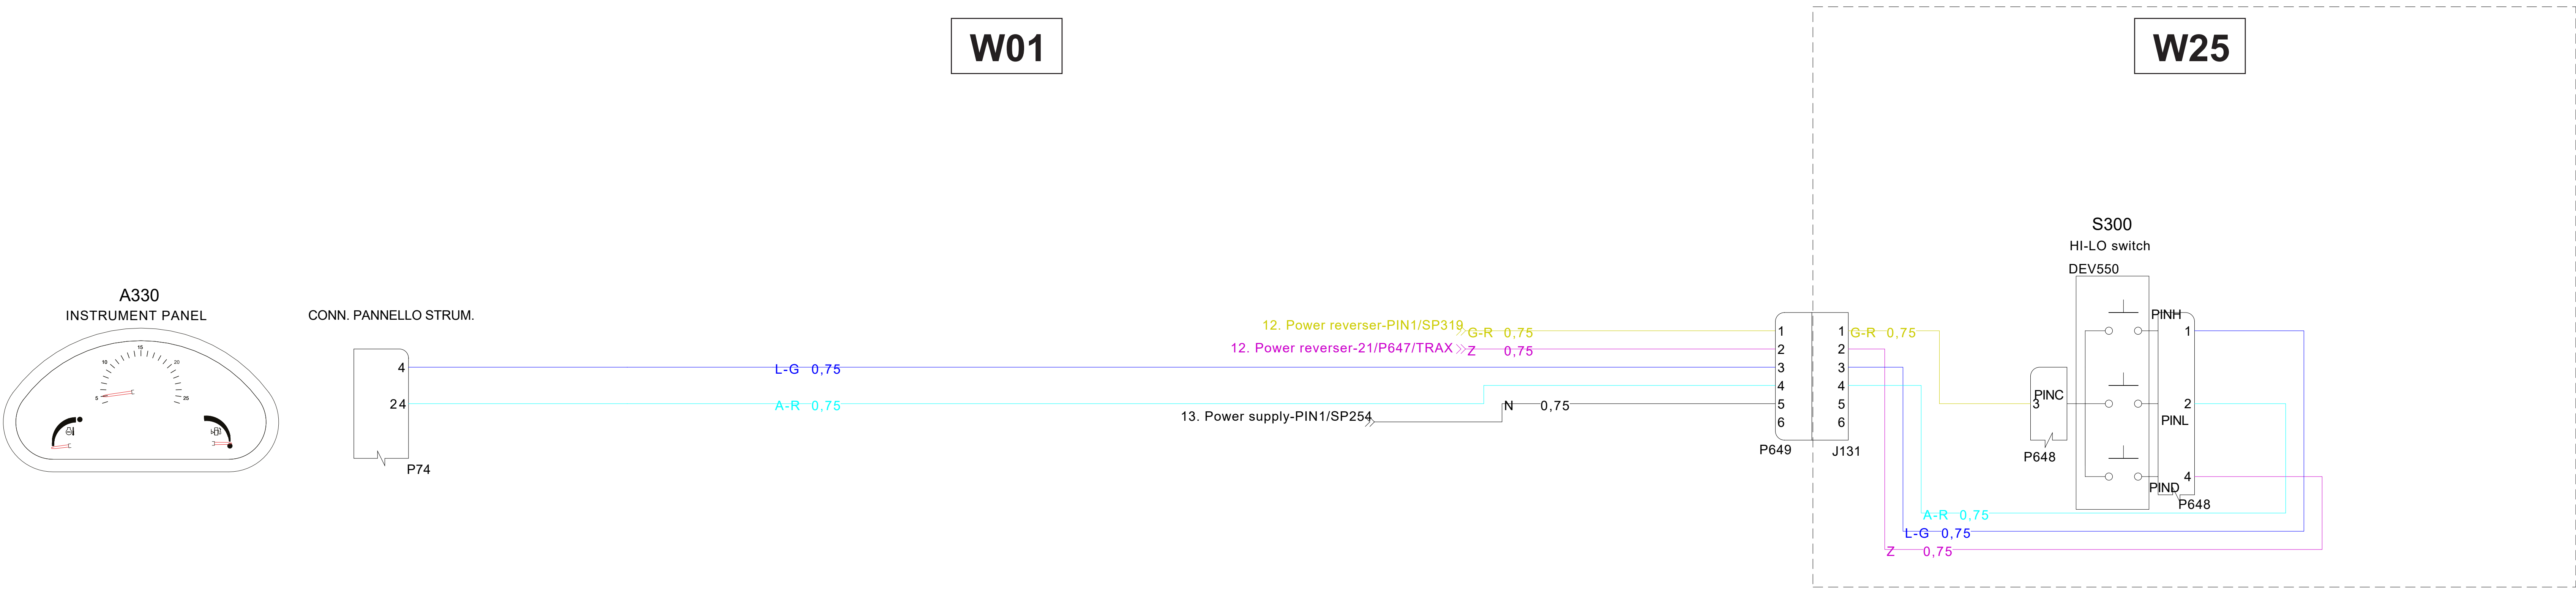
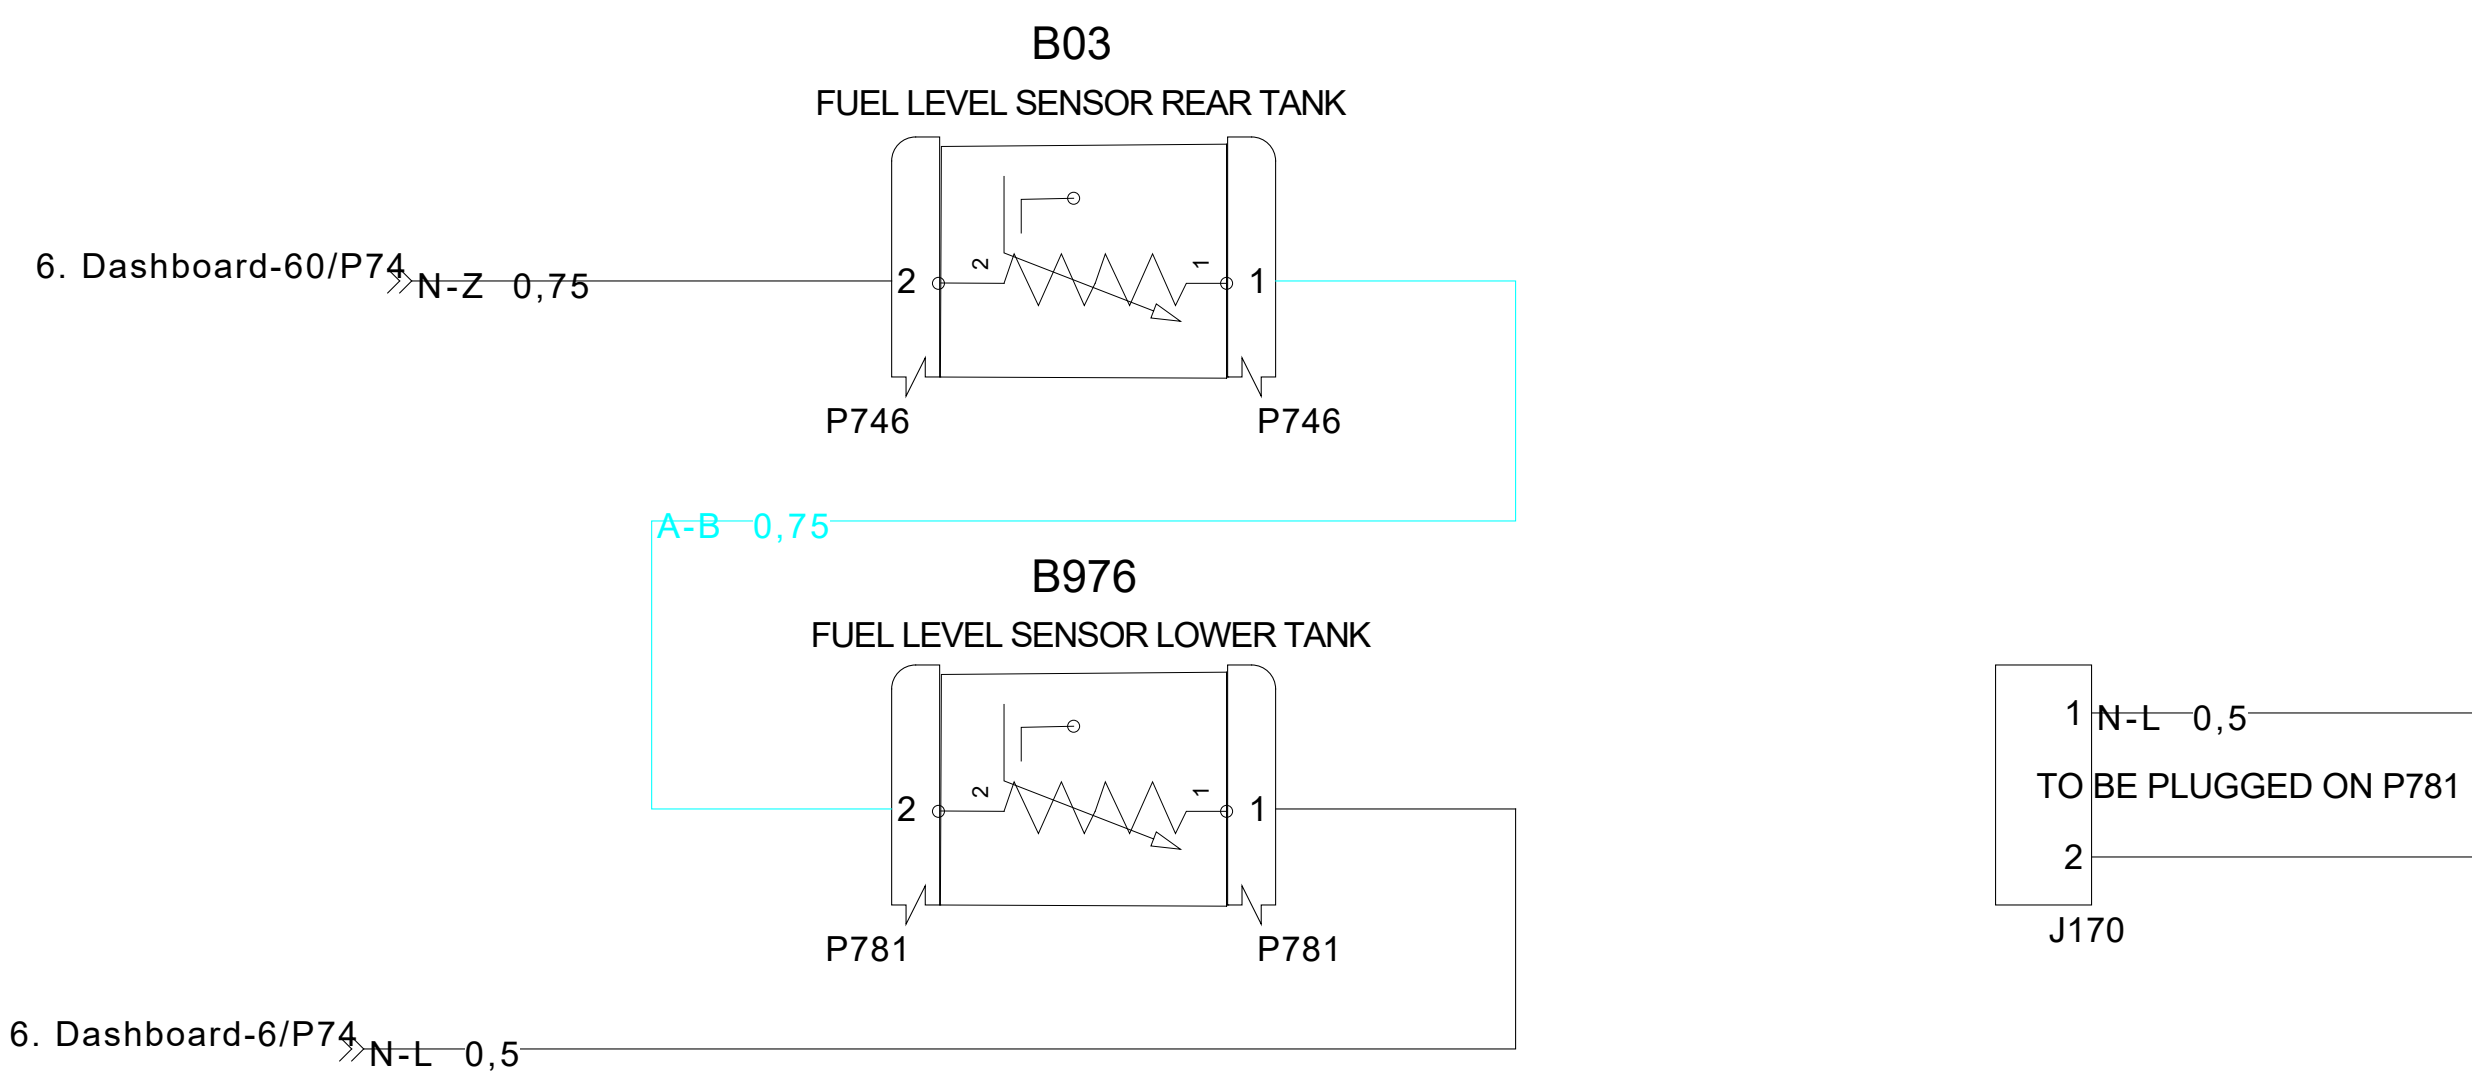
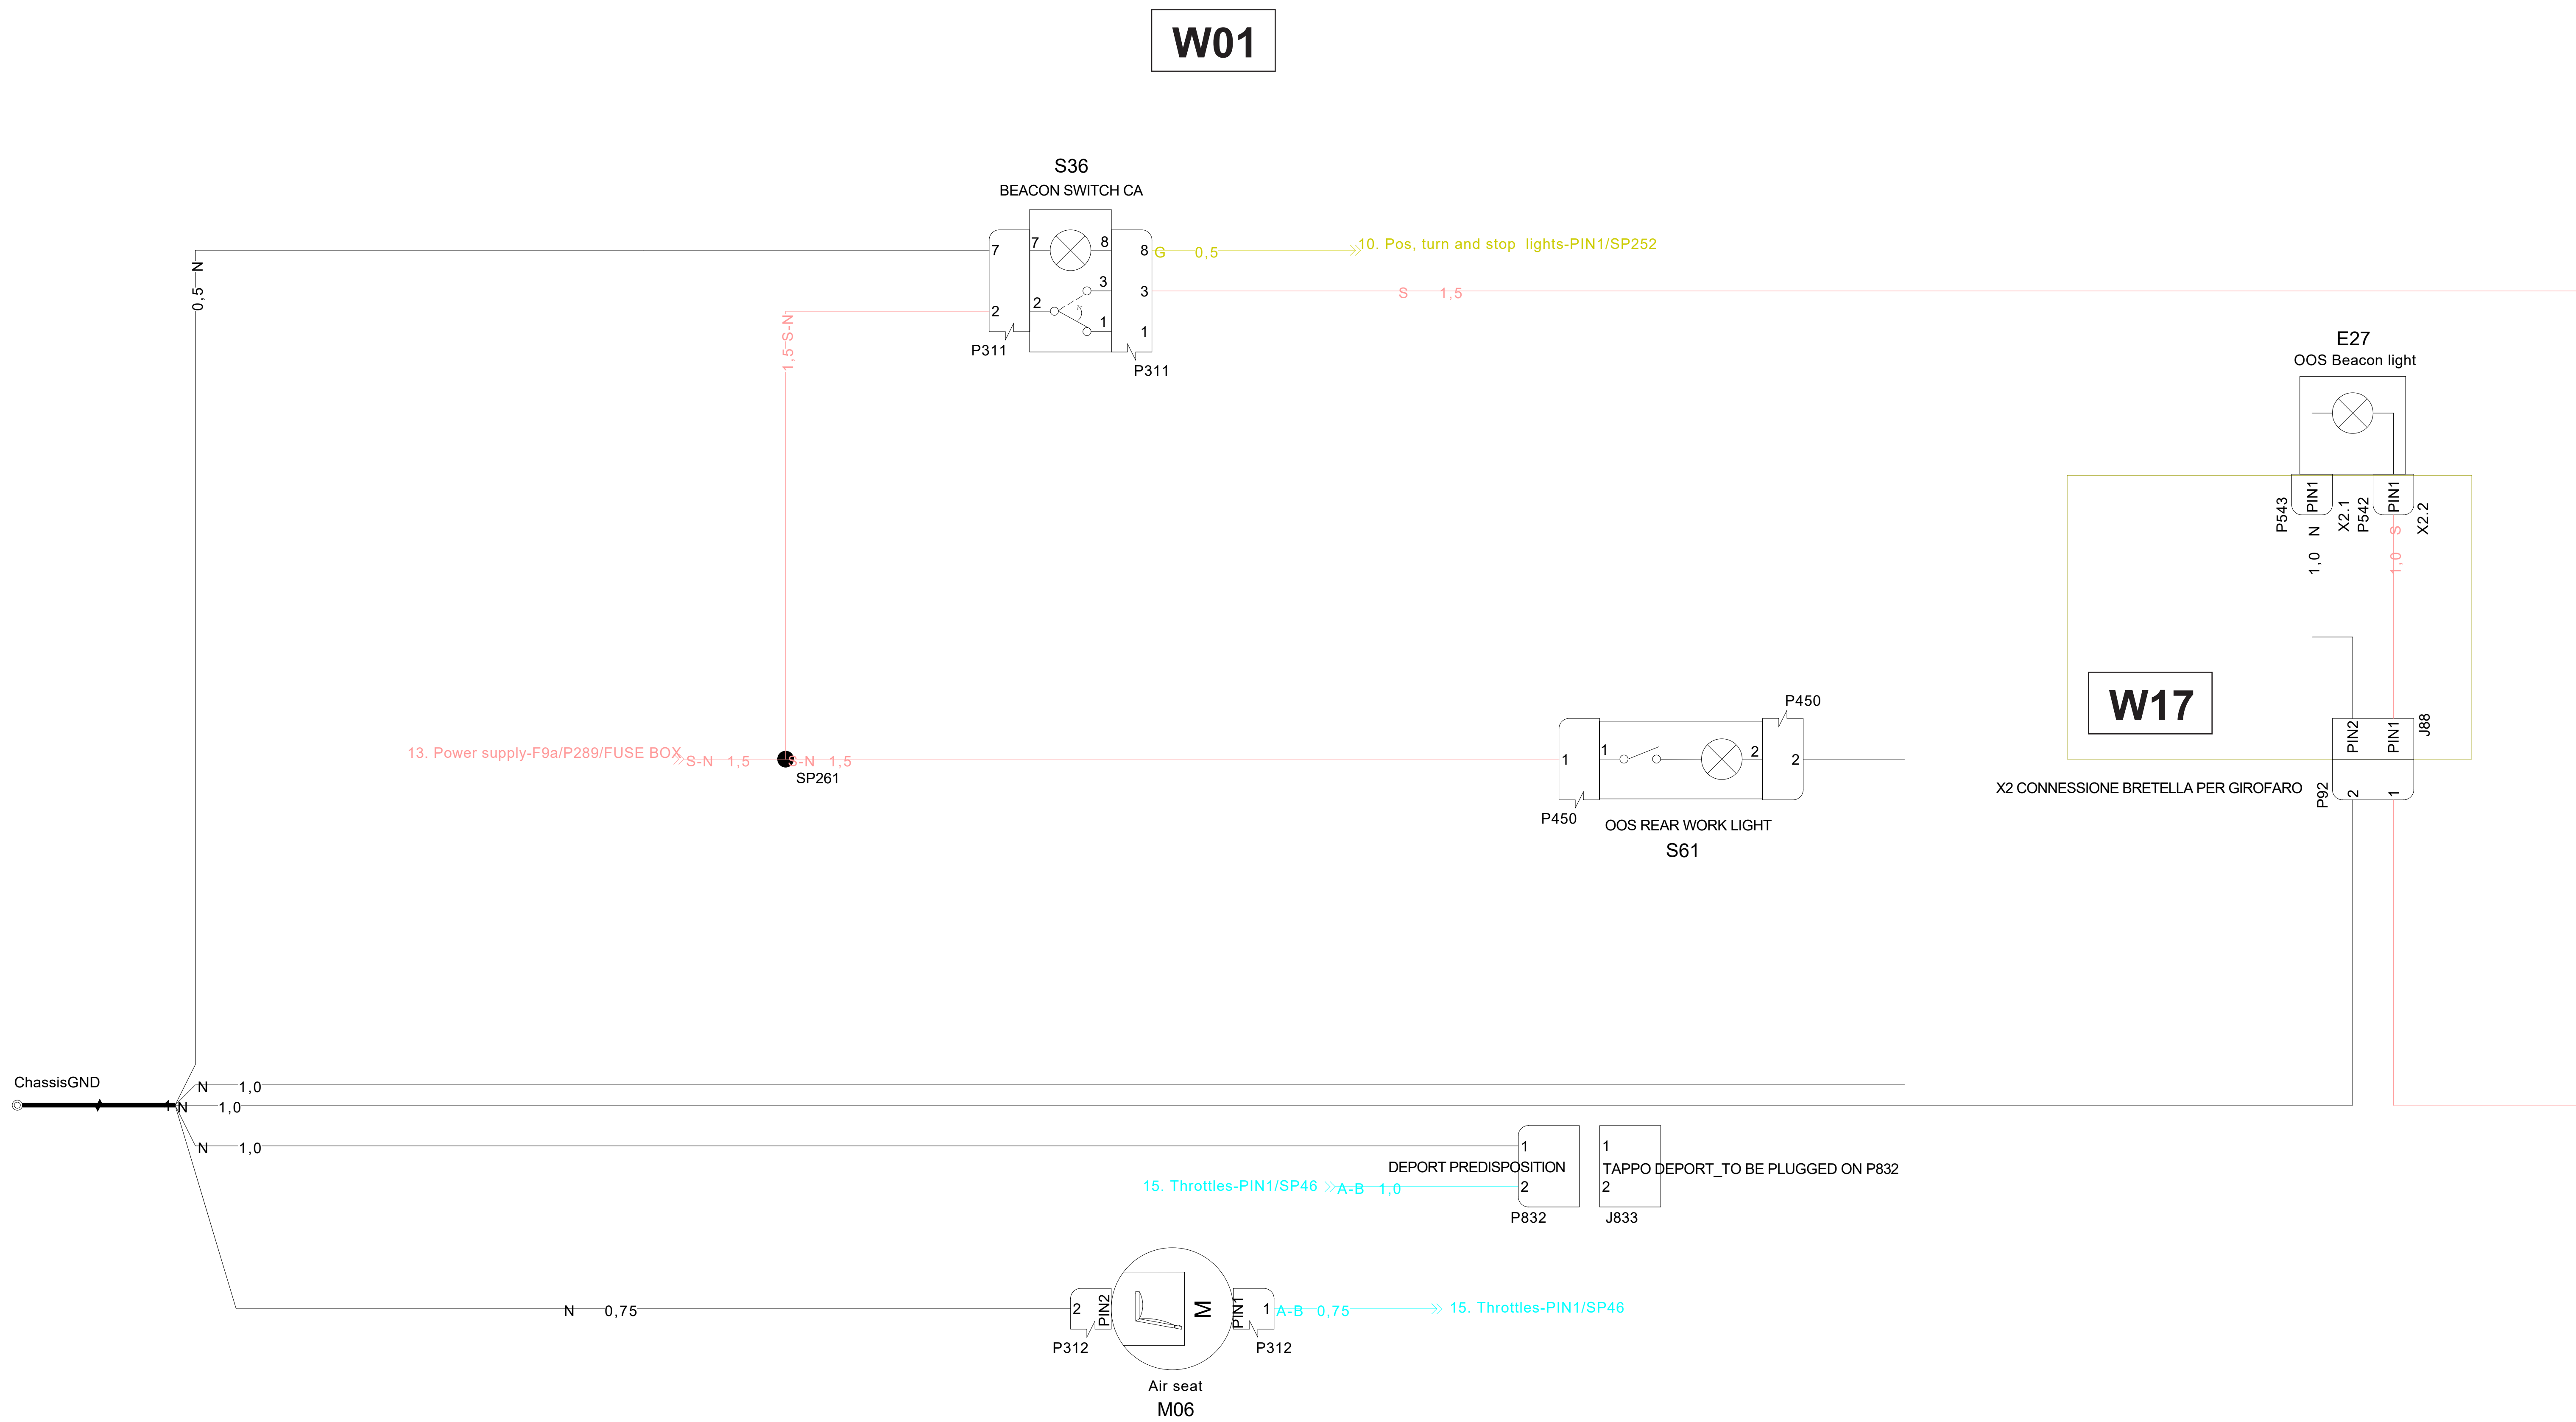



W01









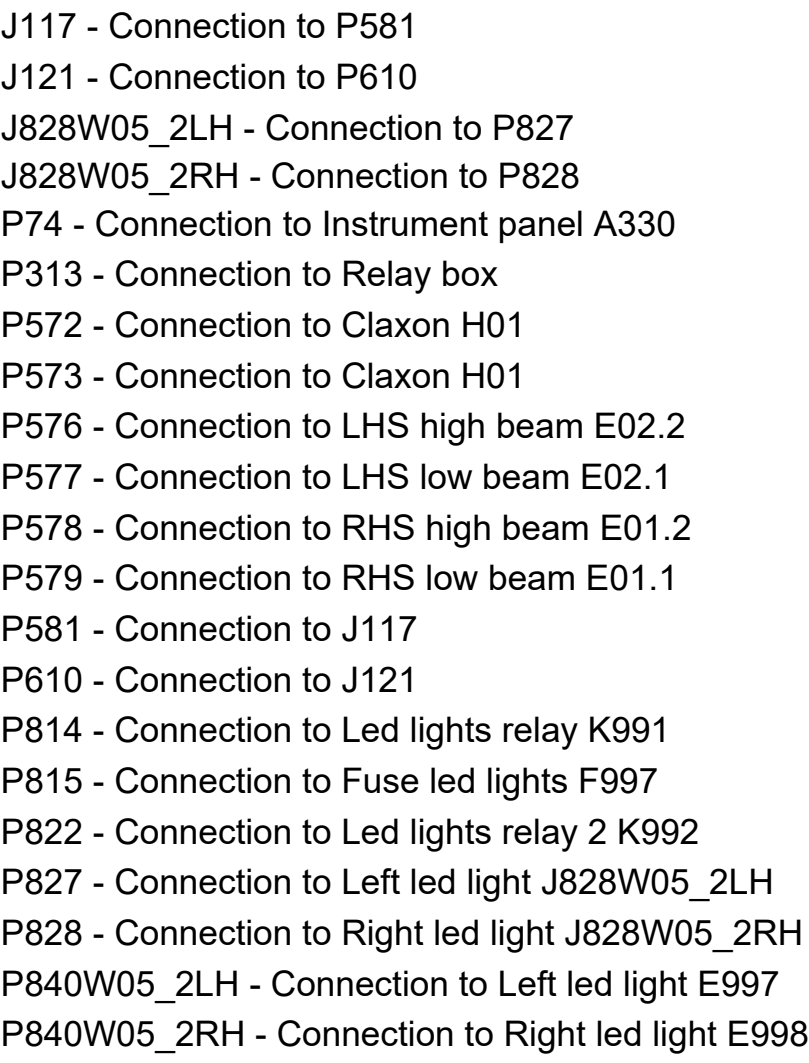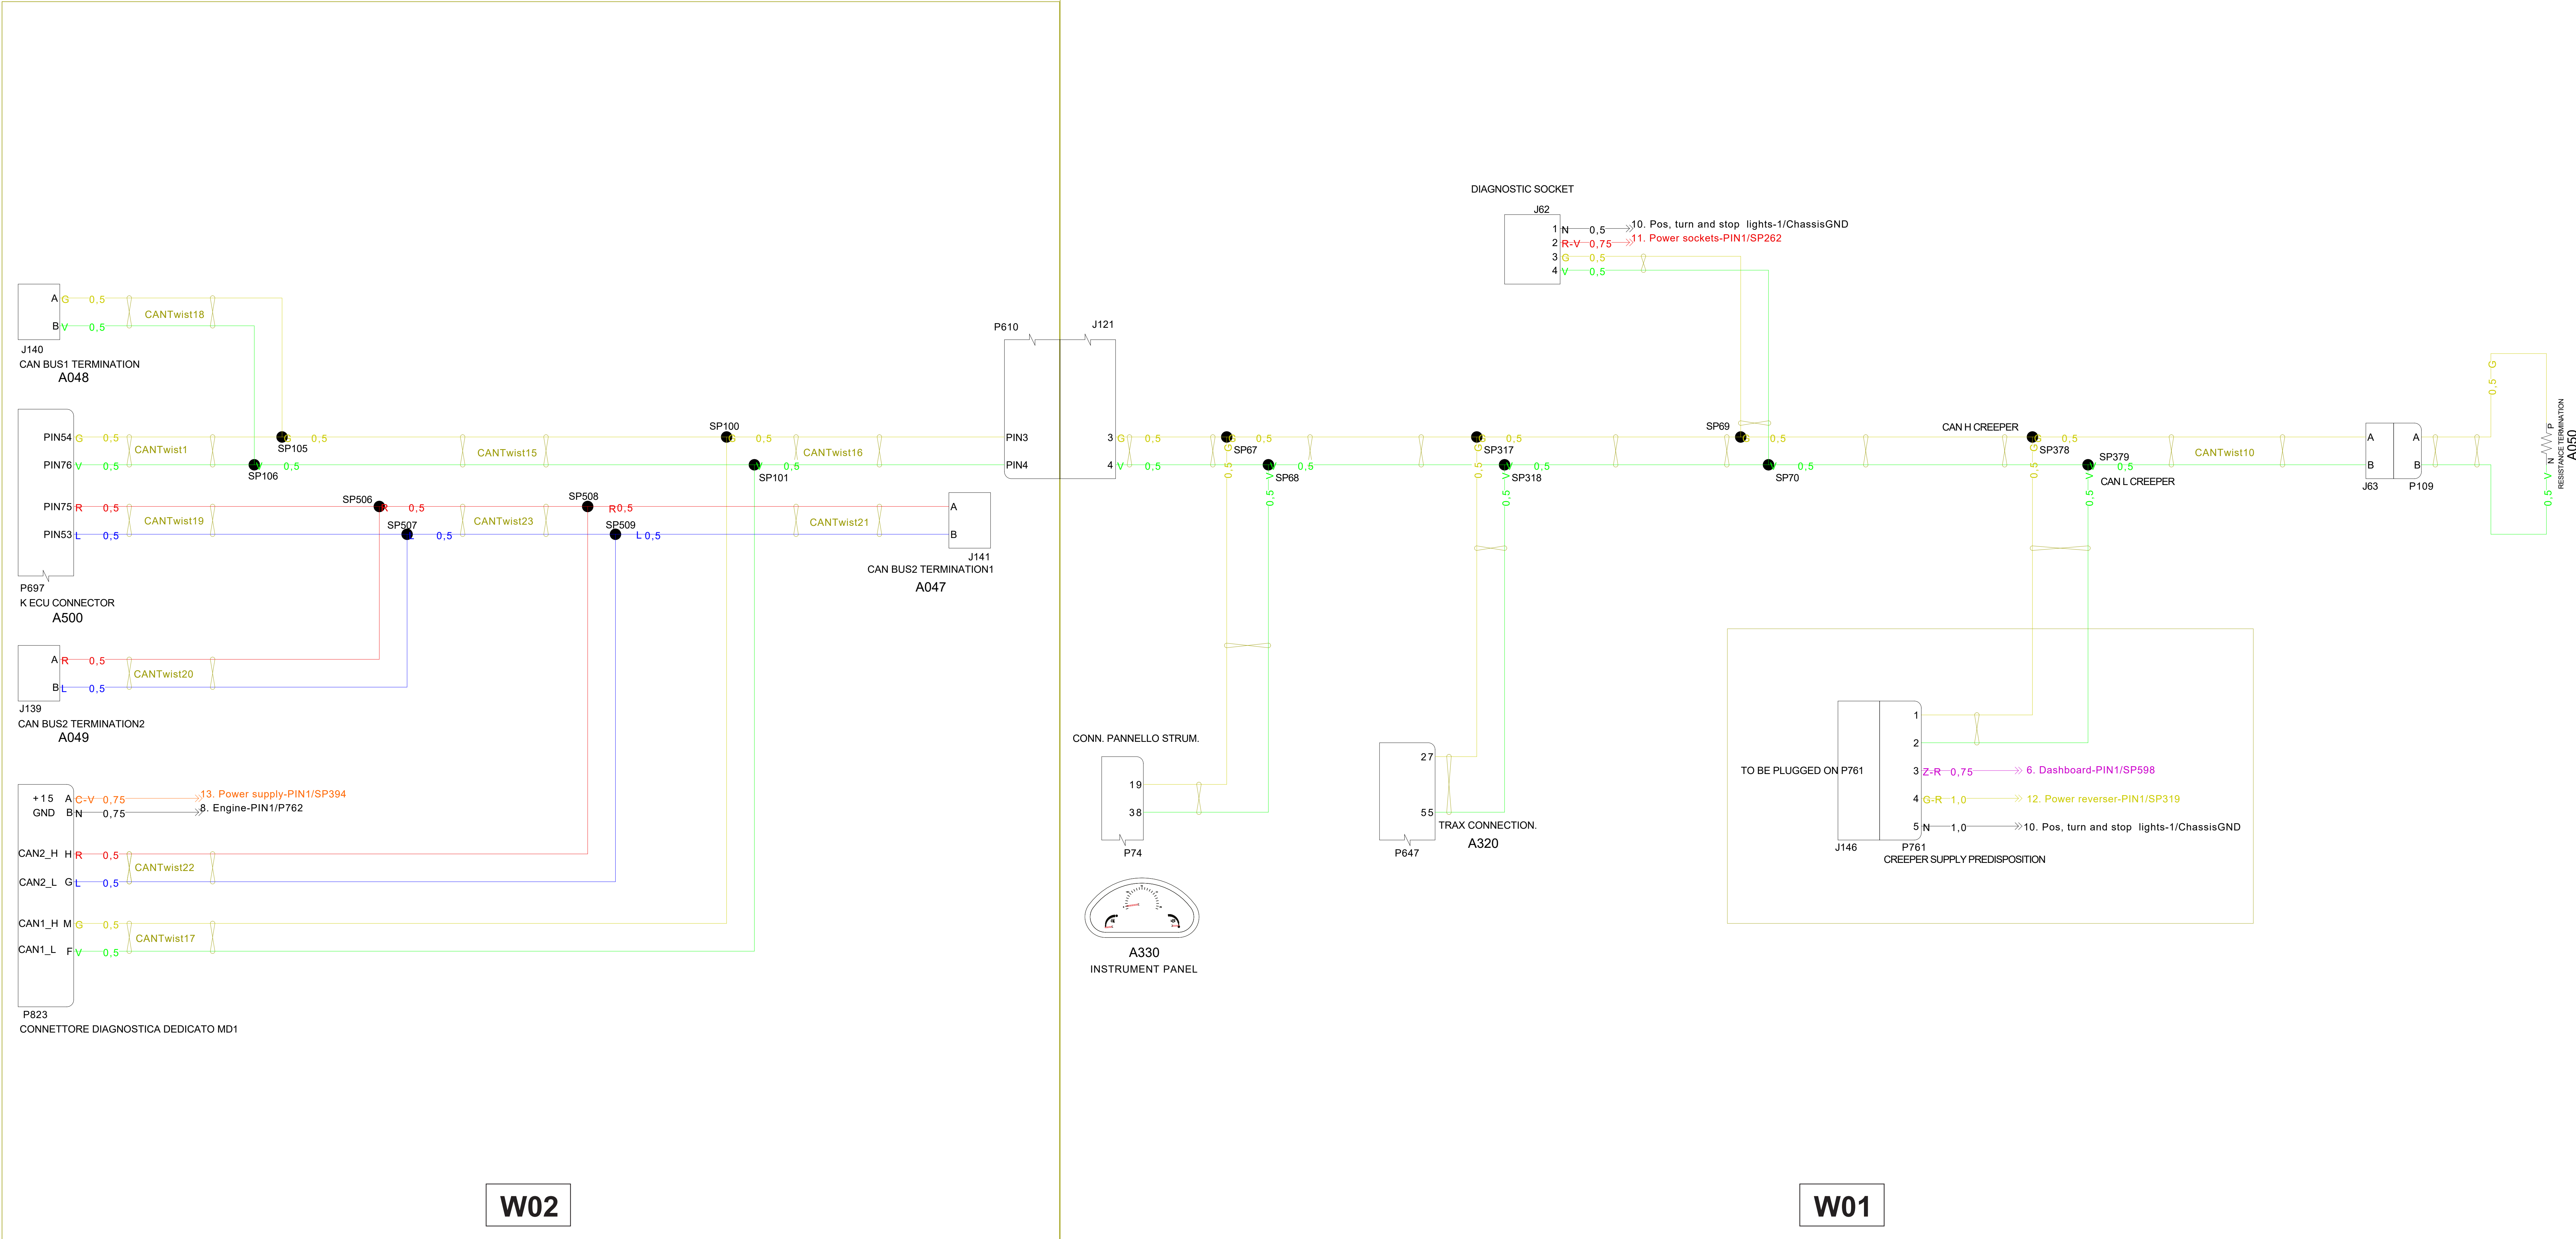J88 - Connection to P92
J170 - Connection to P781
J833 - Connection to Deport predisposition P832
P92 - Connection to J88
P311 - Connection to Beacon switch S36
P312 - Connection to Air seat M06
P450 - Connection to Rear work light S61
P542 - Connection to Beacon light E27
P543 - Connection to Beacon light E27
P746 - Connection to Fuel level sensor rear tank B03
P781 - Connection to J170
P781 - Connection to Fuel level sensor lower tank B976 (option)
P832 - Connection to J833







J62 - Diagnostic socket connection
J63 - Connection to P109
J121 - Connection to P610
J139 - Connection to CAN Bus2 termination2 A049
J140 - Connection to CAN Bus1 termination A048
J141 - Connection to CAN Bus2 termination1 A047
J146 - Connection to Creeper supply predisposition P761
P74 - Connection to Instrument panel A330
P109 - Connection to CAN Bus resistor A050
P610 - Connection to J121
P647 - Connection to Transmission control unit A320
P697 - Connection to Engine control unit A500
P761 - Connection to J146
P823 - Diagnostic MD1 connection










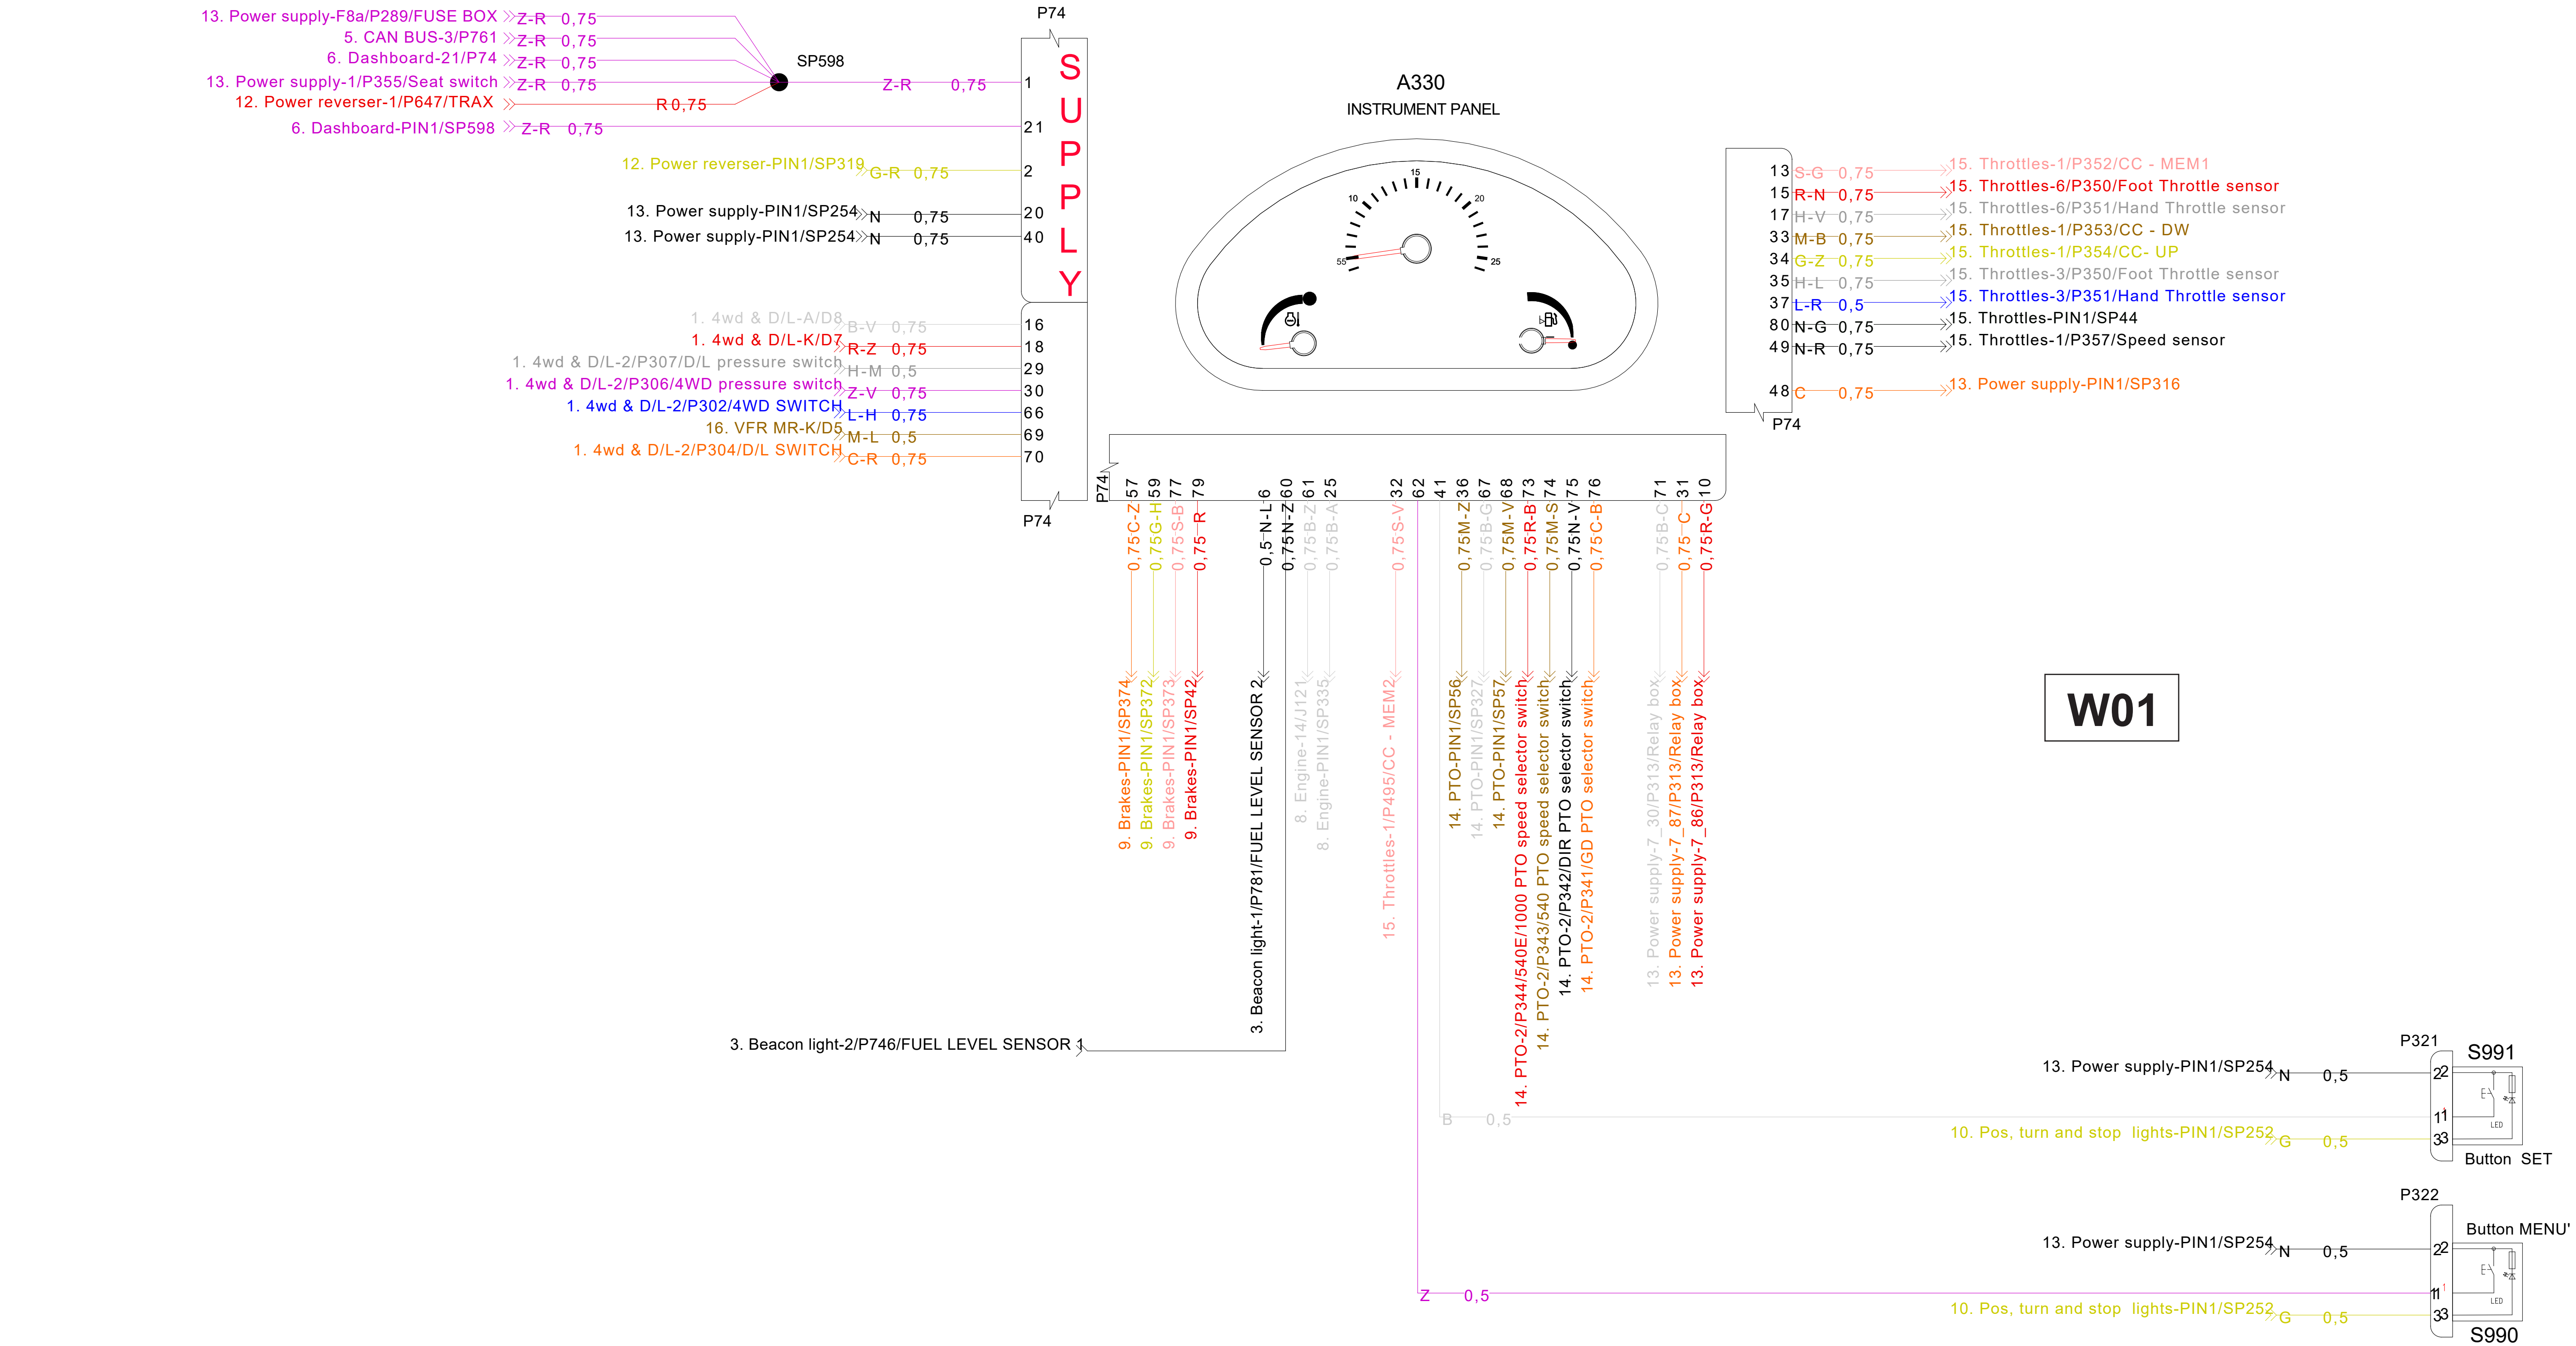




W01

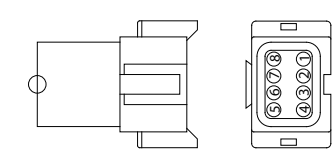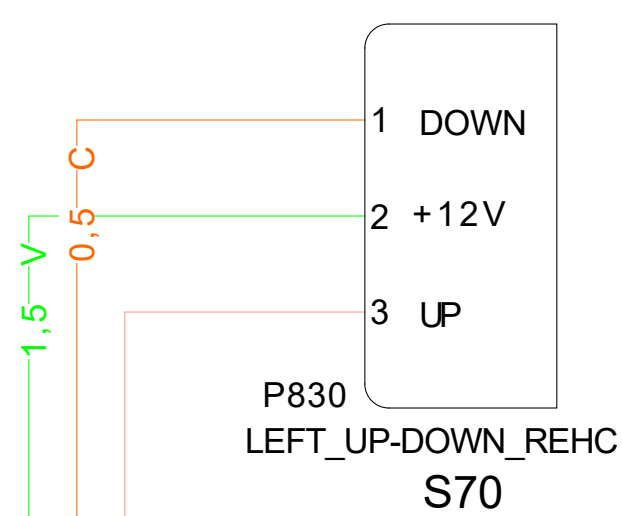
W11_1




J133

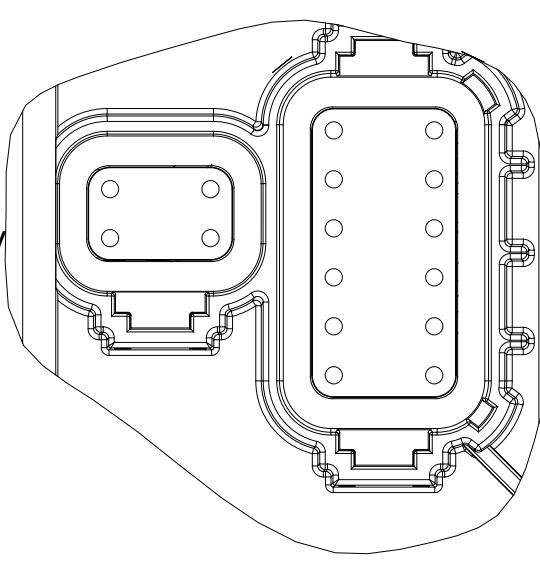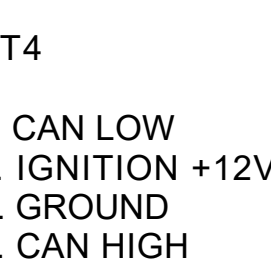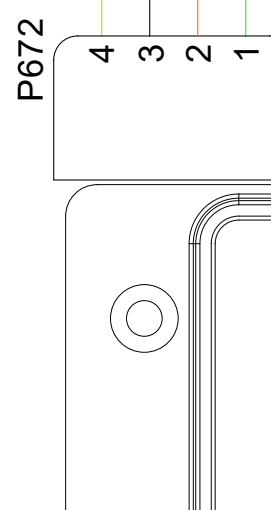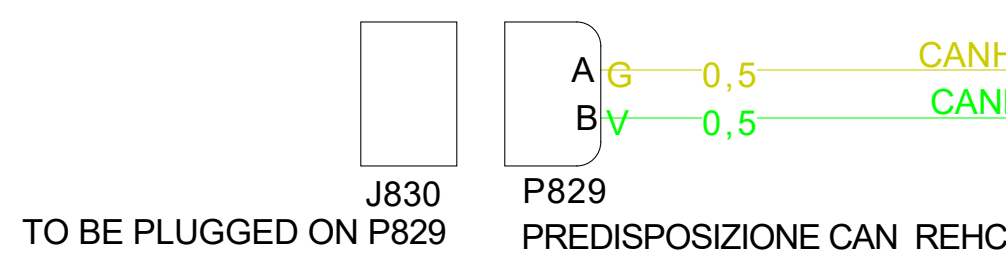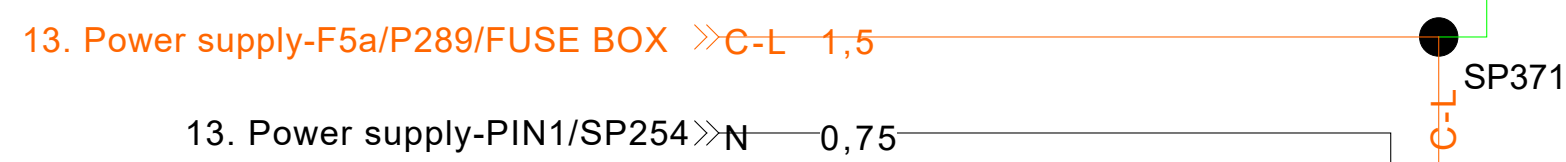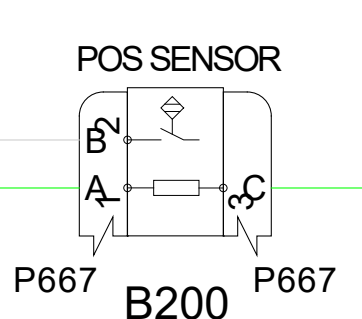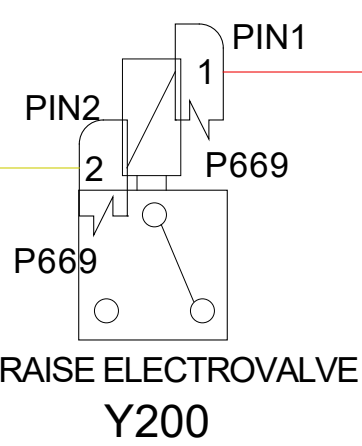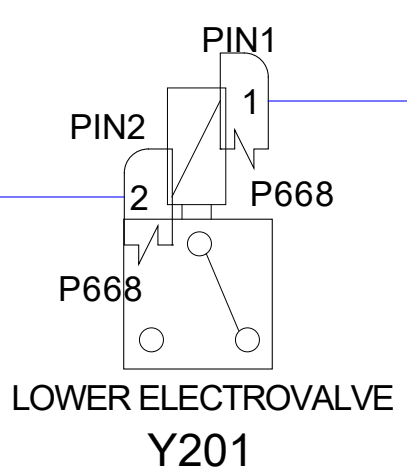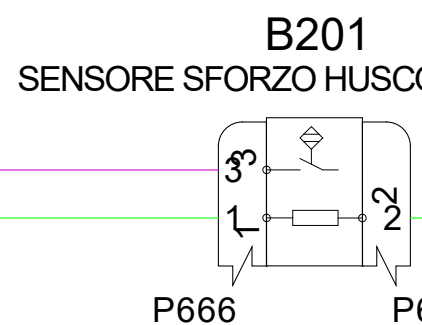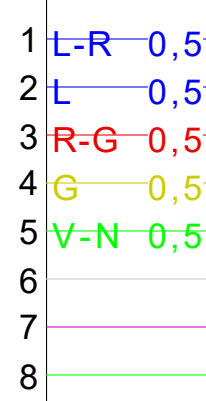

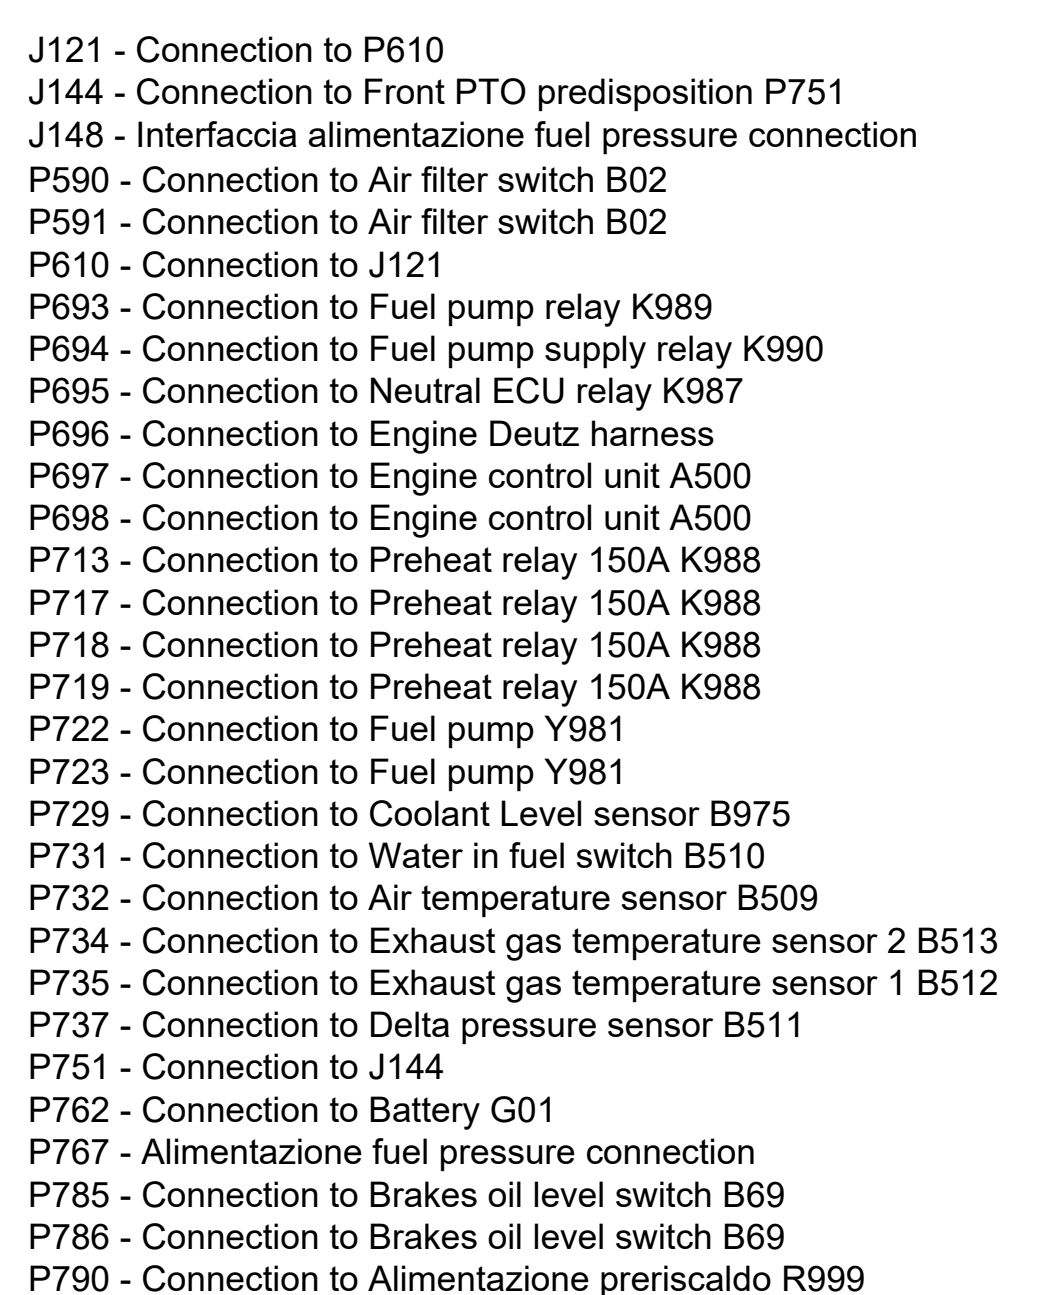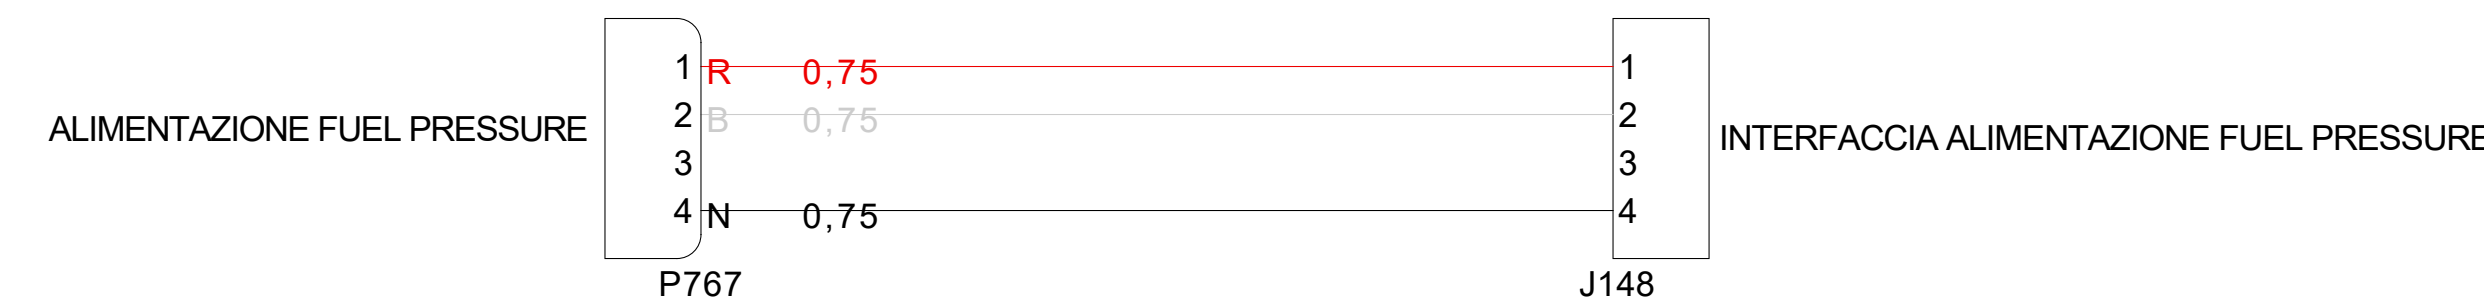


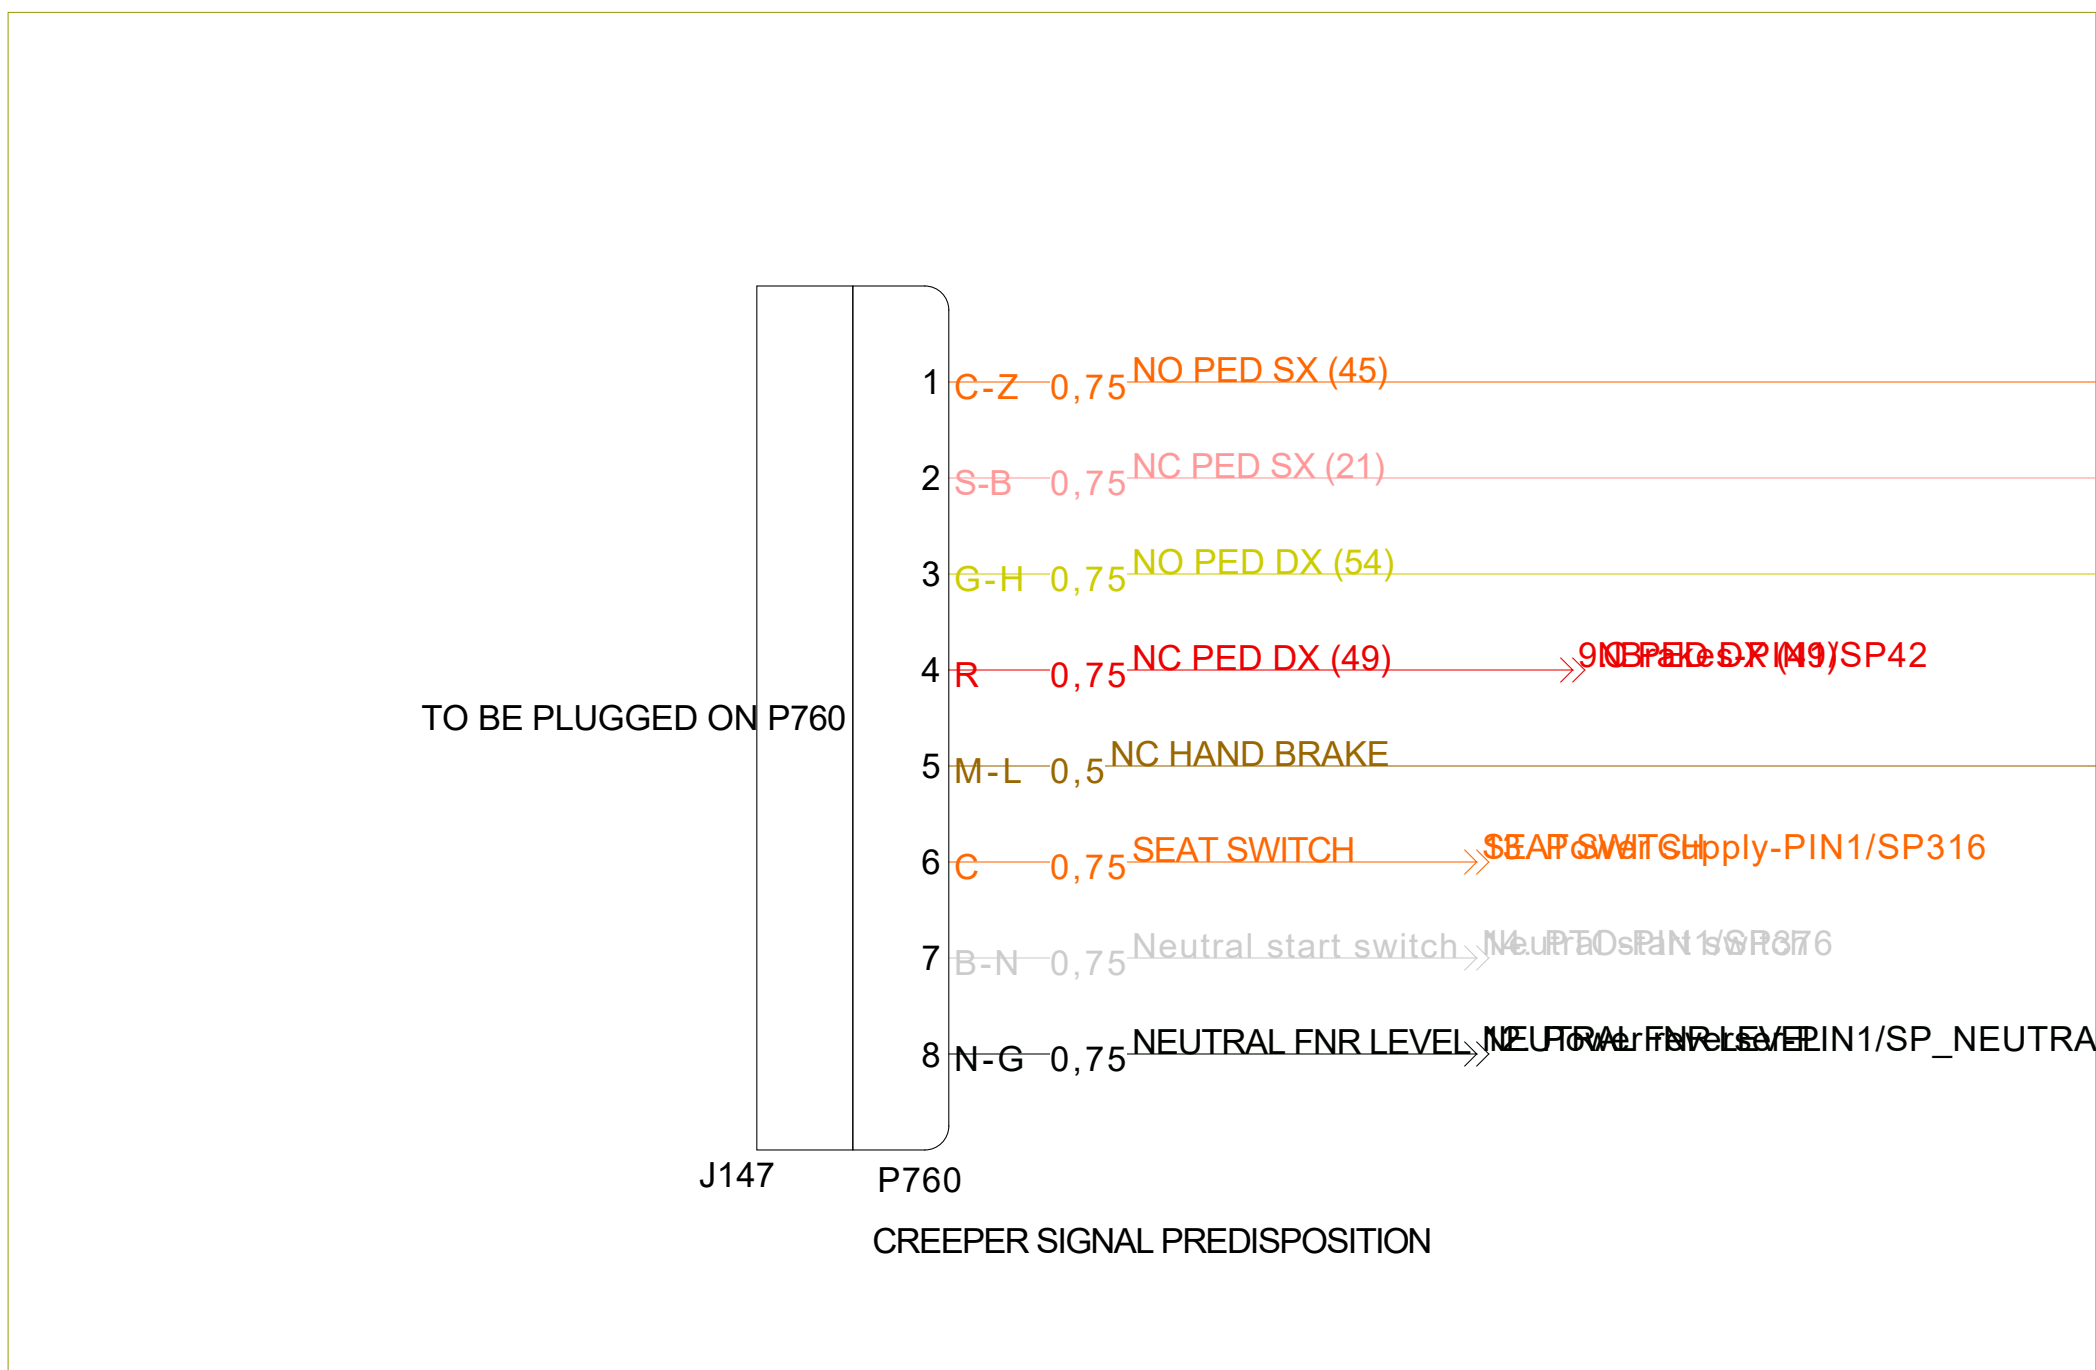

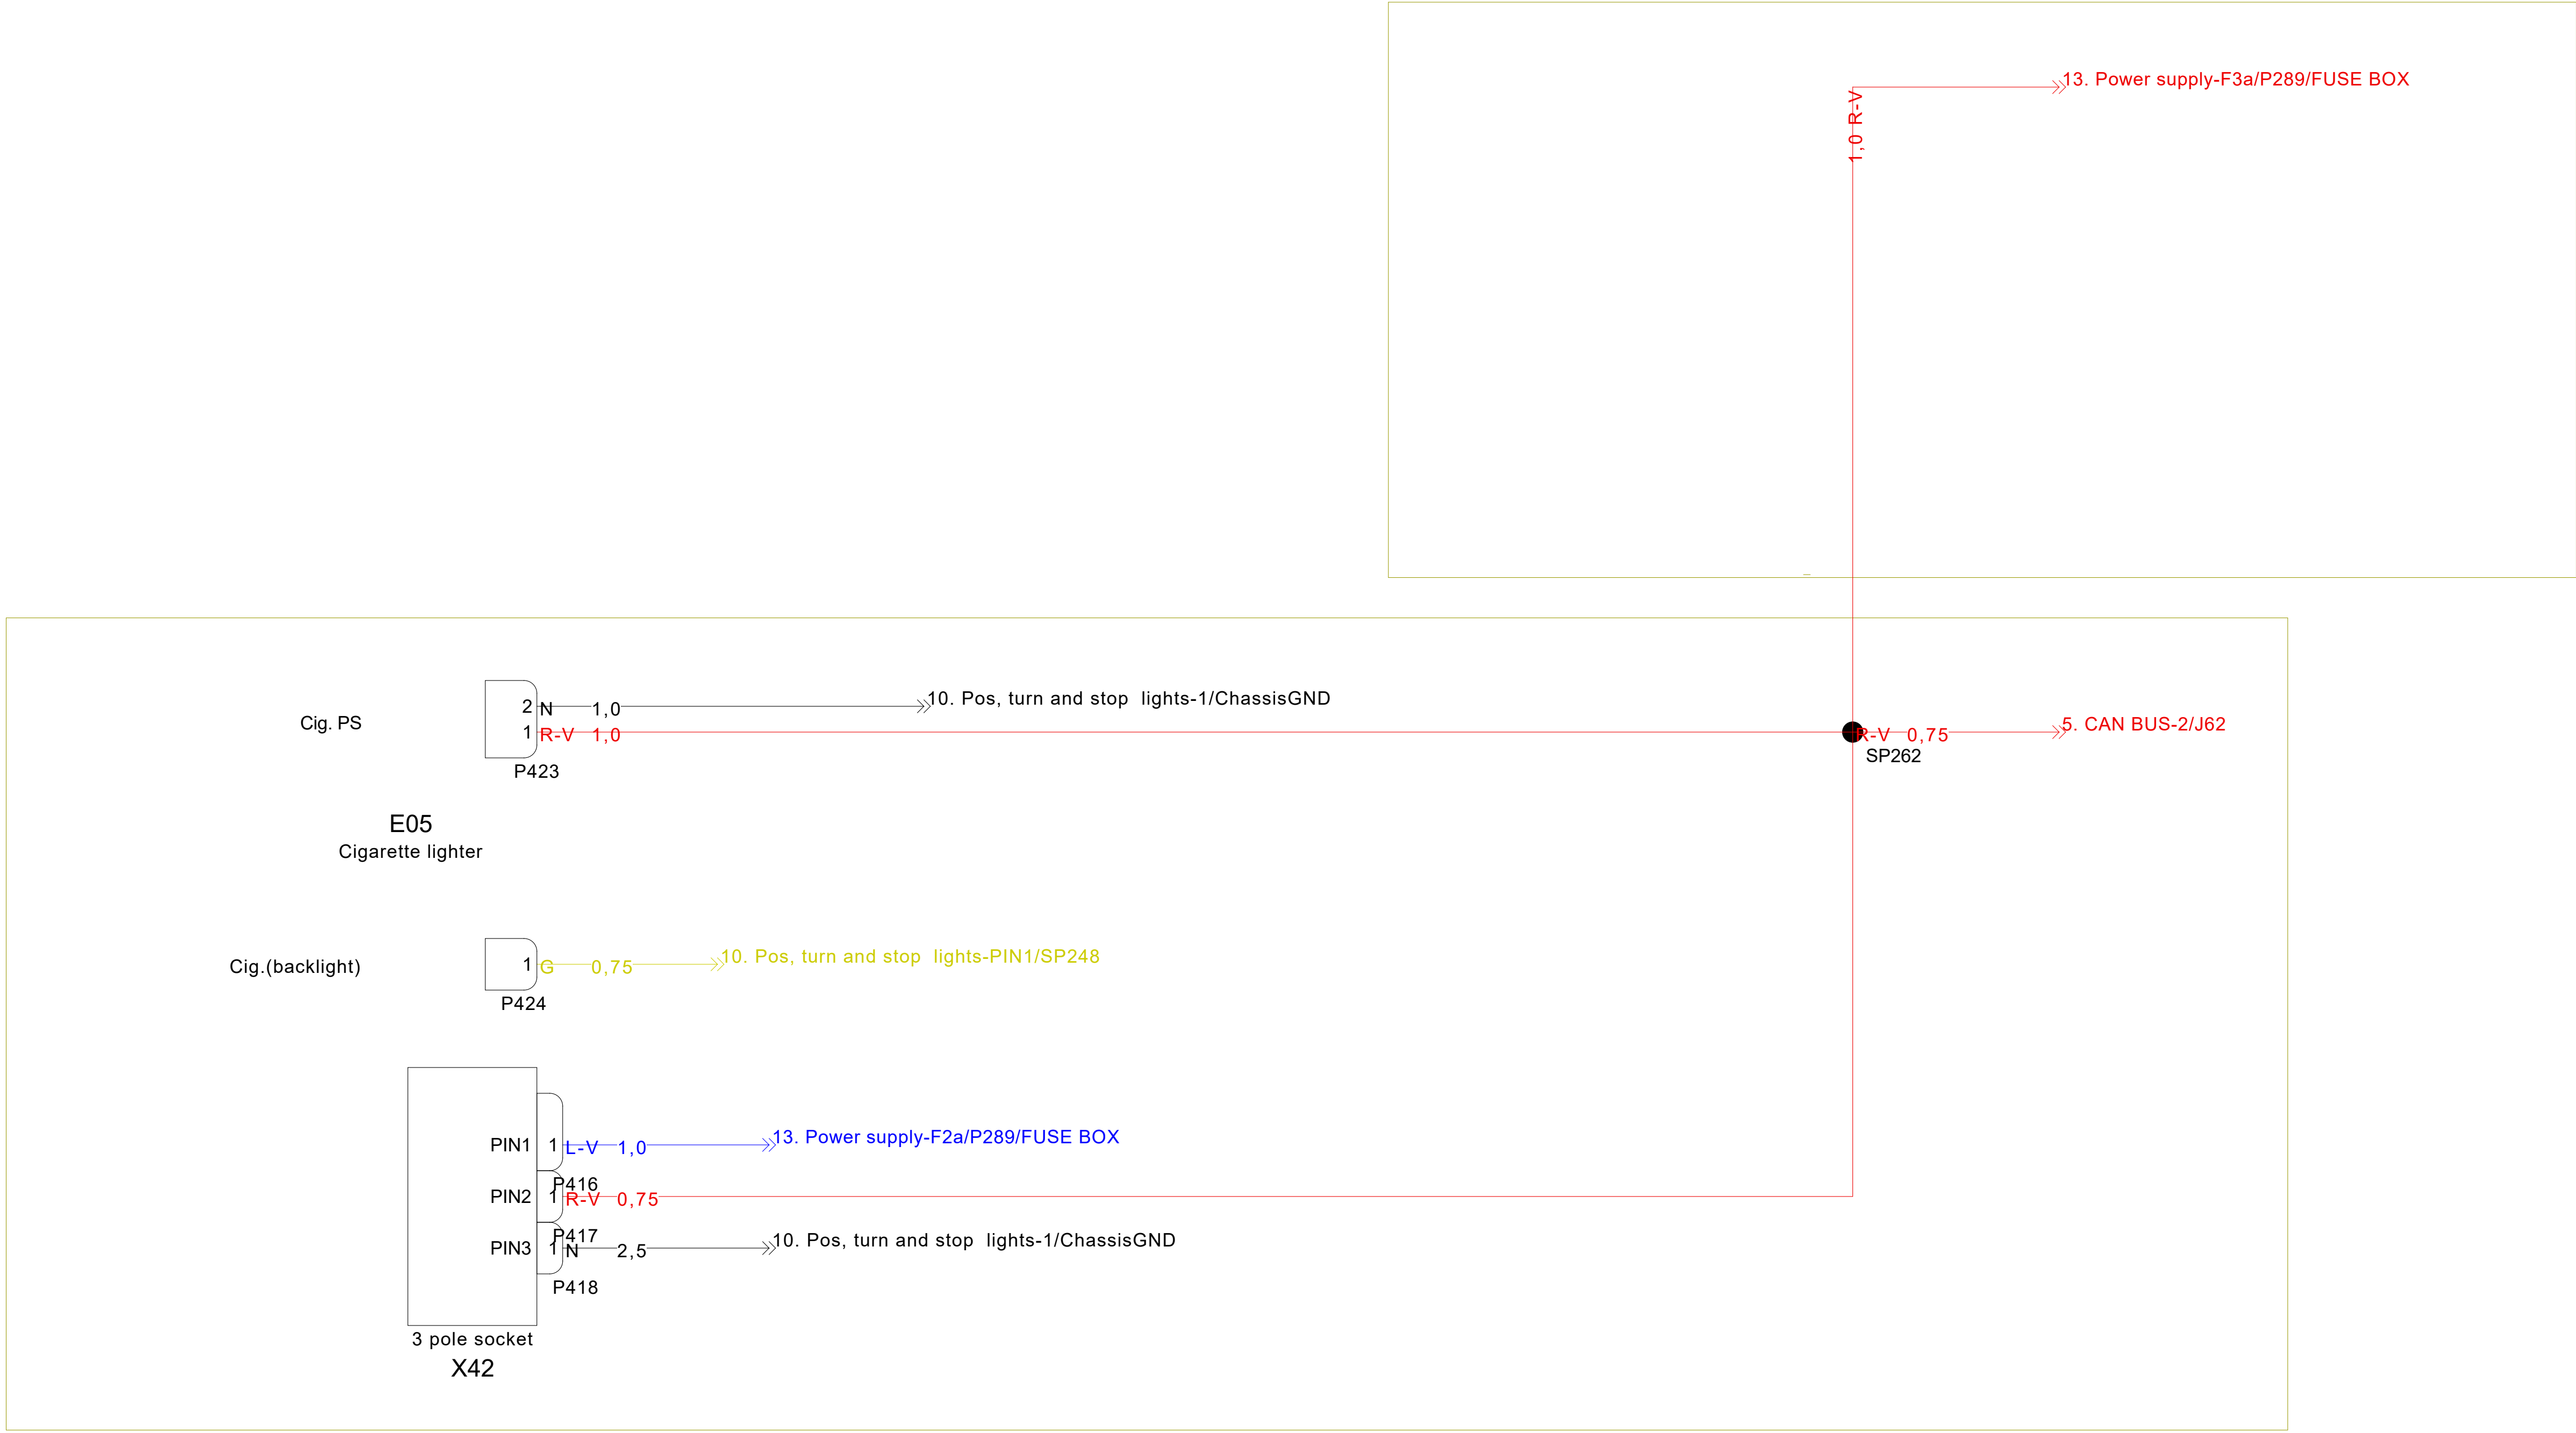


W01

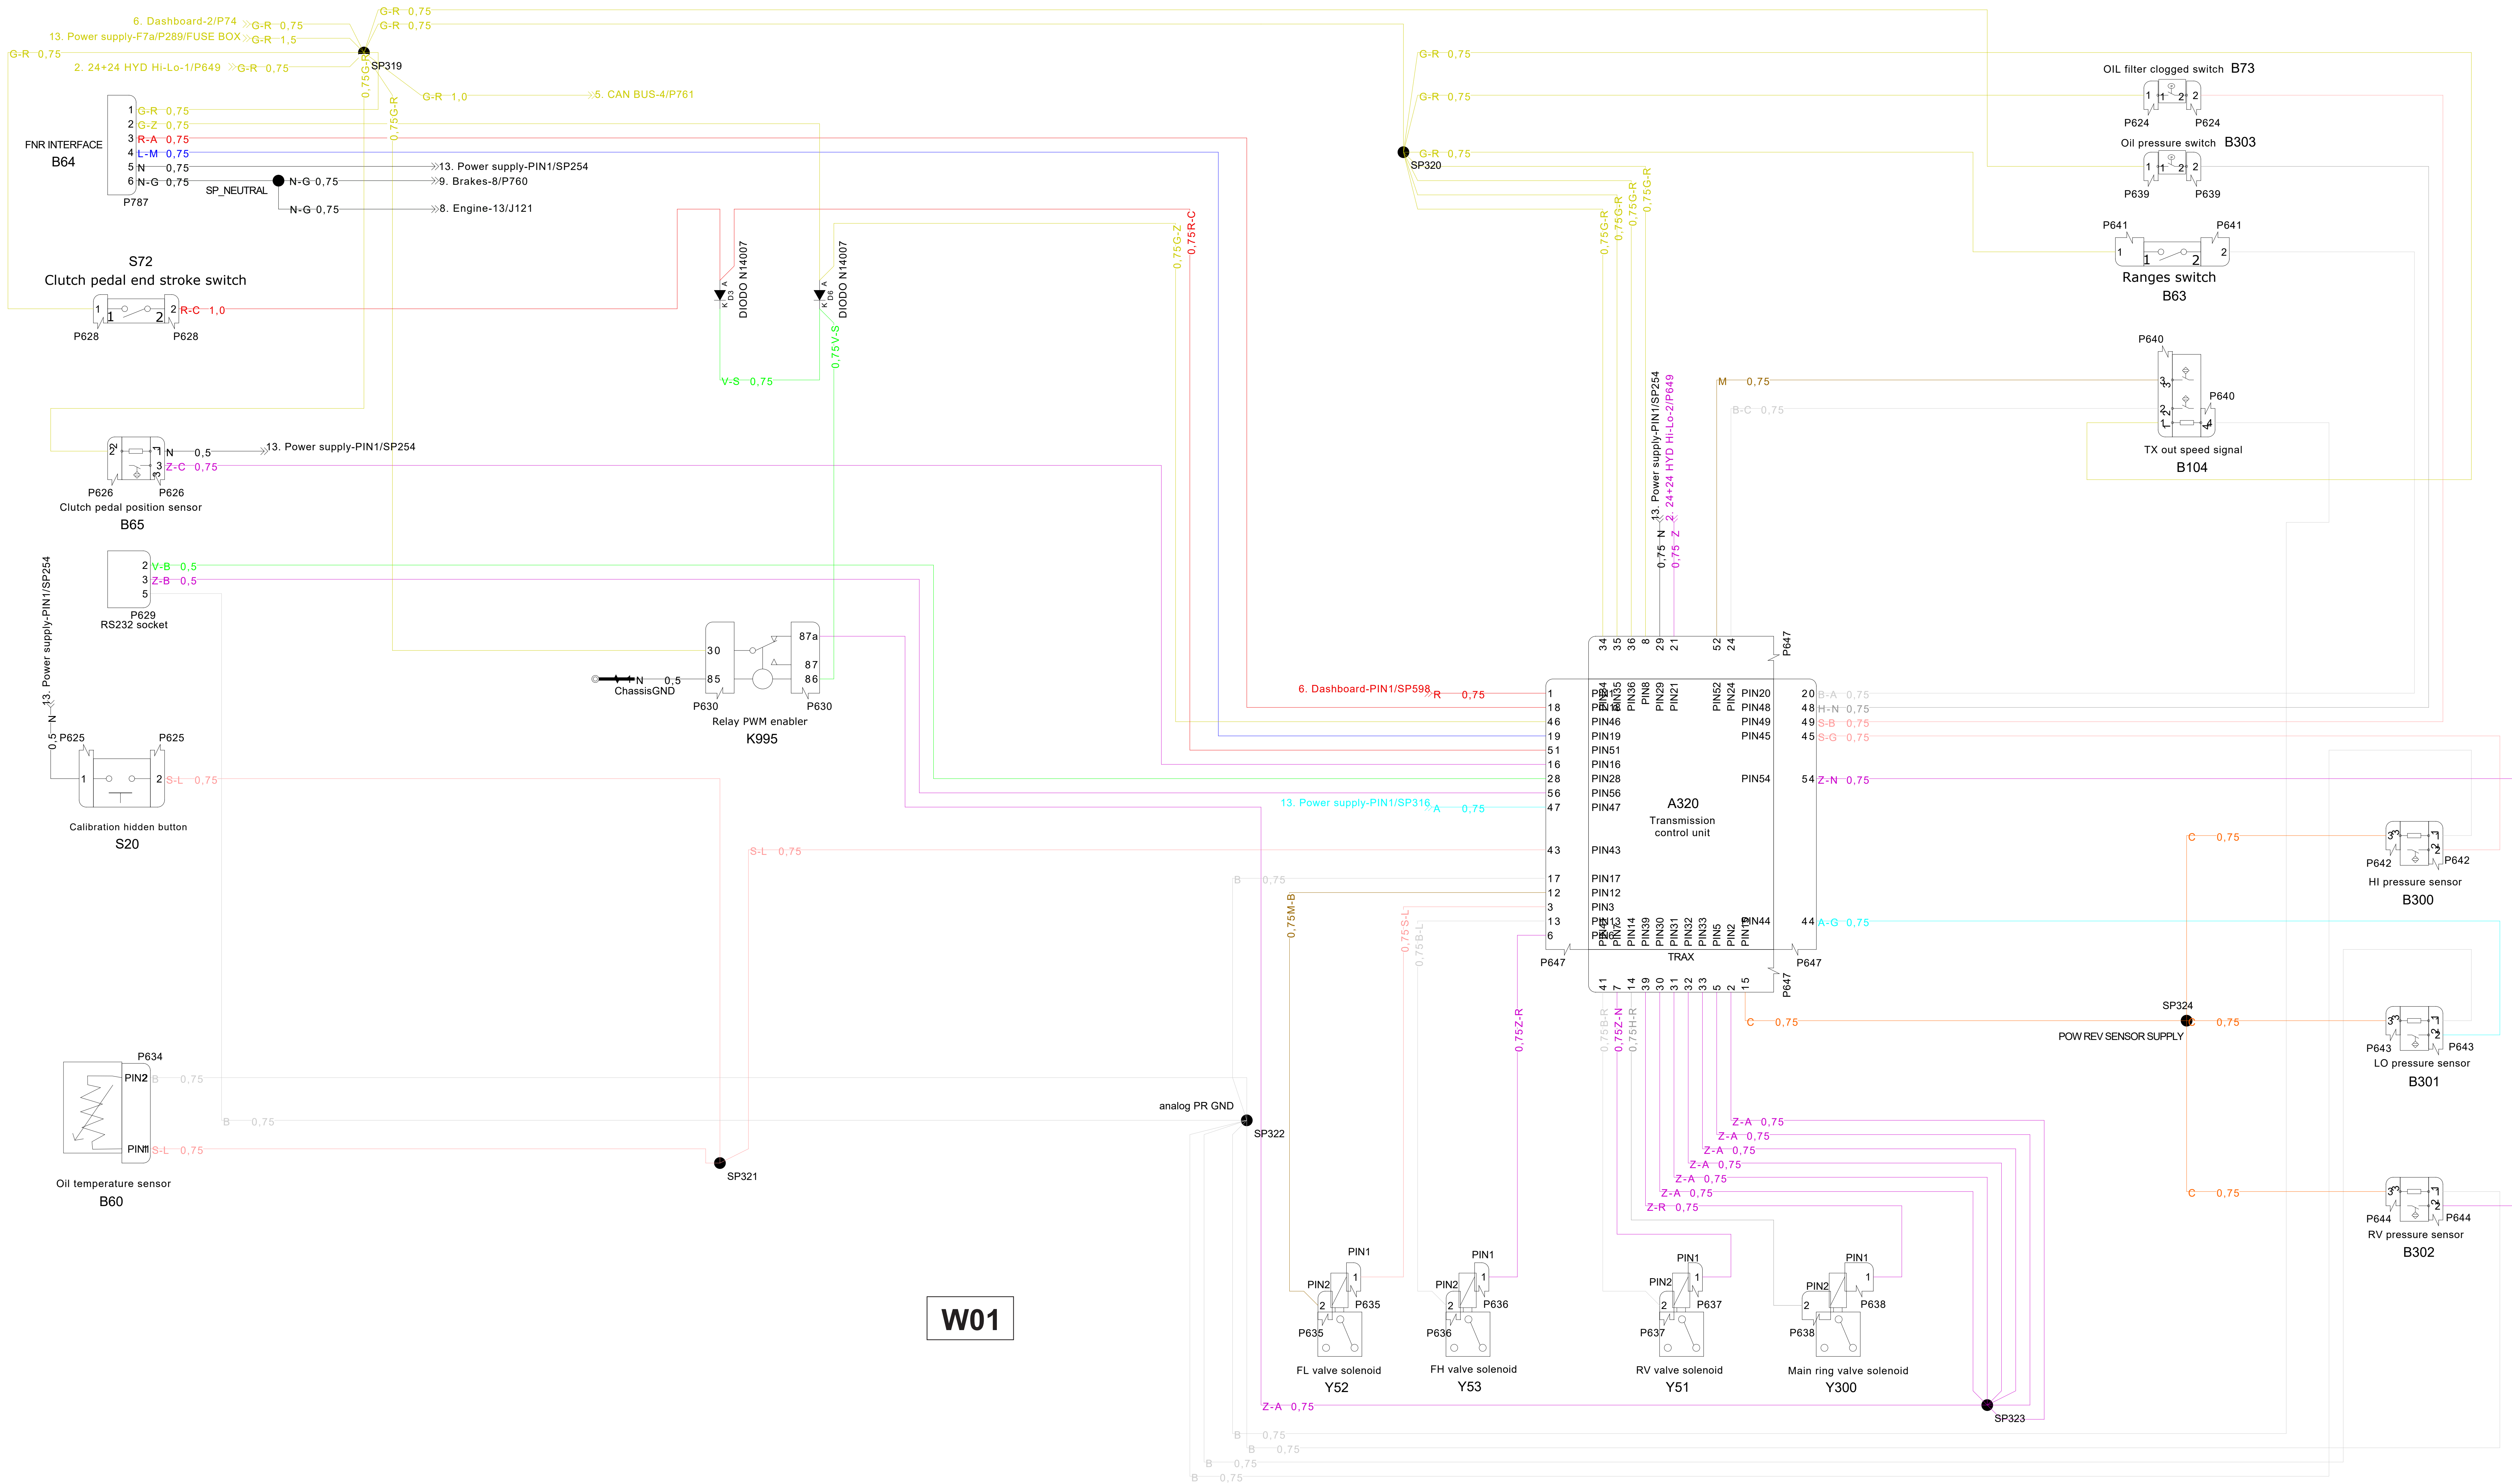
P416 - Connection to 3 pole socket X42
P417 - Connection to 3 pole socket X42
P418 - Connection to 3 pole socket X42
P423 - Connection to Cigarette lighter E05
P424 - Connection to Cigarette lighter E05




P624 - Connection to Transmission oil filter clogged switch B73
 P625 - Connection to Calibration hidden button S20
 P626 - Connection to Clutch pedal position sensor B65
 P628 - Connection to Clutch pedal end stroke switch S72
 P629 - Socket RS232 connection
 P630 - Connection to PWM enabler K995
 P634 - Connection to Transmission oil temperature sensor B60
 P635 - Connection to FL solenoid valve Y52
 P636 - Connection to FH solenoid valve Y53
 P637 - Connection to RV solenoid valve Y51
 P638 - Connection to Main ring solenoid valve Y300
 P639 - Connection to Transmission oil pressure switch B303
 P640 - Connection to Transmission out speed signal B104
 P641 - Connection to Ranges switch B63
 P642 - Connection to HI pressure sensor B300
 P643 - Connection to LO pressure sensor B301
 P644 - Connection to RV pressure sensor B302
 P647 - Connection to Transmission control unit A320
 P787 - Connection to FNR lever B64



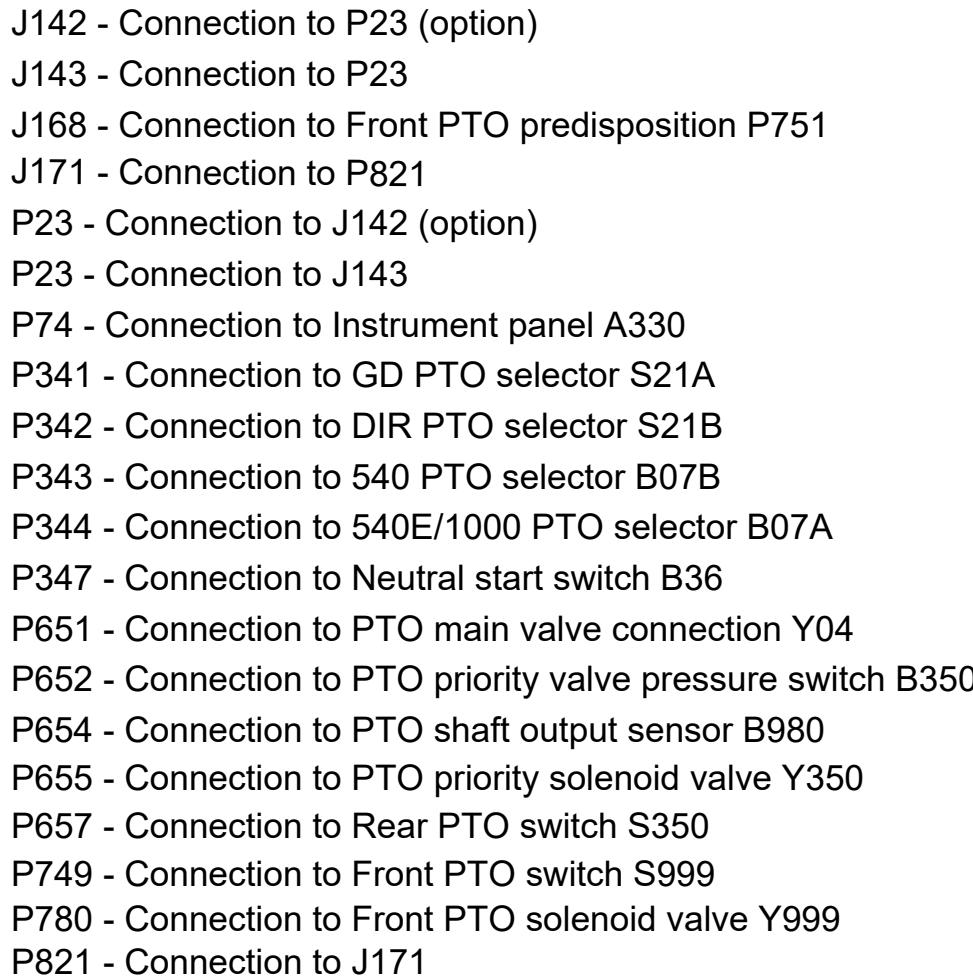


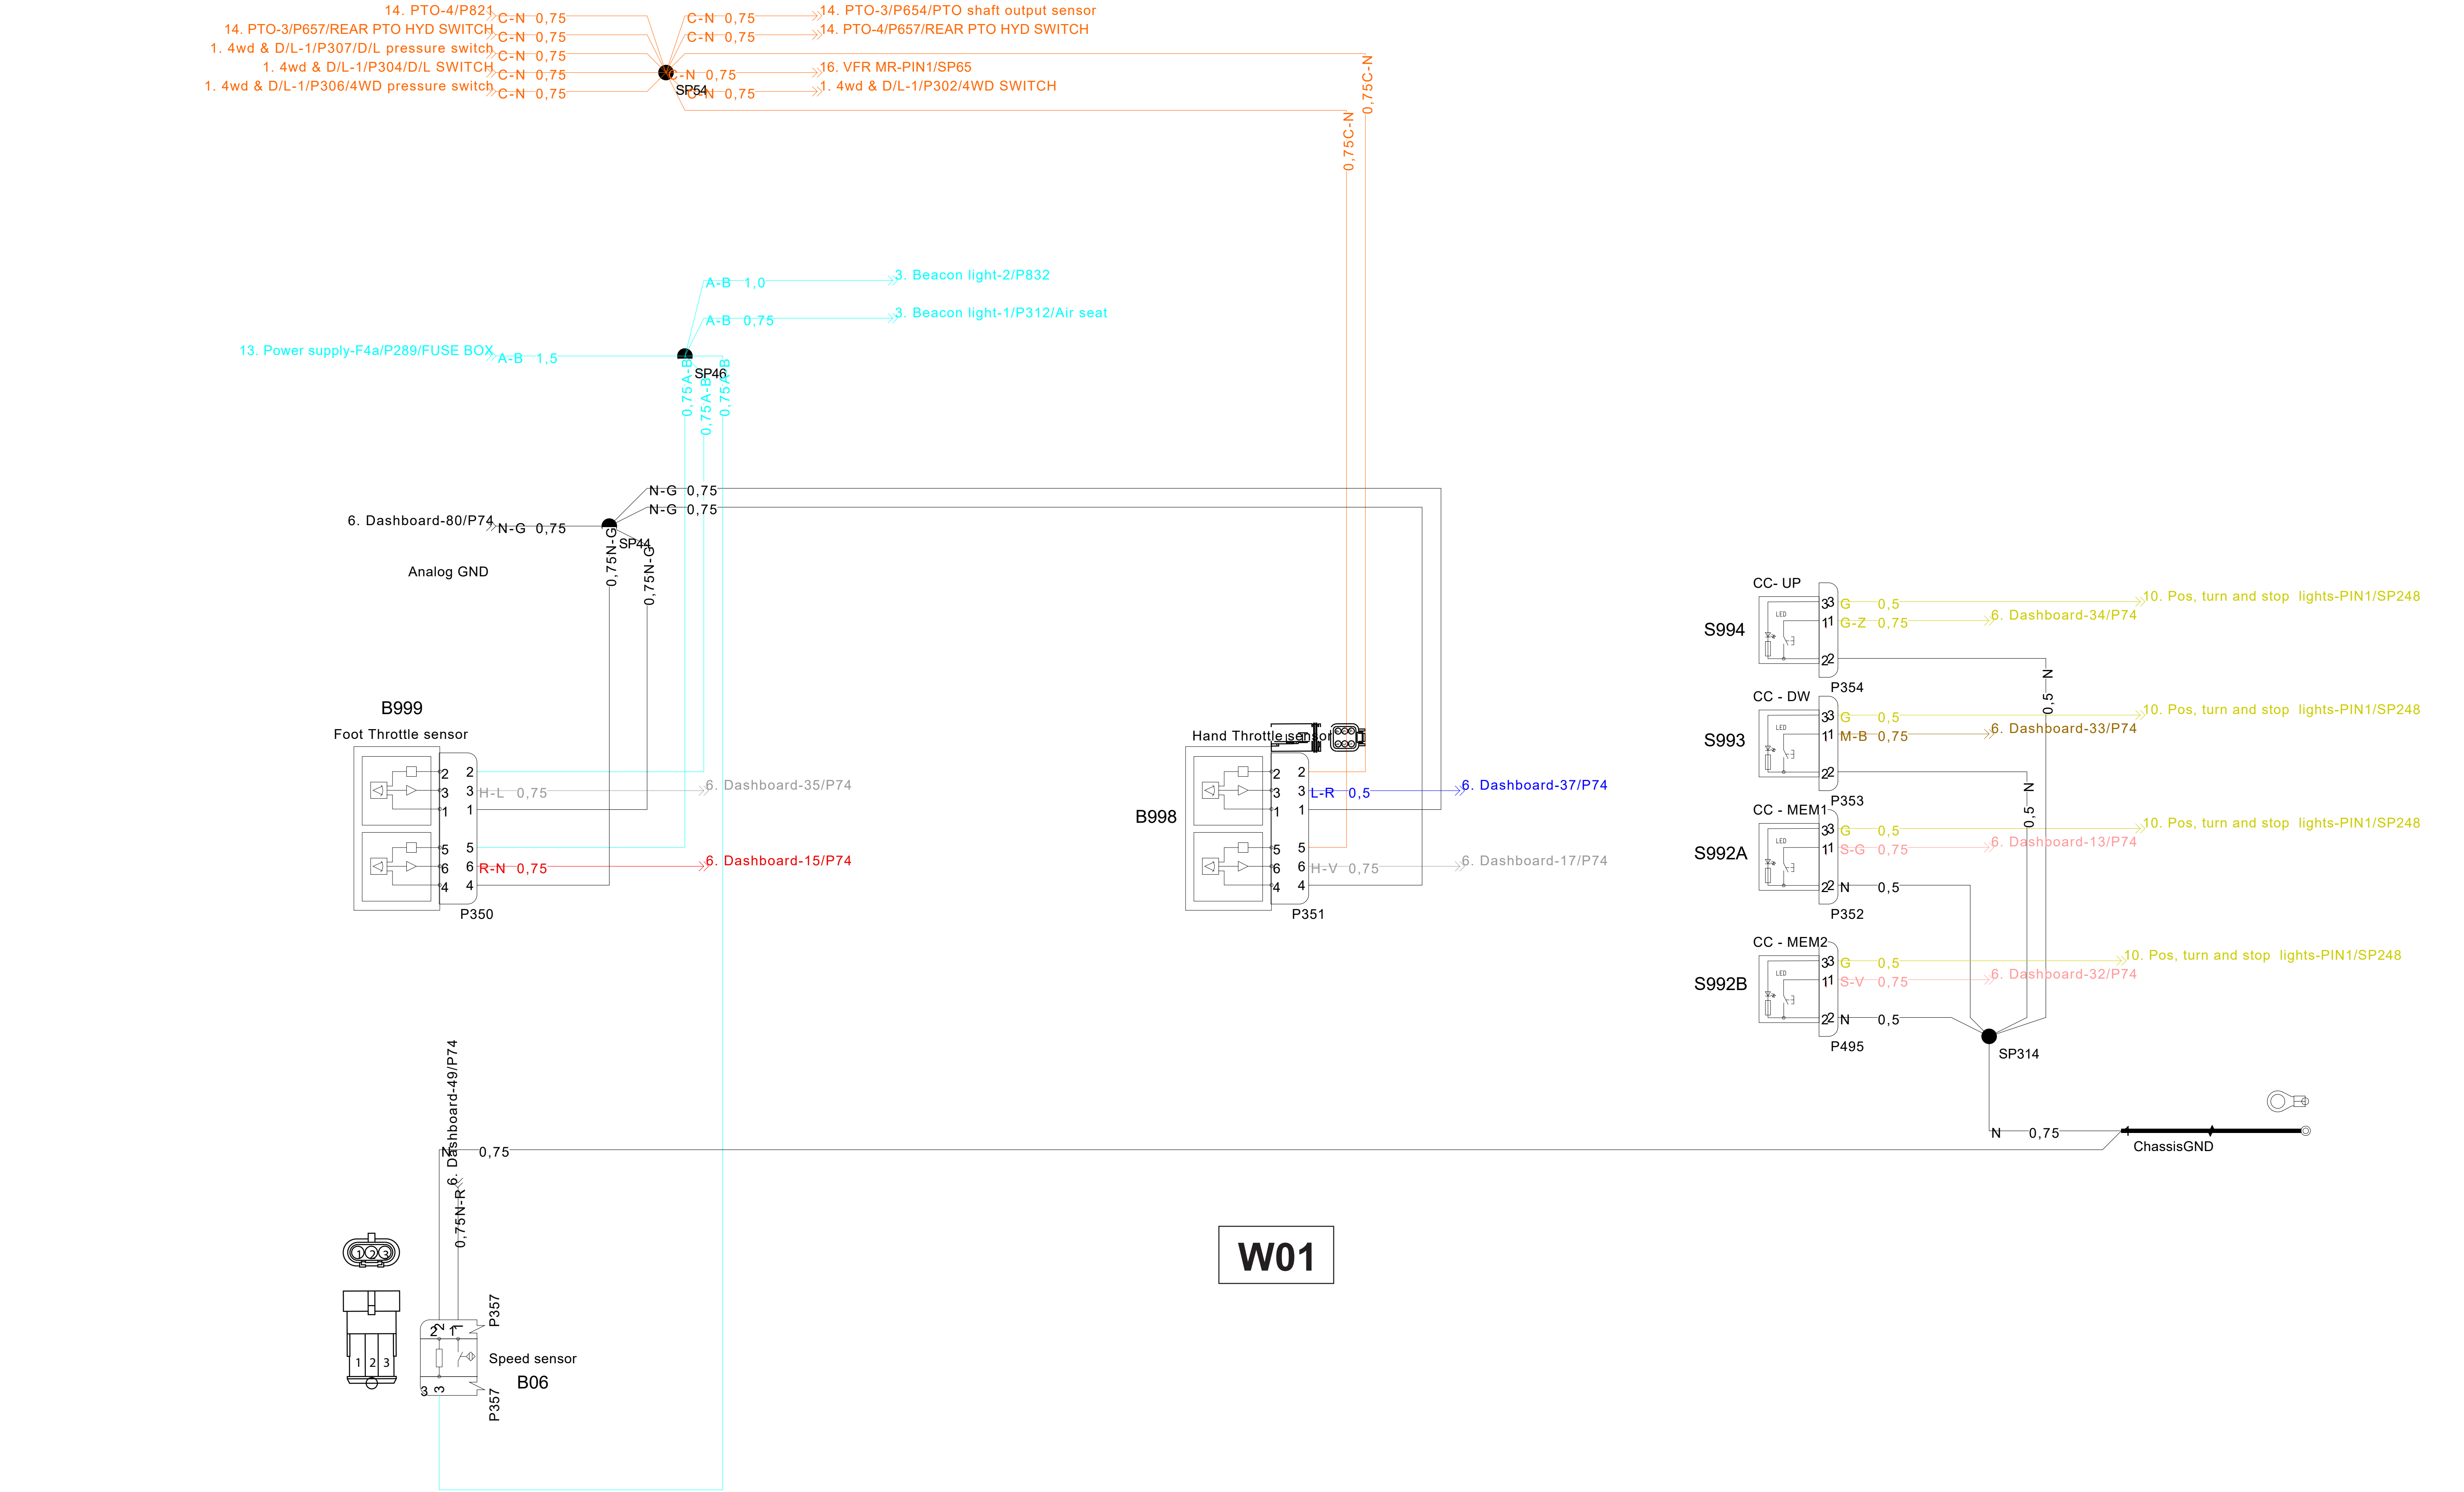

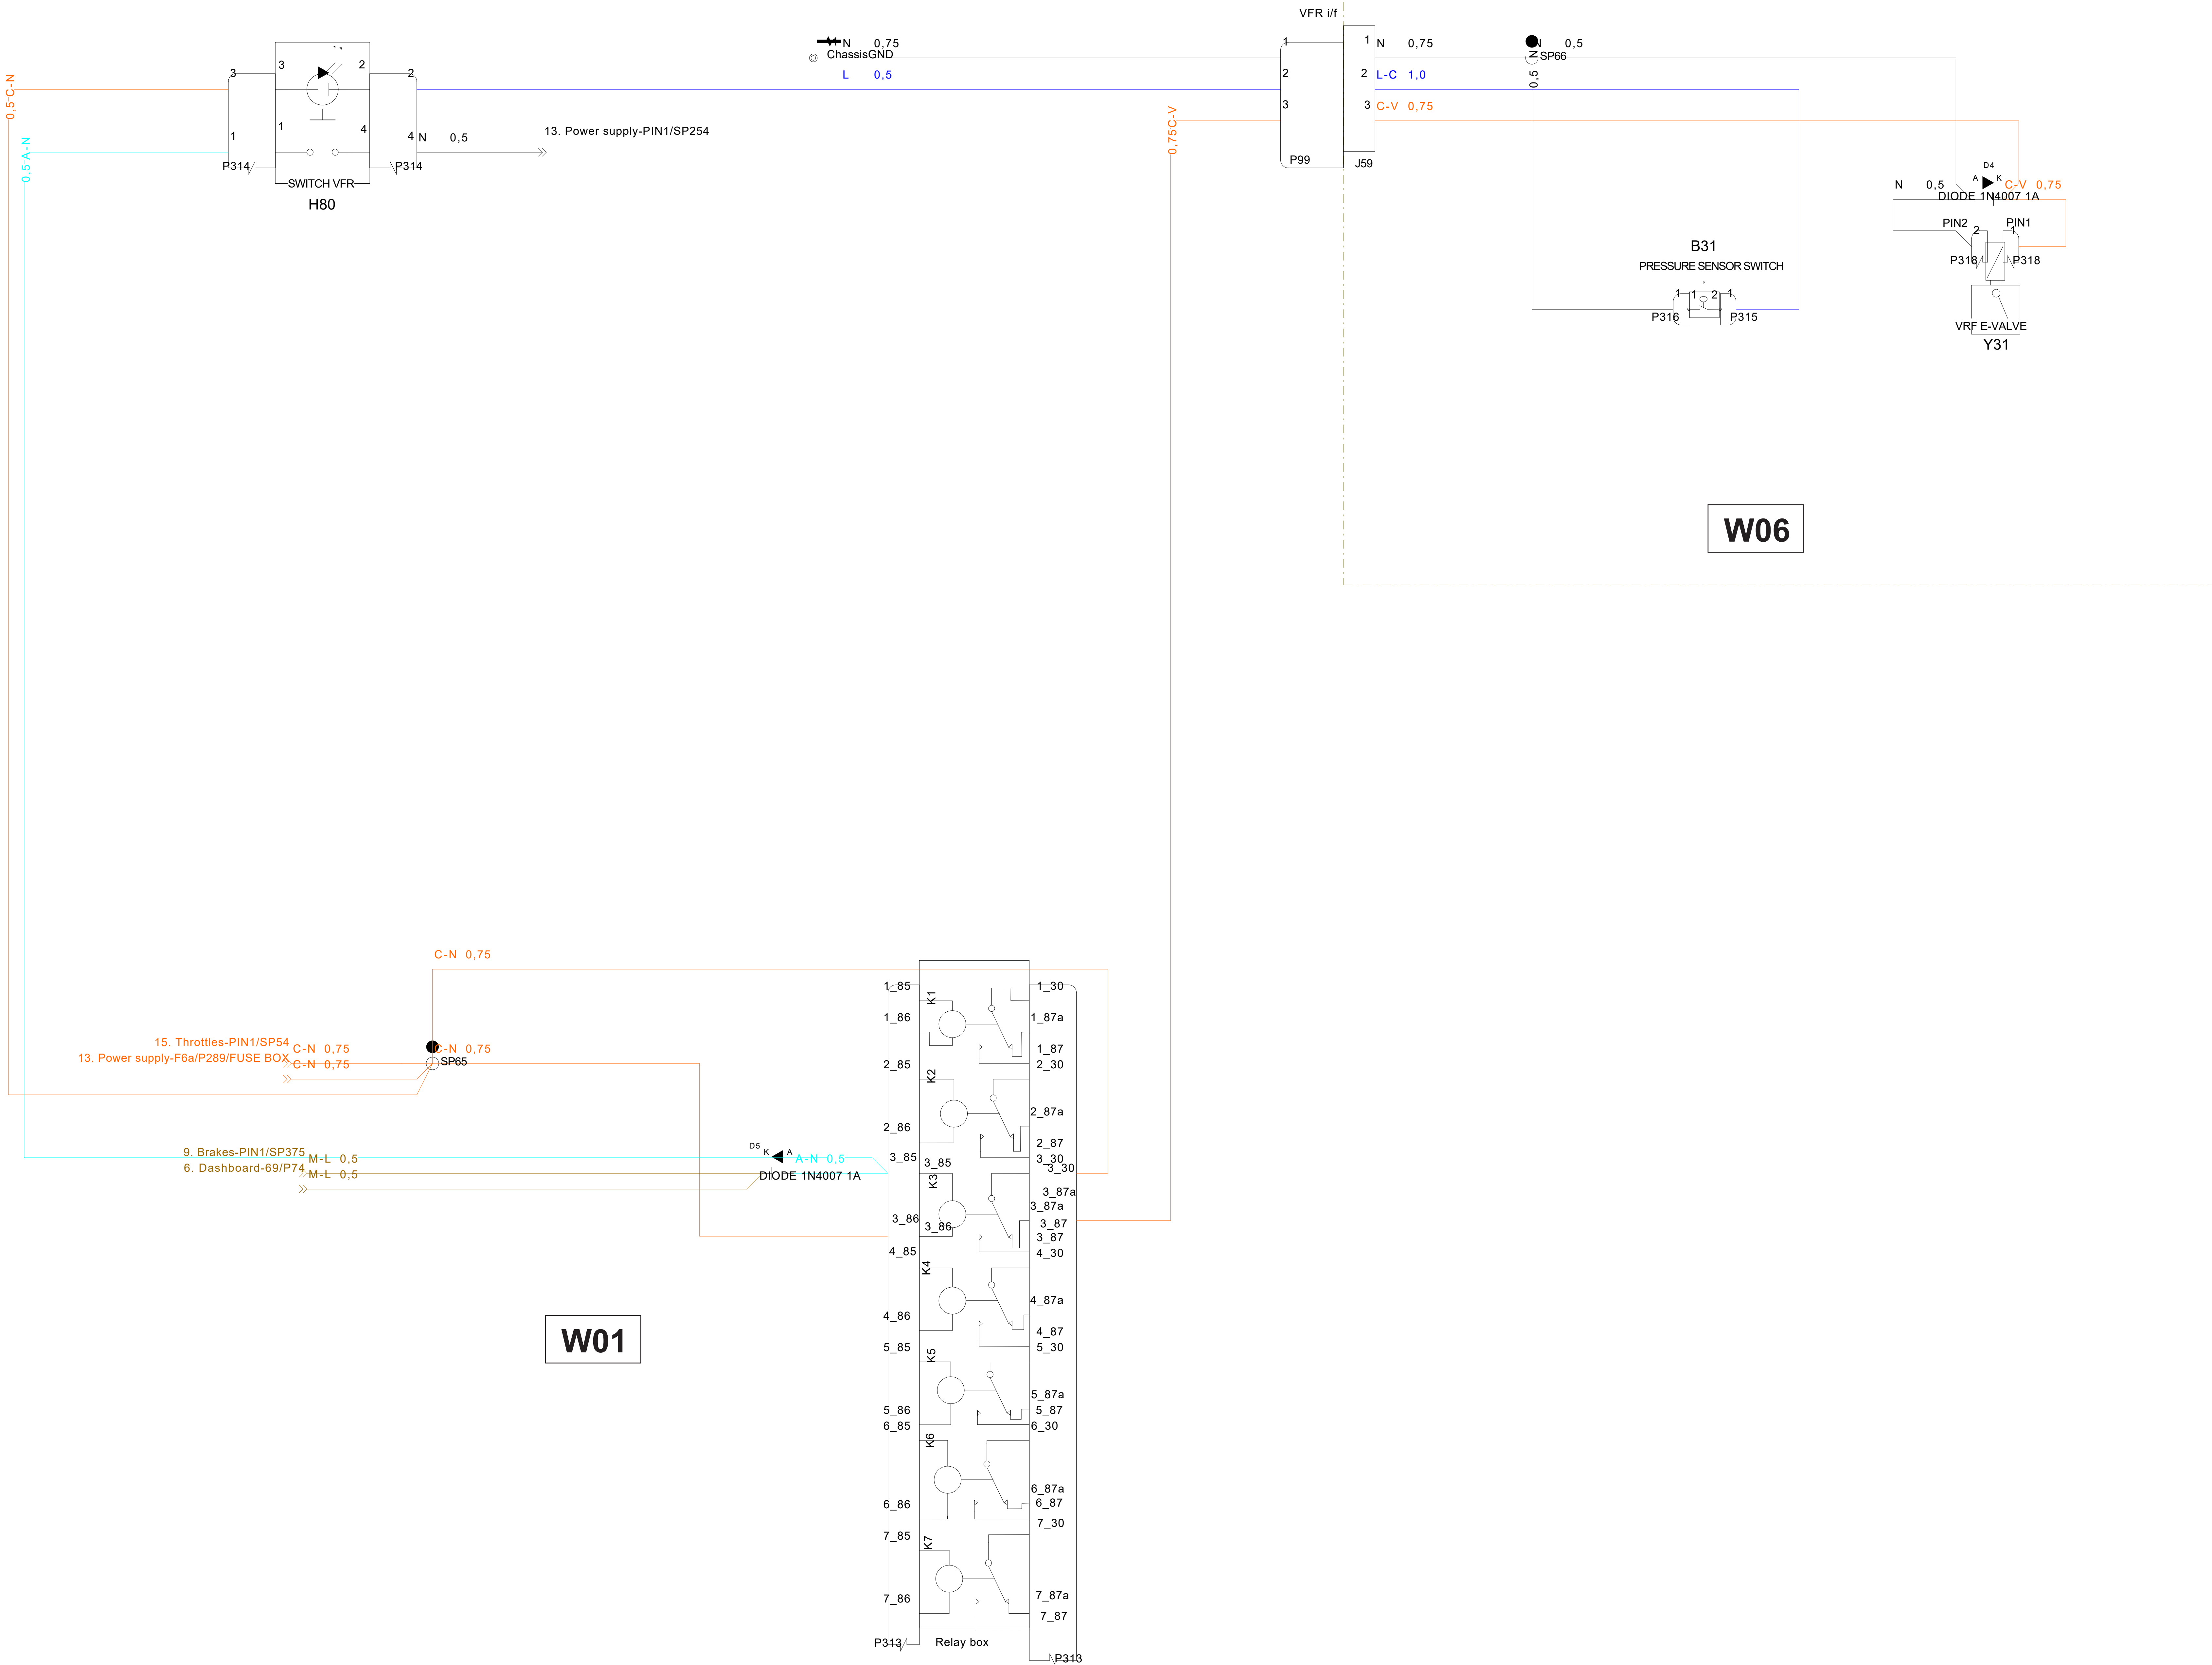P350 - Connection to Foot throttle sensor B999
P351 - Connection to Hand throttle sensor B998
P352 - Connection to CC-MEM1 S992A
P353 - Connection to CC-DW S993
P354 - Connection to CC-UP S994
P357 - Connection to Speed Sensor B06
P495 - Connection to CC-MEM2 S992B




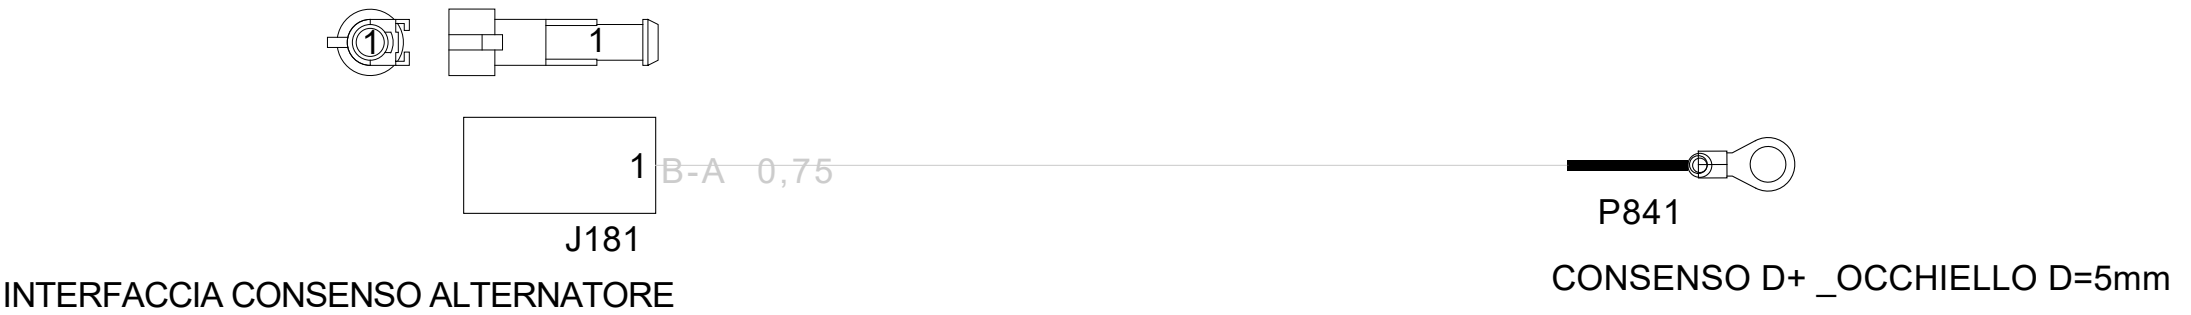
J59 - Connection to P99
P99 - Connection to J59
P313 - Connection to Relay box
P314 - Connection to Trailer brake switch H80
P315 - Connection to Trailer brake pressure sensor B31
P316 - Connection to Trailer brake pressure sensor B31
P318 - Connection to Trailer brake solenoid valve Y31





W02_1

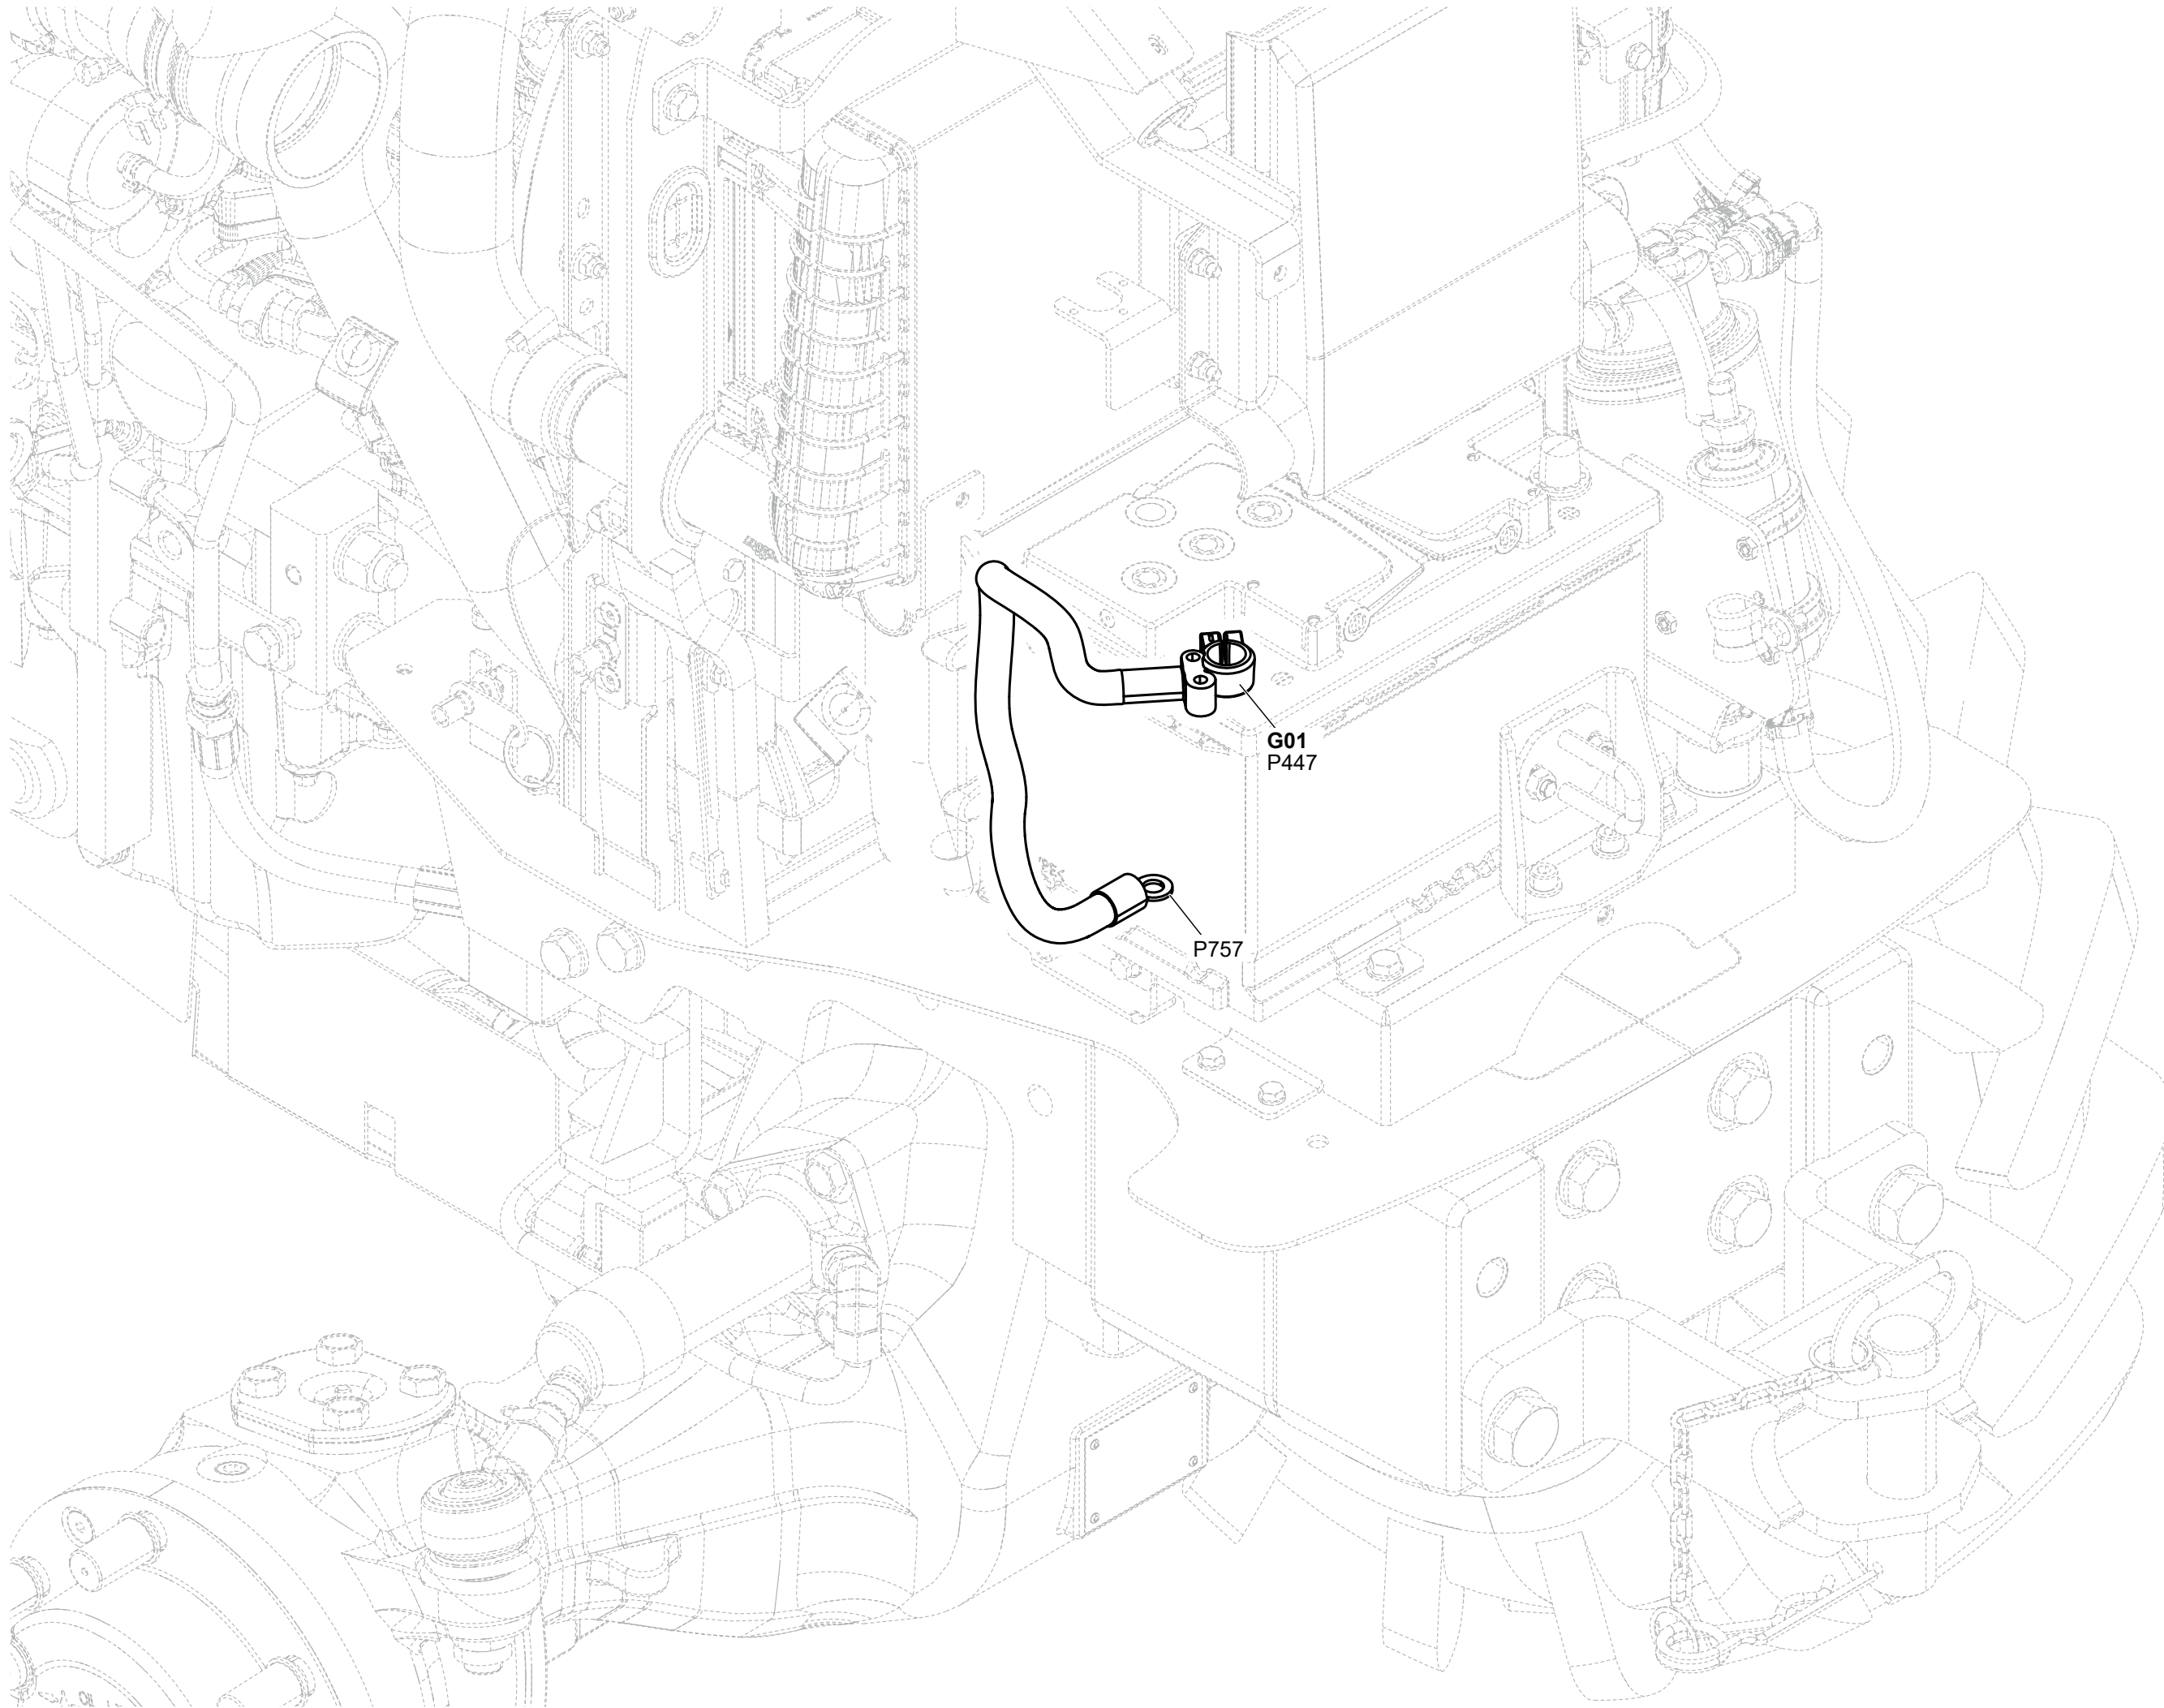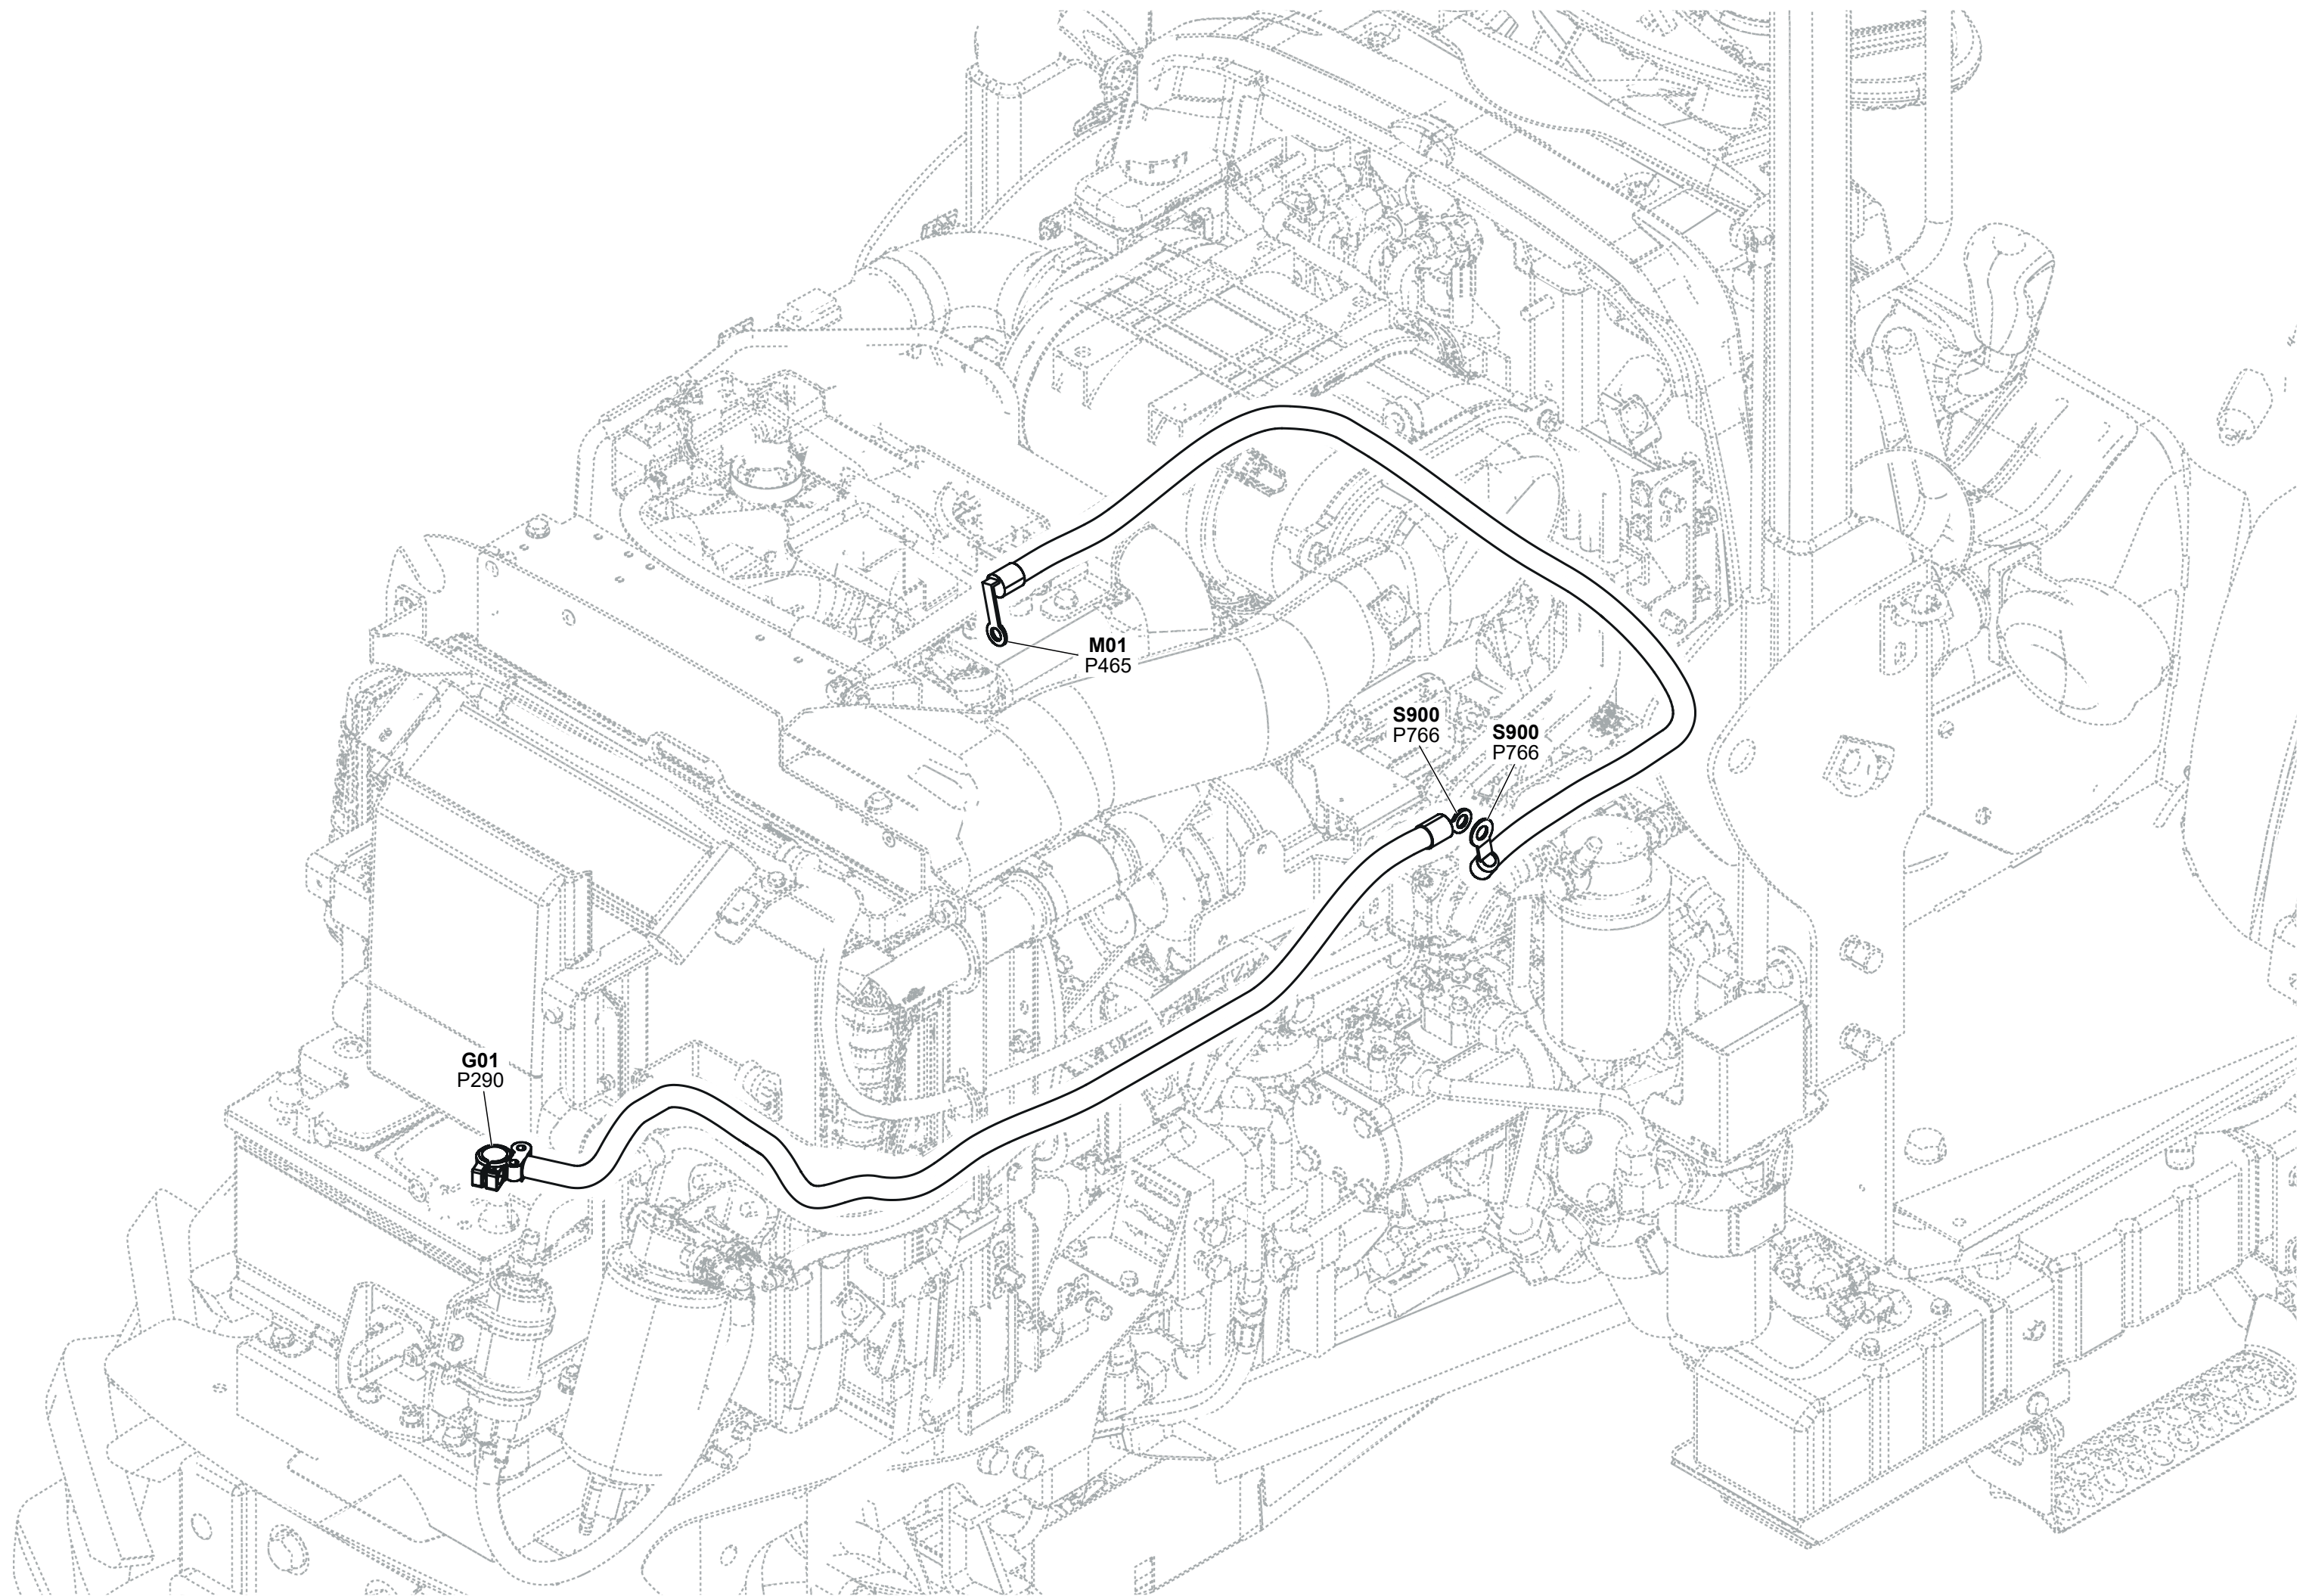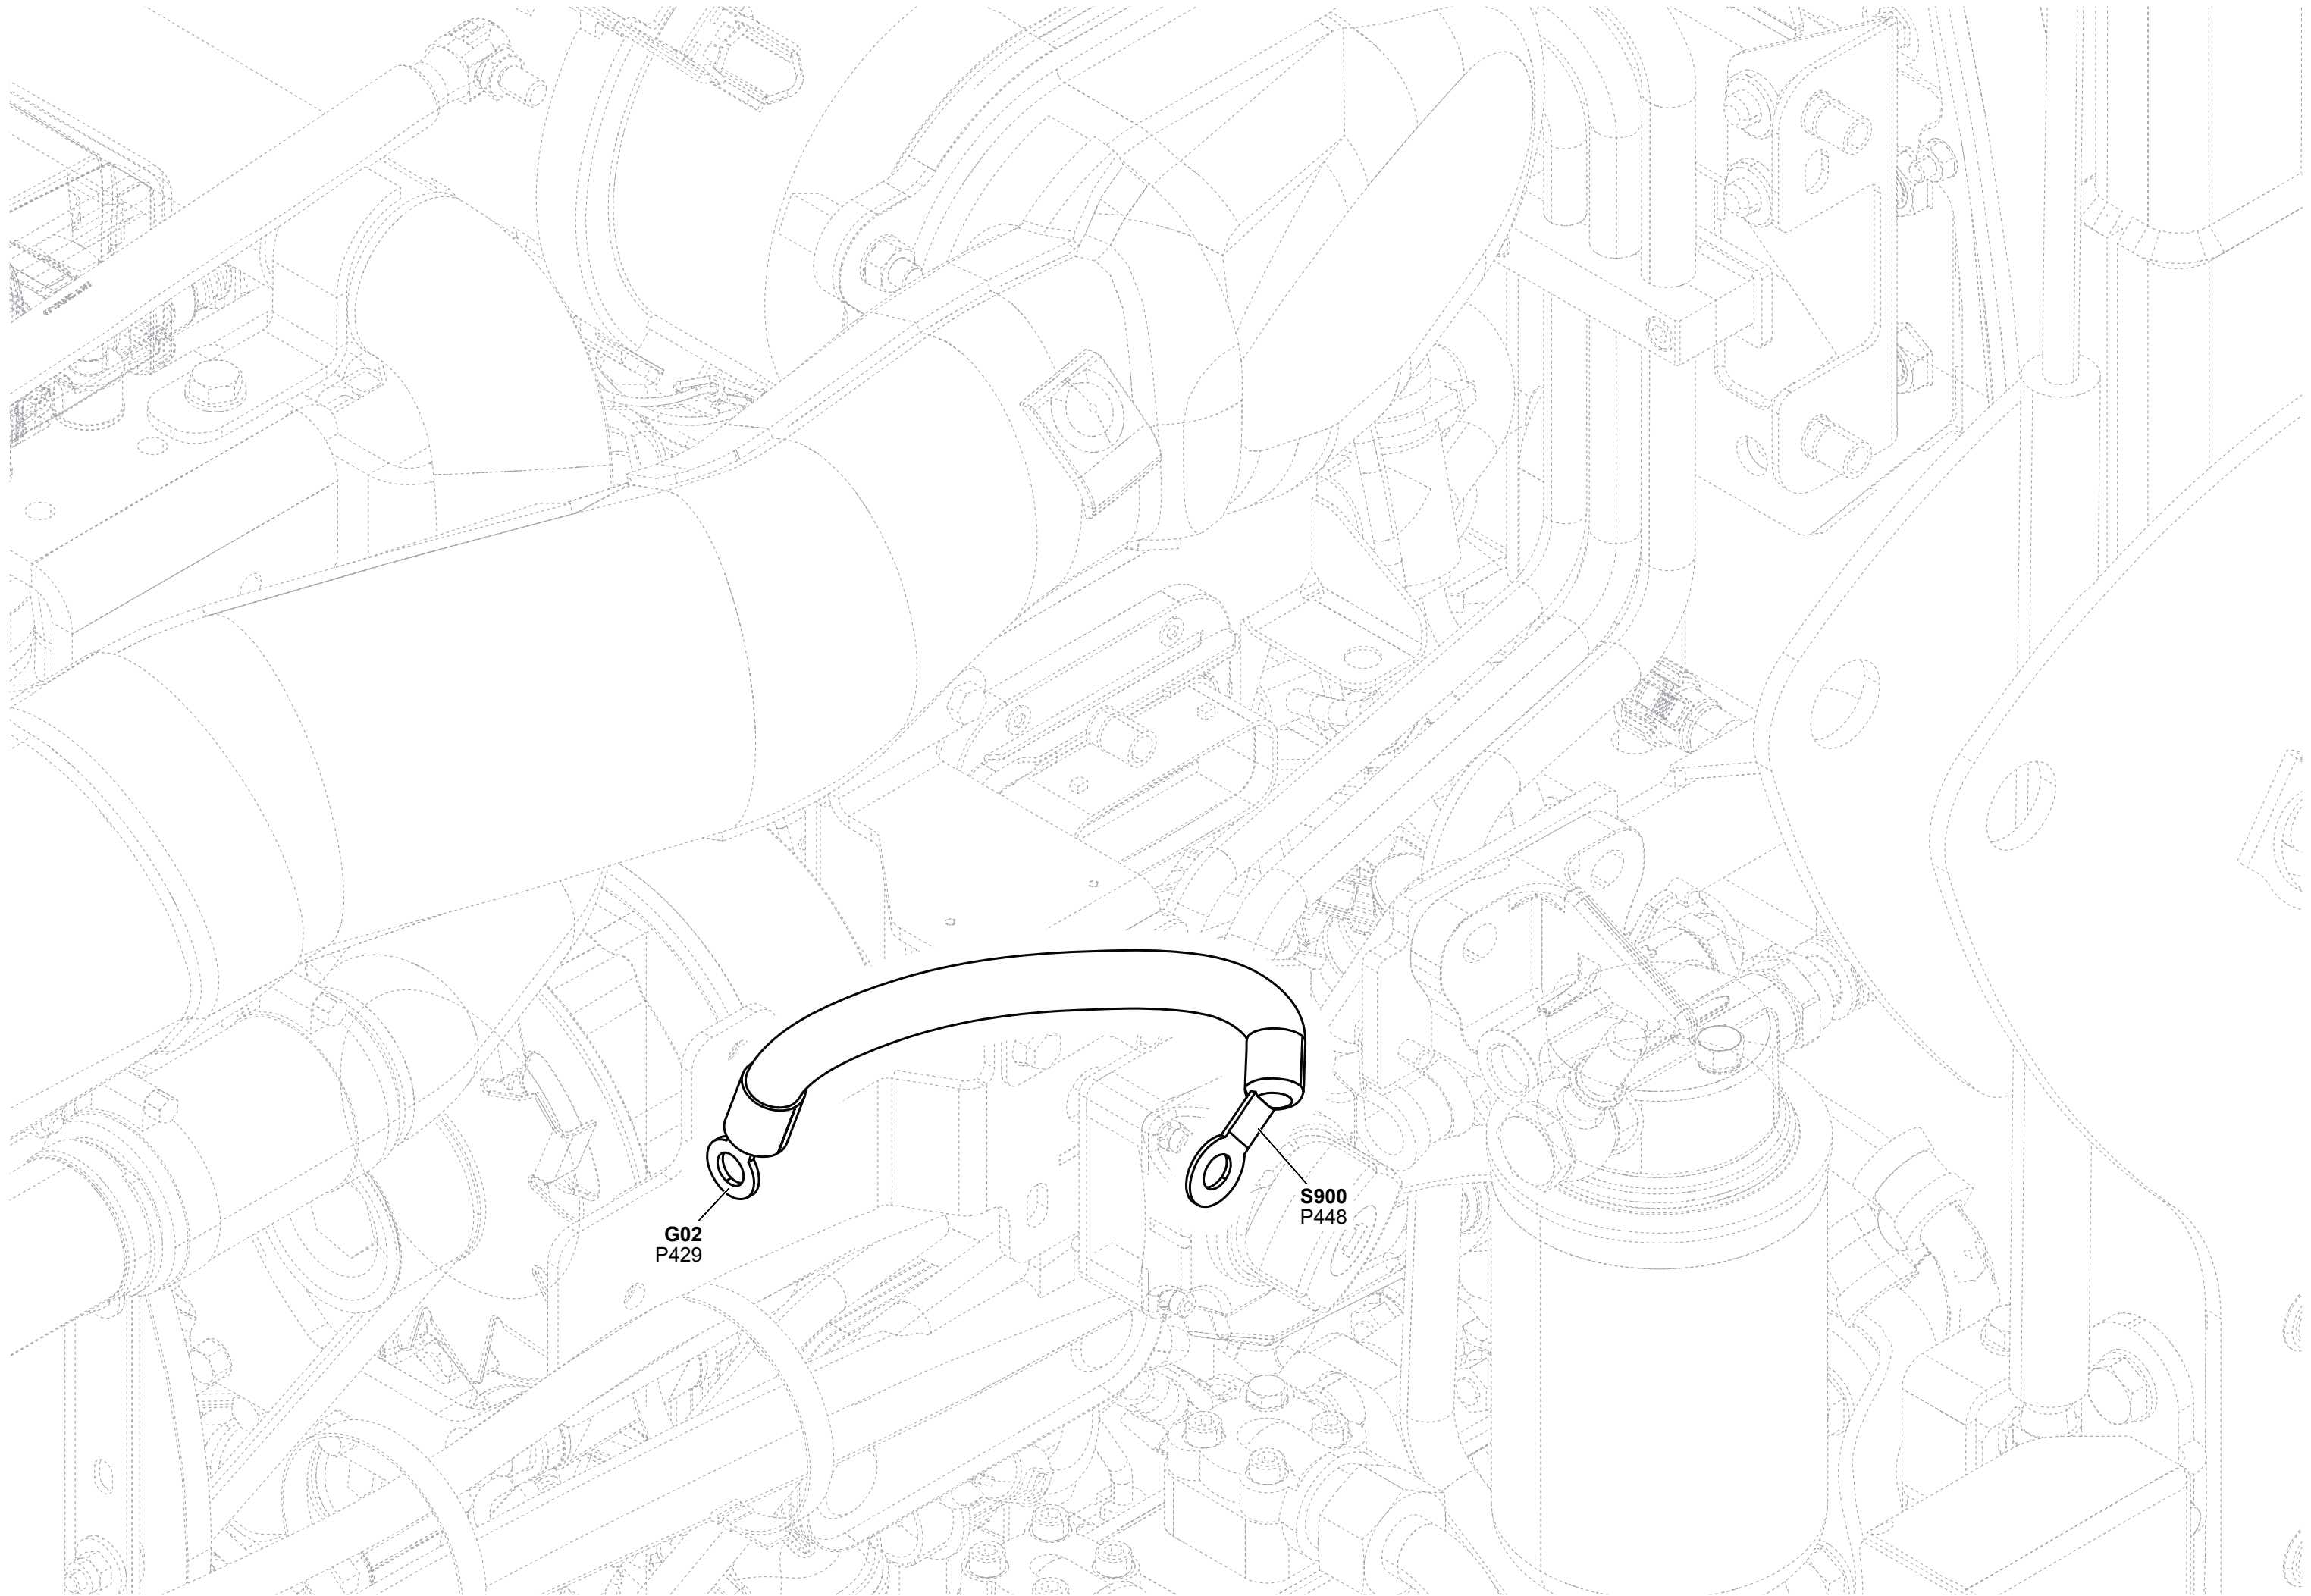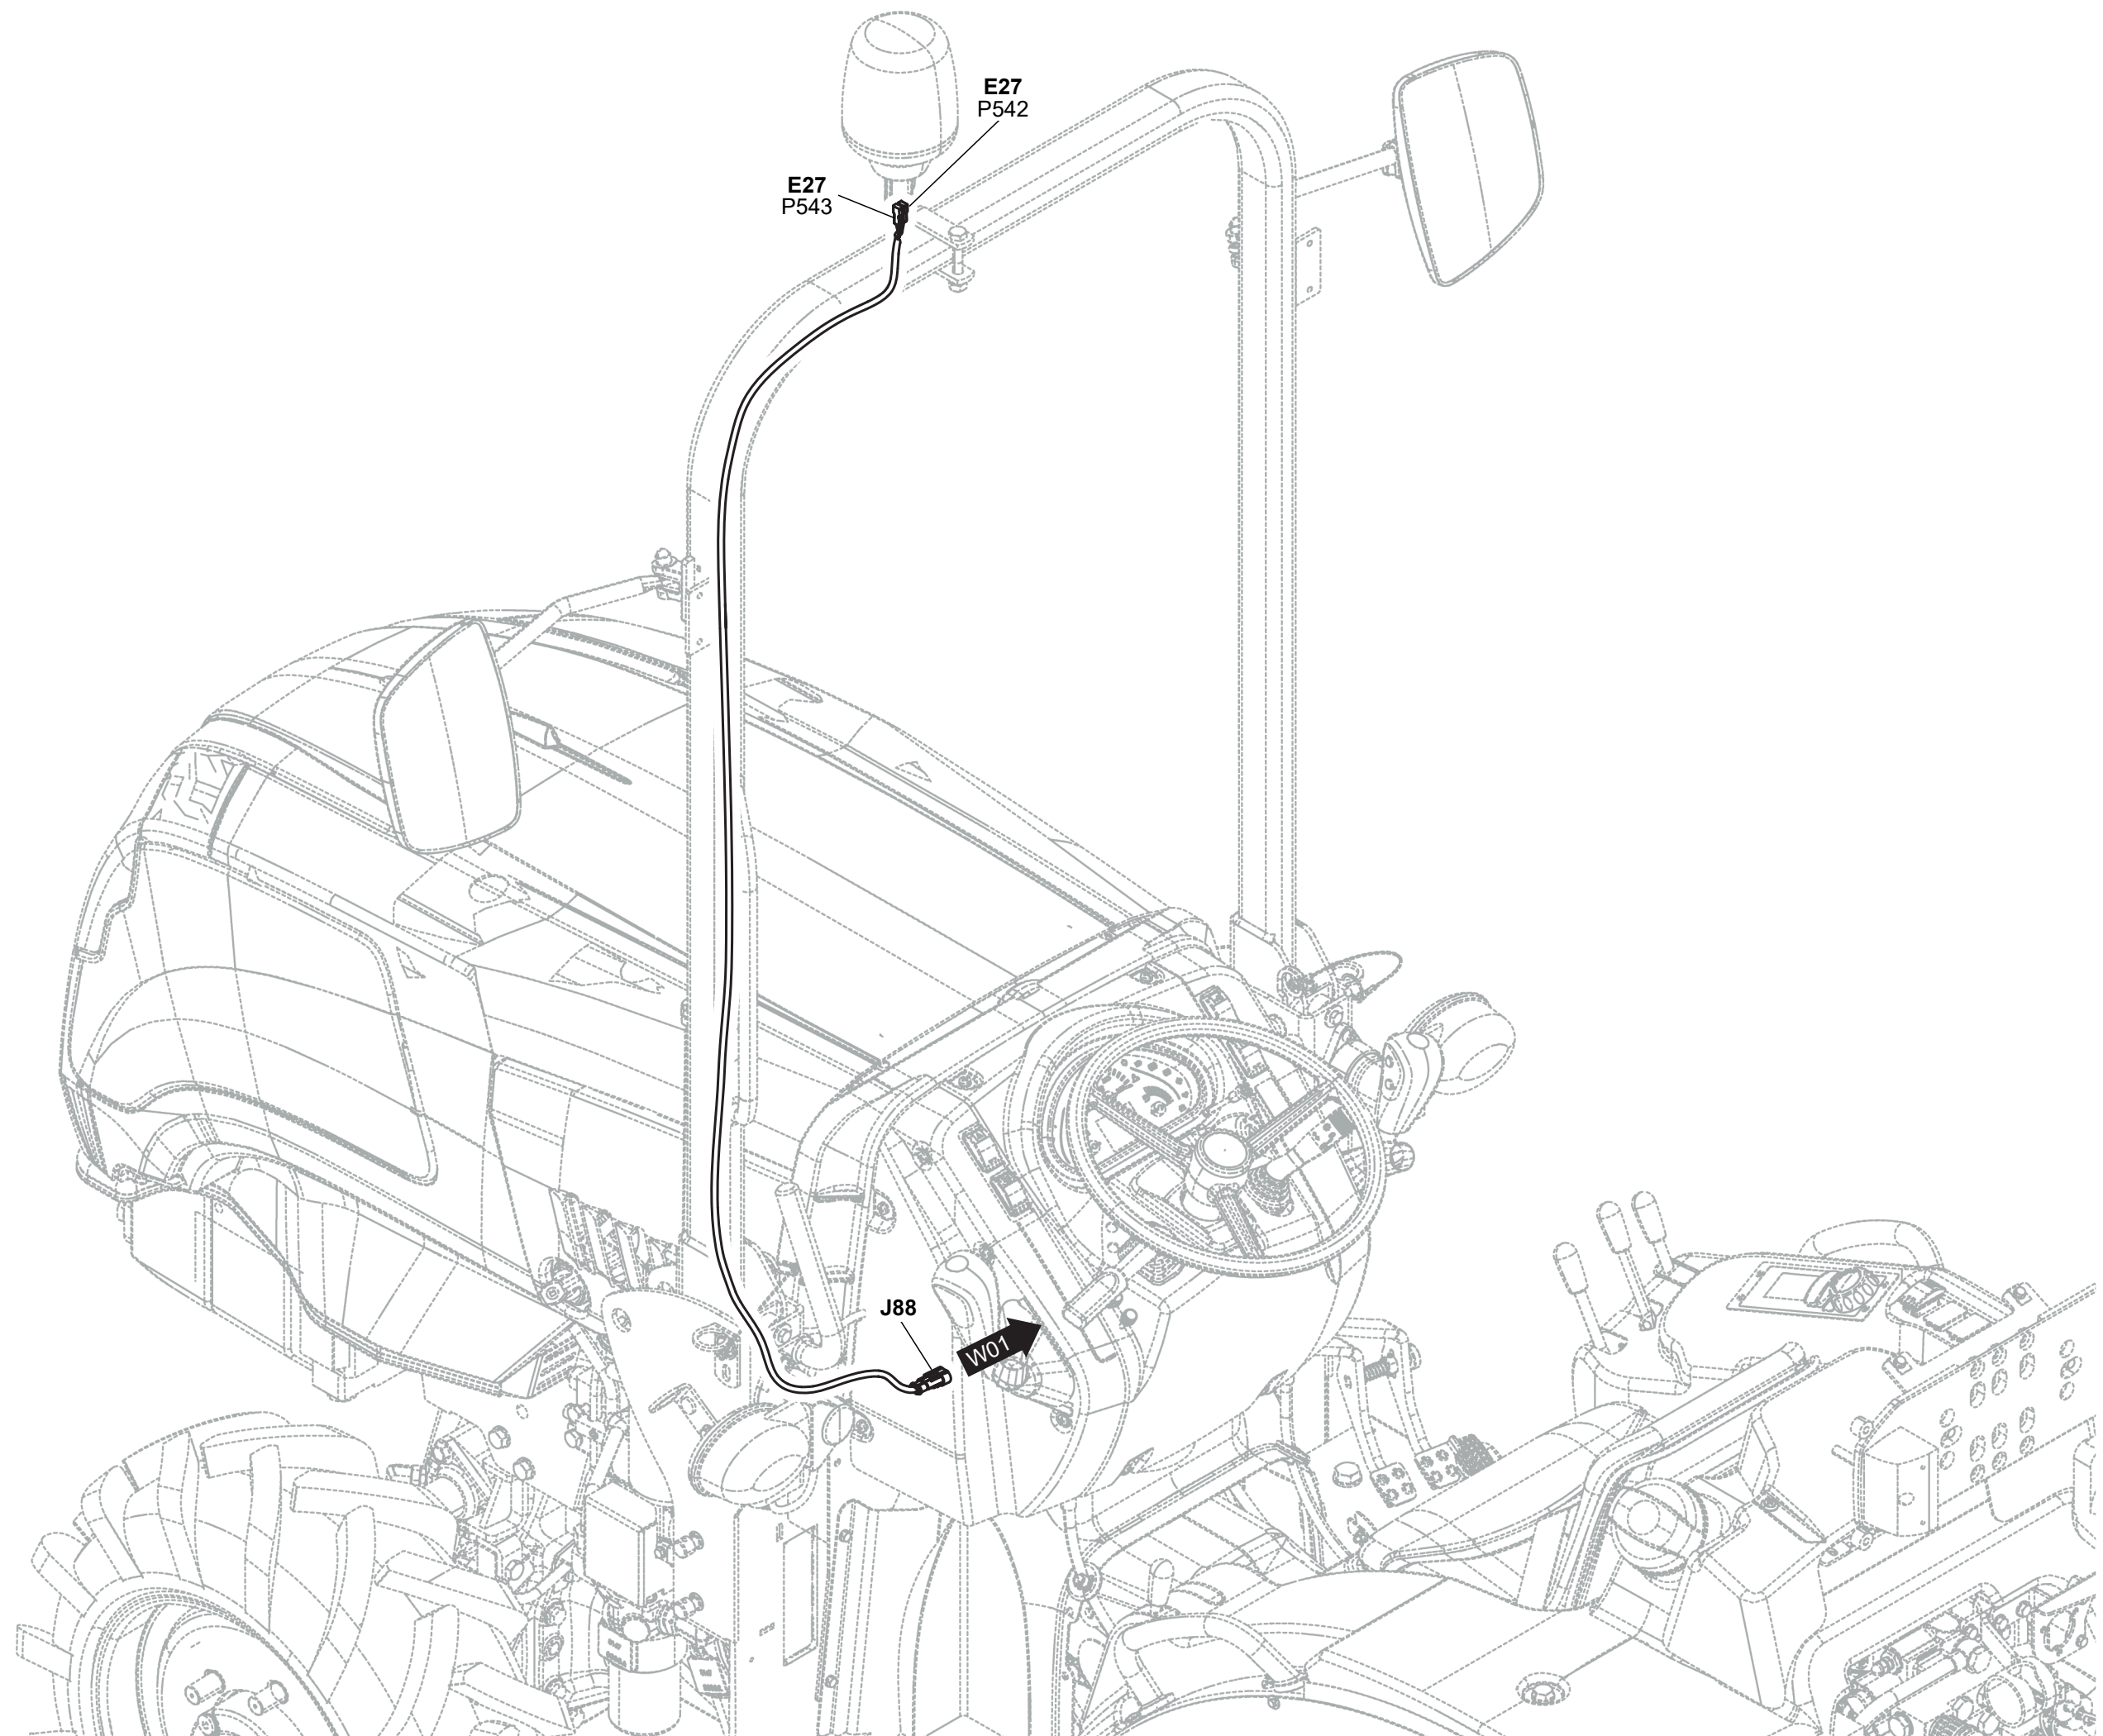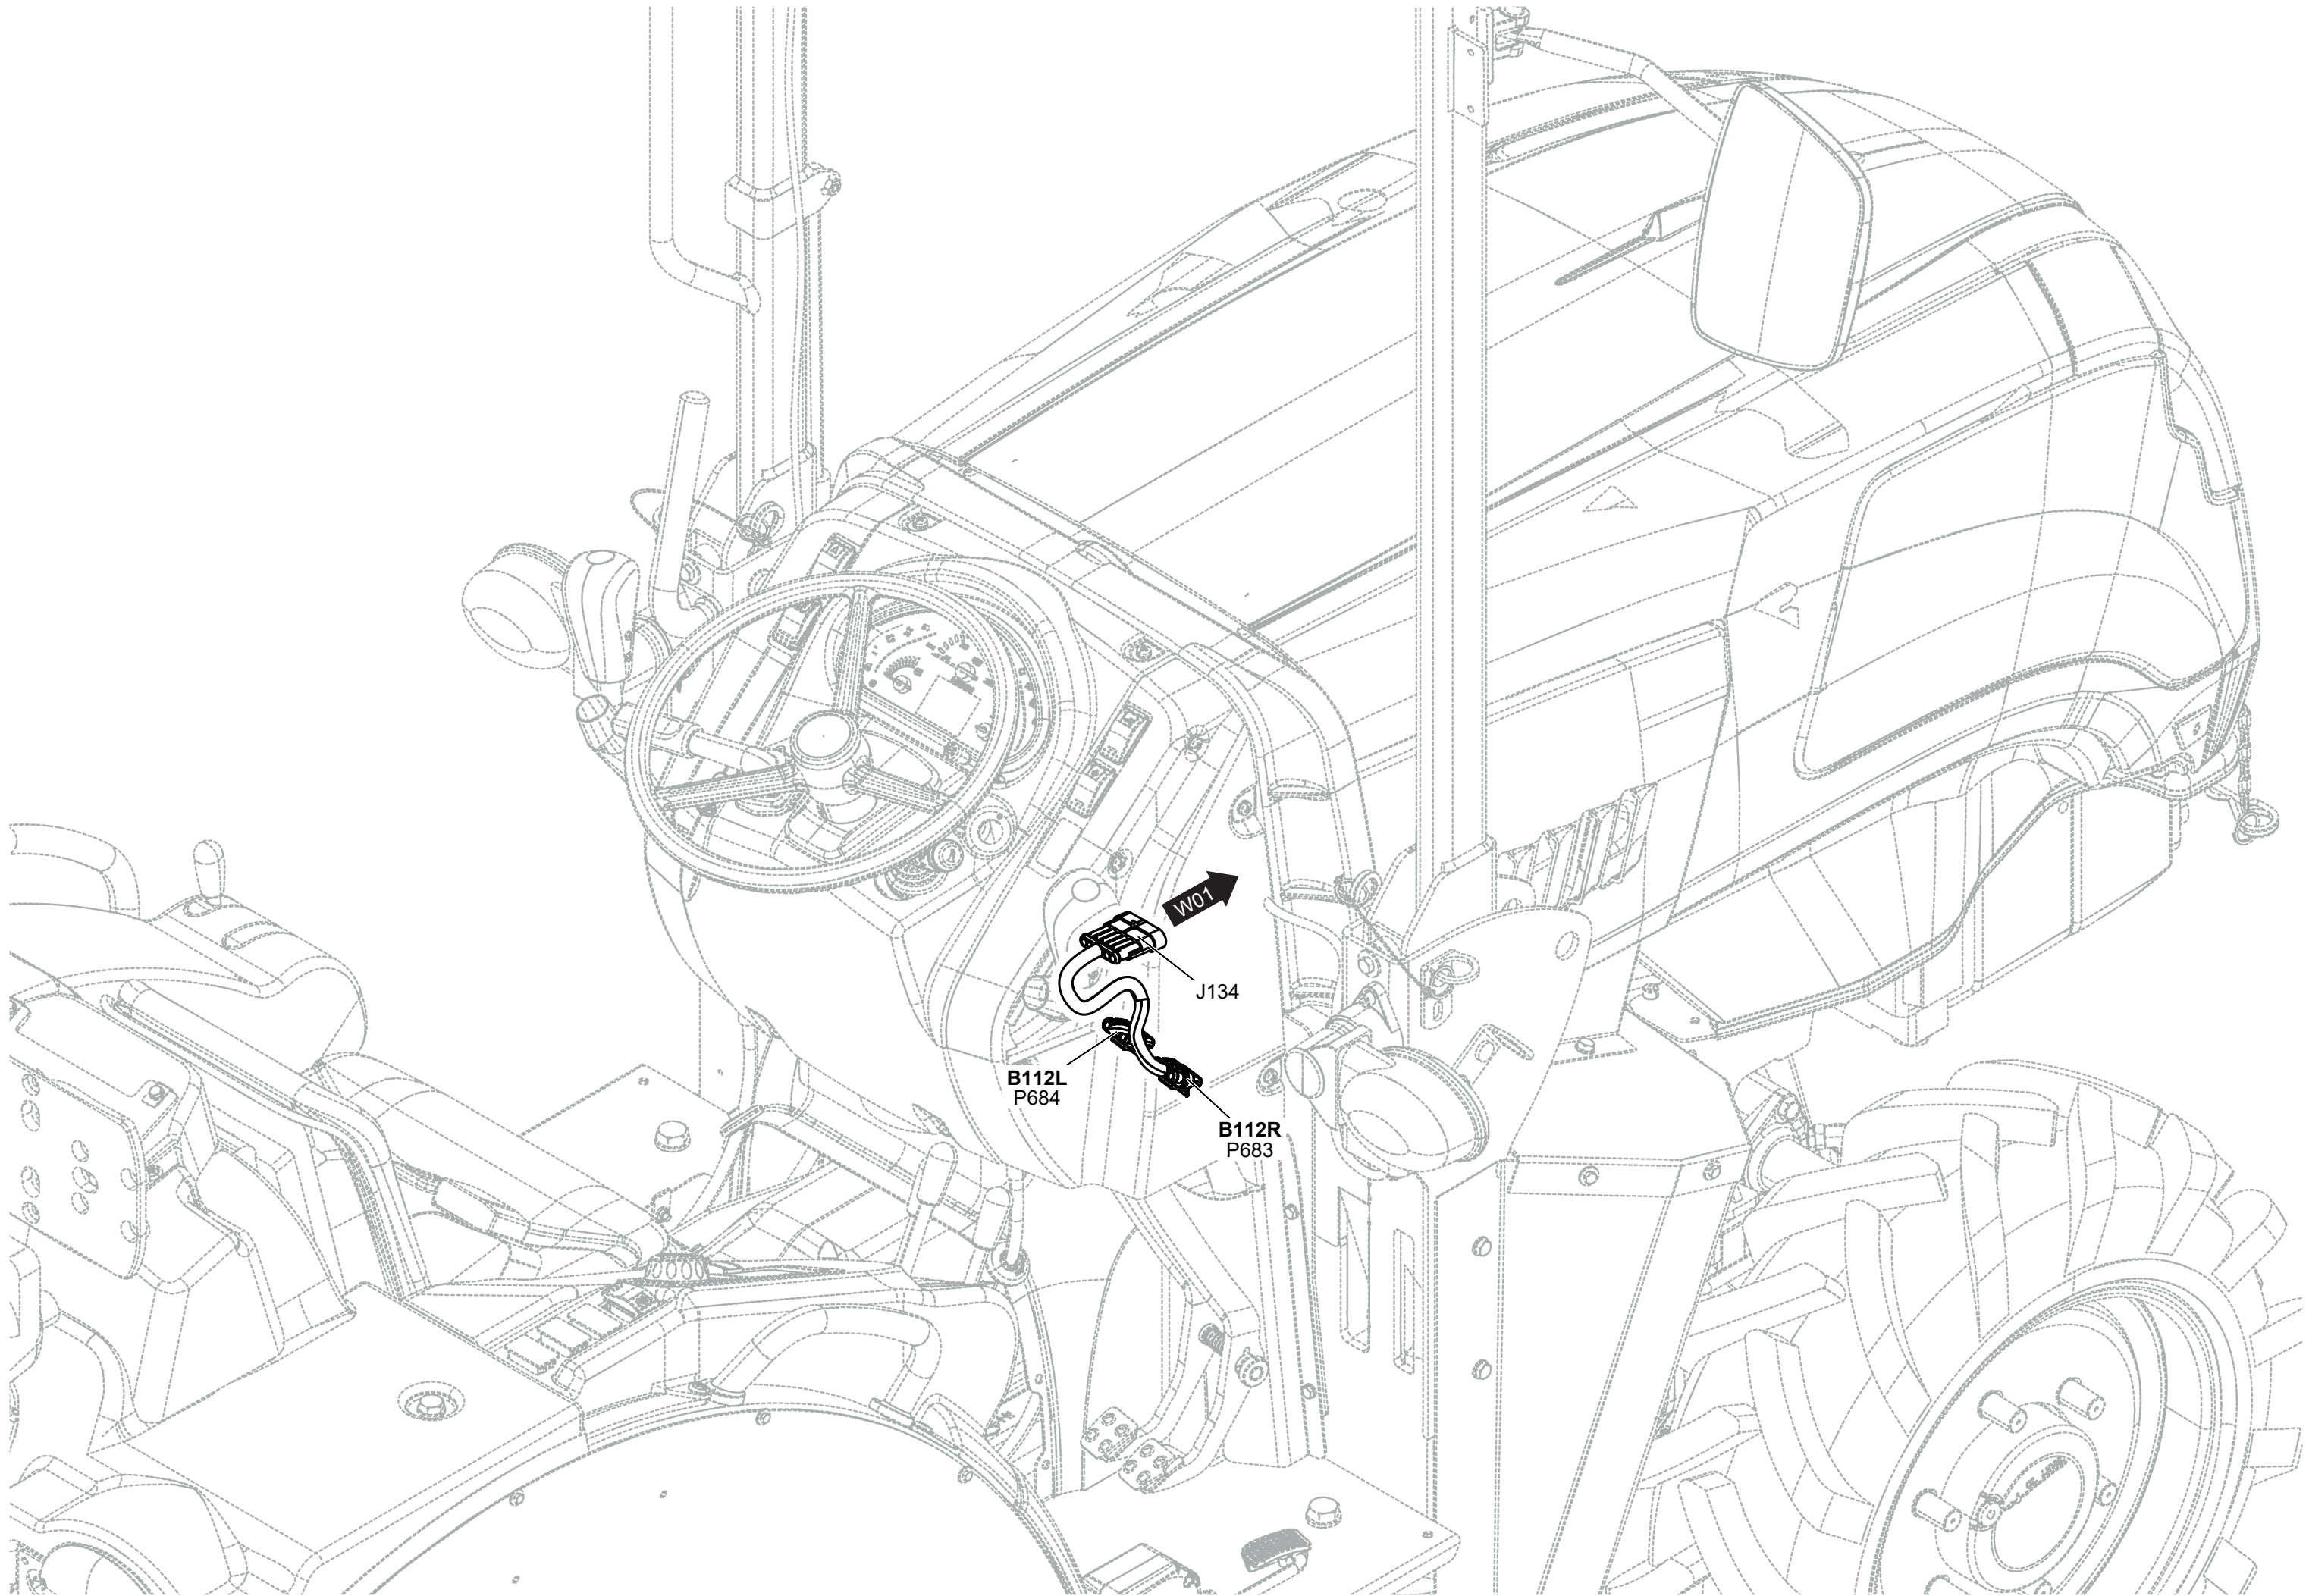
J181 - Connection to P337
P841 - Connection to Alternator G02

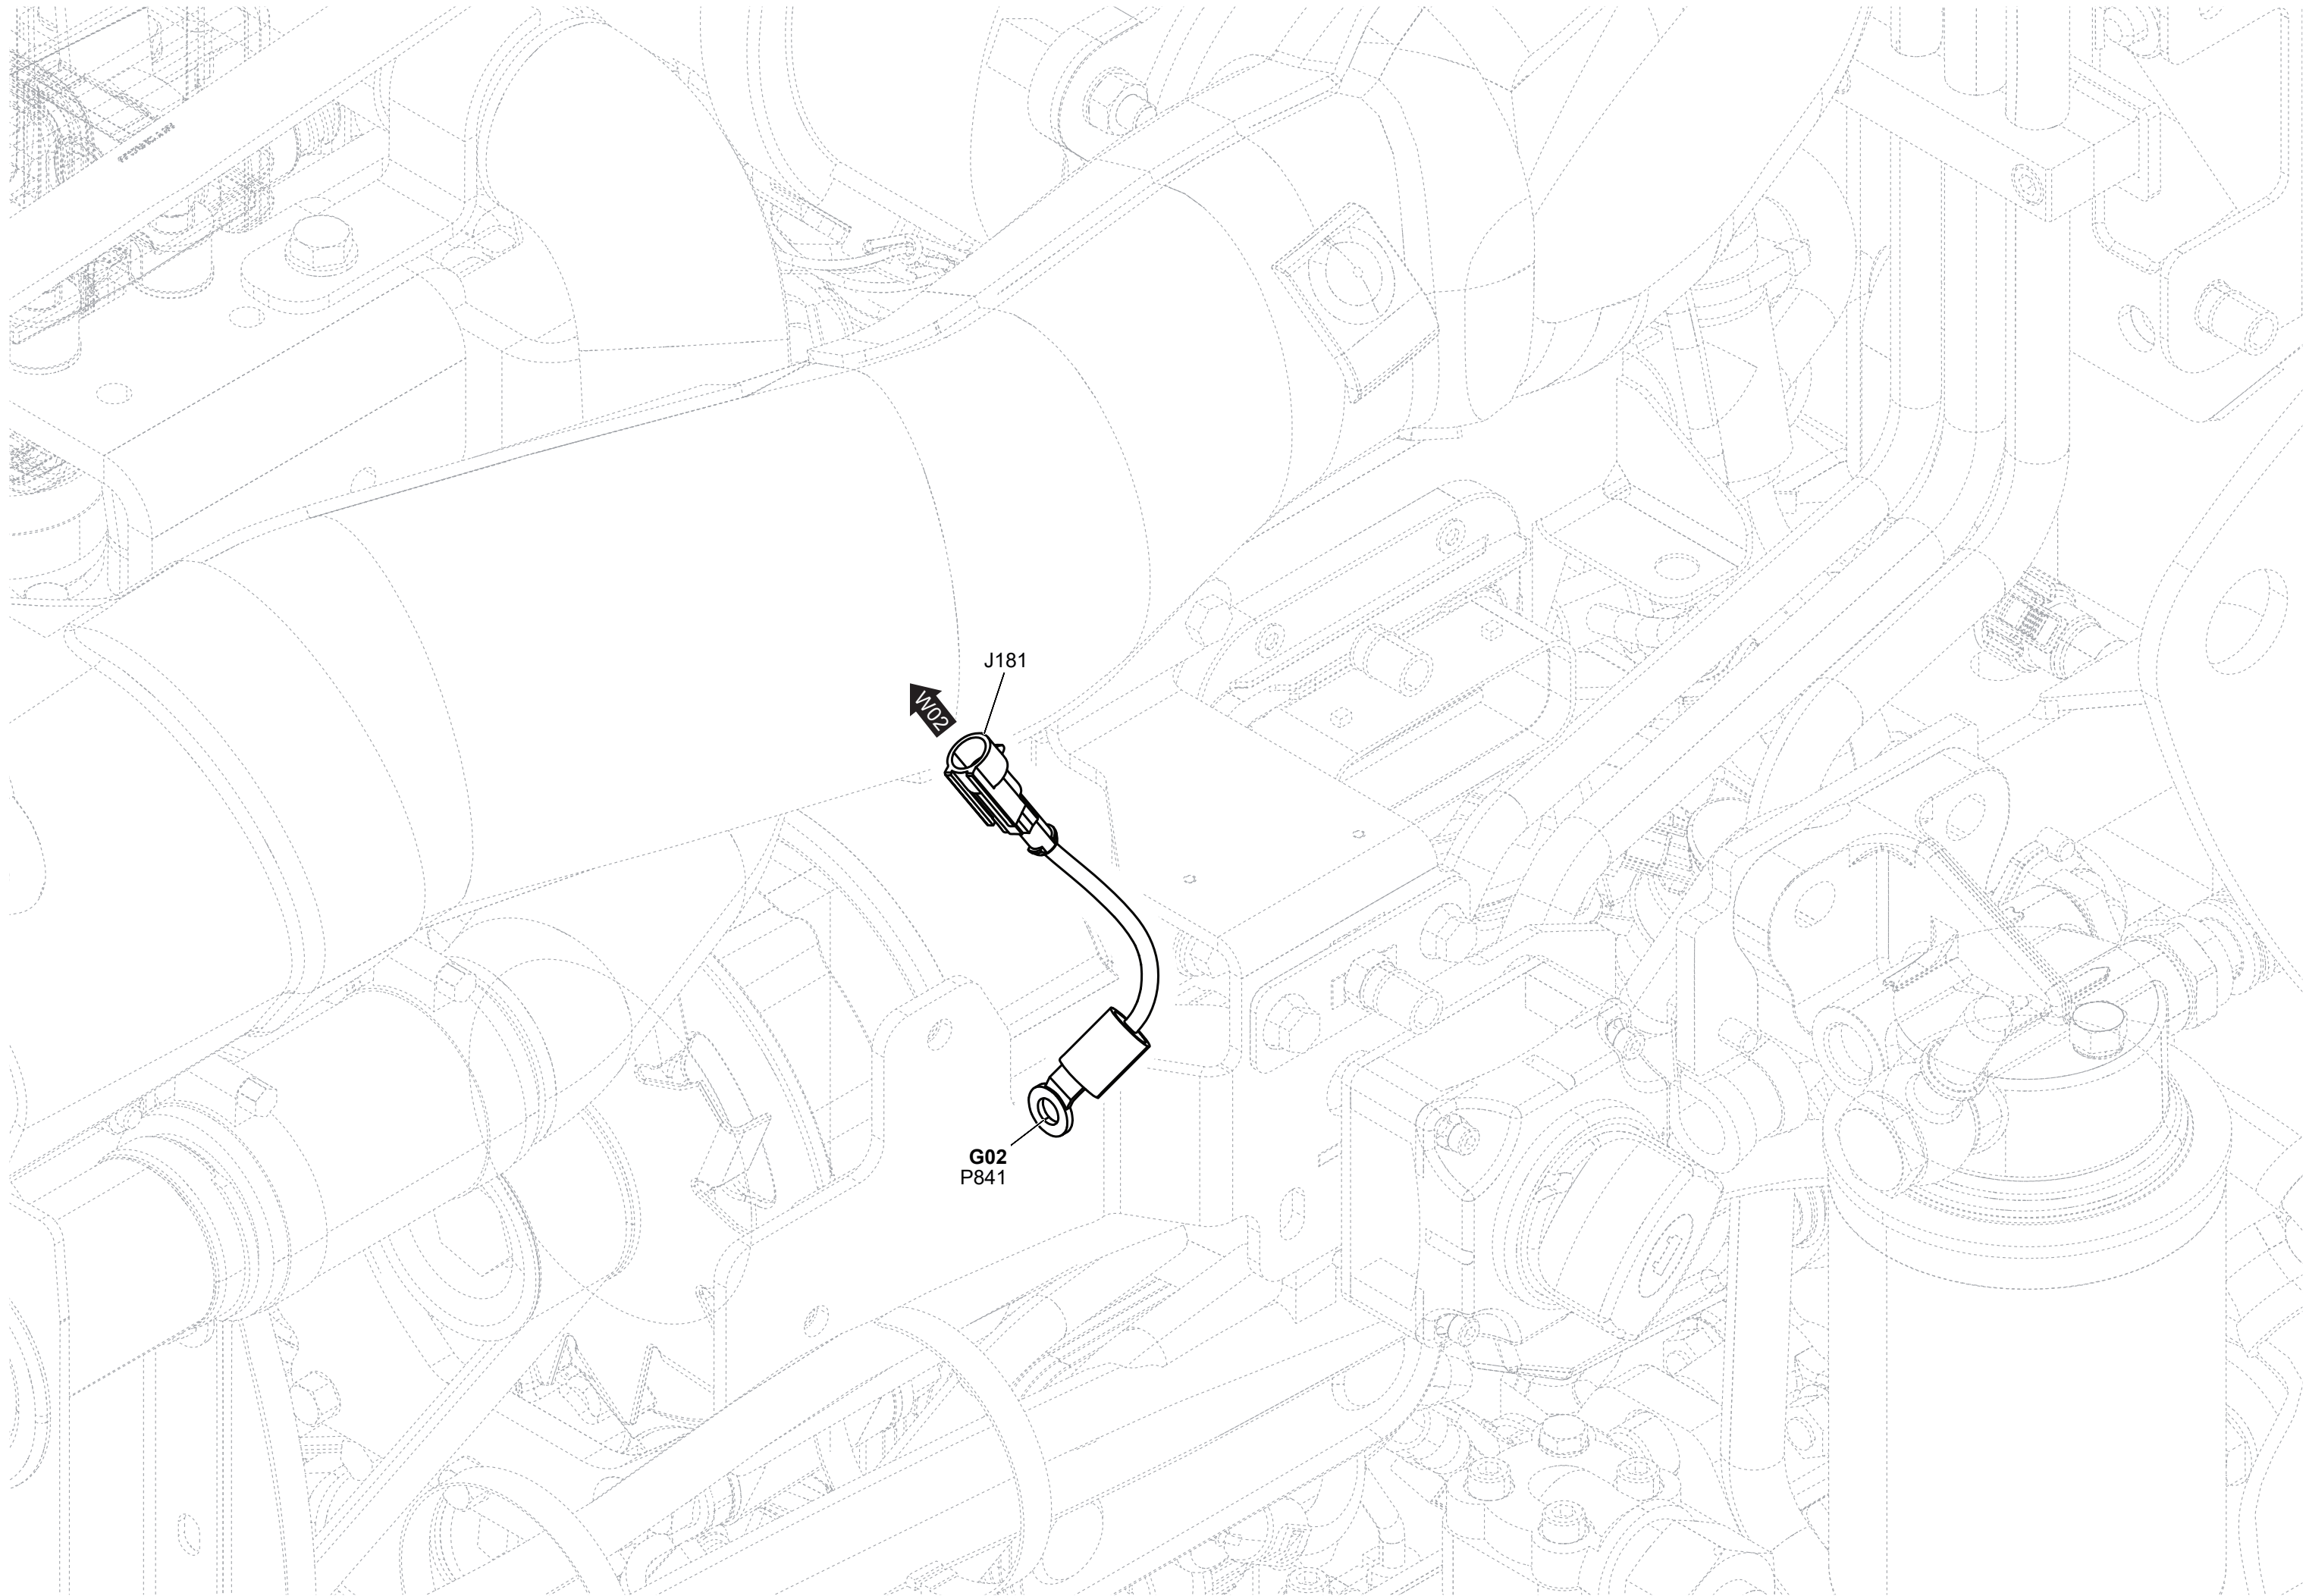


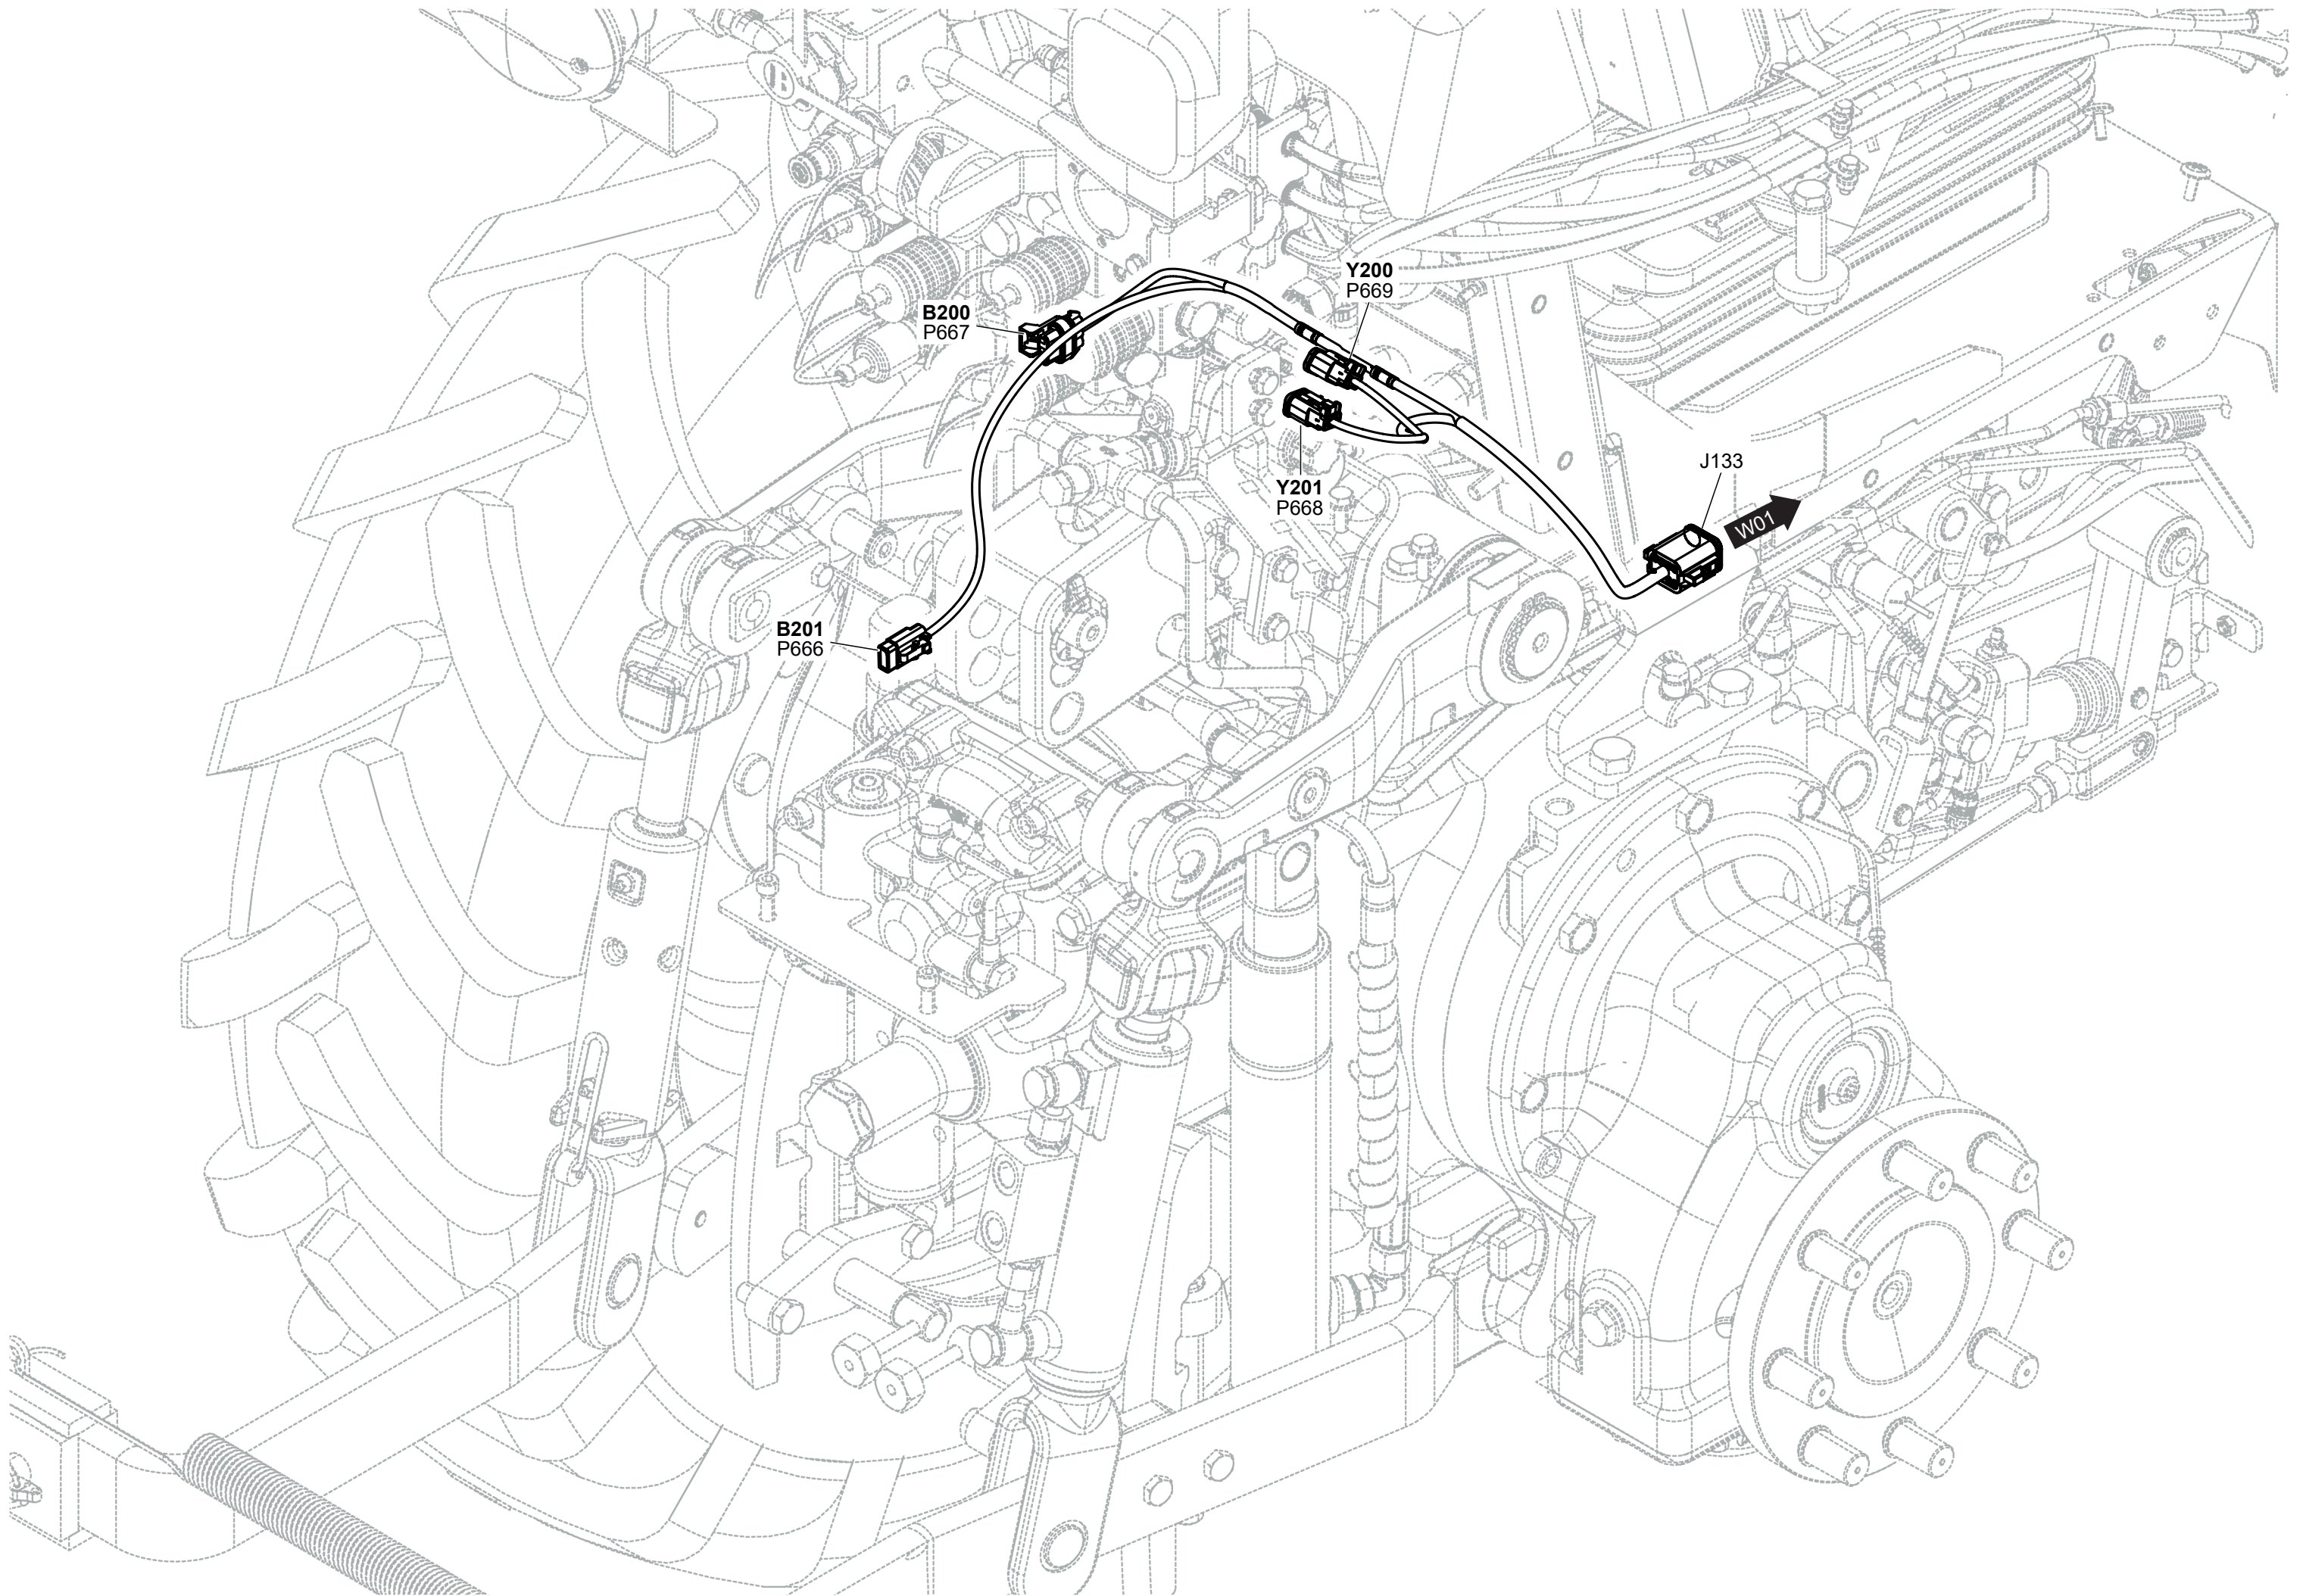


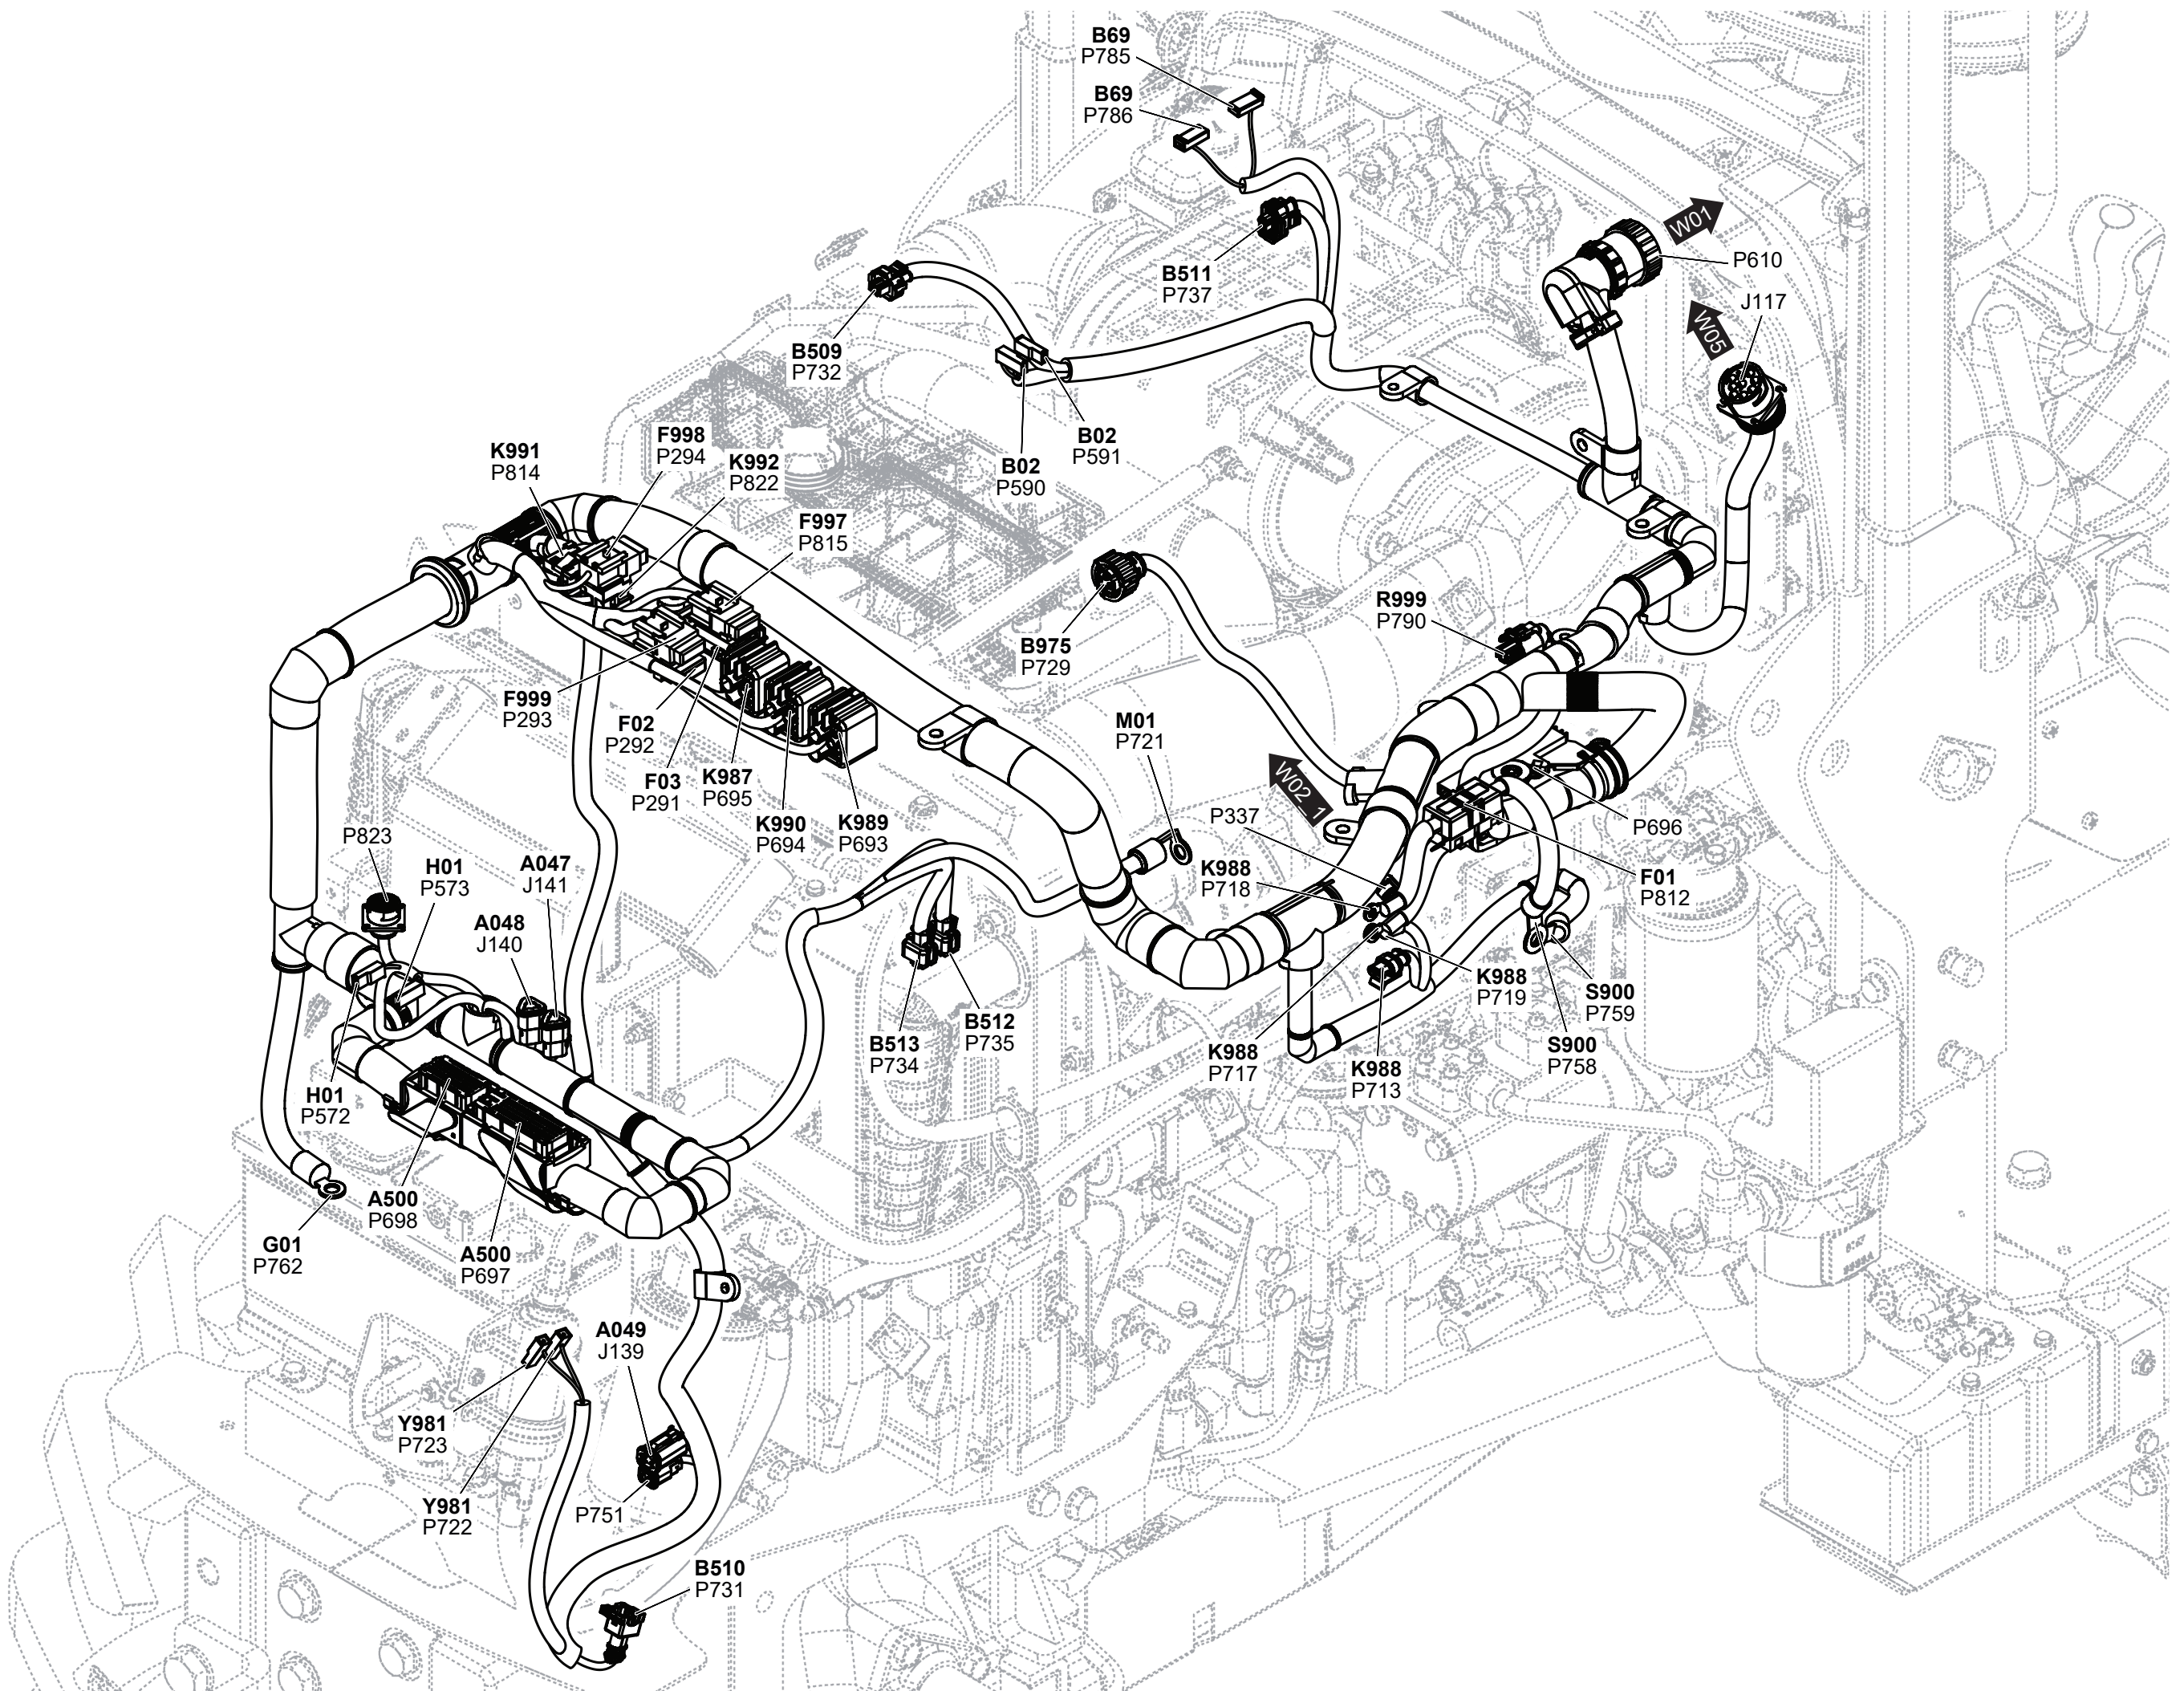


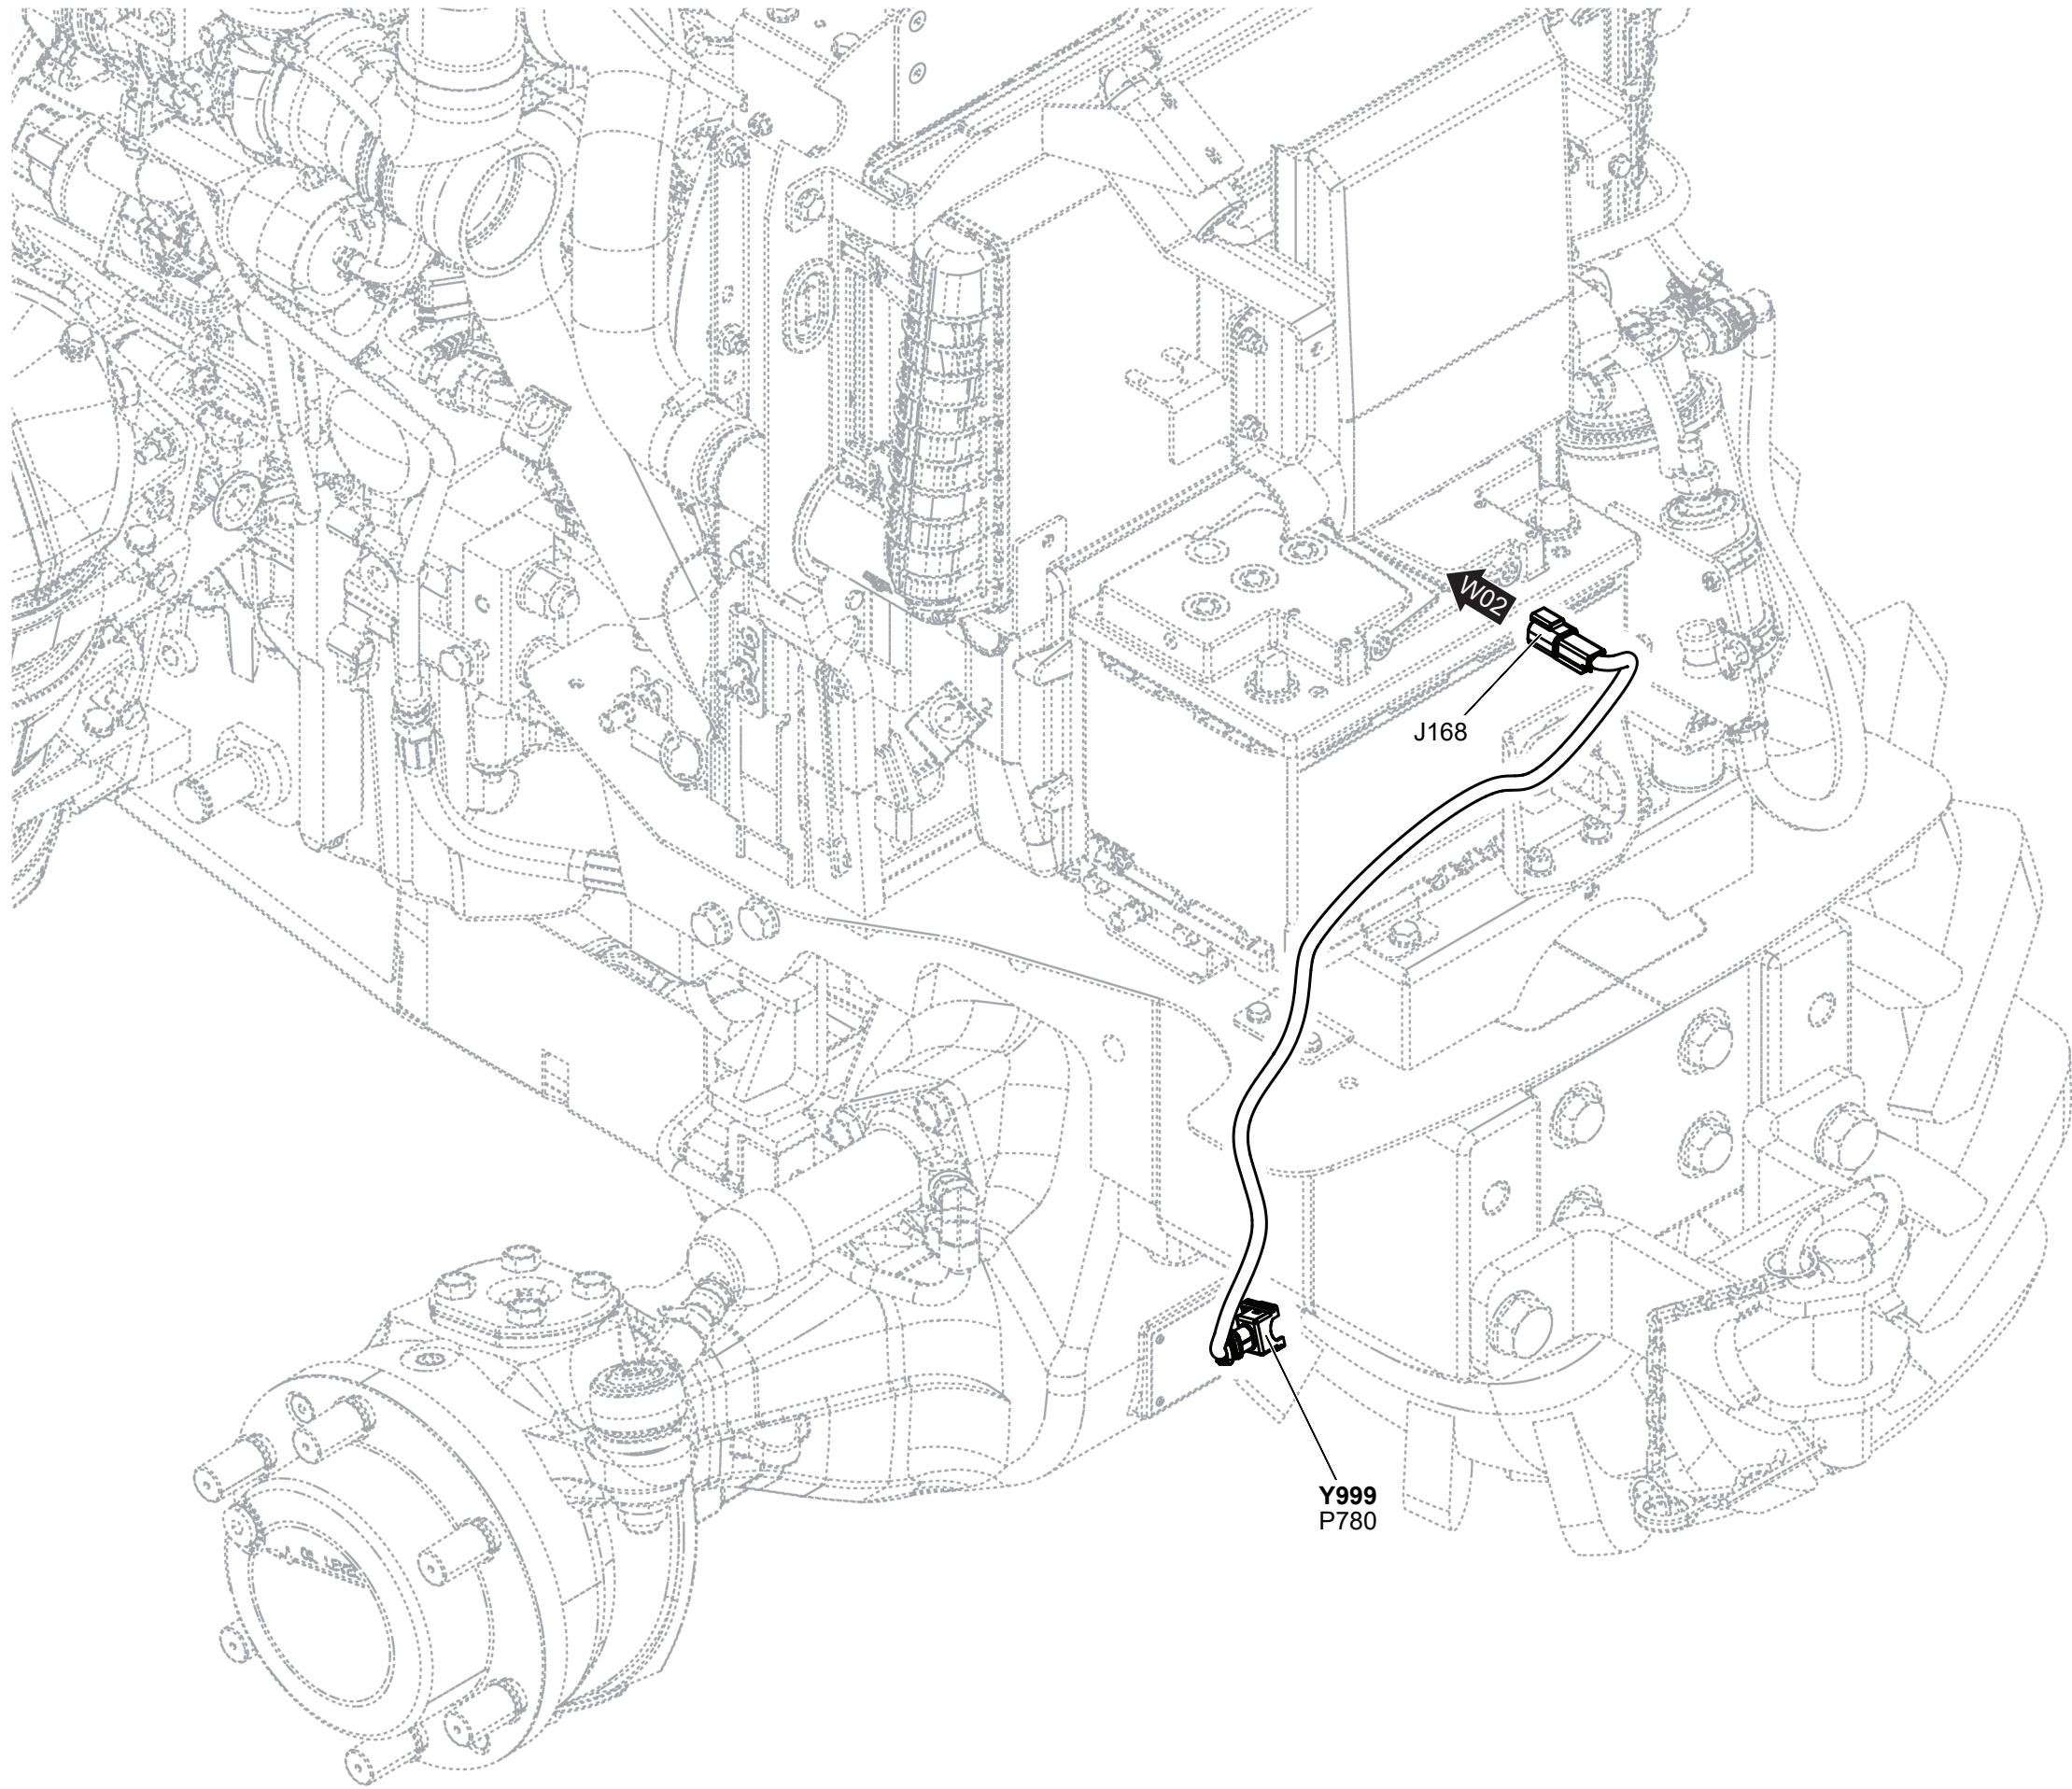


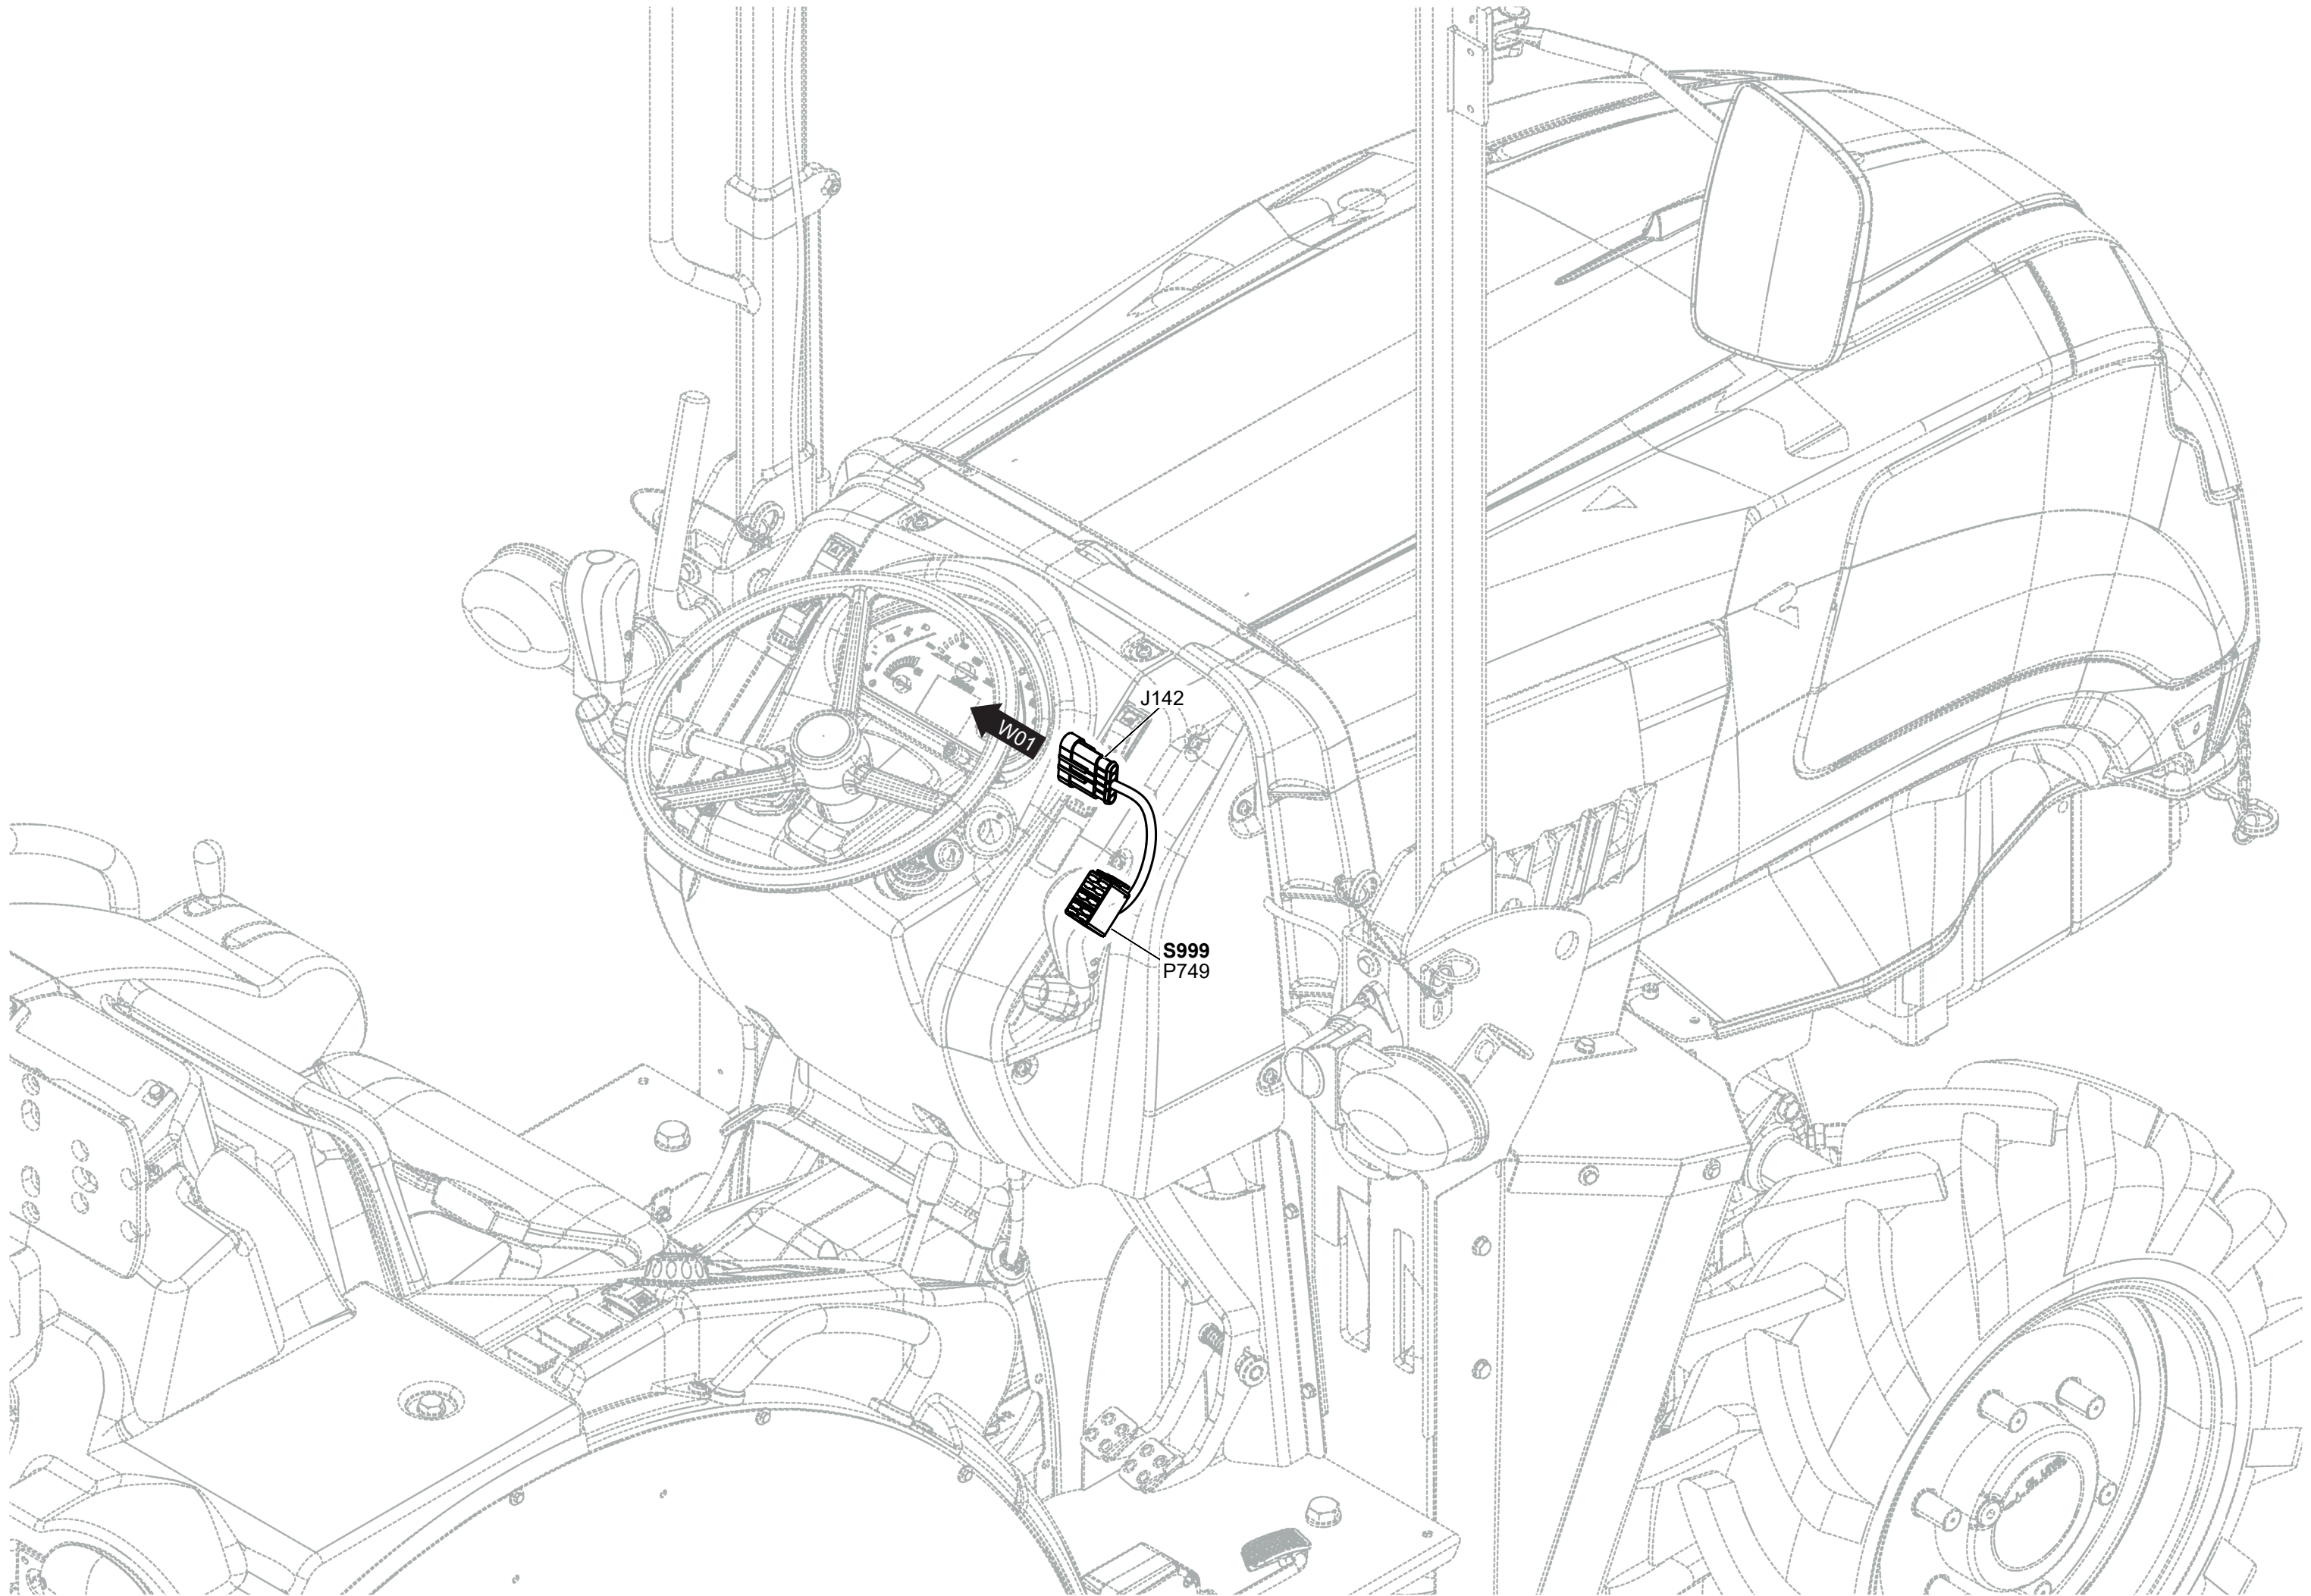


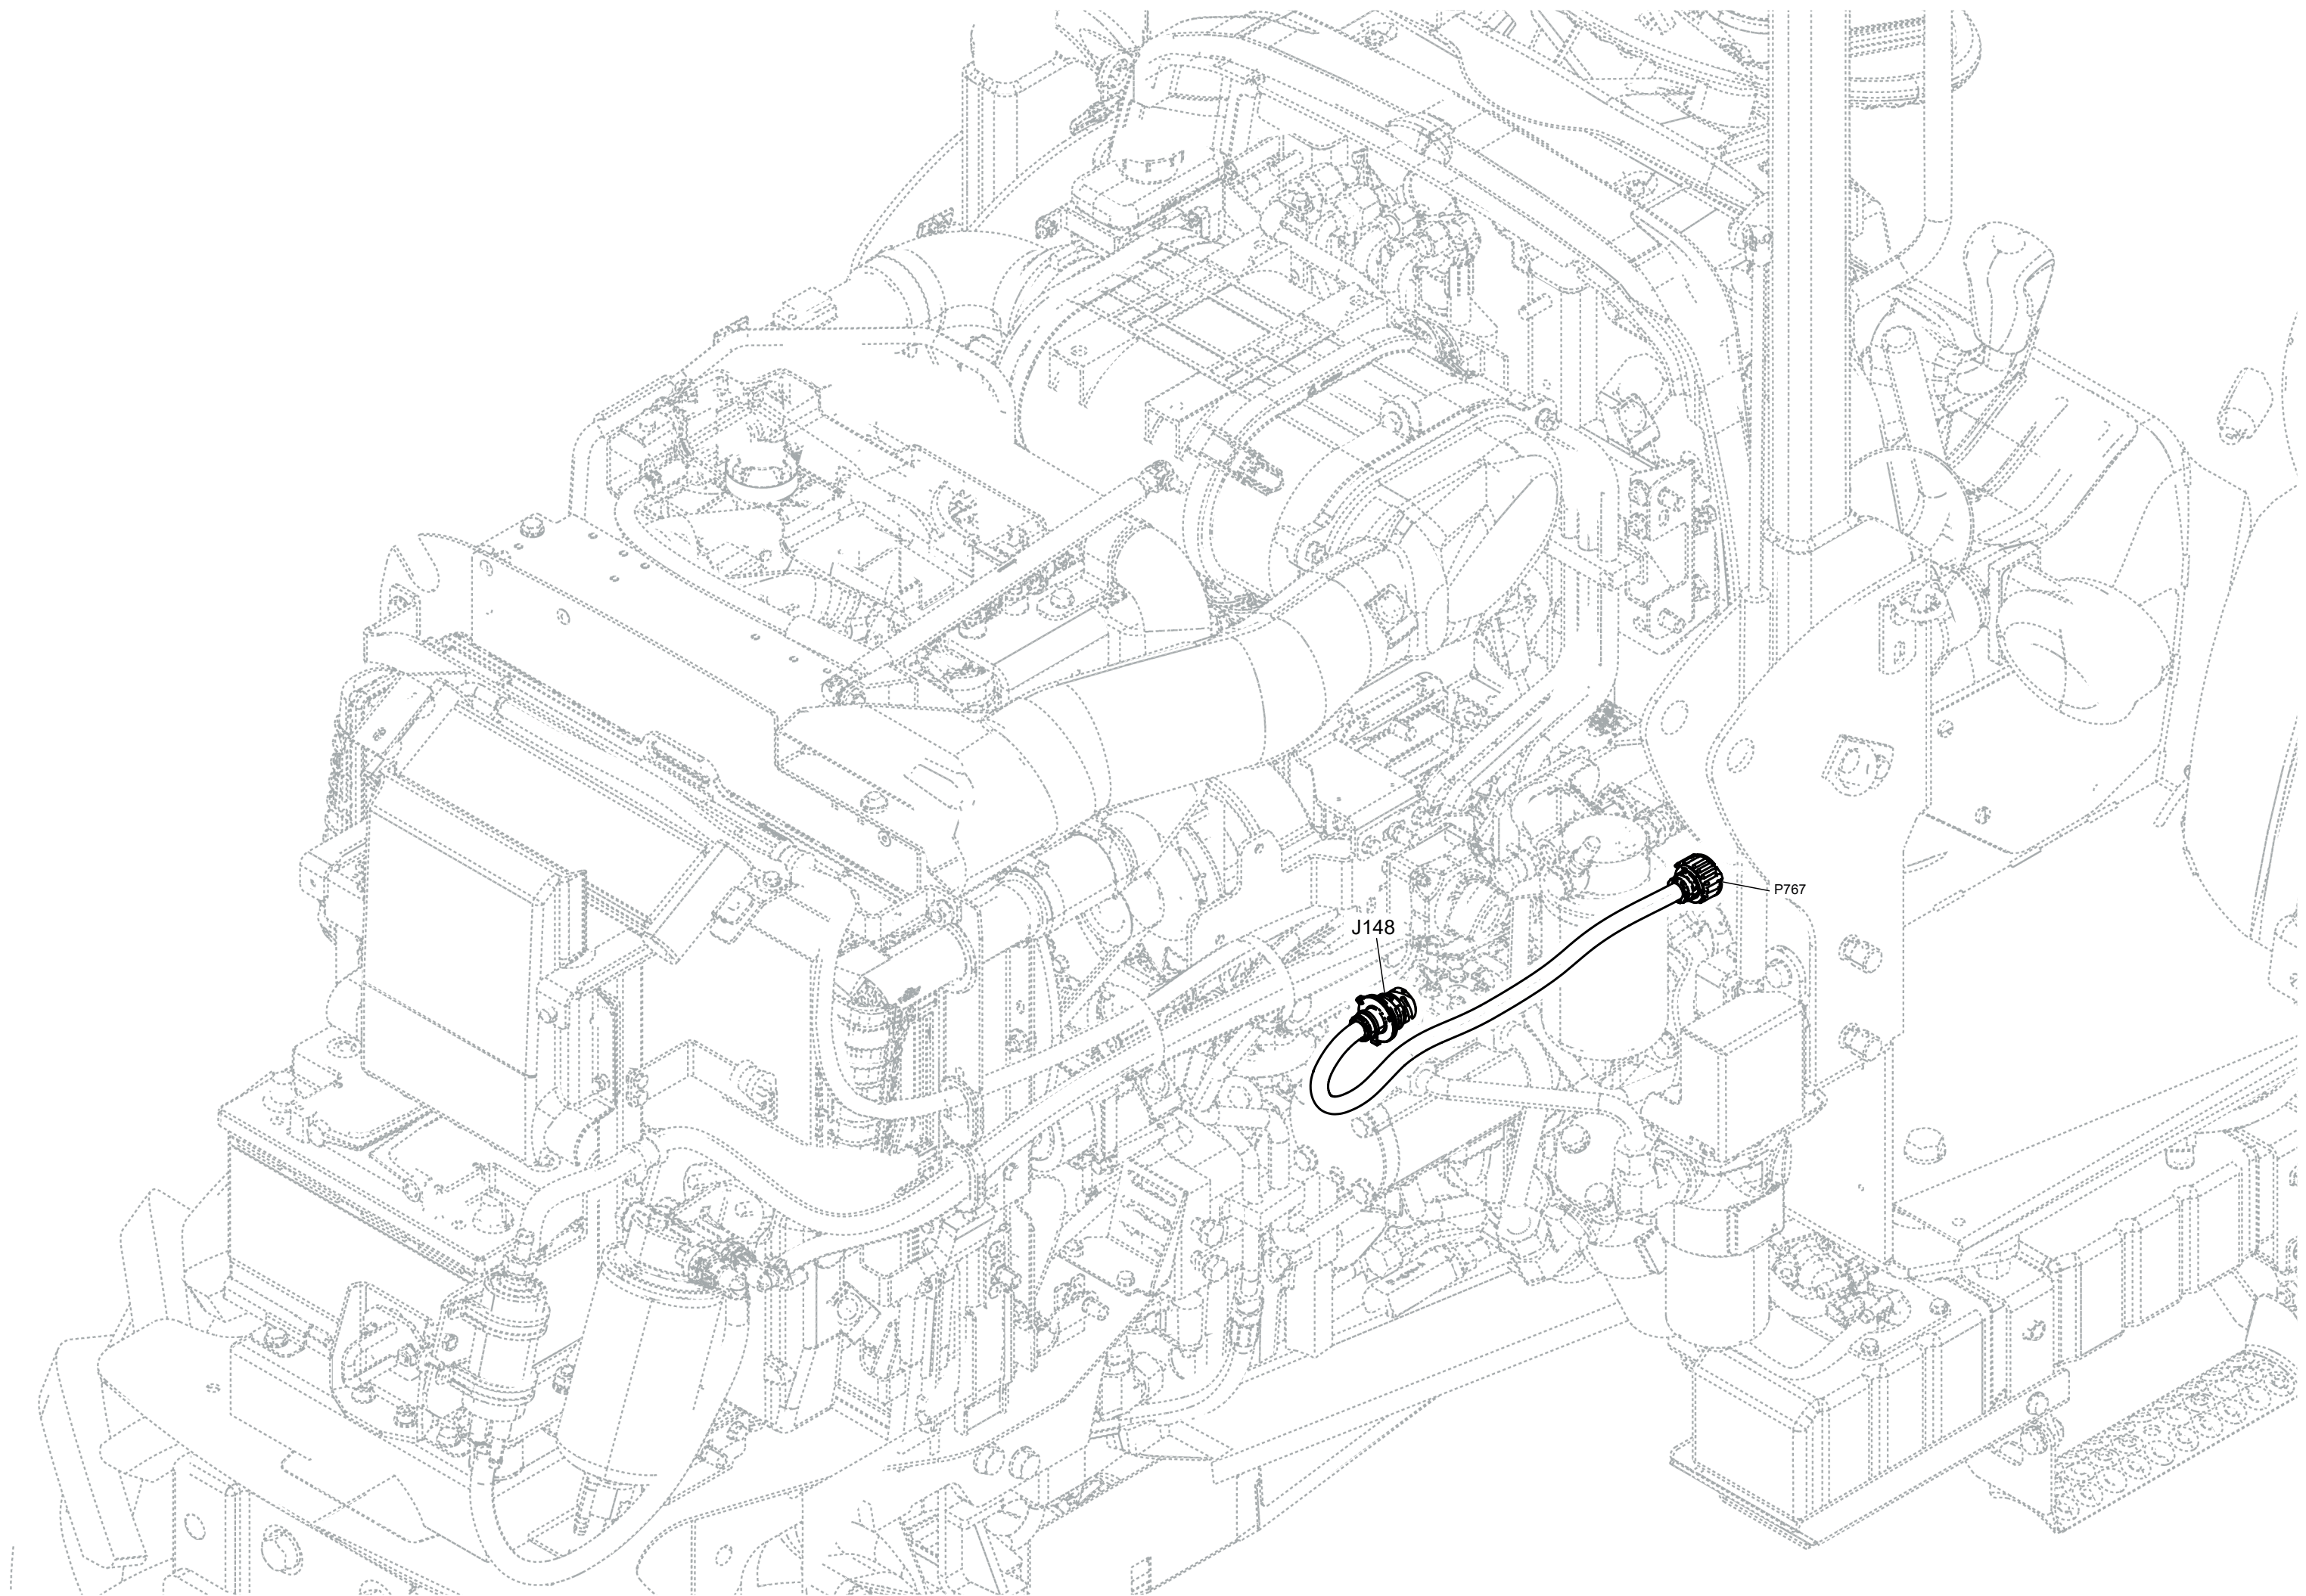


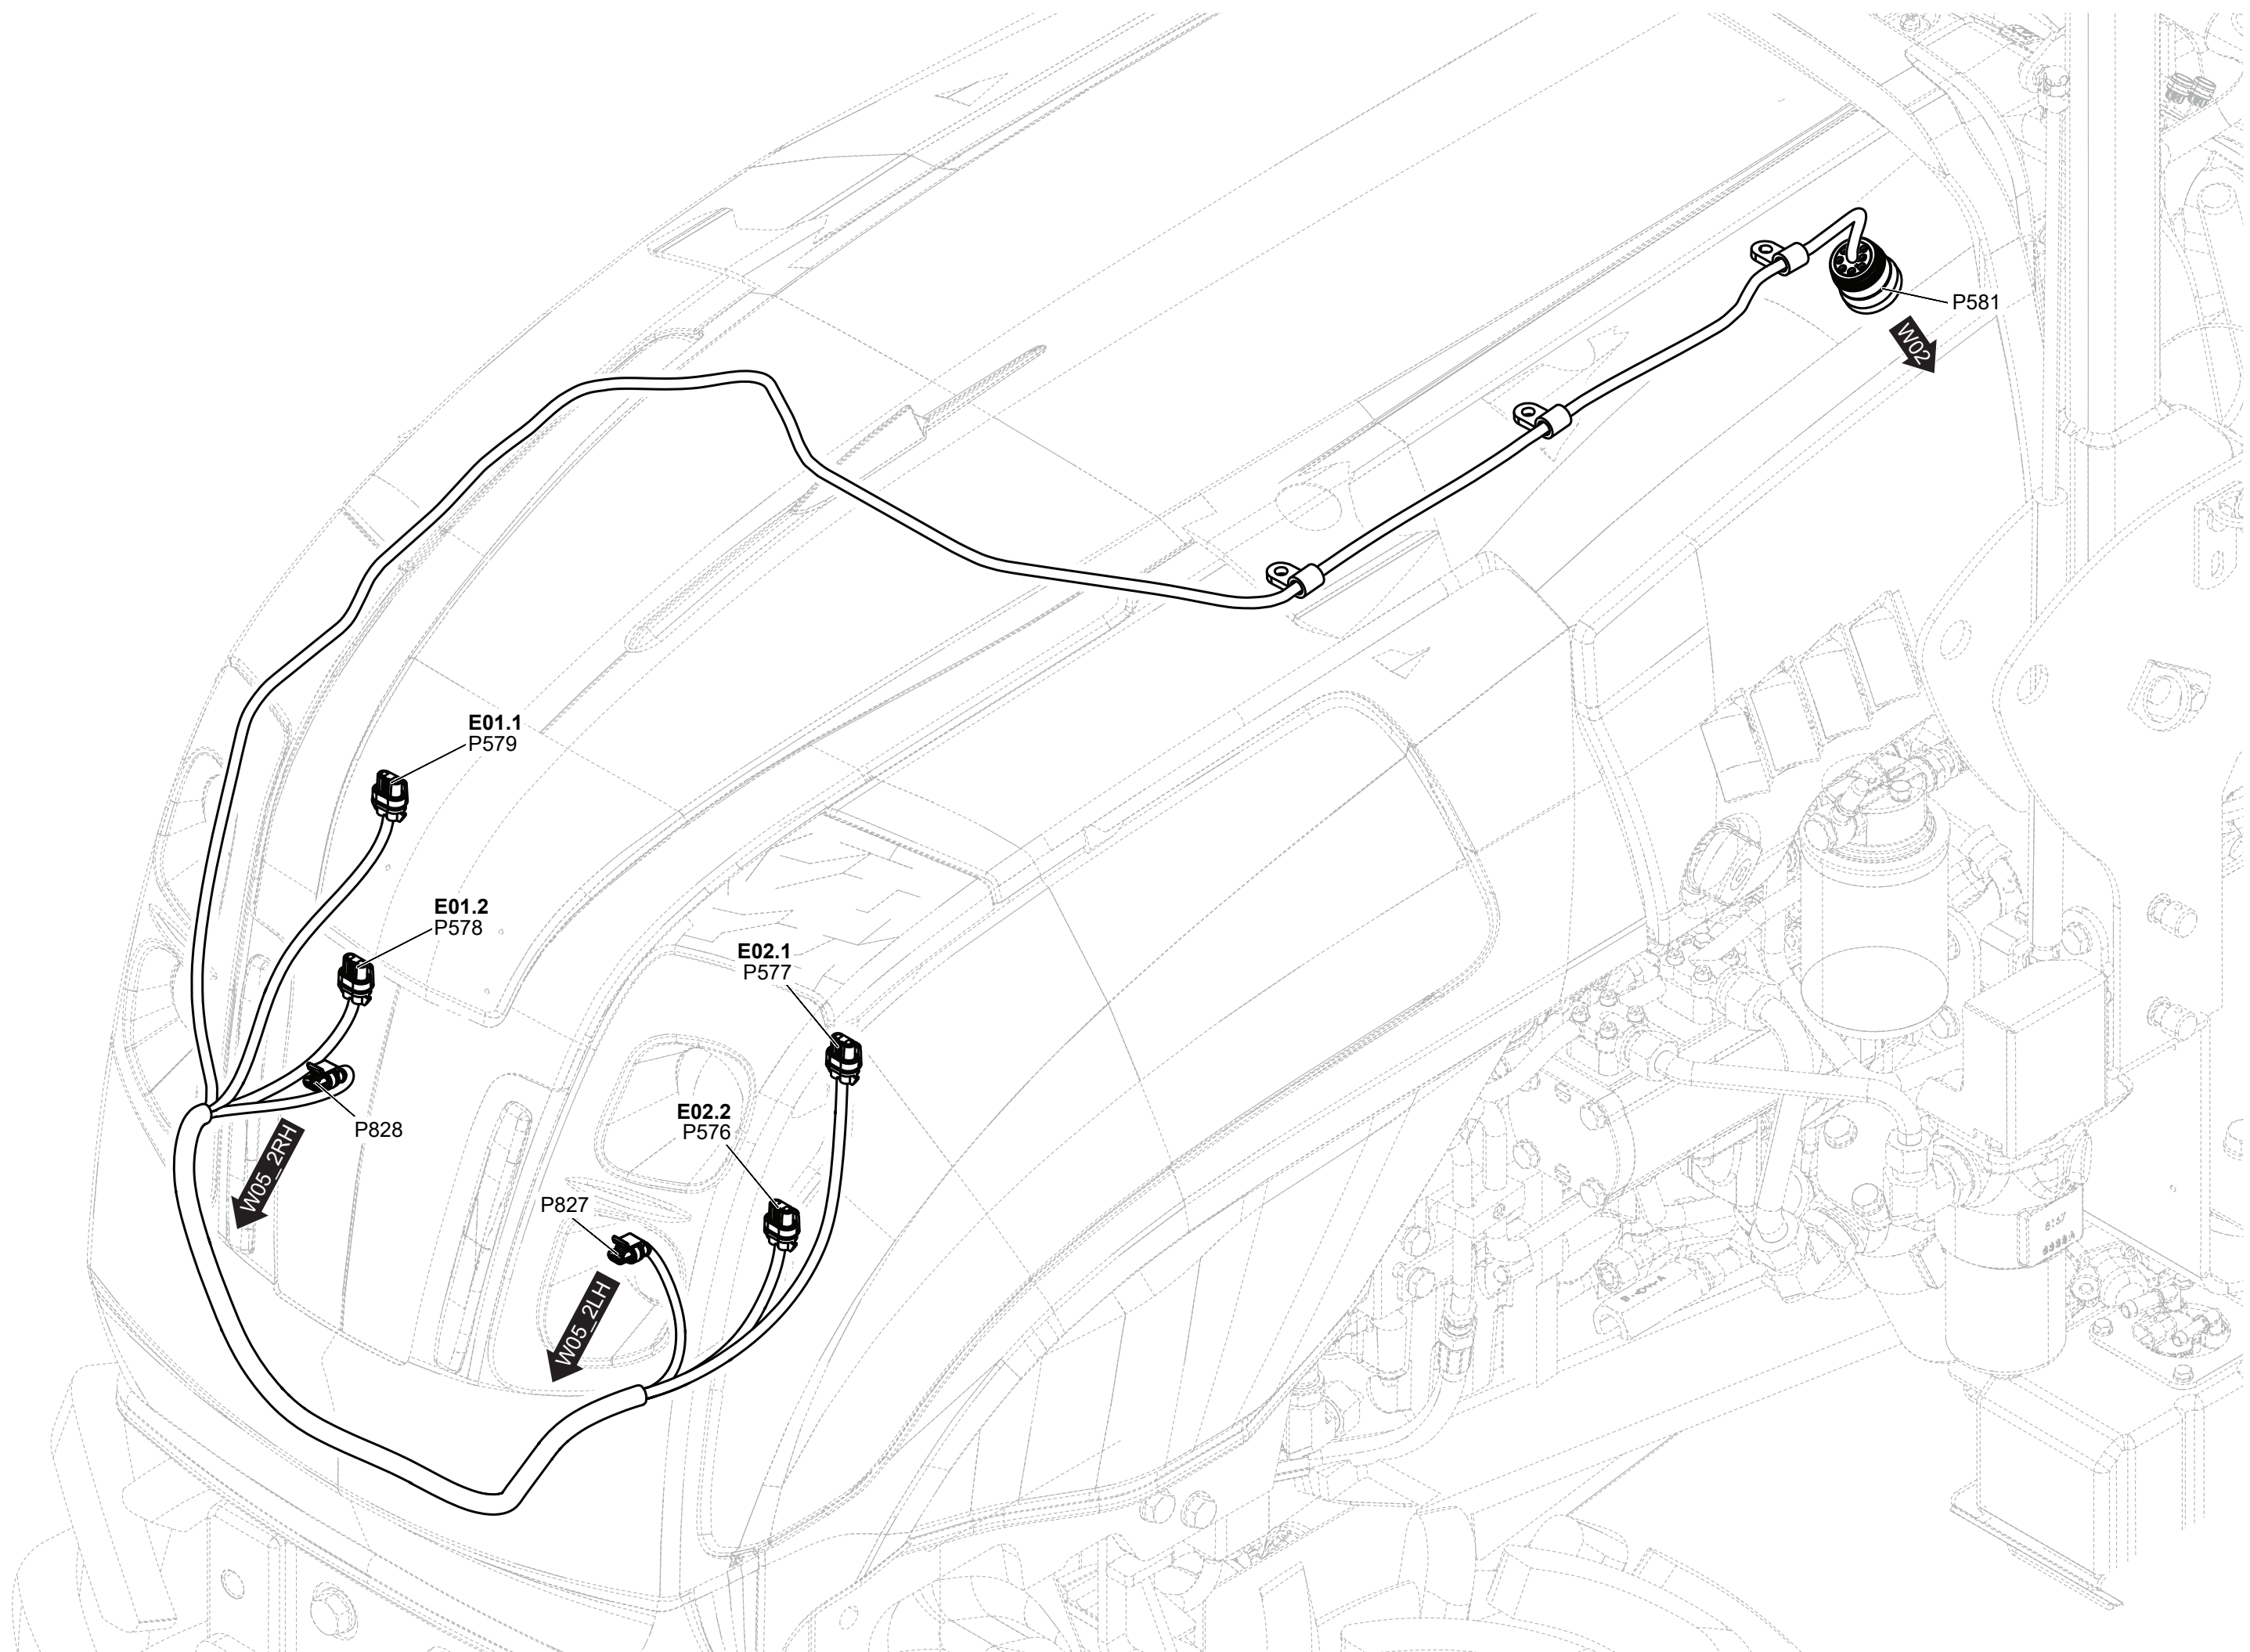


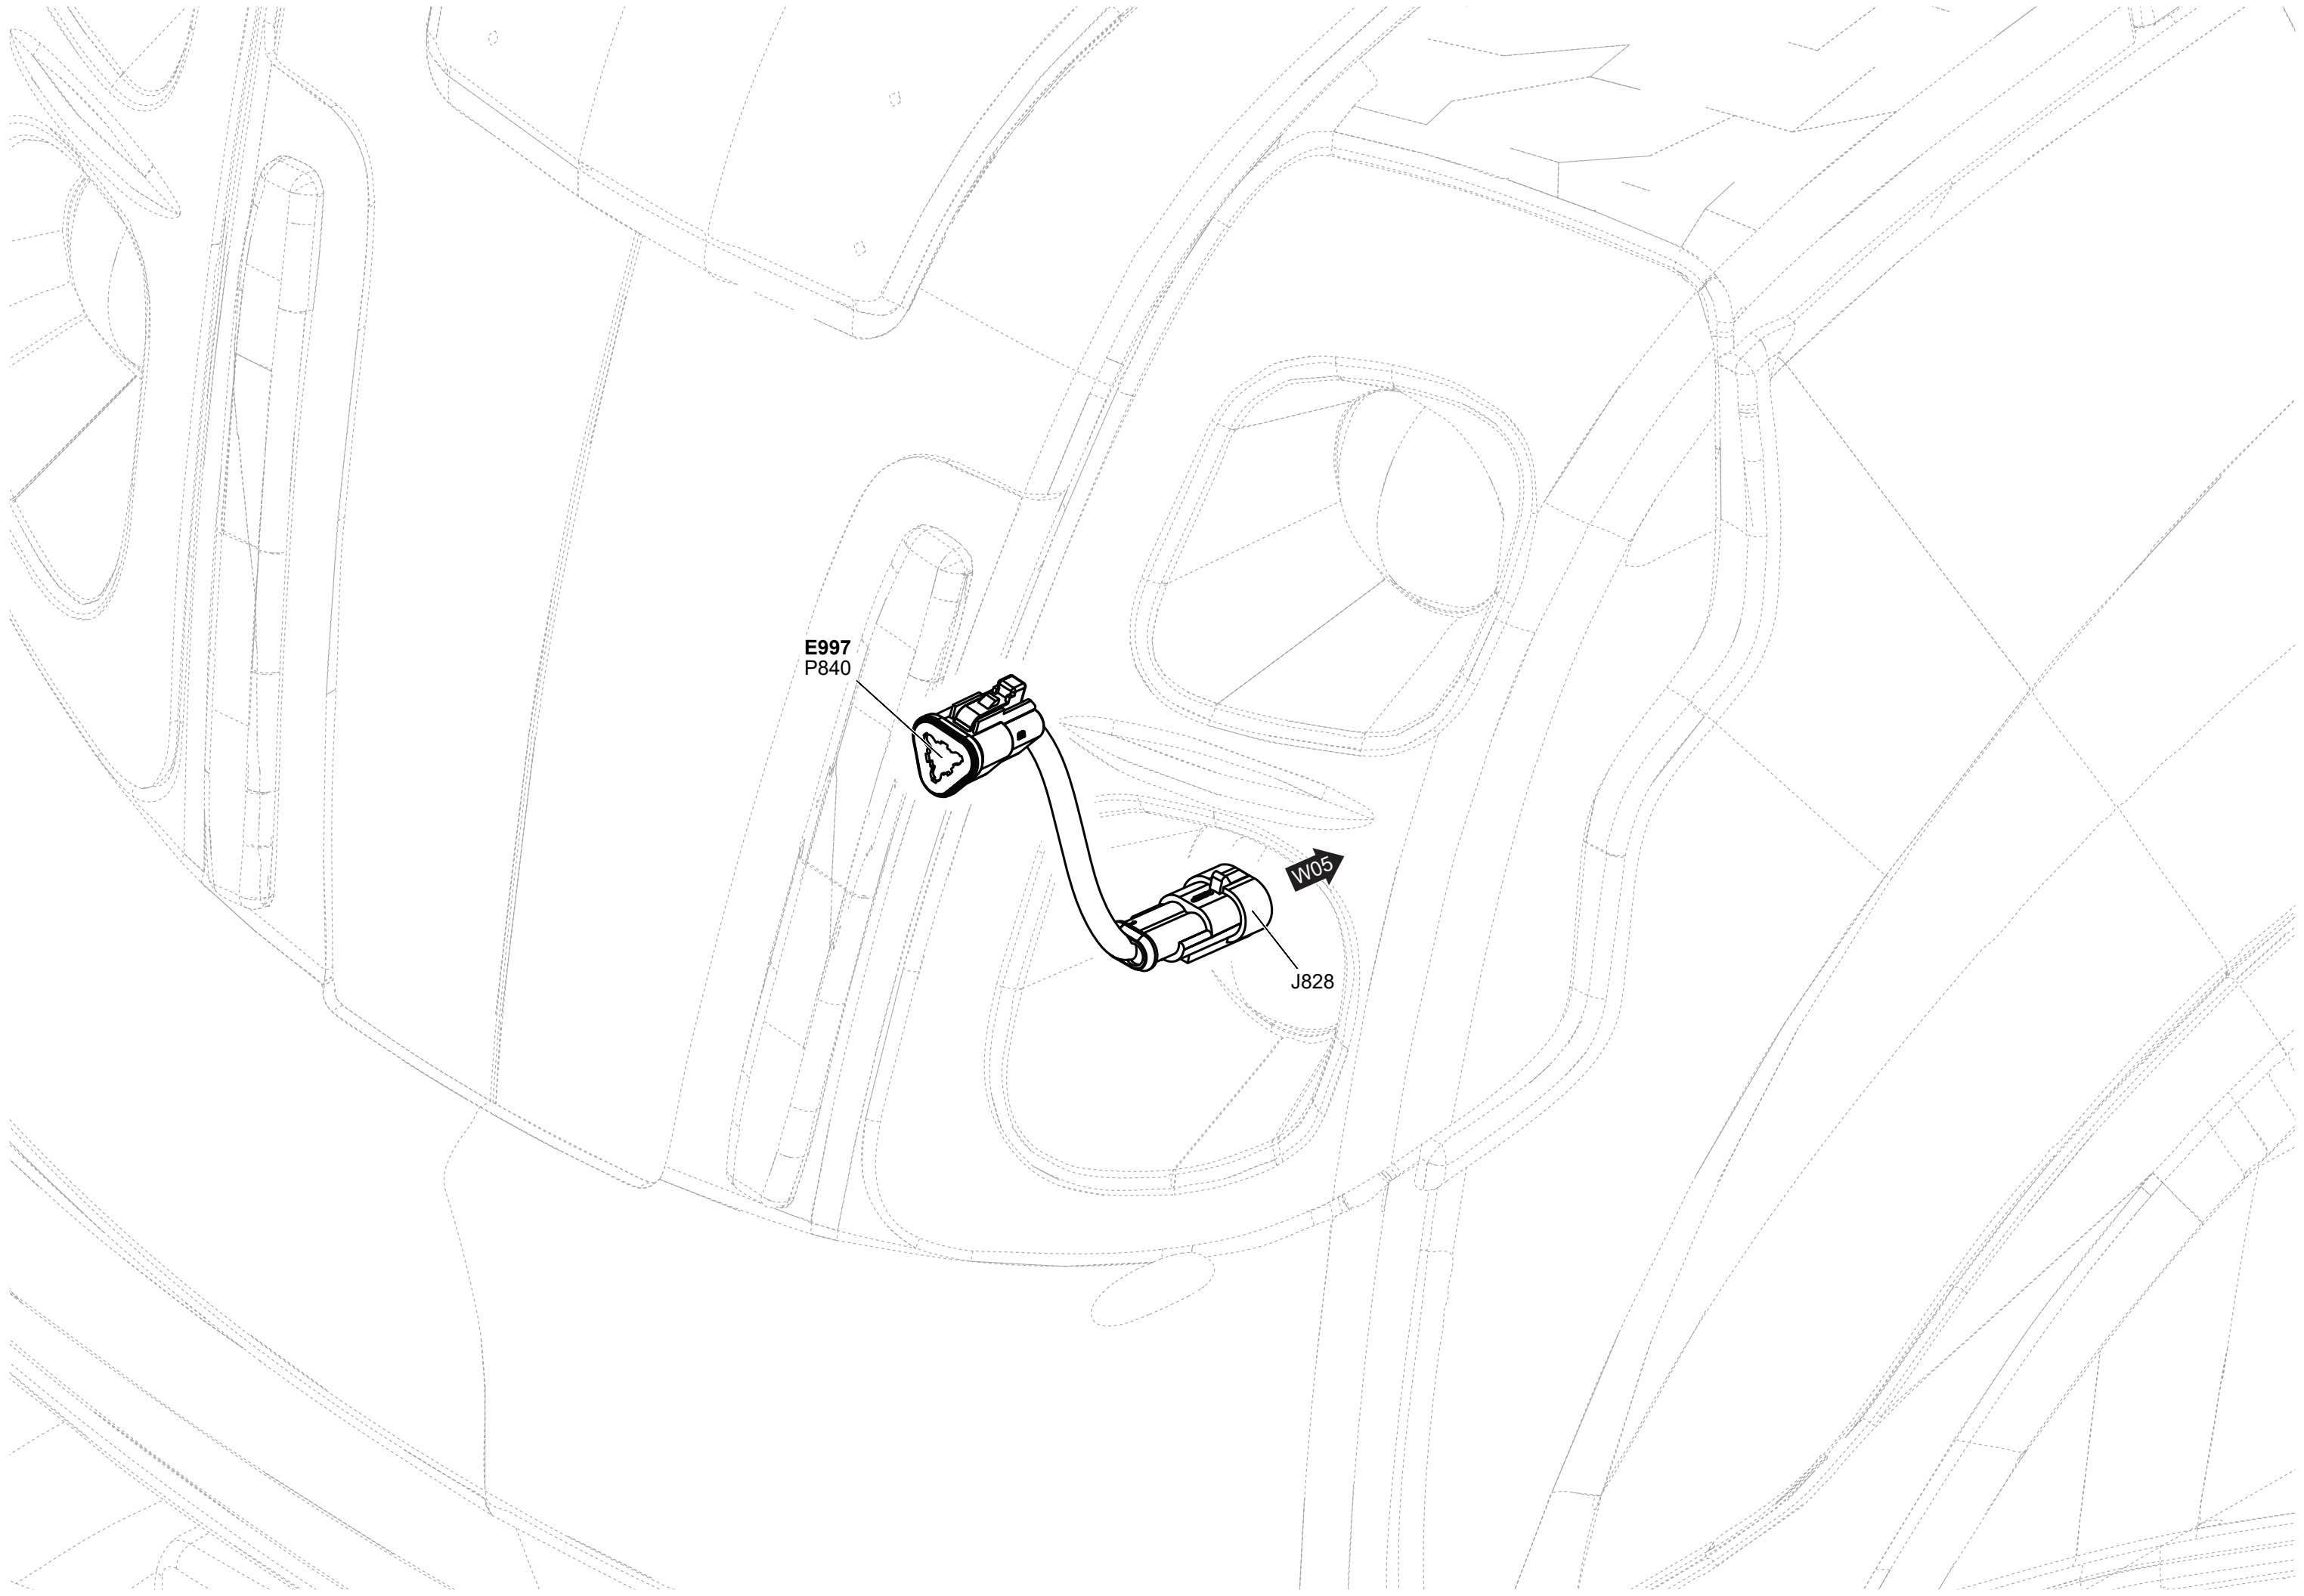















E997
P840

W05

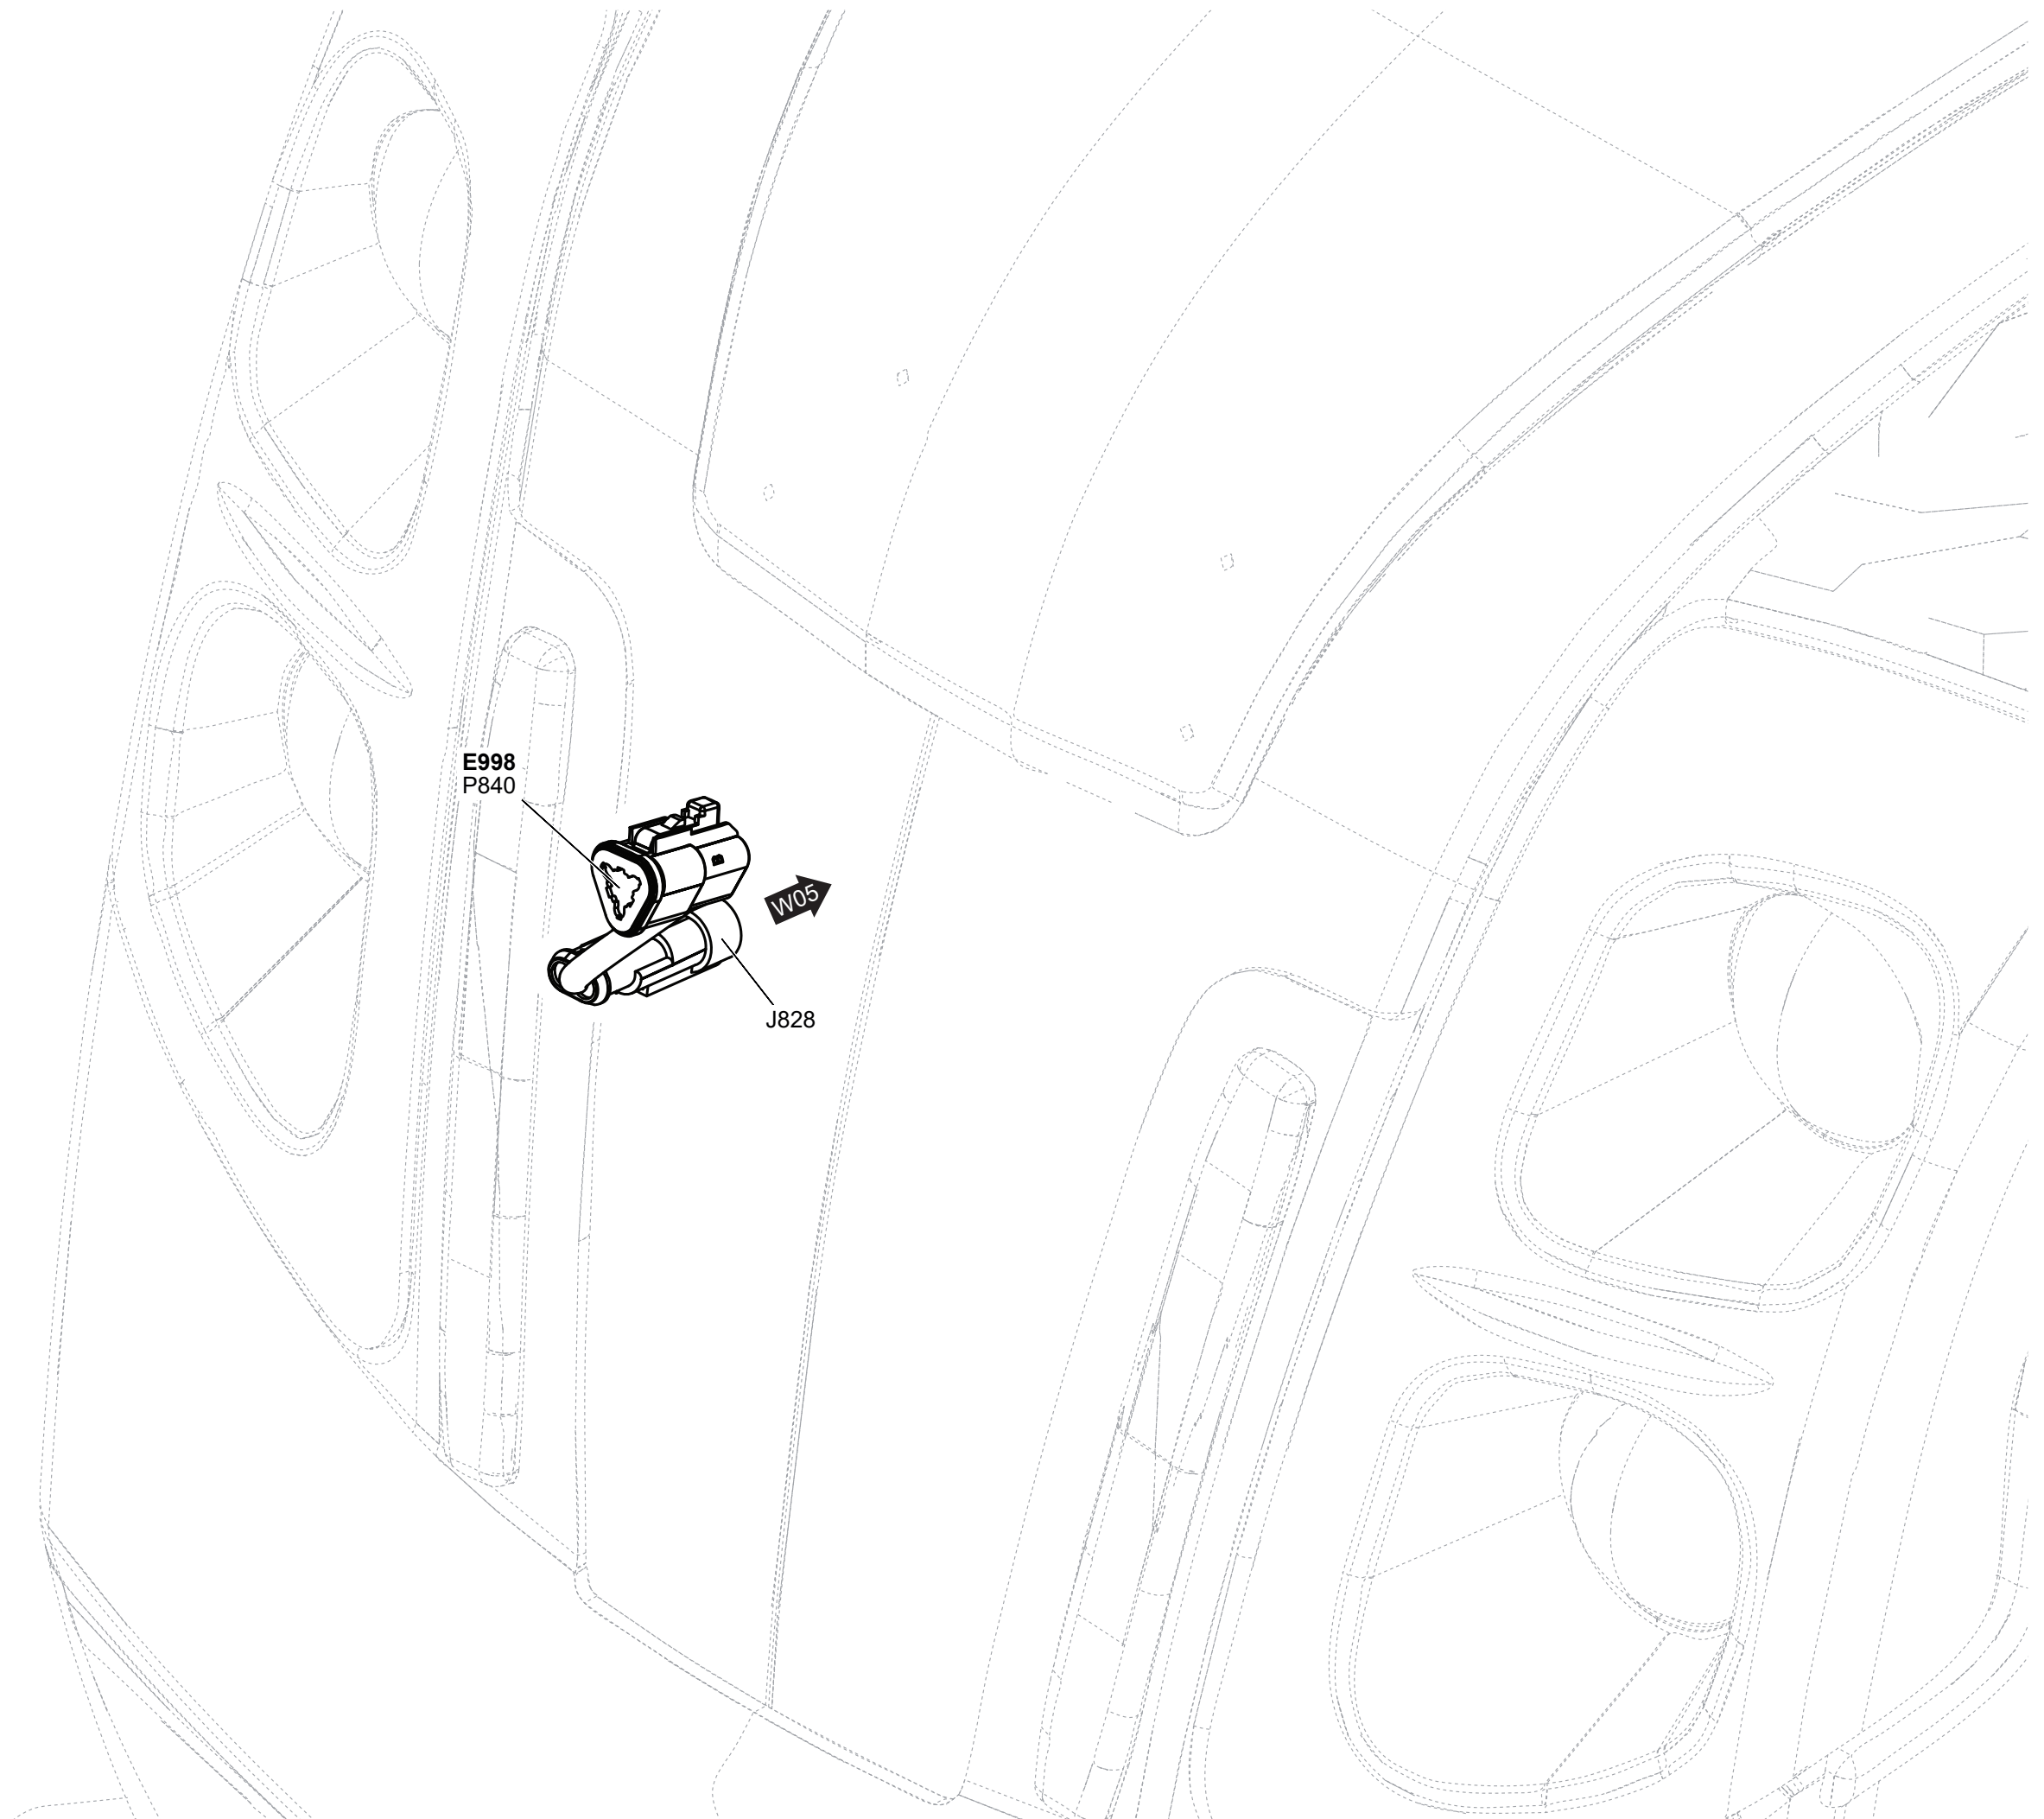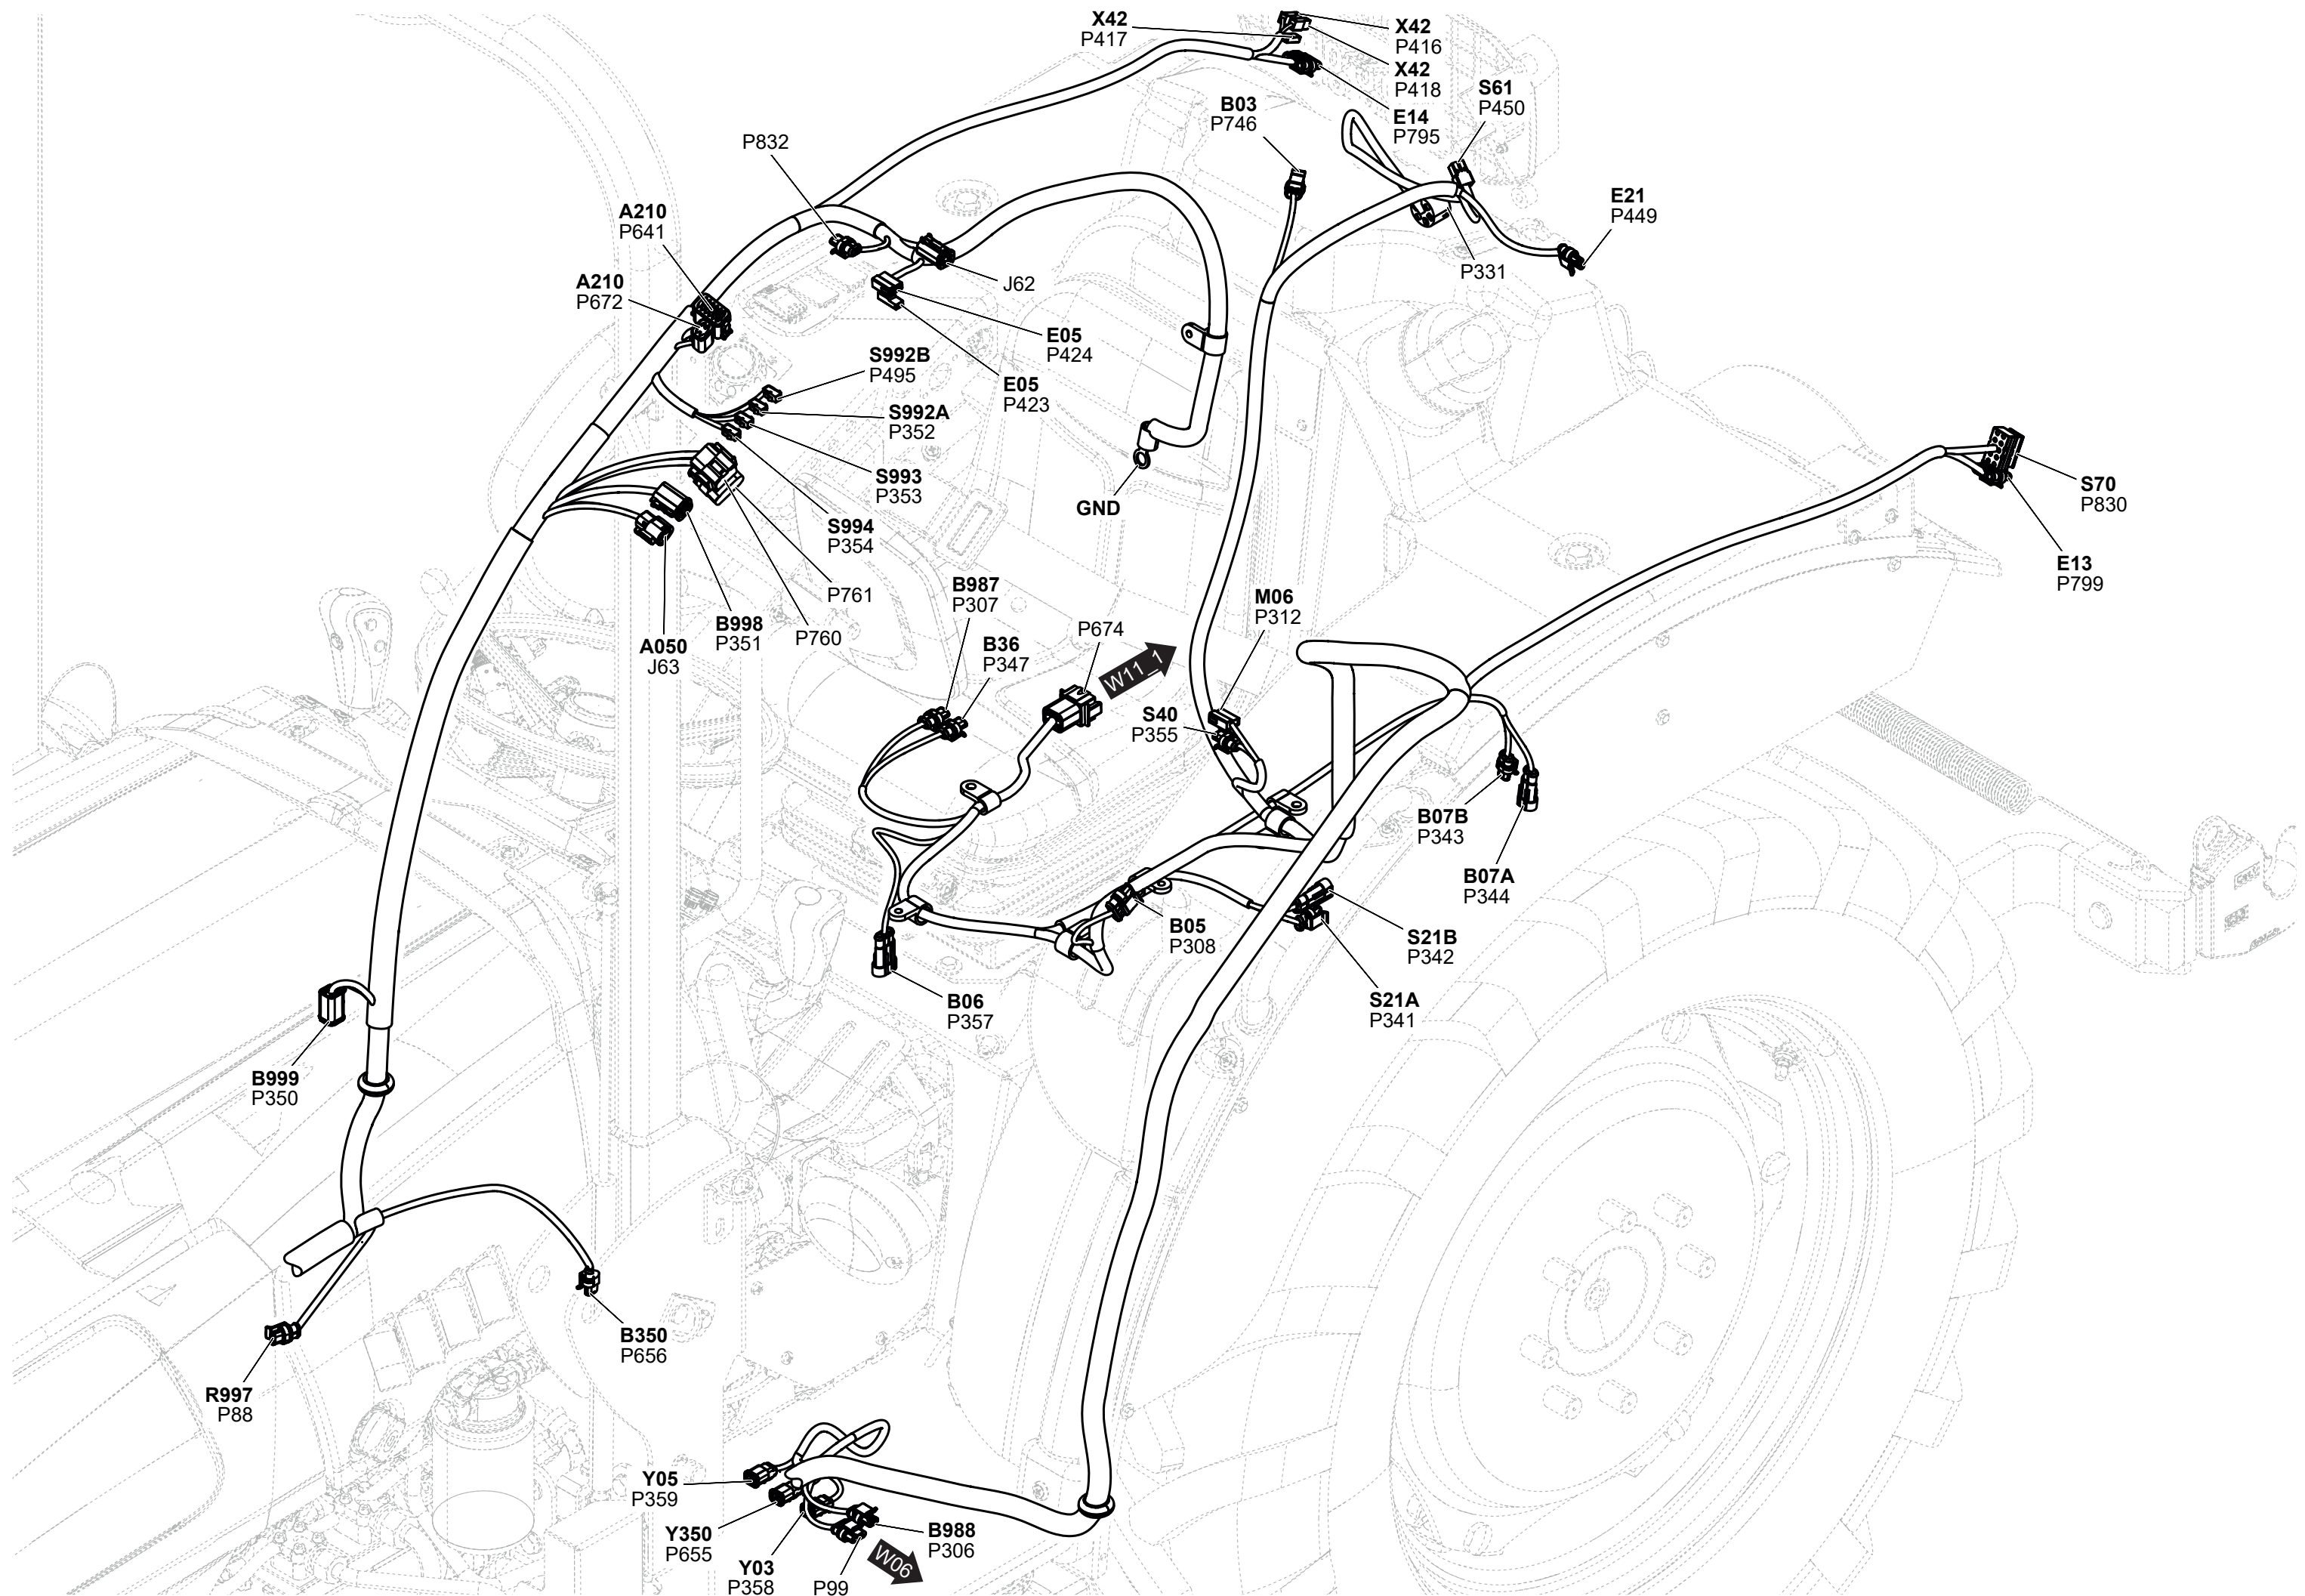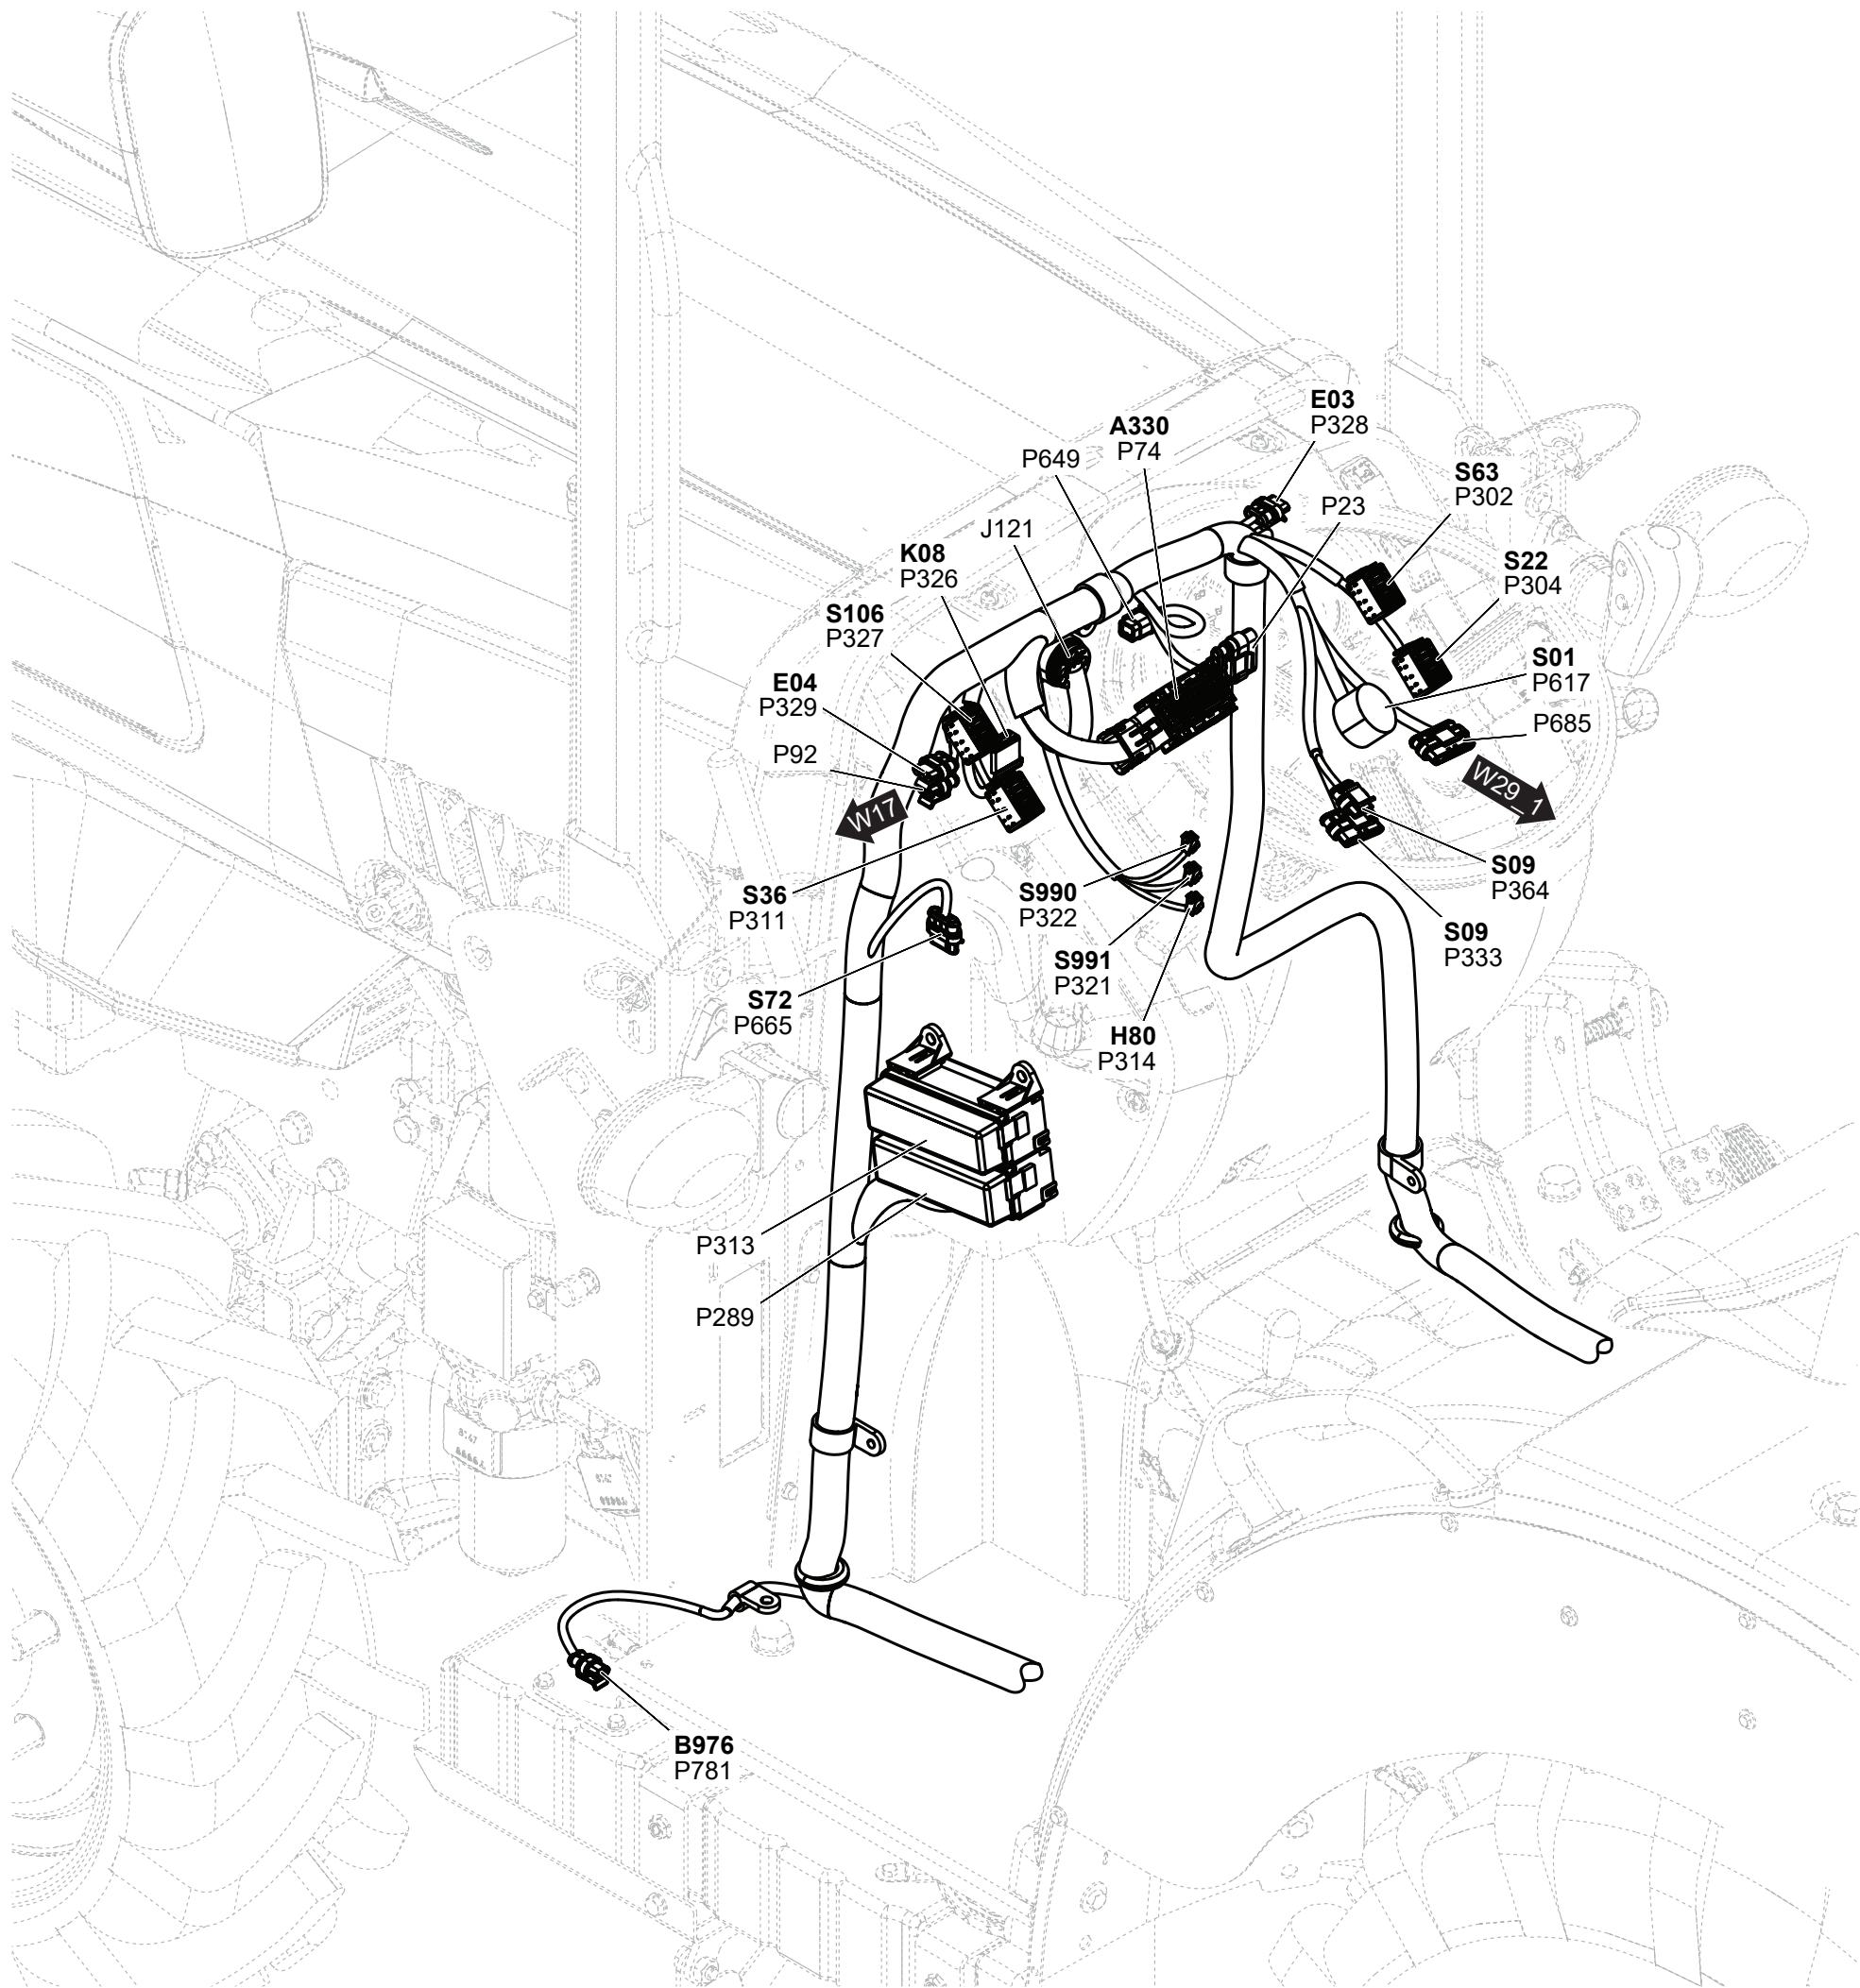
J828










REAR LH VIEW

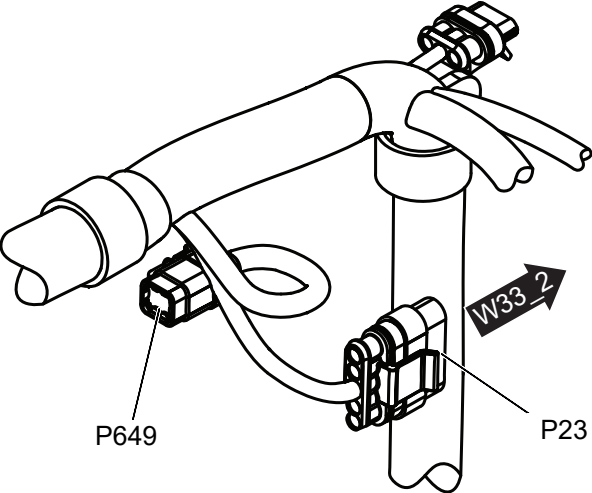










FRONT LH VIEW








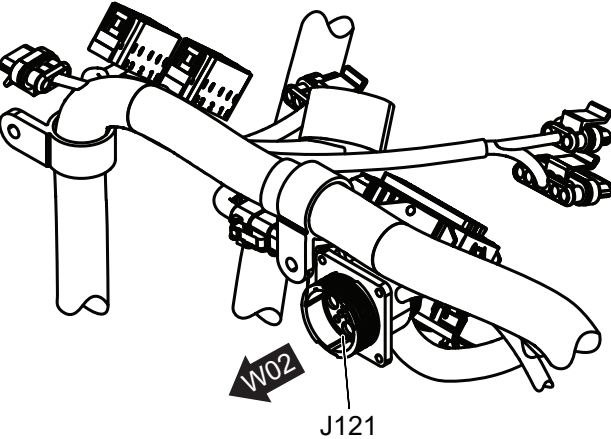


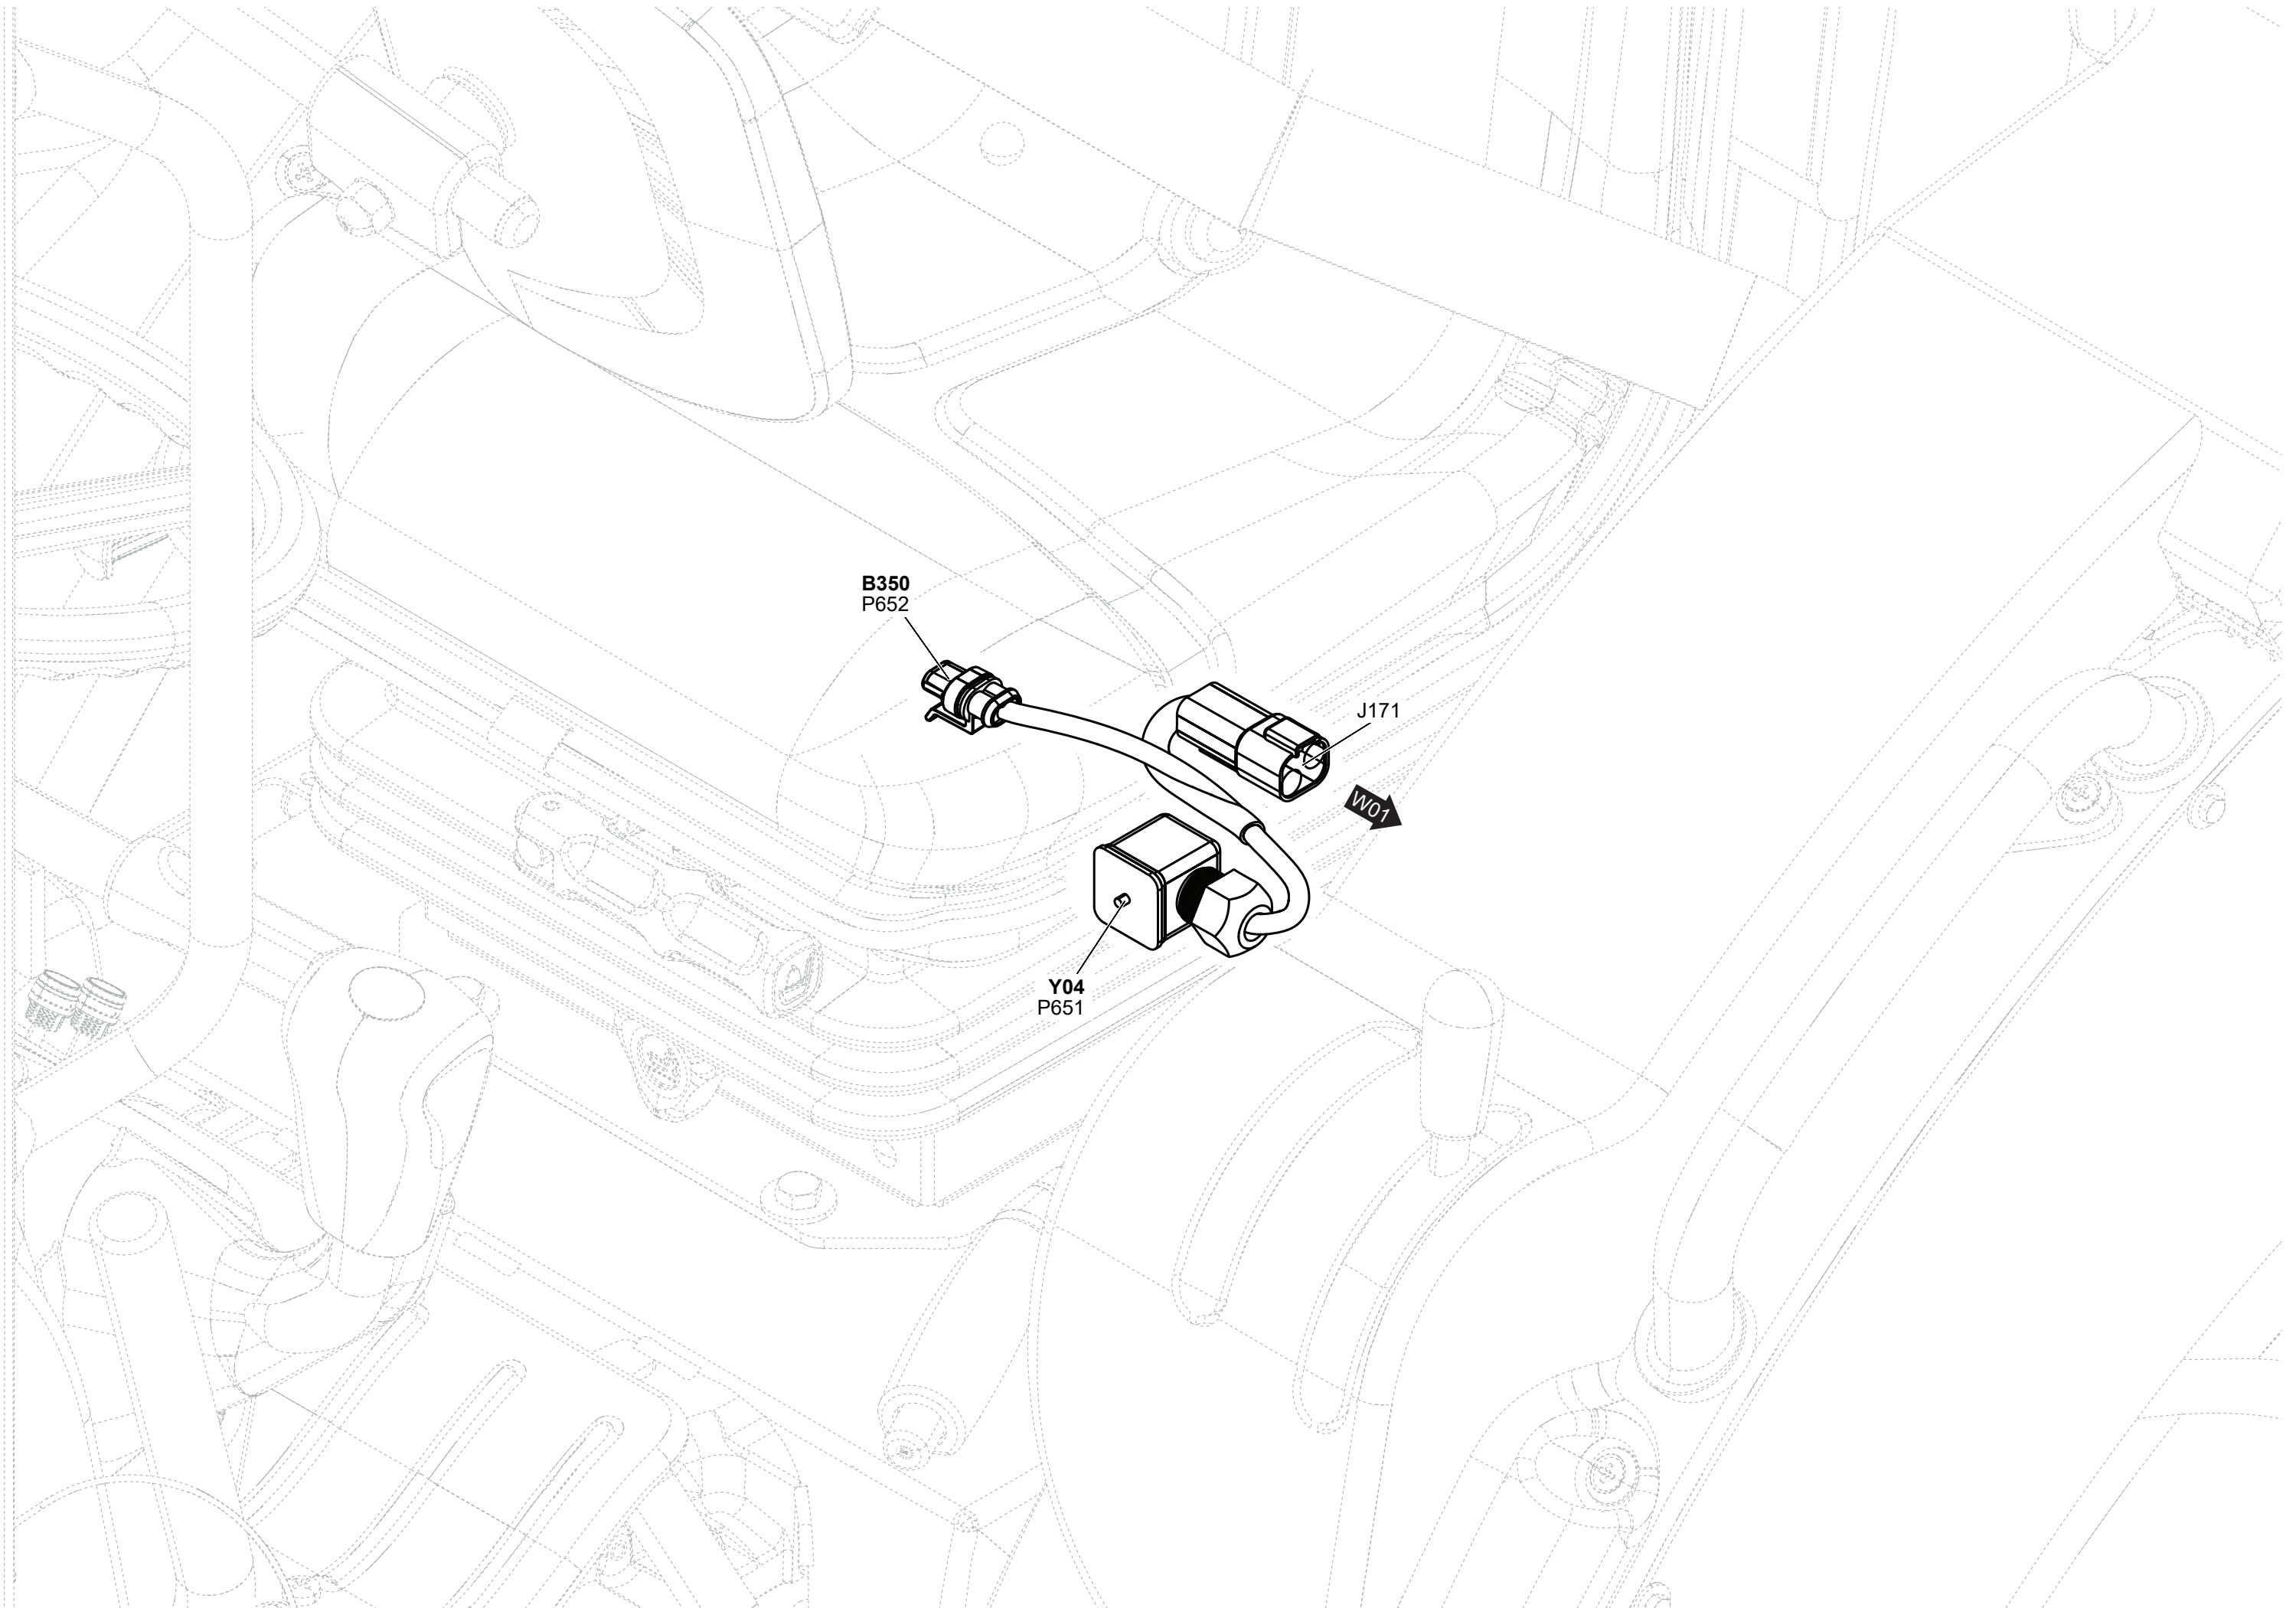

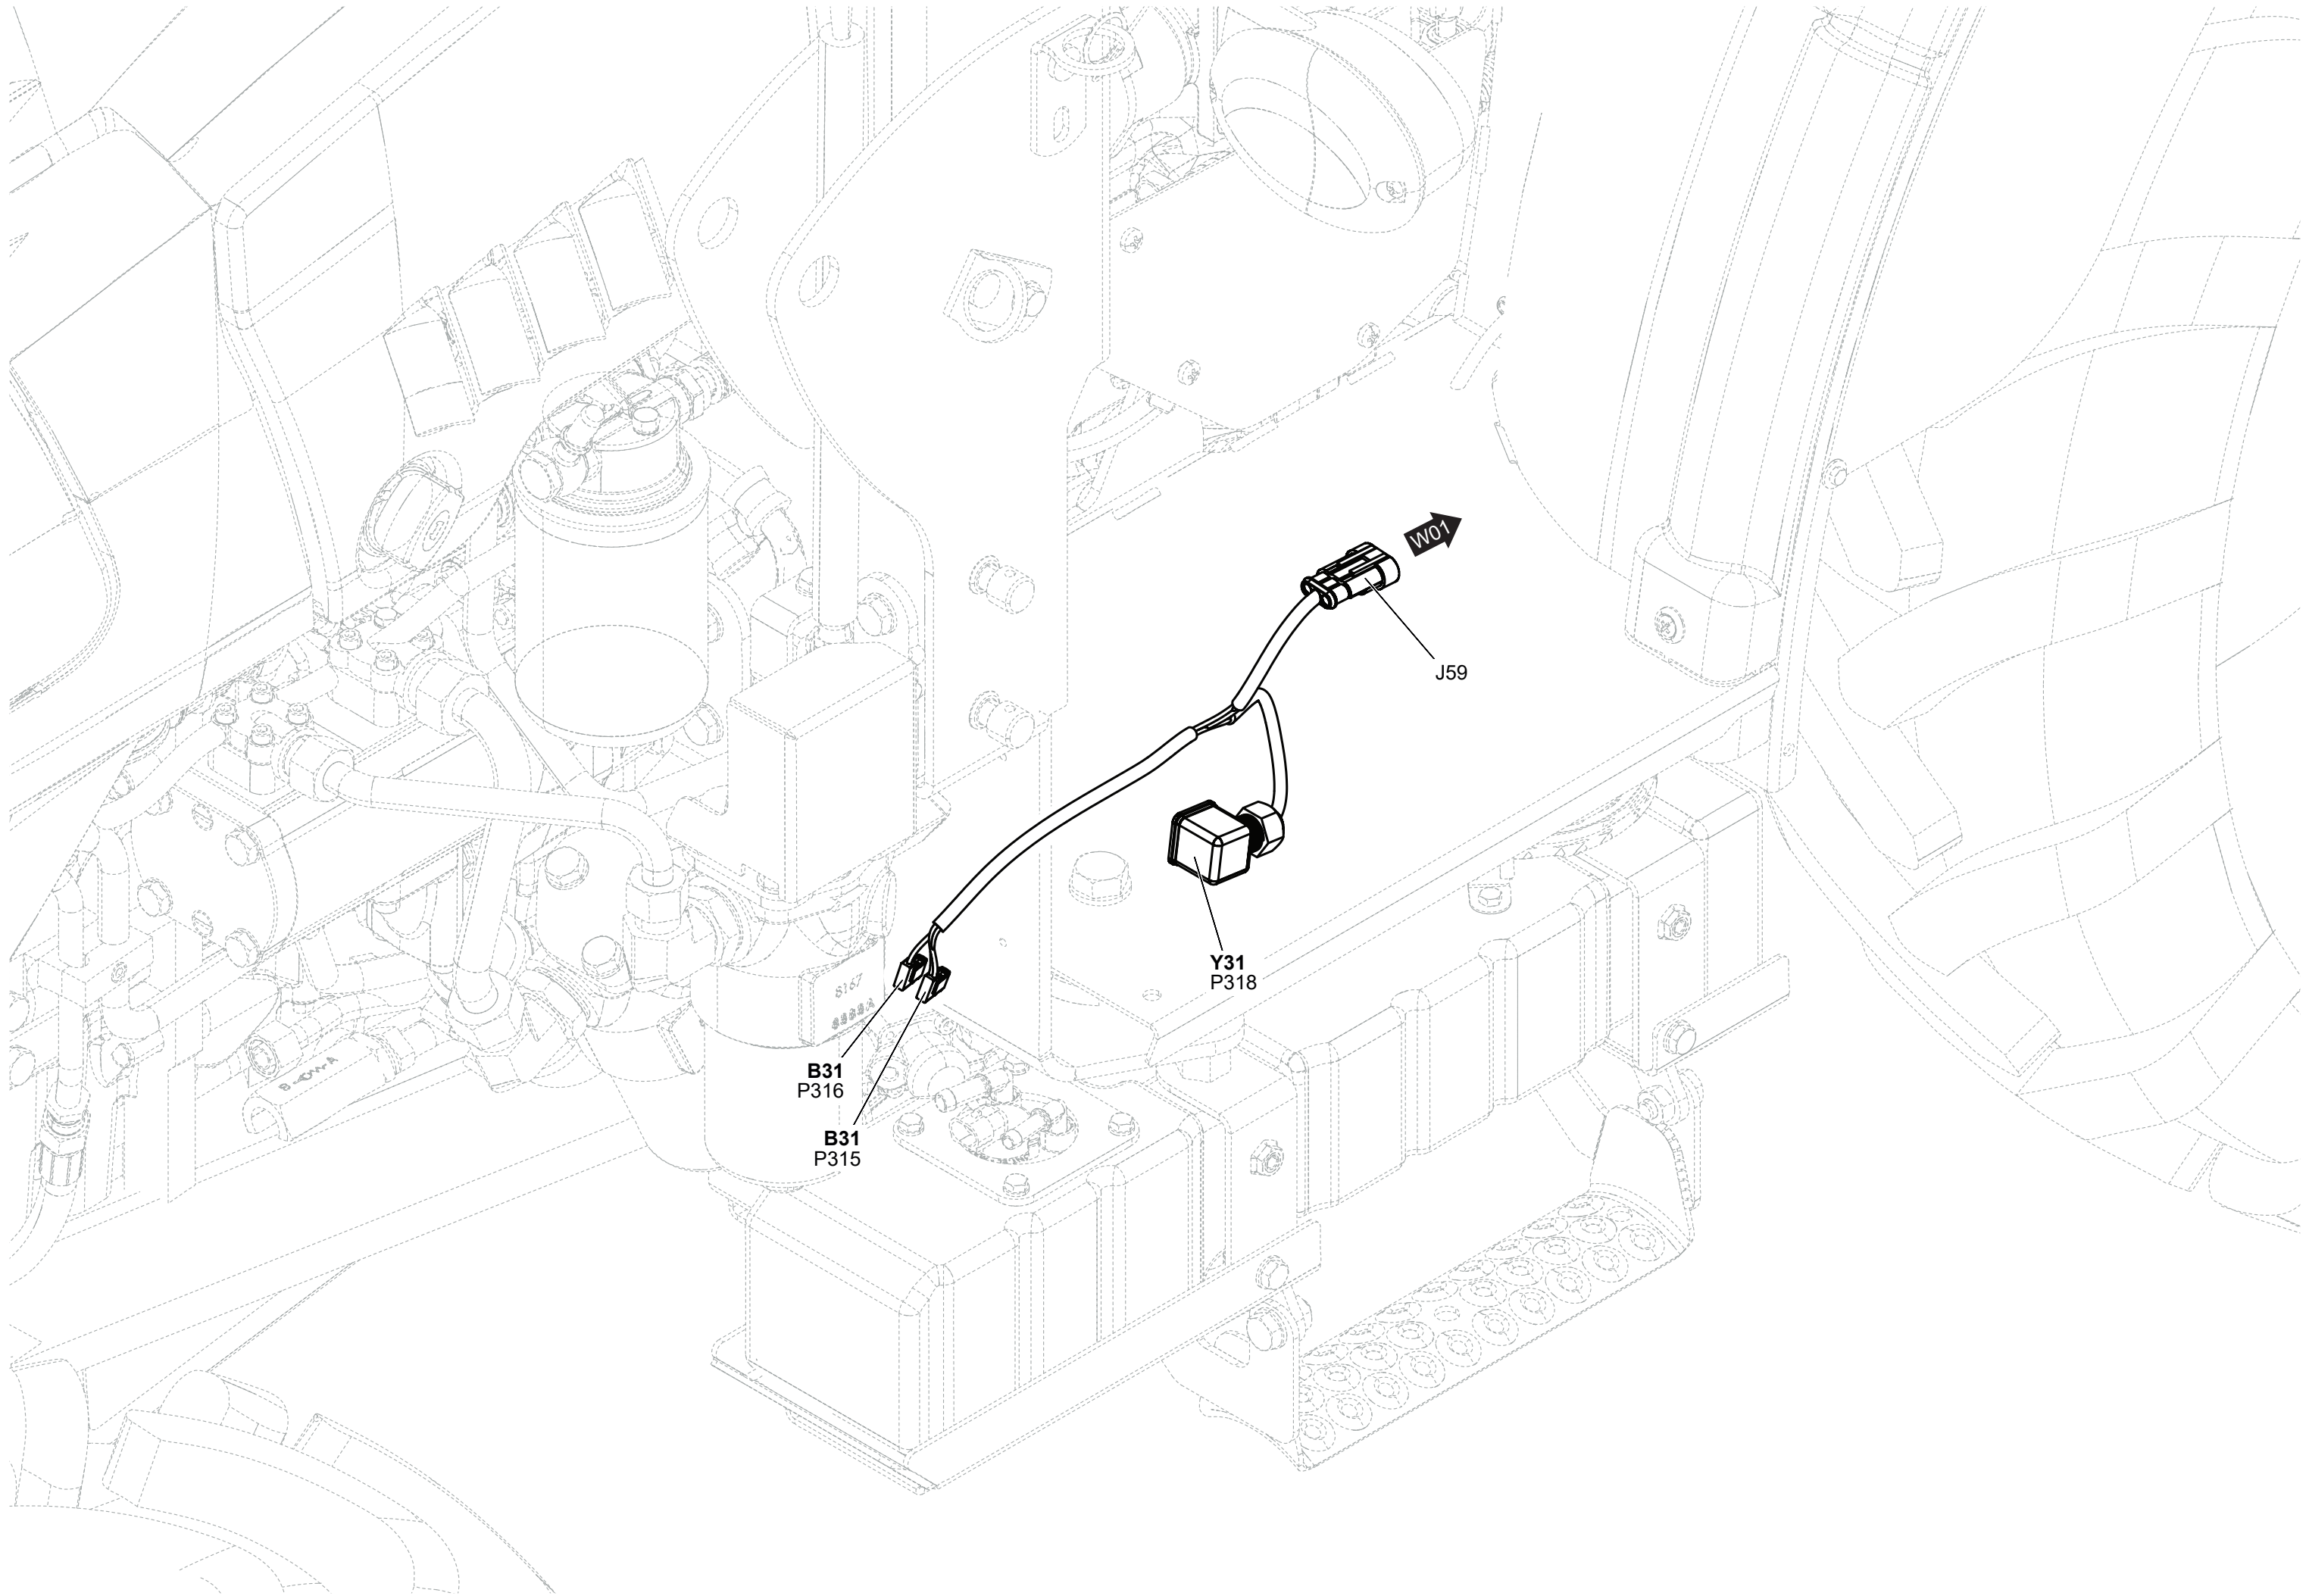

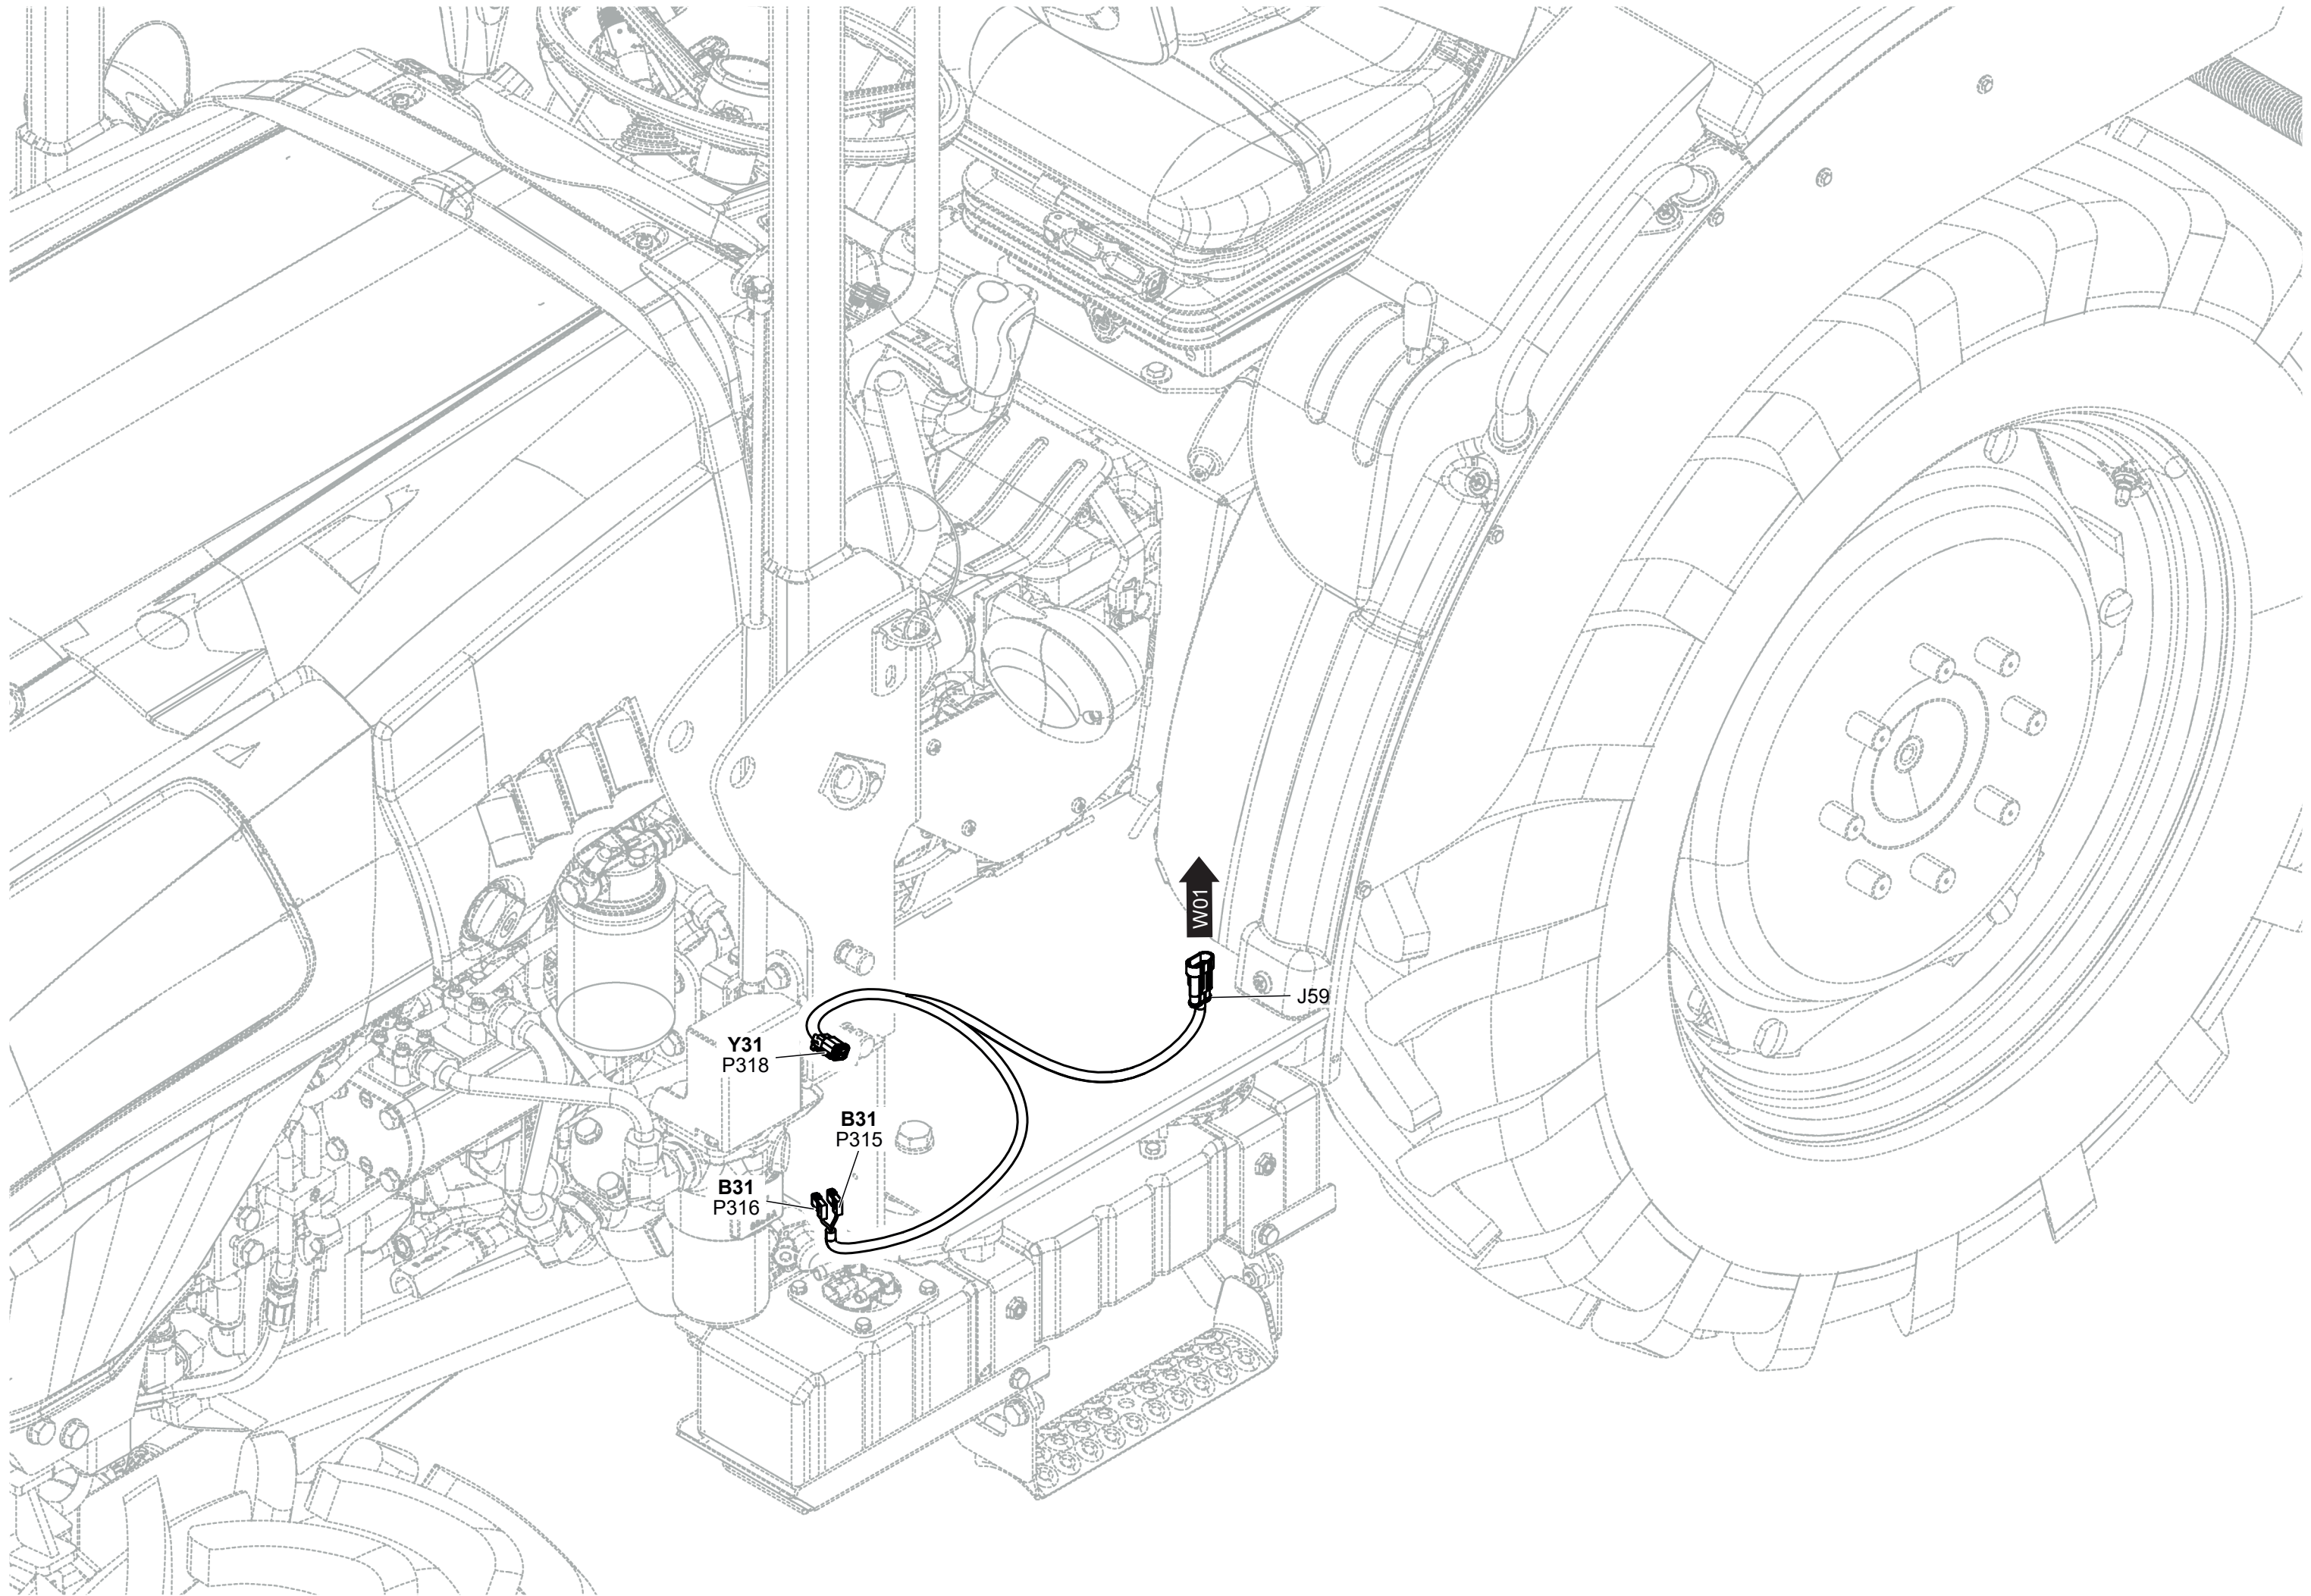

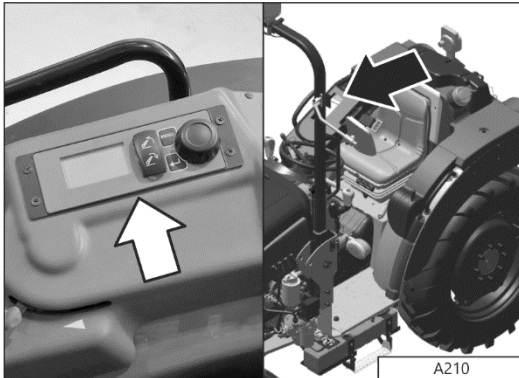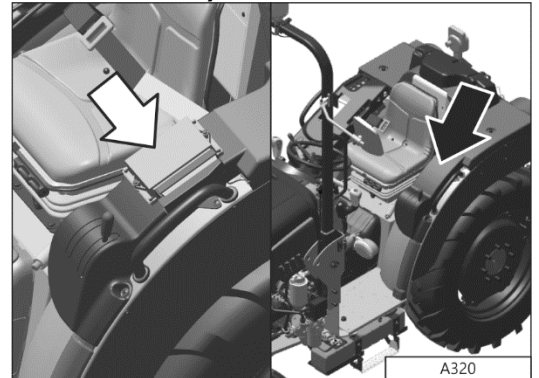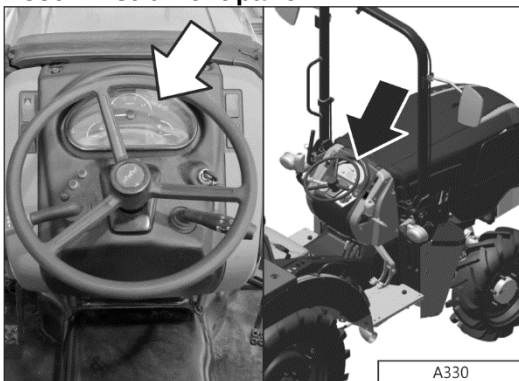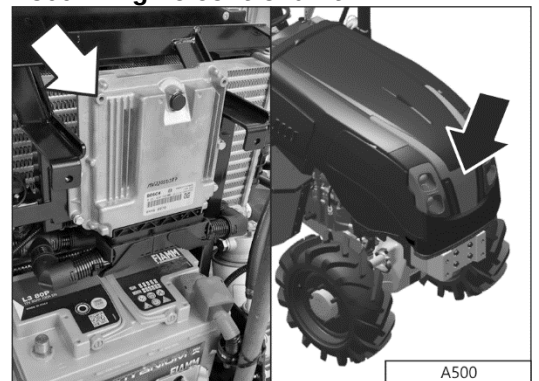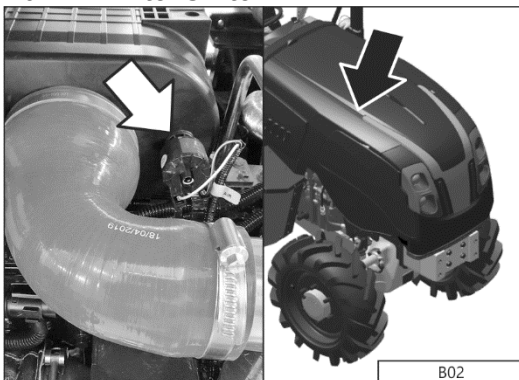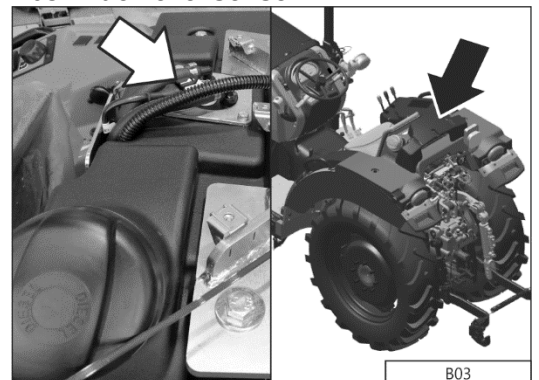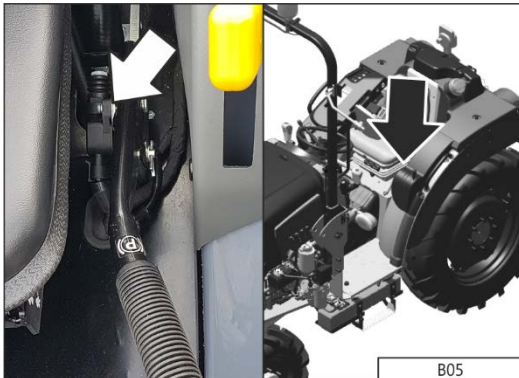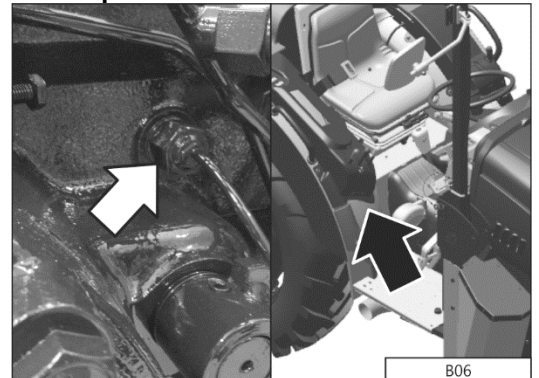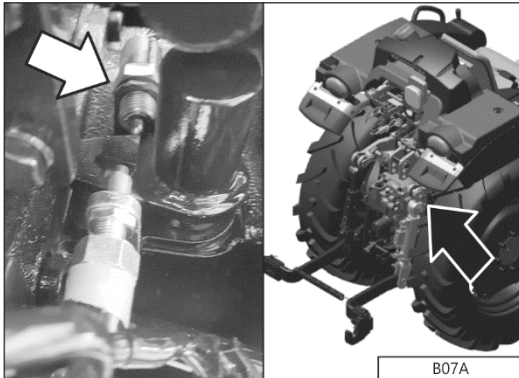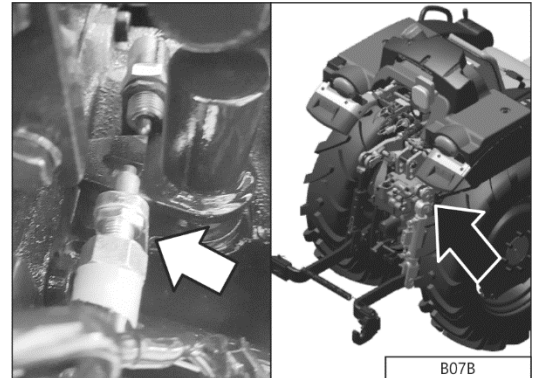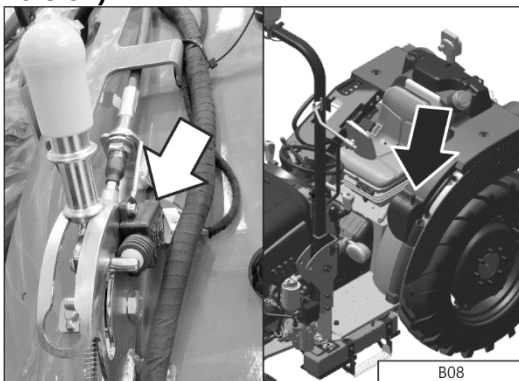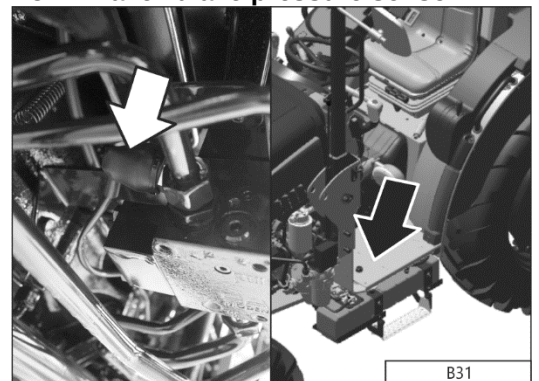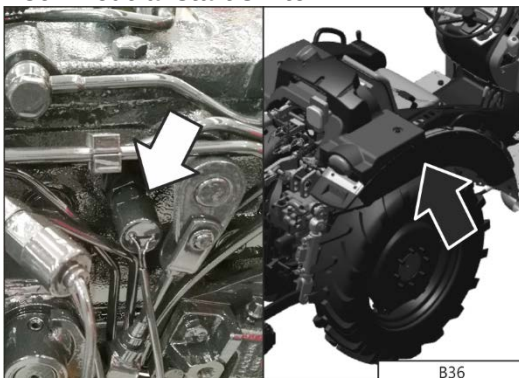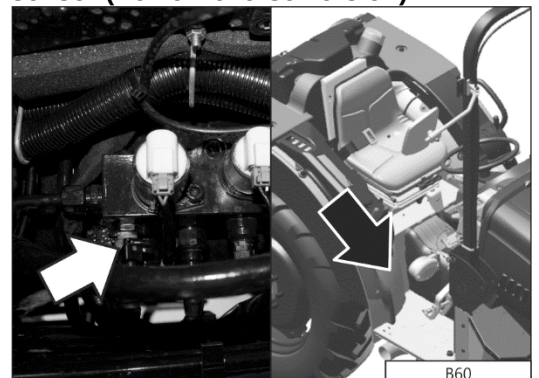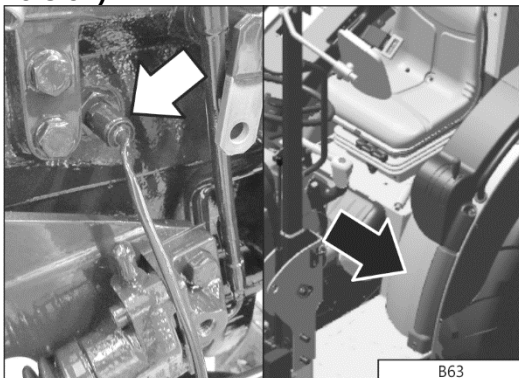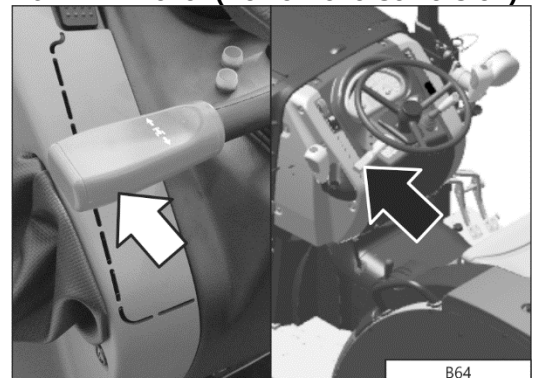
A210 - Electronic hitch control unit**A320 - Transmission control unit (Power reverse version)****A330 - Instrument panel****A500 - Engine control unit****B02 - Air filter switch****B03 - Fuel level sensor****B05 - Hand brake switch****B06 - Speed Sensor**

B07A - 540E/1000 PTO selector**B07B - 540 PTO selector****B08 - Mechanical PTO switch (Mechanical version)****B31 - Trailer brake pressure sensor****B36 - Neutral start switch****B60 - Transmission oil temperature sensor (Power reverse version)****B63 - Ranges switch (Power reverse version)****B64 - FNR lever (Power reverse version)**


B65 - Clutch pedal position sensor (Power reverse version)



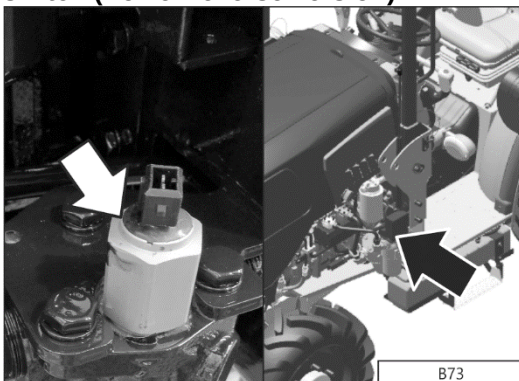
B73 - Transmission oil filter clogged switch (Power reverse version)




B112L - LHS brake pedal switch

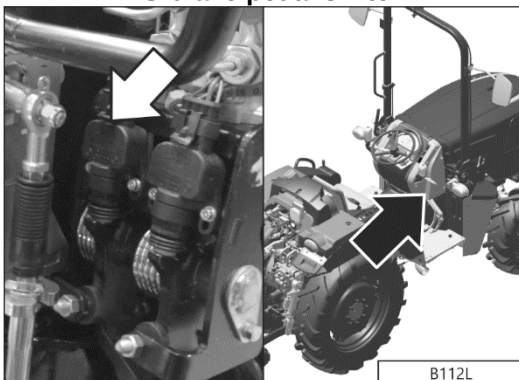


B200 - Electronic hitch position sensor

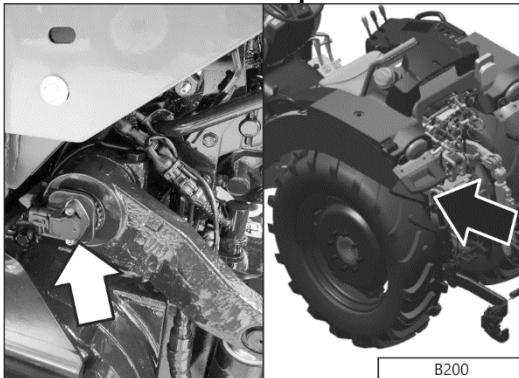


B69 - Brakes oil level switch

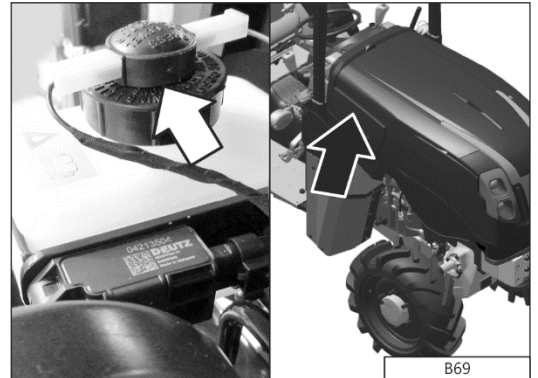

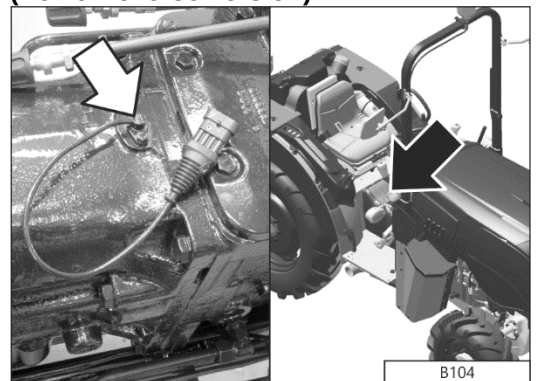
B104 - Transmission out speed signal (Power reverse version)




B112R - RHS brake pedal switch

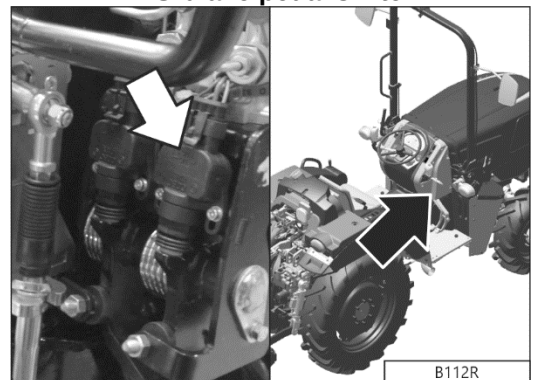


B201 - Electronic hitch draft sensor

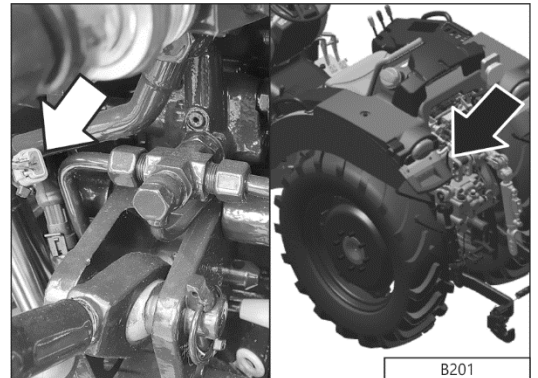

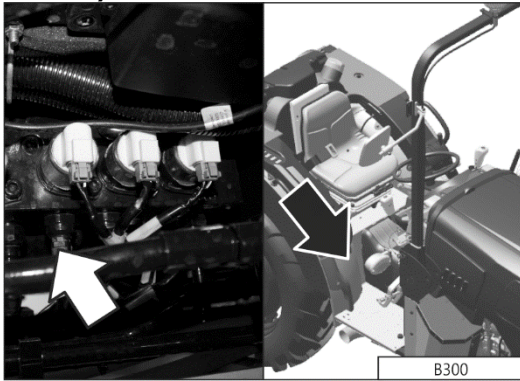
B300 - HI pressure sensor (Power reverse version)



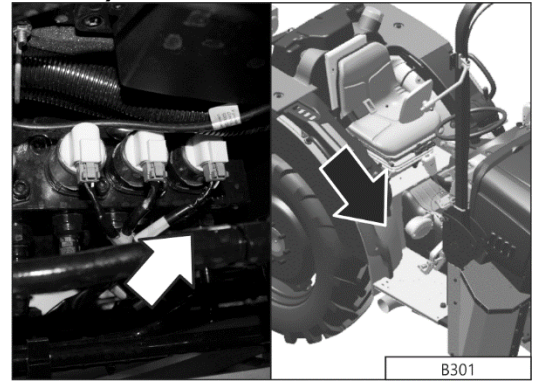
B301 - LO pressure sensor (Power reverse version)



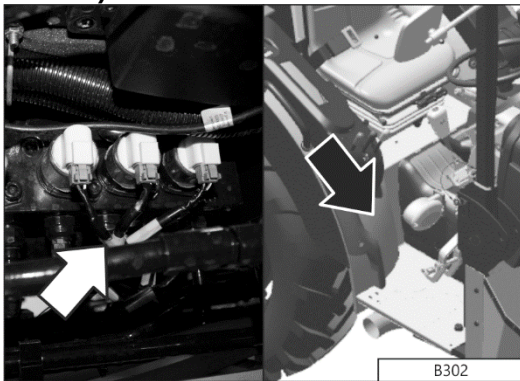
B302 - RV pressure sensor (Power reverse version)



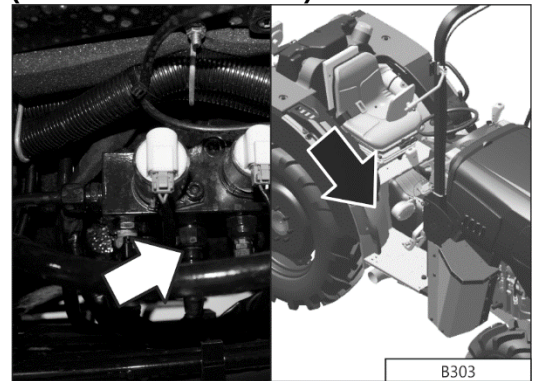
B303 - Transmission oil pressure switch (Power reverse version)



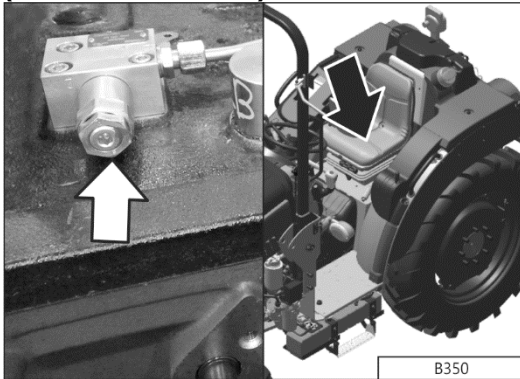
B350 - PTO priority valve pressure switch (Mechanical version)



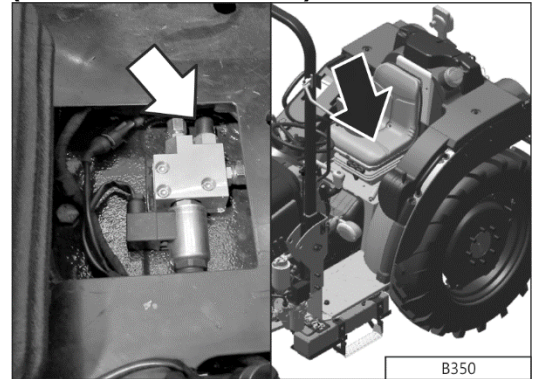
B350 - PTO priority valve pressure switch (Power reverse version)



















B509 - Air temperature sensor








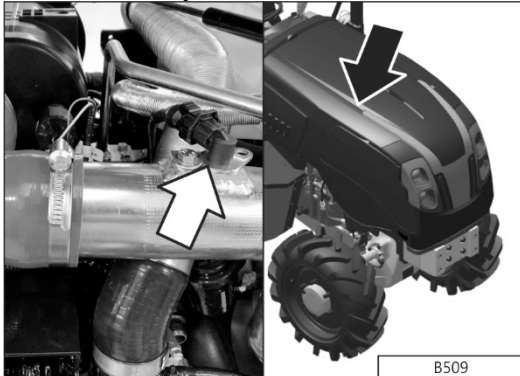









B510 - Water in fuel switch








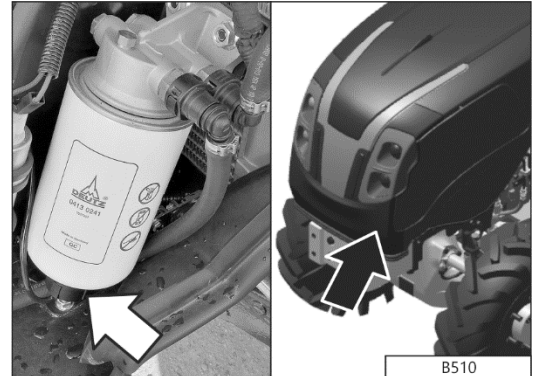


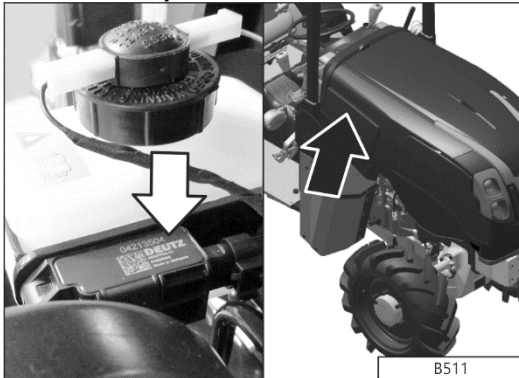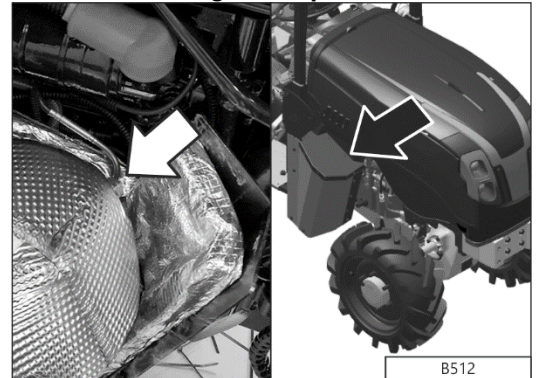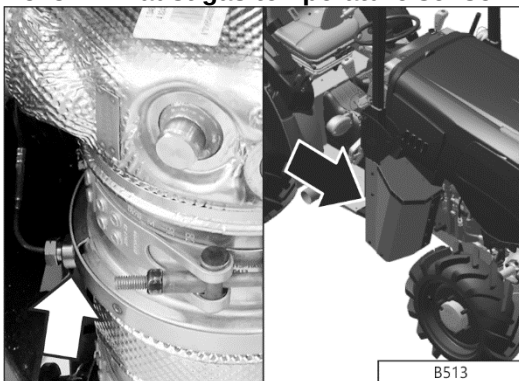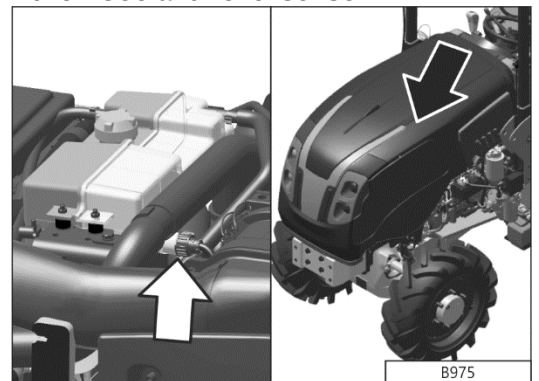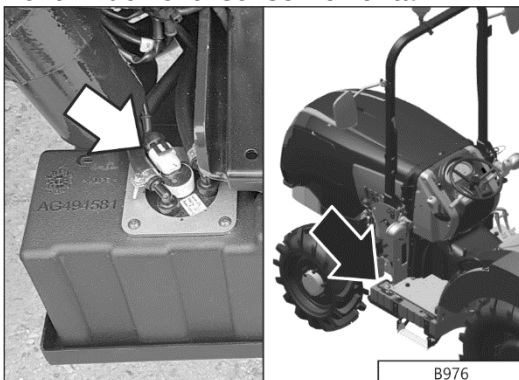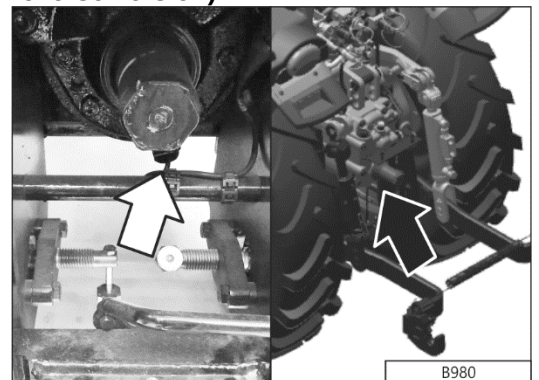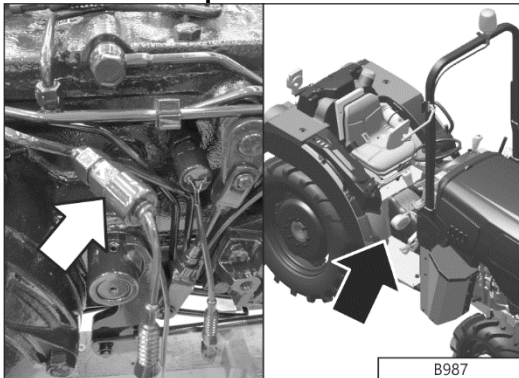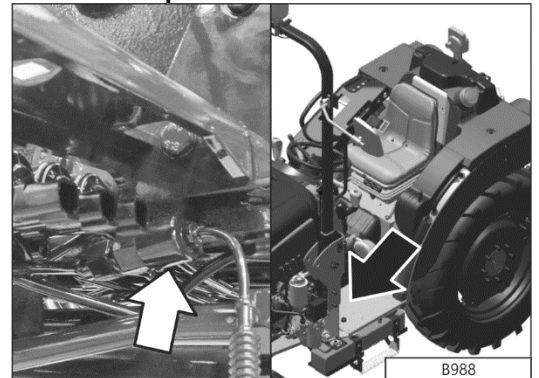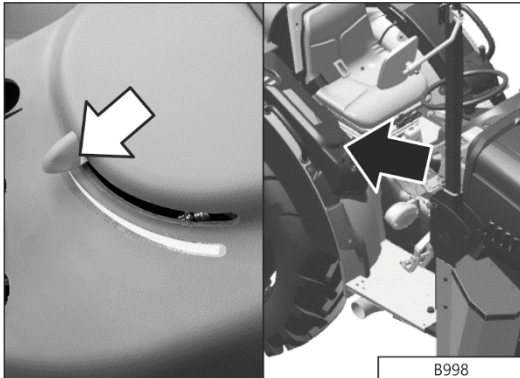
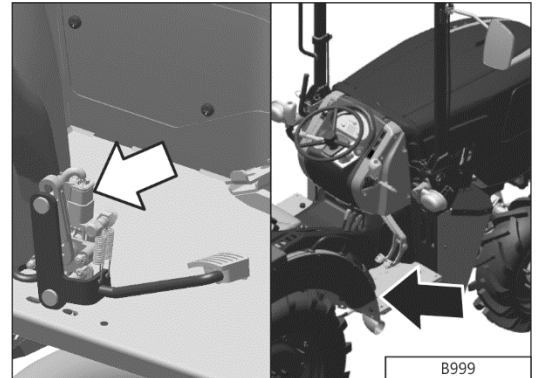
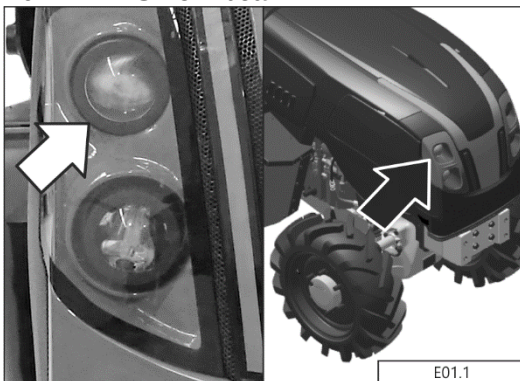
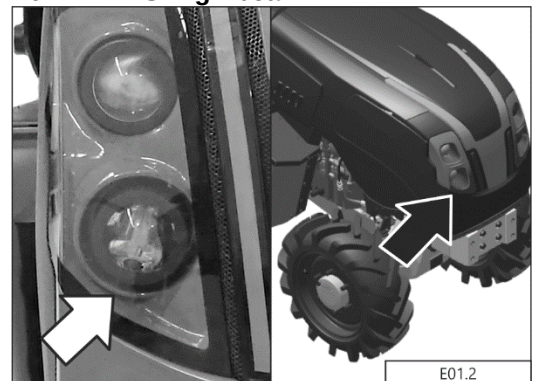
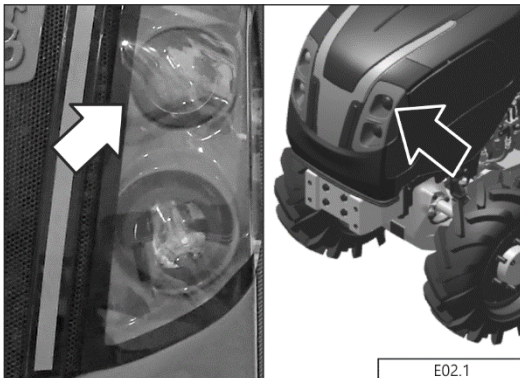
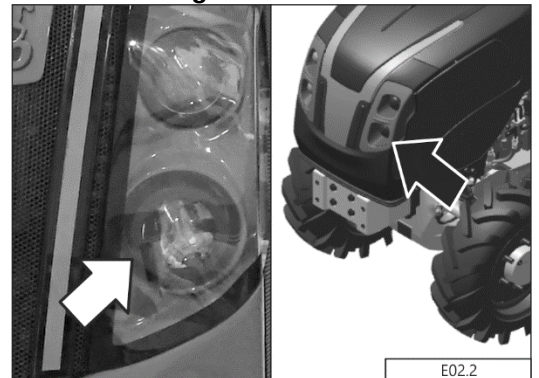
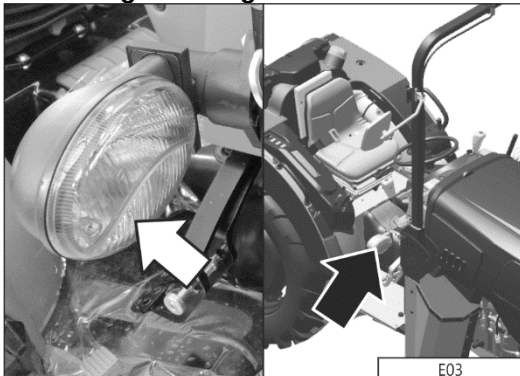
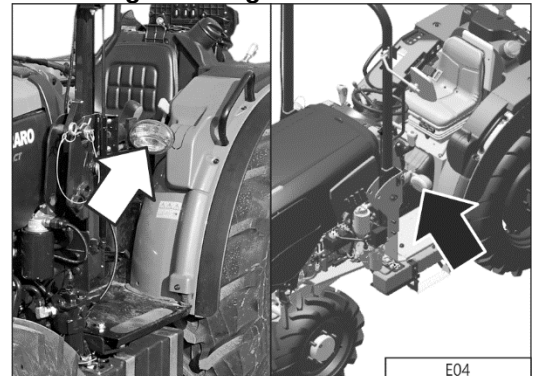
B511 - Delta pressure sensor**B512 - Exhaust gas temperature sensor 1****B513 - Exhaust gas temperature sensor 2****B975 - Coolant Level sensor****B976 - Fuel level sensor lower tank****B980 - PTO shaft output sensor (Power reverse version)****B987 - Diff-lock pressure switch****B988 - 4WD pressure switch**

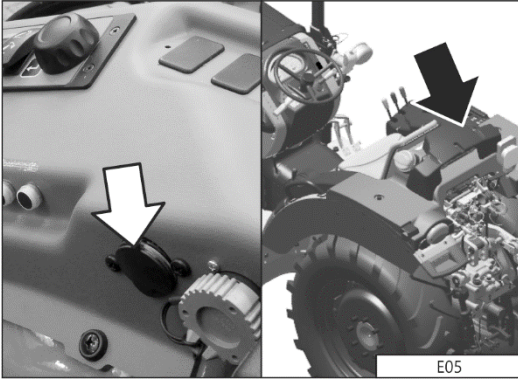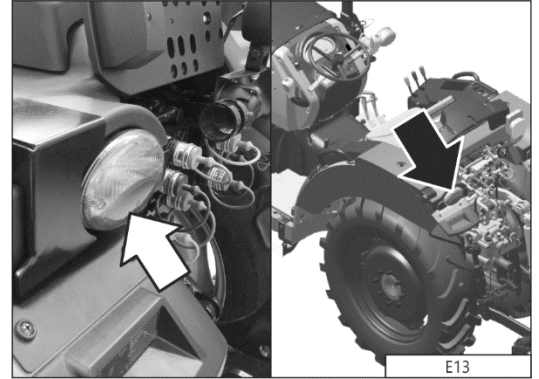
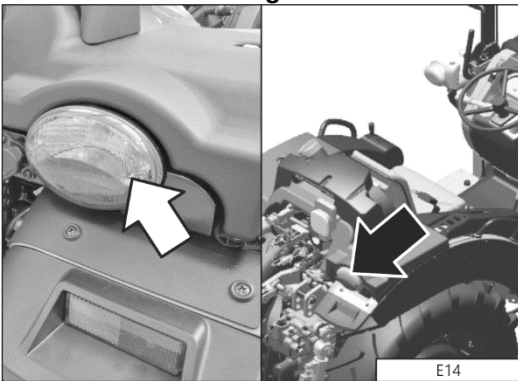
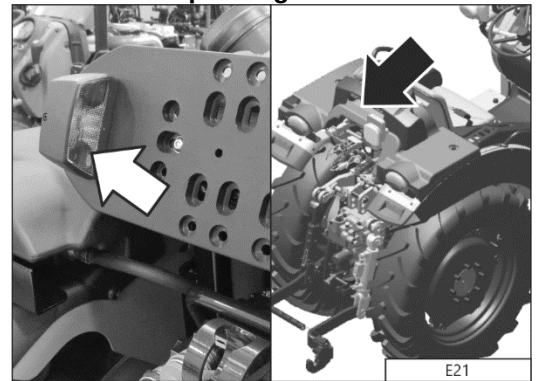
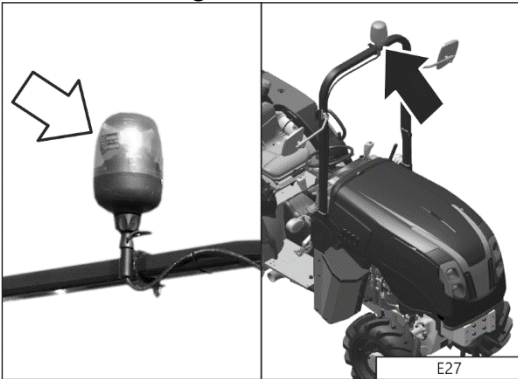
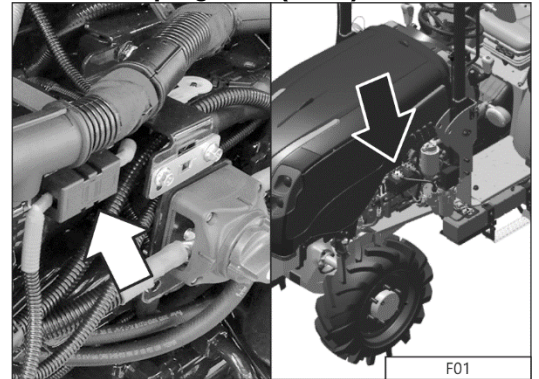
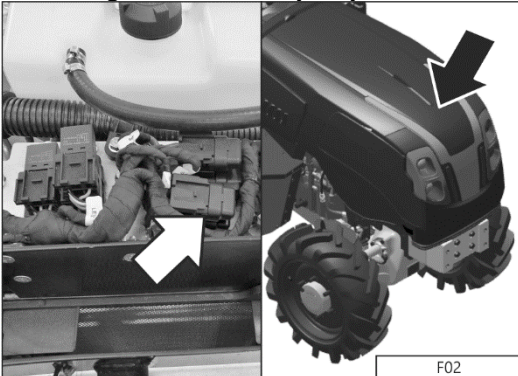
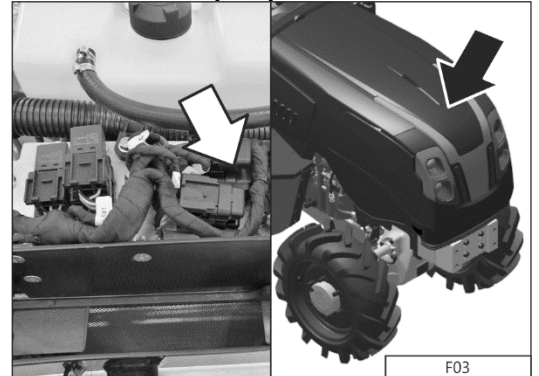
B998 - Hand throttle sensor**B999 - Foot throttle sensor****E01.1 - RHS Low beam****E01.2 - RHS High beam****E02.1 - LHS Low beam****E02.2 - LHS High beam****E03 - RH grabrail light****E04 - LH grabrail light**


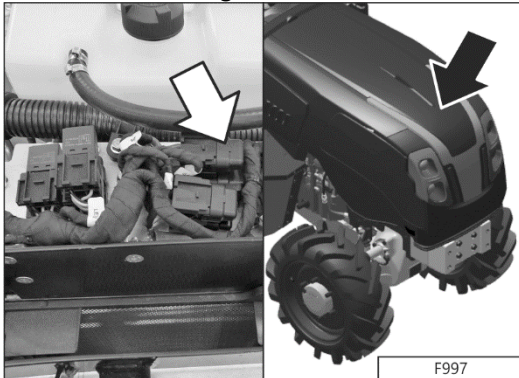
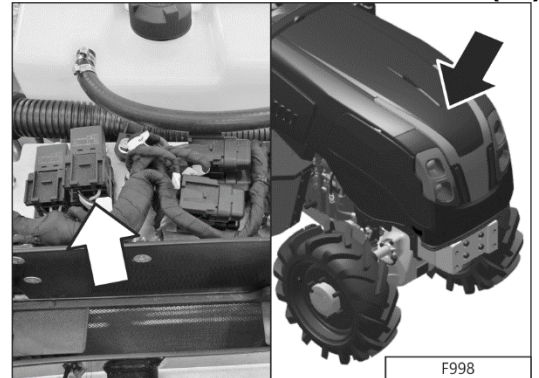
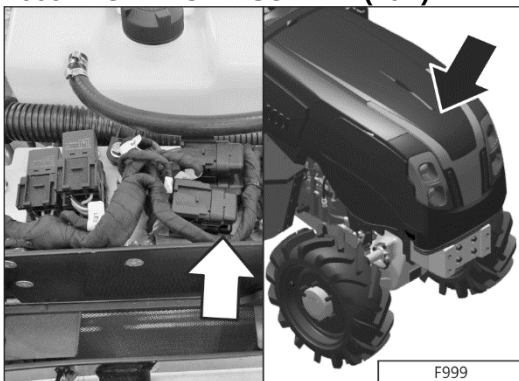
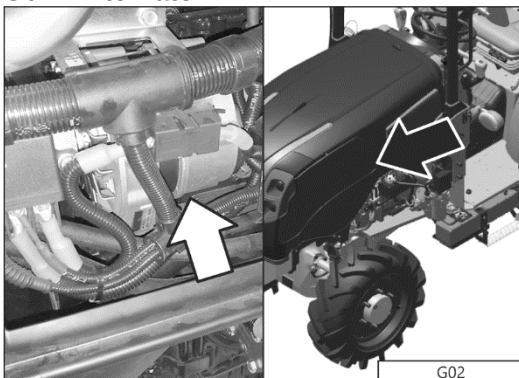
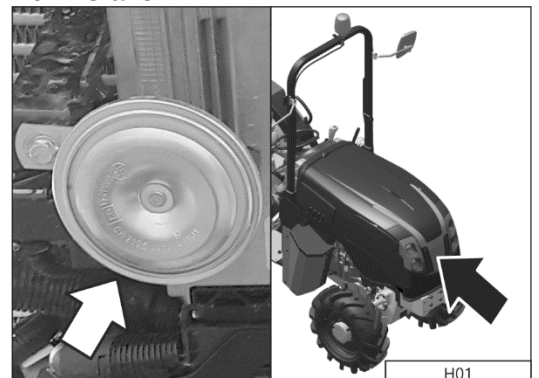
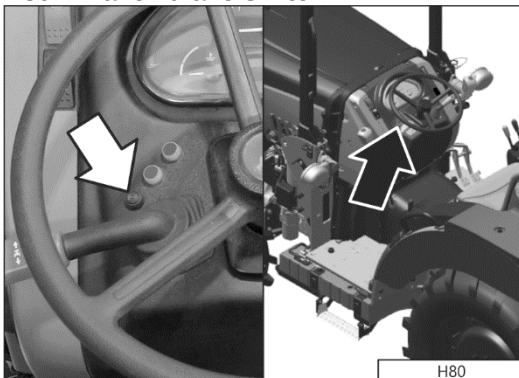
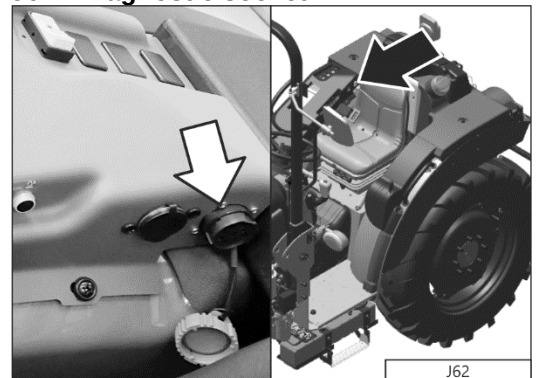
E05 - Cigarette lighter**E13 - Rear LH road light****E14 - Rear RH road light****E21 - Licence plate light****E27 - Beacon light****F01 - Glow plug fuse (150A)****F02 - Engine ECU fuse (30A)****F03 - Main fuse (50A)**

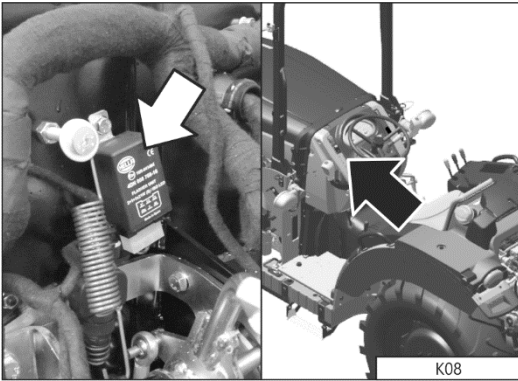
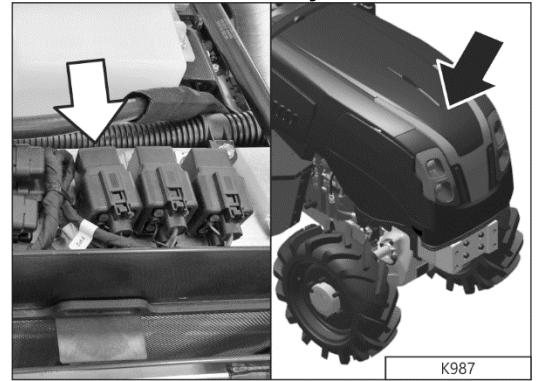
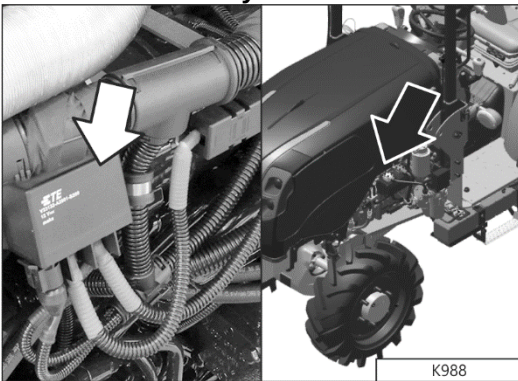
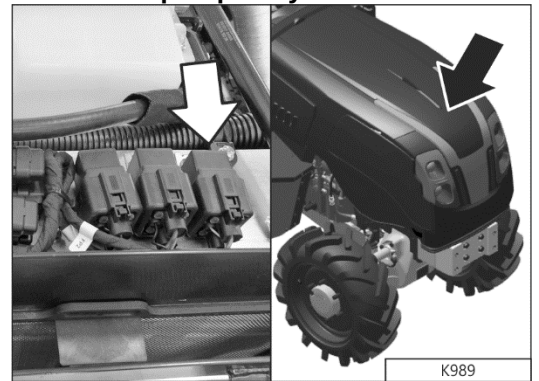
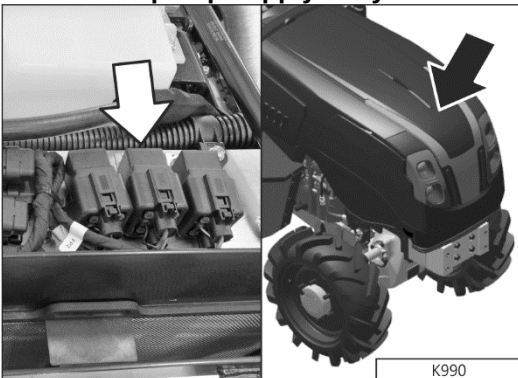
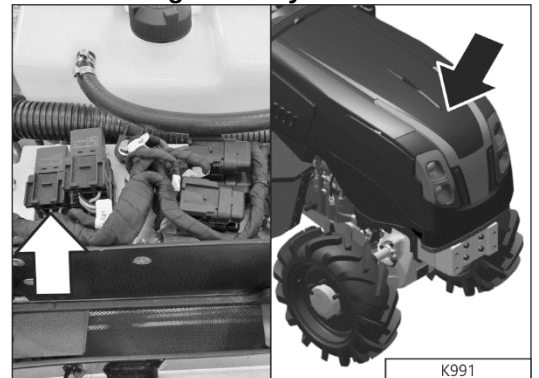
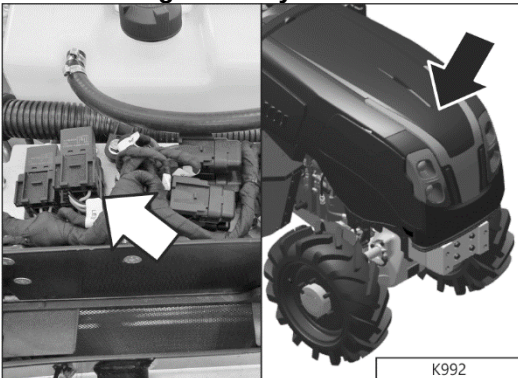
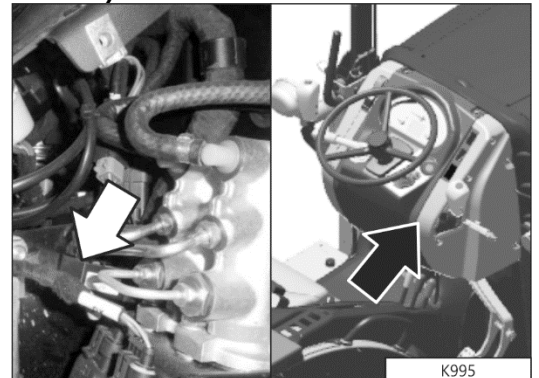
F997 - Fuse led lights**F998 - FUSE +15_FP_NEUTRAL_CAN (5A)****F999 - FUEL PUMP SUPPLY (20A)****G01 - Battery****G02 - Alternator****H01 - Claxon****H80 - Trailer brake switch****J62 - Diagnostic socket**

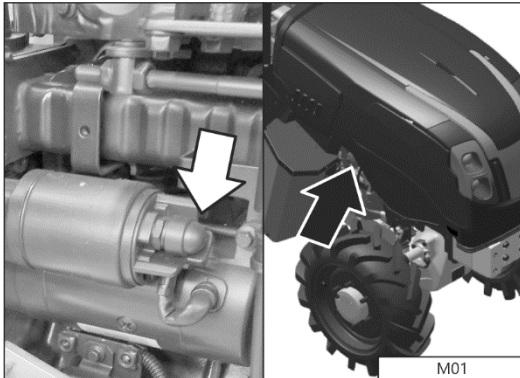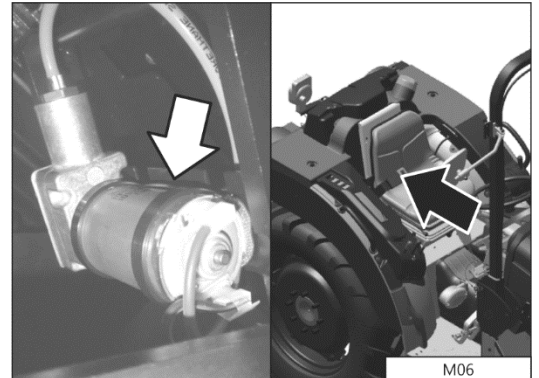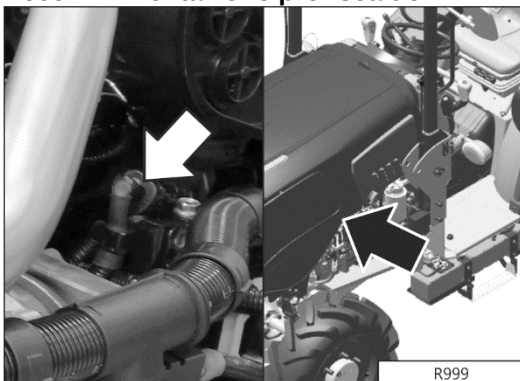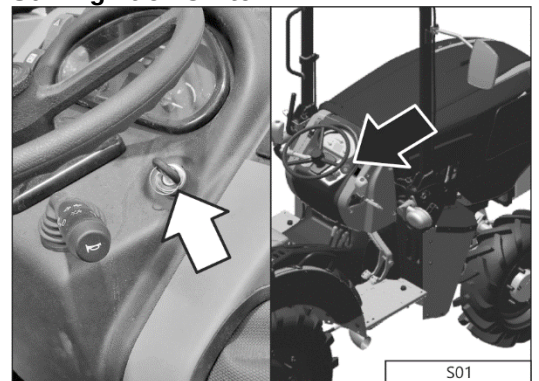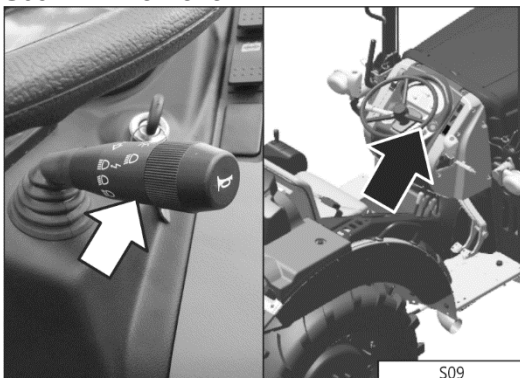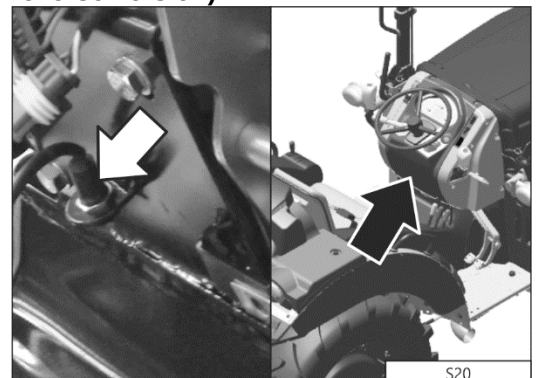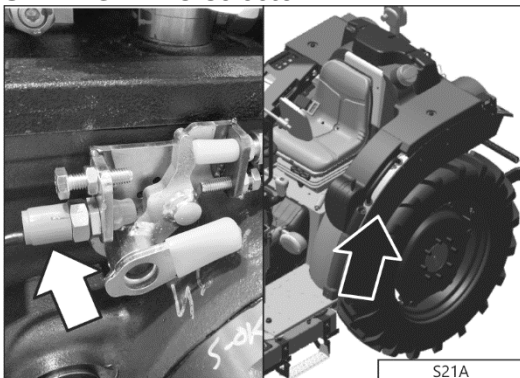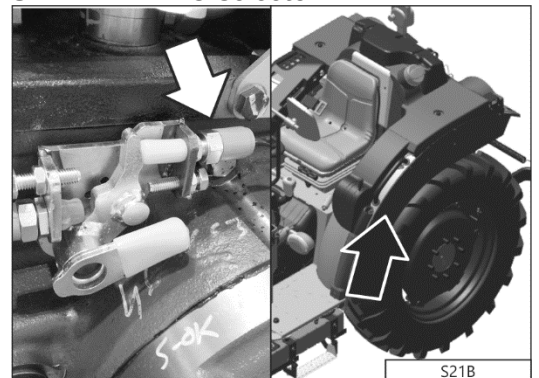K08 - Flasher unit**K987 - Neutral ECU relay****K988 - Preheat relay 150A****K989 - Fuel pump relay****K990 - Fuel pump supply relay****K991 - Led lights Relay****K992 - Led lights Relay2****K995 - PWM enabler (Power reverse version)**

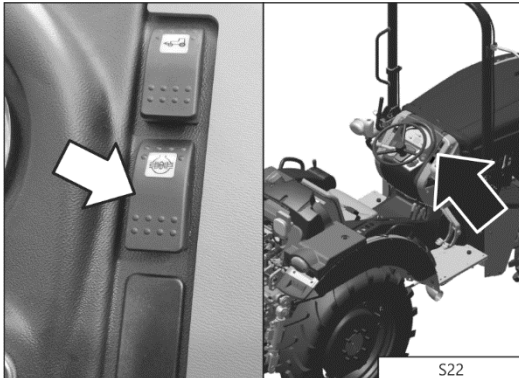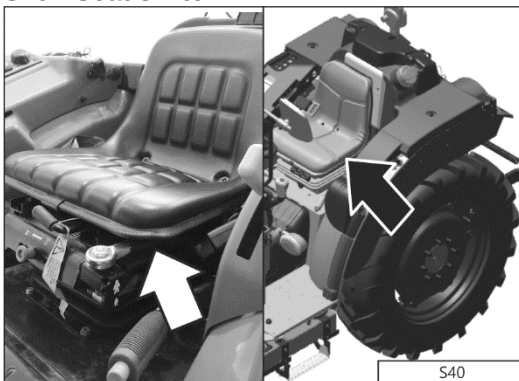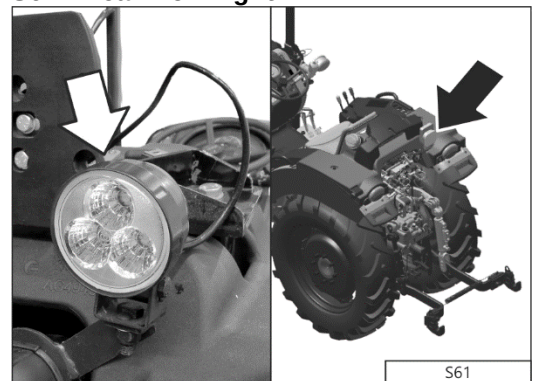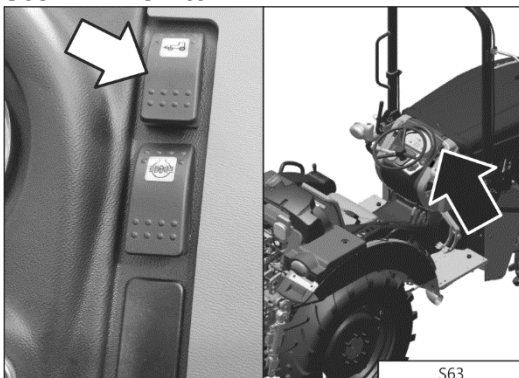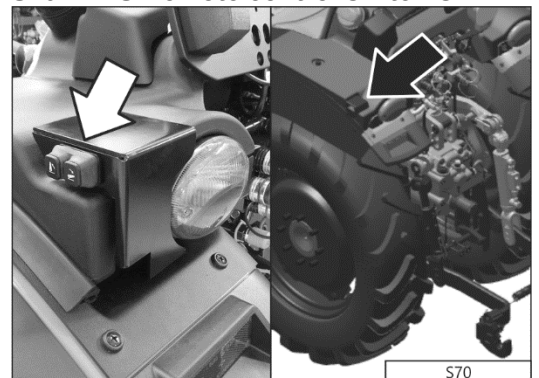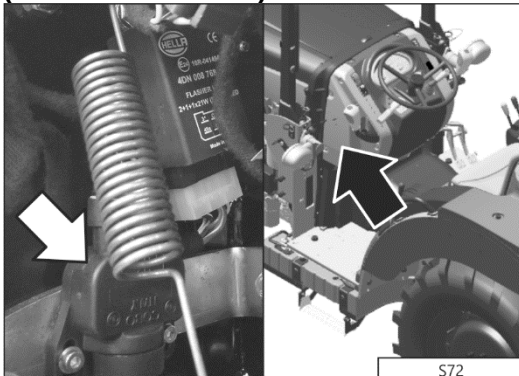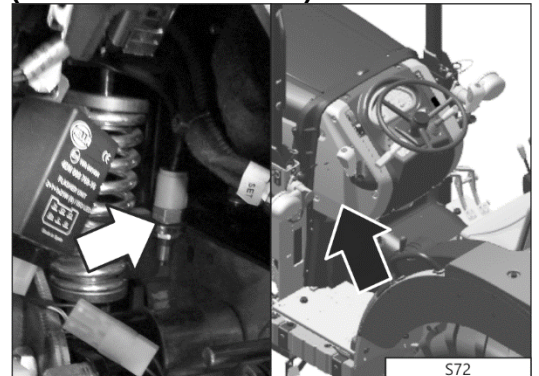
M01 - Starter motor**M06 - Air seat****R999 - Alimentazione preriscaldamento****S01 - Ignition switch****S09 - Blinker lever****S20 - Calibration hidden button (Power reverse version)****S21A - GD PTO selector****S21B - DIR PTO selector**

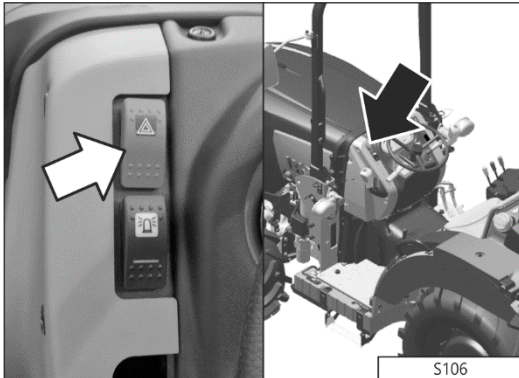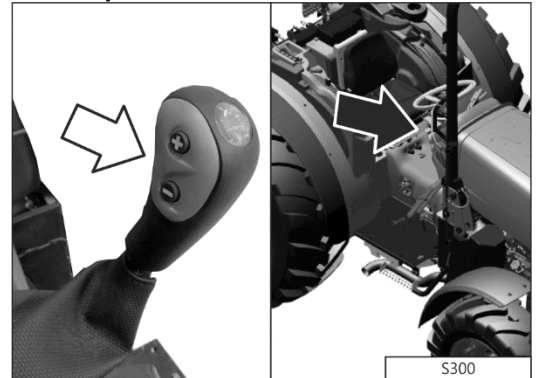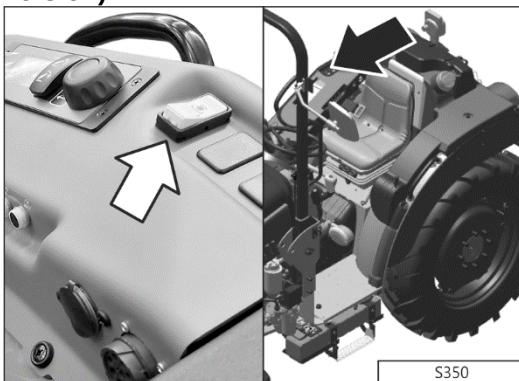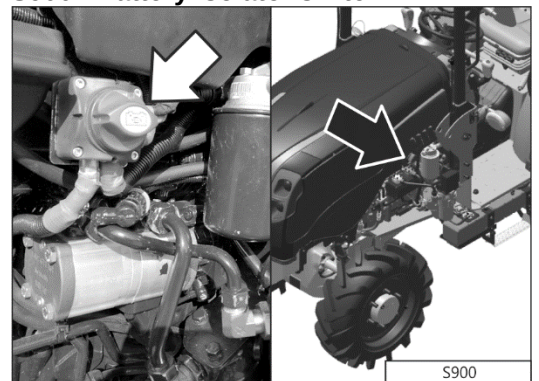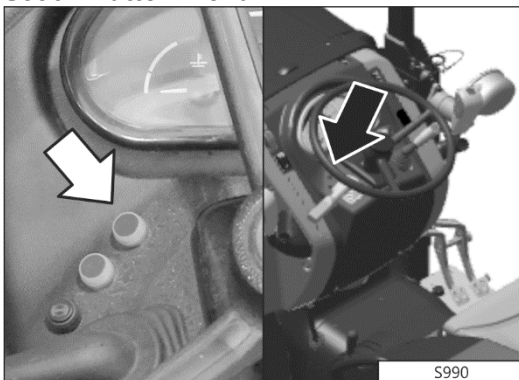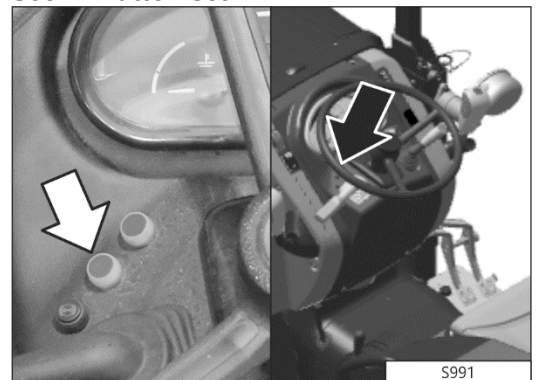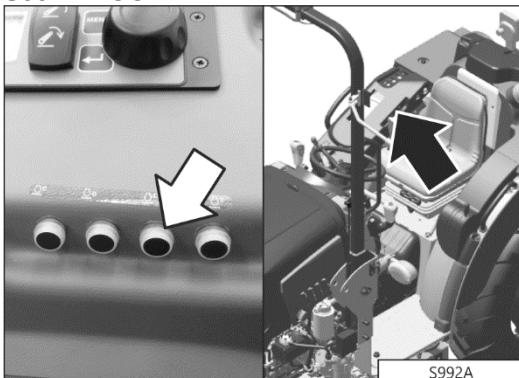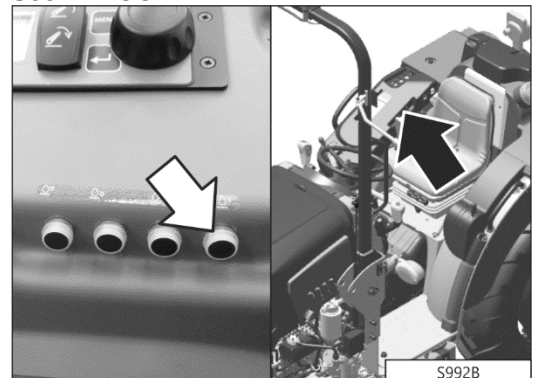S22 - Diff-lock switch**S36 - Beacon switch****S40 - Seat switch****S61 - Rear work light****S63 - 4WD switch****S70 - LHS Remote control switch UP****S72 - Clutch pedal end stroke switch
(Mechanical version)****S72 - Clutch pedal end stroke switch
(Power reverse version)**

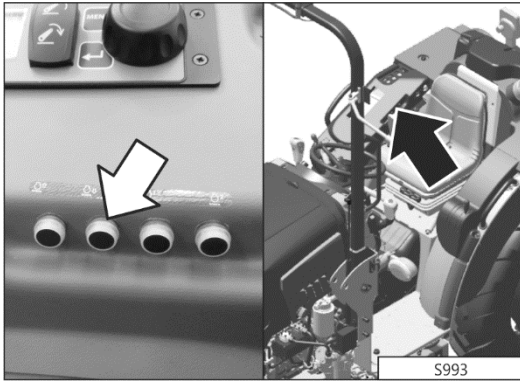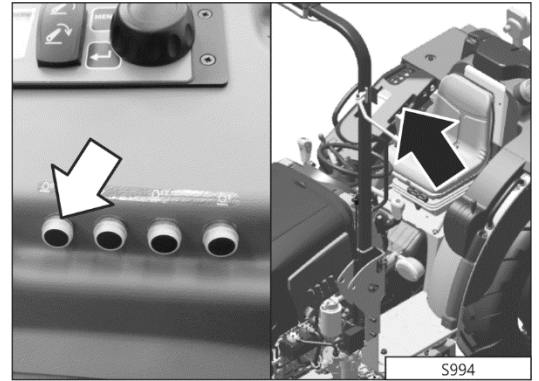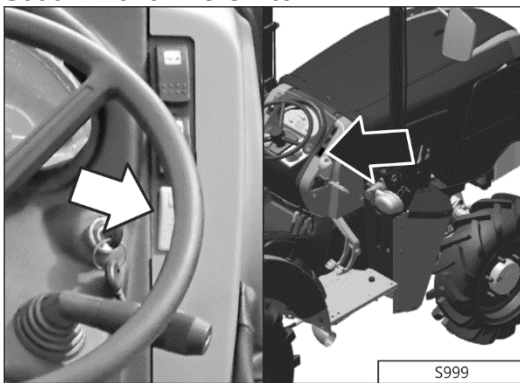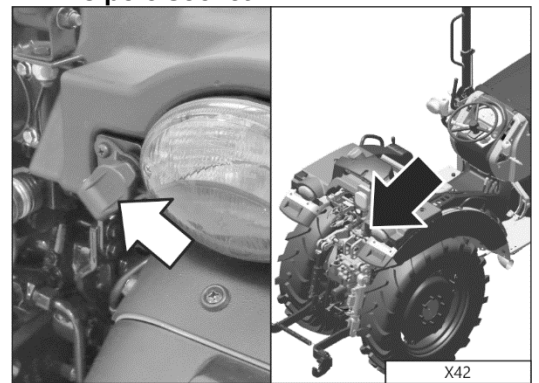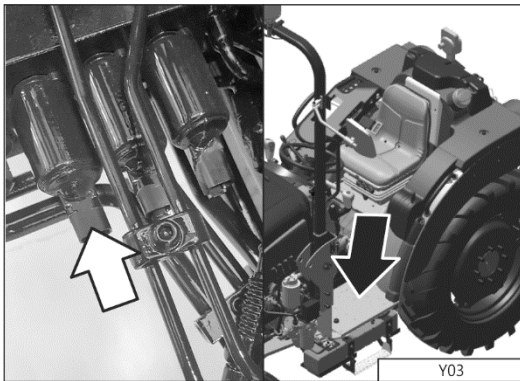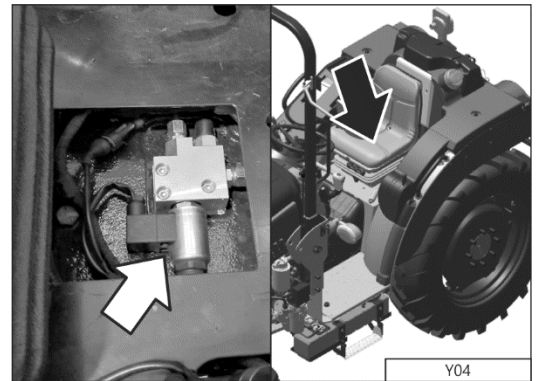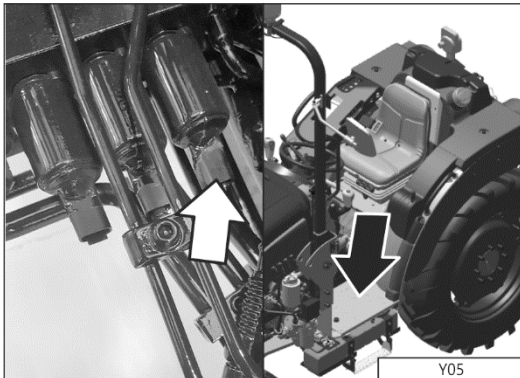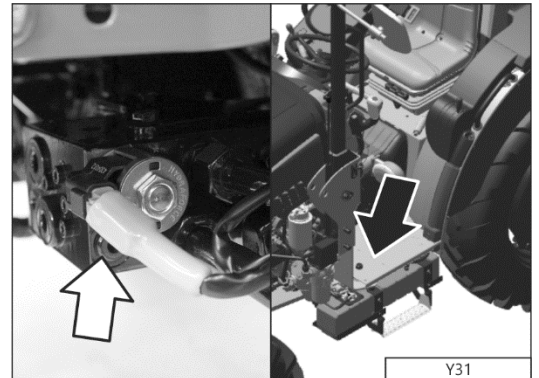
S106 - Hazard switch**S300 - HI-LO switch (Power reverse version)****S350 - Rear PTO switch (Power reverse version)****S900 - Battery isolator switch****S990 - Button menu****S991 - Button set****S992A - CC-MEM1****S992B - CC-MEM2**

S993 - CC-DW**S994 - CC-UP****S999 - Front PTO switch****X42 - 3 pole socket****Y03 - 4WD solenoid valve****Y04 - PTO main valve connection****Y05 - Diff-lock solenoid valve****Y31 - Trailer brake solenoid valve**

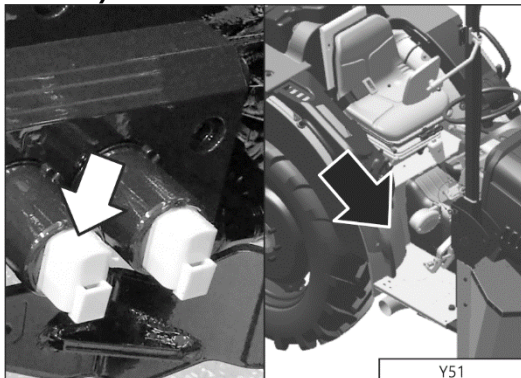
Y51 - RV solenoid valve (Power reverse version)



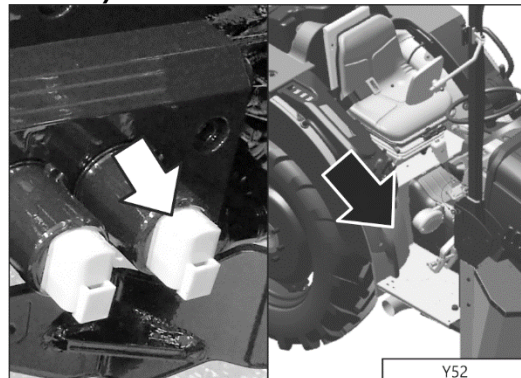
Y52 - FL solenoid valve (Power reverse version)



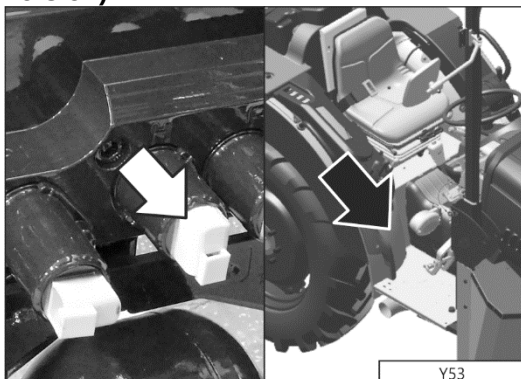
Y53 - FH solenoid valve (Power reverse version)



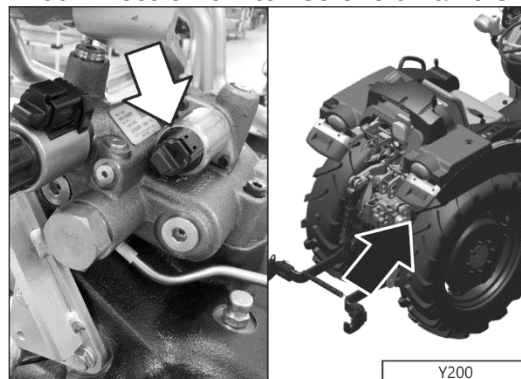
Y200 - Electronic hitch solenoid valve UP



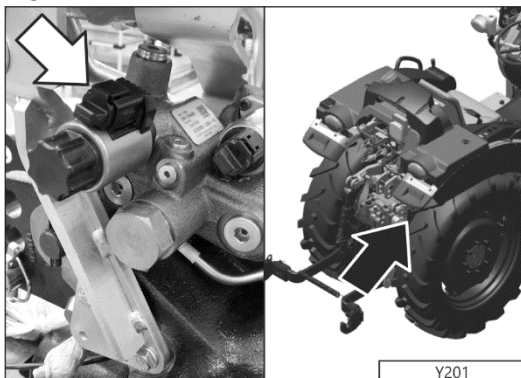
Y201 - Electronic hitch solenoid valve DOWN



Y300 - Main ring solenoid valve

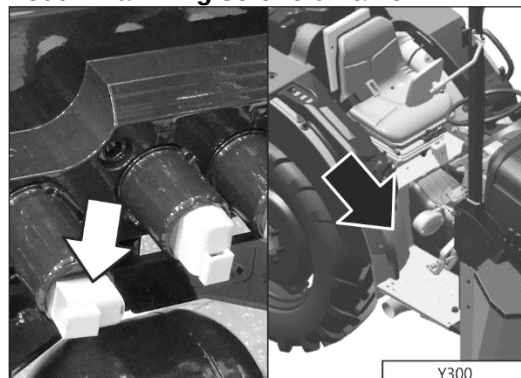

Y350 - PTO priority solenoid valve

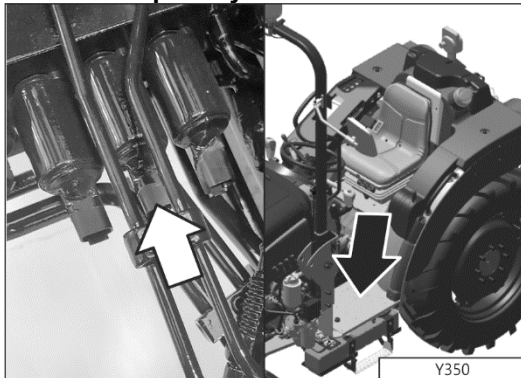

Y981 - Fuel pump

