 


W04

 
W43

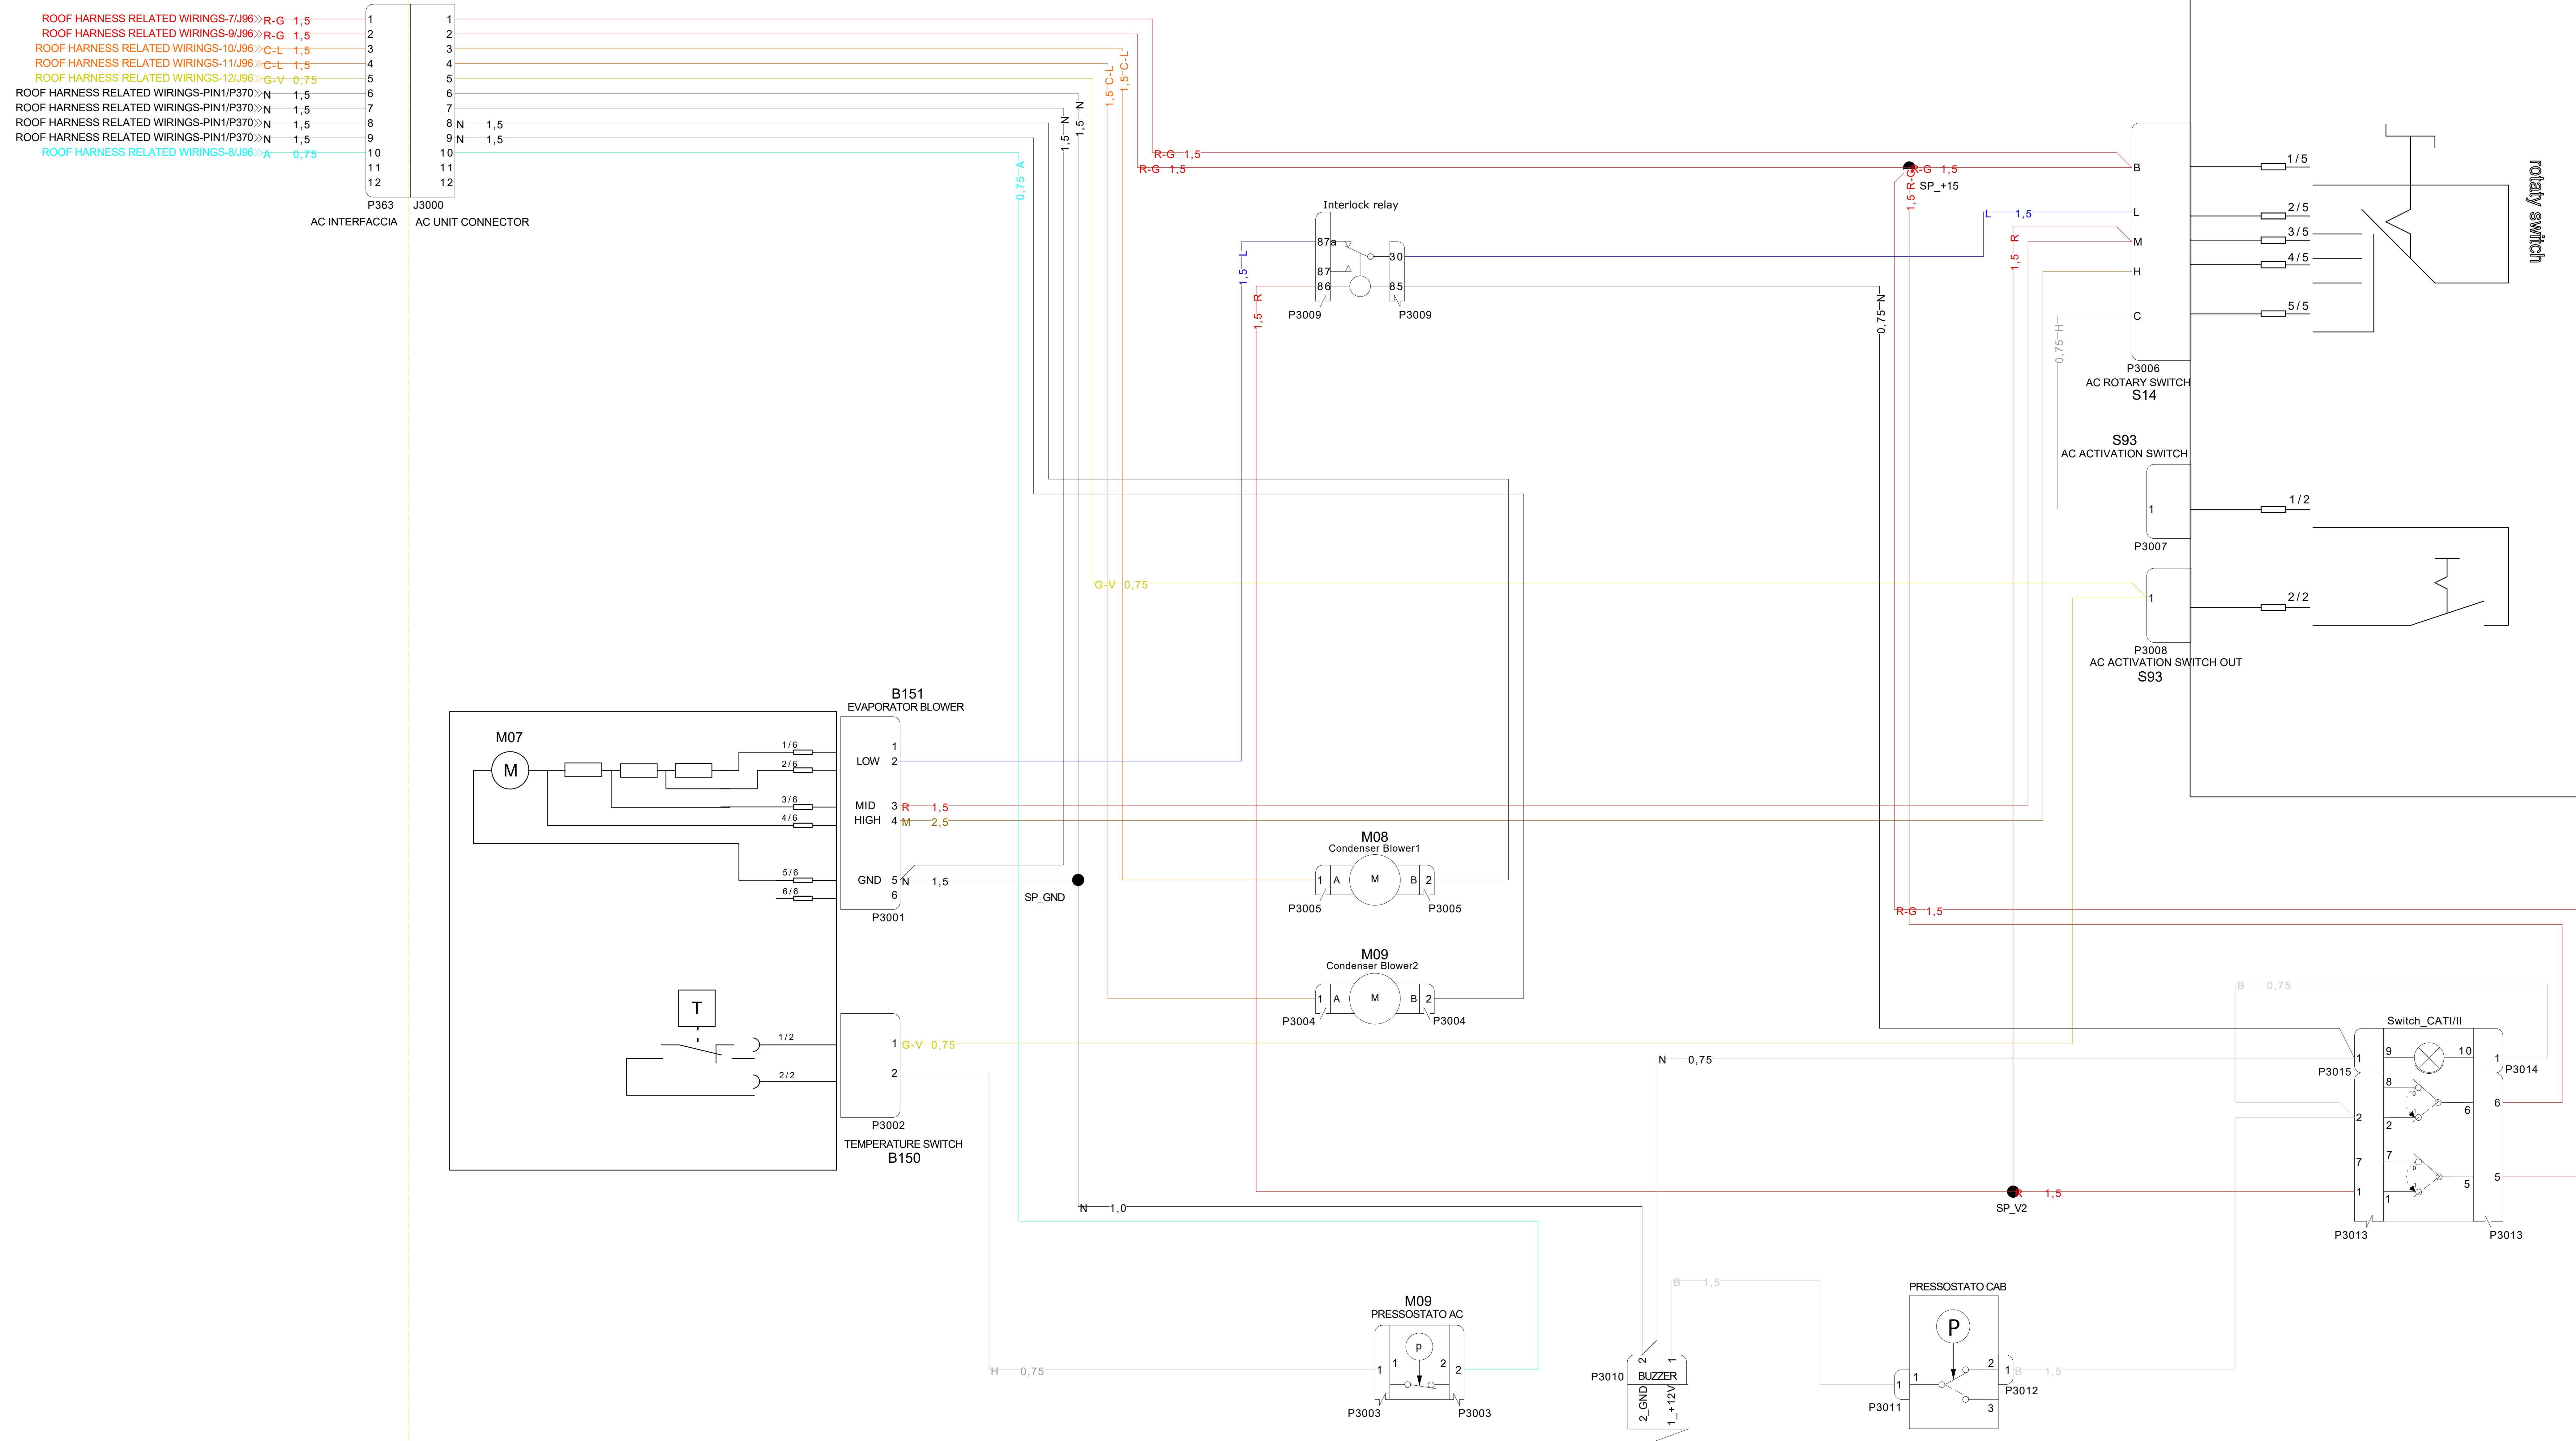


- J3000 - Connection to P363
- P3001 - Connection to A/C blower M07
- P3001 - Connection to Blower speed resistor B151
- P3002 - Connection to A/C temperature sensor B150
- P3003 - Connection to A/C pressure switch B304
- P3004 - Connection to LH fan motor M09
- P3005 - Connection to RH fan motor M08
- P3006 - Connection to Fan switch S14
- P3007 - Connection to Heating and air-conditioning switch S93
- P3008 - Connection to Heating and air-conditioning switch S93
- P3009 - Connection to Interlock relay
- P3010 - Connection to Buzzer
- P3011 - Connection to Pressure switch CAB
- P363 - Connection to Claxon H01
- P363 - Connection to J3000


SE07_AG_OUT_AIR CONDITIONING SYSTEM_A_1_20200305

W29

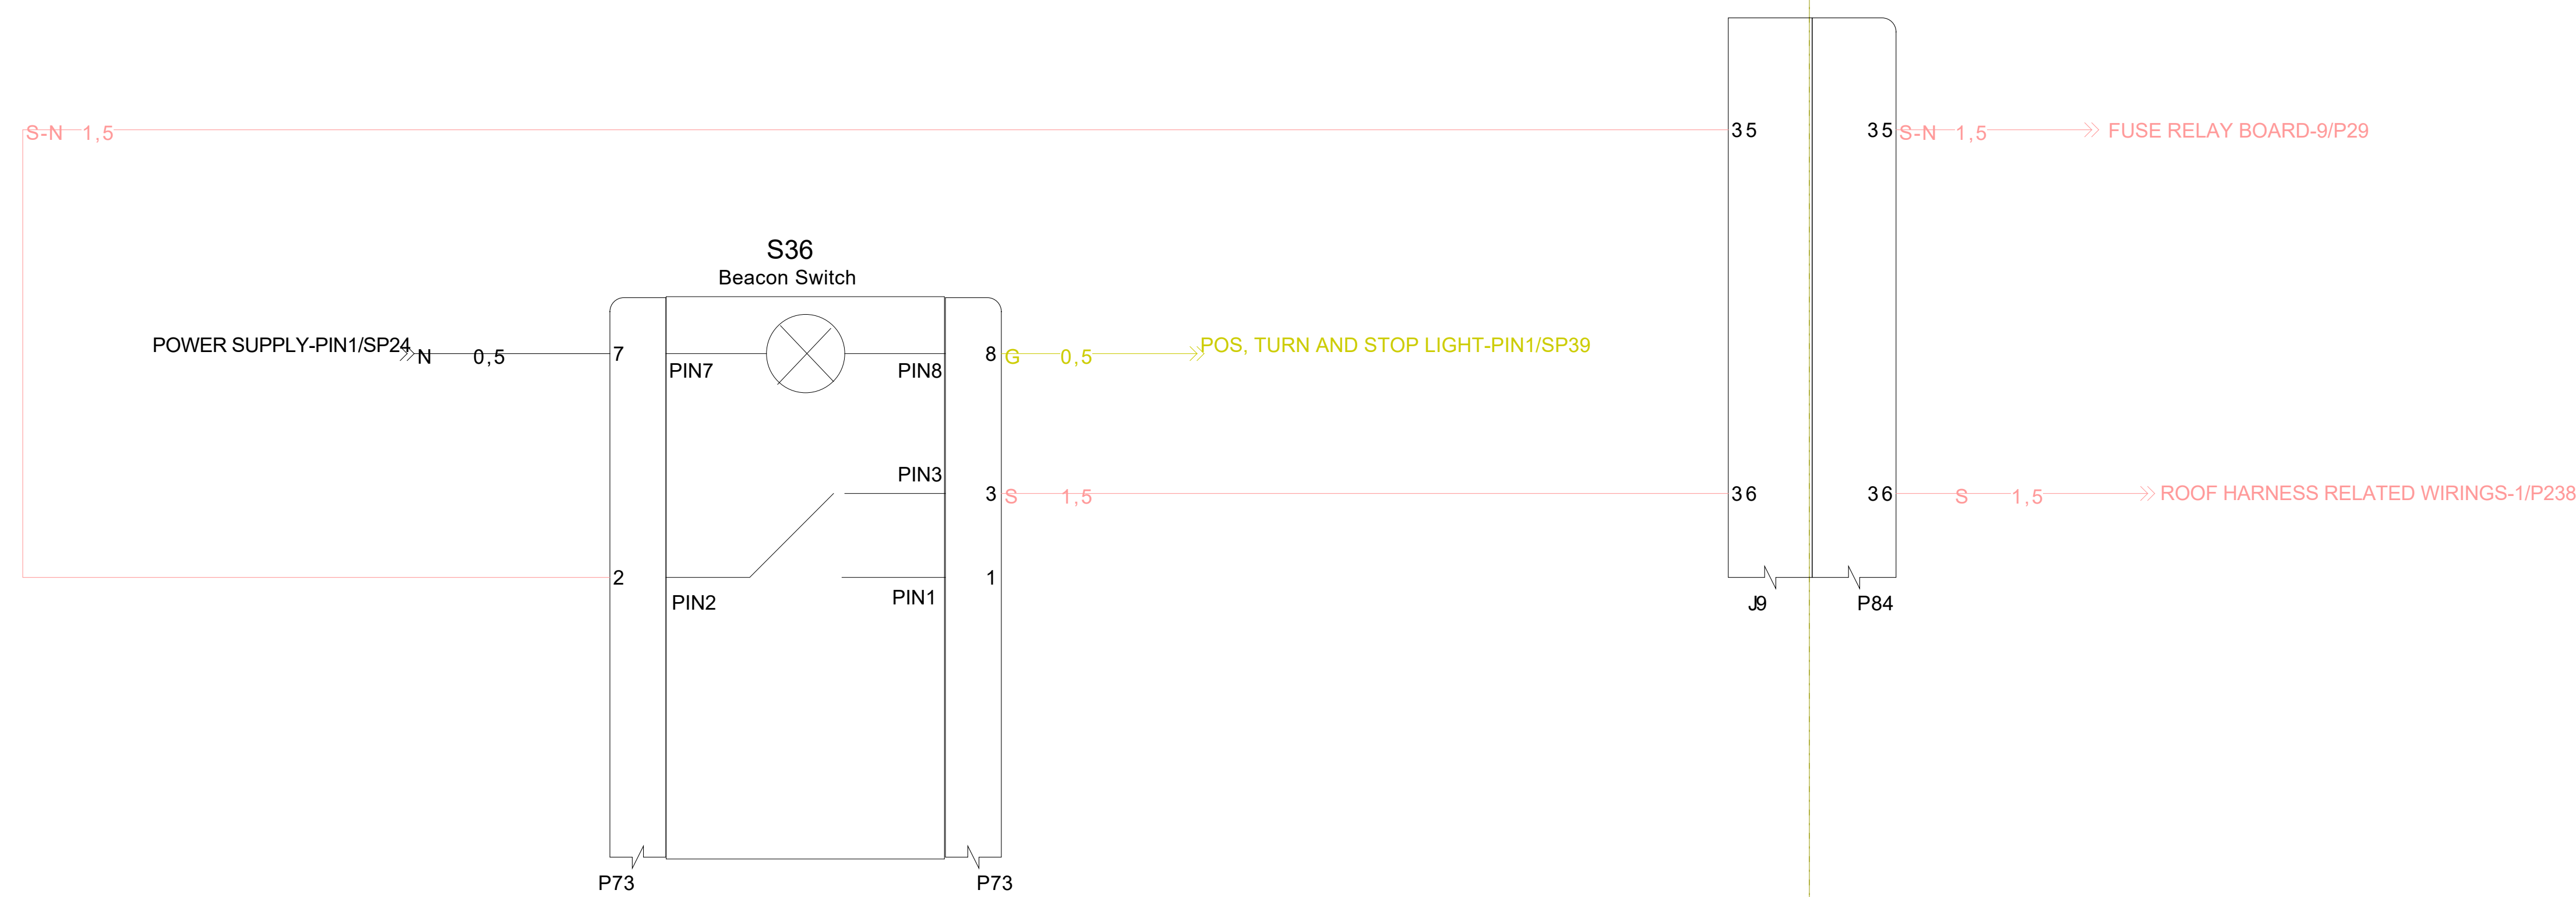


W30

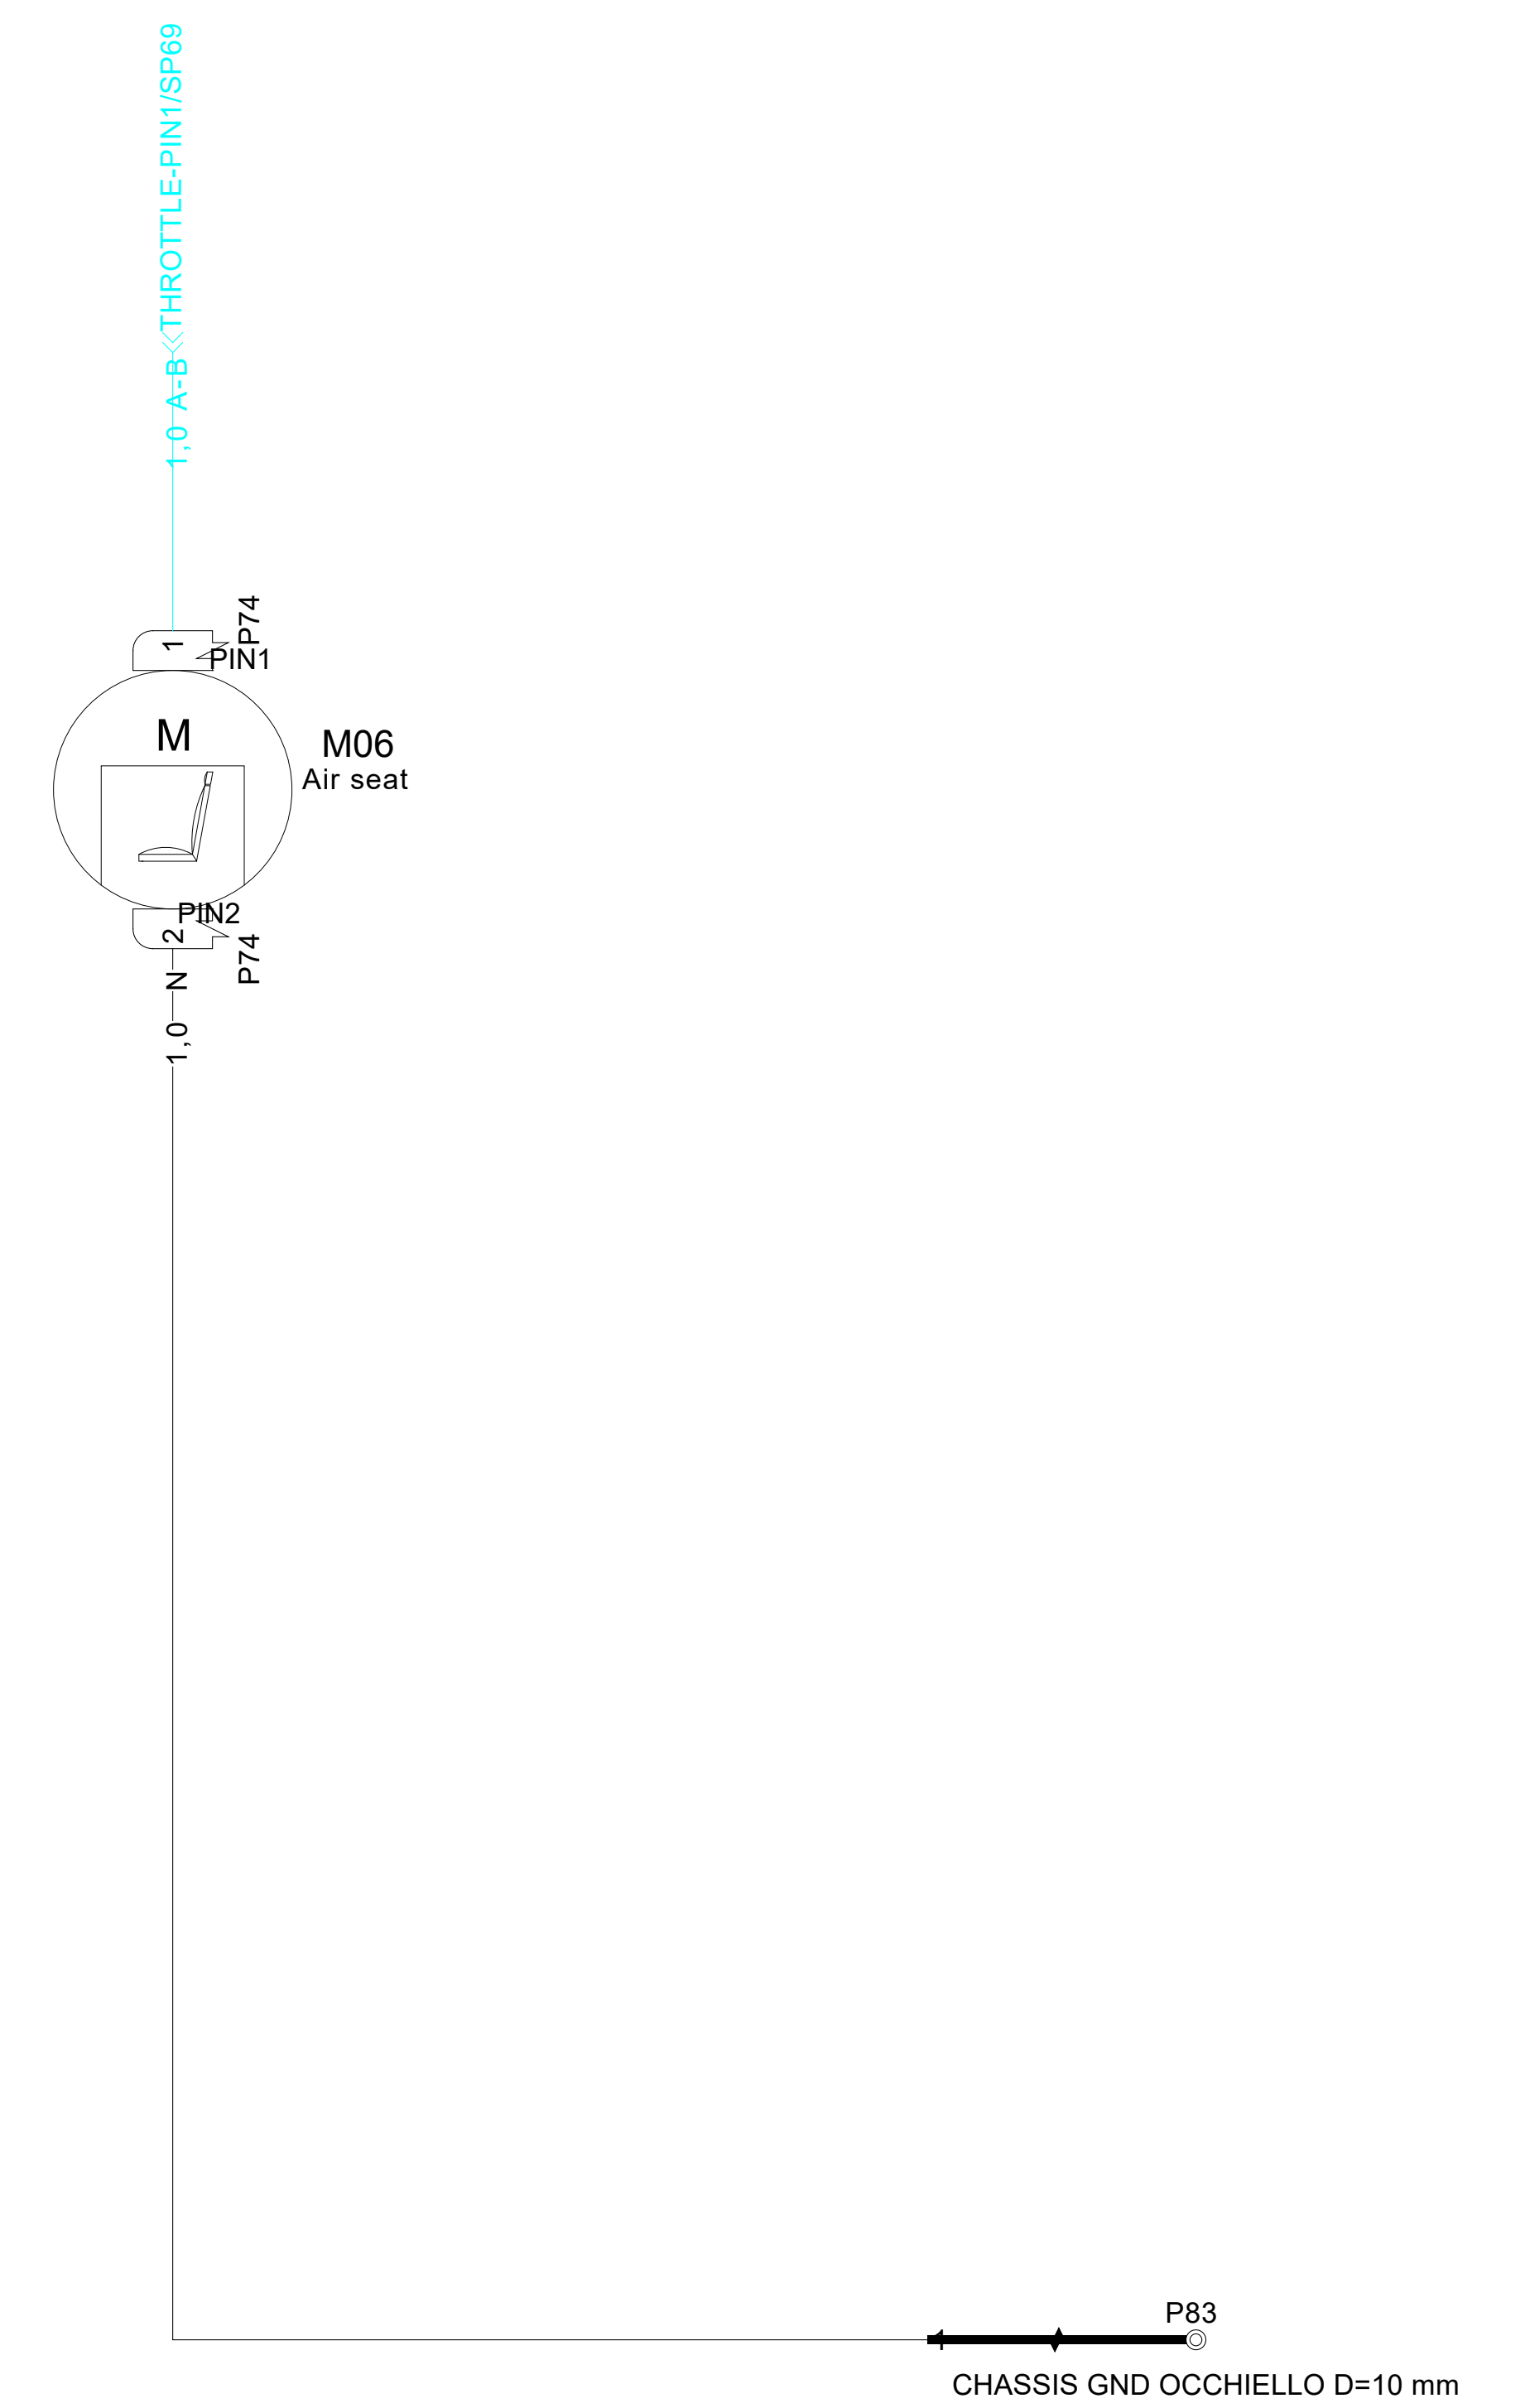 

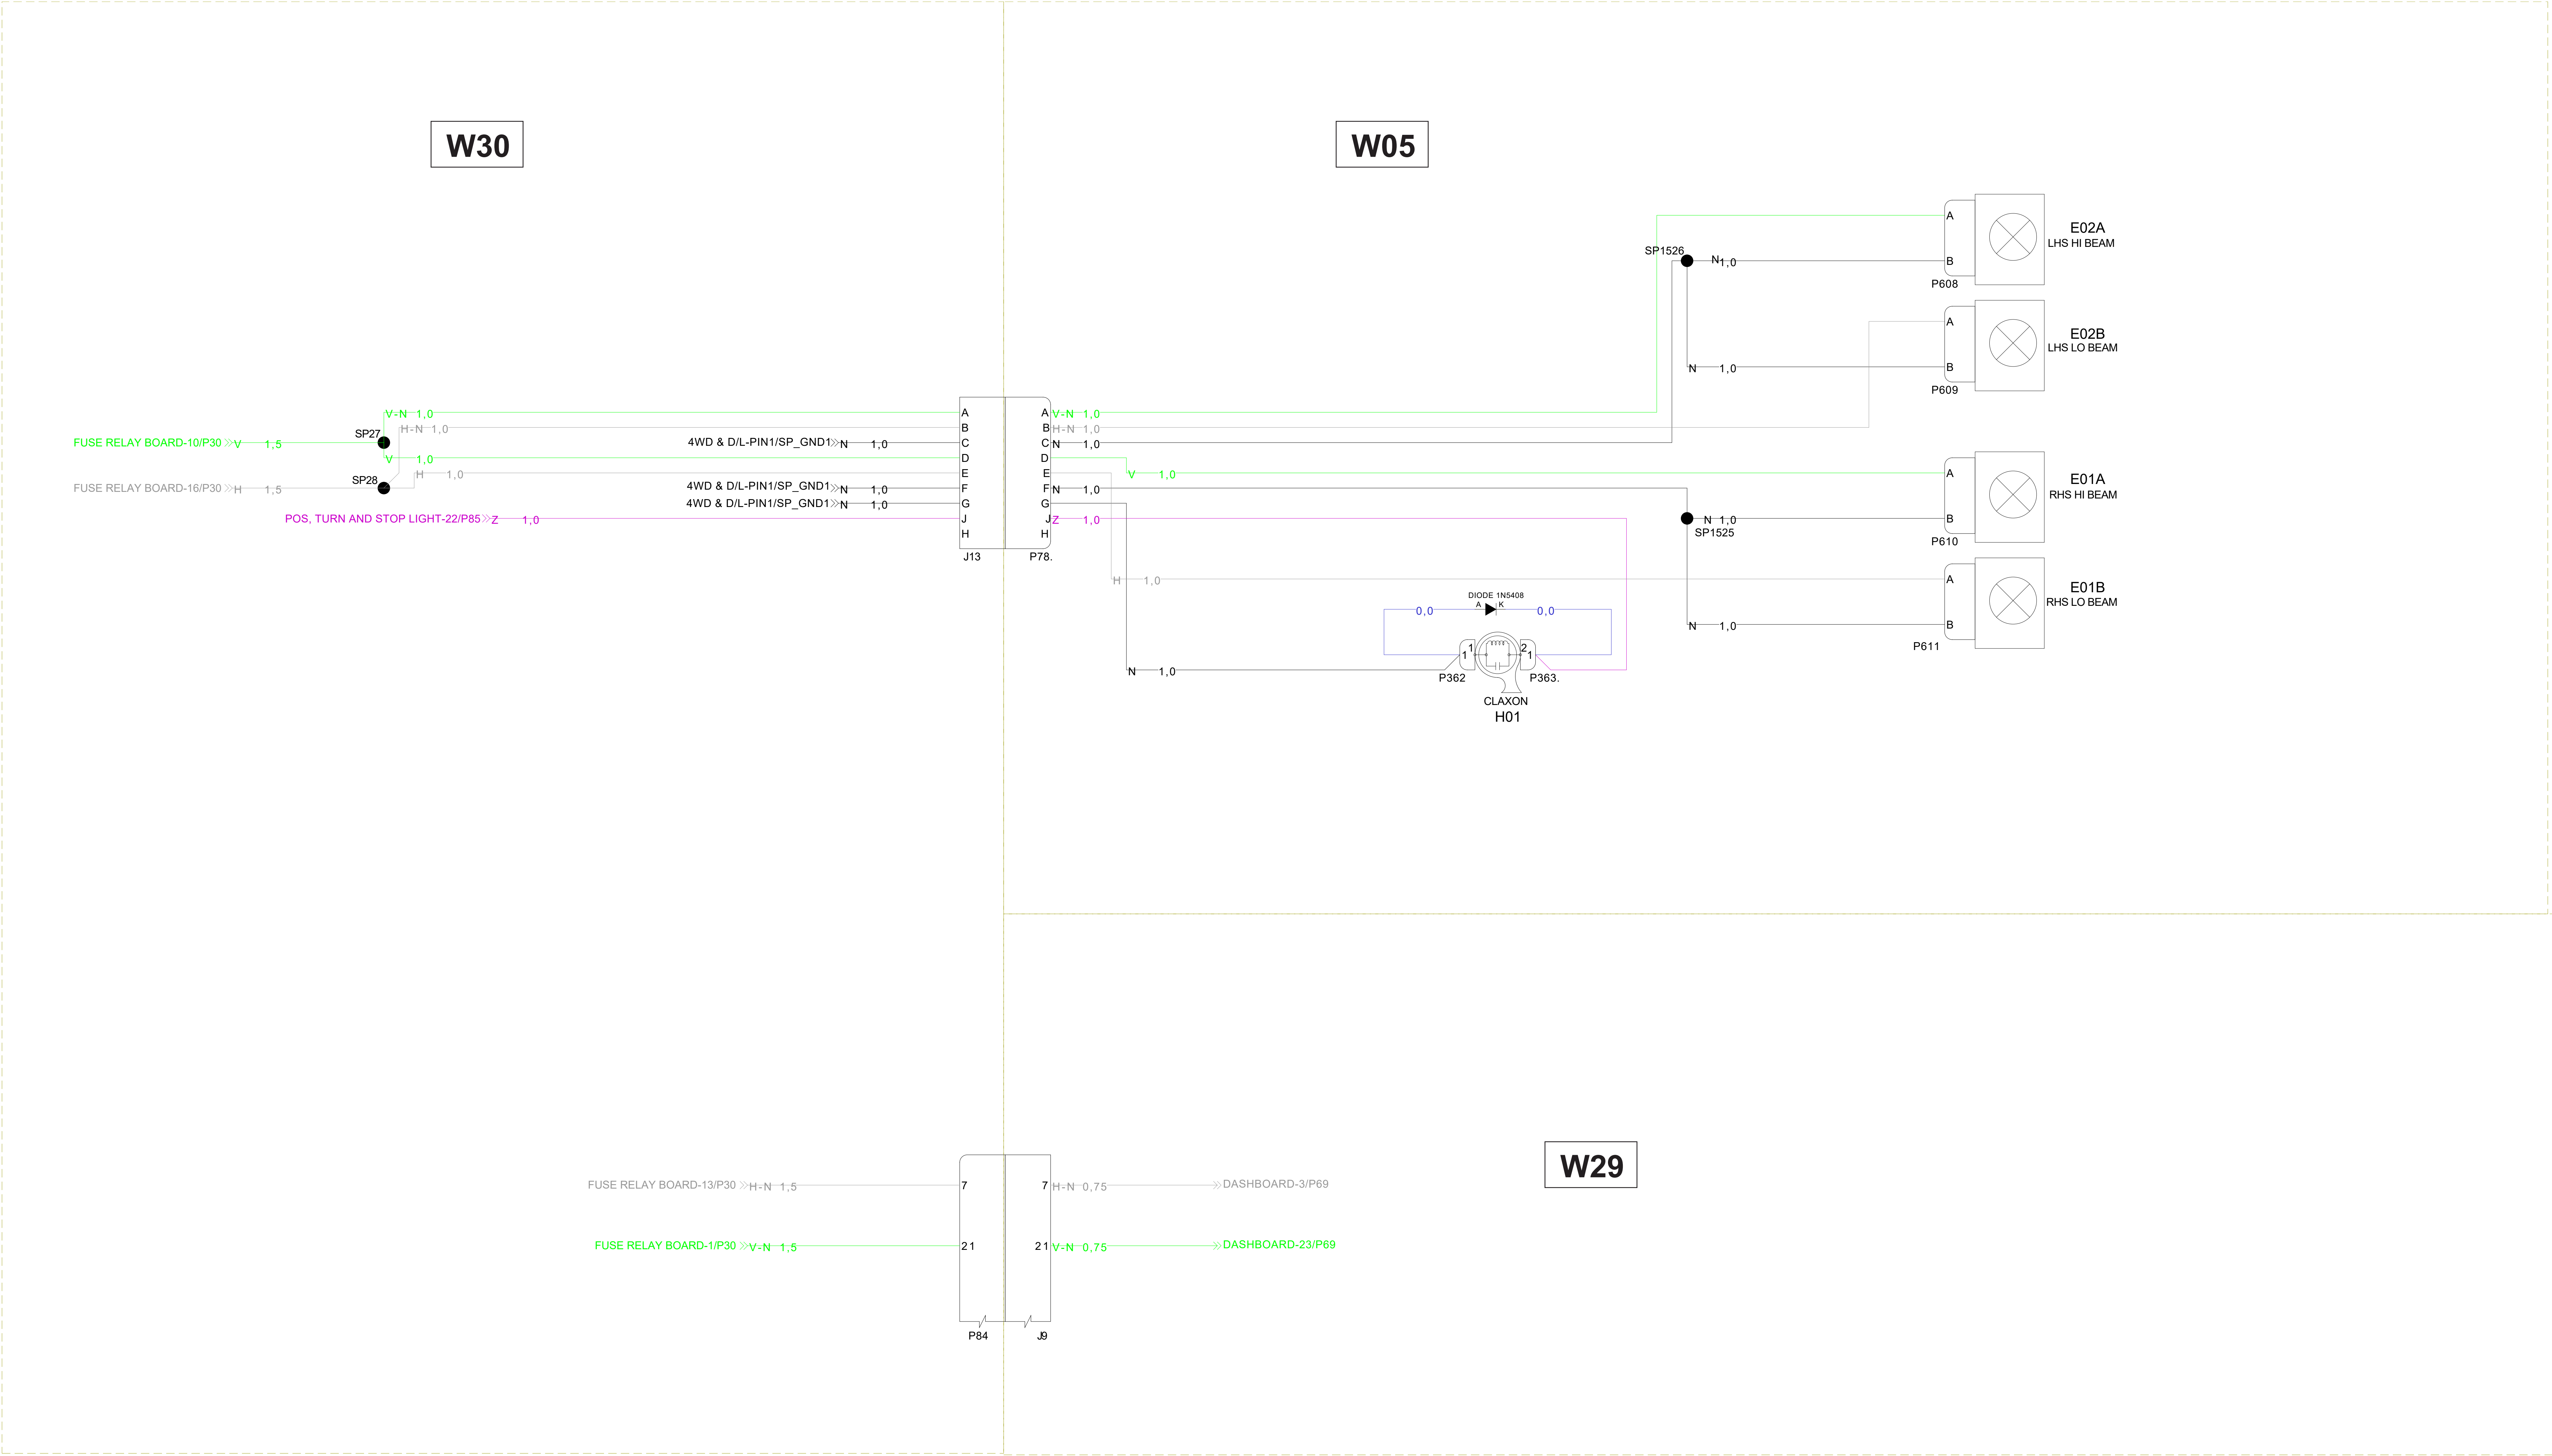 


 J13 - Connection to P78
J9 - Connection to P84
P362 - Connection to Claxon H01
P363 - Connection to Claxon H01
P608 - Connection to LHS Low beam E02A
P609 - Connection to LHS High beam E02B
P610 - Connection to RHS Low beam E01A
P611 - Connection to RHS High beam E01B
P78 - Connection to J43
P84 - Connection to J9

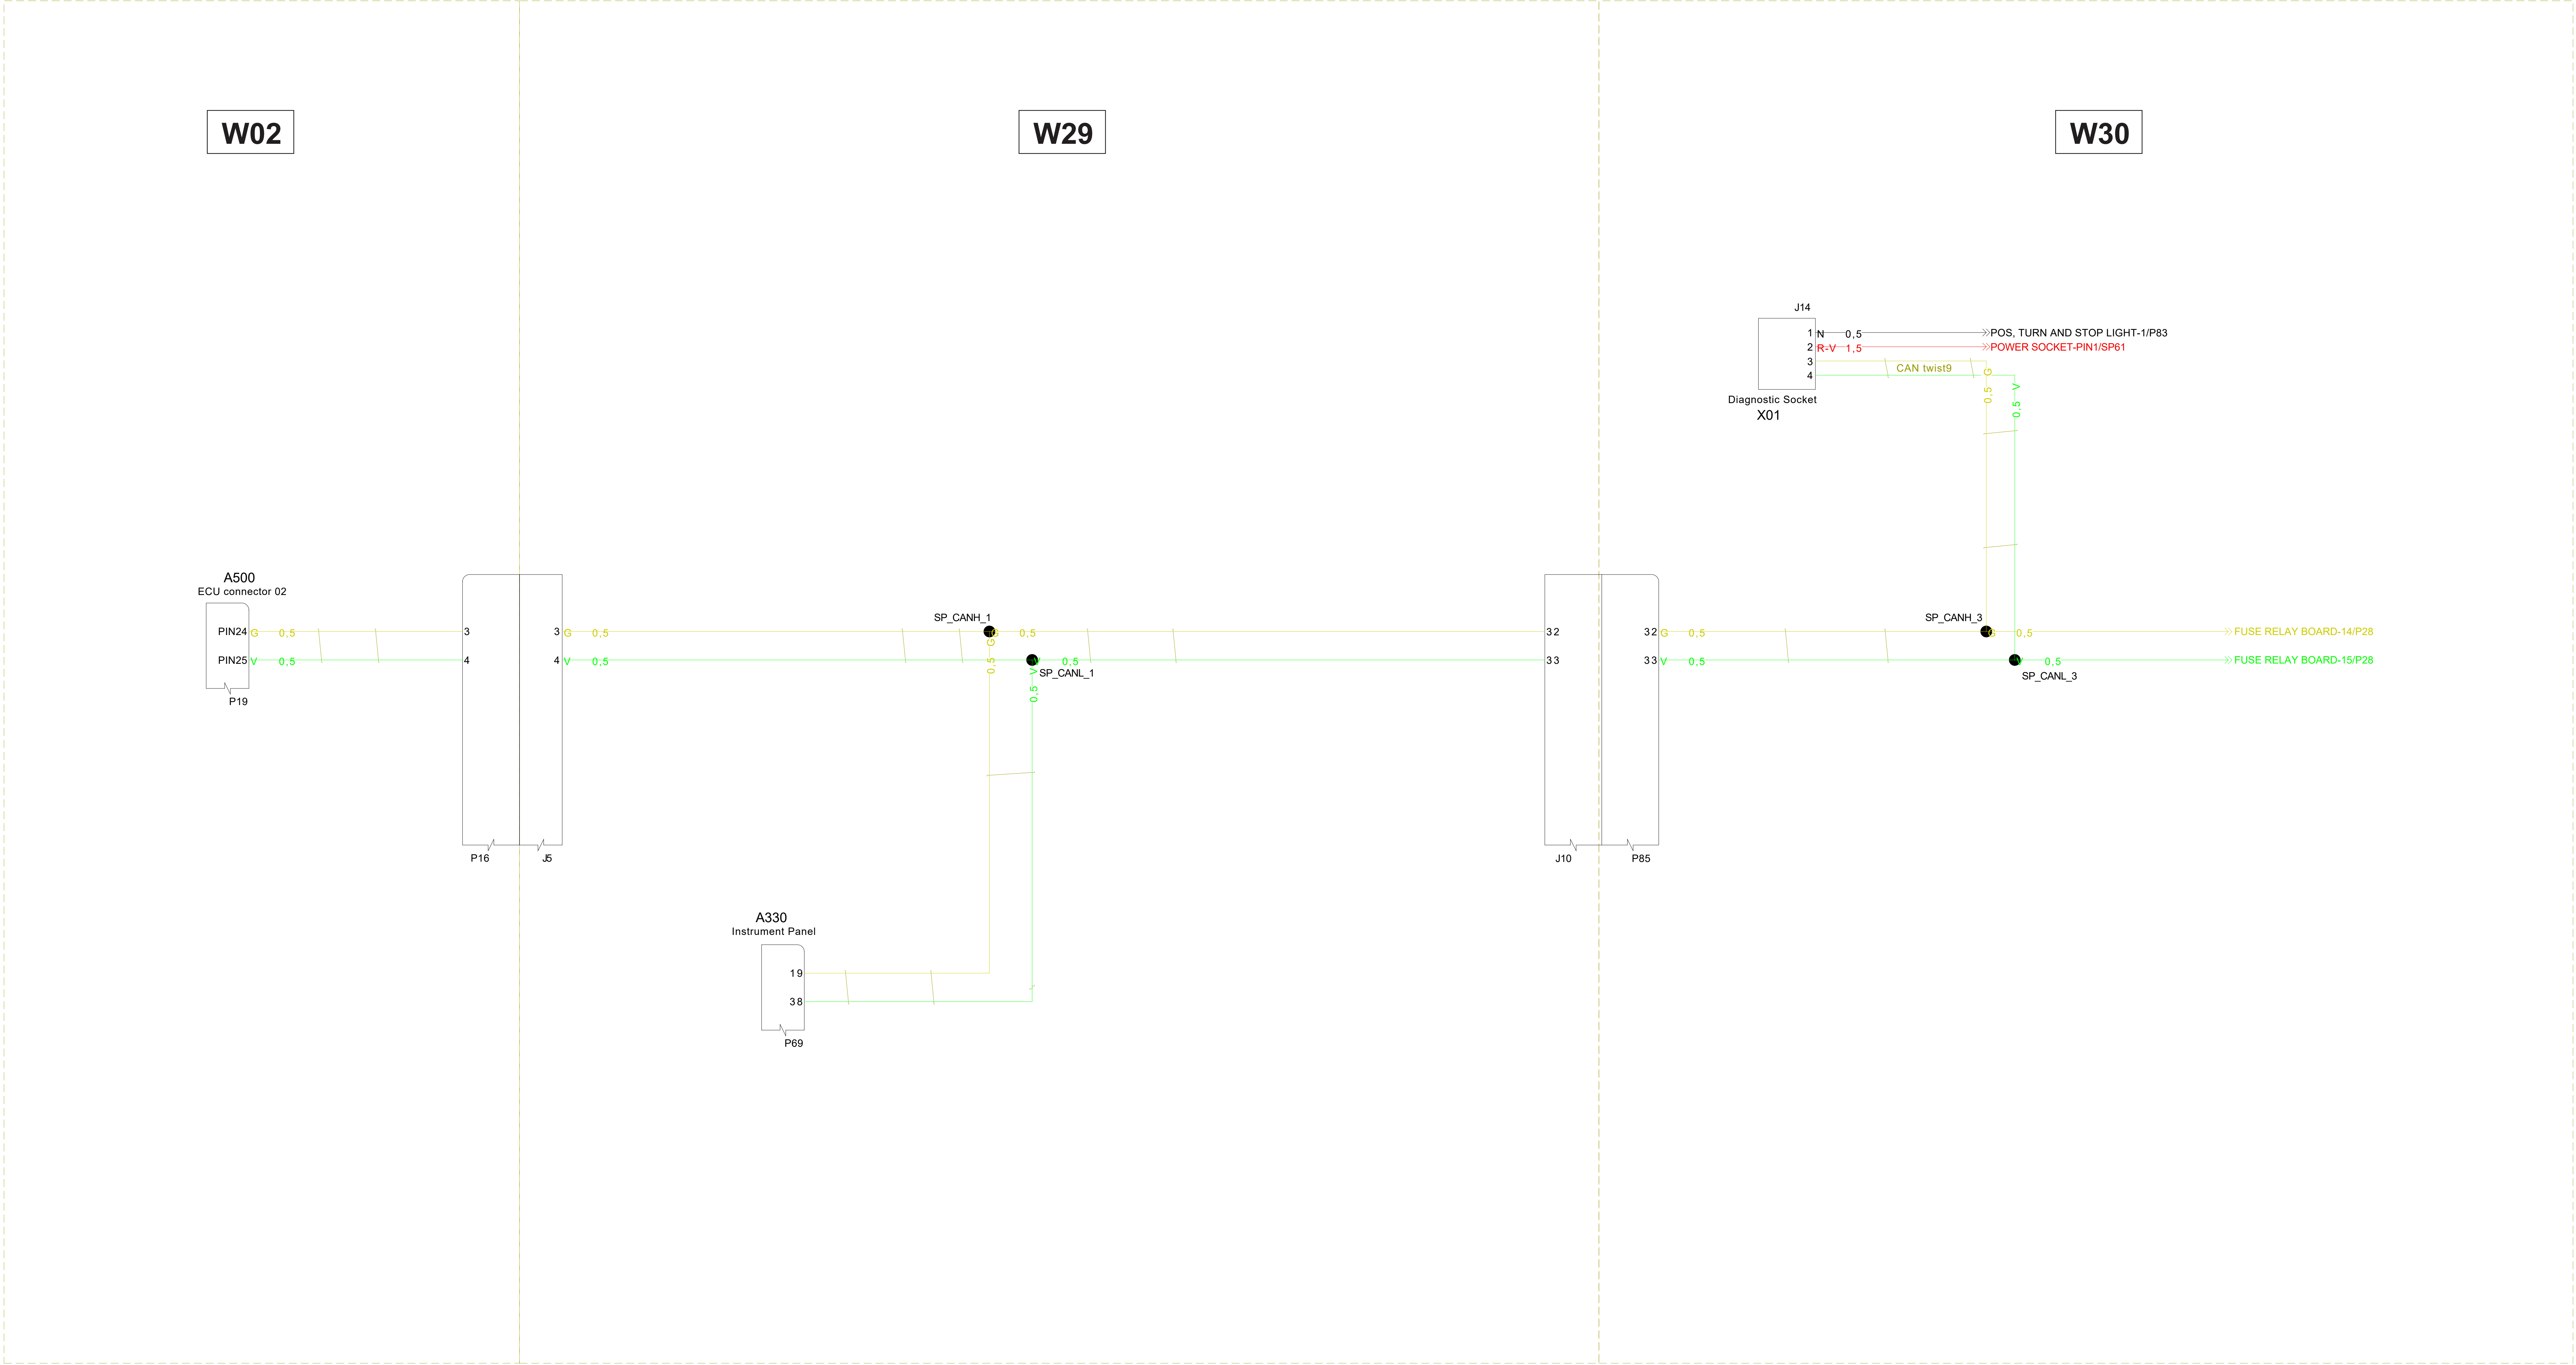


J10 - Connection to P85
J14 - Connection to Diagnostic socket X01
J5 - Connection to P16
P16 - Connection to J5
P19 - Connection to Engine control unit A500
P69 - Connection to Instrument panel A330
P85 - Connection to J10

 
W29

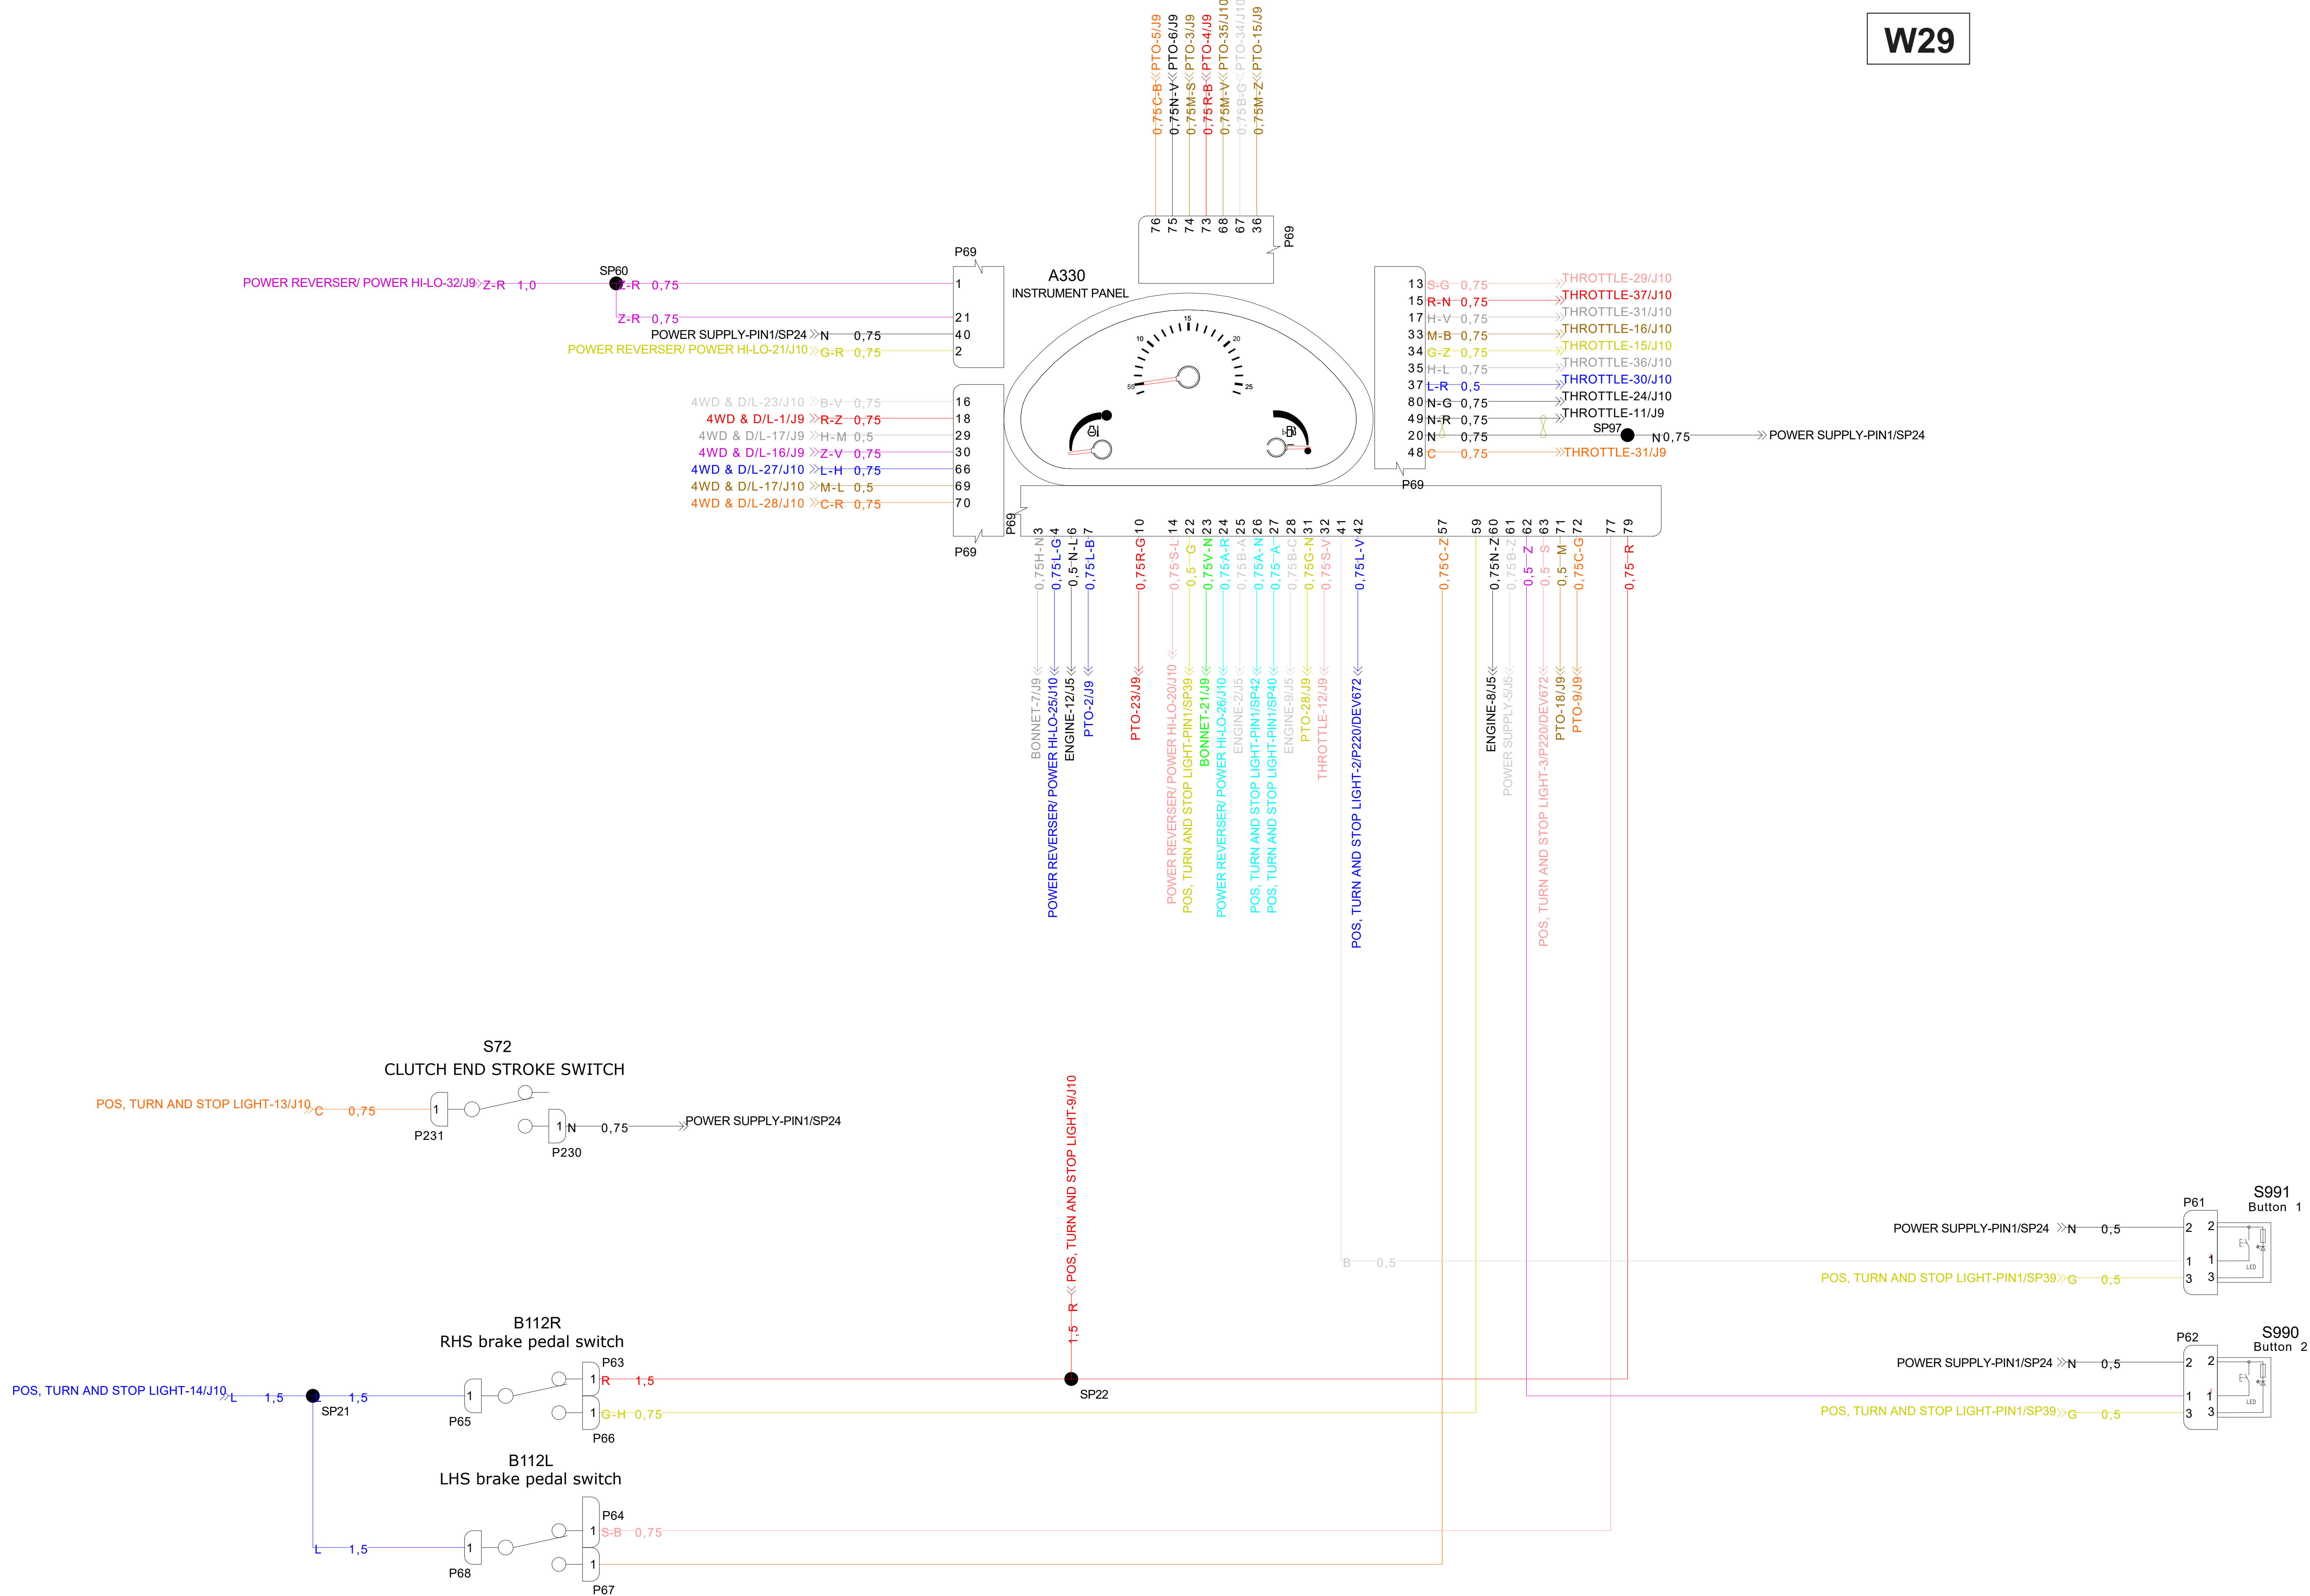

P230 - Connection to Clutch pedal end stroke switch S72
P231 - Connection to Clutch pedal end stroke switch S72
P61 - Connection to Button set S991
P62 - Connection to Button menu S990
P63 - Connection to RHS brake pedal switch B112R
P64 - Connection to LHS brake pedal switch B112L
P65 - Connection to RHS brake pedal switch B112R
P66 - Connection to RHS brake pedal switch B112R
P67 - Connection to LHS brake pedal switch B112L
P68 - Connection to LHS brake pedal switch B112L
P69 - Connection to Instrument panel A330

  
W30

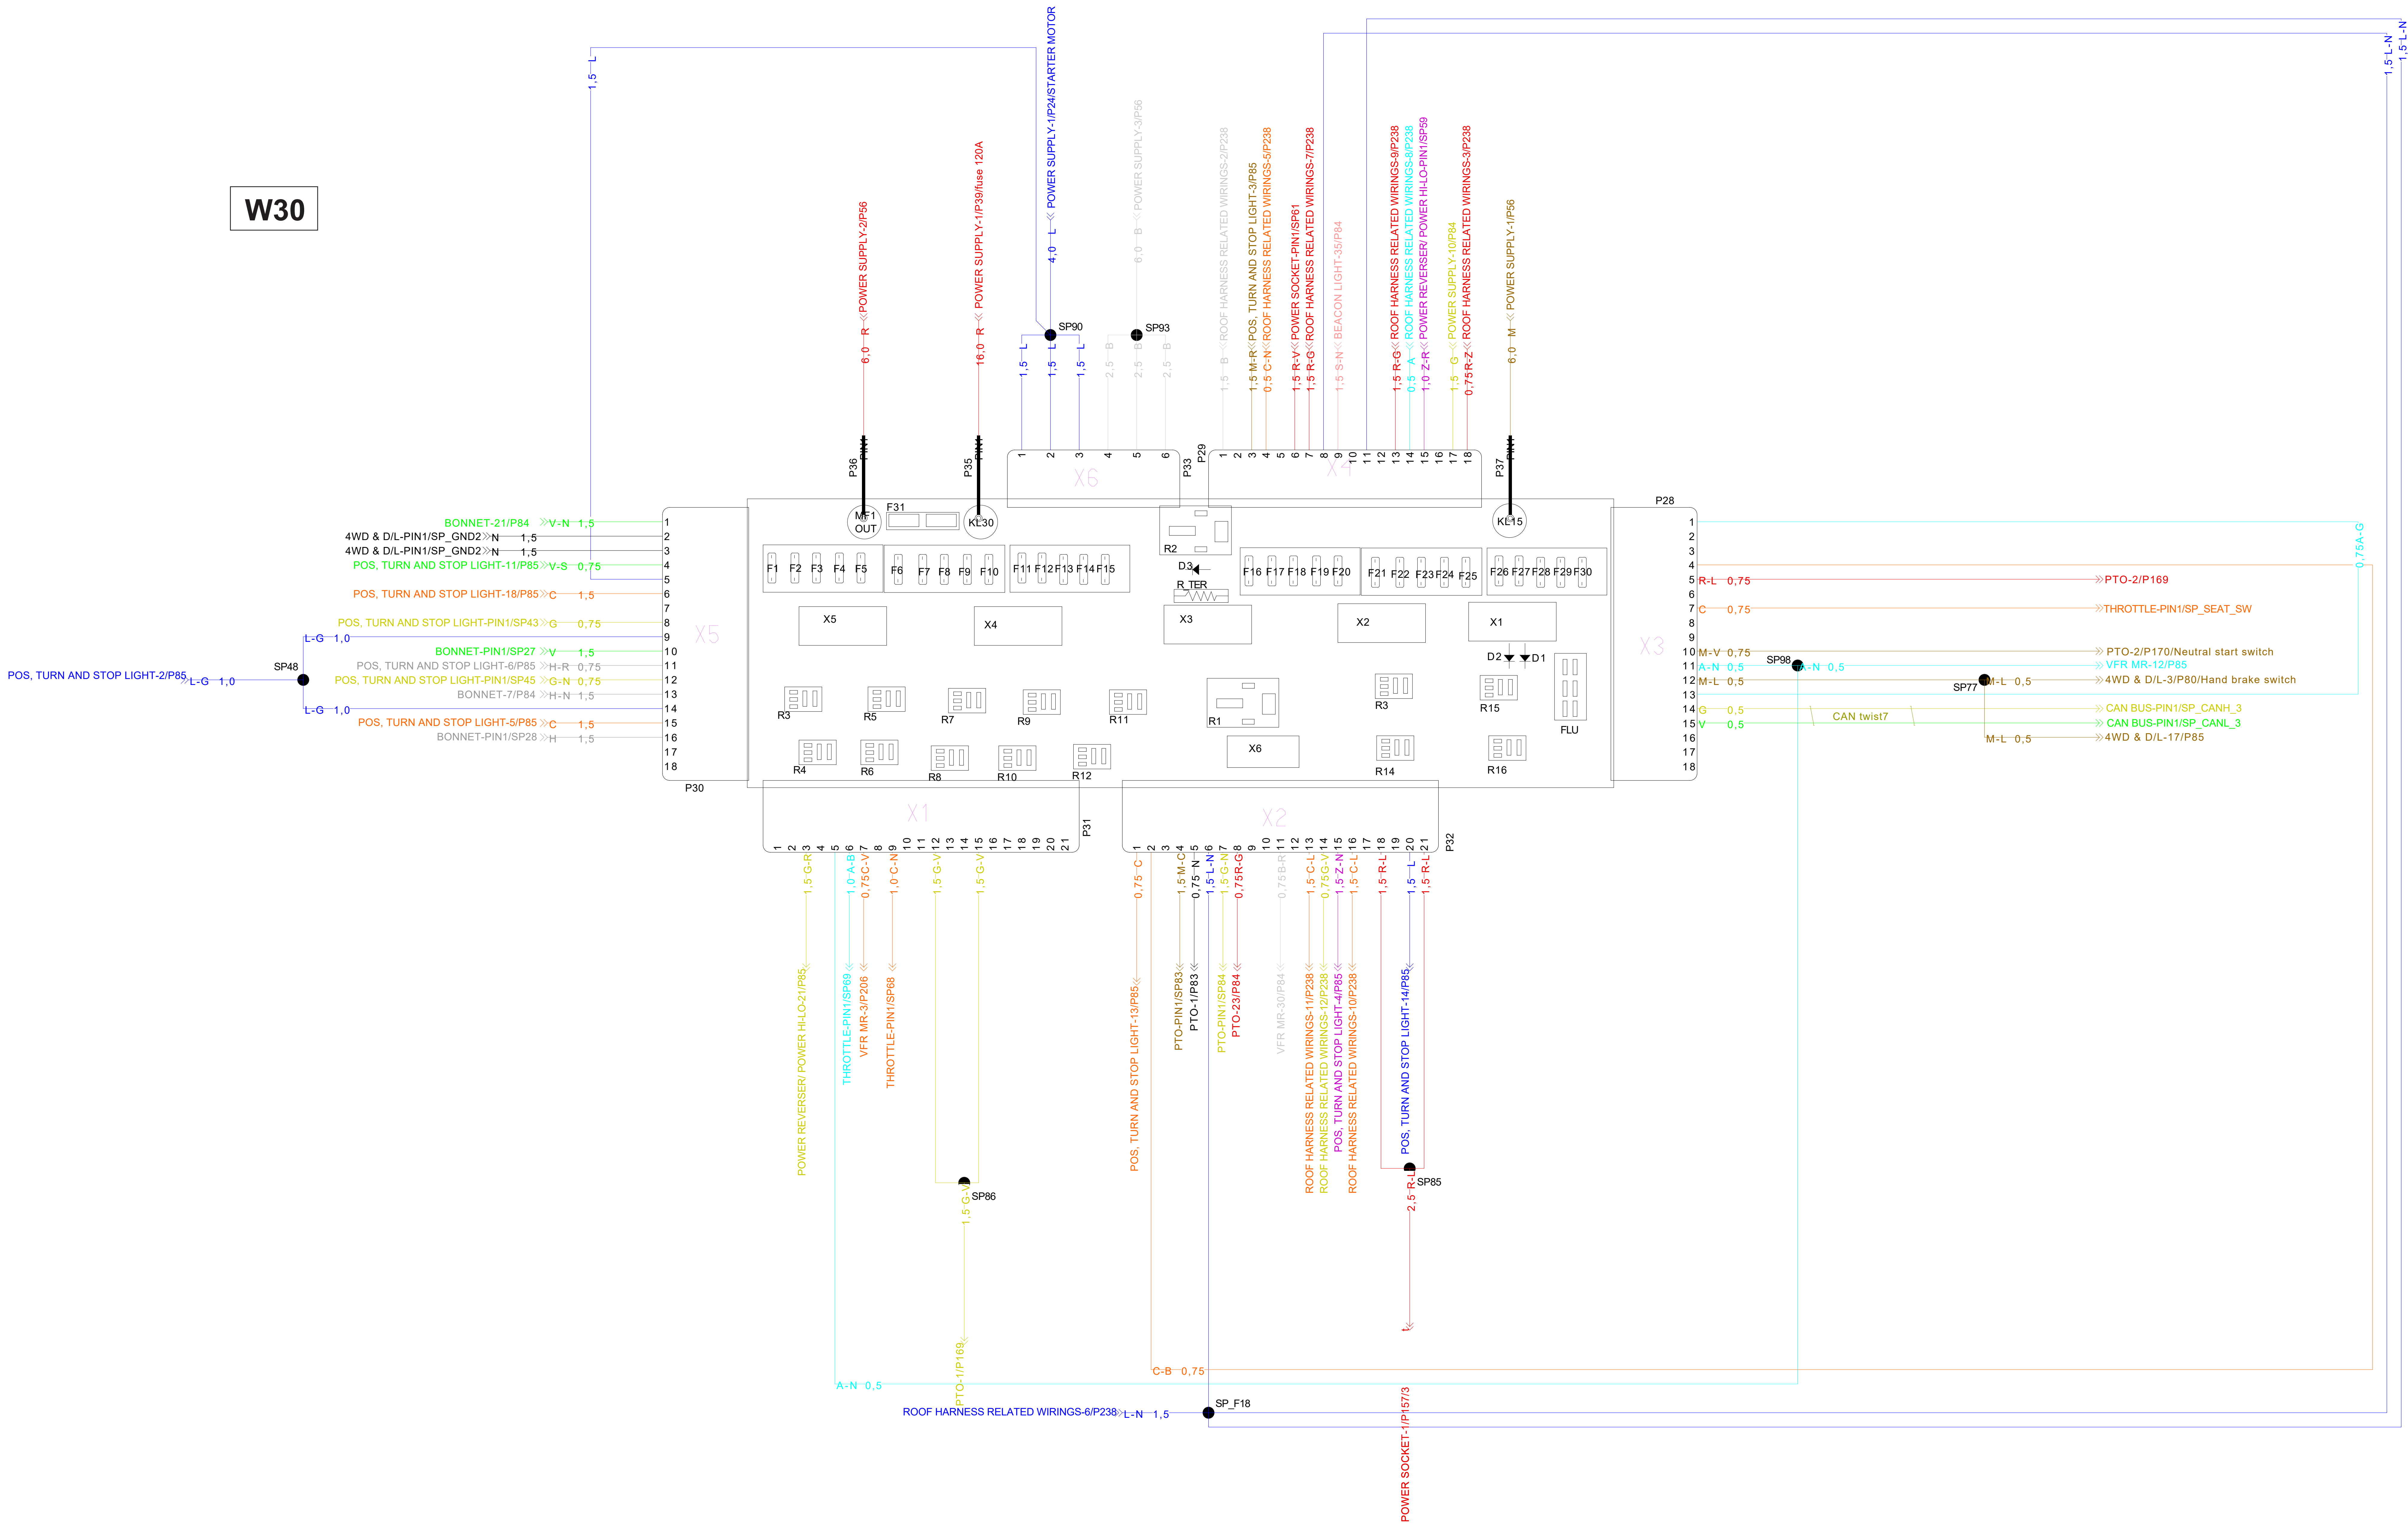

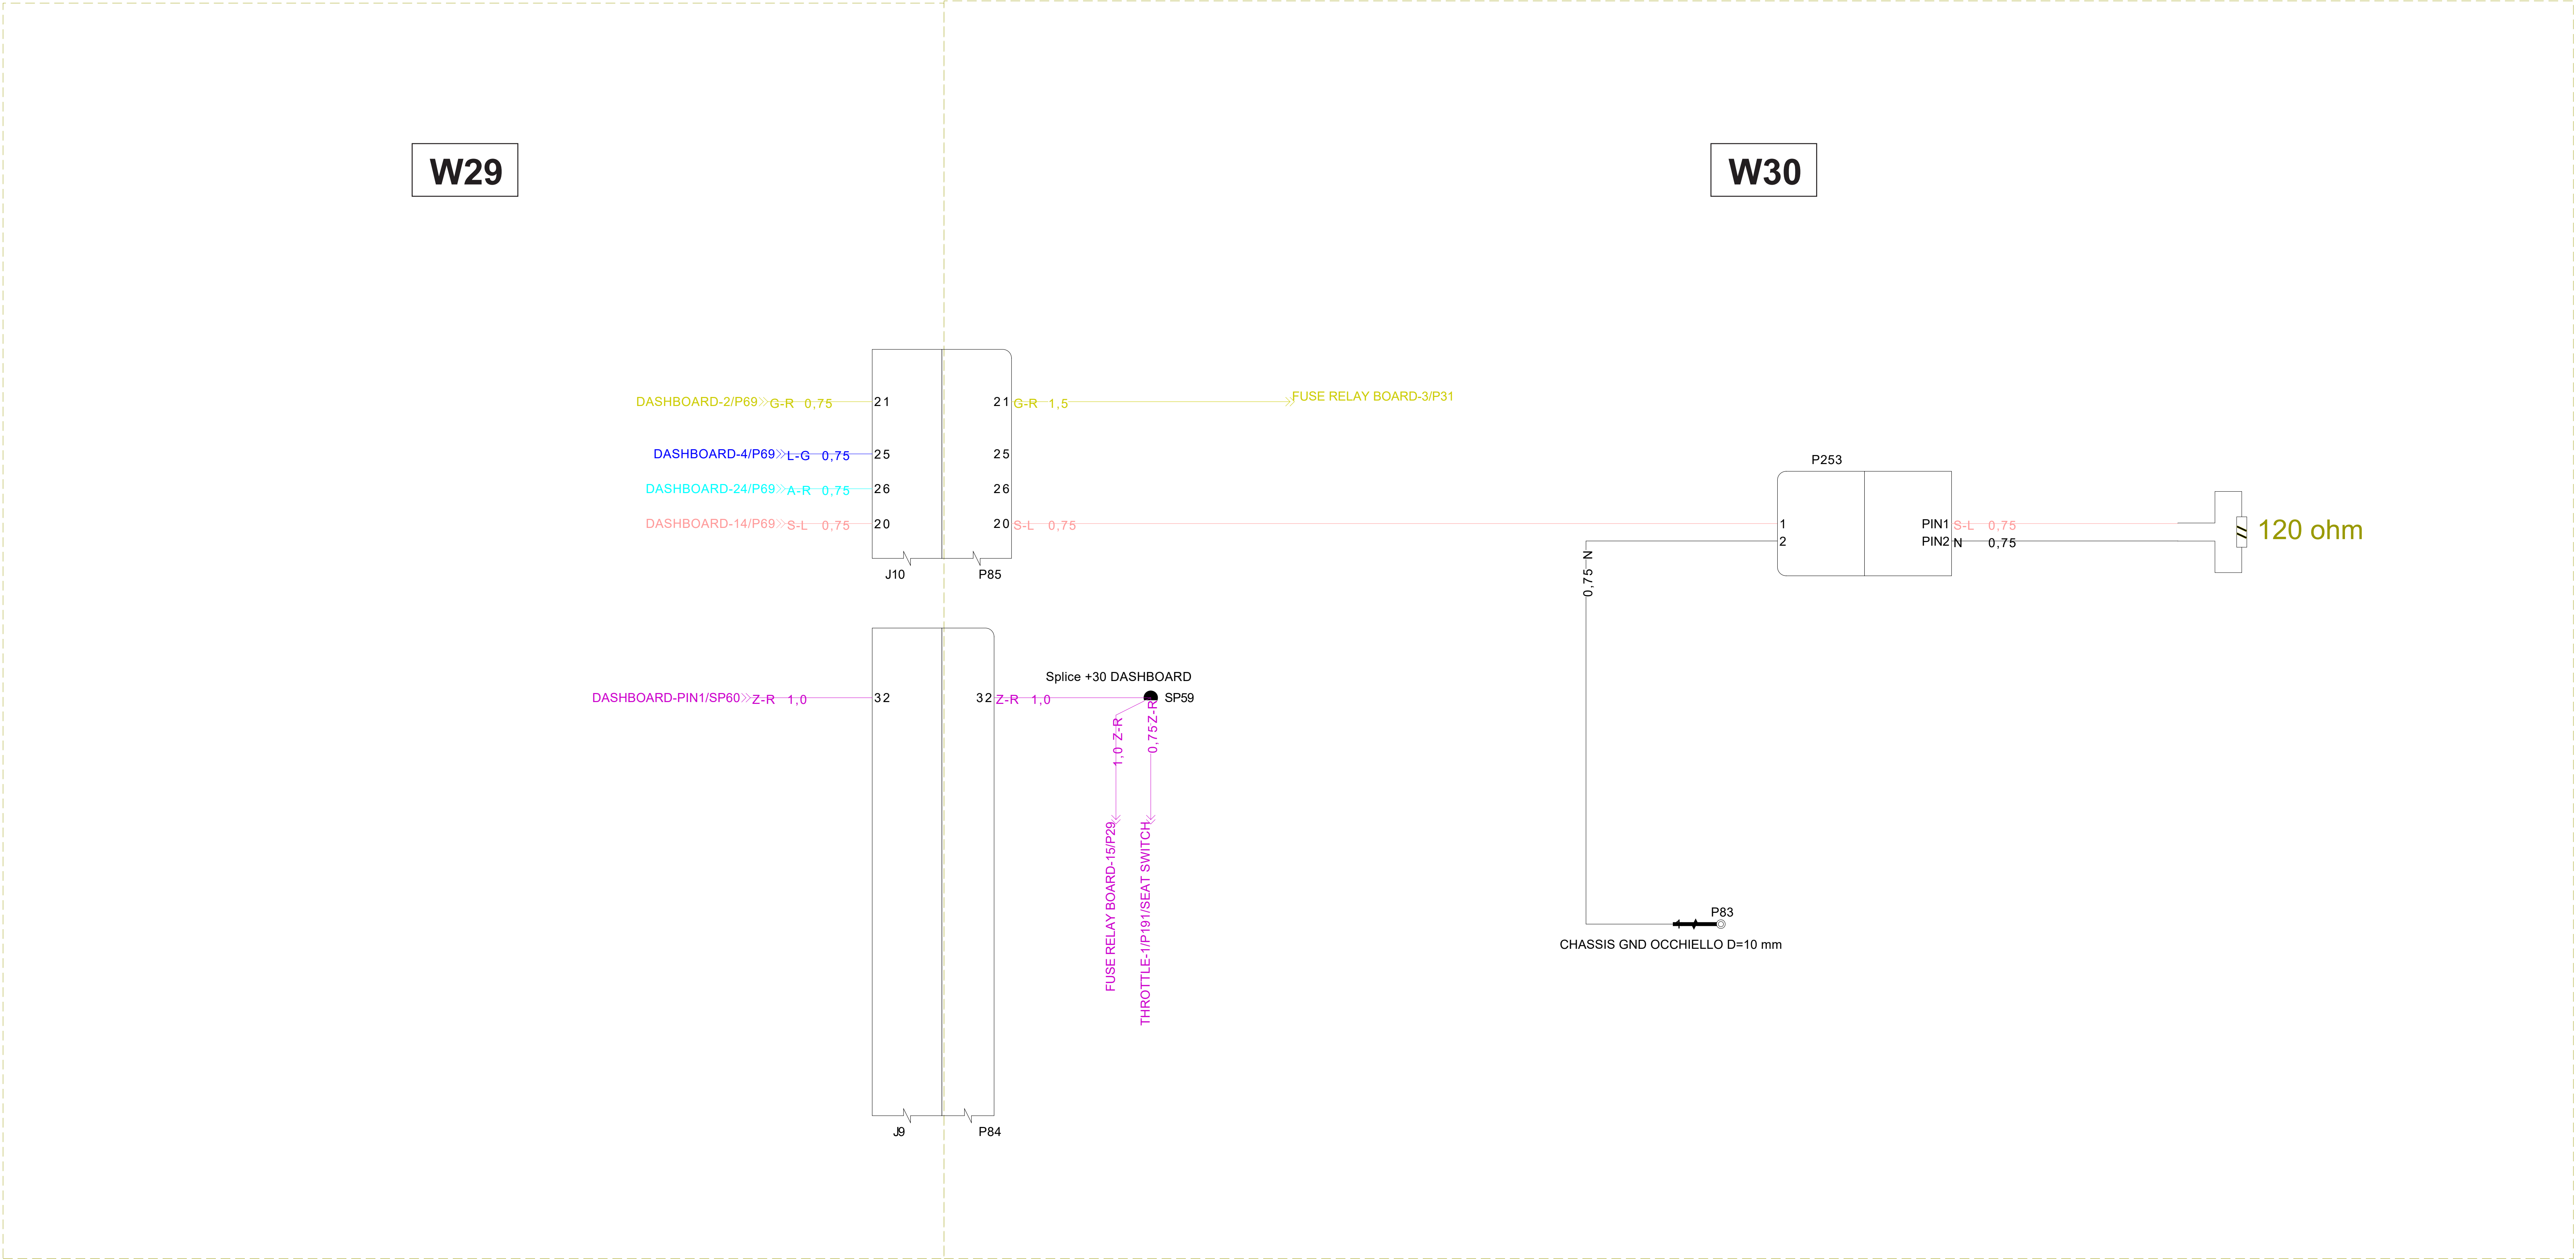

J10 - Connection to P85
J9 - Connection to P84
P253 - Connection to HI-LO solenoid valve predisposition
P83 - Connection to Chassis GND
P84 - Connection to J9
P85 - Connection to J10

 W30

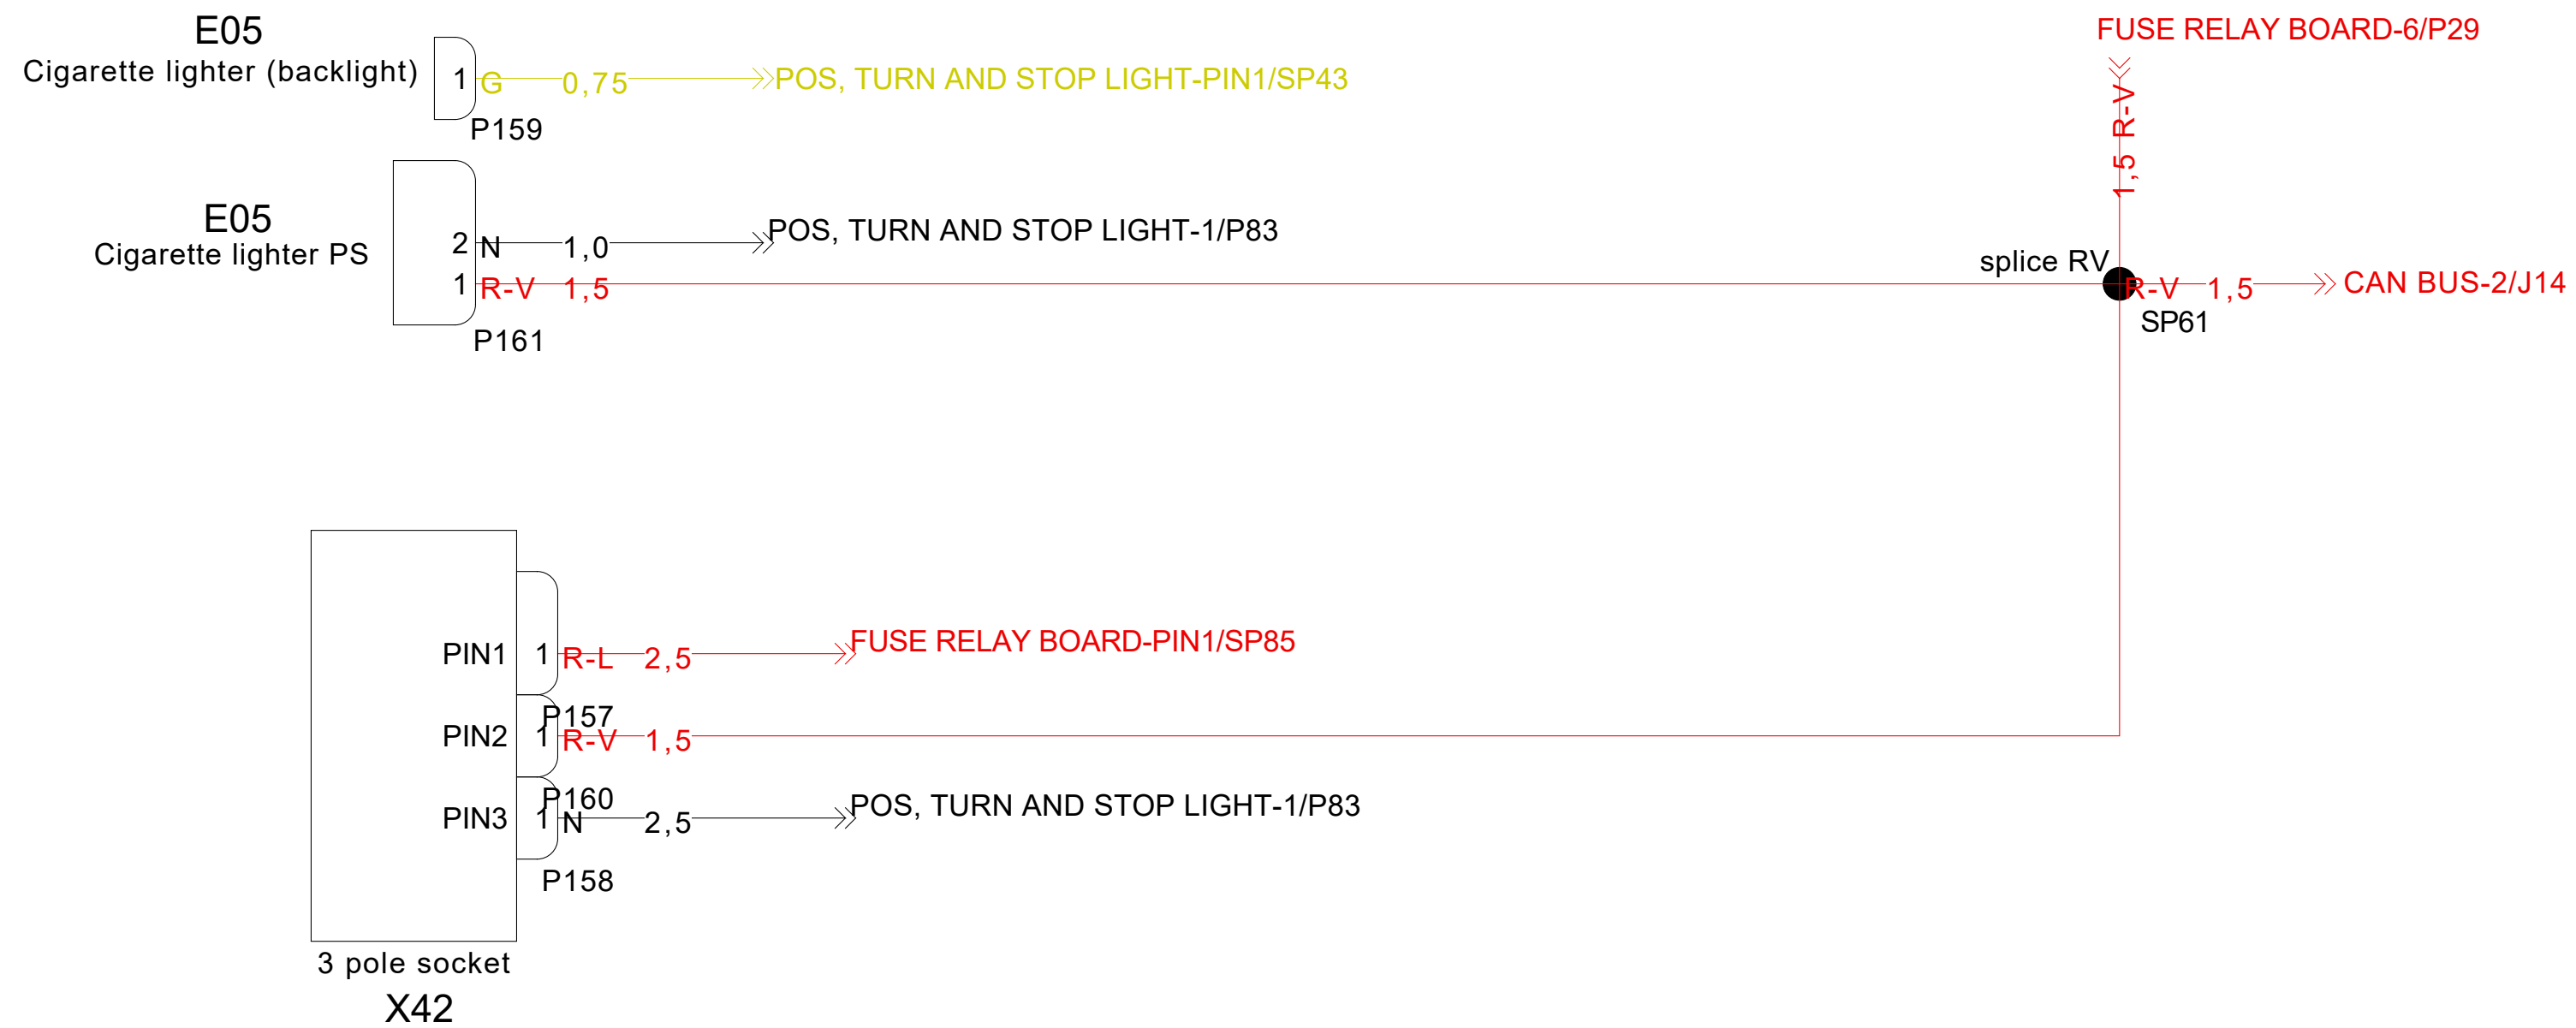

P157 - Connection to 3 pole socket X42
P158 - Connection to 3 pole socket X42
P159 - Connection to Cigarette lighter E05
P160 - Connection to 3 pole socket X42
P161 - Connection to Cigarette lighter E05

 
W29

W30


W33_2

W33_1


J10 - Connection to P85
J29 - Connection to P177
J9 - Connection to P84
P163 - Connection to GD PTO selector switch S21A
P164 - Connection to DIR PTO selector switch S21B
P165 - Connection to 540 PTO speed selector switch B07B
P166 - Connection to 540E/1000 PTO speed selector switch B07A
P169 - Connection to J47 (Option)
P169 - Connection to P276 (Option)
P170 - Connection to Neutral start switch B36
P171 - Connection to Mechanical PTO switch B08
P172 - Connection to Mechanical PTO switch B08
P173 - Connection to PTO safety solenoid valve Y350
P176 - Connection to Front PTO solenoid valve Y999
P177 - Connection to J29
P179 - Connection to PTO pressure switch B350
P181 - Connection to Mechanical PTO switch B08
P276 - Connection to P169
P442 - Connection to Front PTO switch S999
P83 - Connection to Chassis GND
P84 - Connection to J9
P85 - Connection to J10

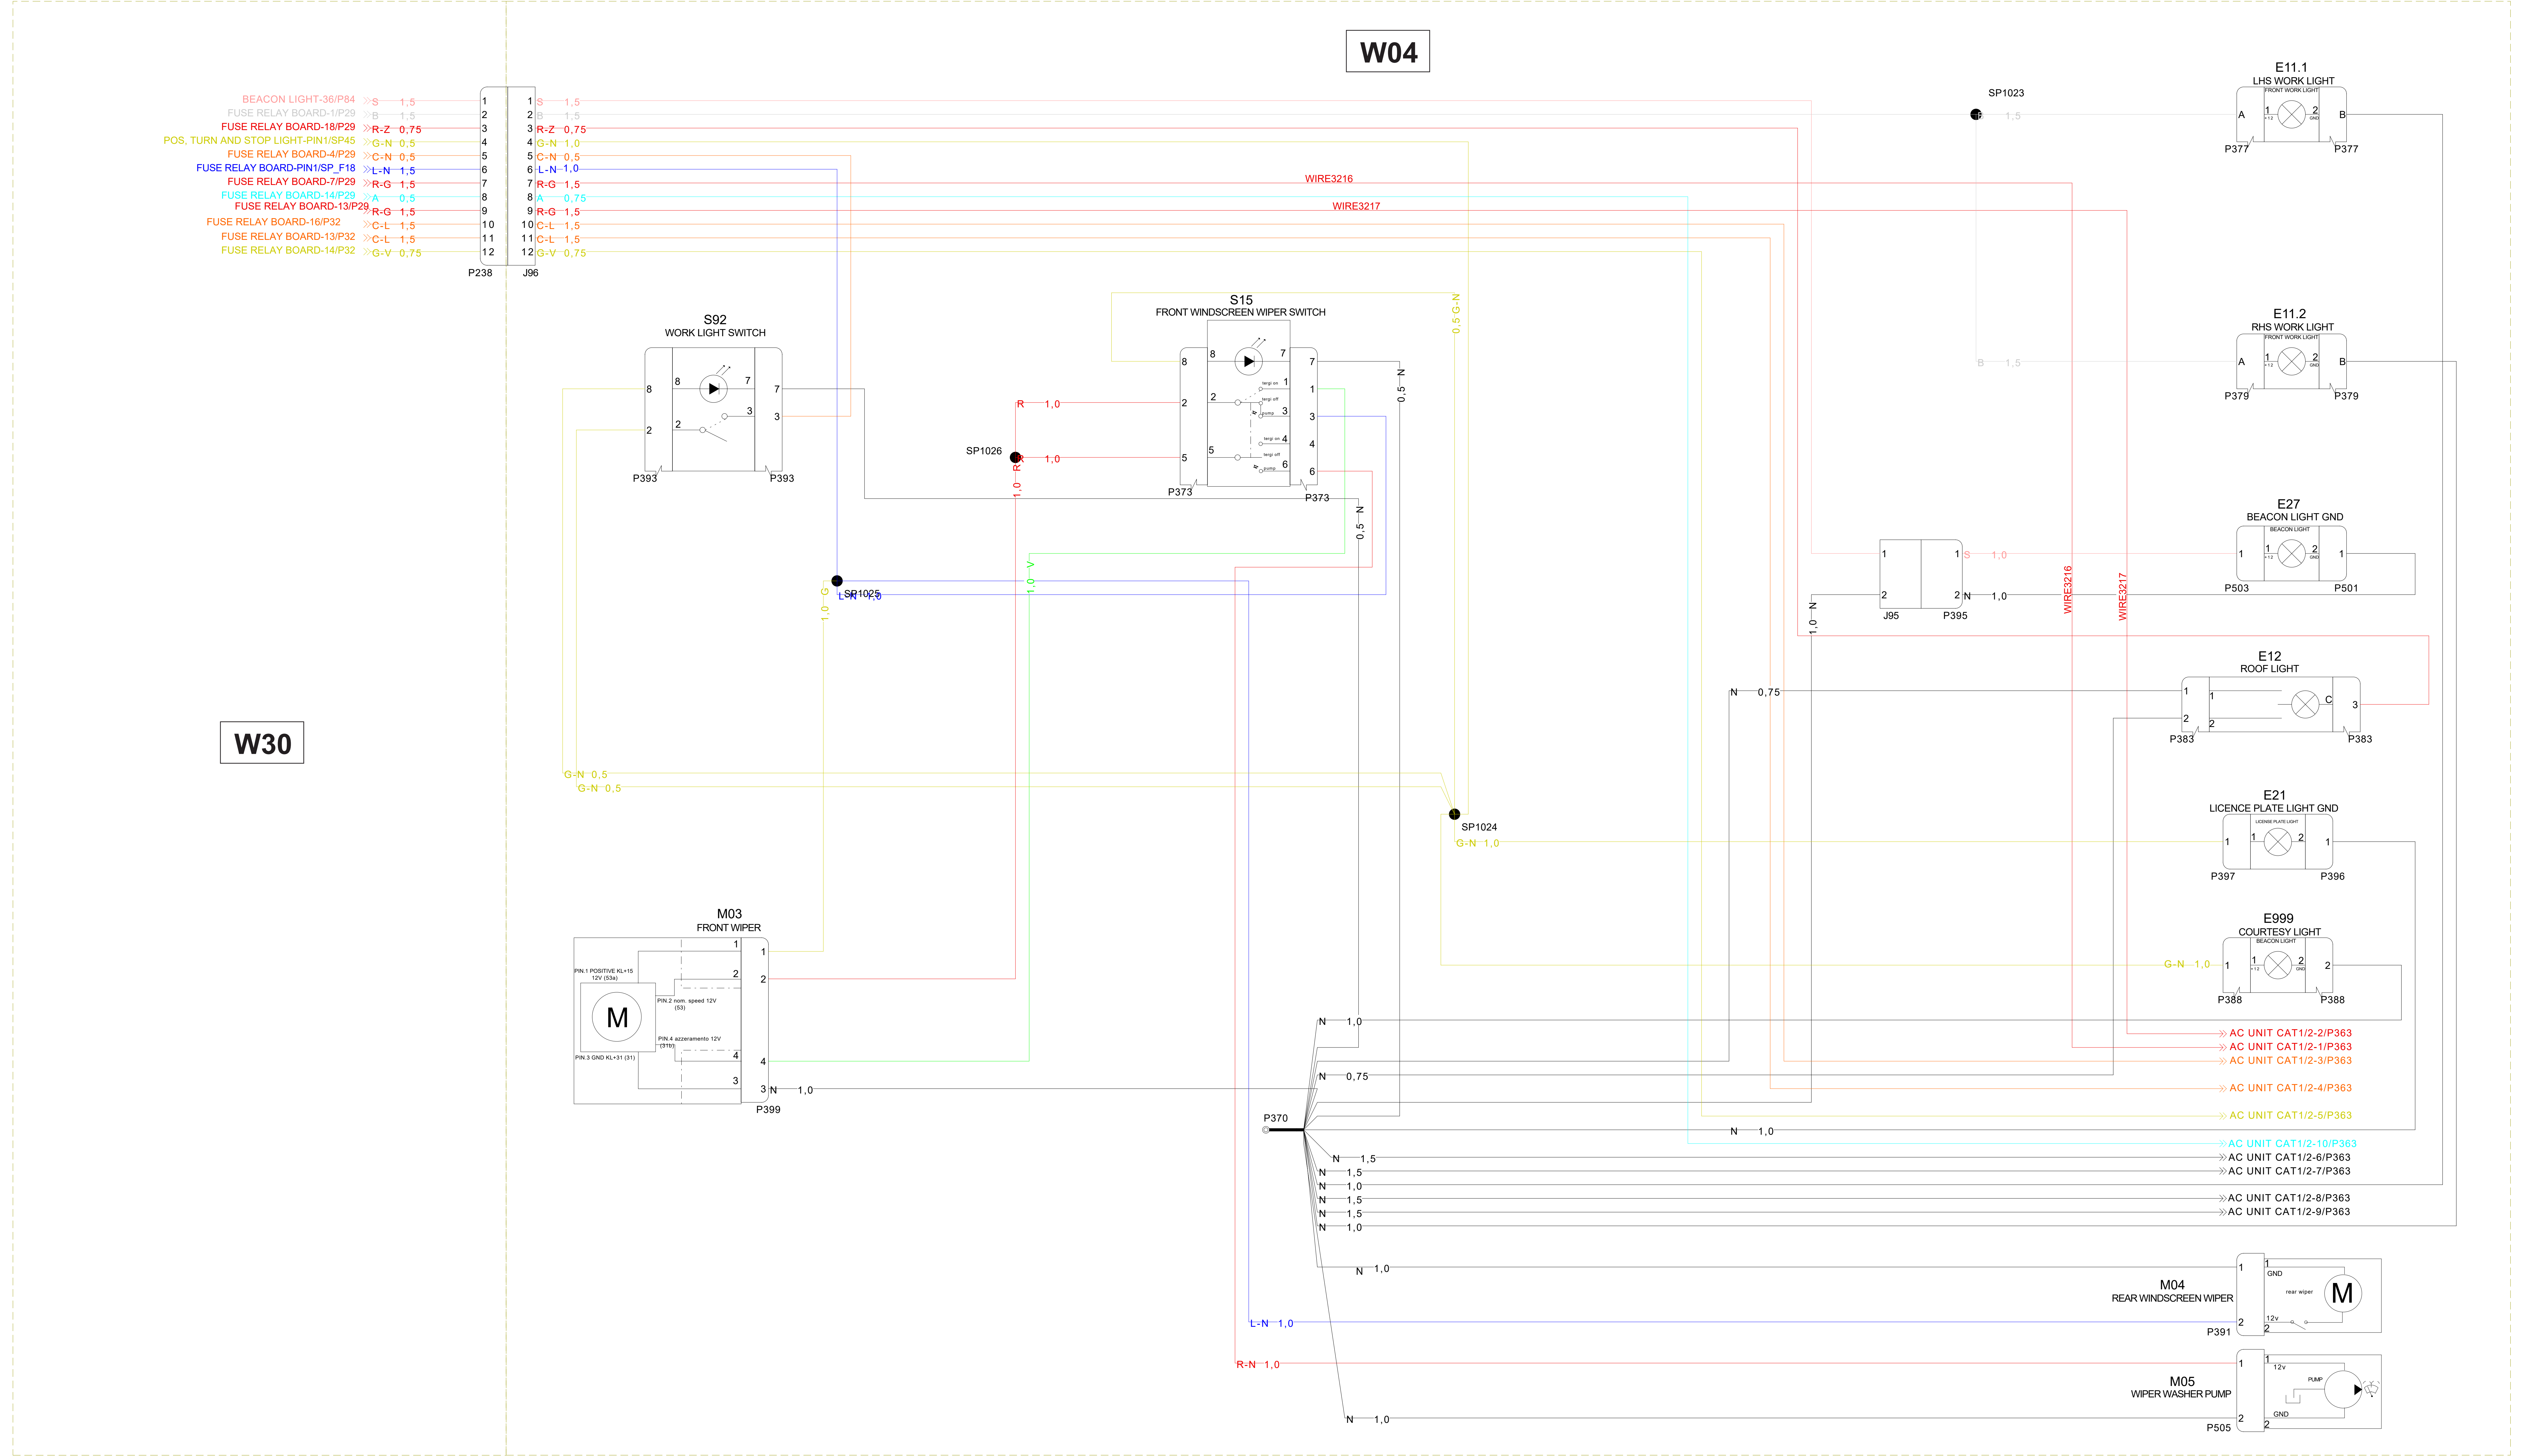


J95 - Connection to P395
J96 - Connection to P238
P238 - Connection to J96
P370 - Connection to Chassis GND
P373 - Connection to Front wiper switch S15
P377 - Connection to Rear LH work light E11.1
P379 - Connection to Rear RH work light E11.2
P383 - Connection to Internal light E12
P388 - Connection to Courtesy light E999
P391 - Connection to Rear wiper motor M04
P393 - Connection to Work light switch S92
P395 - Connection to J95
P396 - Connection to Licence plate light E21
P397 - Connection to Licence plate light E21
P399 - Connection to Front wiper motor M03
P501 - Connection to Beacon light E27
P503 - Connection to Beacon light E27
P505 - Connection to Wiper pump M05

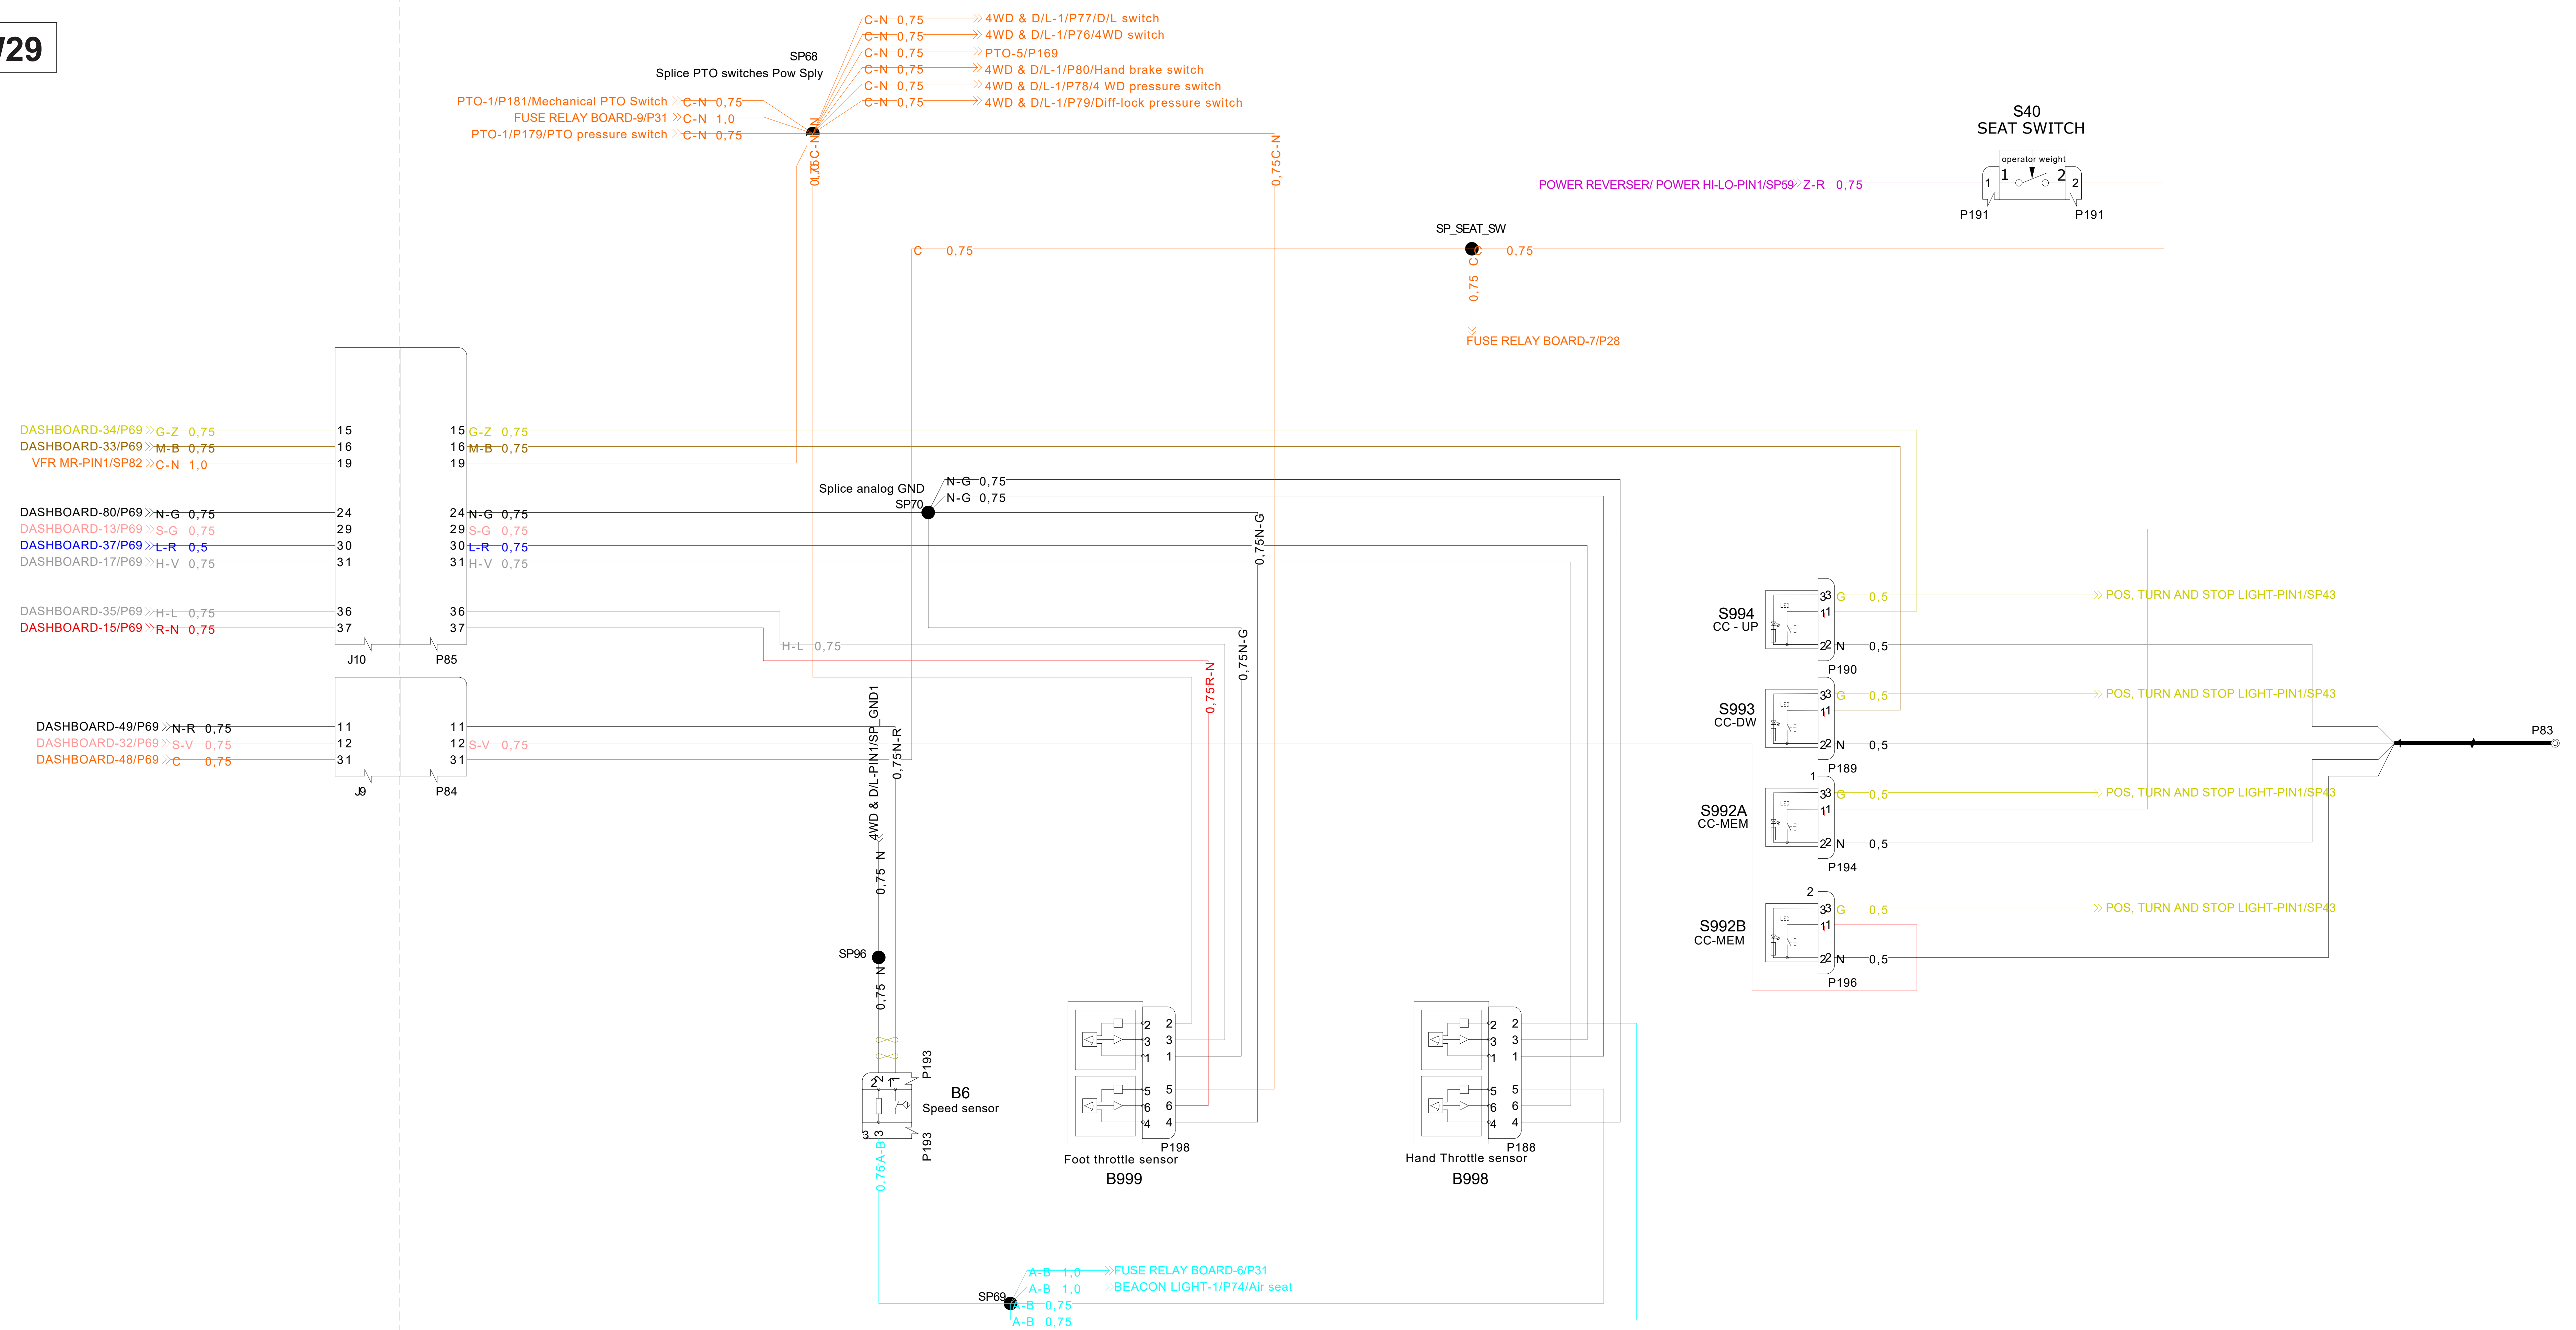 



- J10 - Connection to P85
- J9 - Connection to P84
- P188 - Connection to Hand throttle sensor B998
- P189 - Connection to Cruise control DW S993
- P190 - Connection to Cruise control UP S994
- P191 - Connection to Seat switch S40
- P193 - Connection to Speed Sensor B06
- P194 - Connection to Cruise control MEM1 S992A
- P196 - Connection to Cruise control MEM2 S992B
- P198 - Connection to Foot throttle sensor B999
- P83 - Connection to Chassis GND
- P84 - Connection to J9
- P85 - Connection to J10

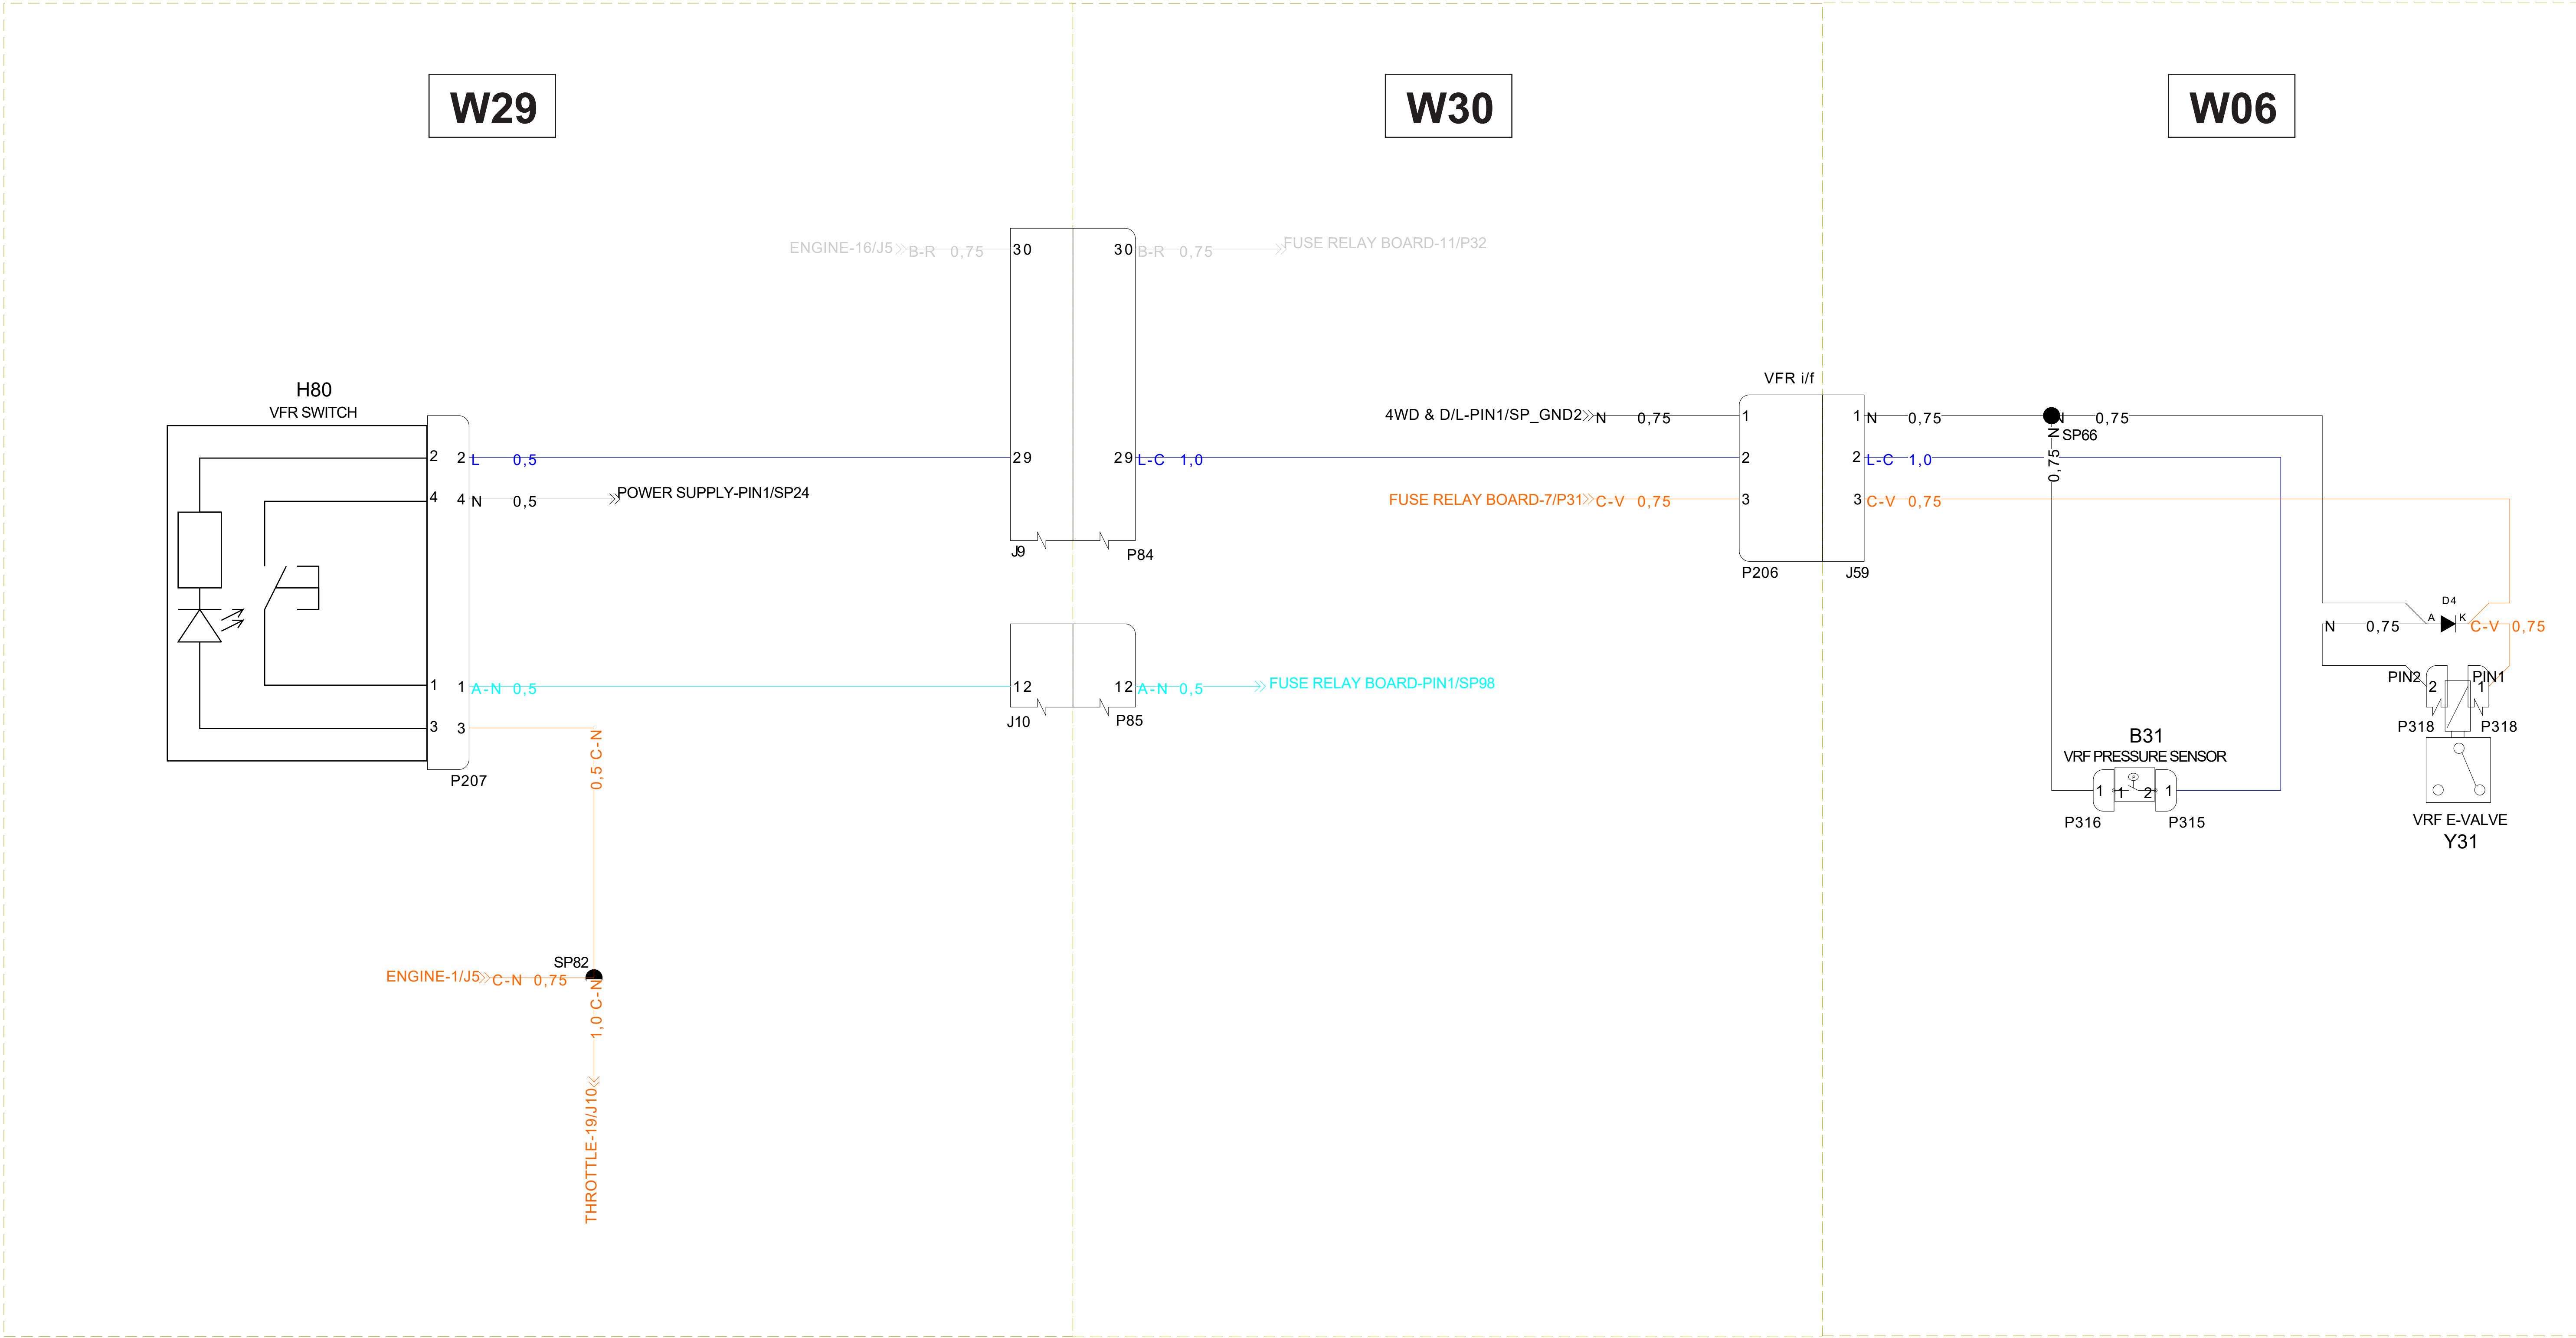 


 
J10 - Connection to P85
J59 - Connection to P206
J9 - Connection to P84
P207 - Connection to Trailer brake switch H80
P315 - Connection to Trailer brake pressure sensor B31
P316 - Connection to Trailer brake pressure sensor B31
P318 - Connection to Trailer brake solenoid valve Y31
P84 - Connection to J9
P85 - Connection to J10

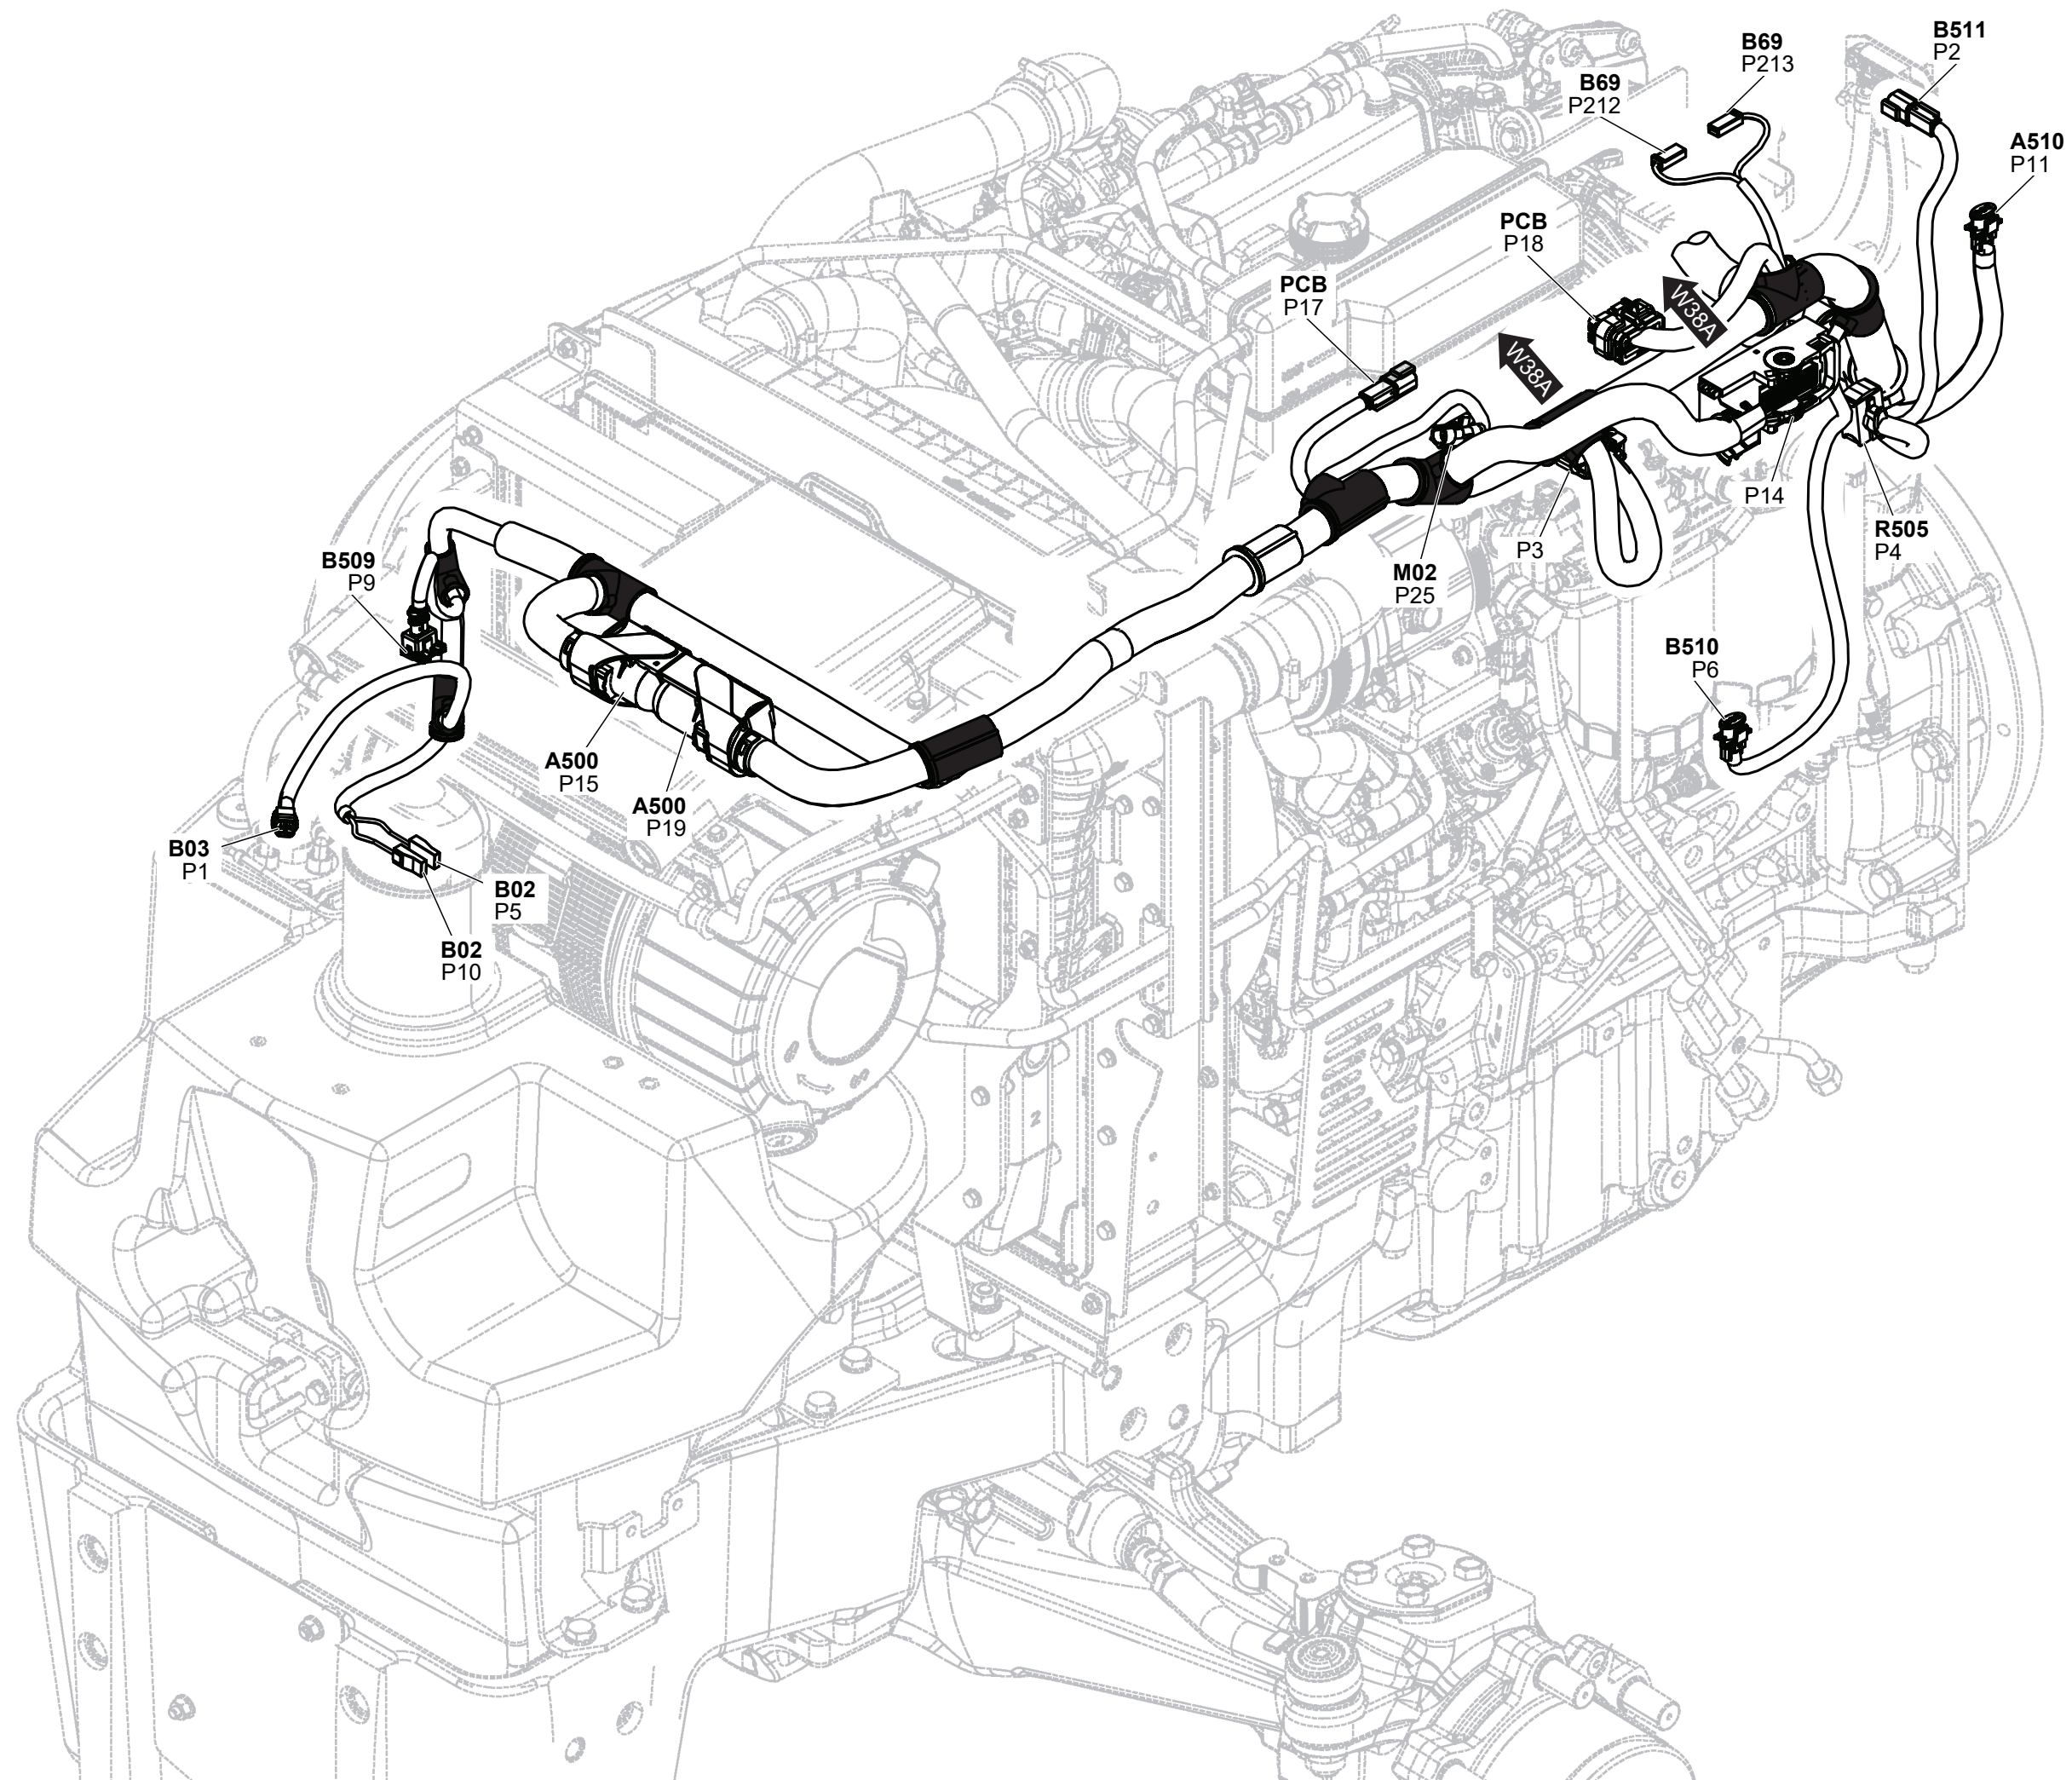


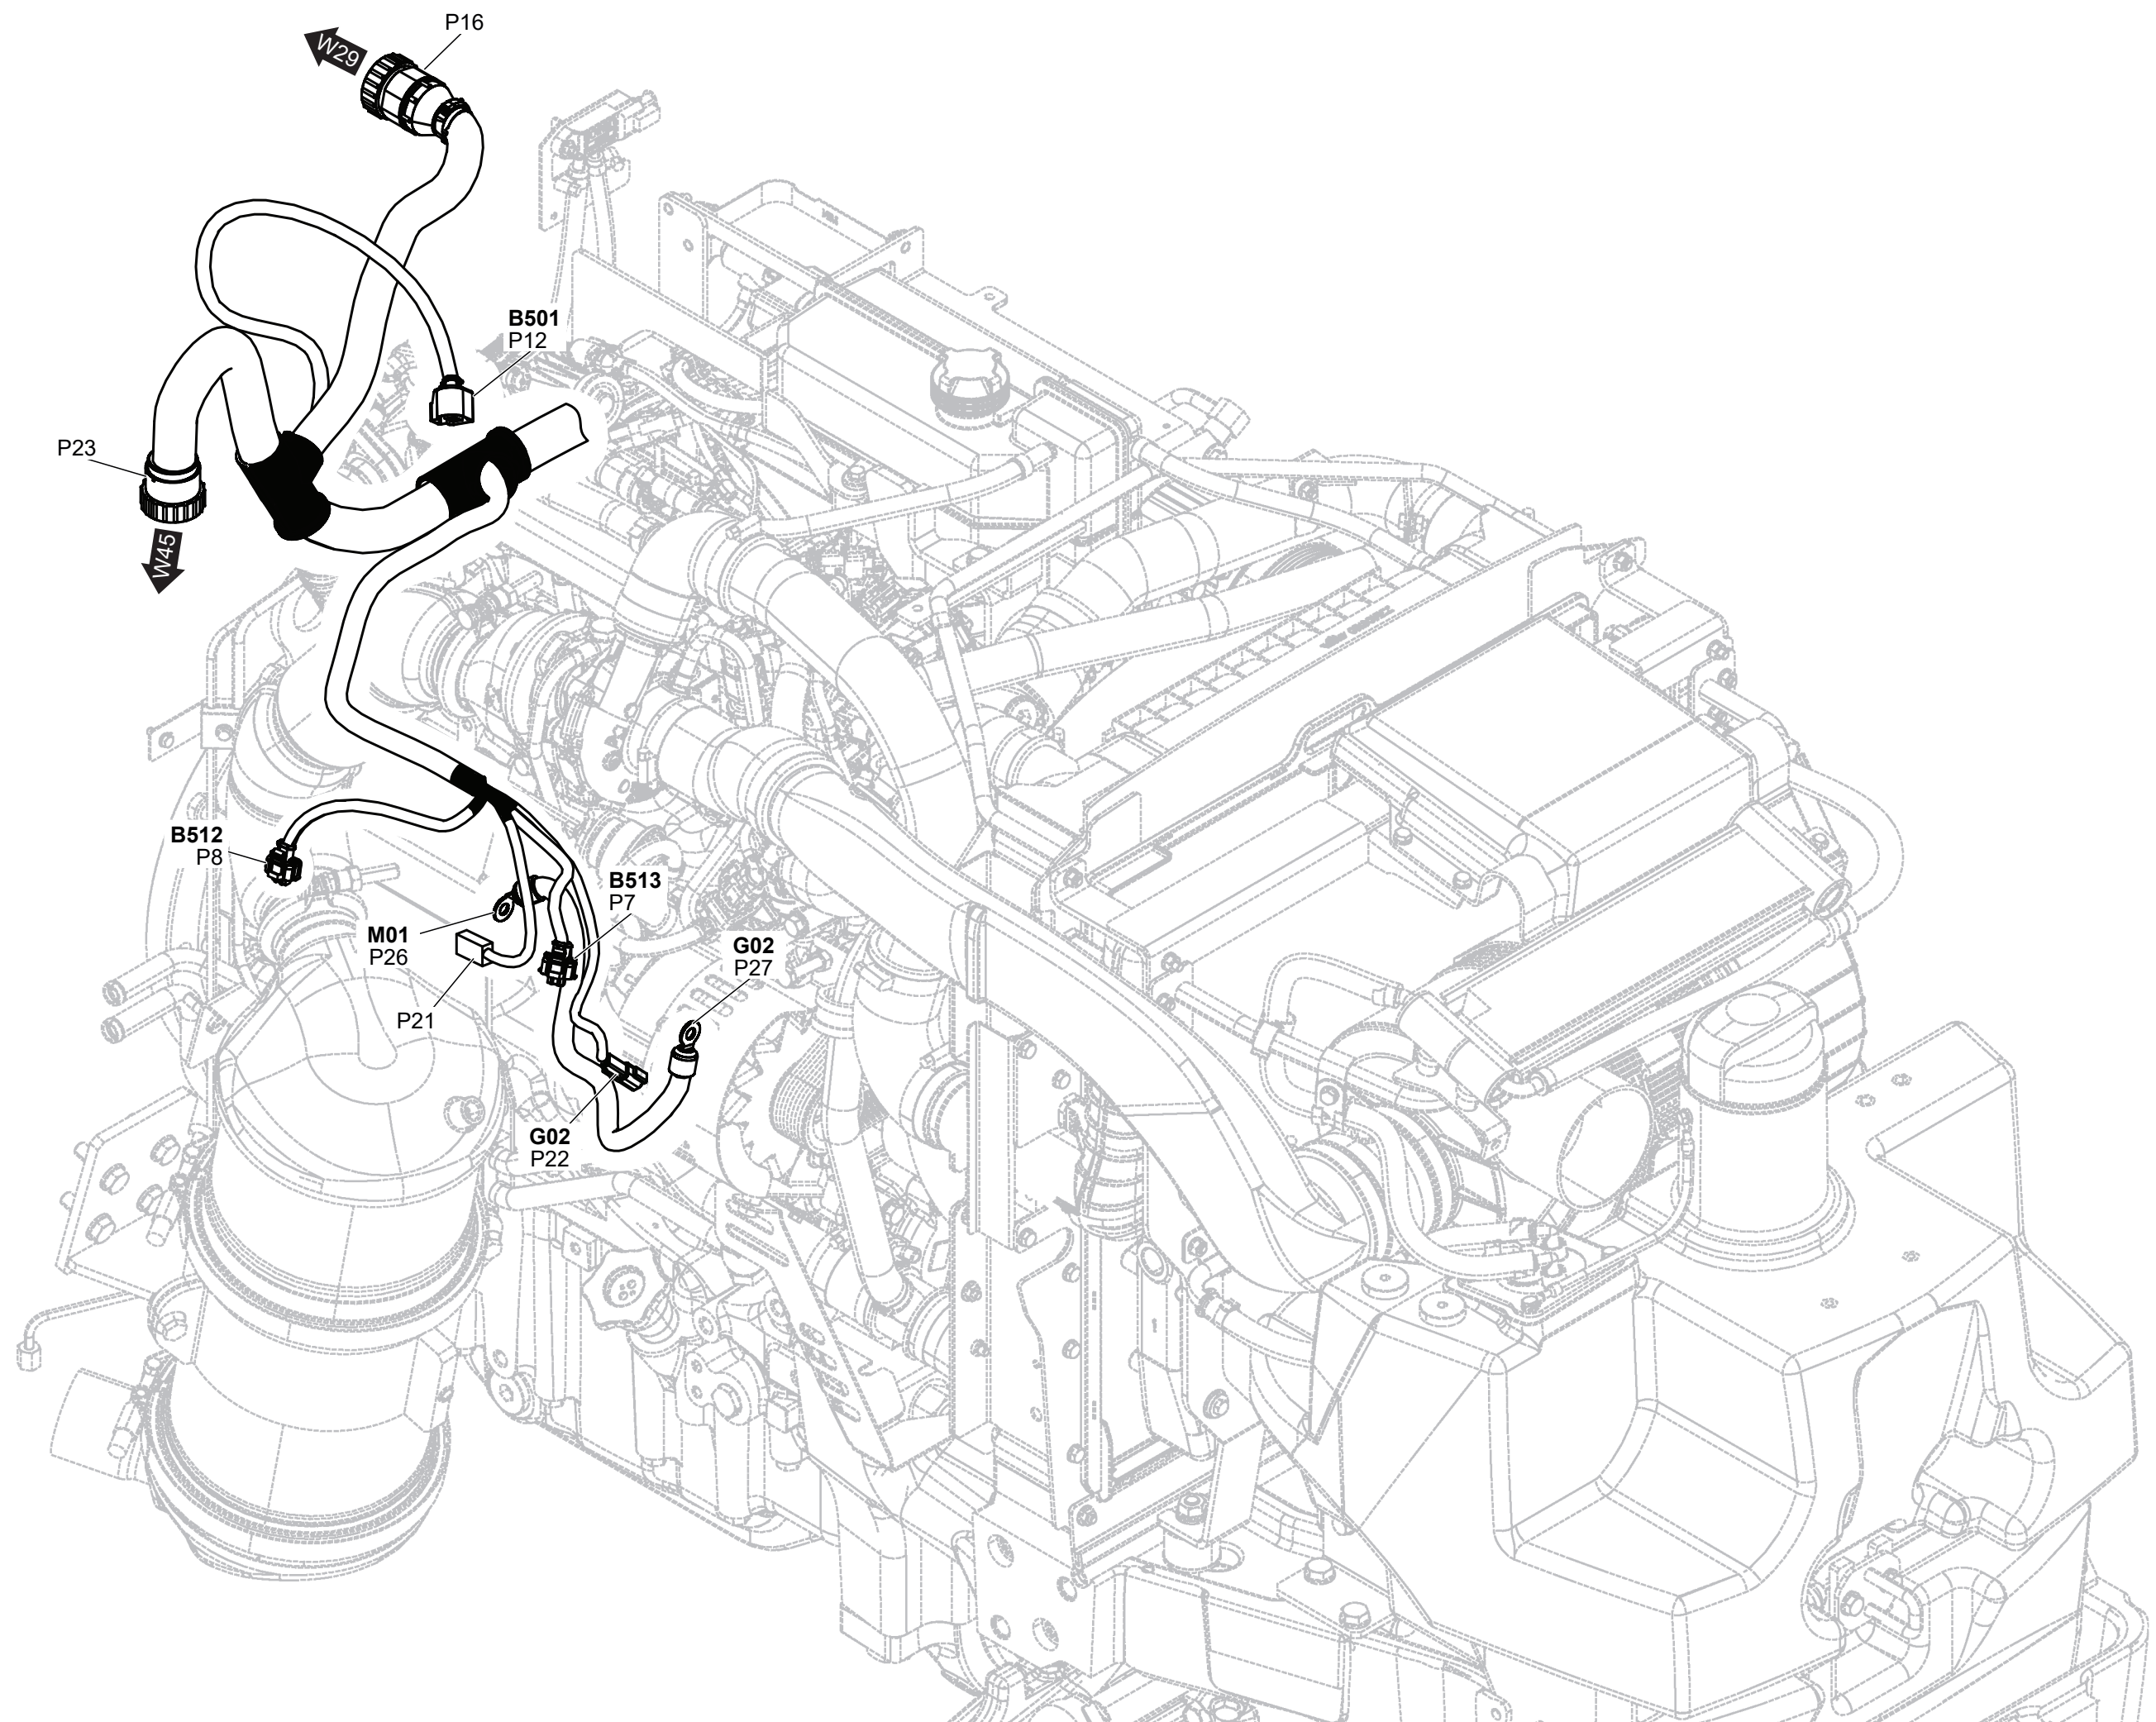


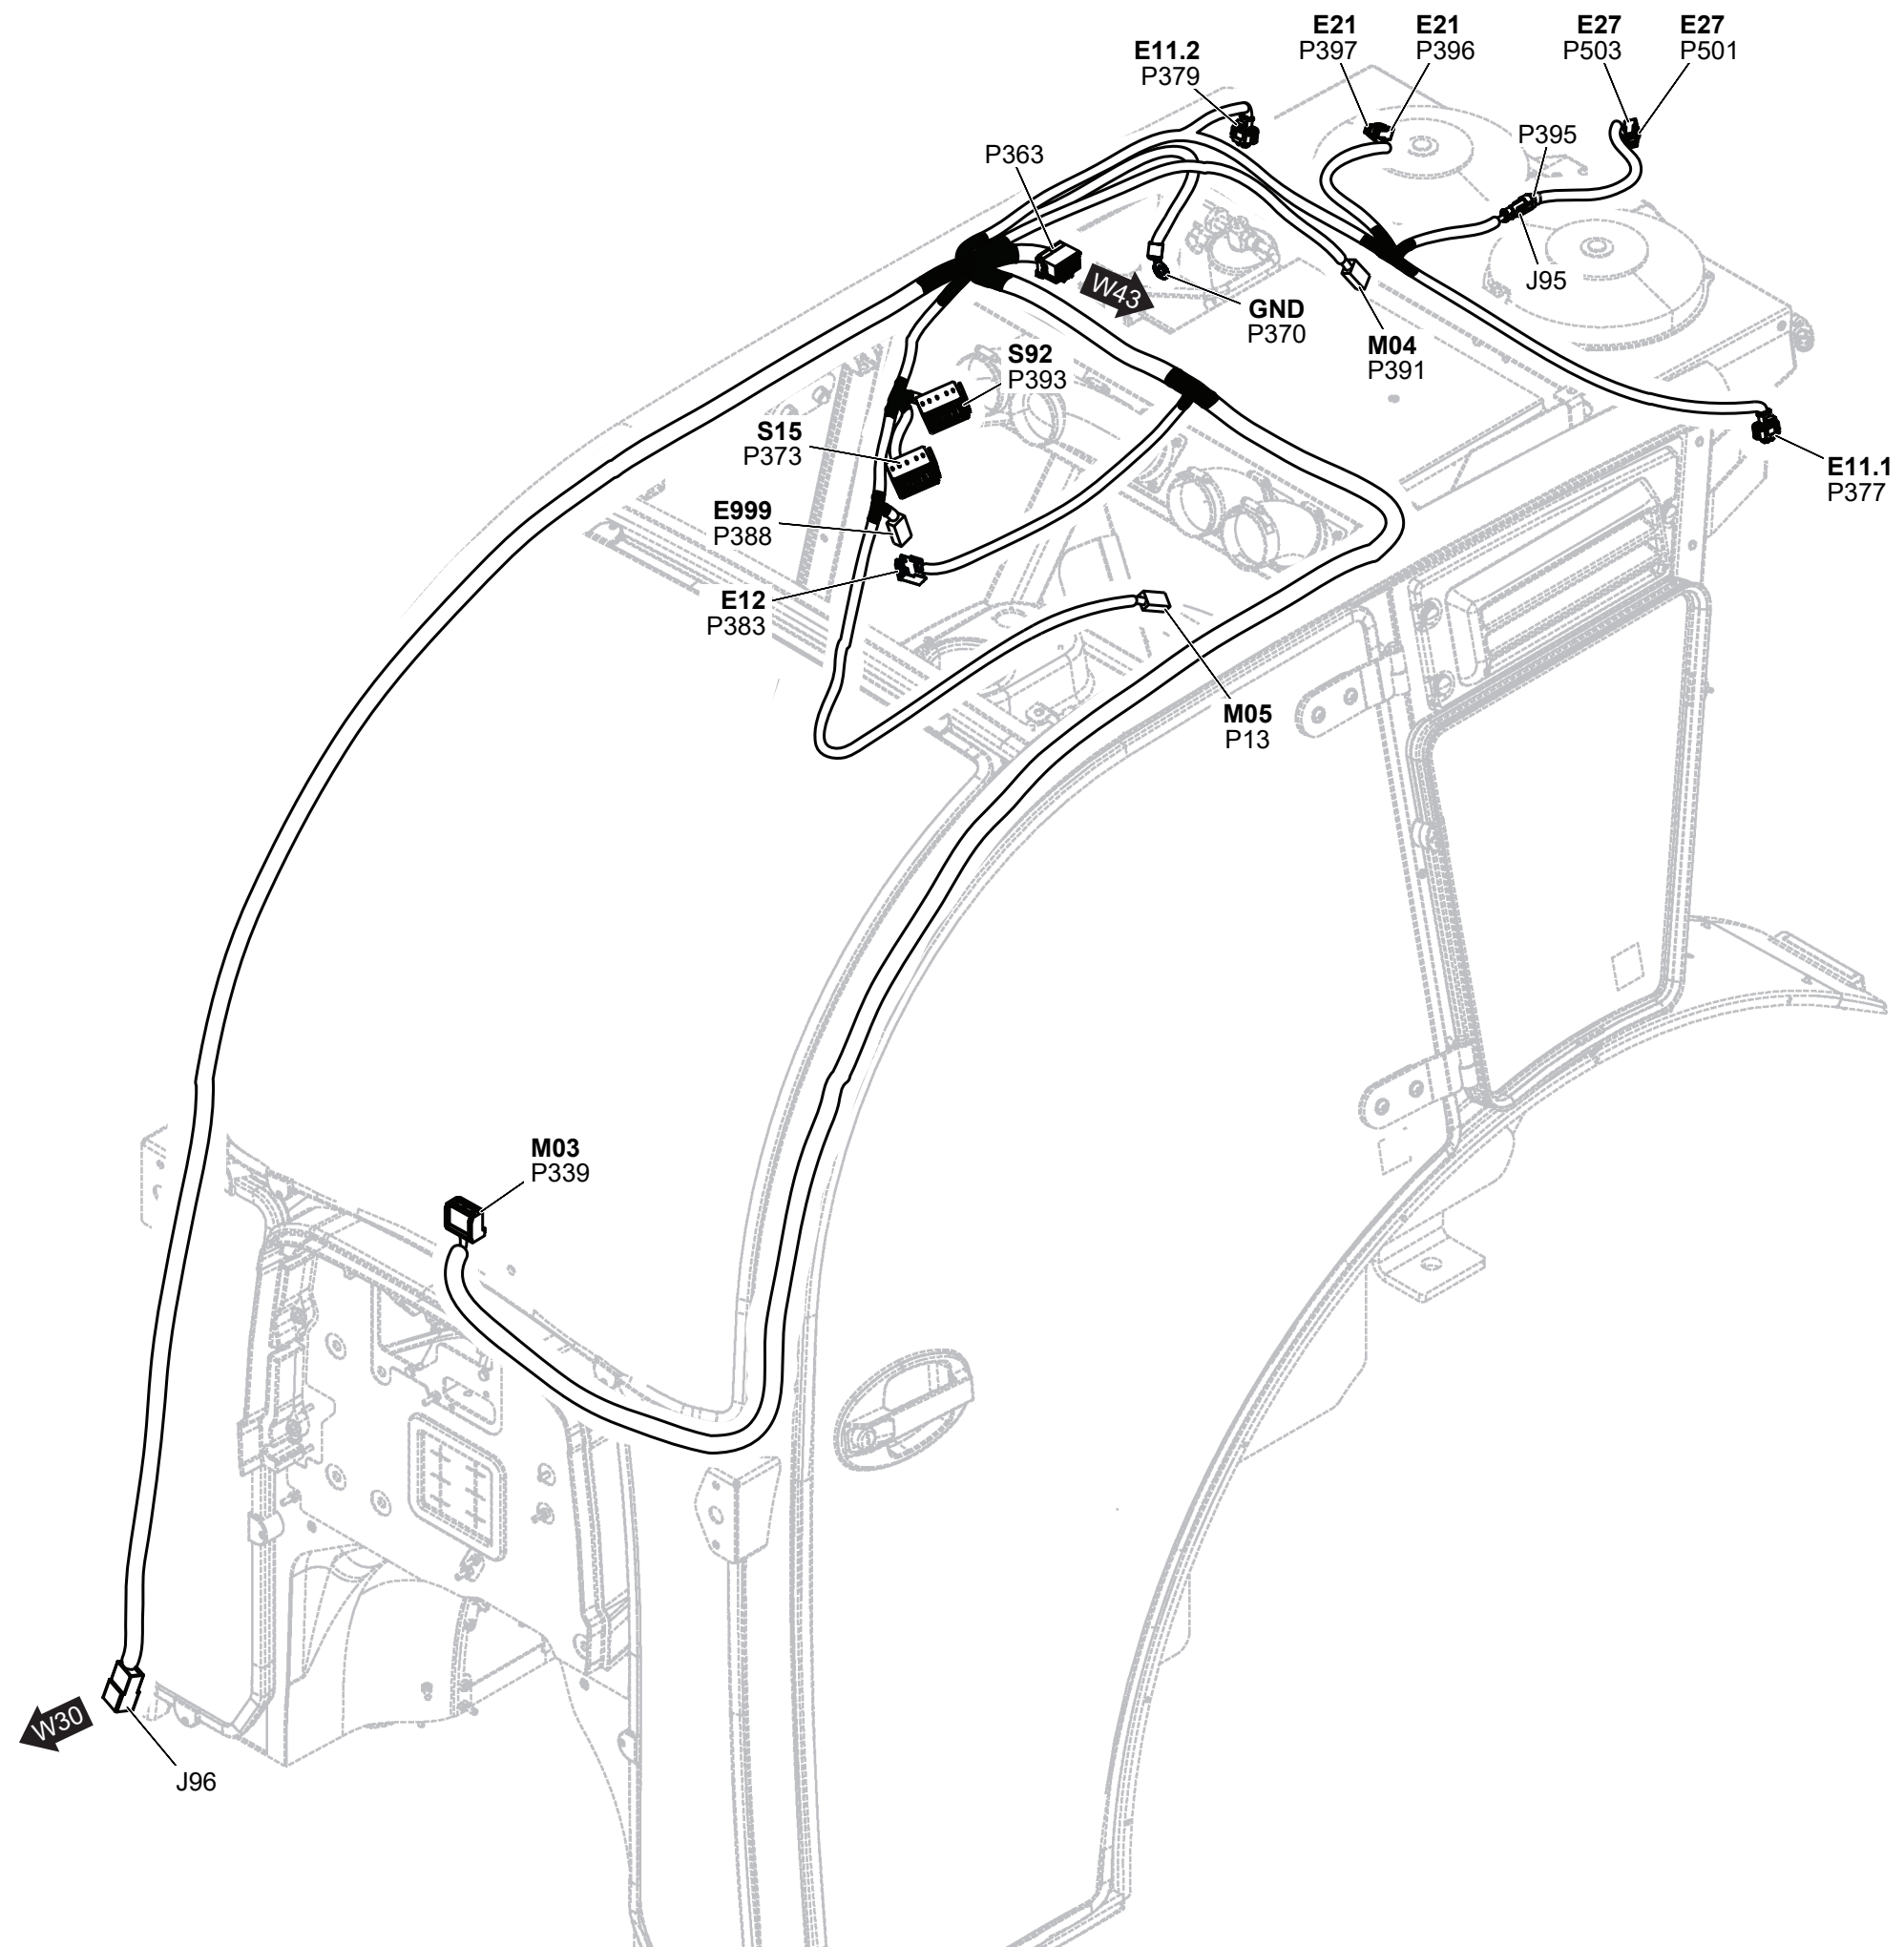 


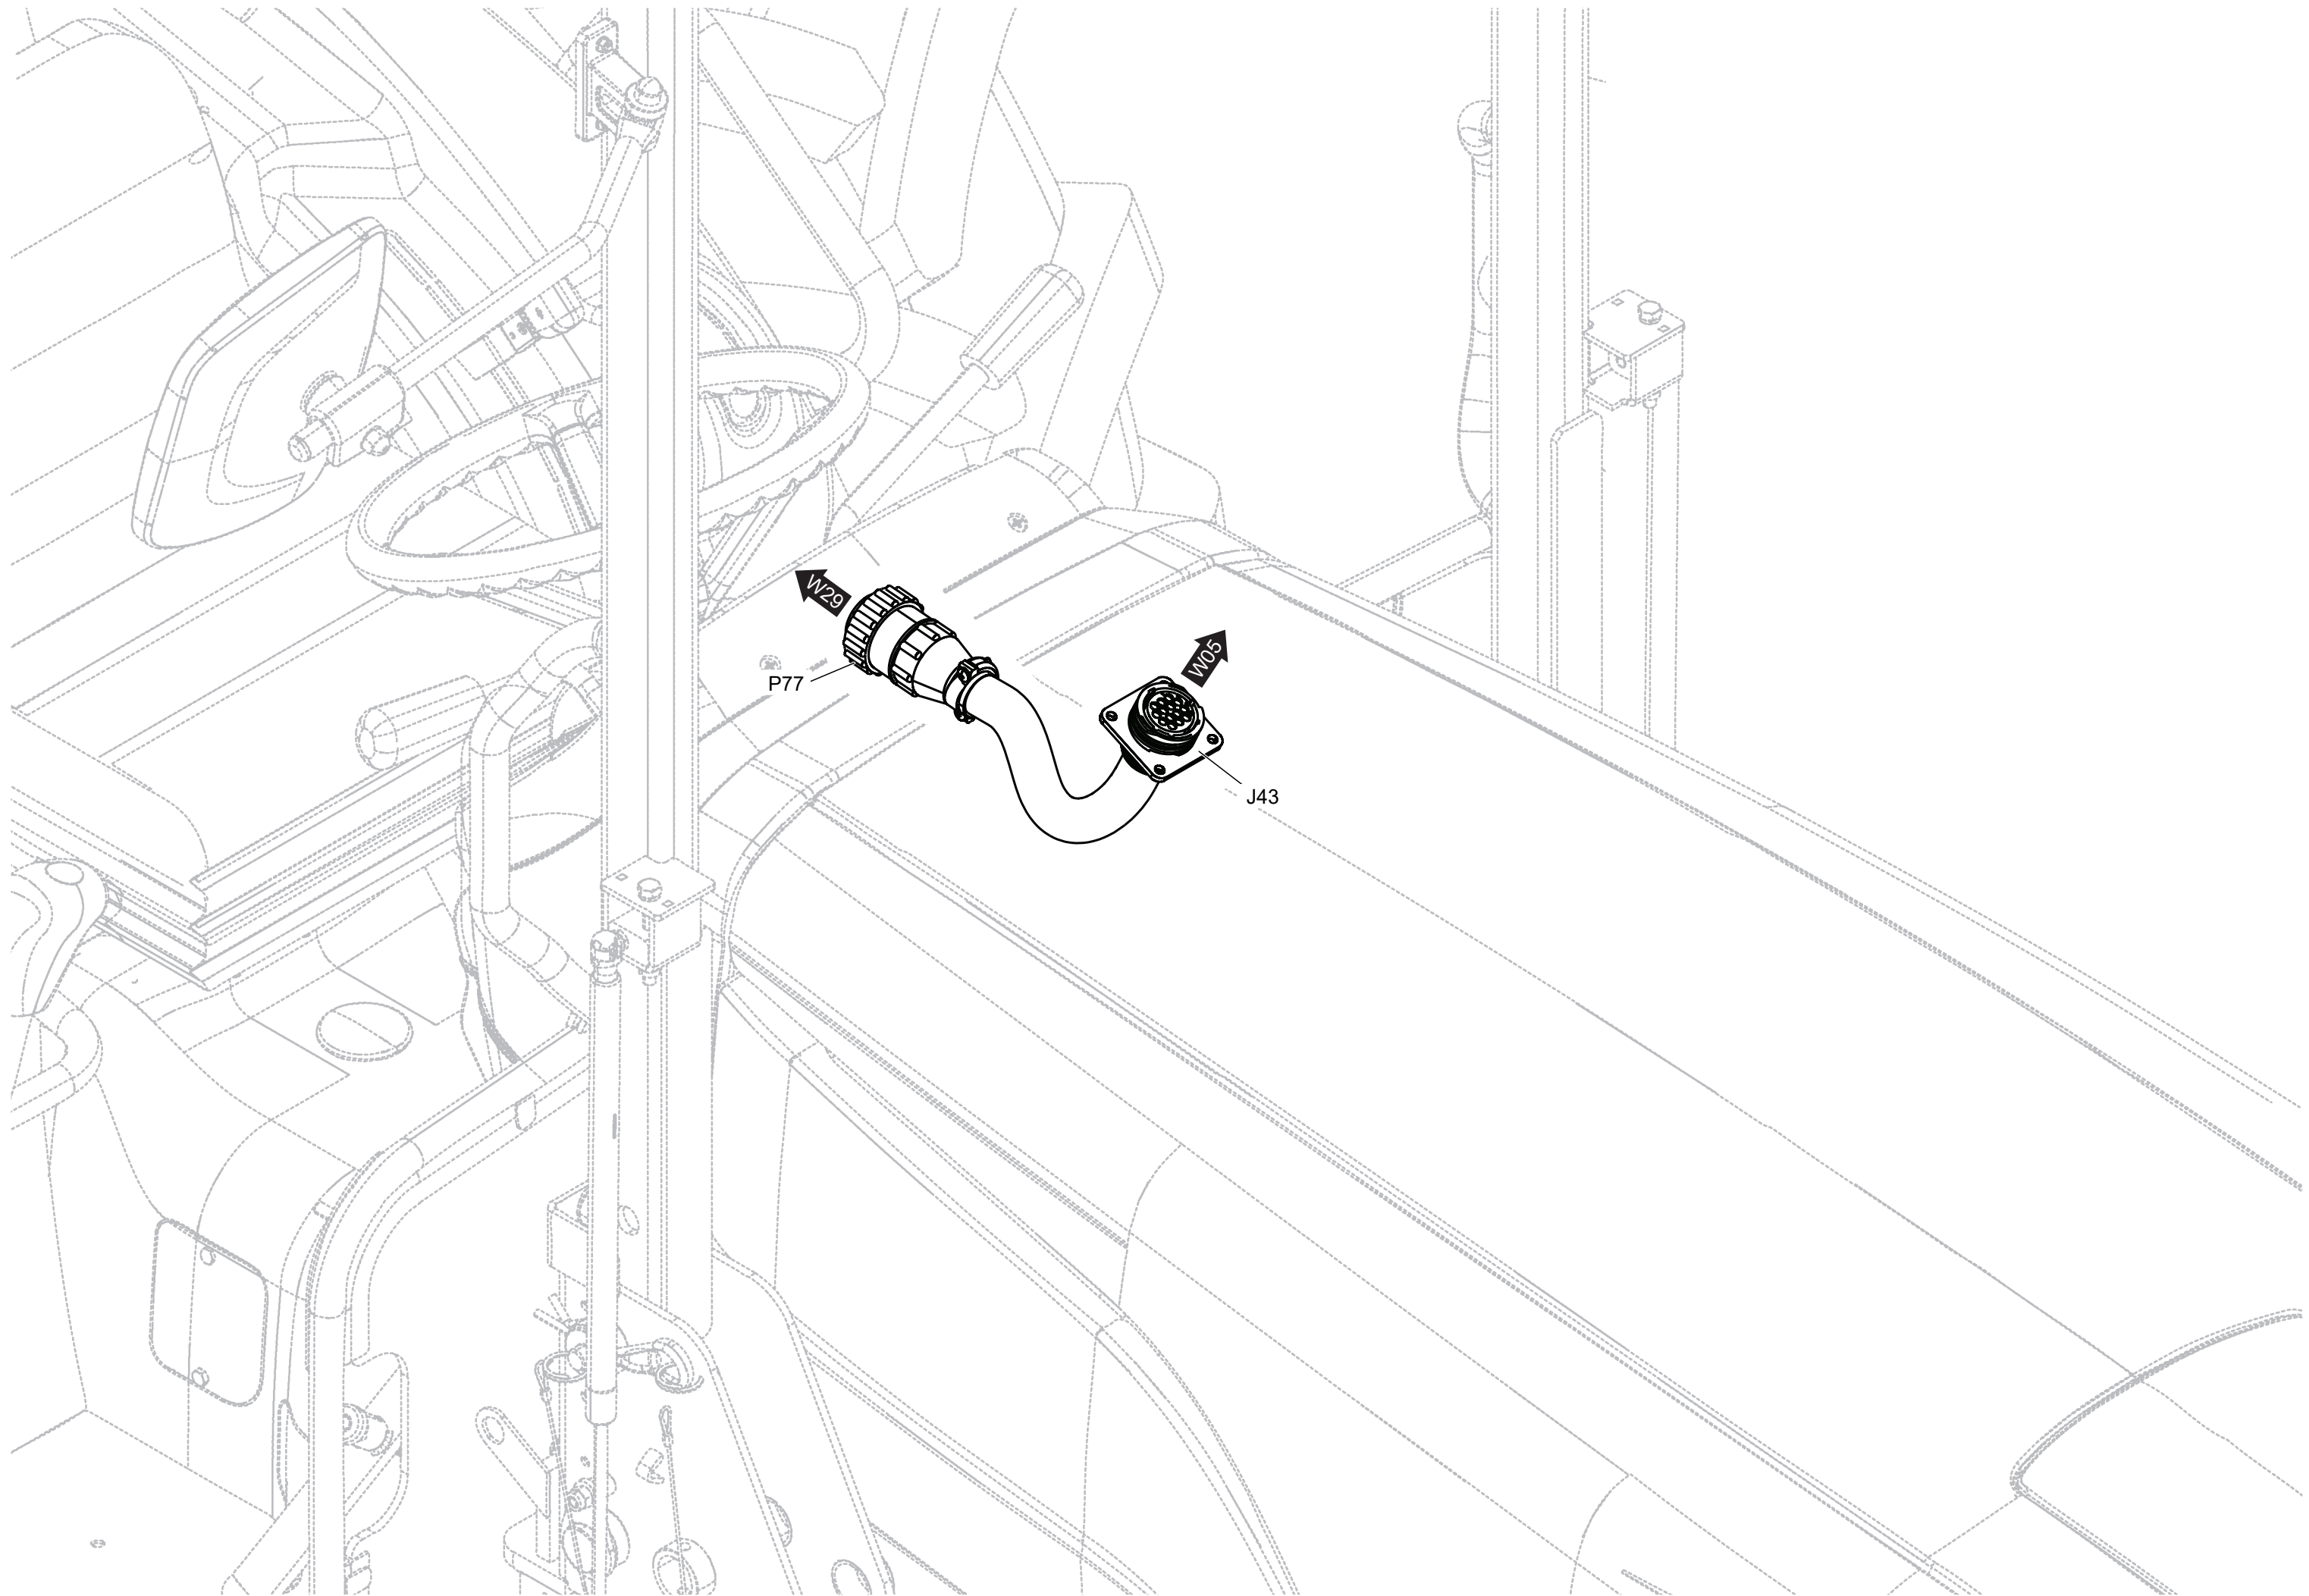


 
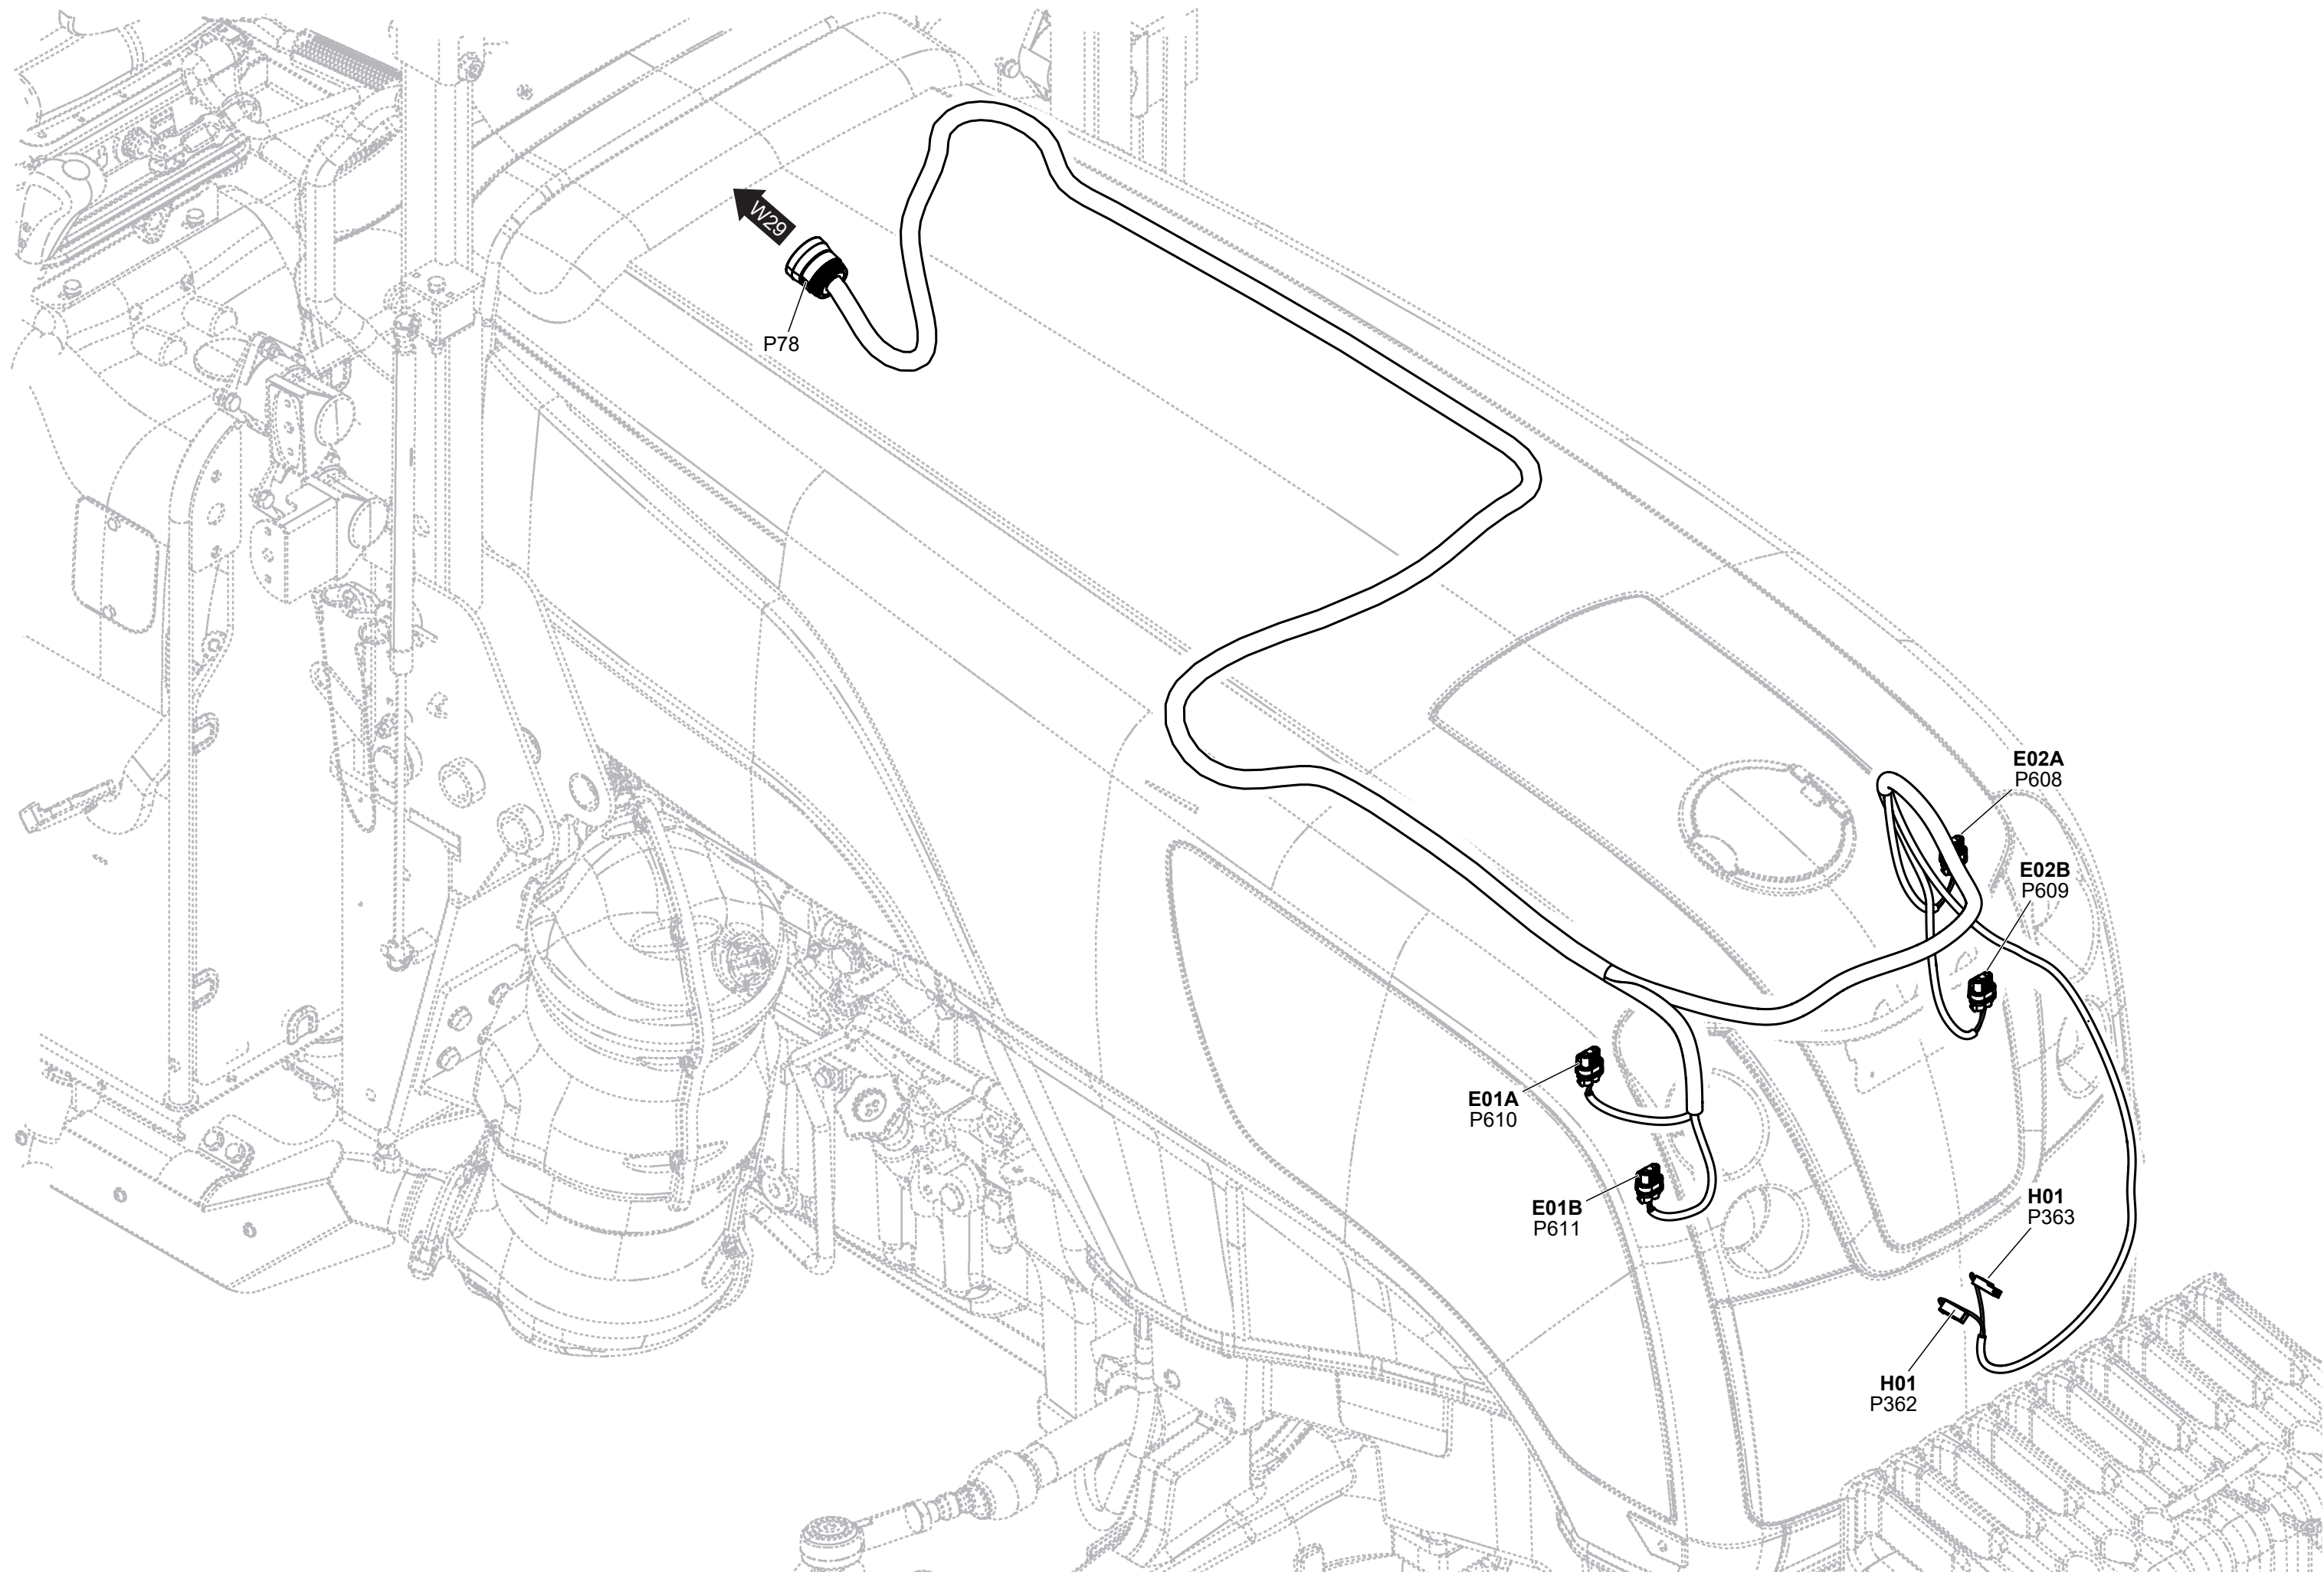 


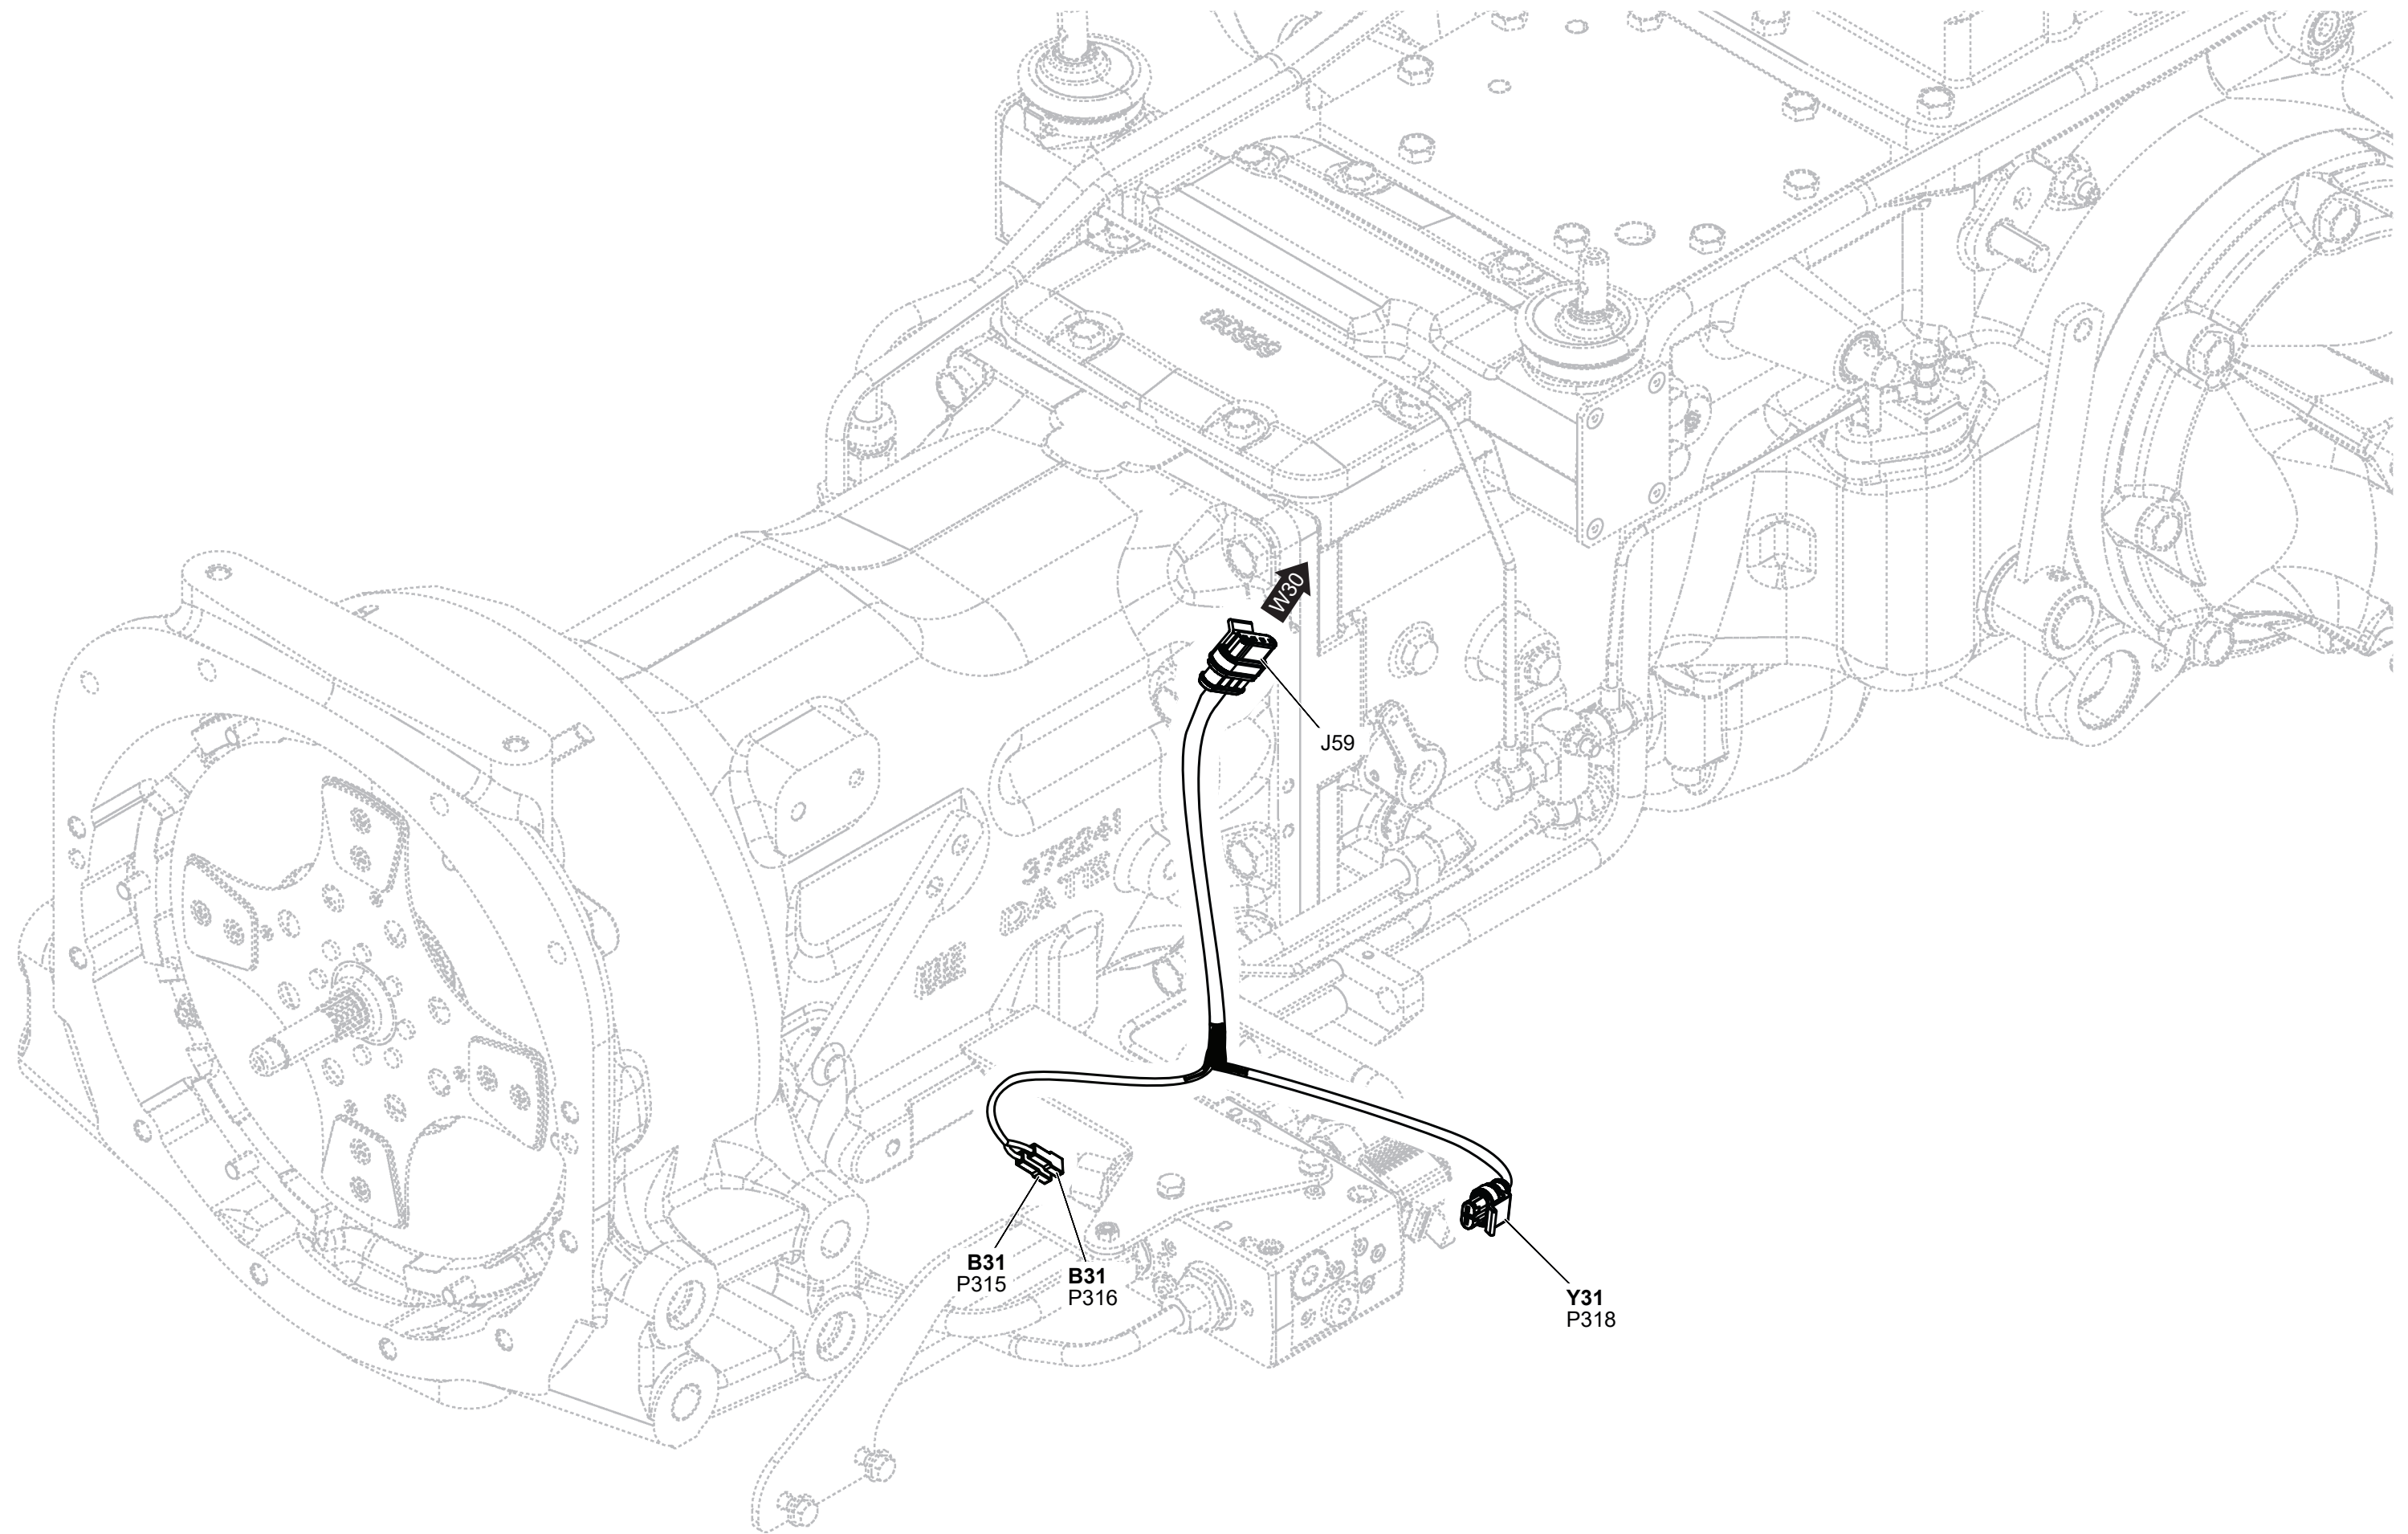 


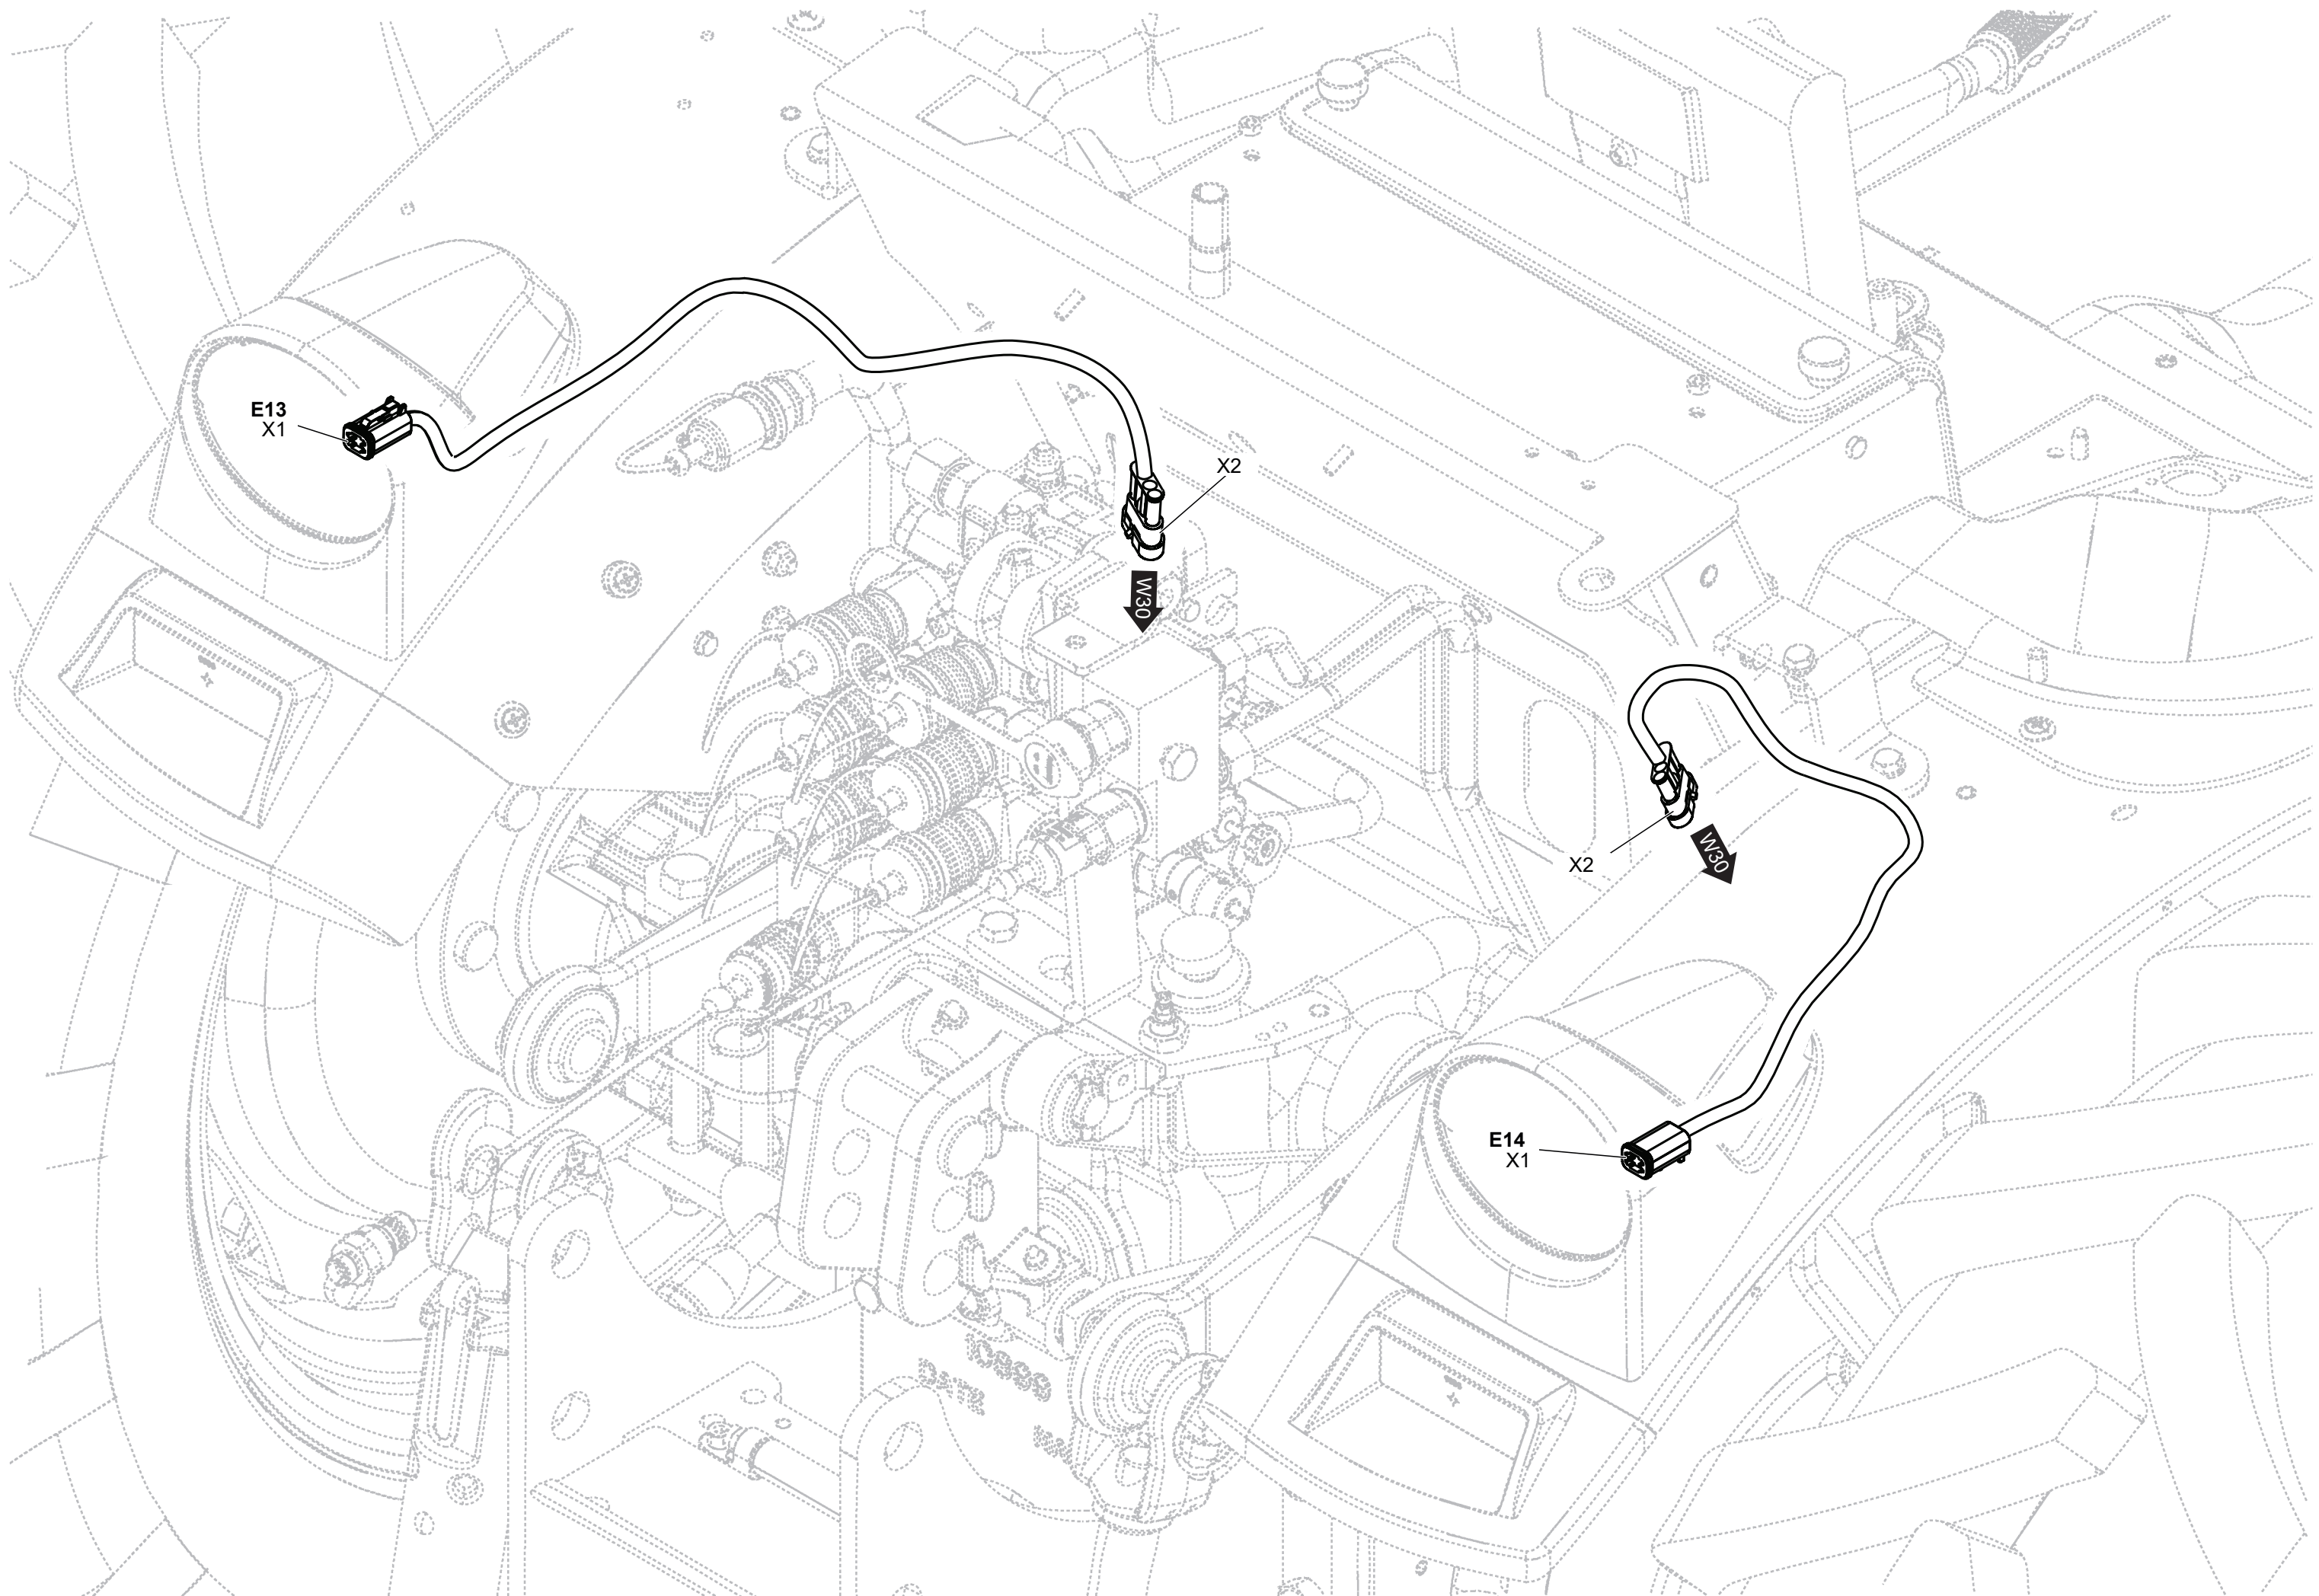 


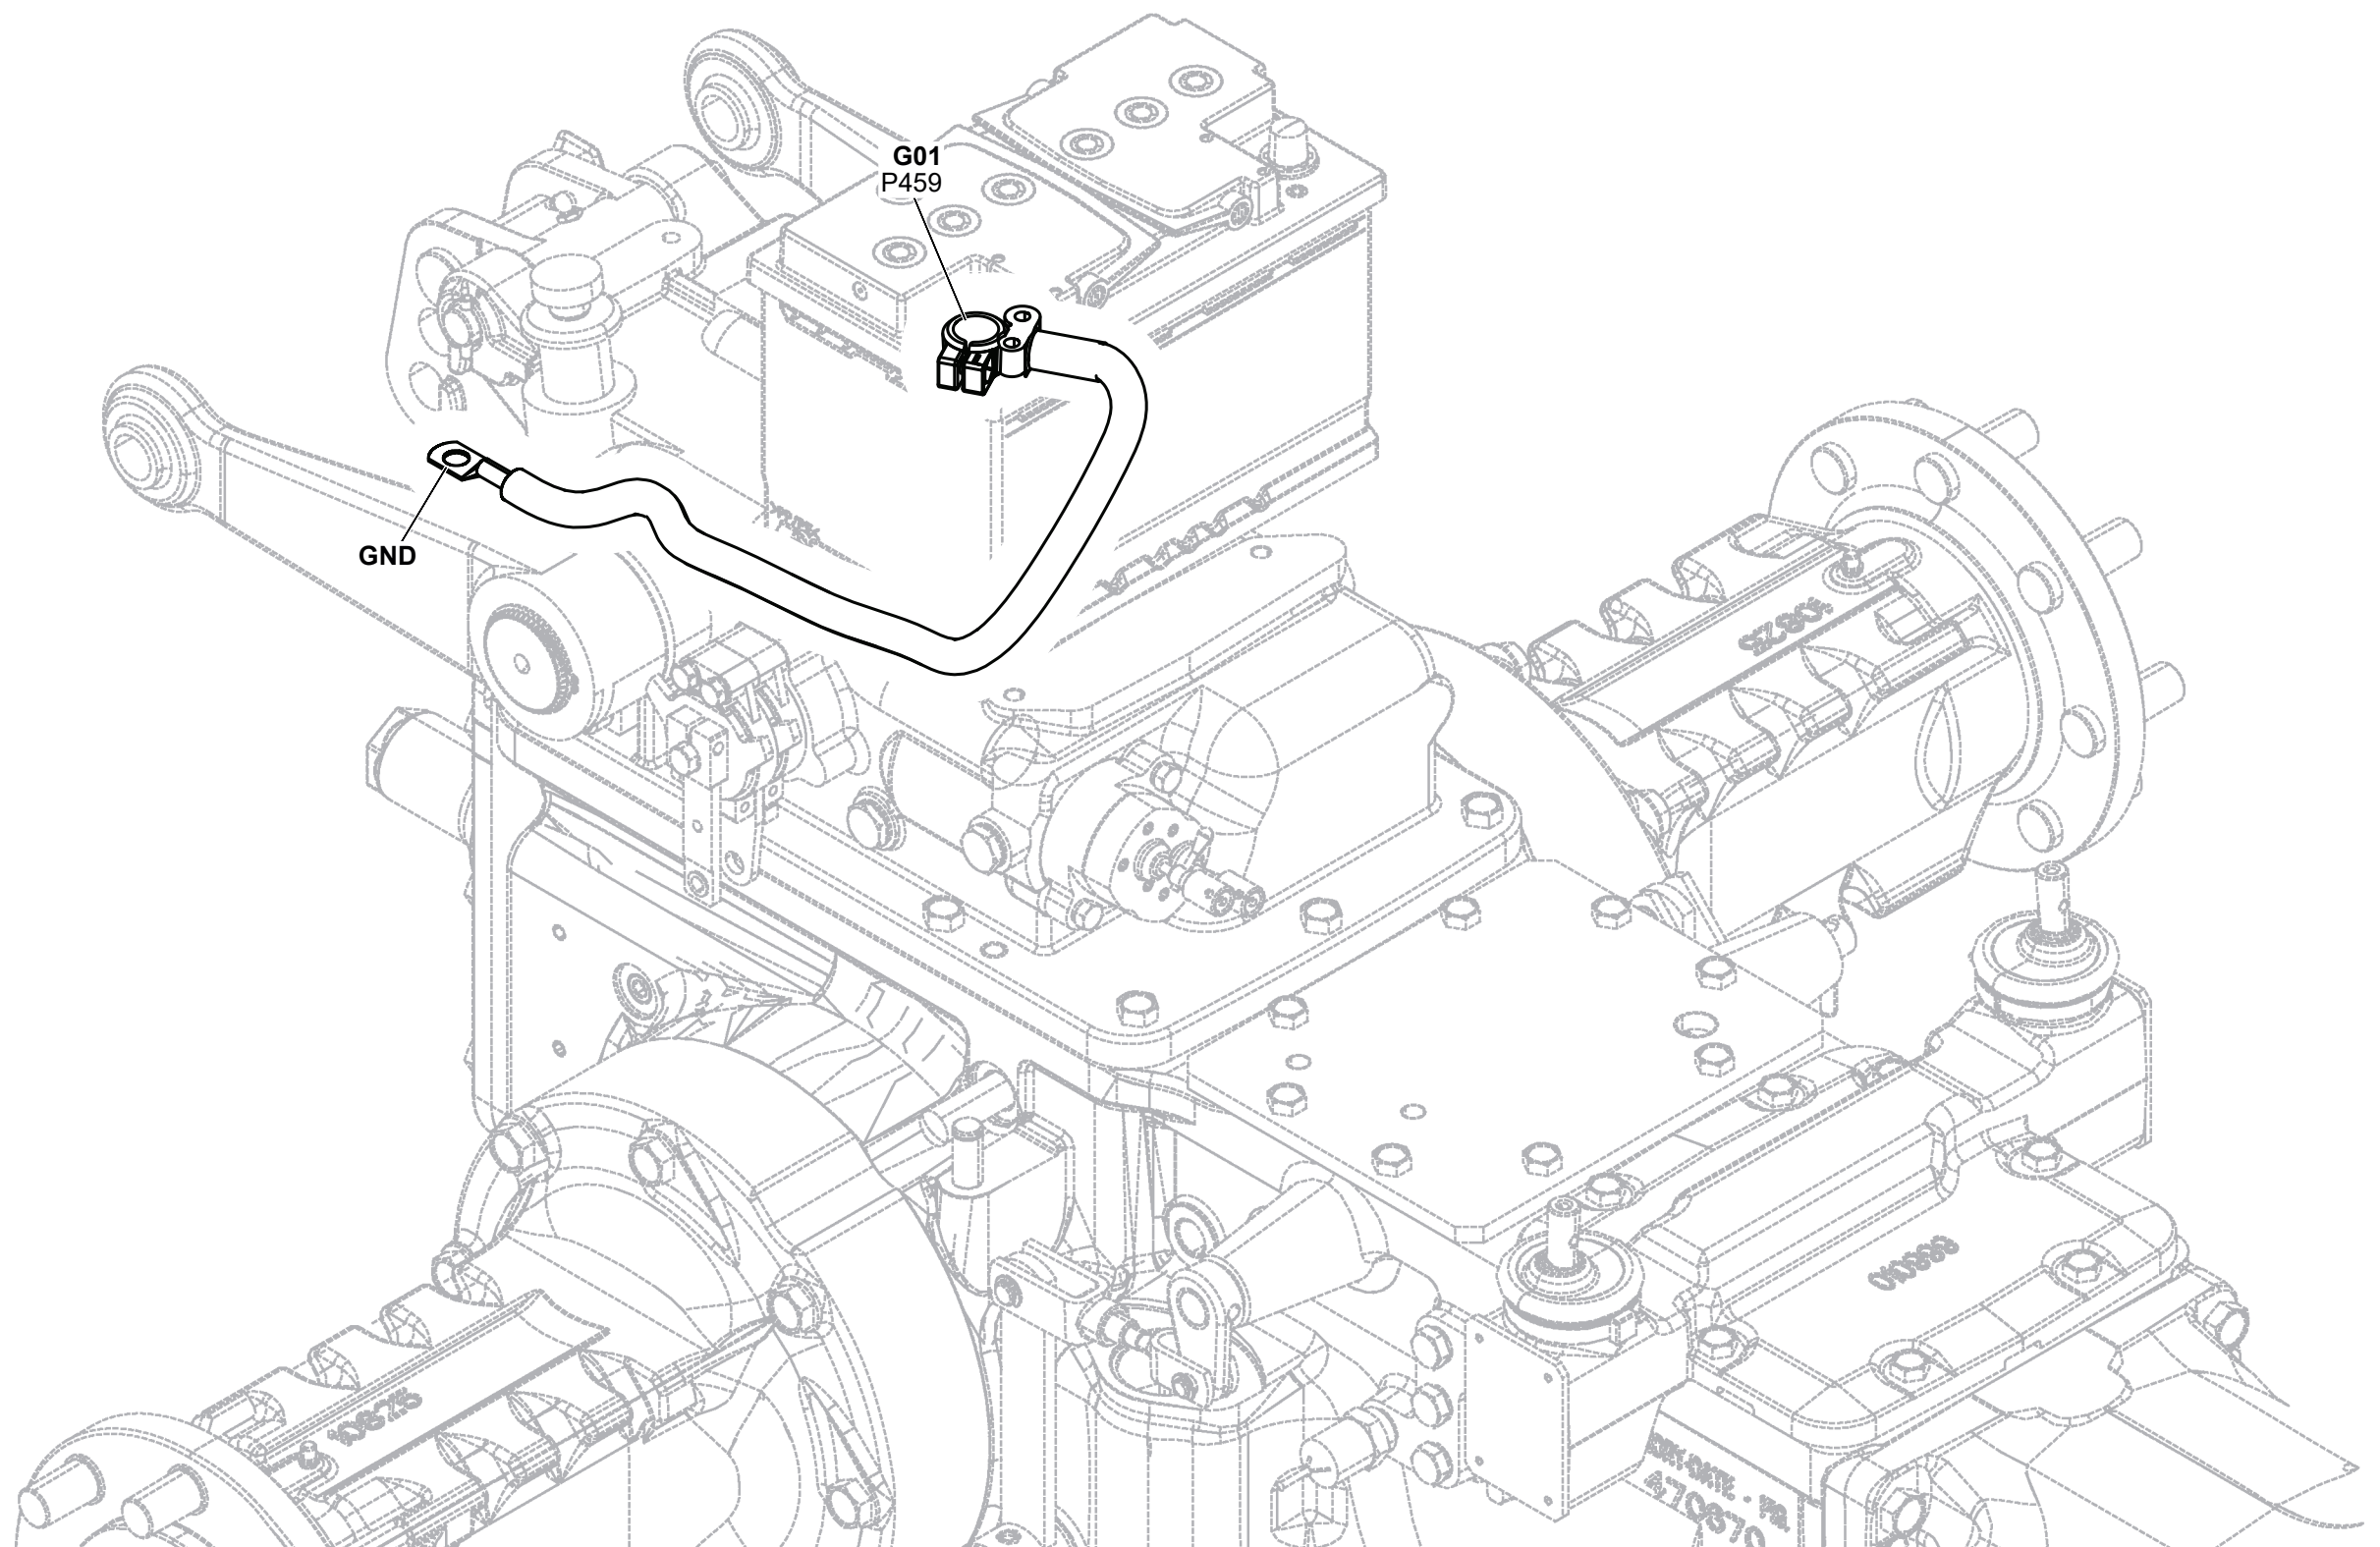


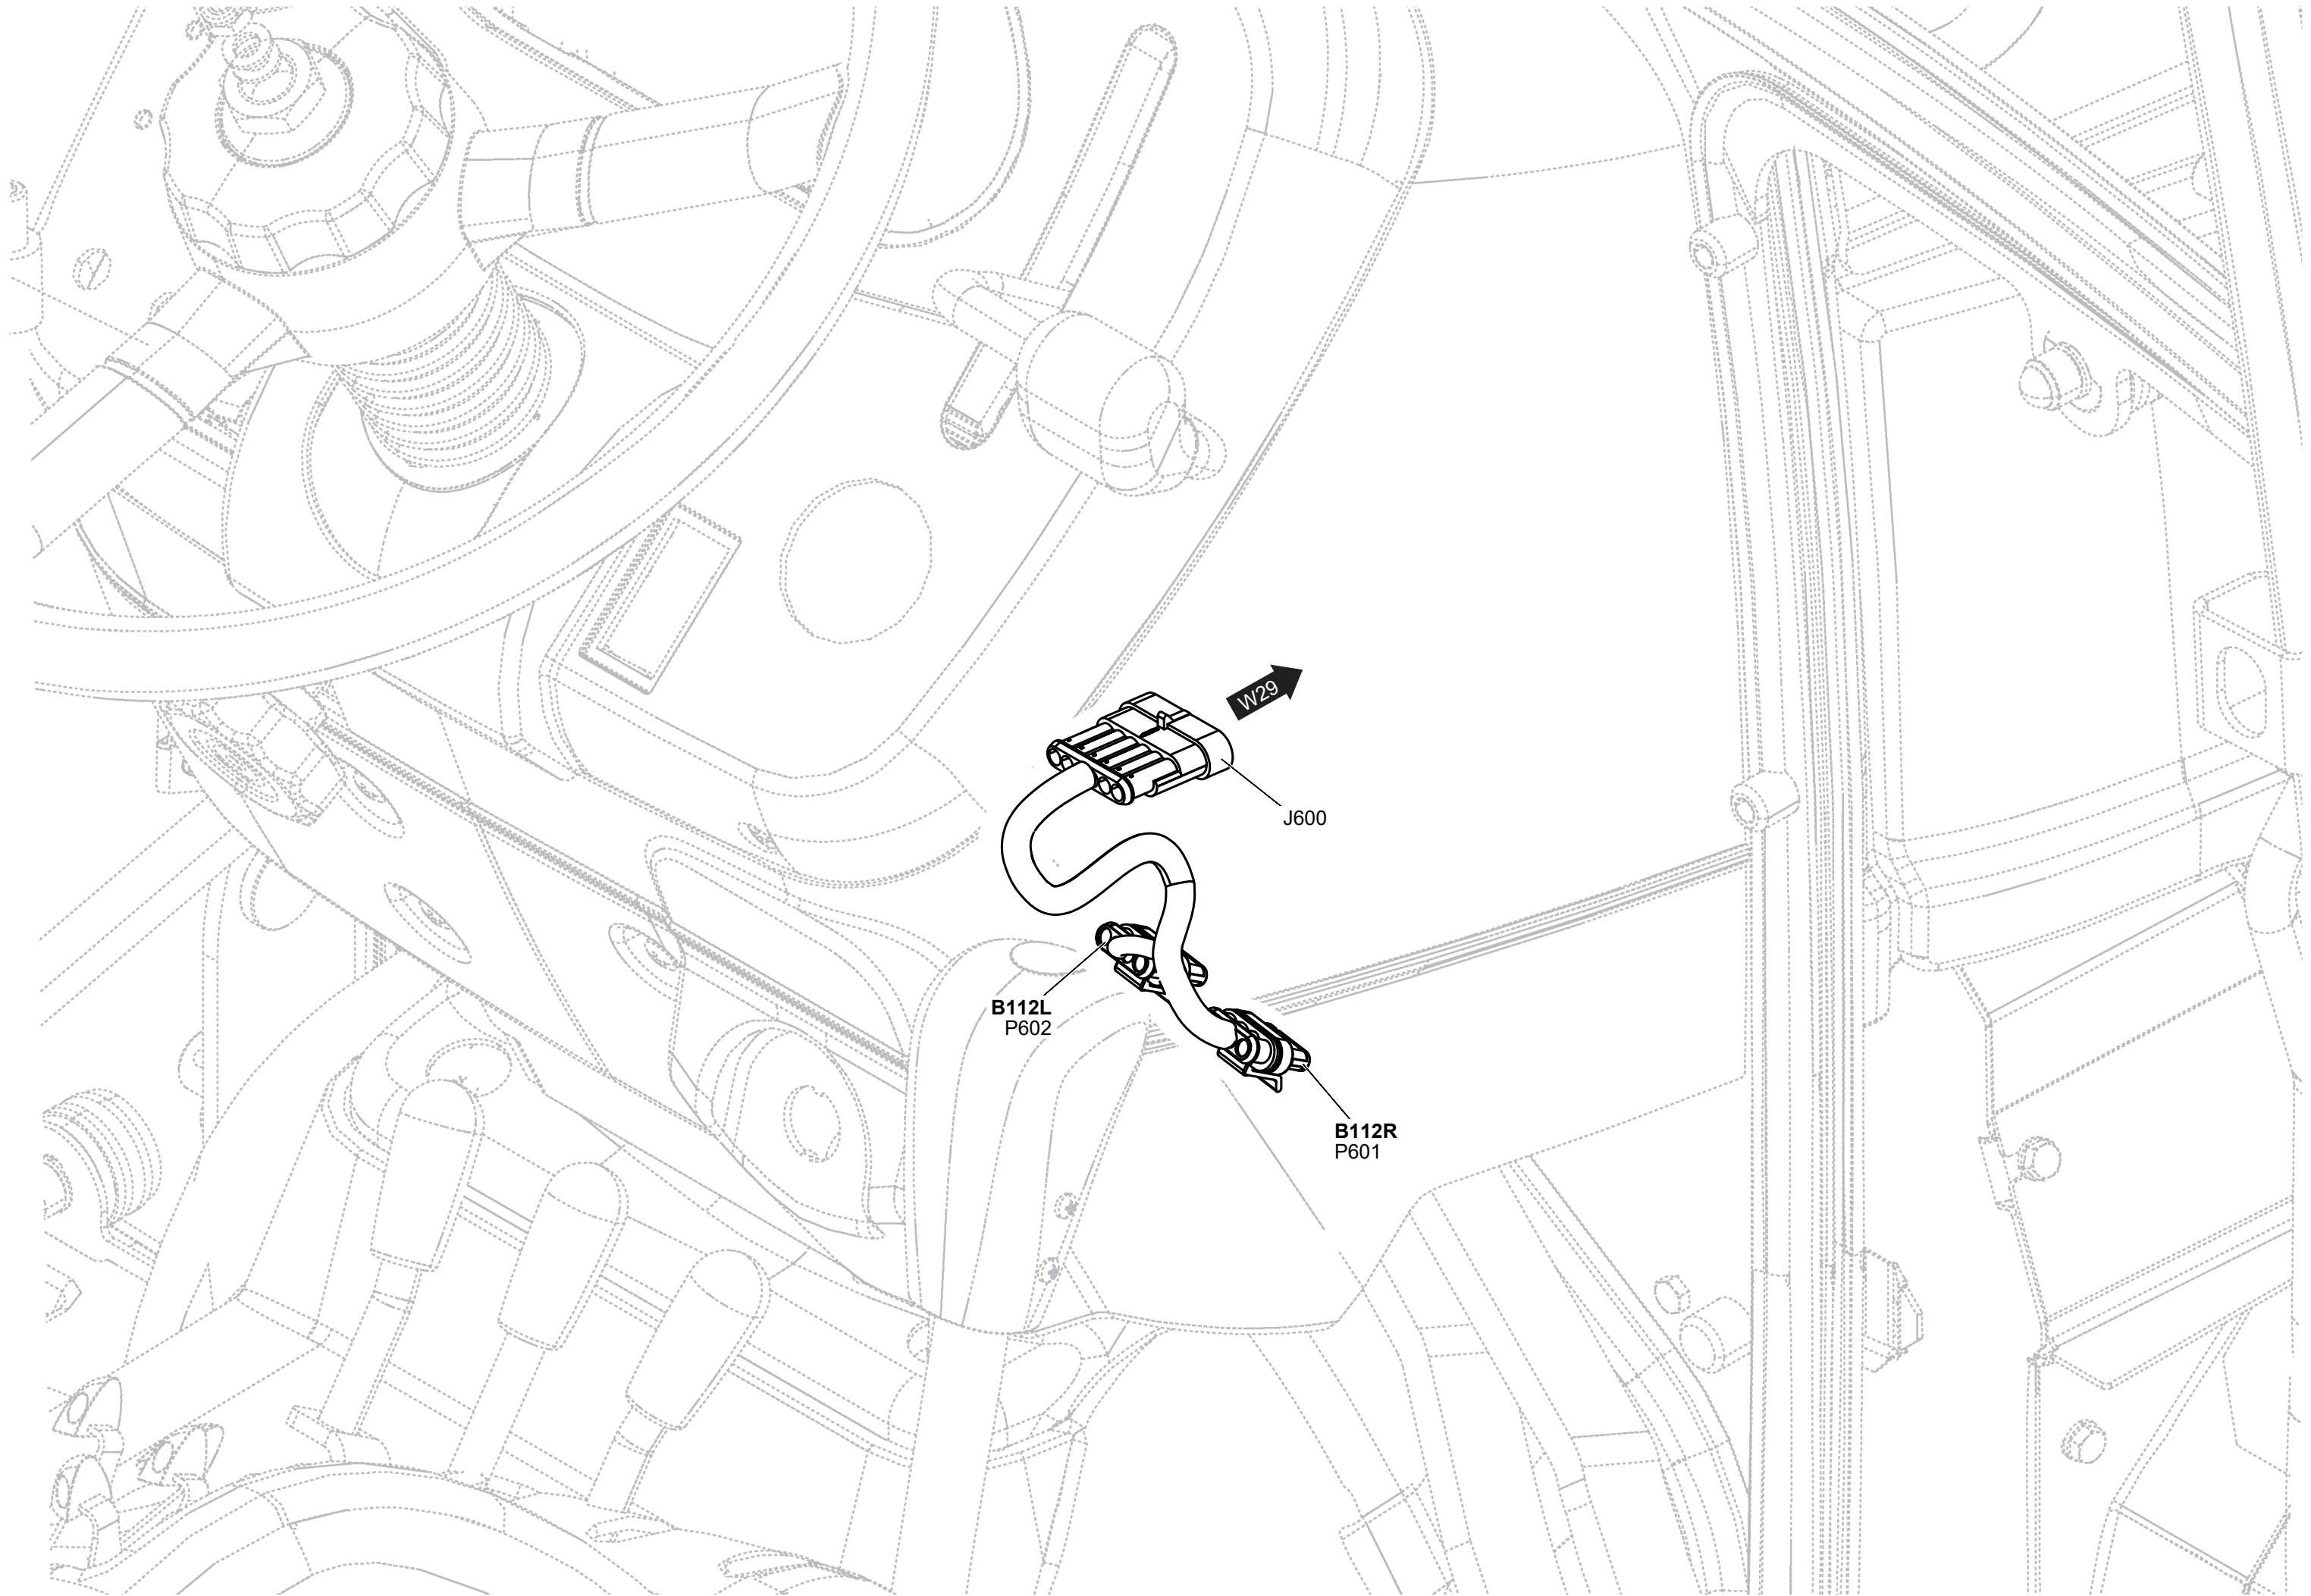 


 
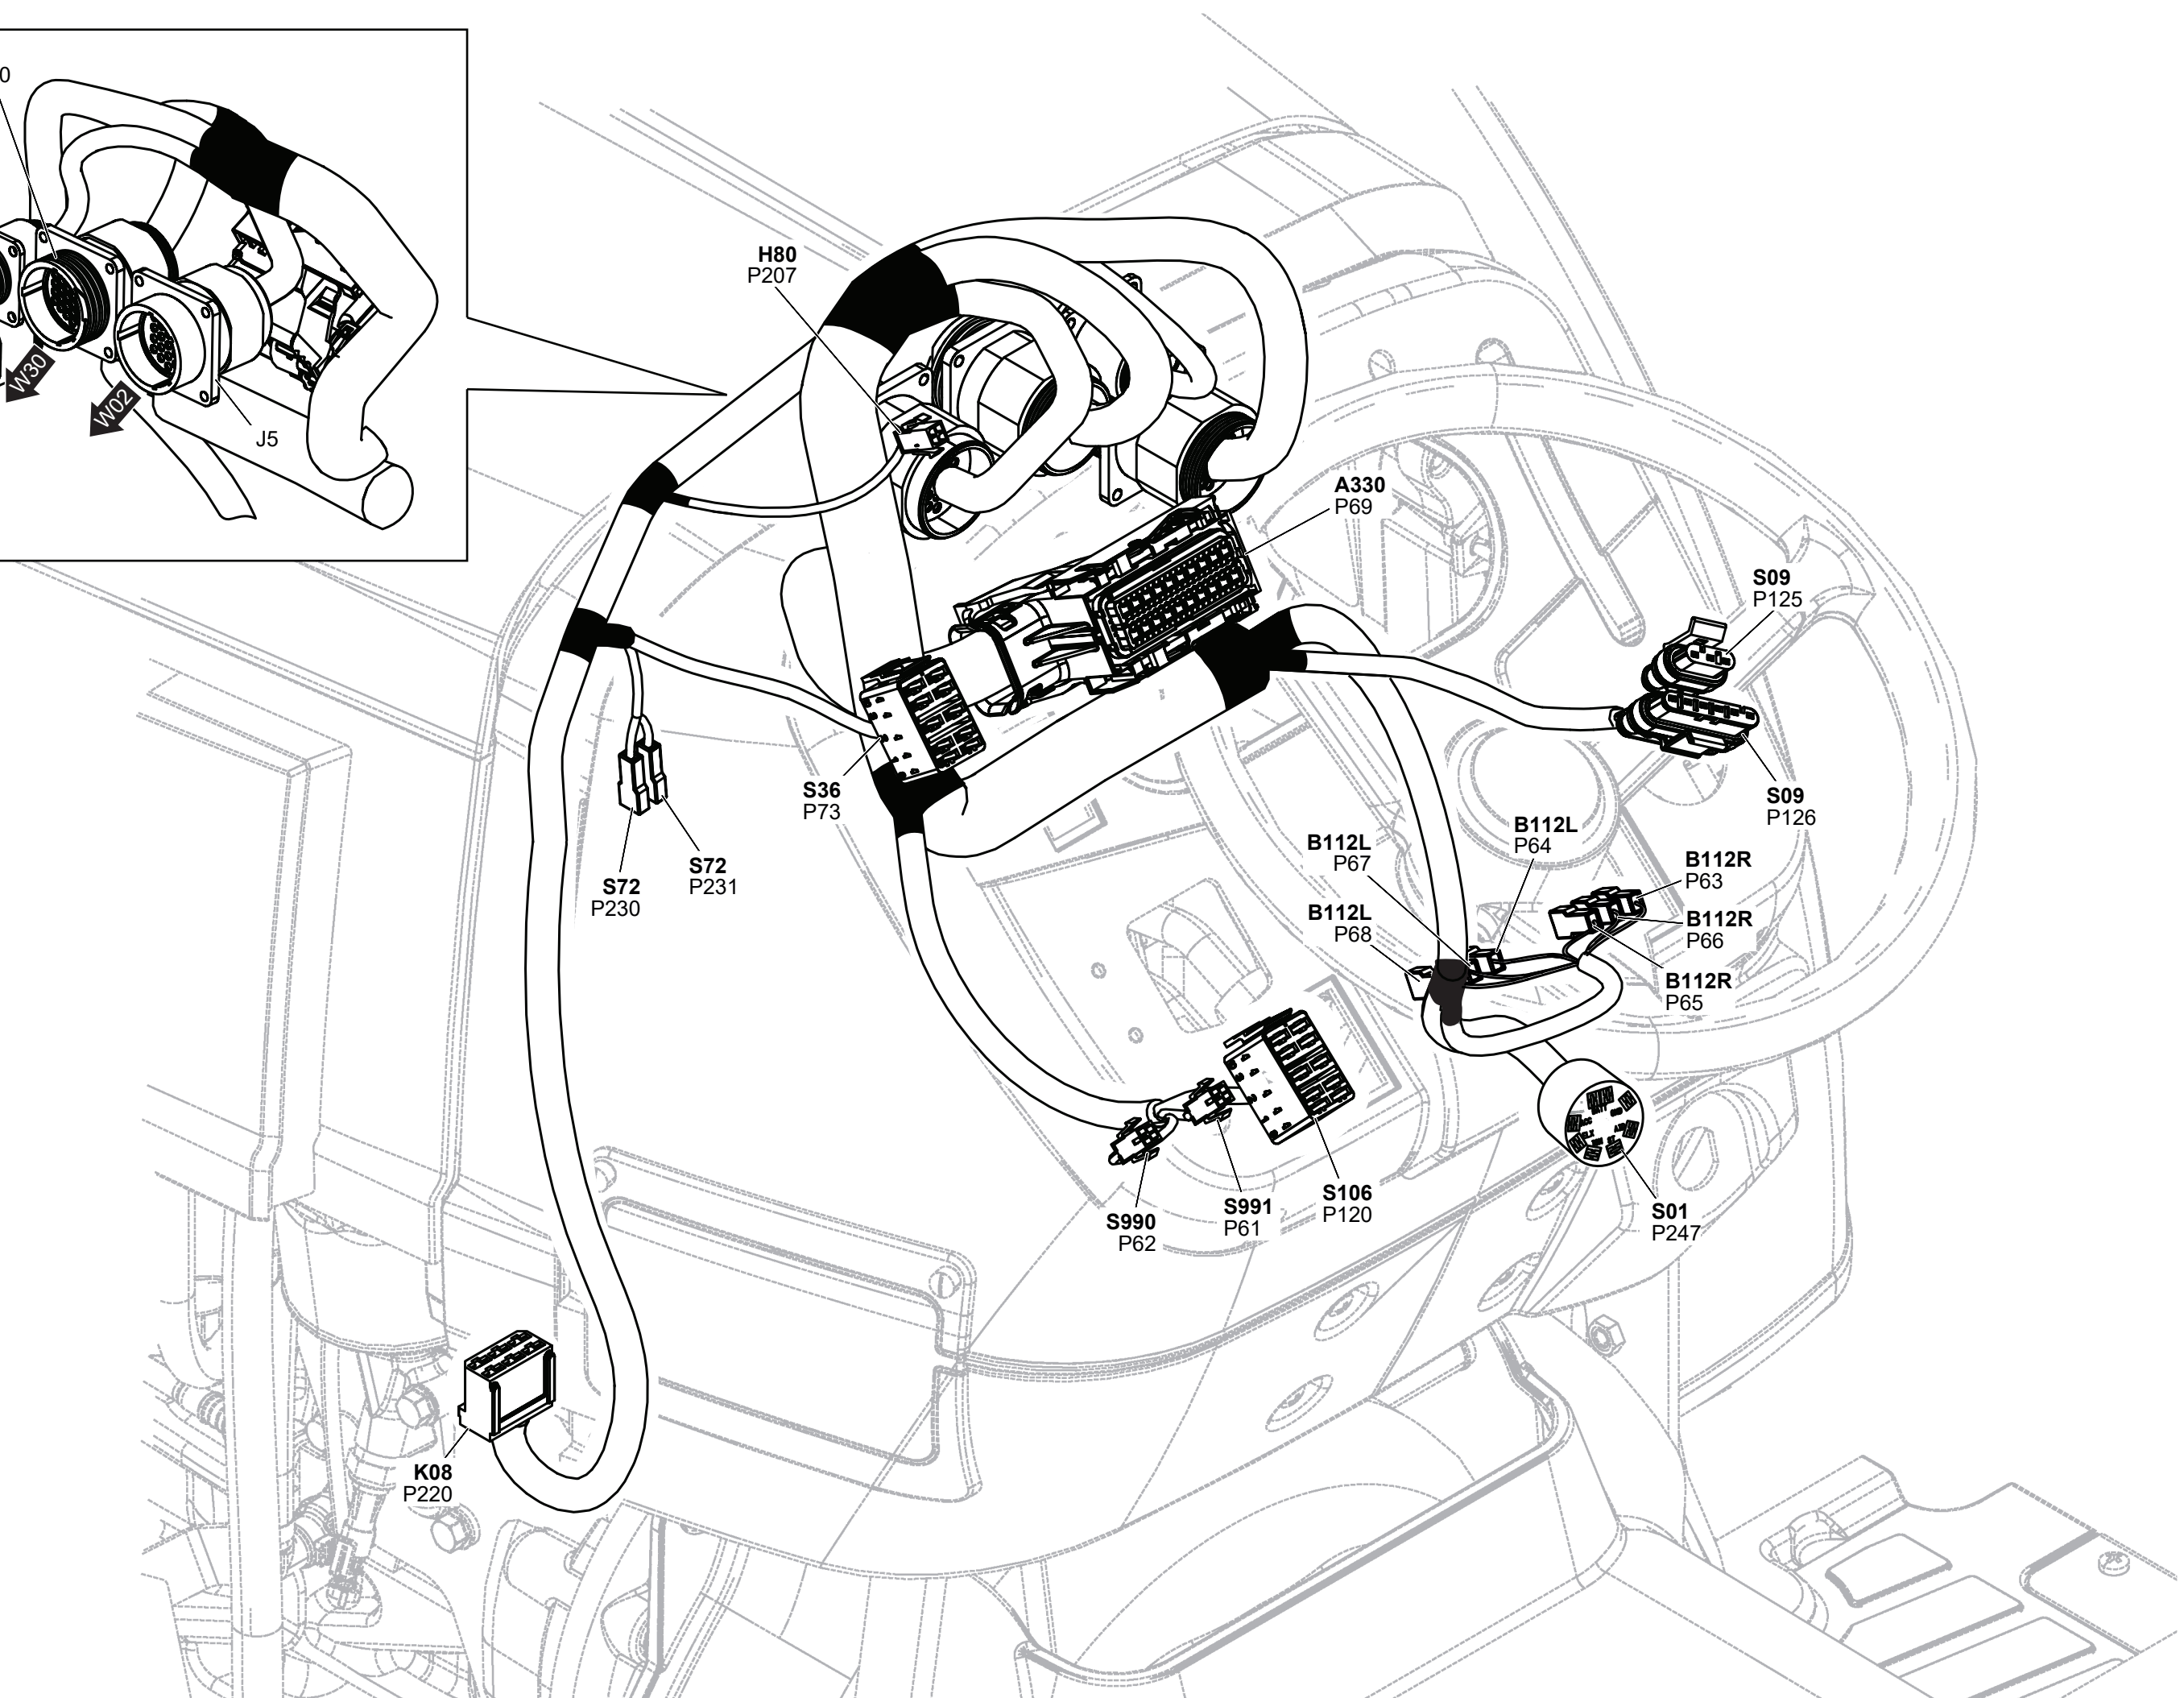 
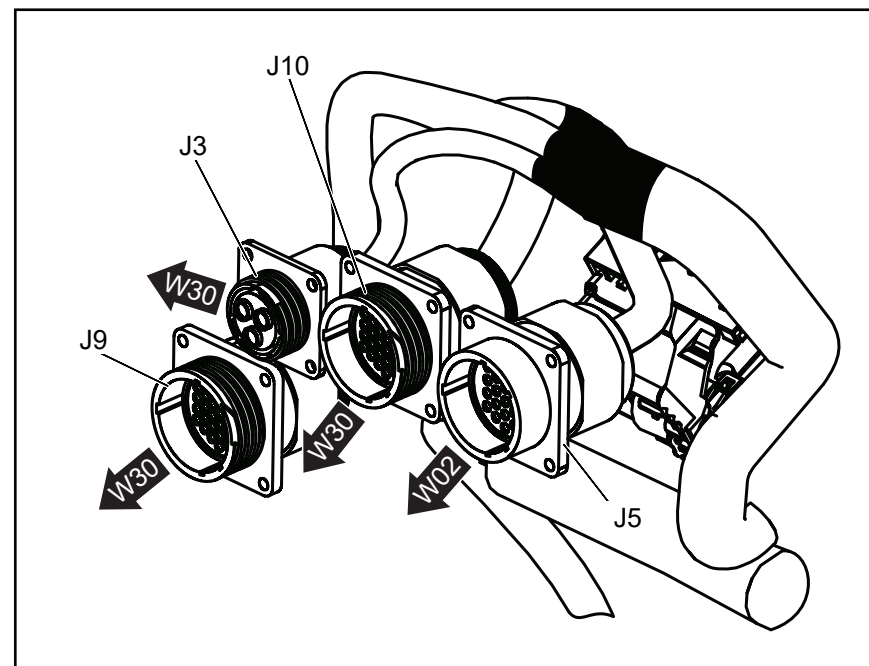 


 

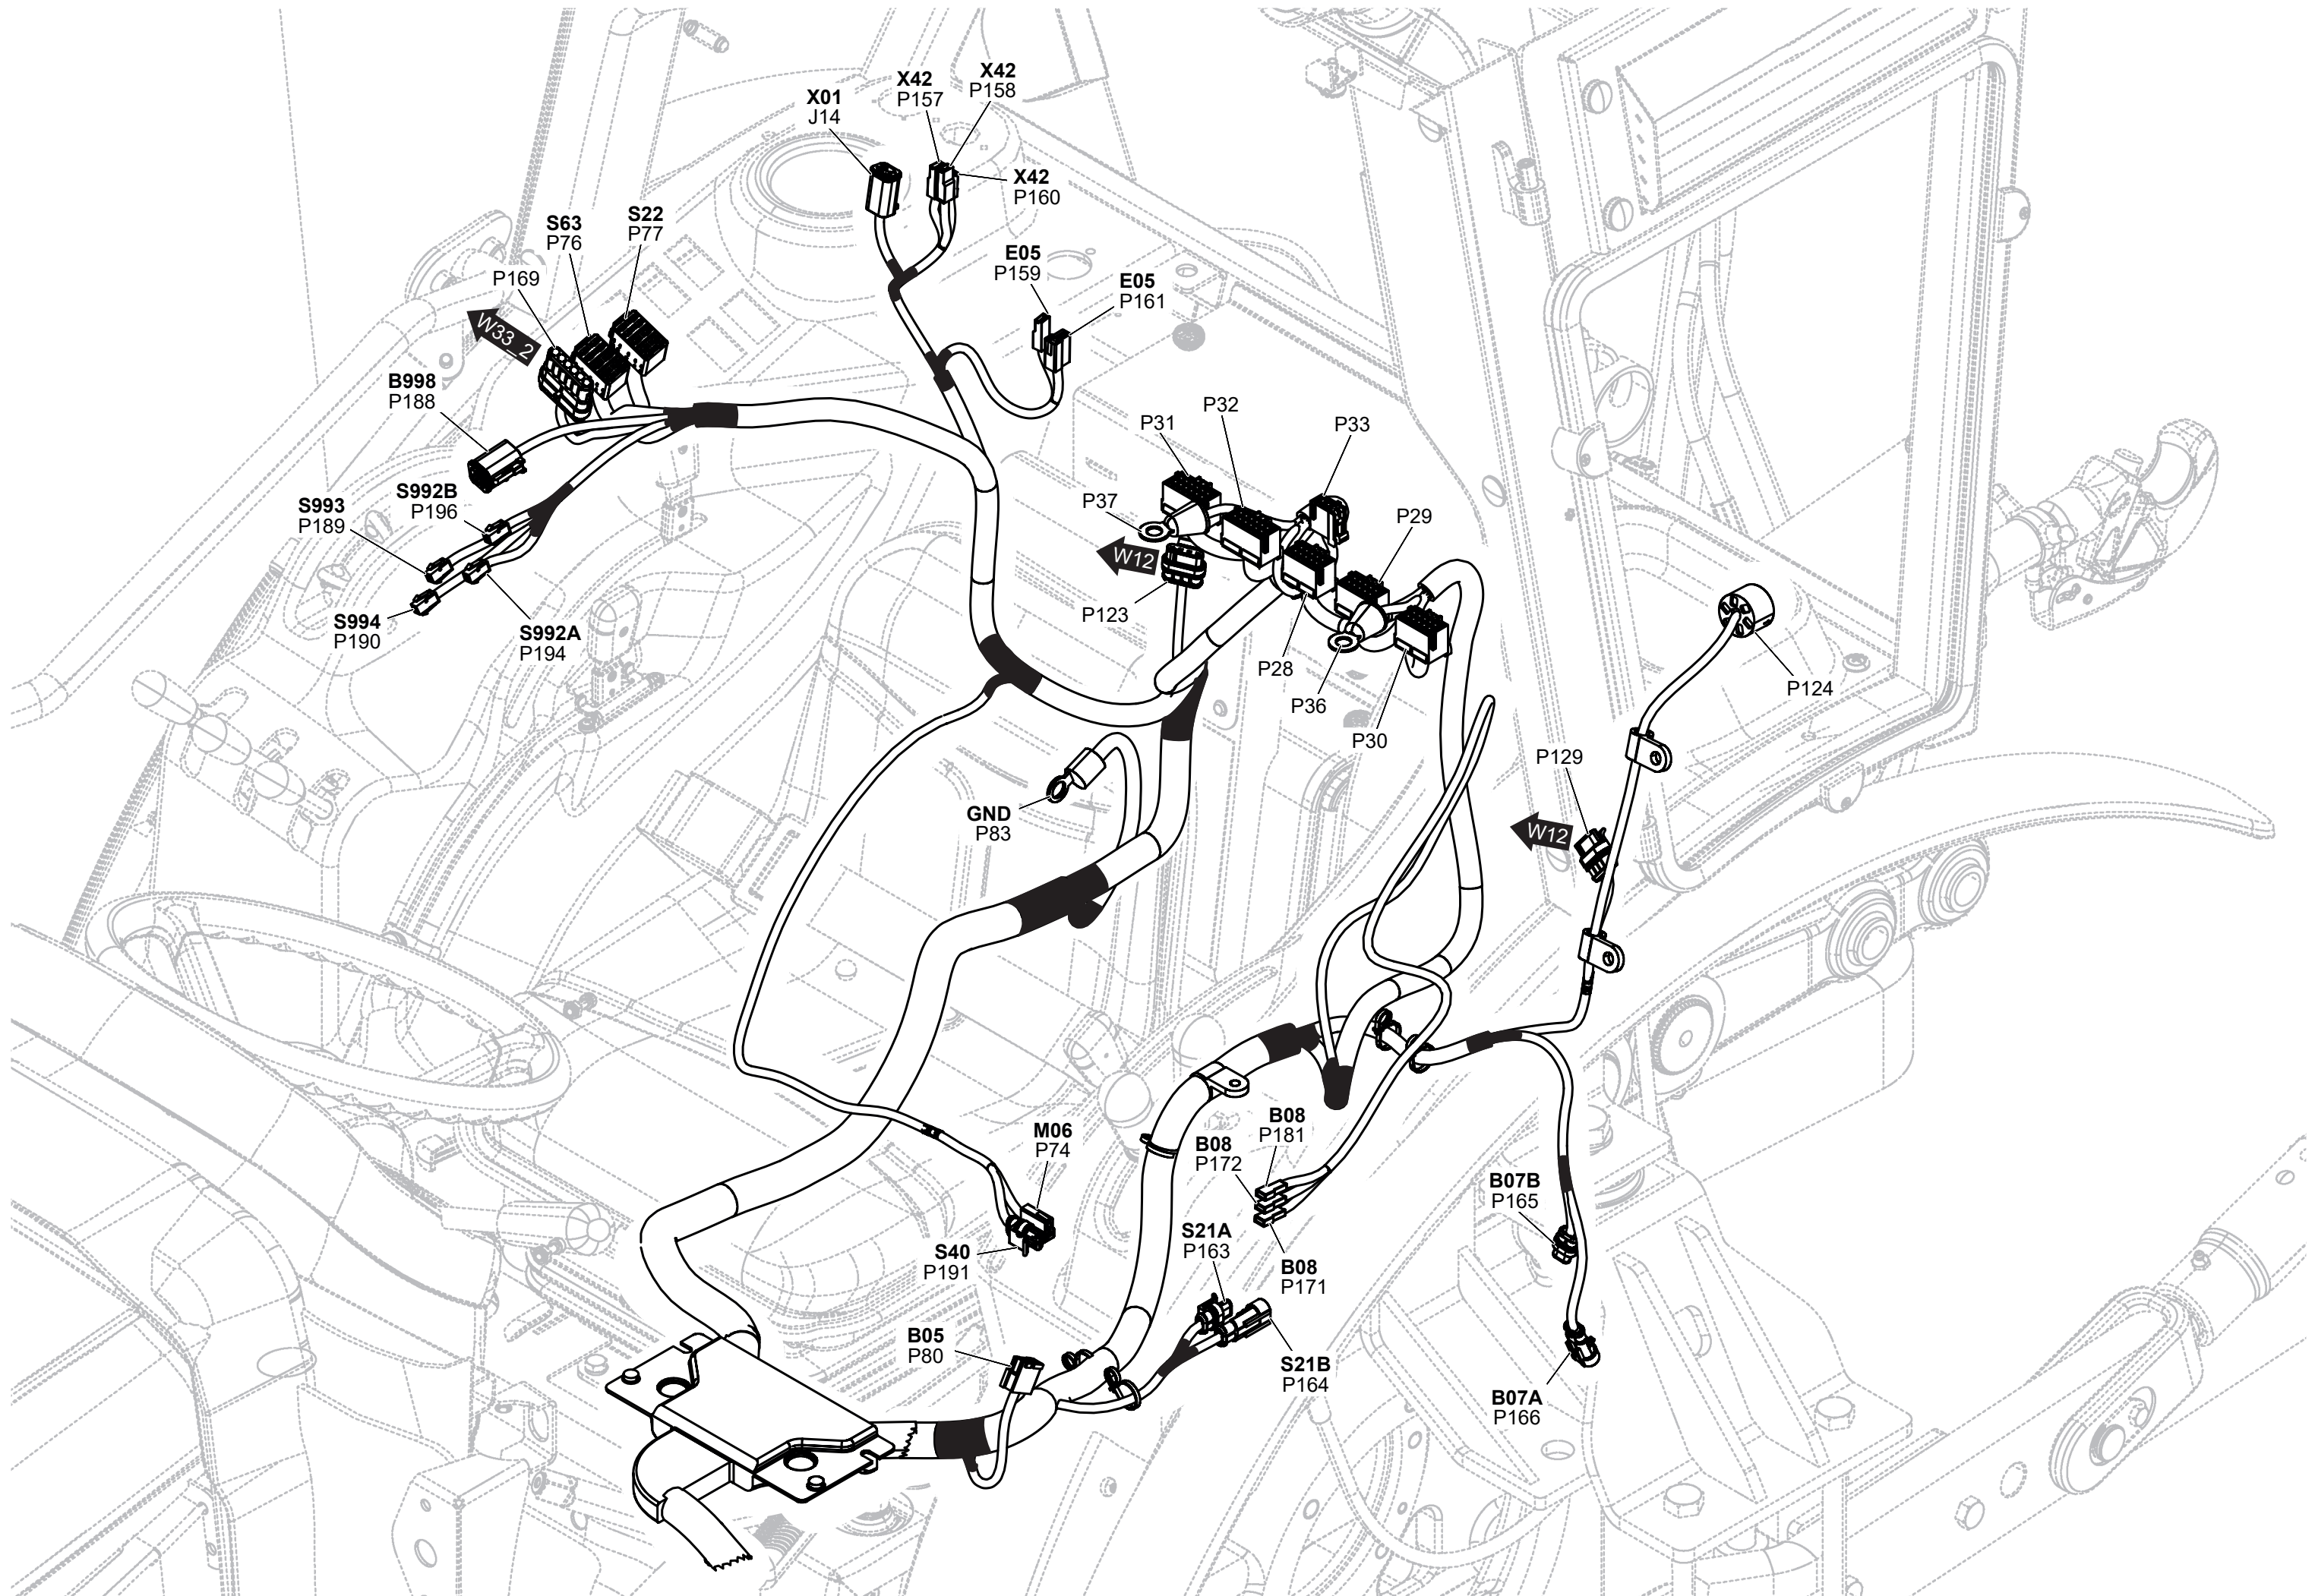


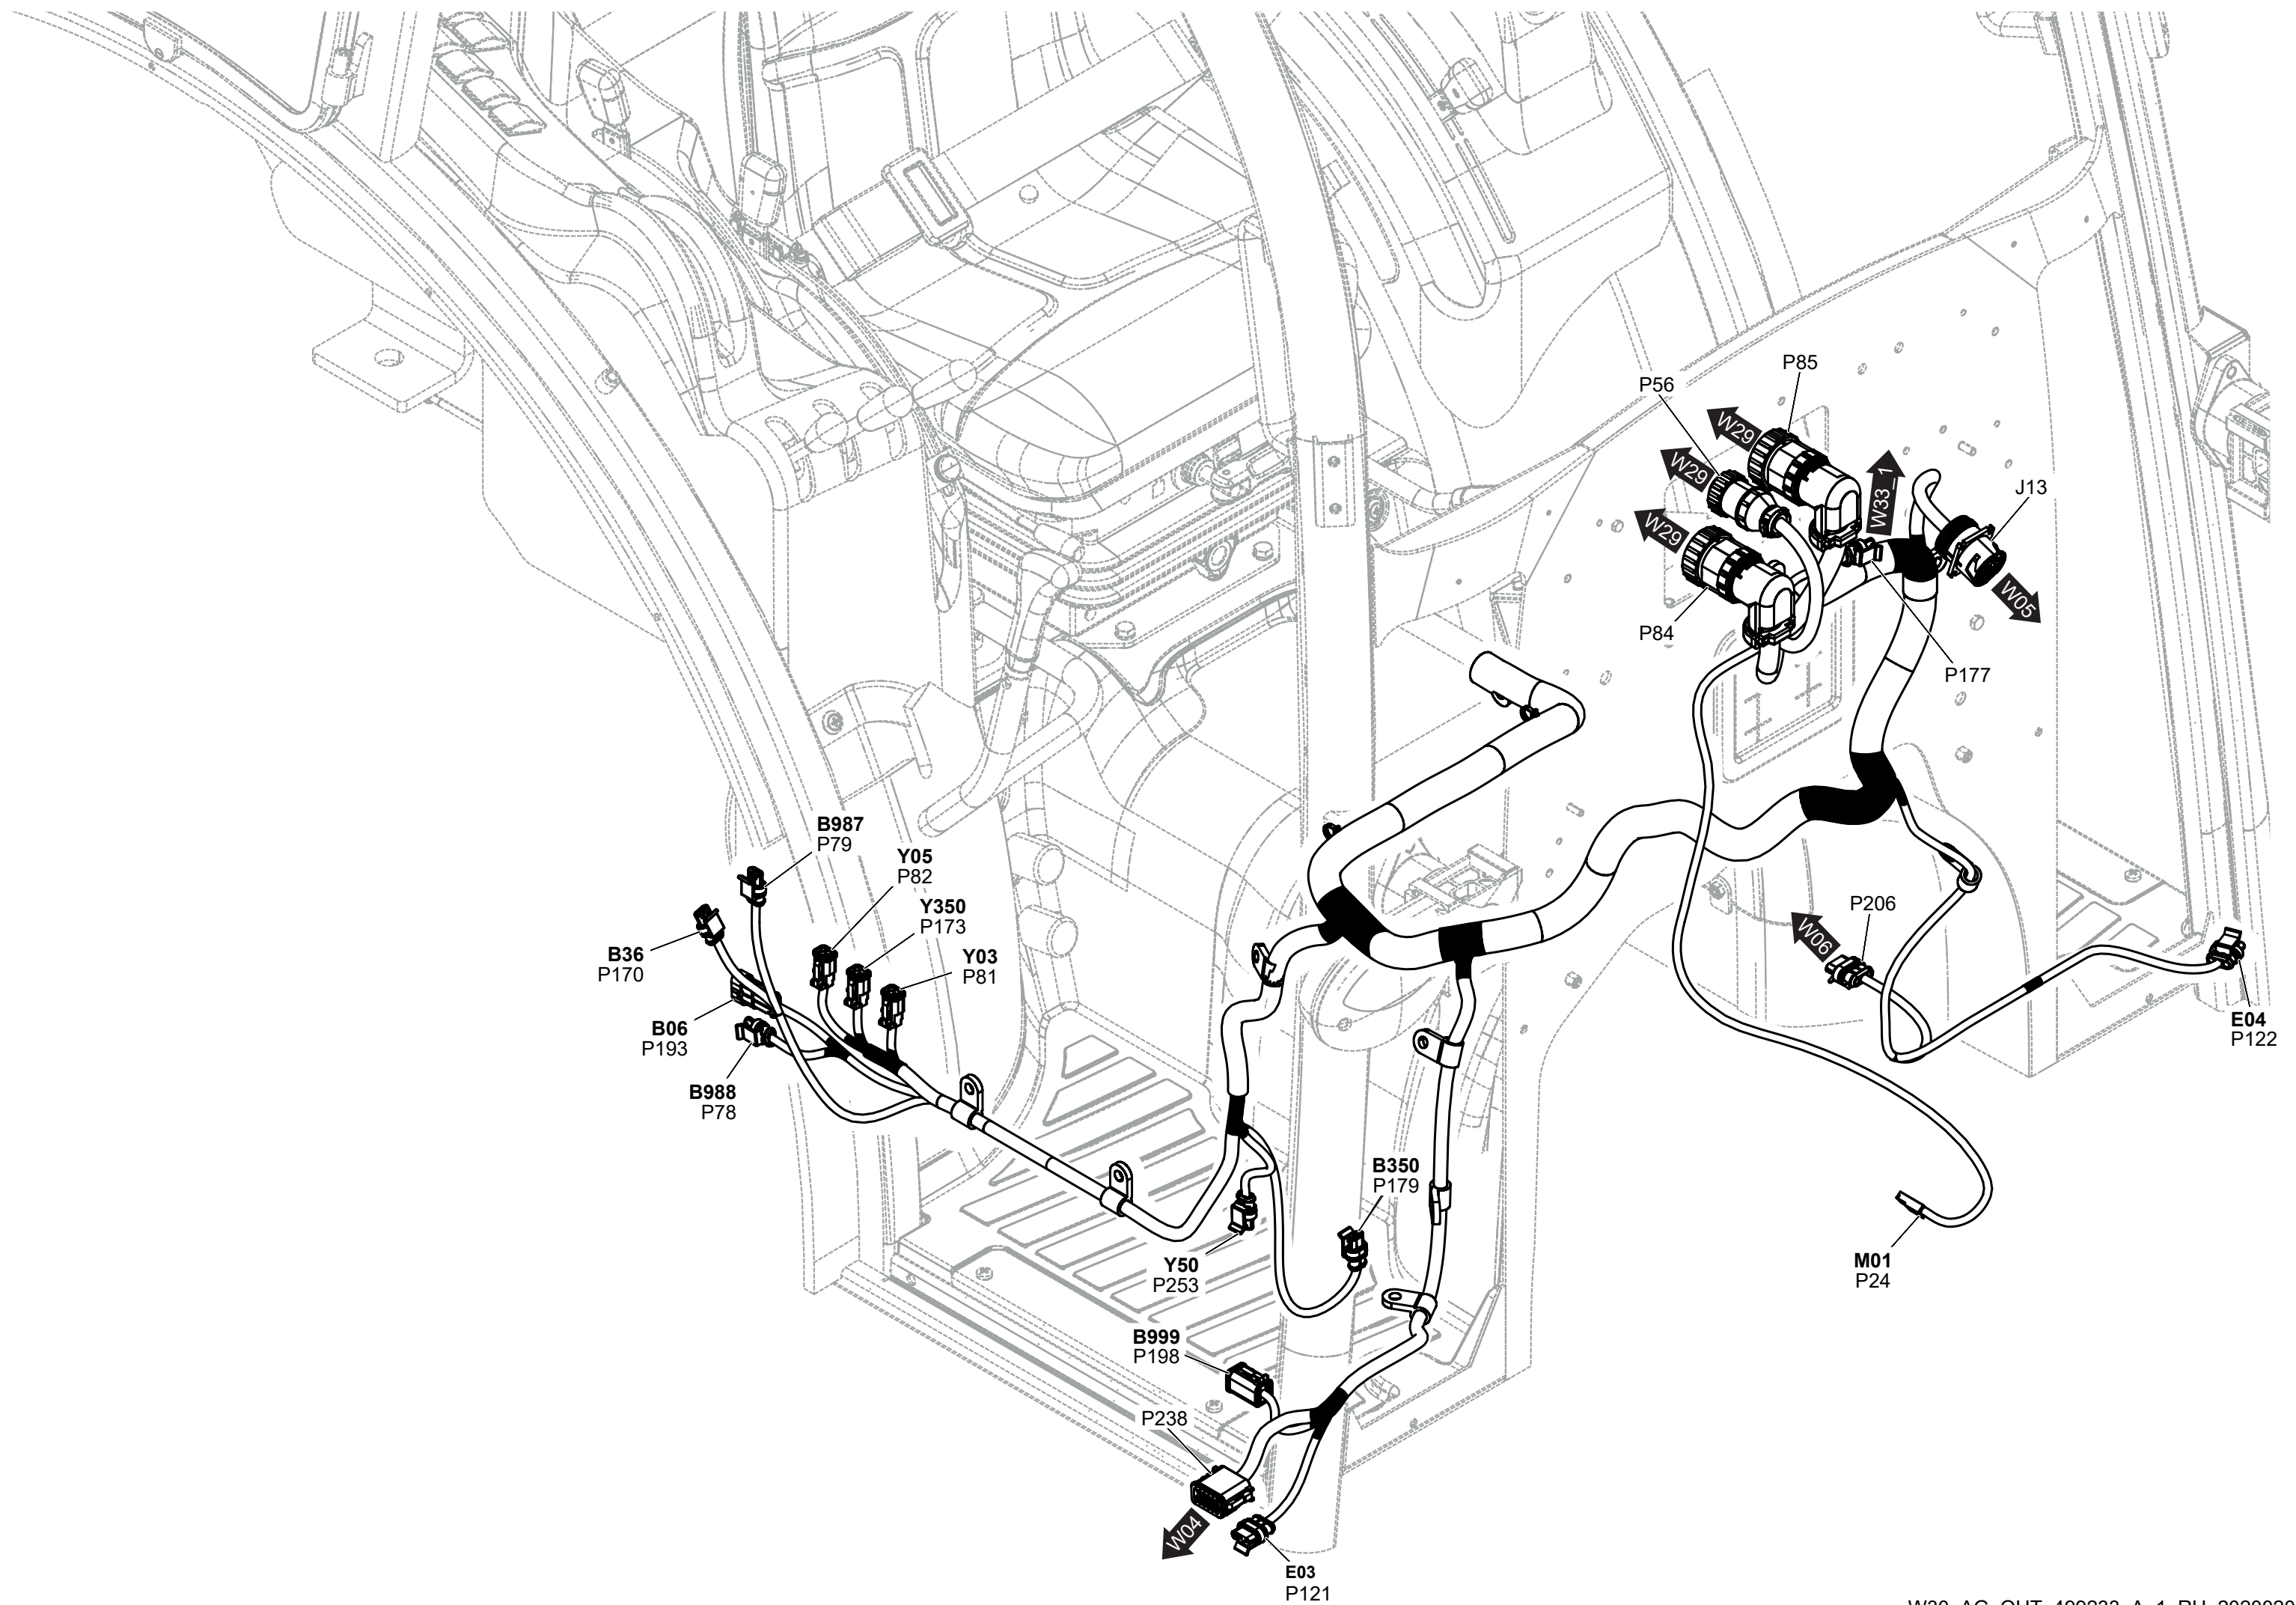 


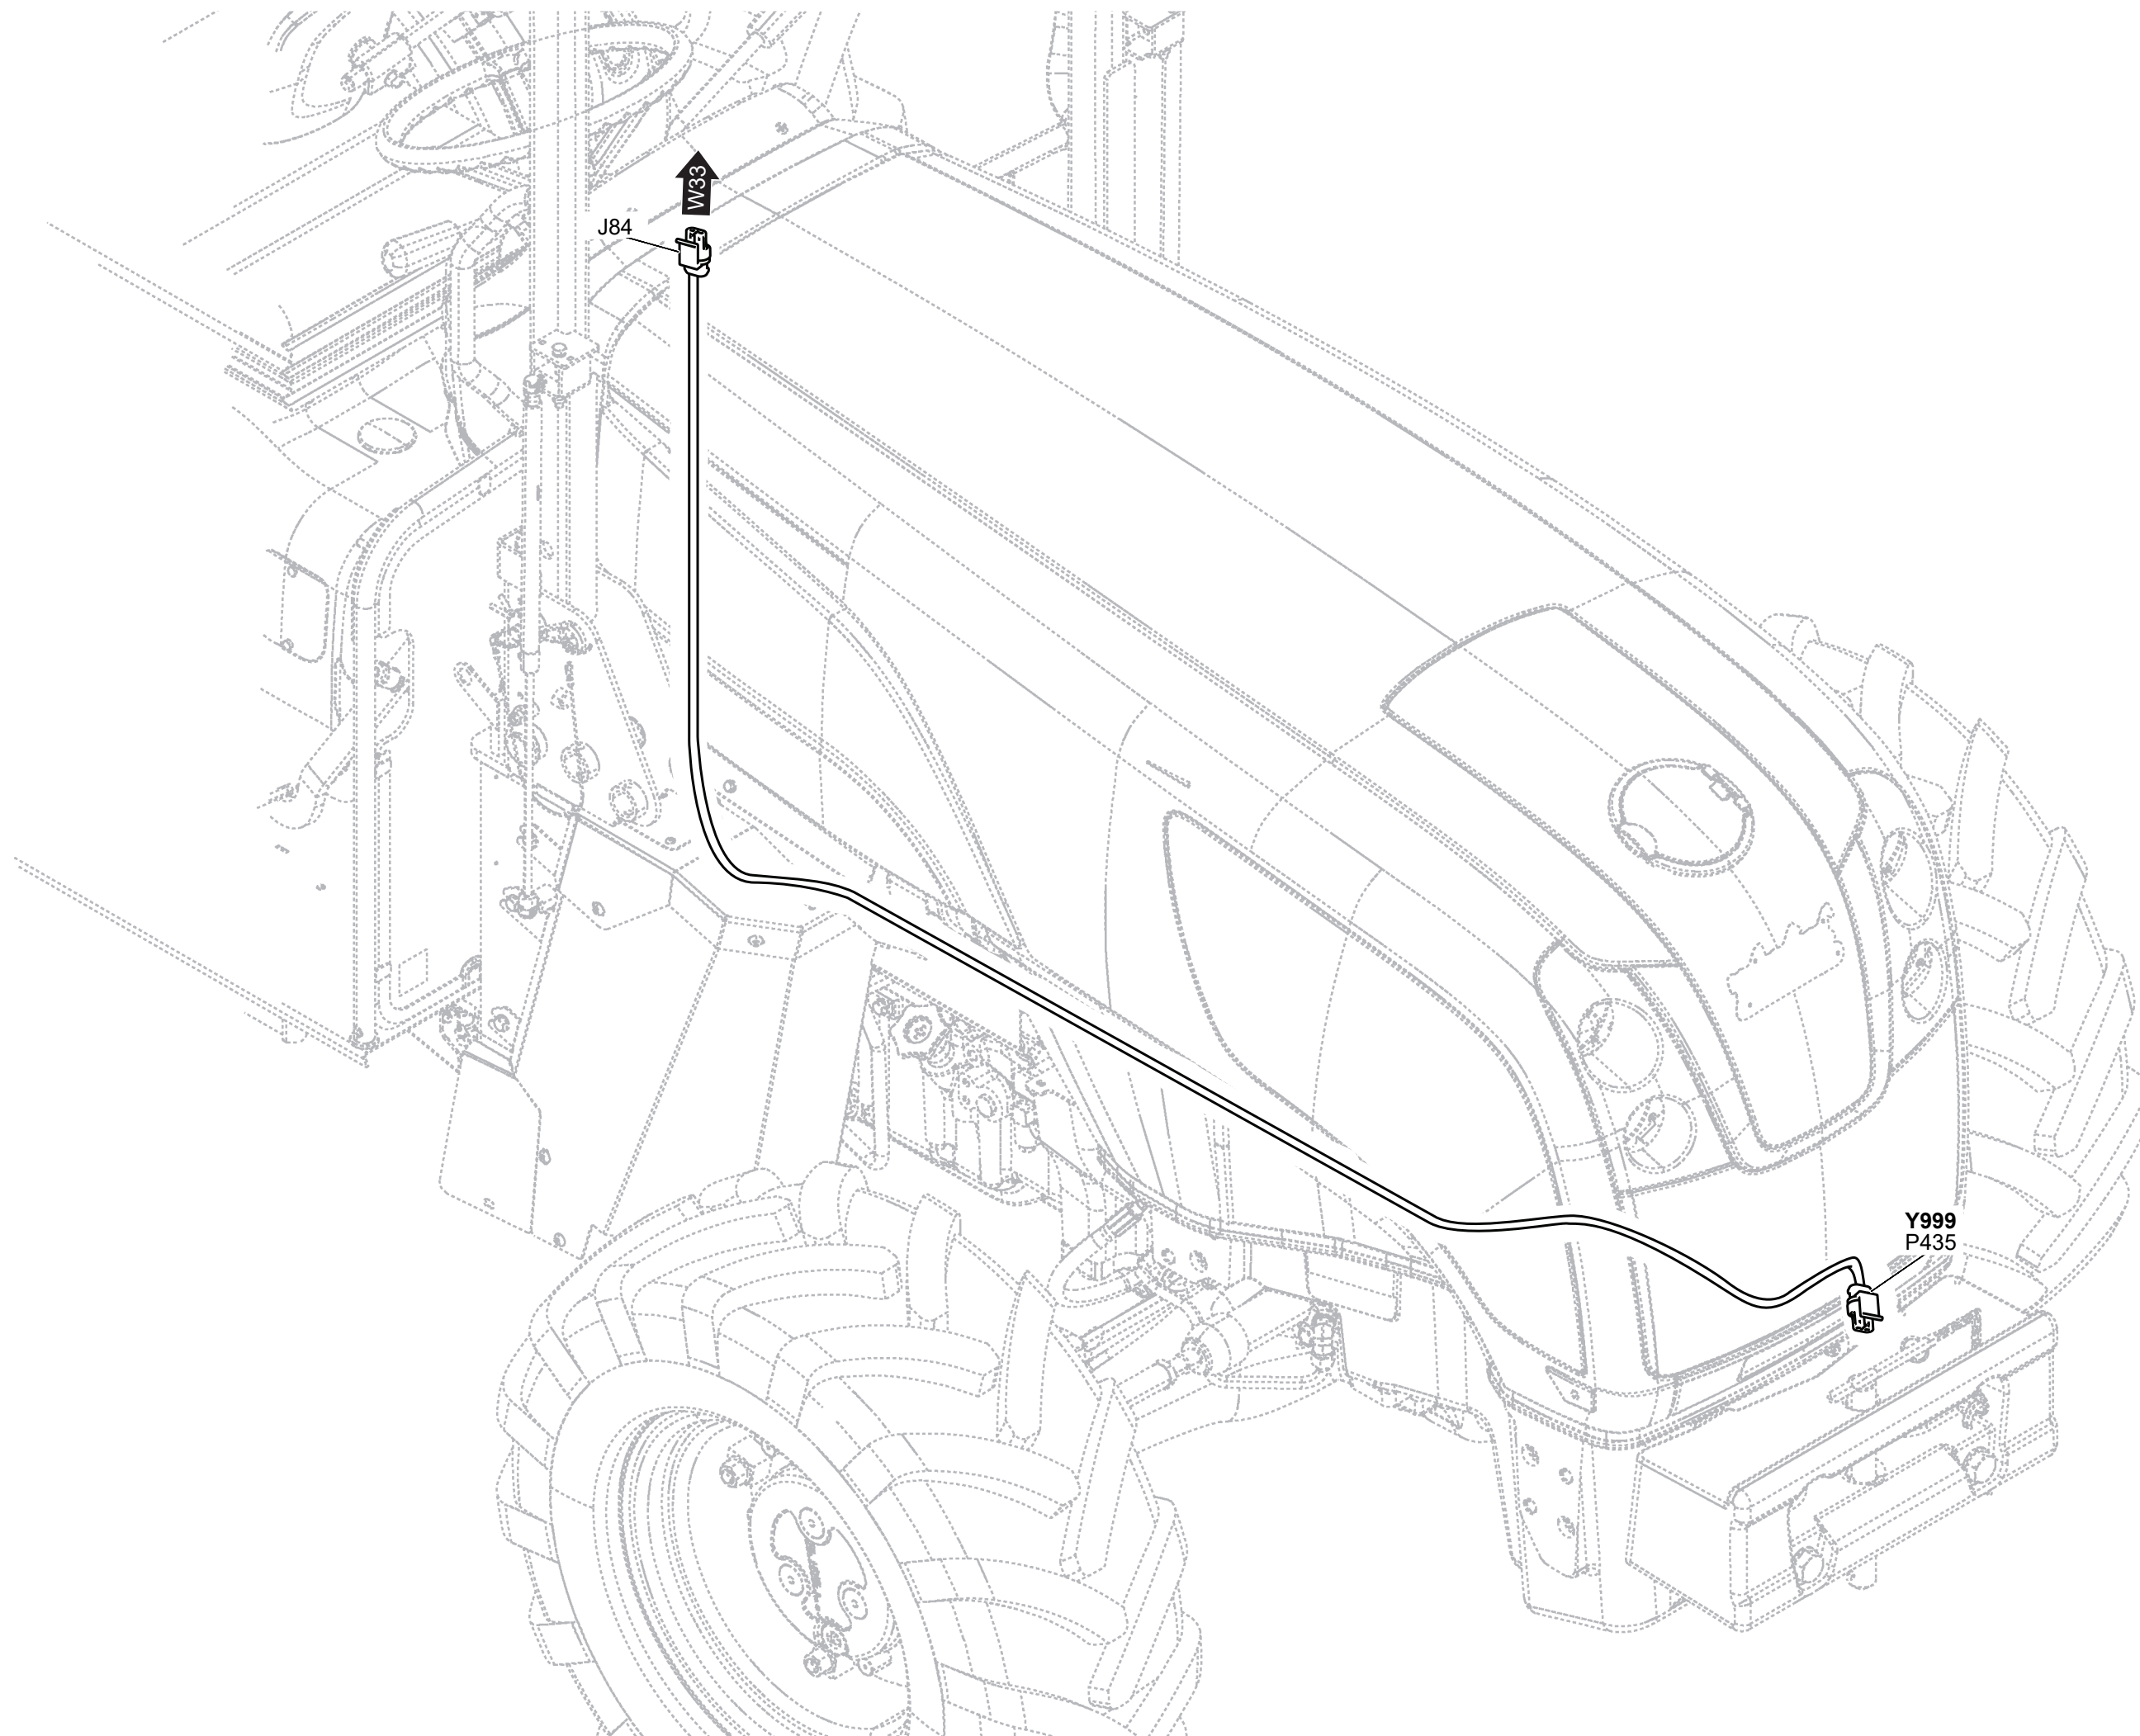 


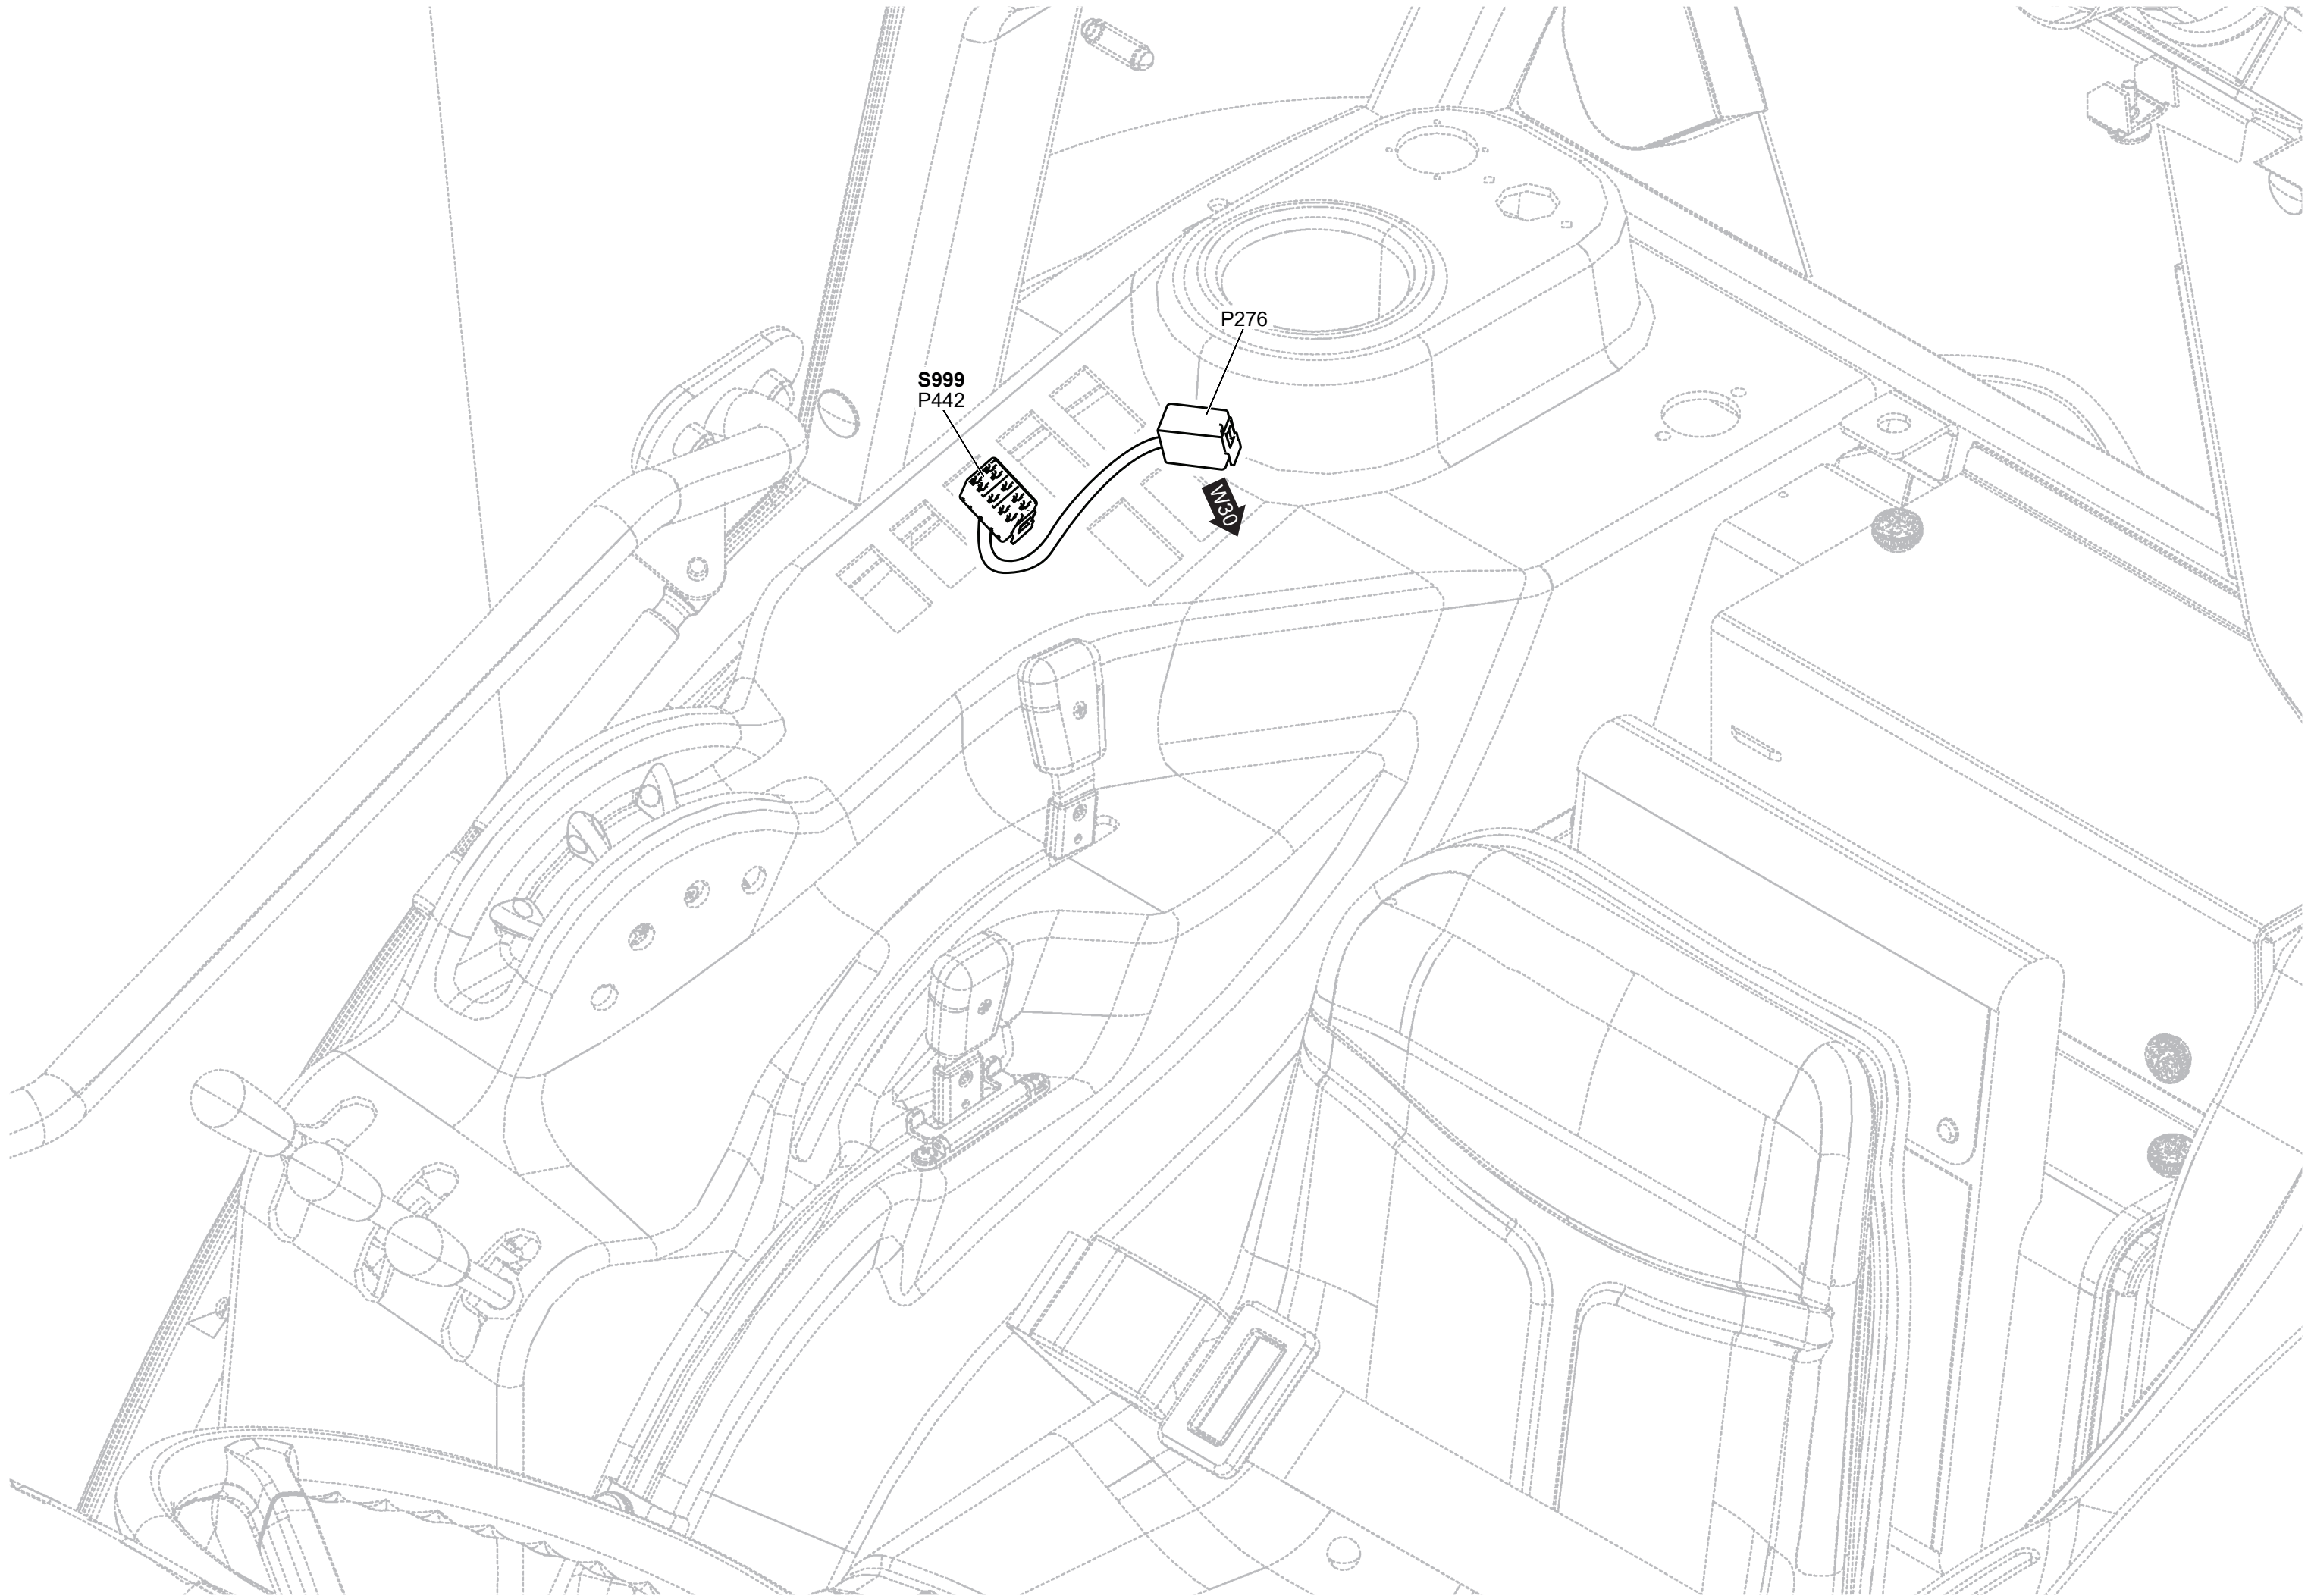


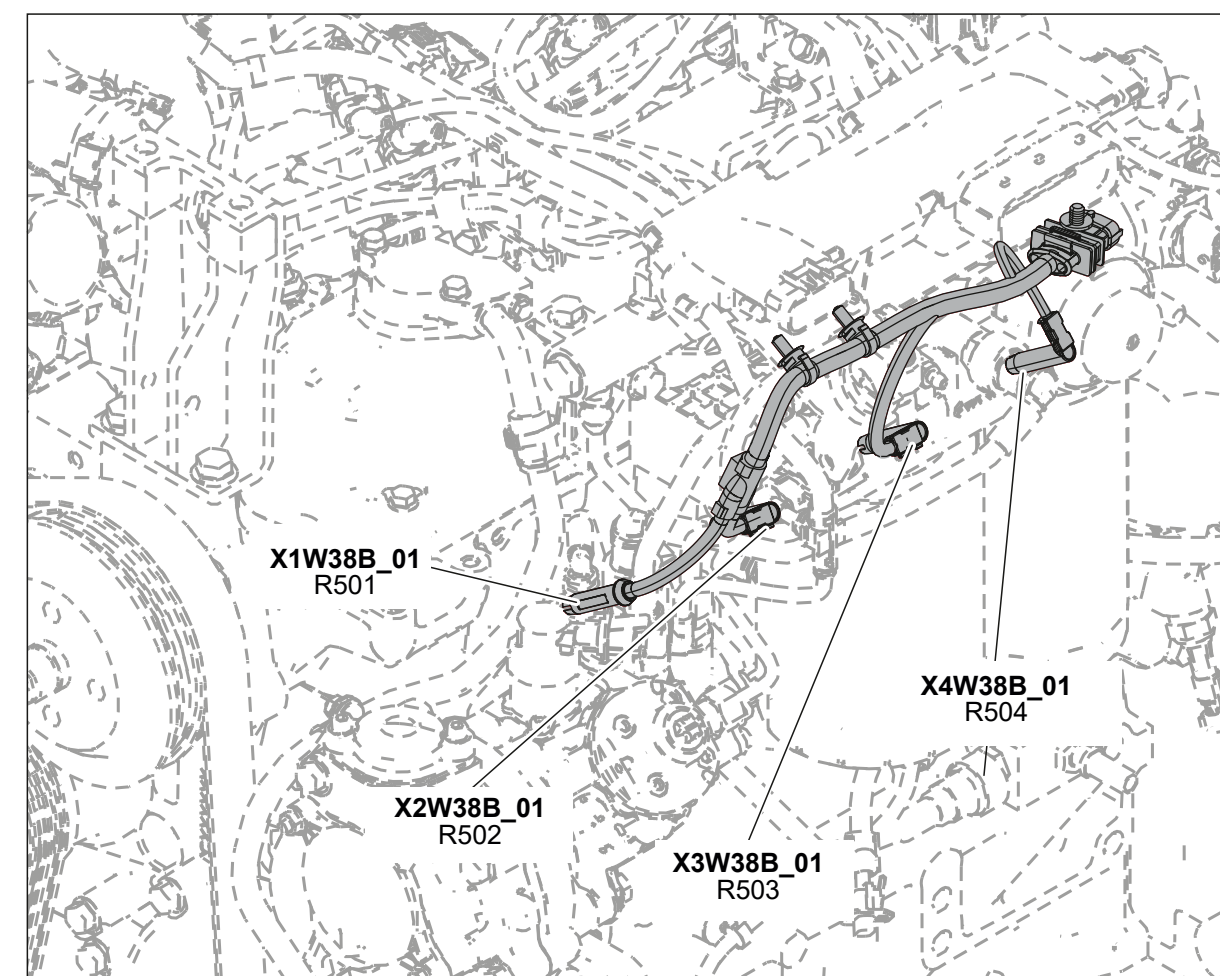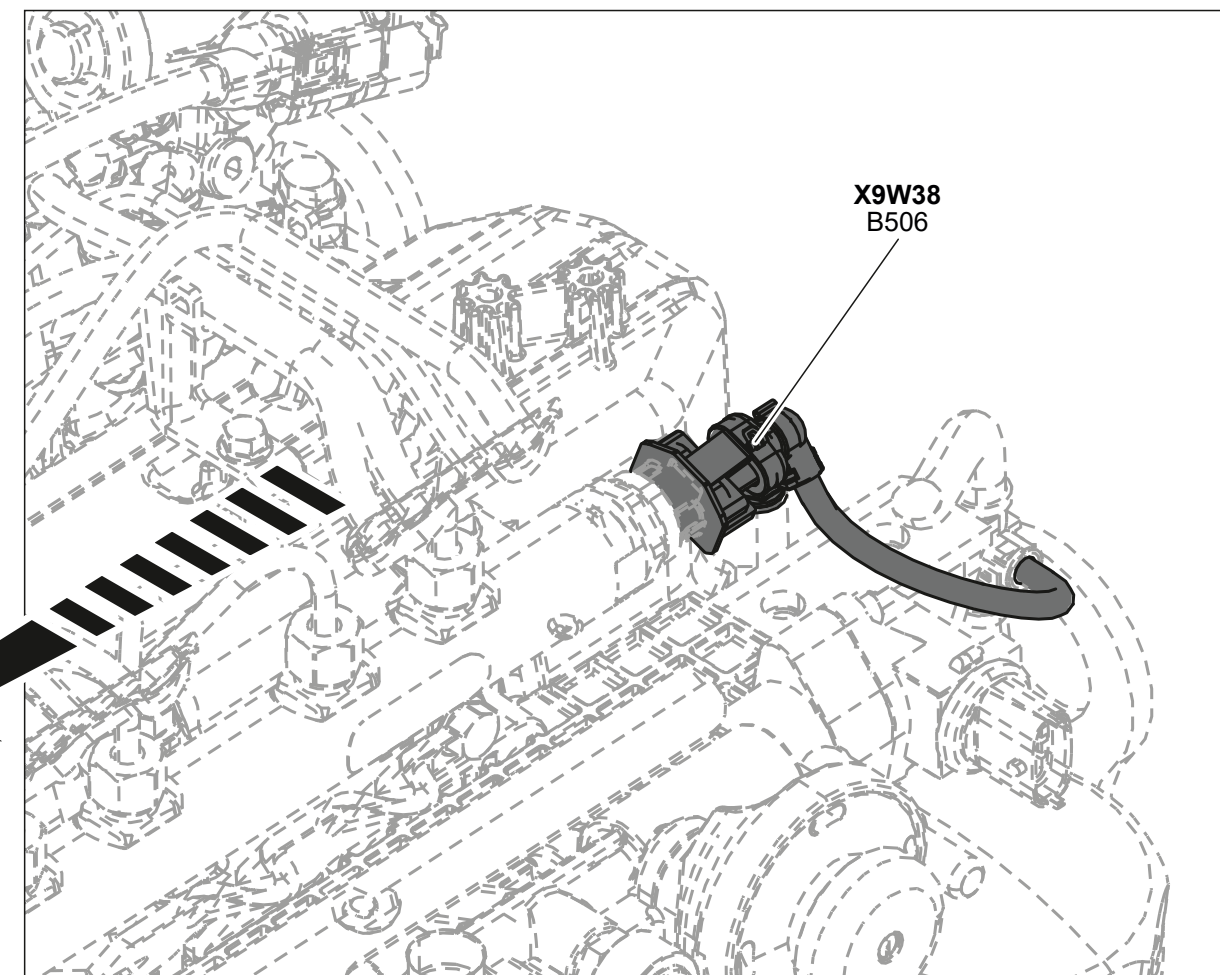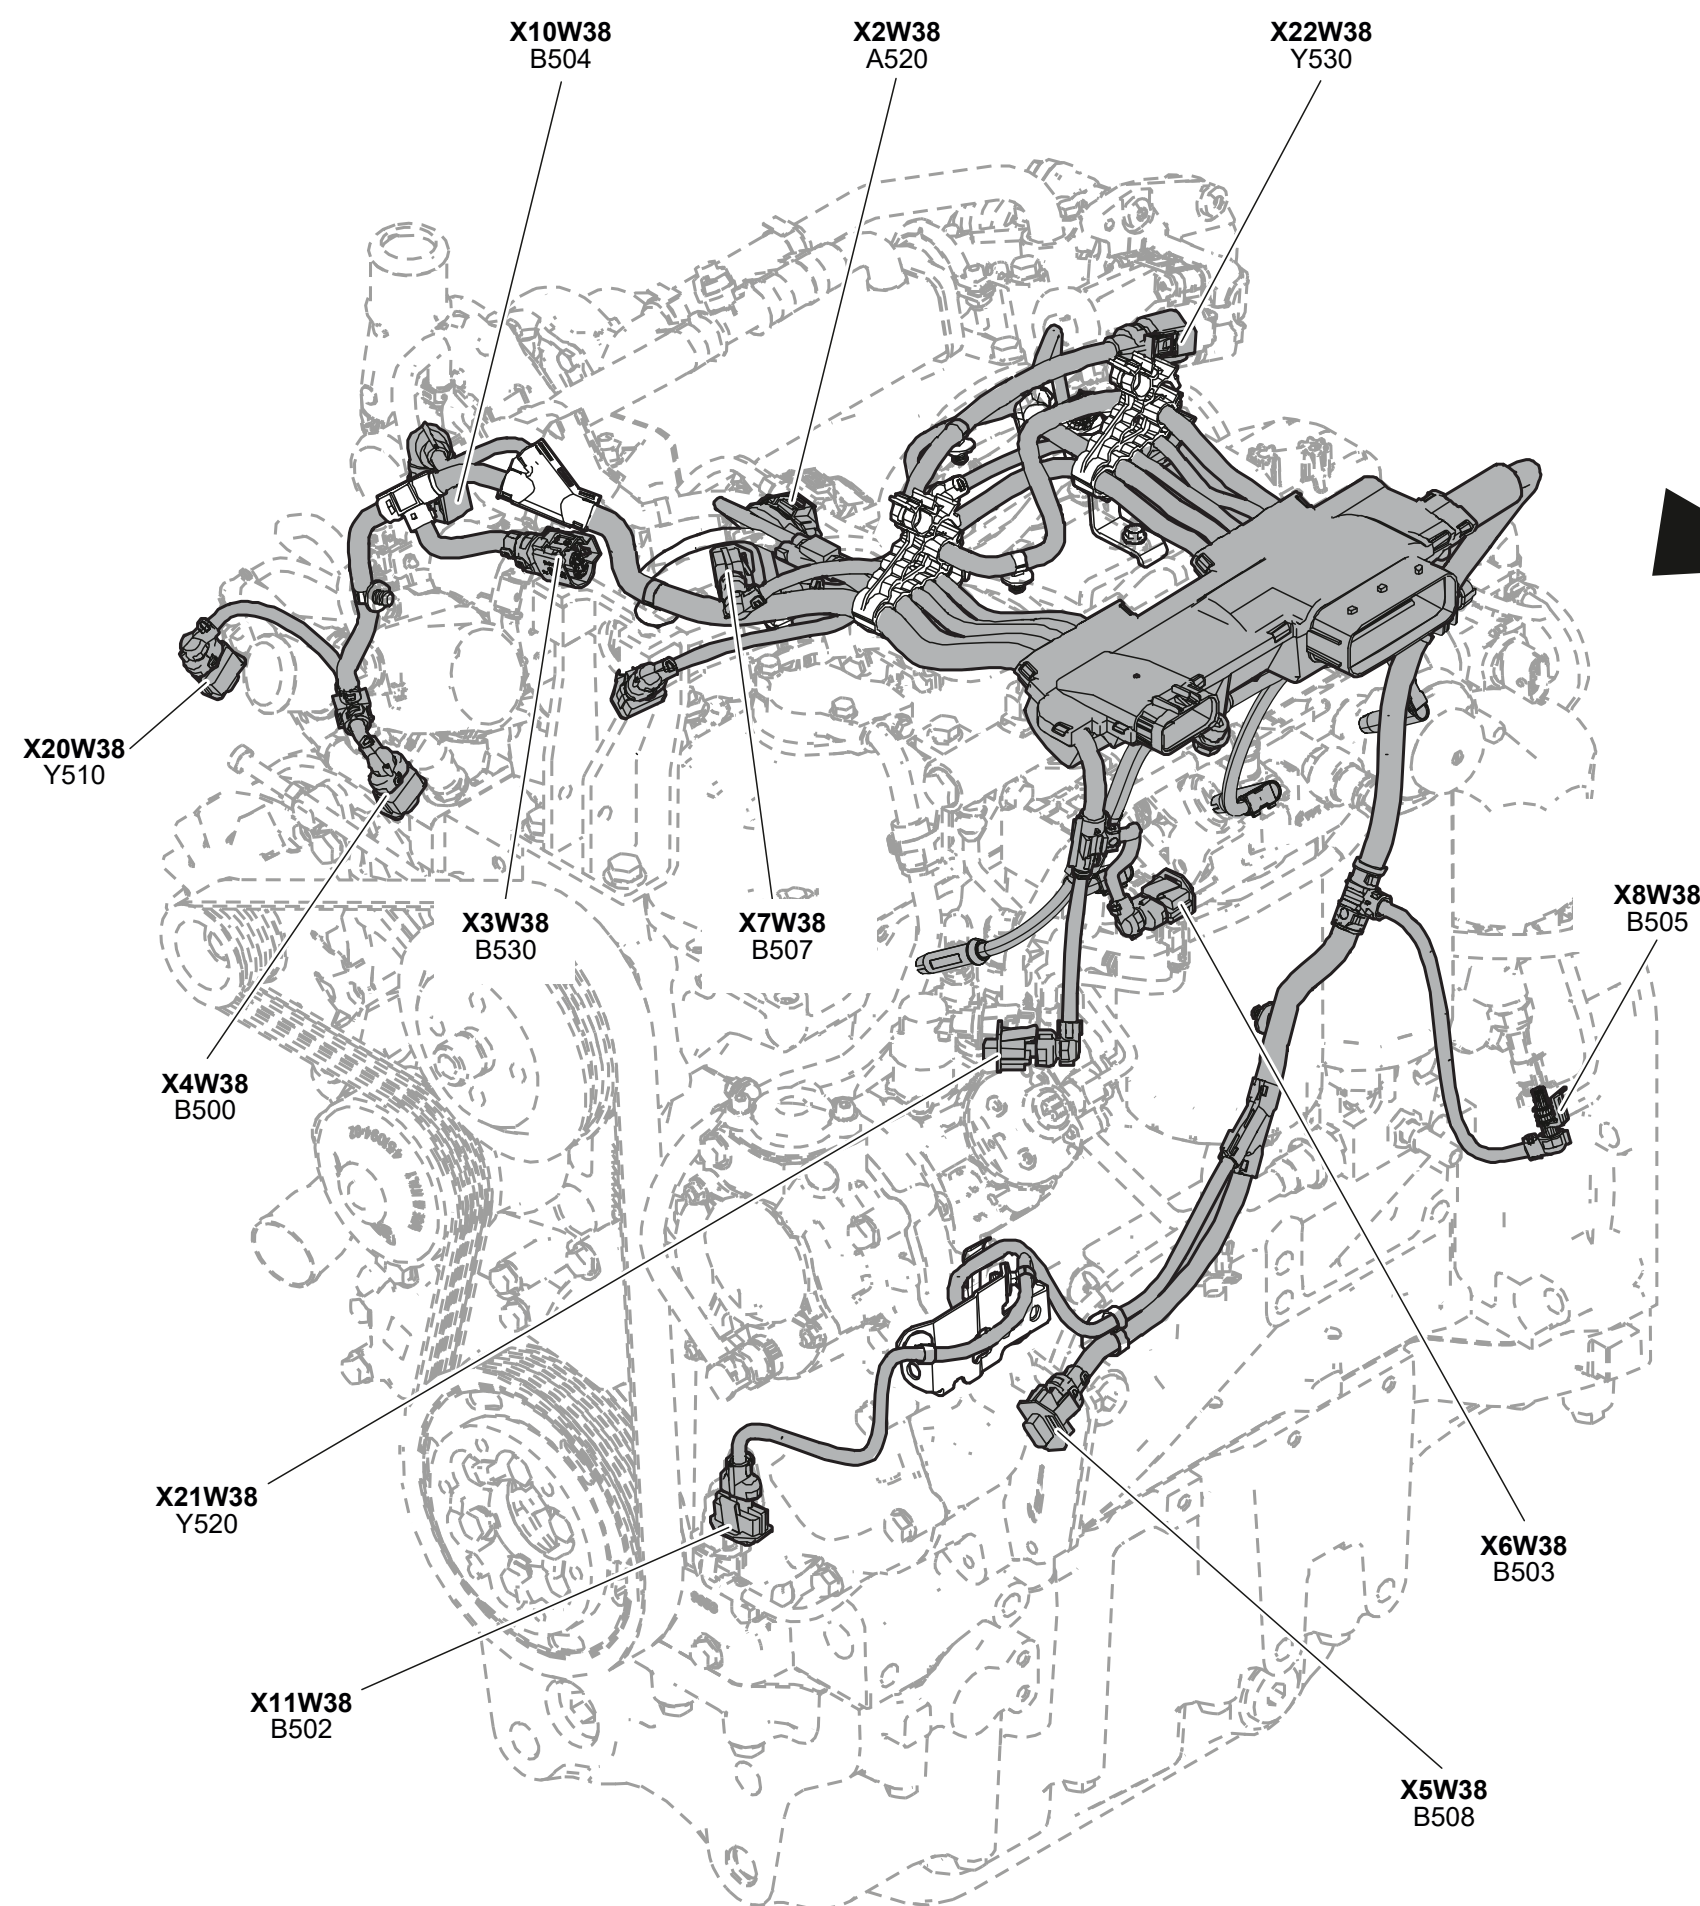 


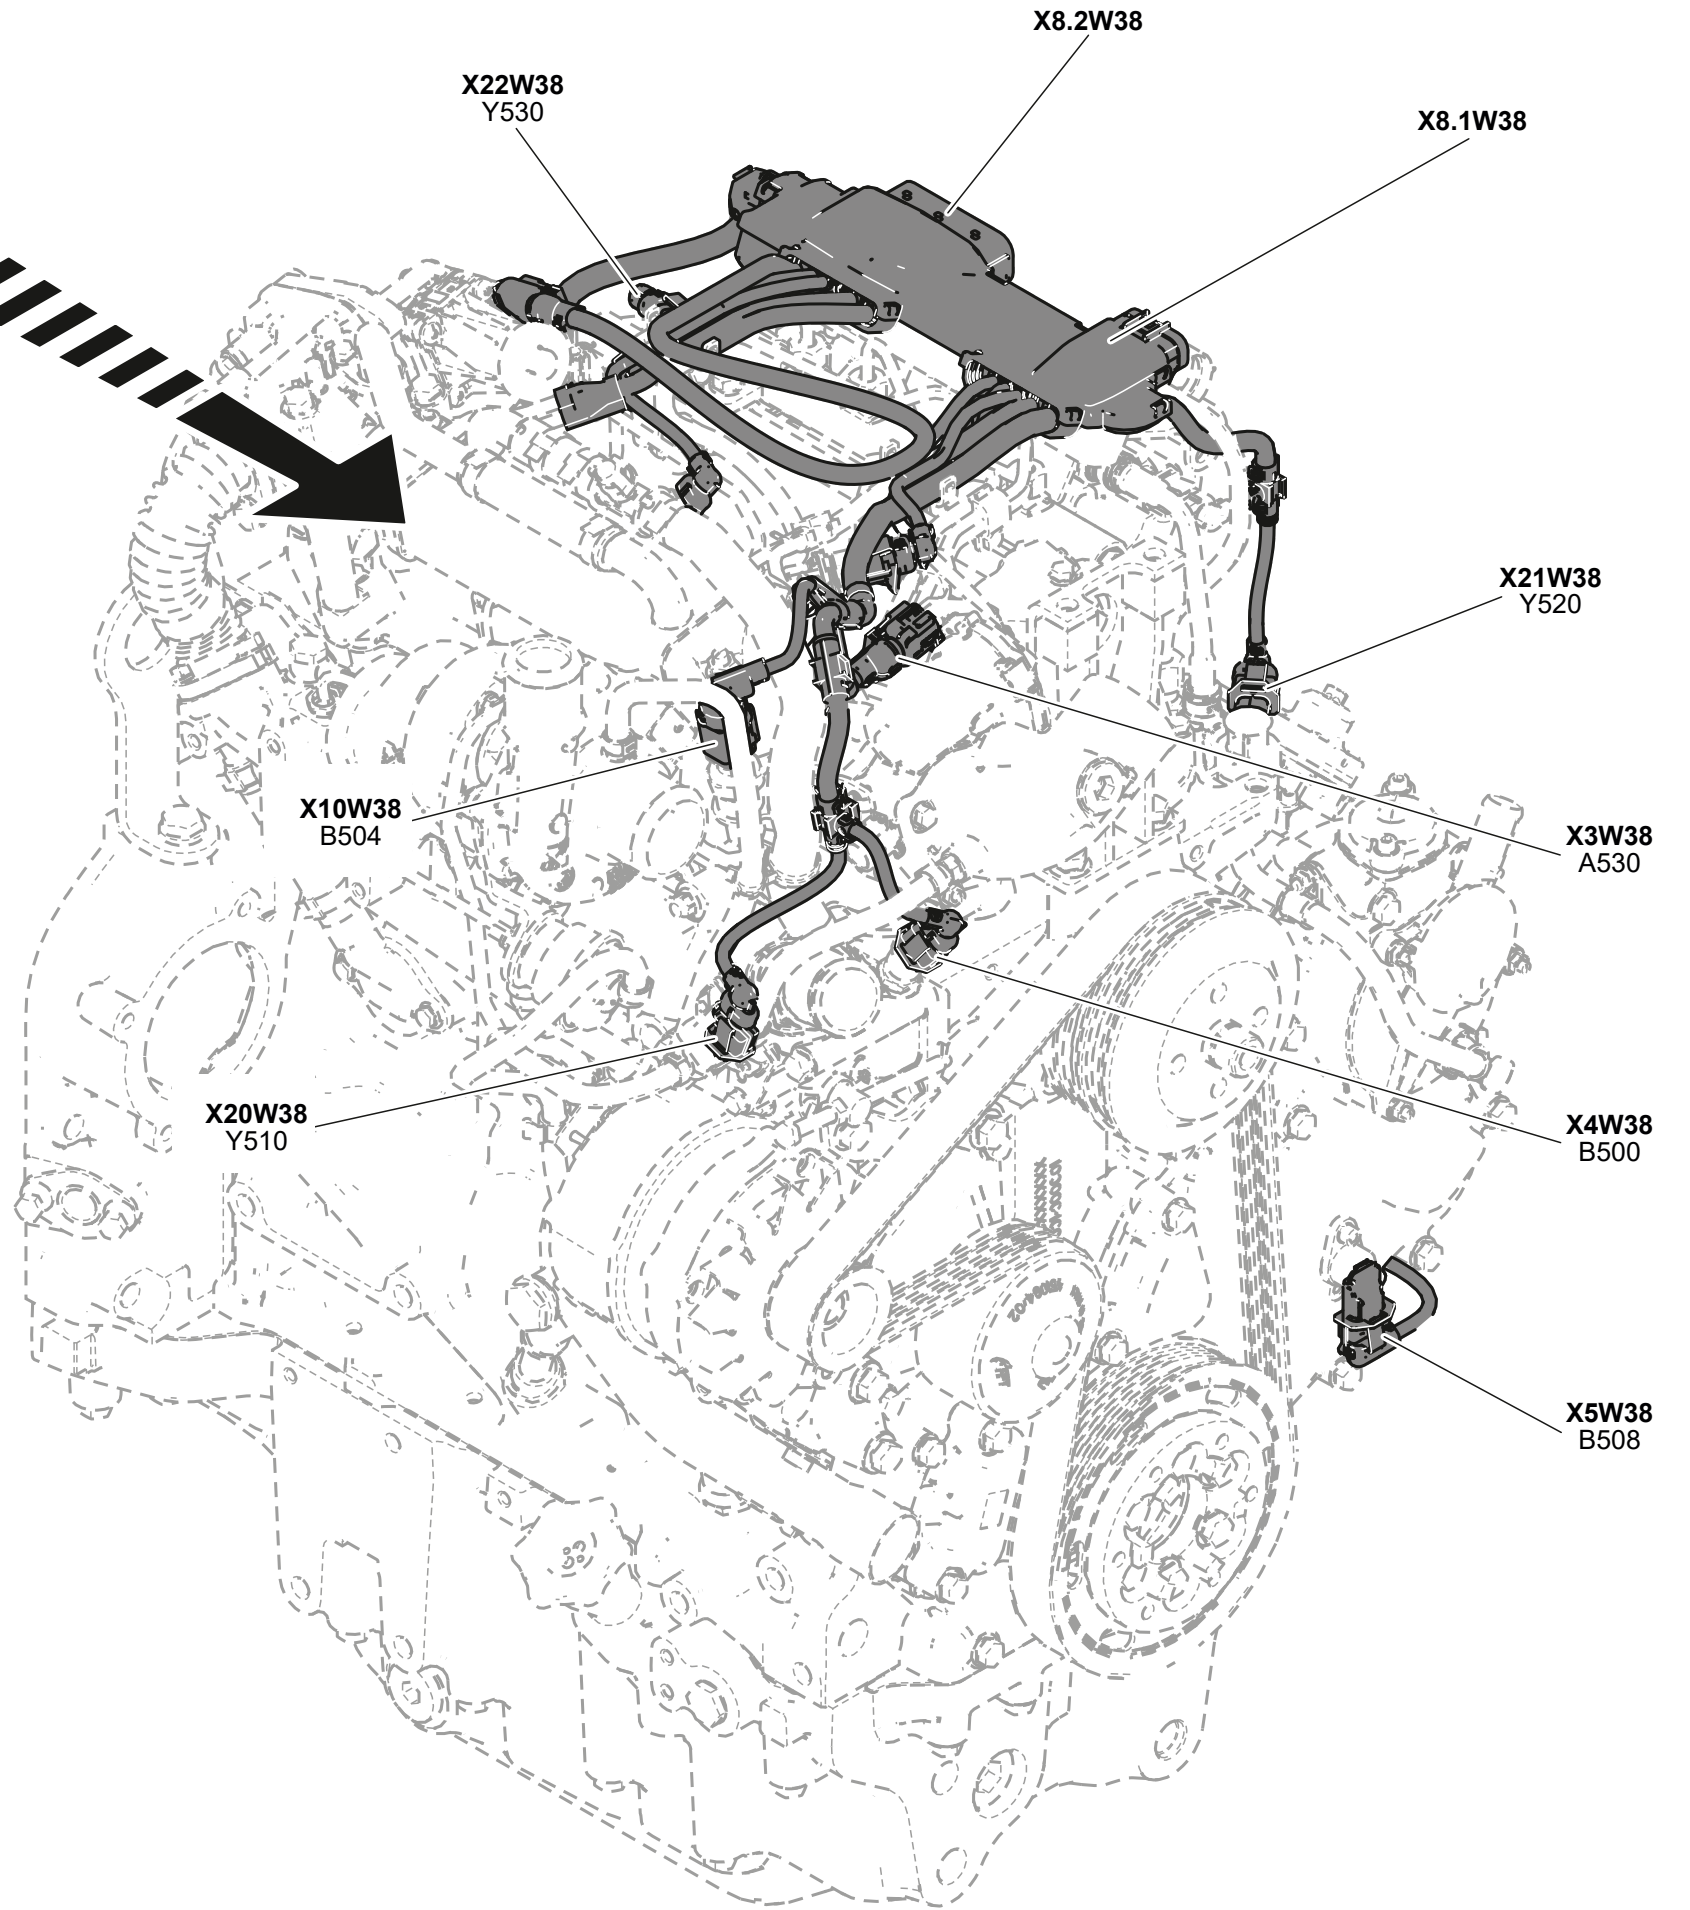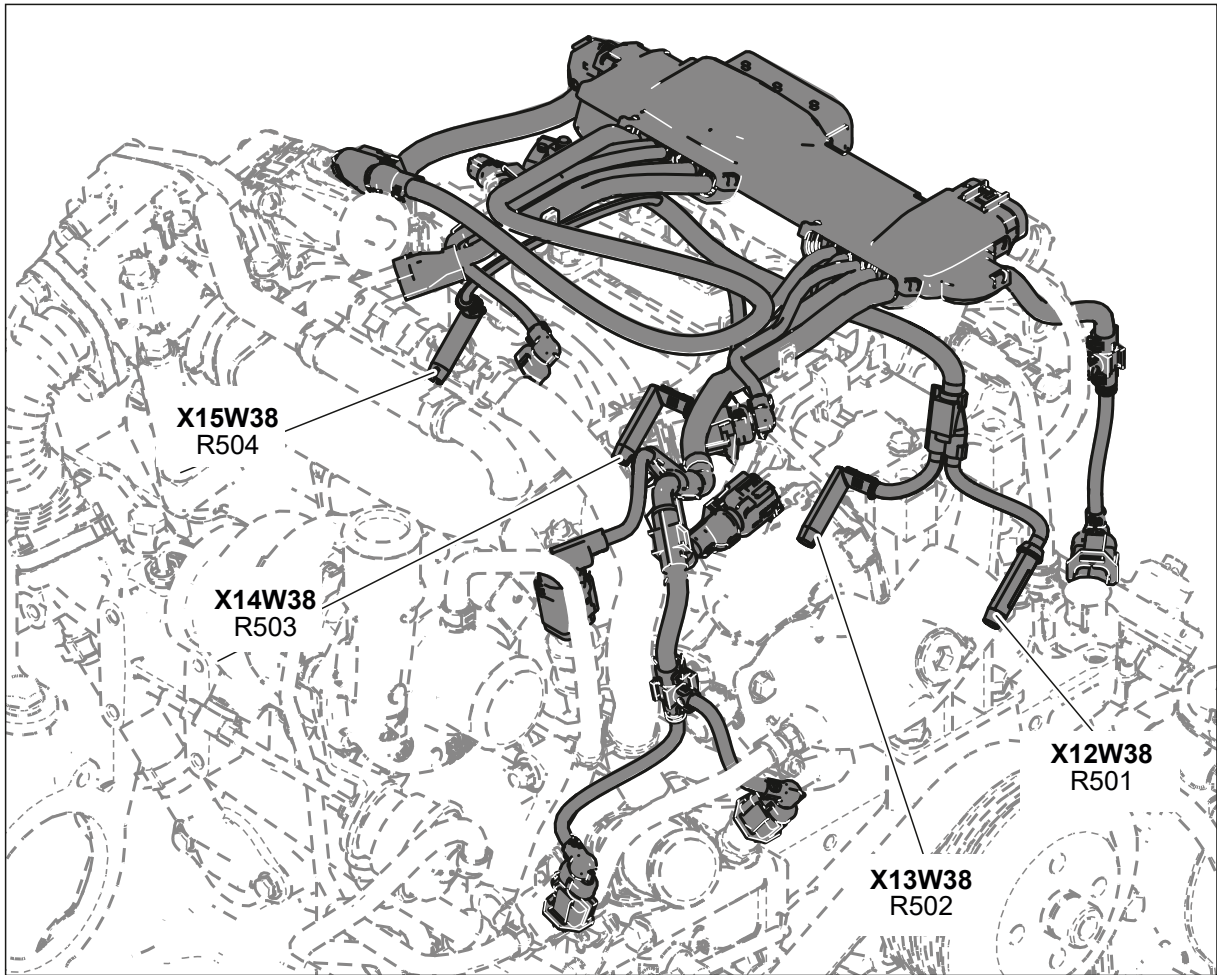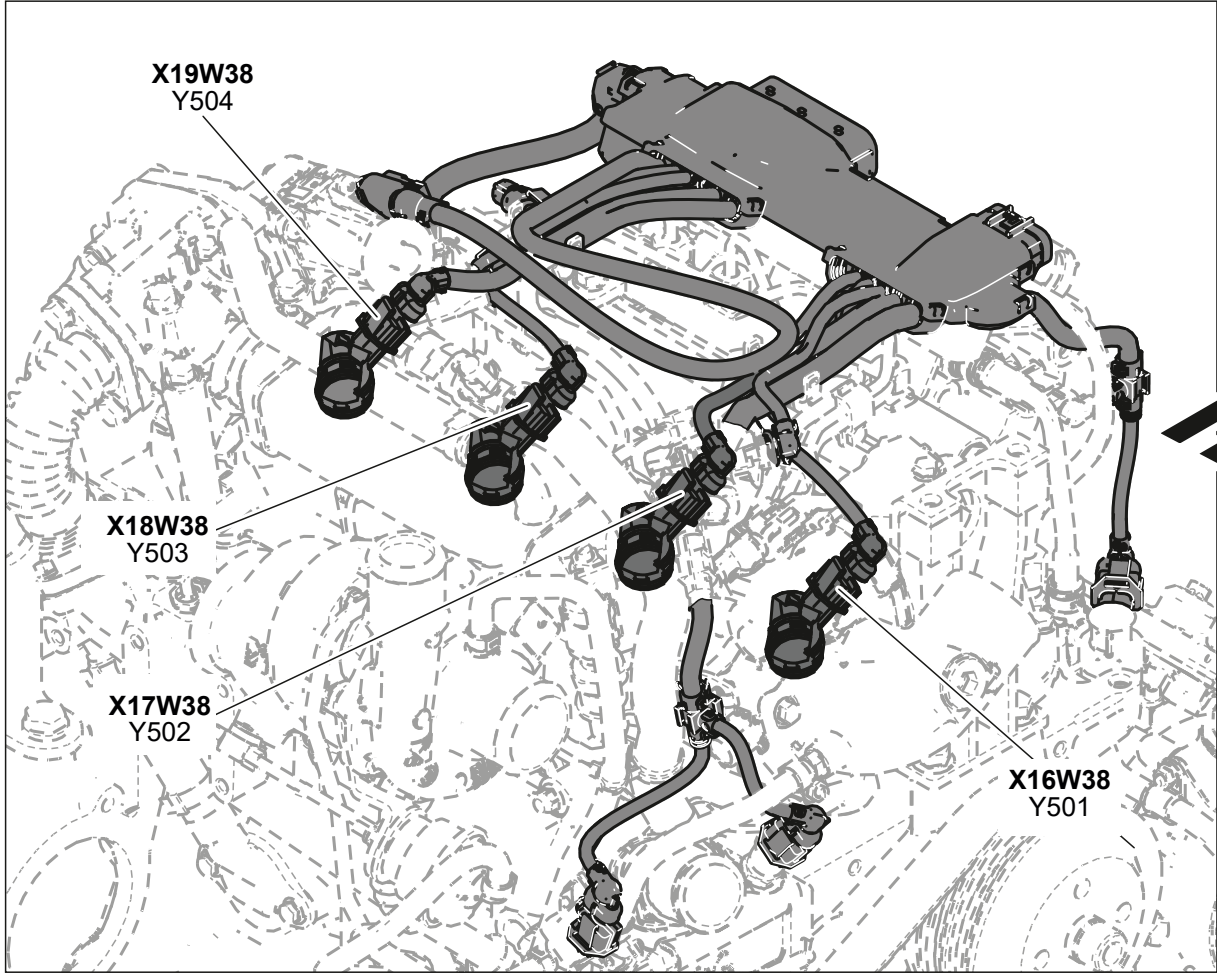

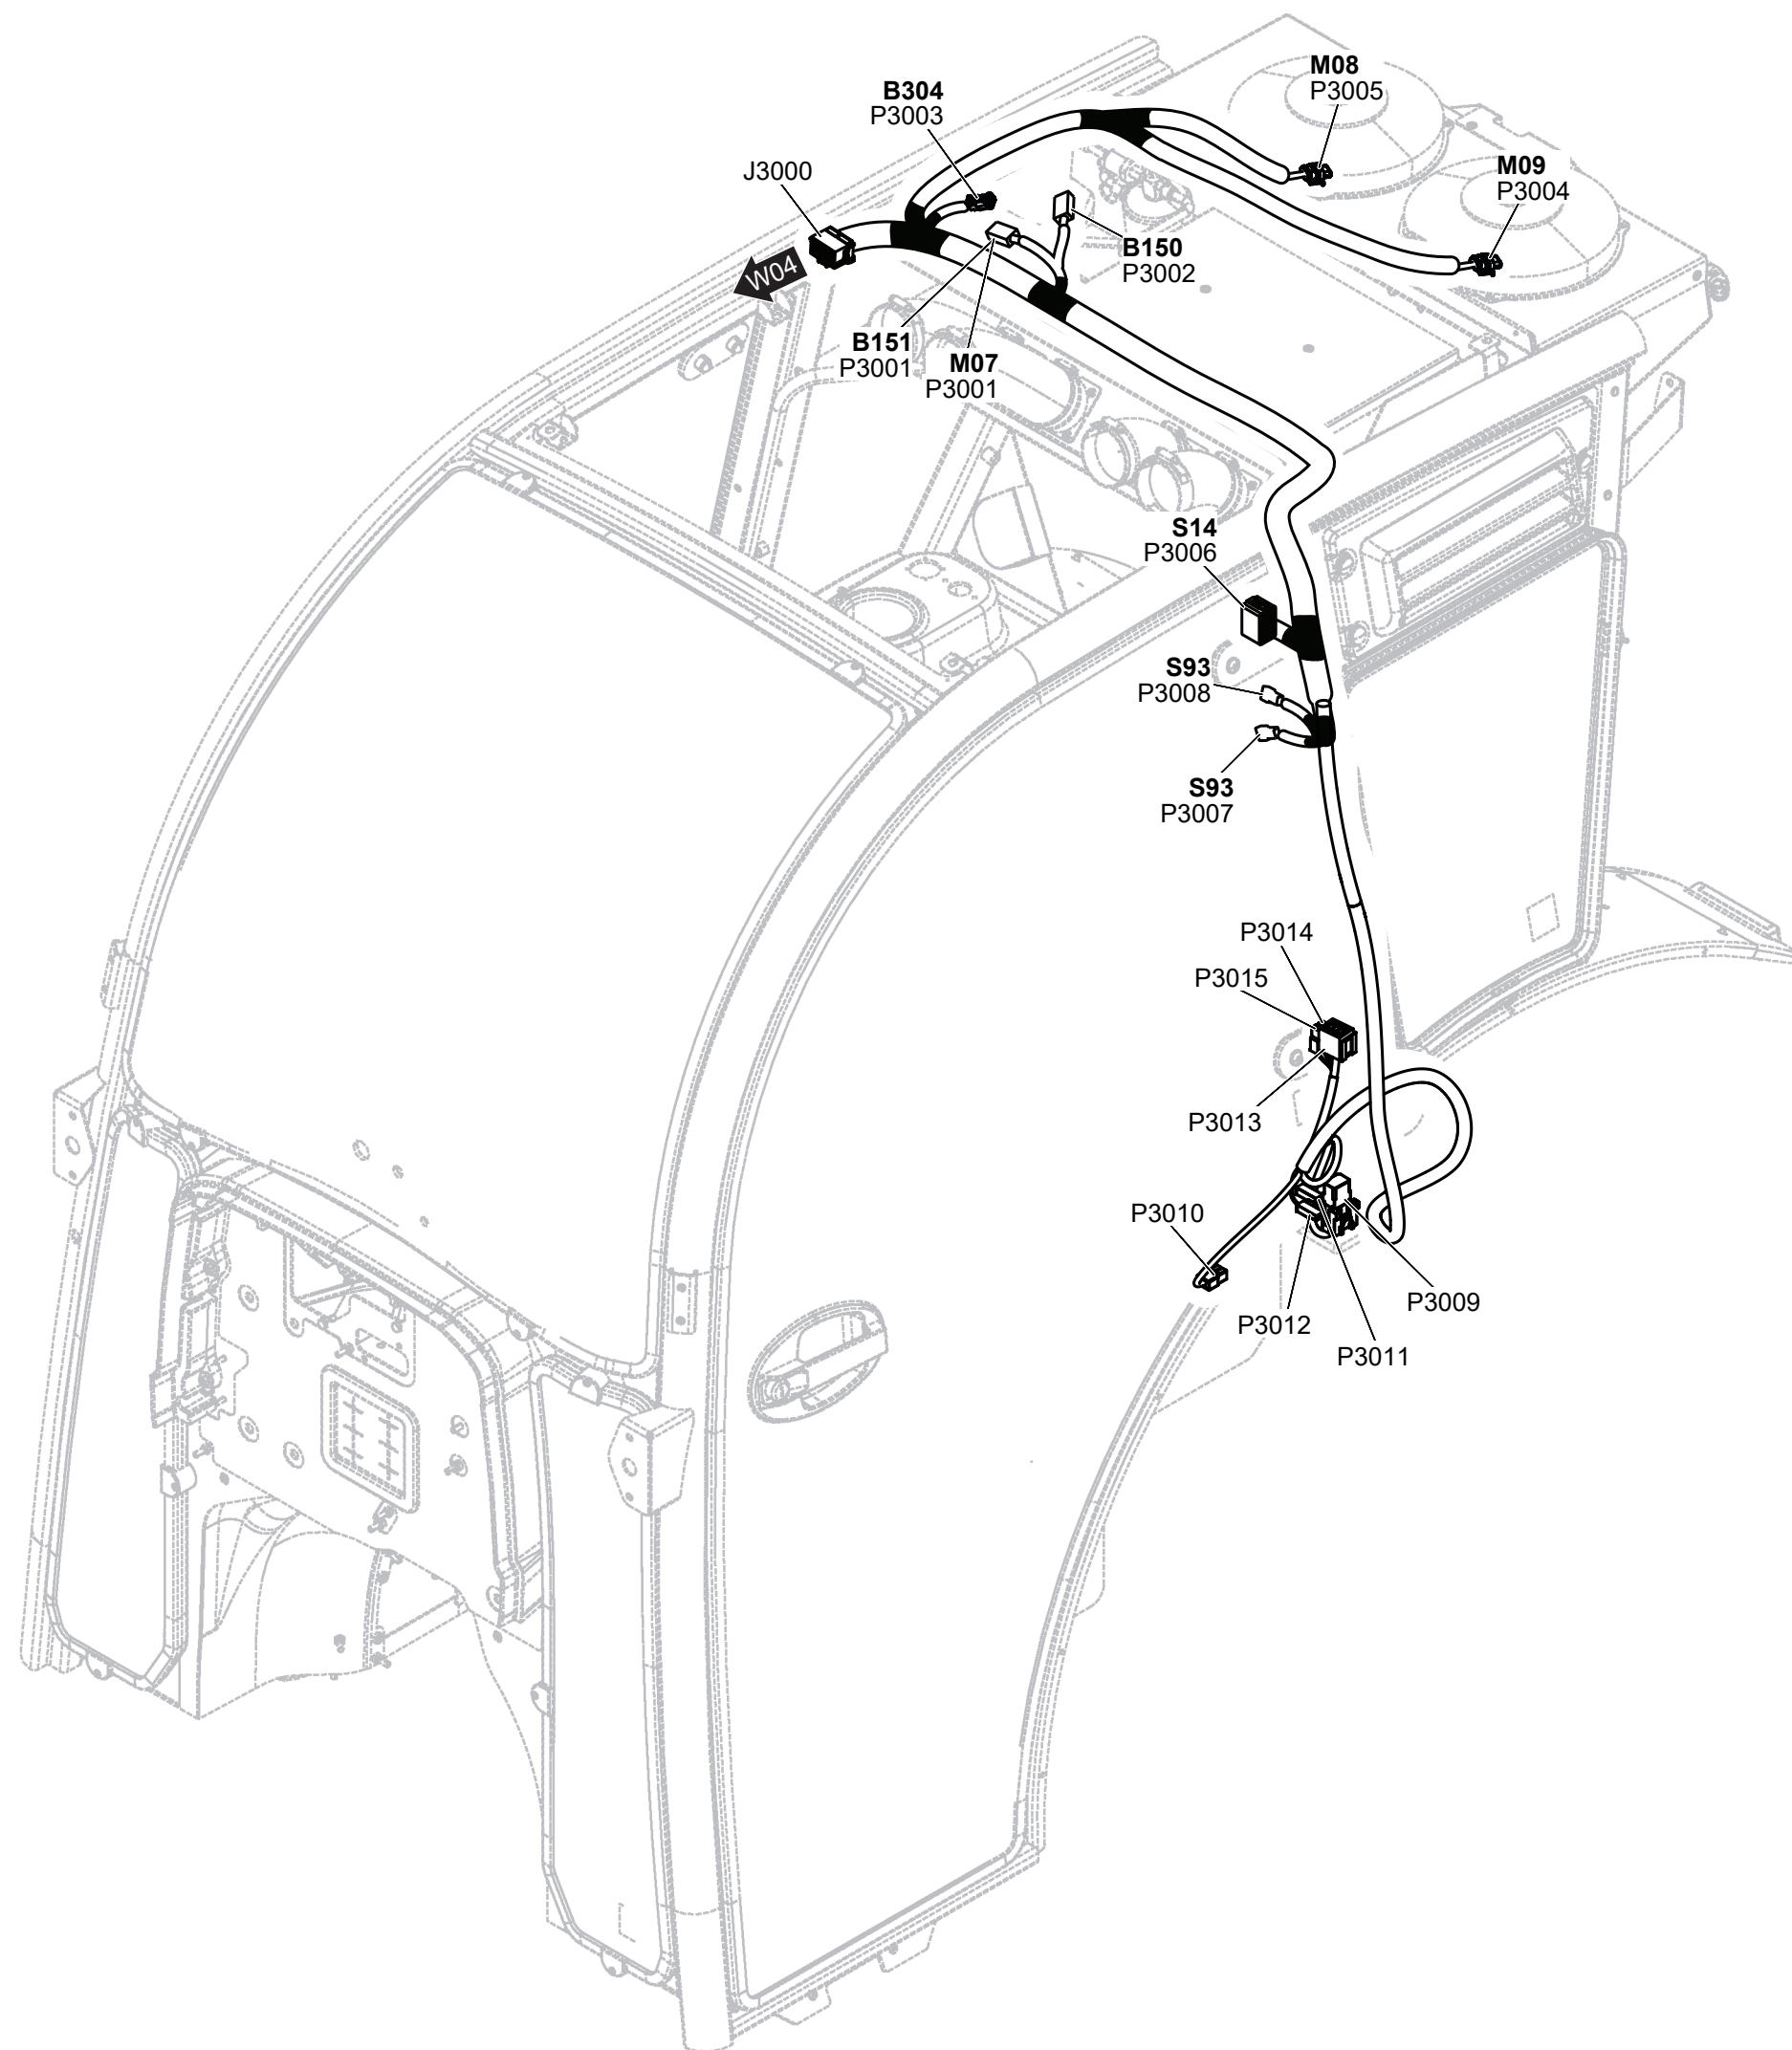


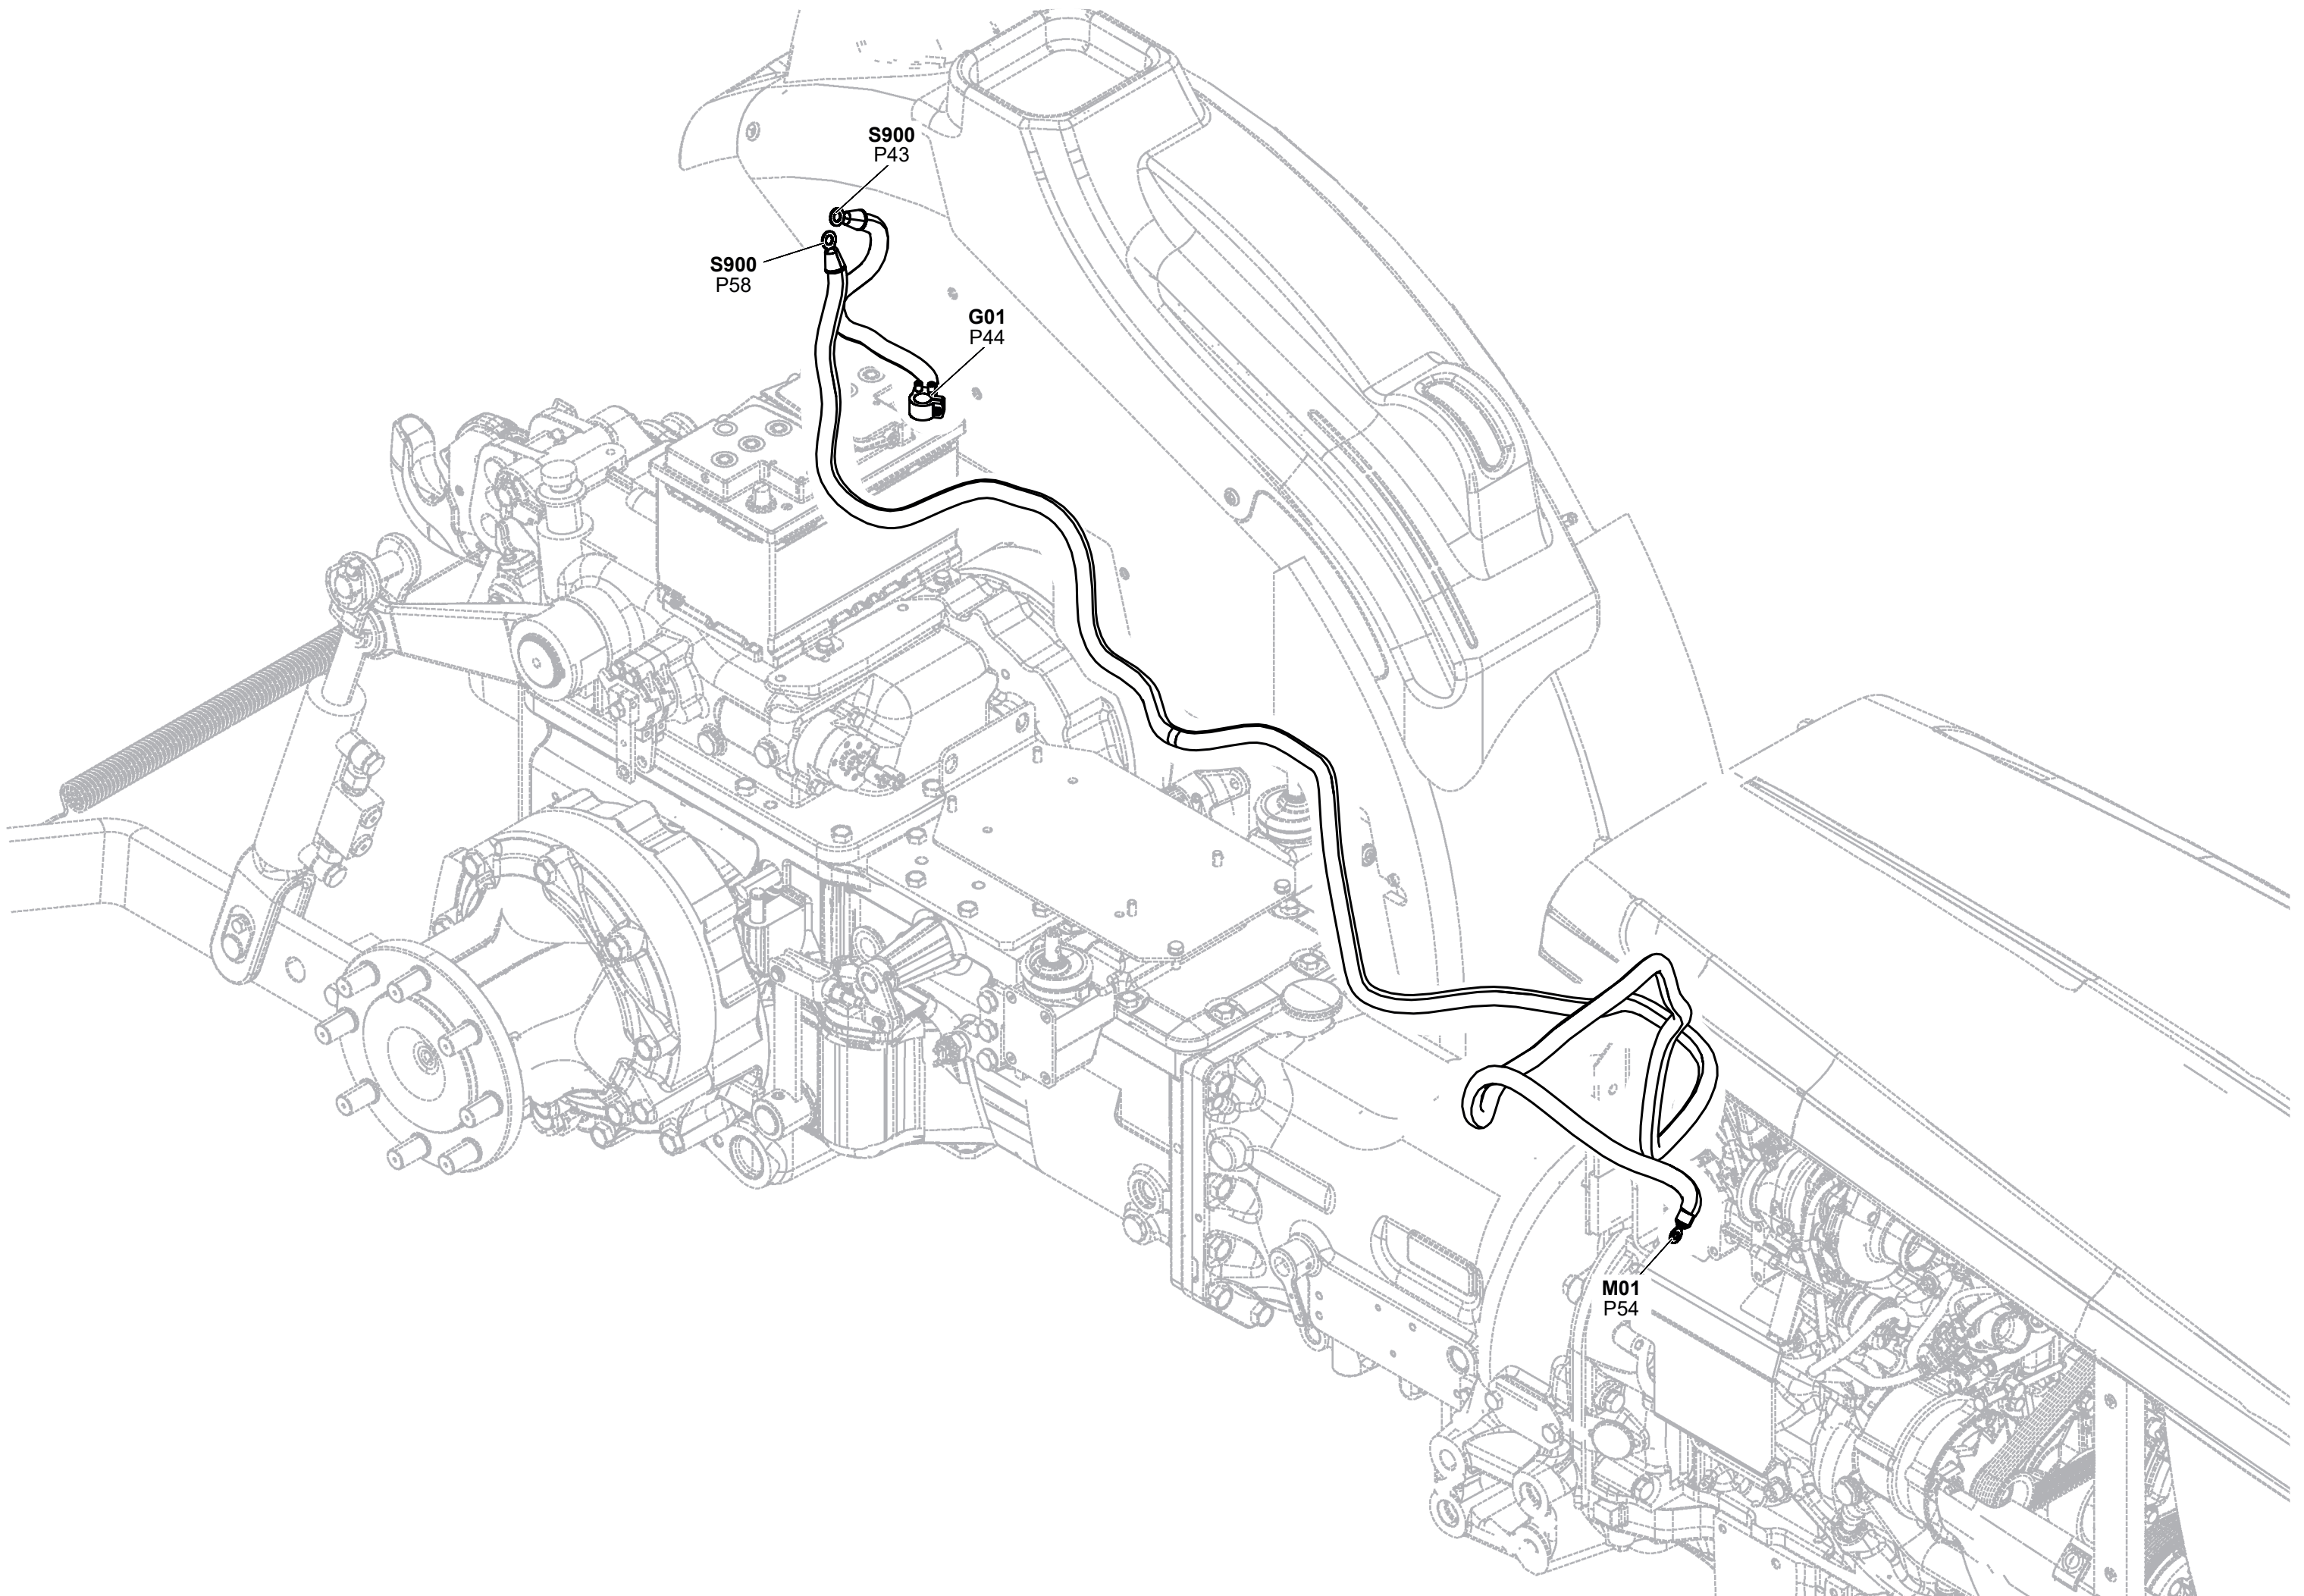

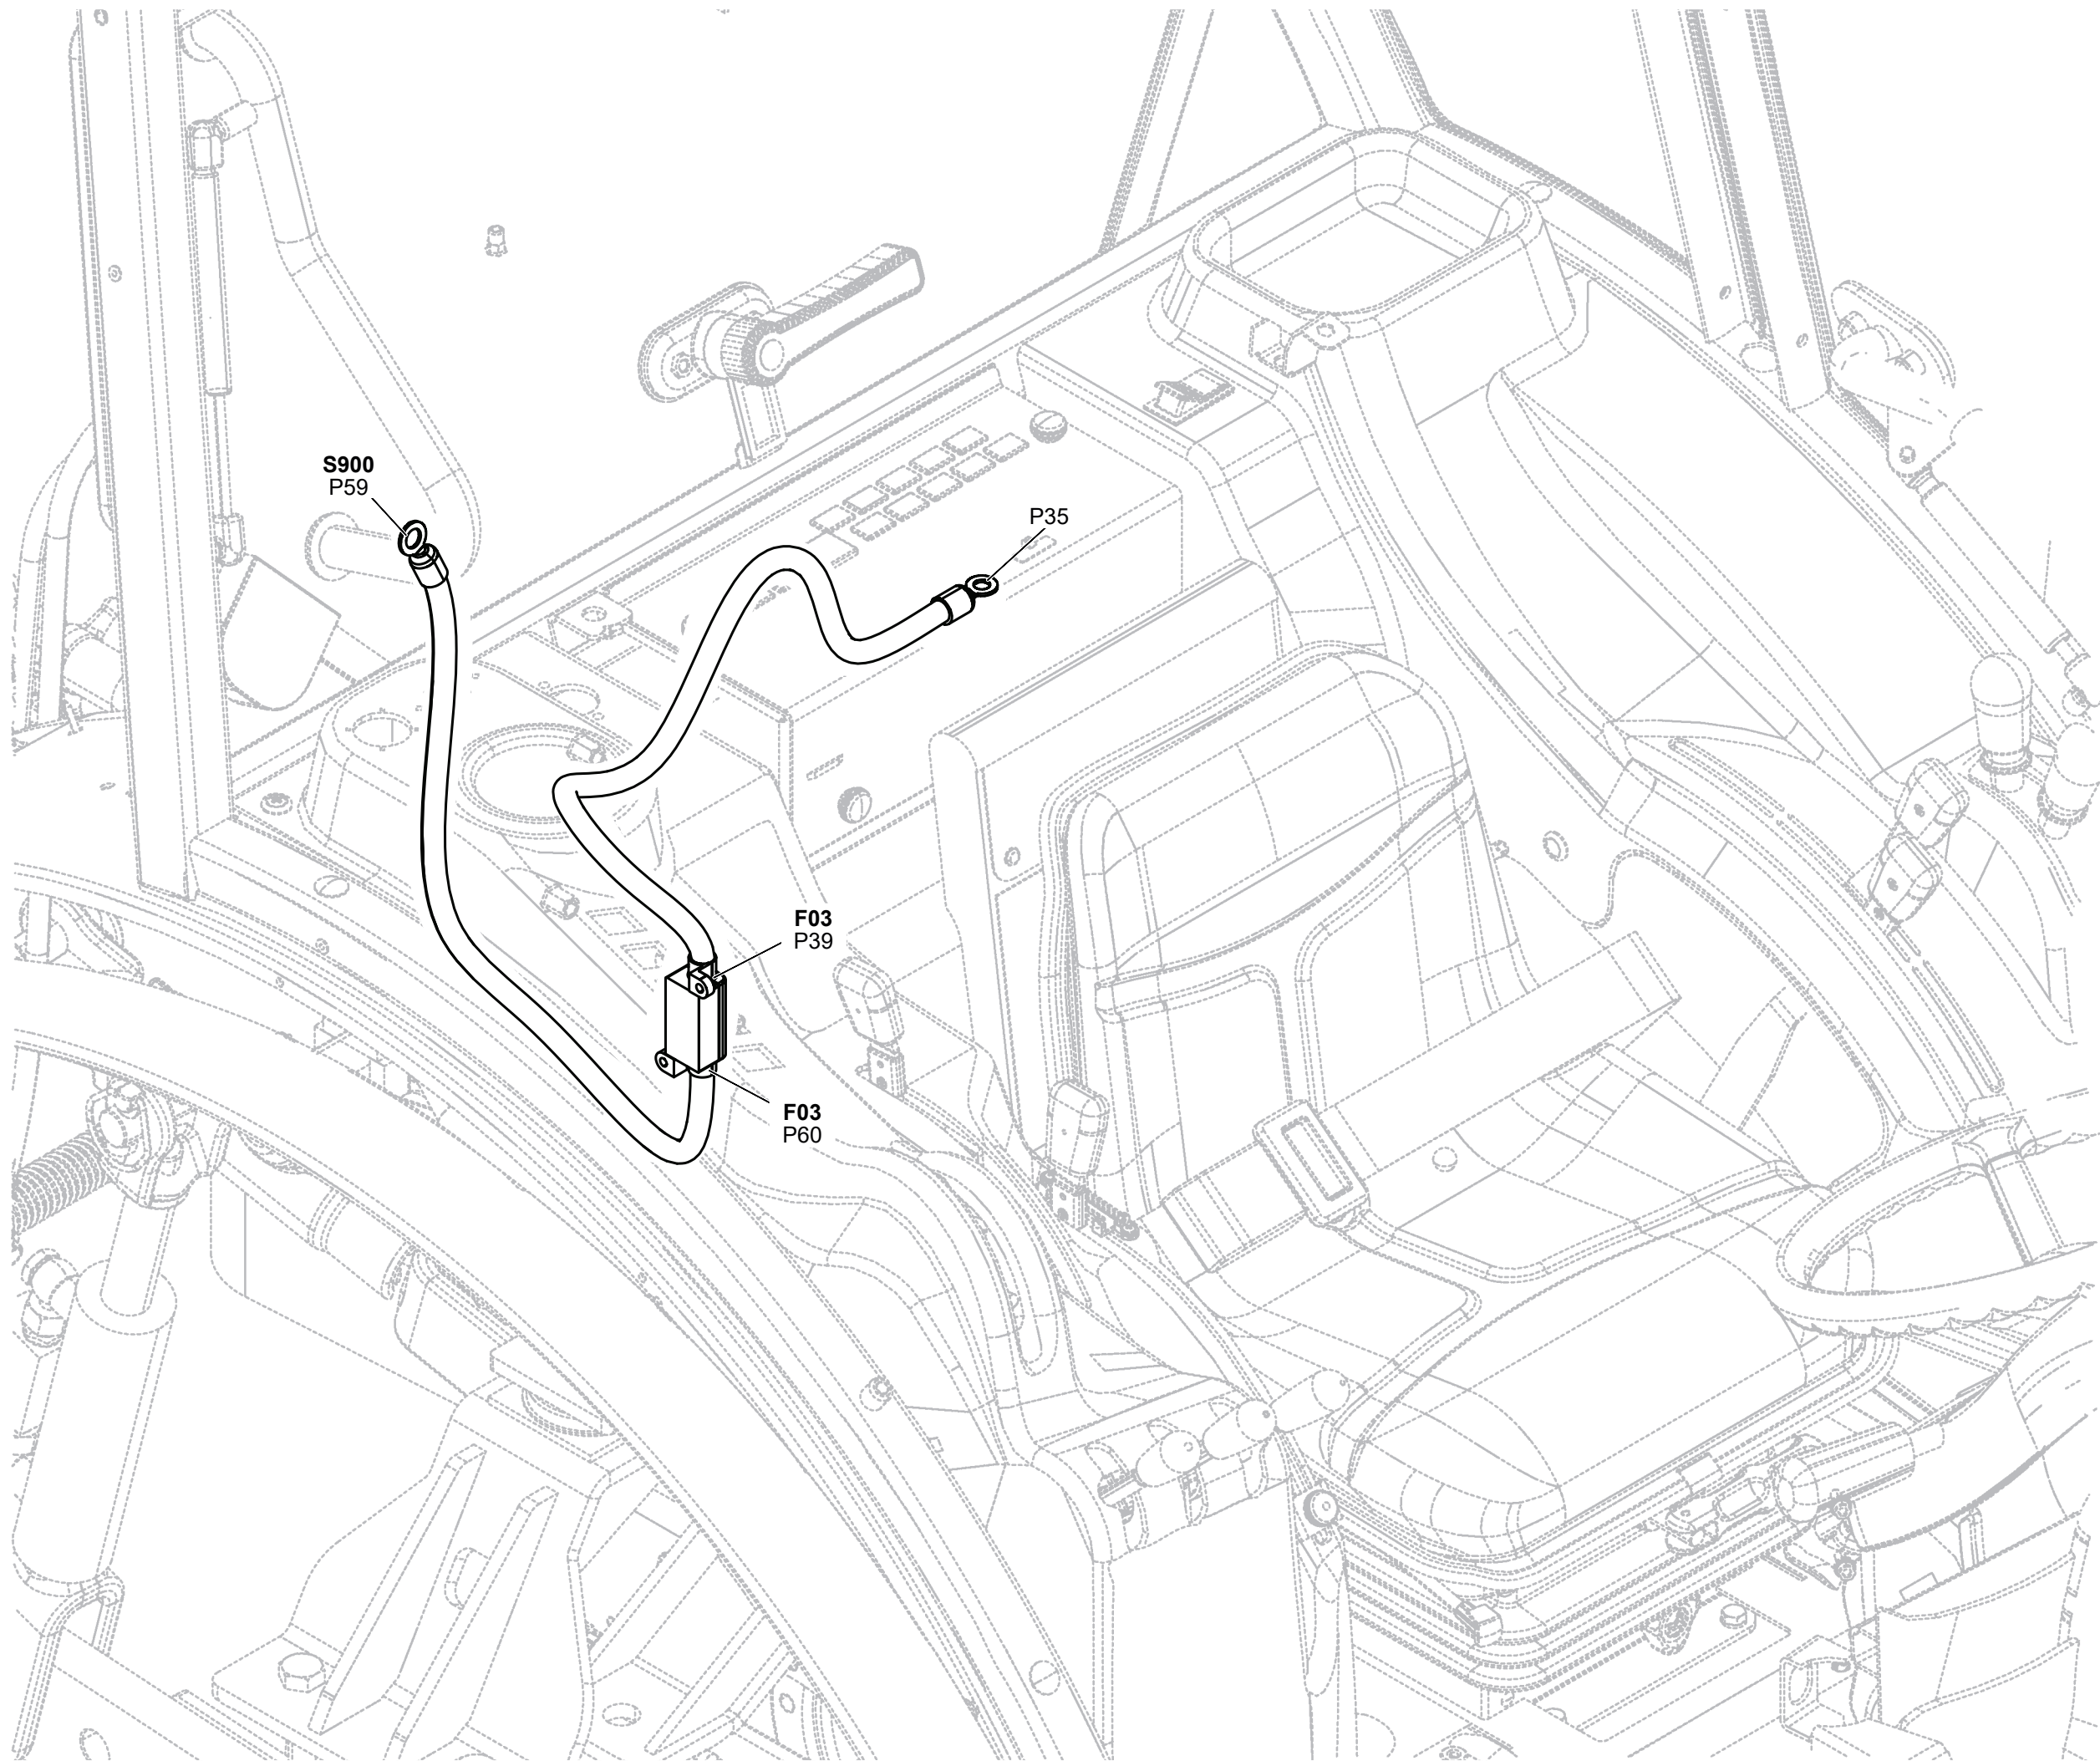


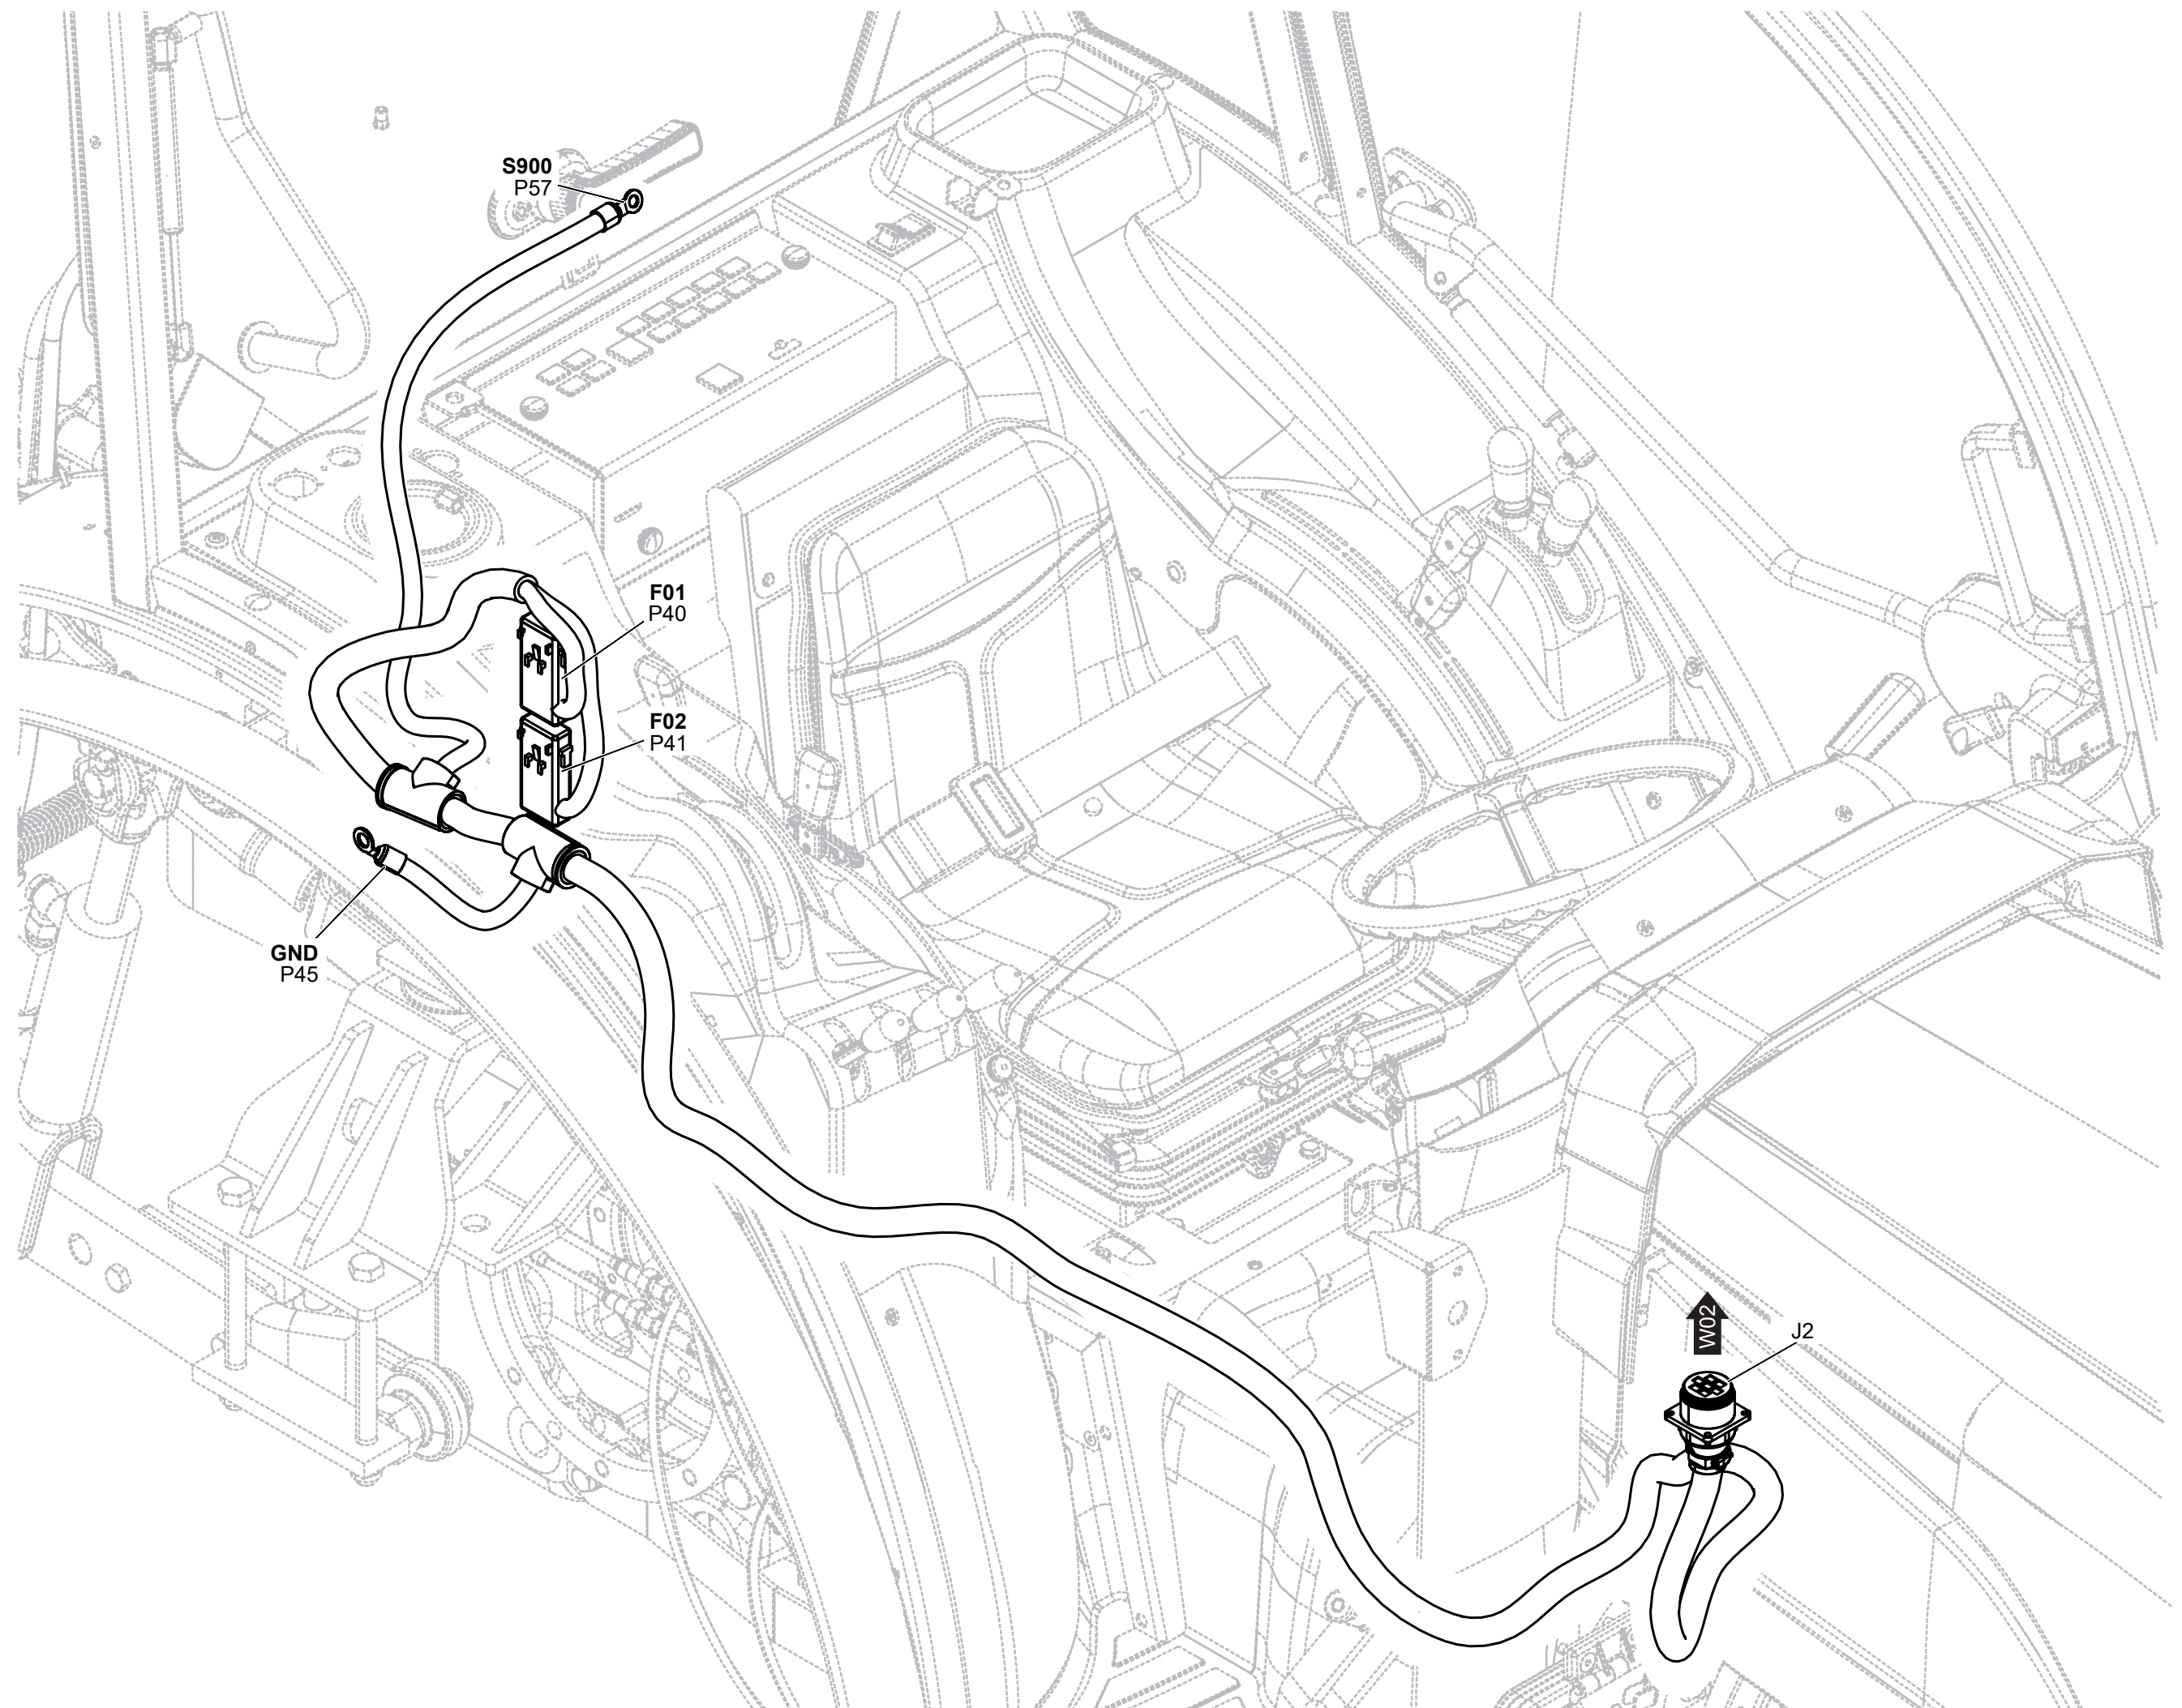


A330 - Quadro strumenti

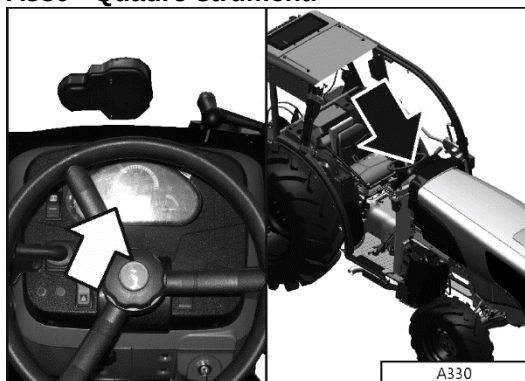


A500 - Centralina motore

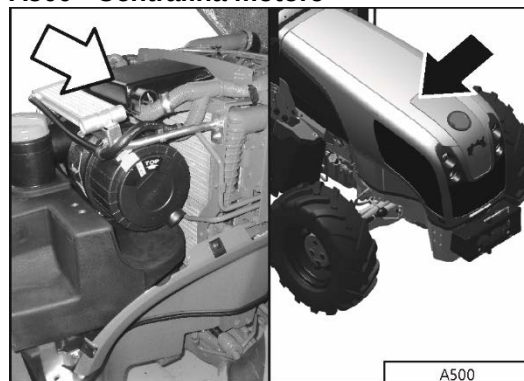


A510 - Centralina candele

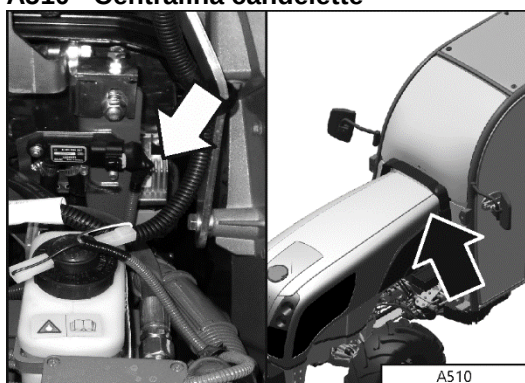


B02 - Pressostato intasamento filtro aria

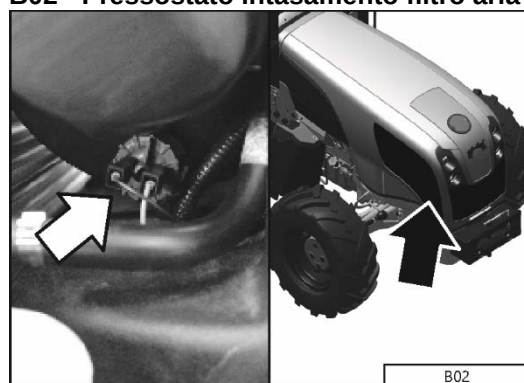


B03 - Sensore livello carburante

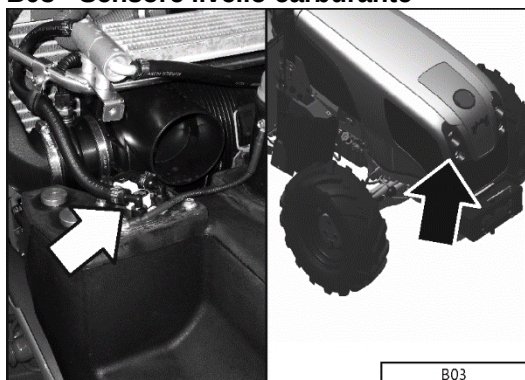 


B05 - Interruttore freno a mano

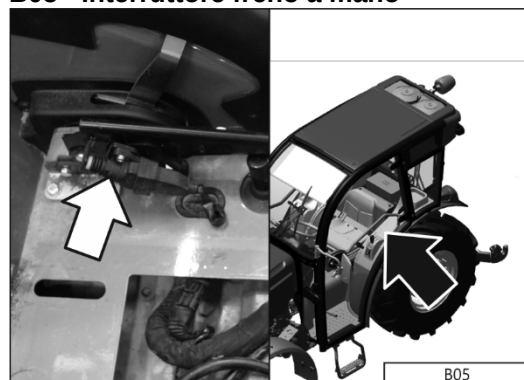 


B06 - Sensore velocità veicolo

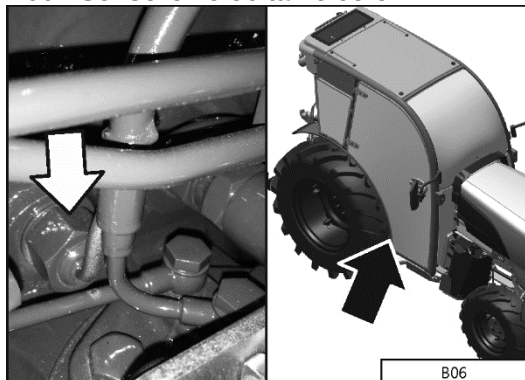


B07A - 540E/1000 PTO speed selector switch

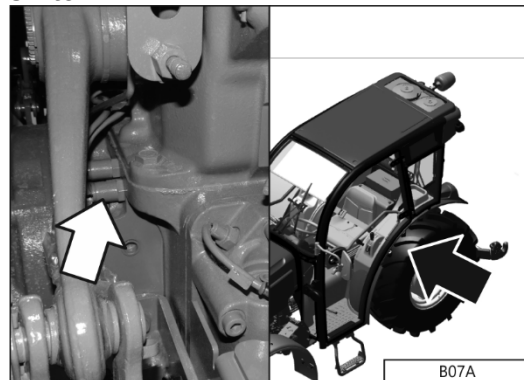


B07B - Interruttore velocità PTO 540

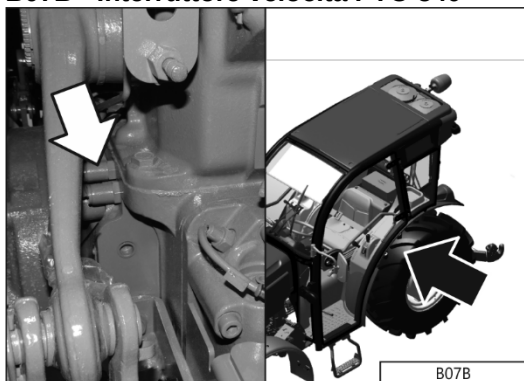 


B08 - Interruttore PTO meccanica

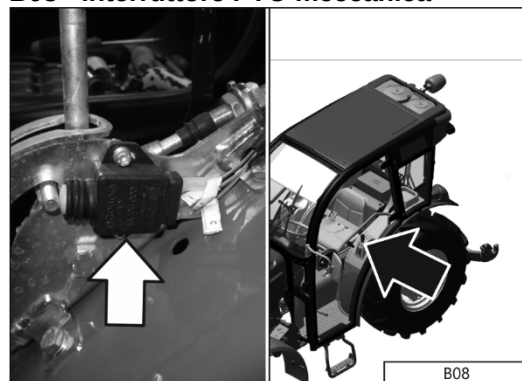 

 
B31 - Pressostato circuito freno rimorchio

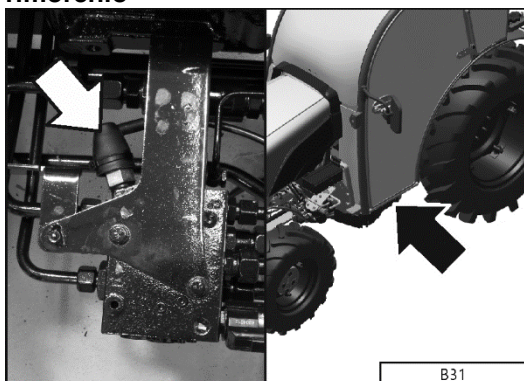


B36 - Interruttore NEUTRO trasmissione

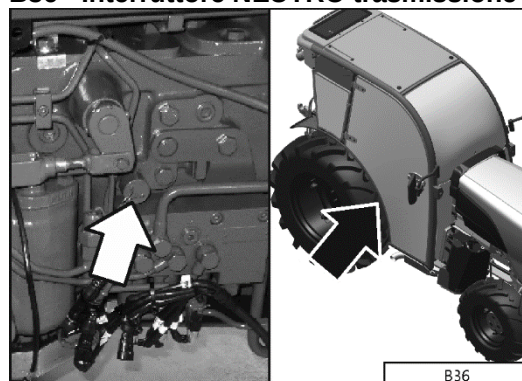 


B69 - Interruttore livello olio freni

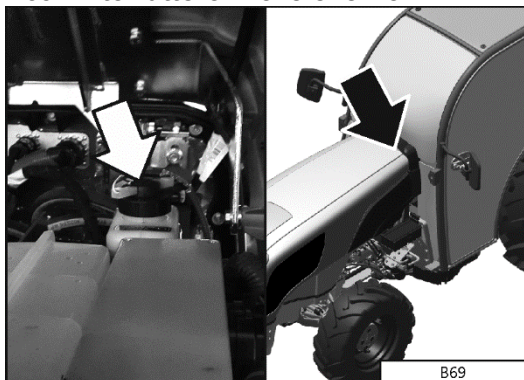 

 
B112L - Interruttore pedale freno sinistro

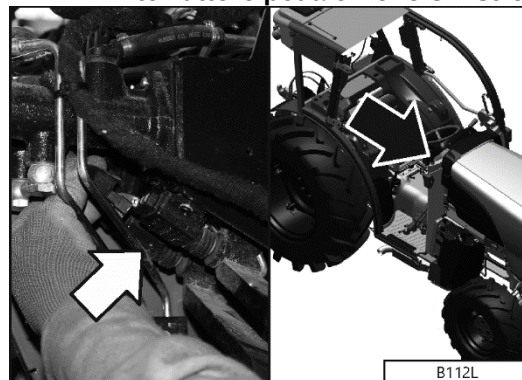

 
B112R - Interruttore pedale freno destro

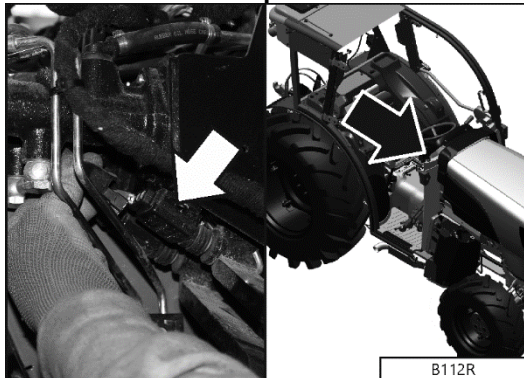


B150 - A/C temperature sensor

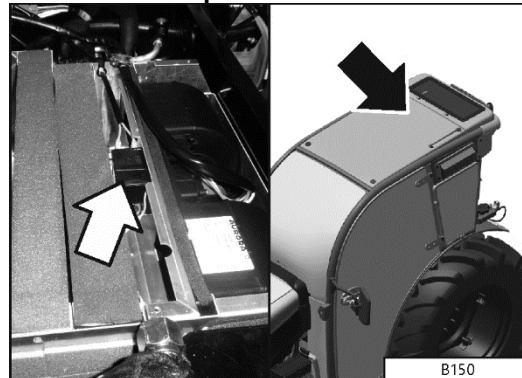 


B151 - Blower speed resistor

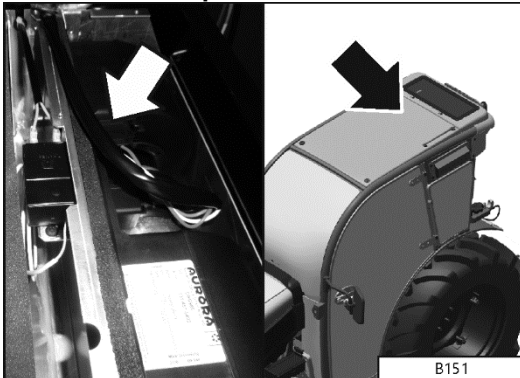


B304 - A/C pressure switch

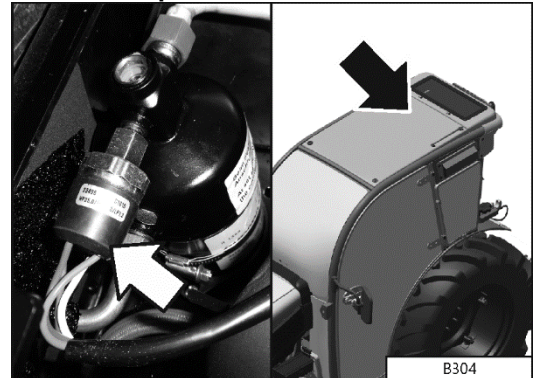 


B350 - Pressostato circuito PTO

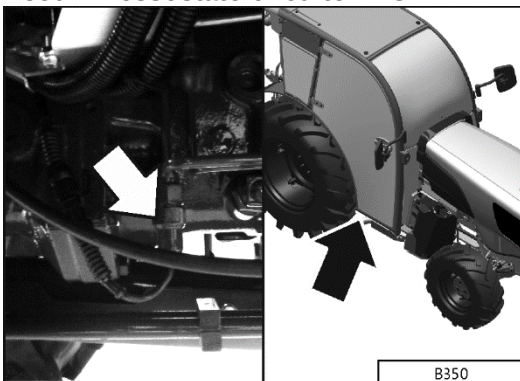

 
B501 - Sensore quantità di ossigeno (Lambda)

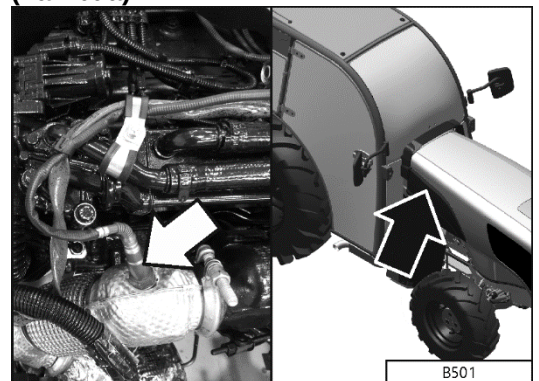


B509 - Sensore temperatura aria

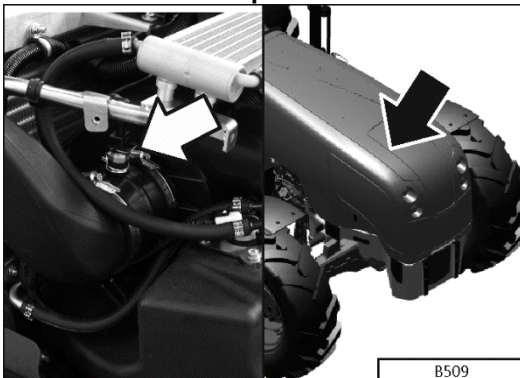

 
B510 - Sensore presenza acqua nel carburante

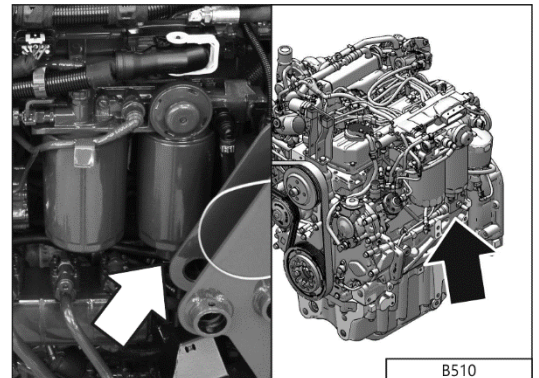


B511 - Sensore differenziale di pressione DPF

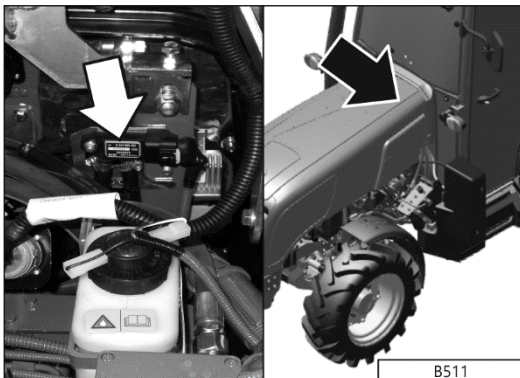

 
B512 - Sensore 1 temperatura gas di scarico

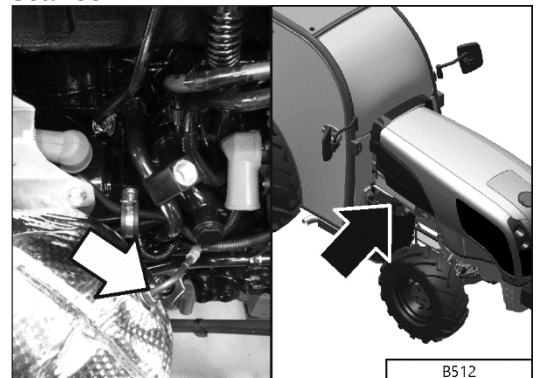


B513 - Sensore 2 temperatura gas di scarico

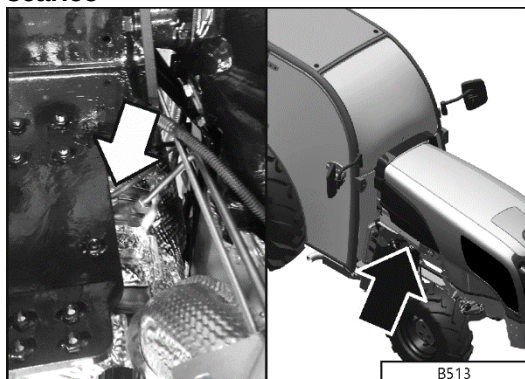


B988 - Pressostato circuito doppia trazione

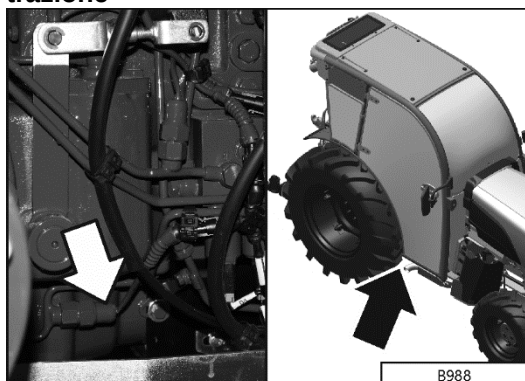


B999 - Pedale acceleratore

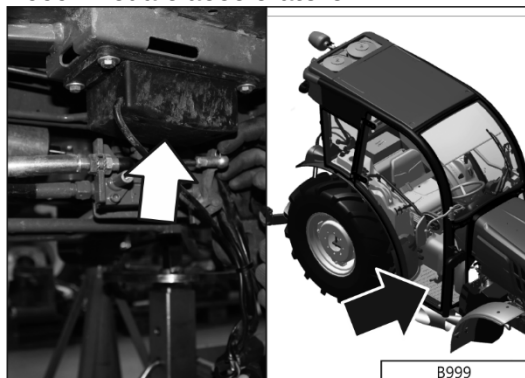


E01B - Abbagliante destro

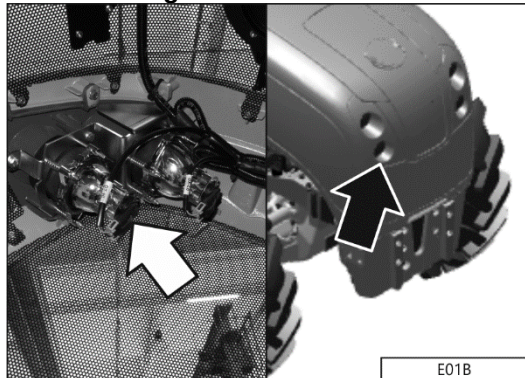


B987 - Pressostato circuito blocco differenziale

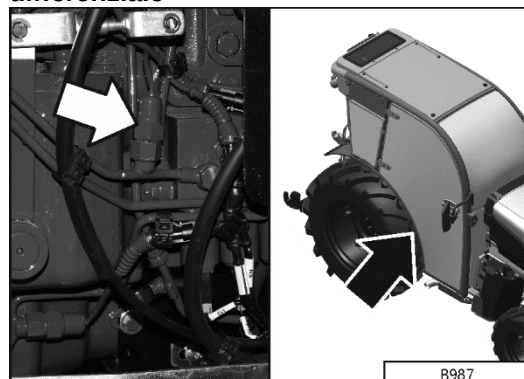


B998 - Acceleratore manuale

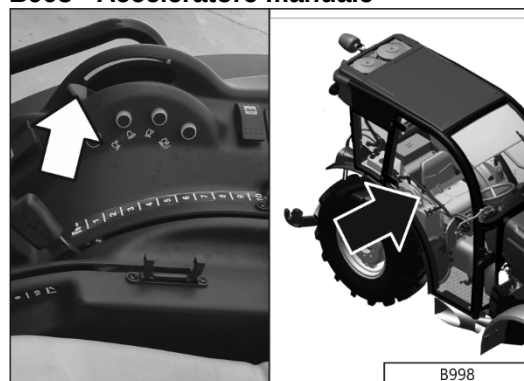


E01A - Anabbagliante destro

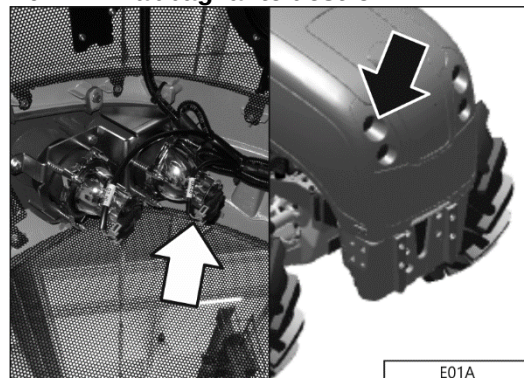


E02A - Anabbagliante destro

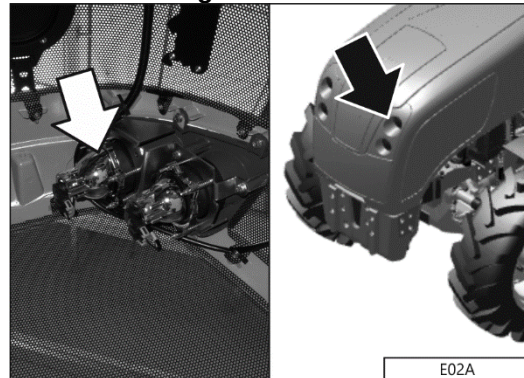


E02B - Abbagliante destro

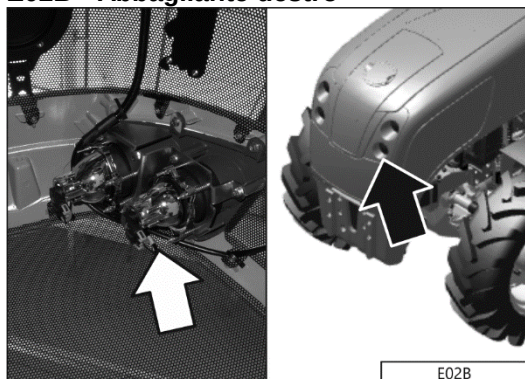


E03 - Luce corrimano destro

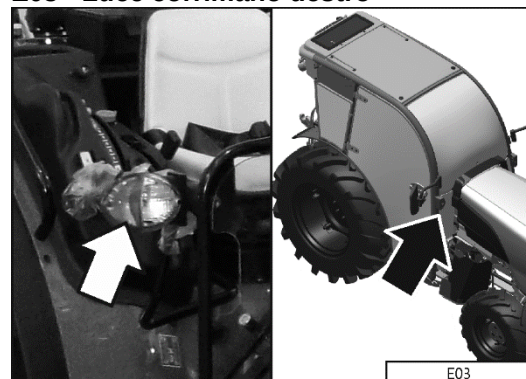 


E04 - Luce corrimano sinistro

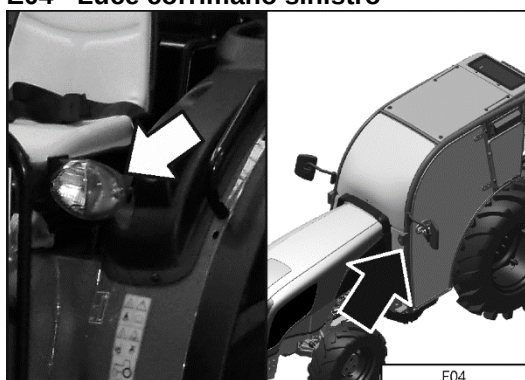


E05 - Accendisigari

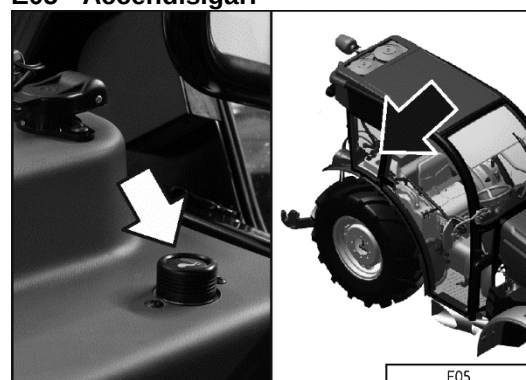 

 
E11.1 - Luce di lavoro posteriore sinistra su tetto

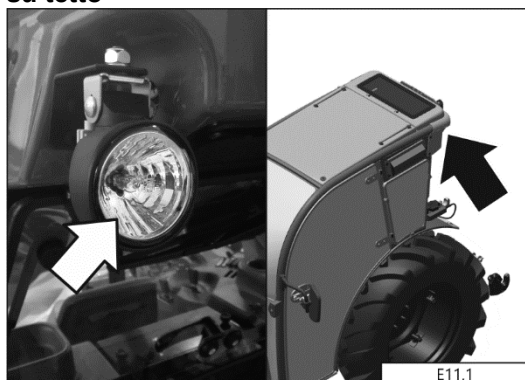

 
E11.2 - Luce di lavoro posteriore destra su tetto

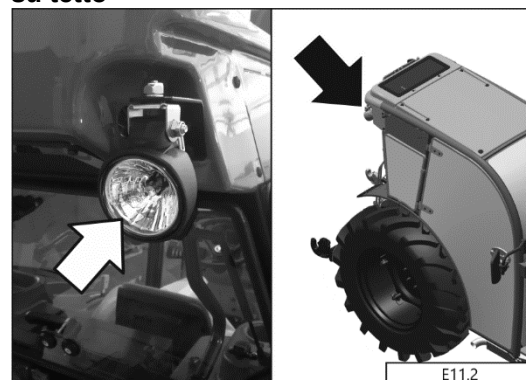


E12 - Luce di cortesia

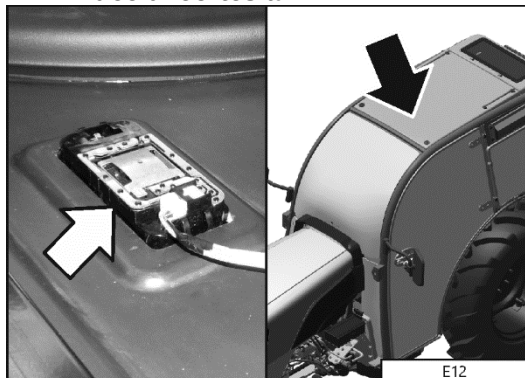


E13 - Fanale posteriore sinistro

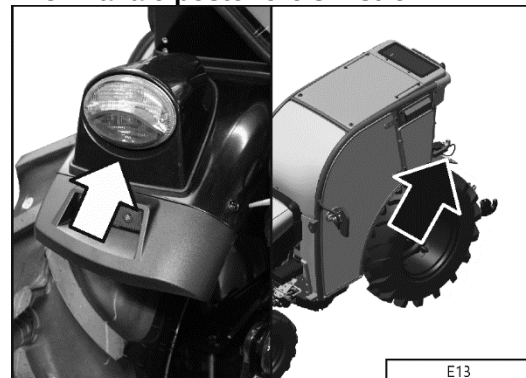 


E14 - Fanale posteriore destro

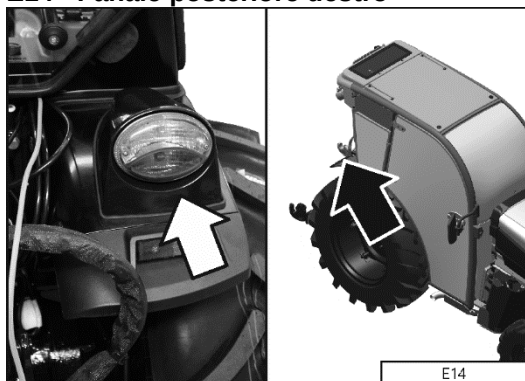 


E21 - Luce targa

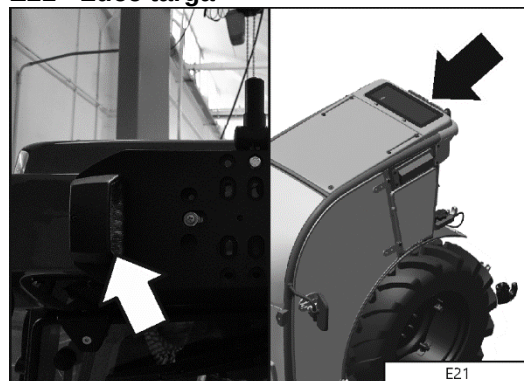 


E27 - Girofaro

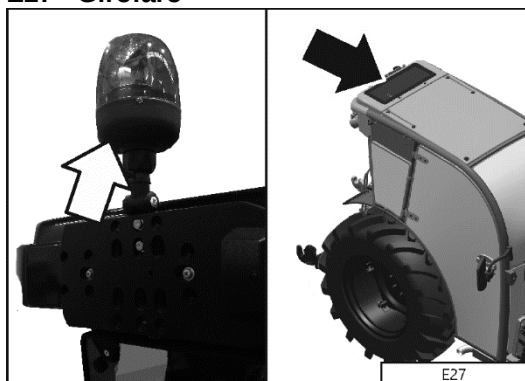 


E999 - Luce di cortesia

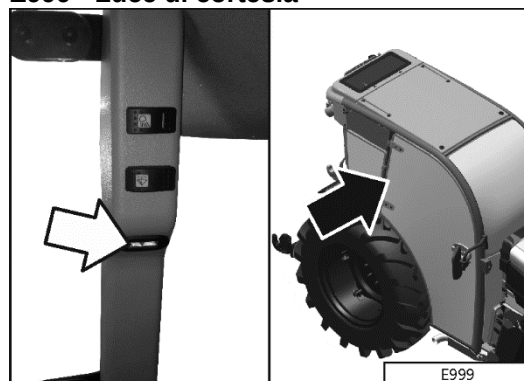 


F01 - Maxi fusibile candele

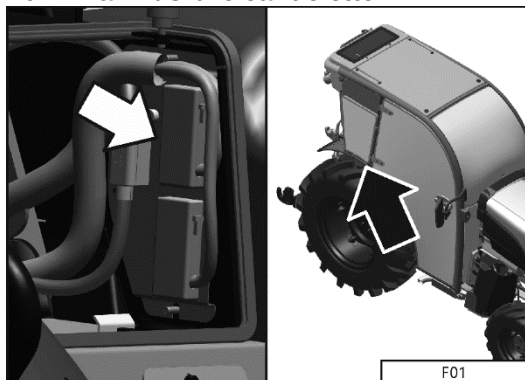 


F02 - Fusibile centralina motore

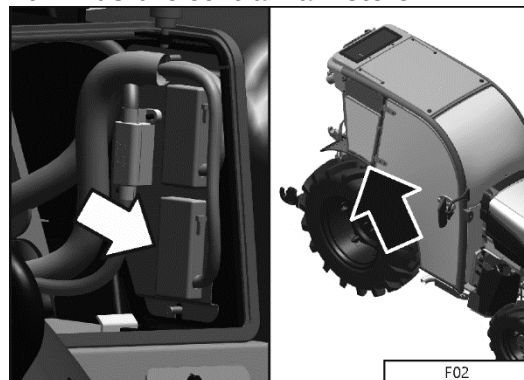 


F03 - Fusibile principale

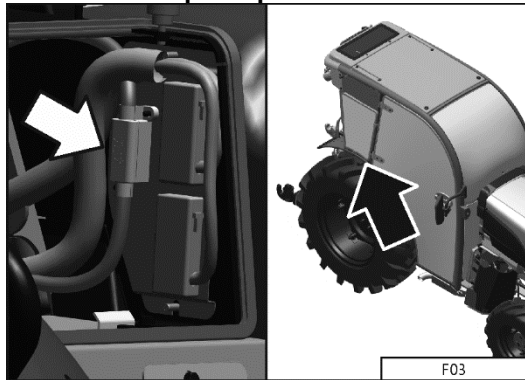 


G01 - Batteria

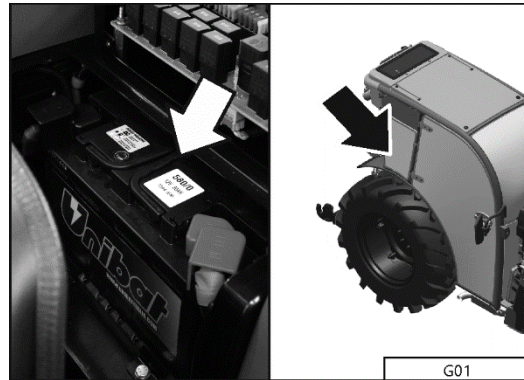 


G02 - Alternatore

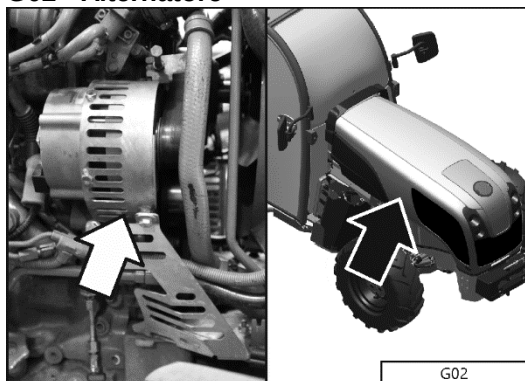 


H01 - Claxon

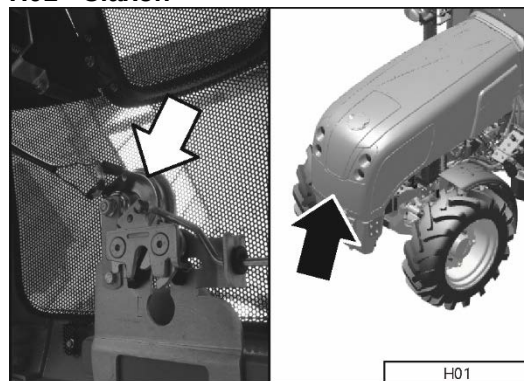 


H80 - Interruttore freno rimorchio

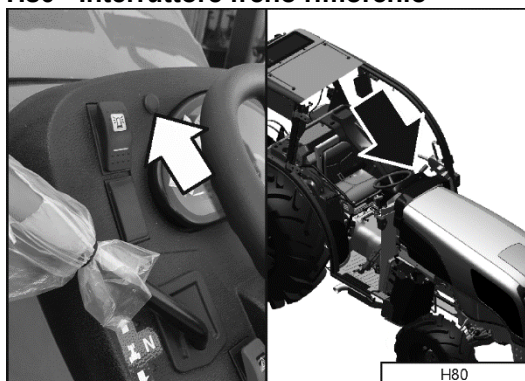 

 
K08 - Temporizzatore indicatori di direzione

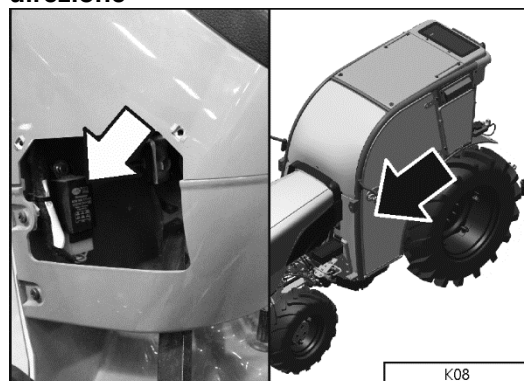


M01 - Motorino di avviamento

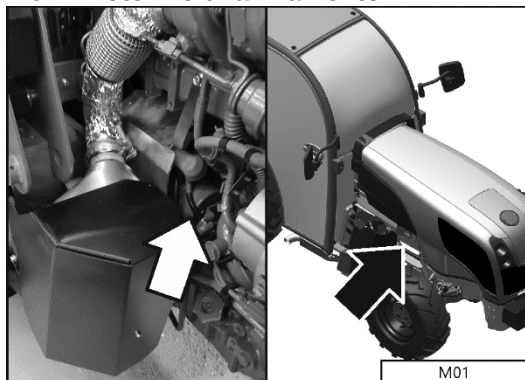 


M02 - Frizione innesto compressore A/C

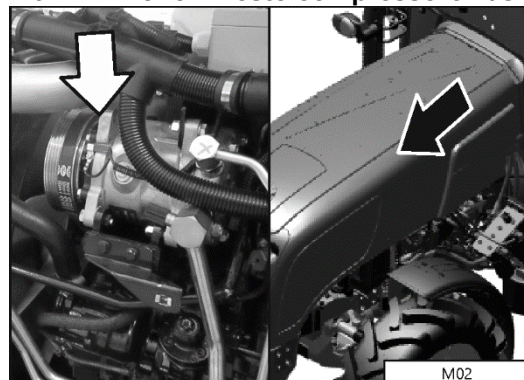 


M03 - Motorino tergicristallo anteriore

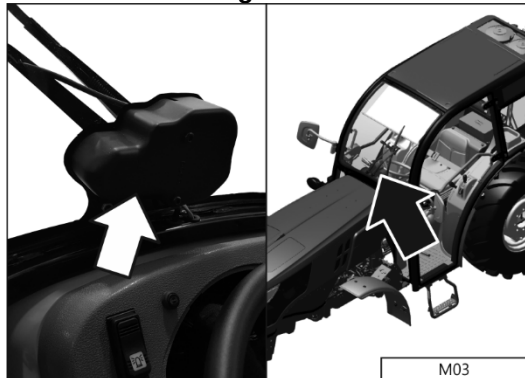 

 
M04 - Motorino tergicristallo posteriore

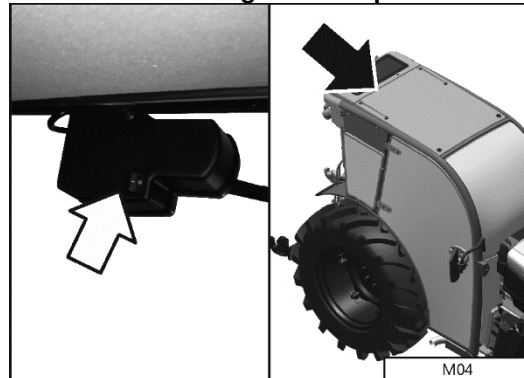


M05 - Pompa tergicristalli

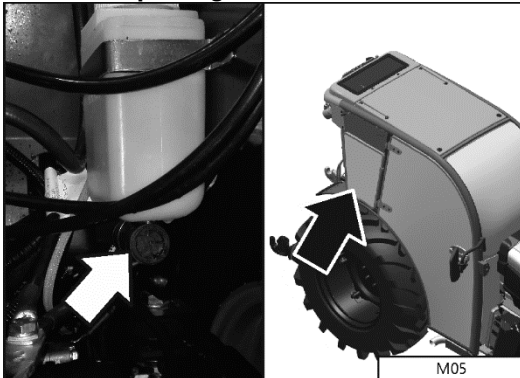


M06 - Sedile pneumatico

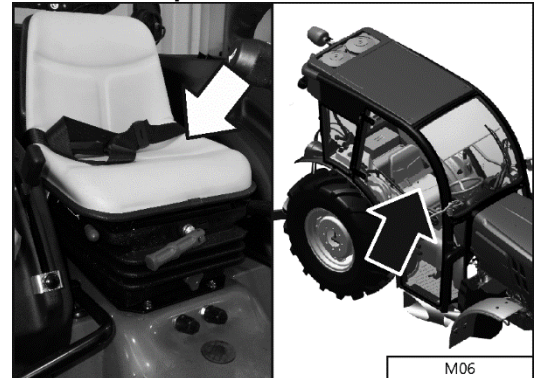


M07 - A/C blower

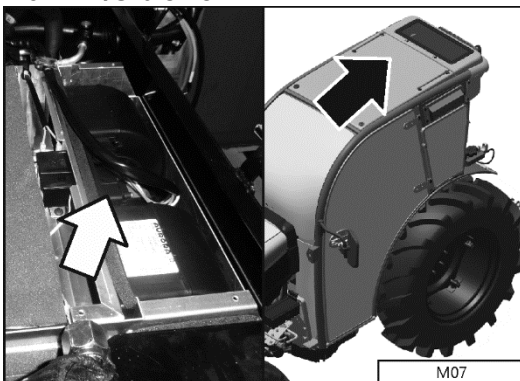


M08 - Ventola destra

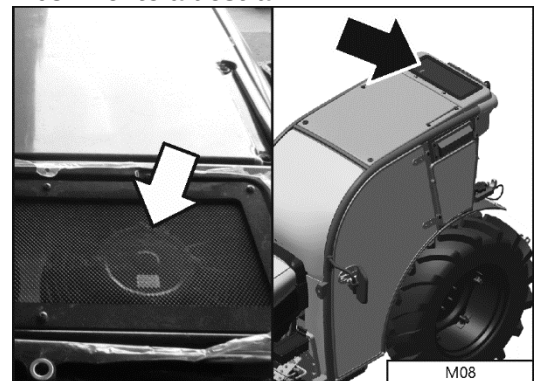


M09 - Ventola sinistra

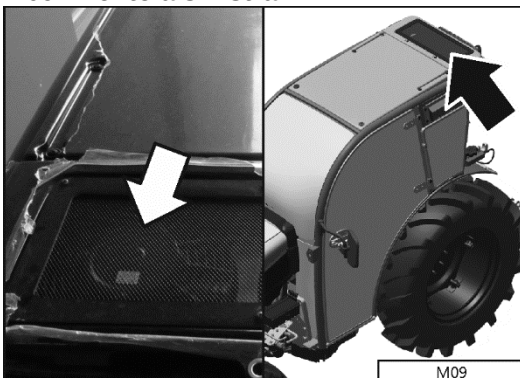 


R505 - Riscaldatore filtro carburante

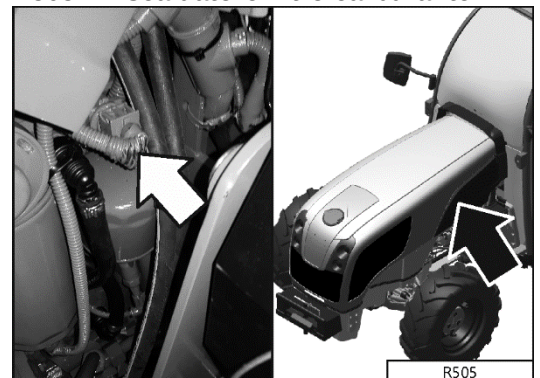 


S01 - Interruttore di accensione

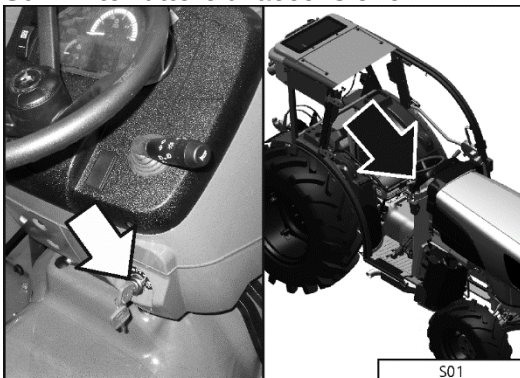


S09 - Leva indicatori di direzione

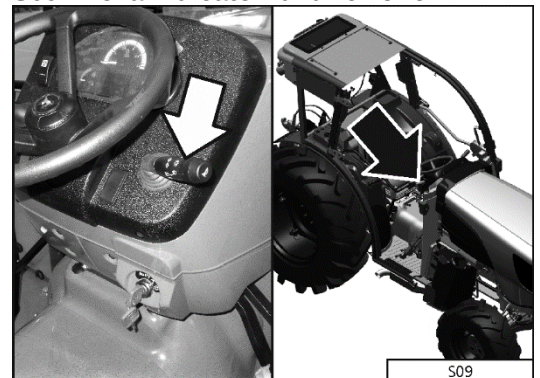


S14 - Interruttore ventola

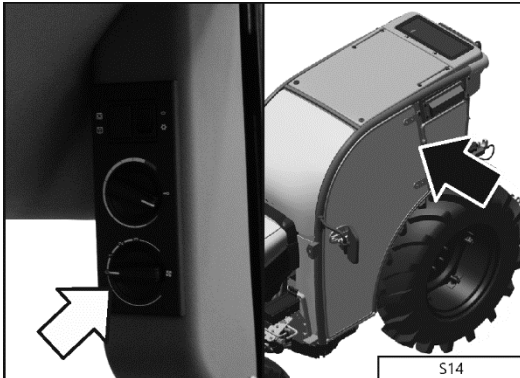 

 
S15 - Interruttore tergicristallo anteriore

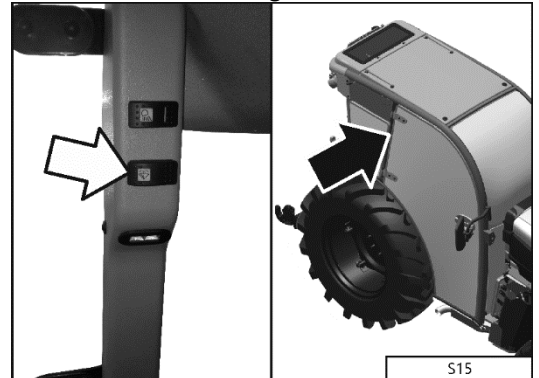


S21A - Interruttore PTO GROUND

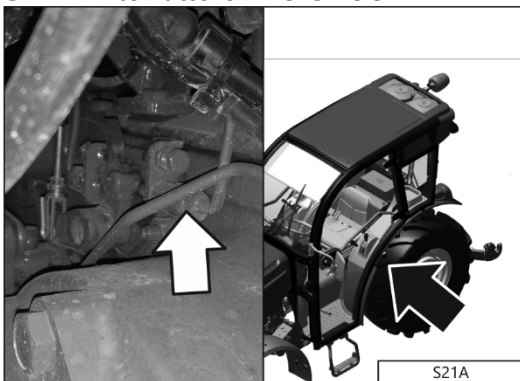 


S21B - Interruttore PTO DIRETTA

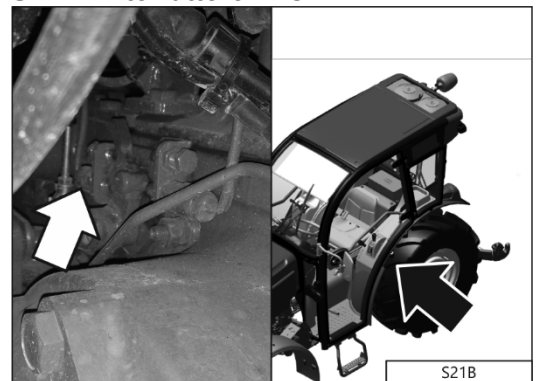 


S22 - Interruttore blocco differenziale

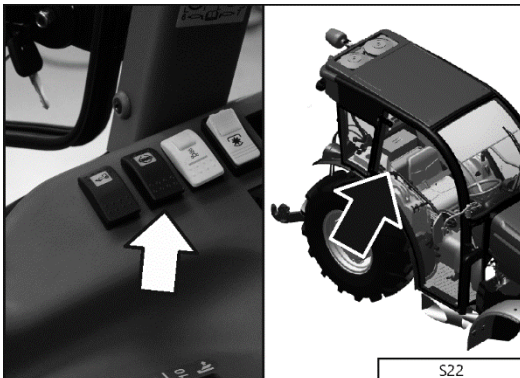 


S36 - Interruttore girofaro

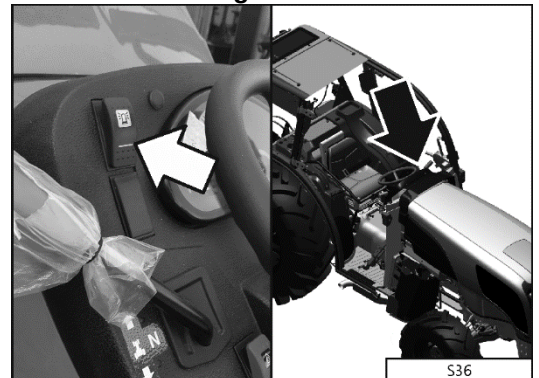 


S40 - Interruttore presenza operatore

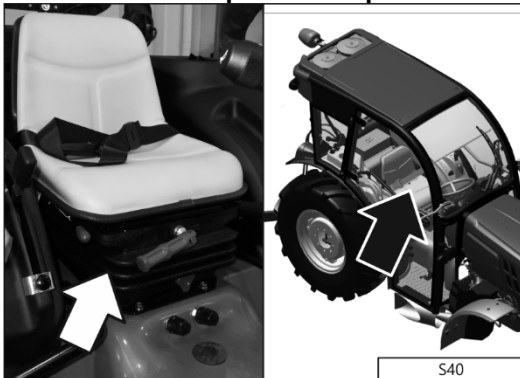 


S63 - Interruttore doppia trazione

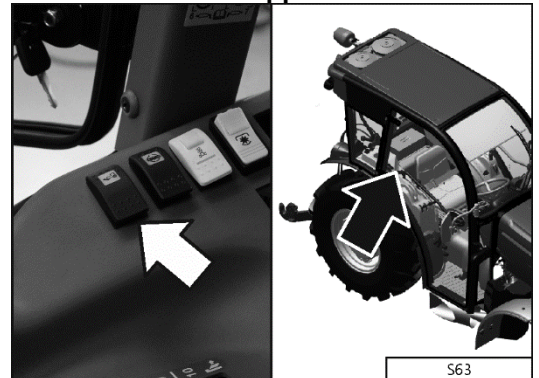 

 
S72 - Interruttore fine corsa pedale frizione

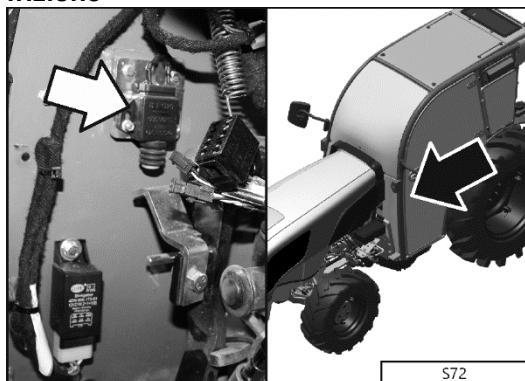

 
S93 - Interruttore riscaldamento e aria condizionata

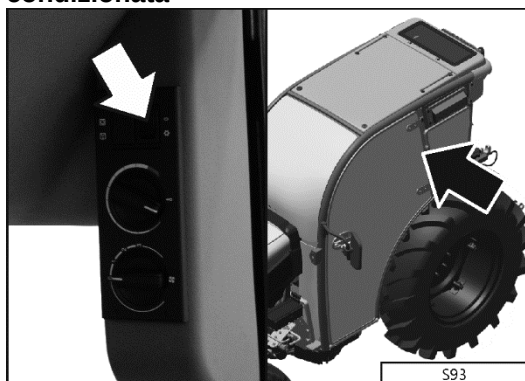

 
S350 - Interruttore PTO idraulica posteriore

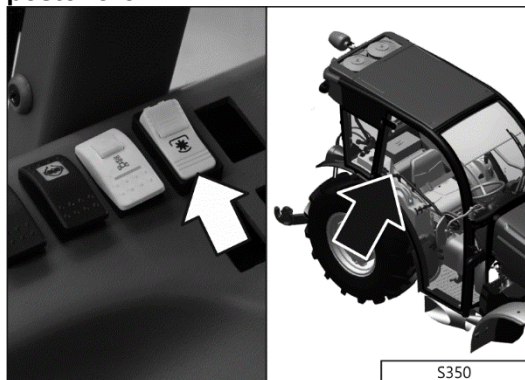


S990 - Pulsante MENU

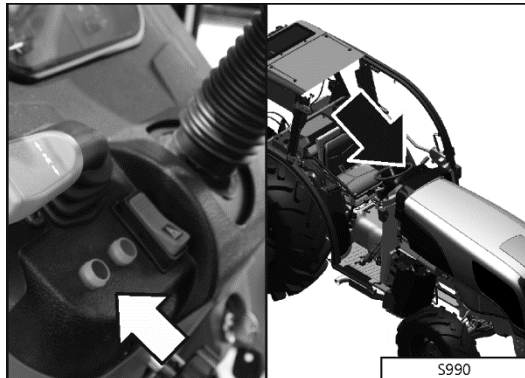 


S92 - Interruttore luci di lavoro

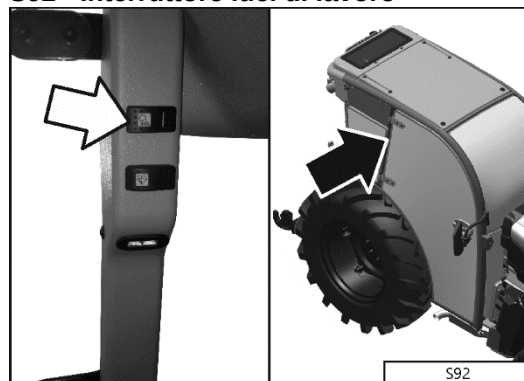 

 
S106 - Interruttore indicatori di emergenza

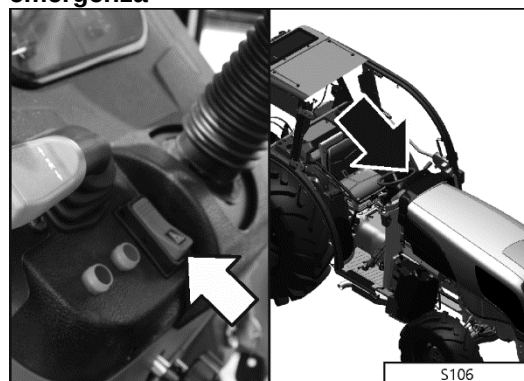


S900 - Interruttore stacca batteria

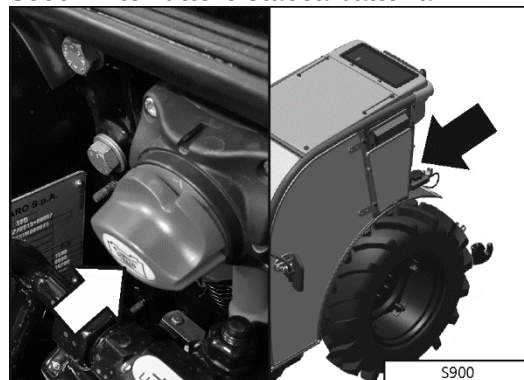 


S991 - Pulsante SELEZIONE

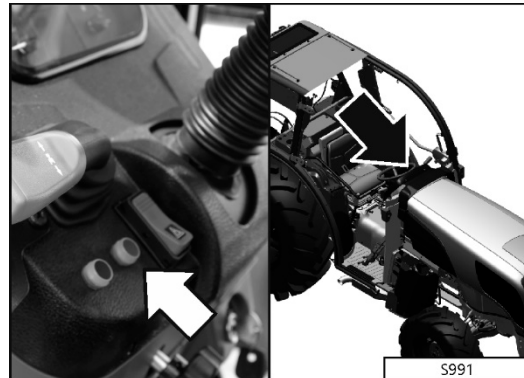 


S992A - Cruise control MEM1

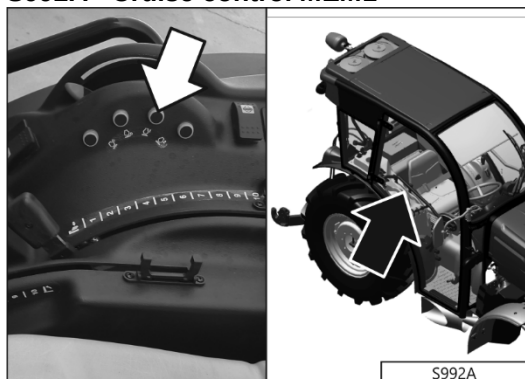 


S992B - Cruise control MEM2

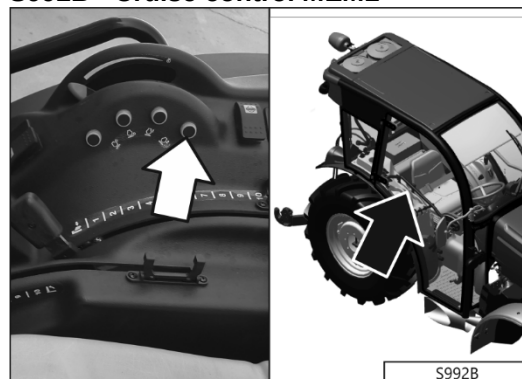 


S993 - Cruise control DW

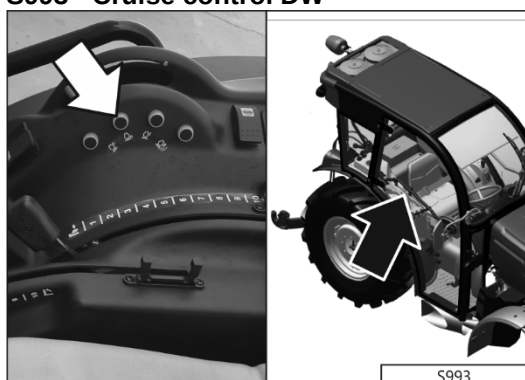 


S994 - Cruise control UP

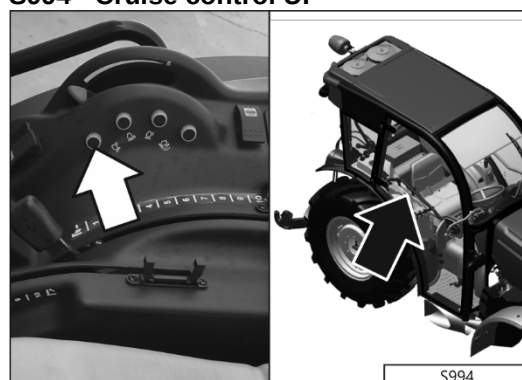 


S999 - Interruttore PTO anteriore

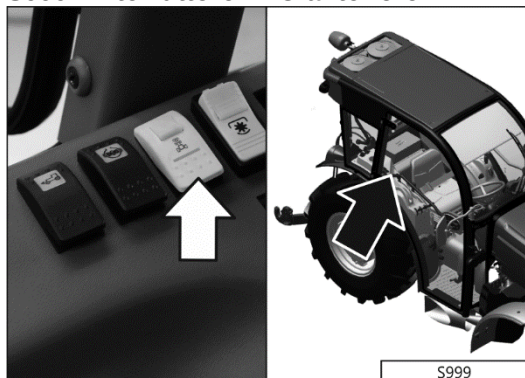 


X01 - Presa diagnostica

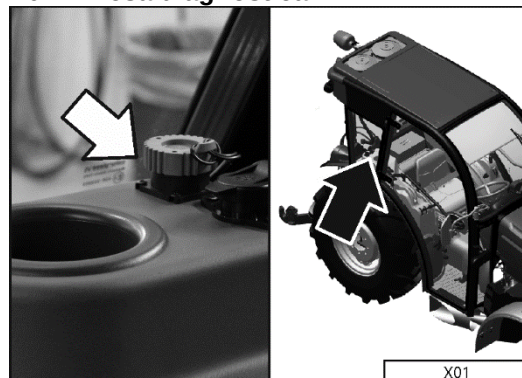 


X42 - Presa elettrica 3 poli

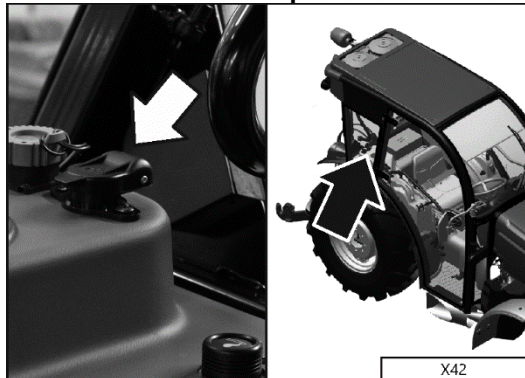 


Y03 - Elettrovalvola doppia trazione

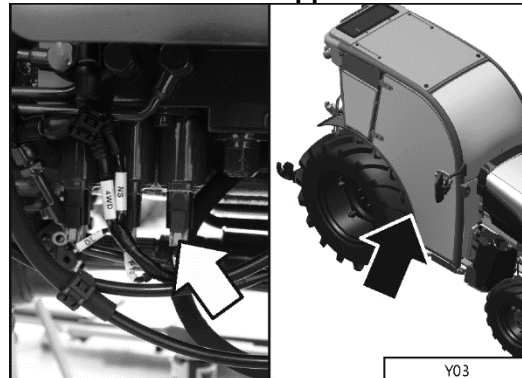 

 
Y05 - Elettrovalvola blocco differenziale

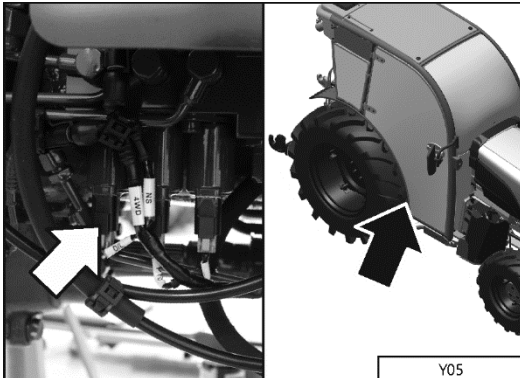

Y31 - Elettrovalvola freno rimorchio

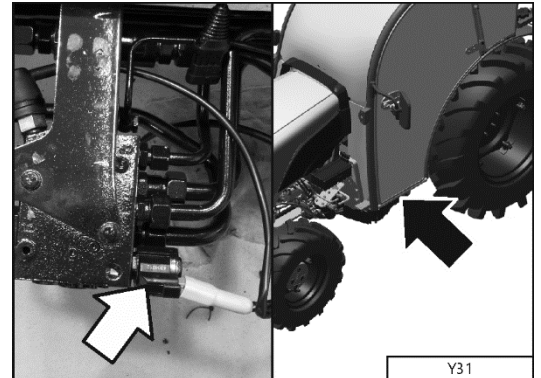 

Y350 - Elettrovalvola sicurezza PTO

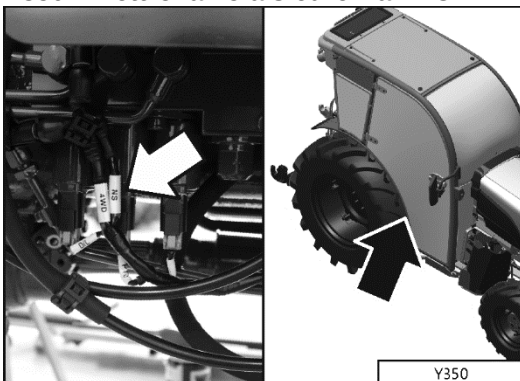 

Y999 - Elettrovalvola PTO anteriore

