 
 
 




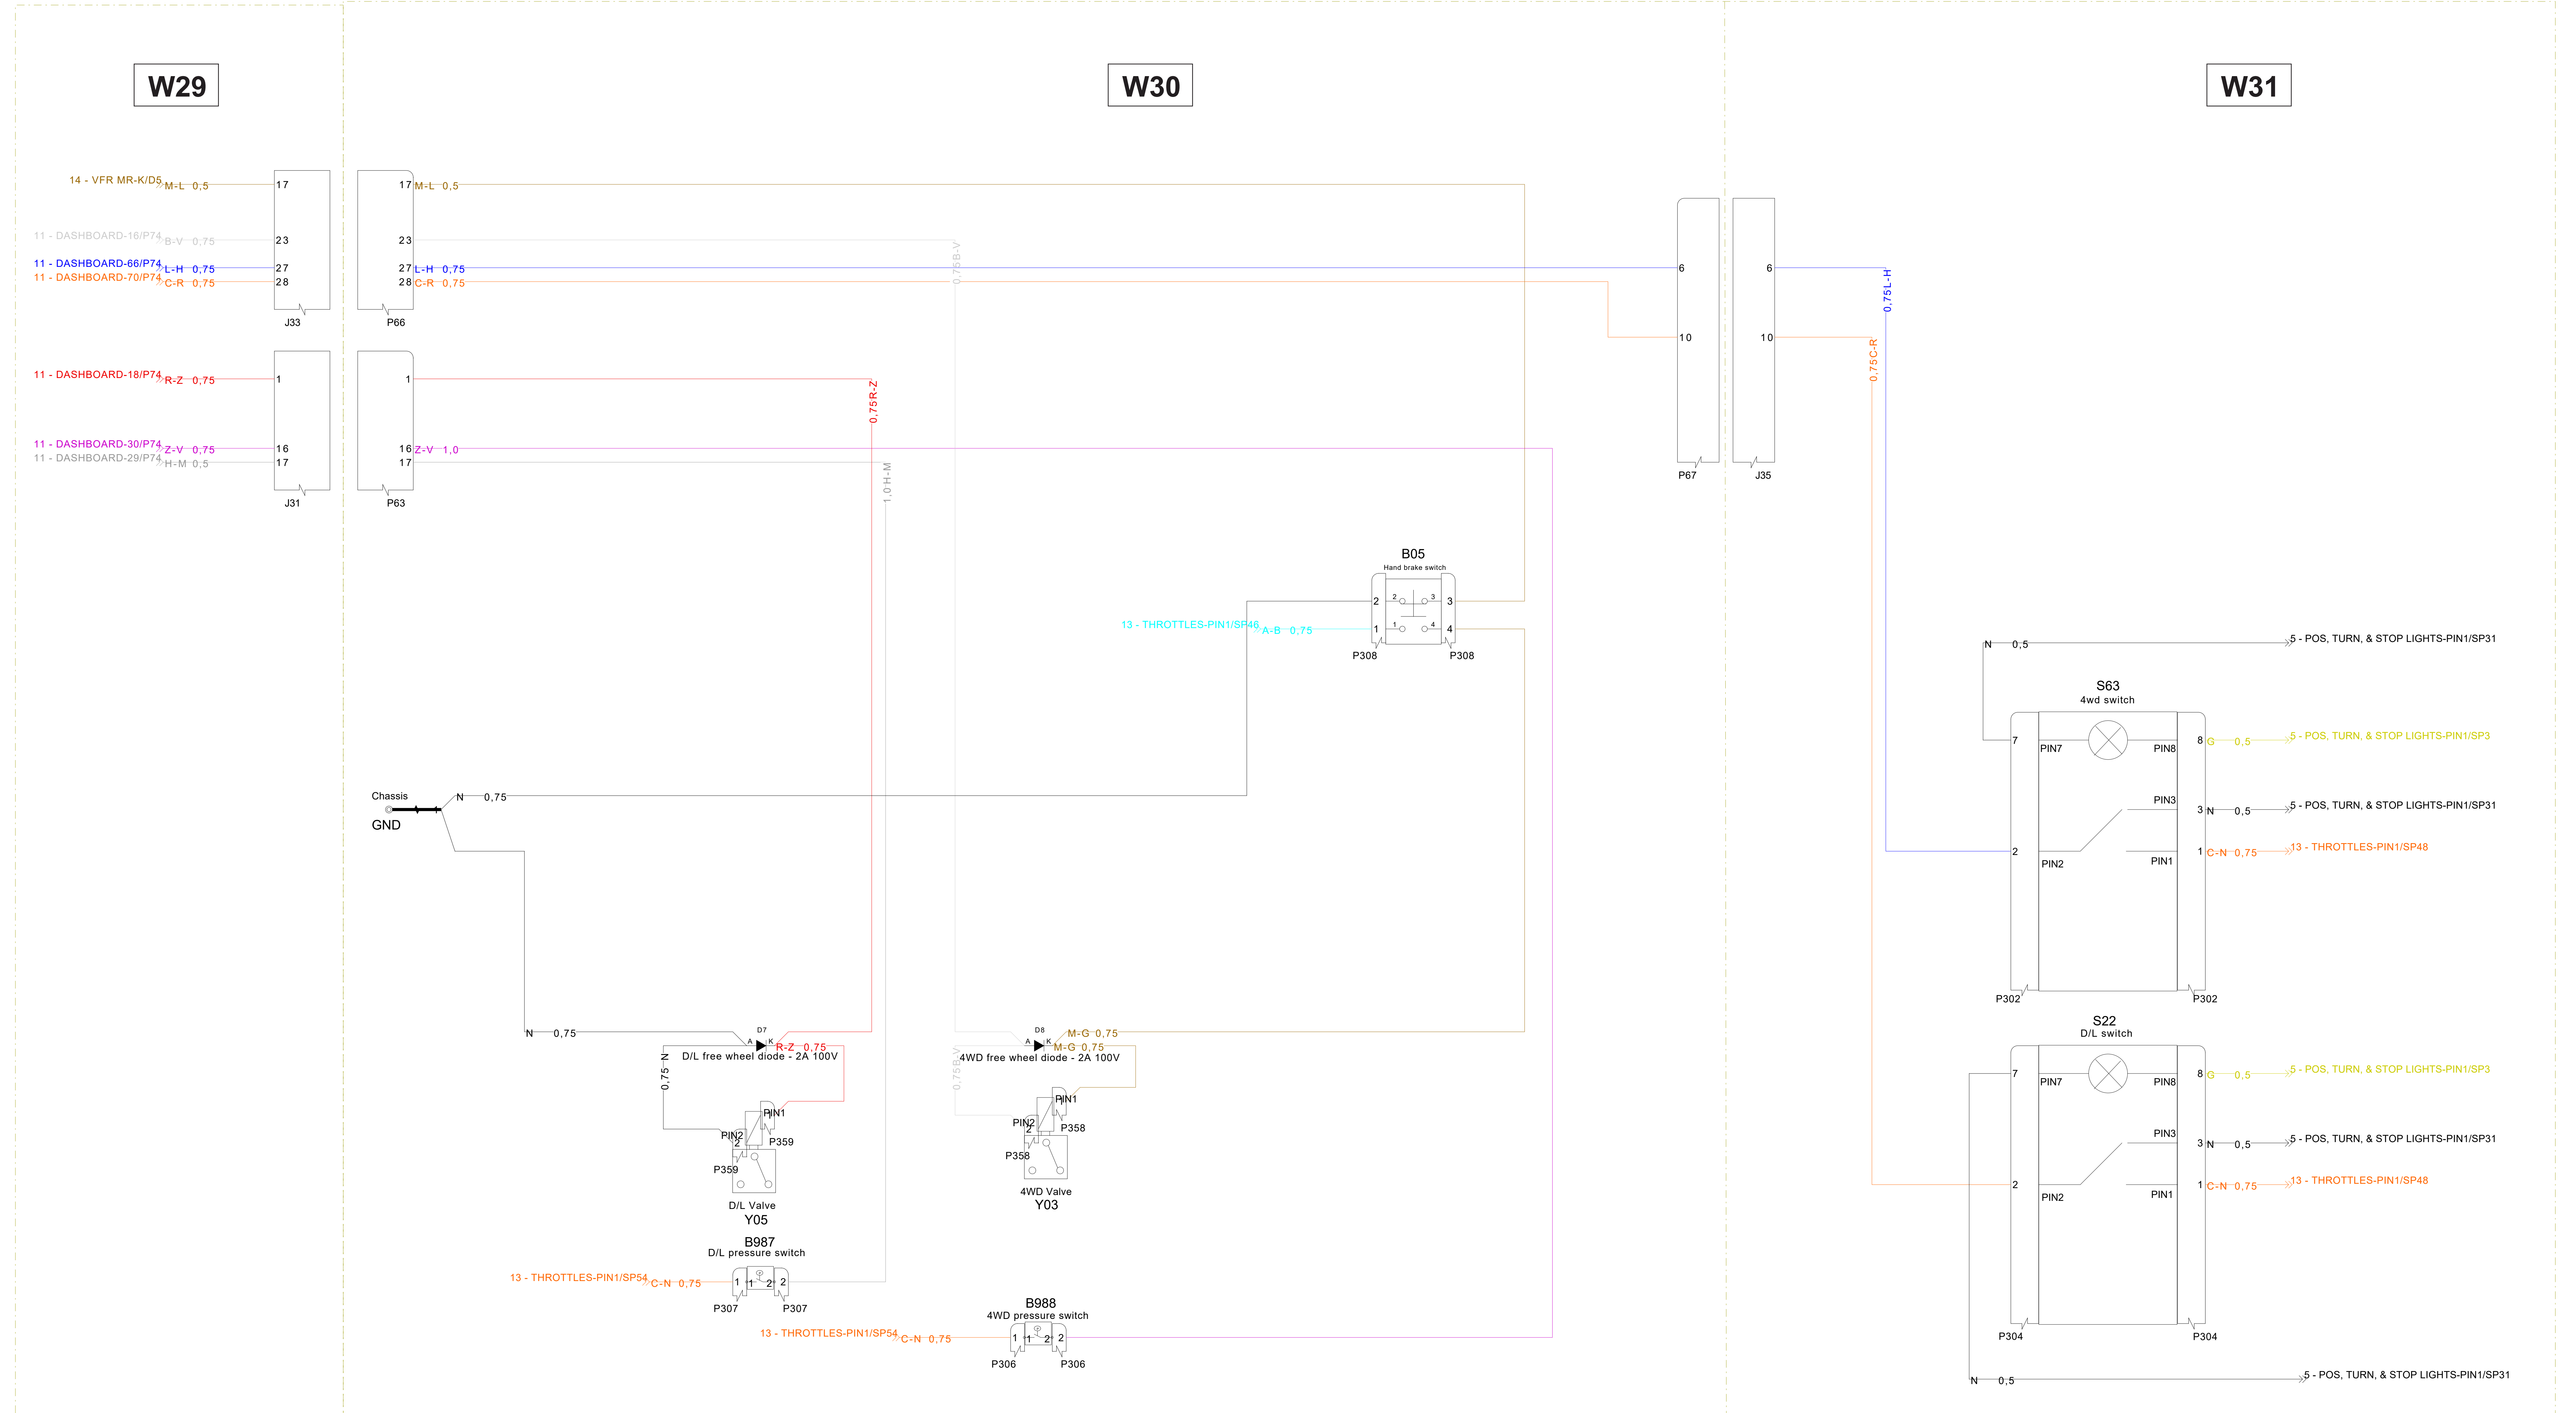


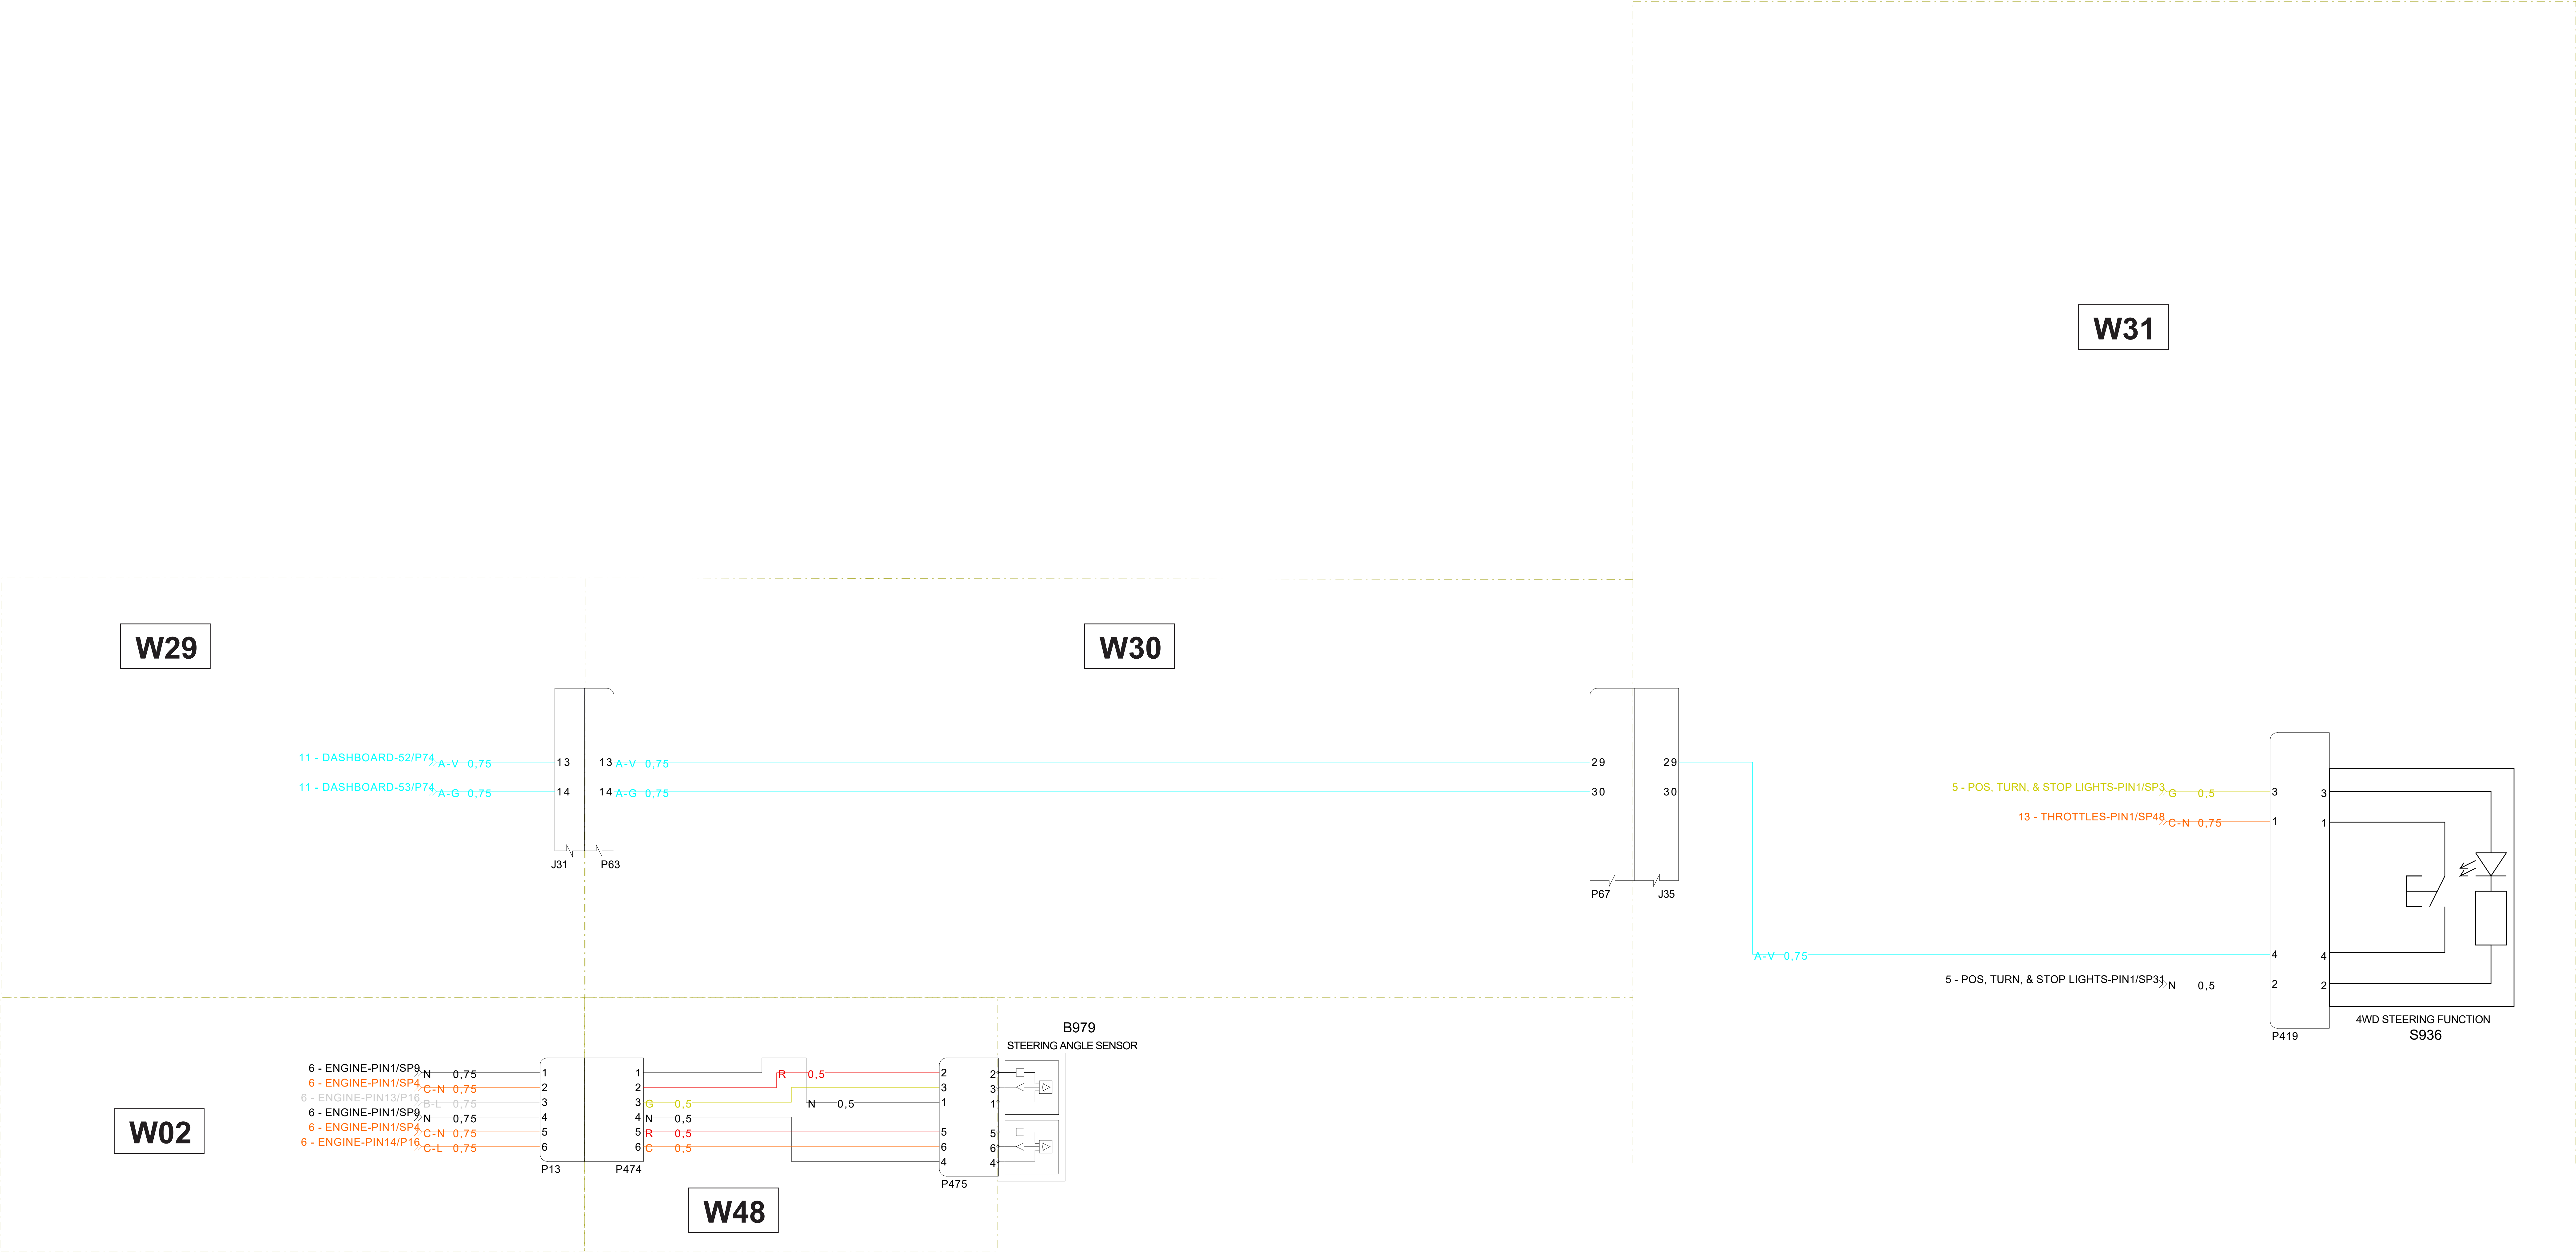

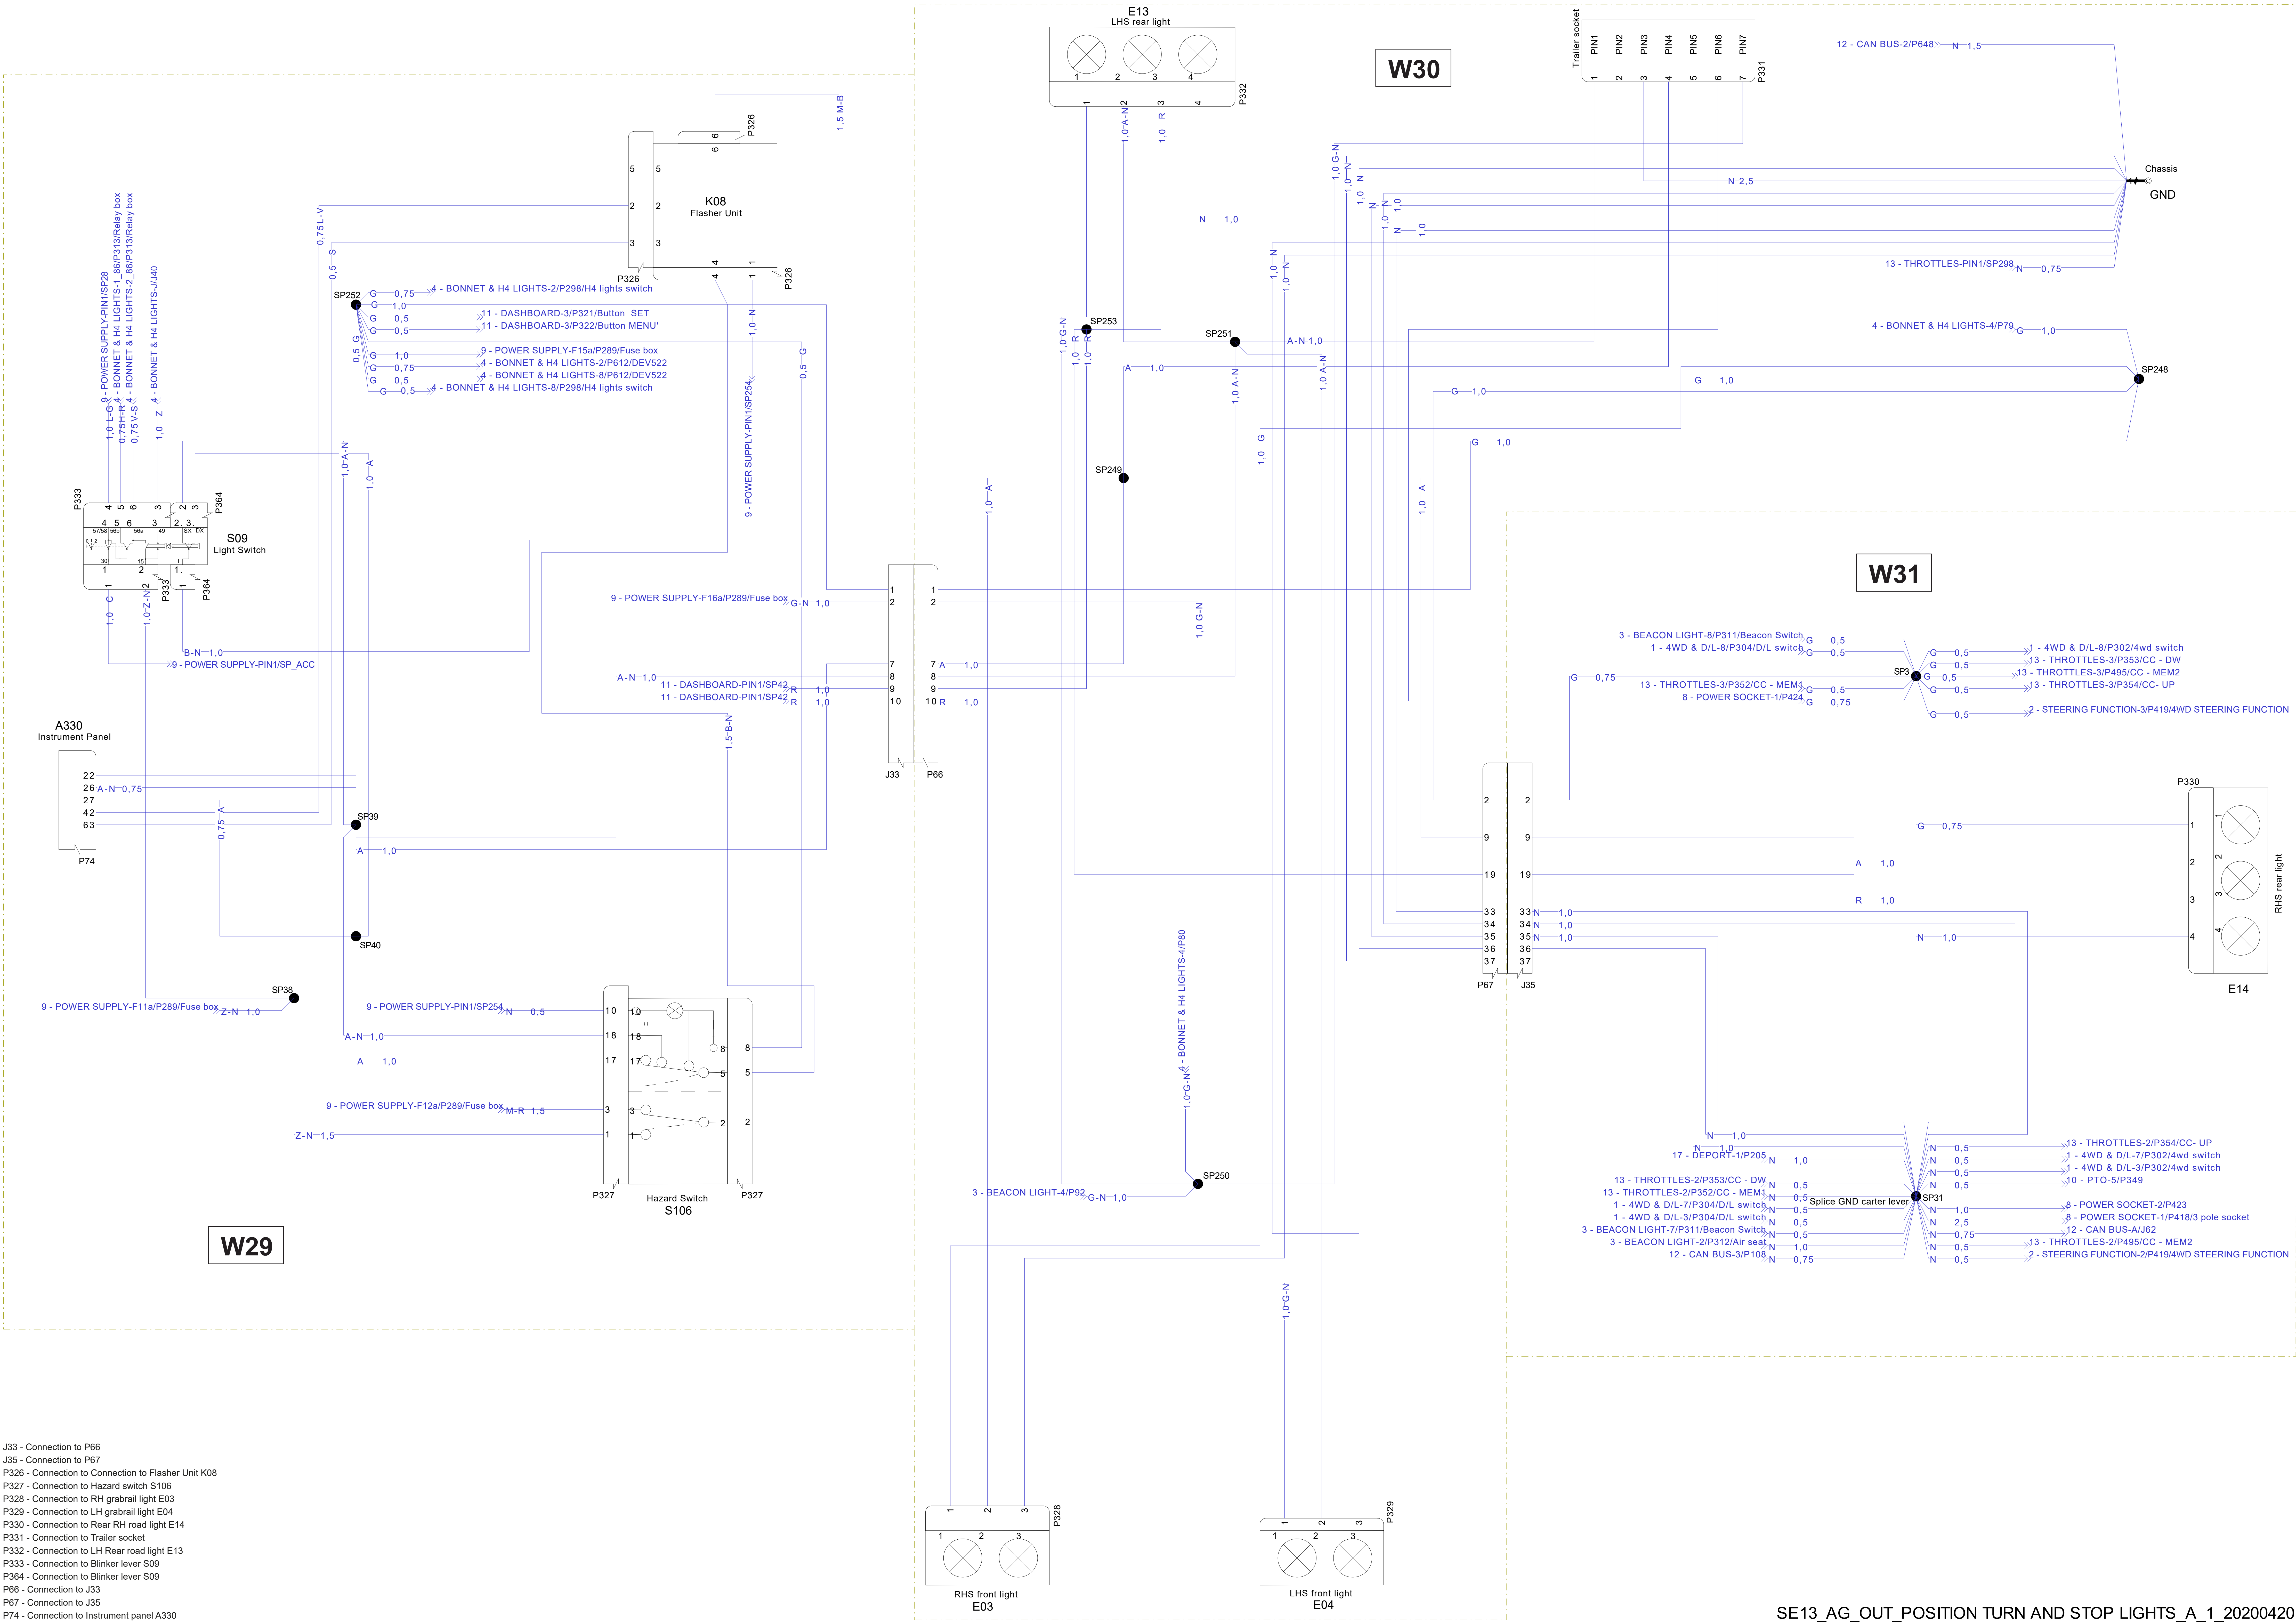


J33 - Connection to P66
J35 - Connection to P67
P326 - Connection to Connection to Flasher Unit K08
P327 - Connection to Hazard switch S106
P328 - Connection to RH grabrail light E03
P329 - Connection to LH grabrail light E04
P330 - Connection to Rear RH road light E14
P331 - Connection to Trailer socket
P332 - Connection to LH Rear road light E13
P333 - Connection to Blinker lever S09
P364 - Connection to Blinker lever S09
P66 - Connection to J33
P67 - Connection to J35
P74 - Connection to Instrument panel A330

 
SE13_AG_OUT_POSITION TURN AND STOP LIGHTS_A_1_20200420

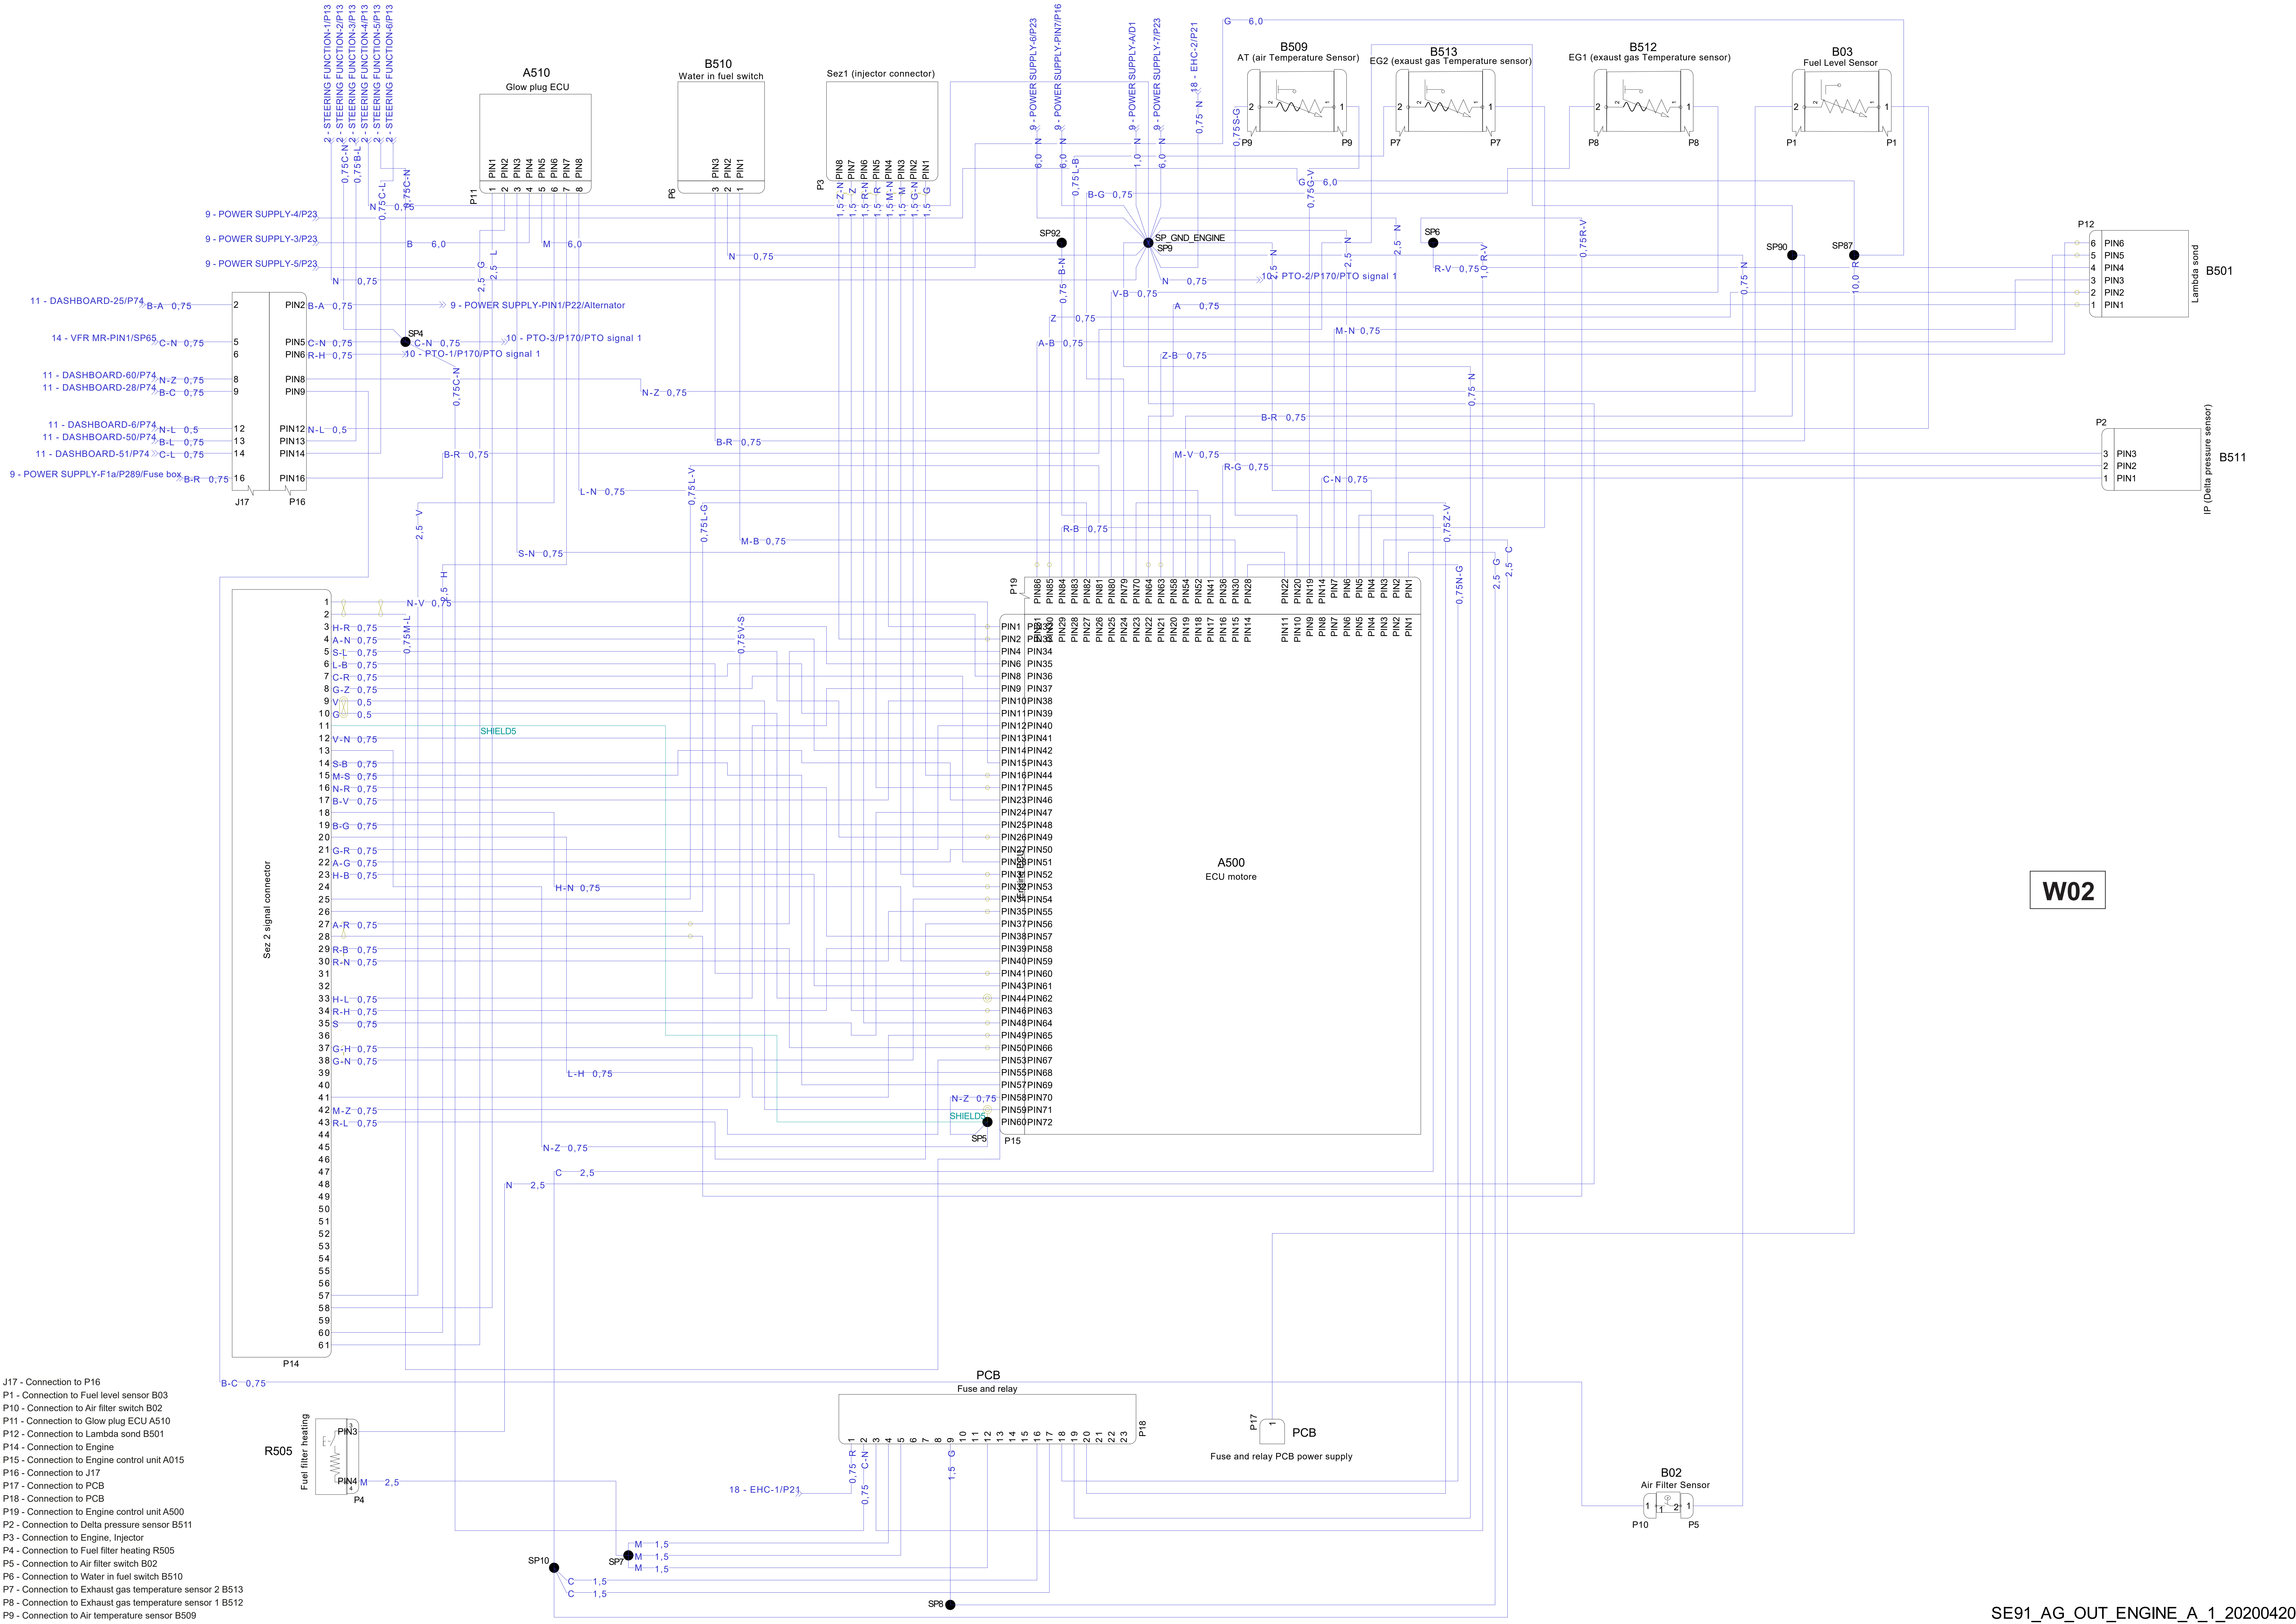



- J17 - Connection to P16
- P1 - Connection to Fuel level sensor B03
- P10 - Connection to Air filter switch B02
- P11 - Connection to Glow plug ECU A510
- P12 - Connection to Lambda sond B501
- P14 - Connection to Engine
- P15 - Connection to Engine control unit A015
- P16 - Connection to J17
- P17 - Connection to PCB
- P18 - Connection to PCB
- P19 - Connection to Engine control unit A500
- P2 - Connection to Delta pressure sensor B511
- P3 - Connection to Engine, Injector
- P4 - Connection to Fuel filter heating R505
- P5 - Connection to Air filter switch B02
- P6 - Connection to Water in fuel switch B510
- P7 - Connection to Exhaust gas temperature sensor 2 B513
- P8 - Connection to Exhaust gas temperature sensor 1 B512
- P9 - Connection to Air temperature sensor B509

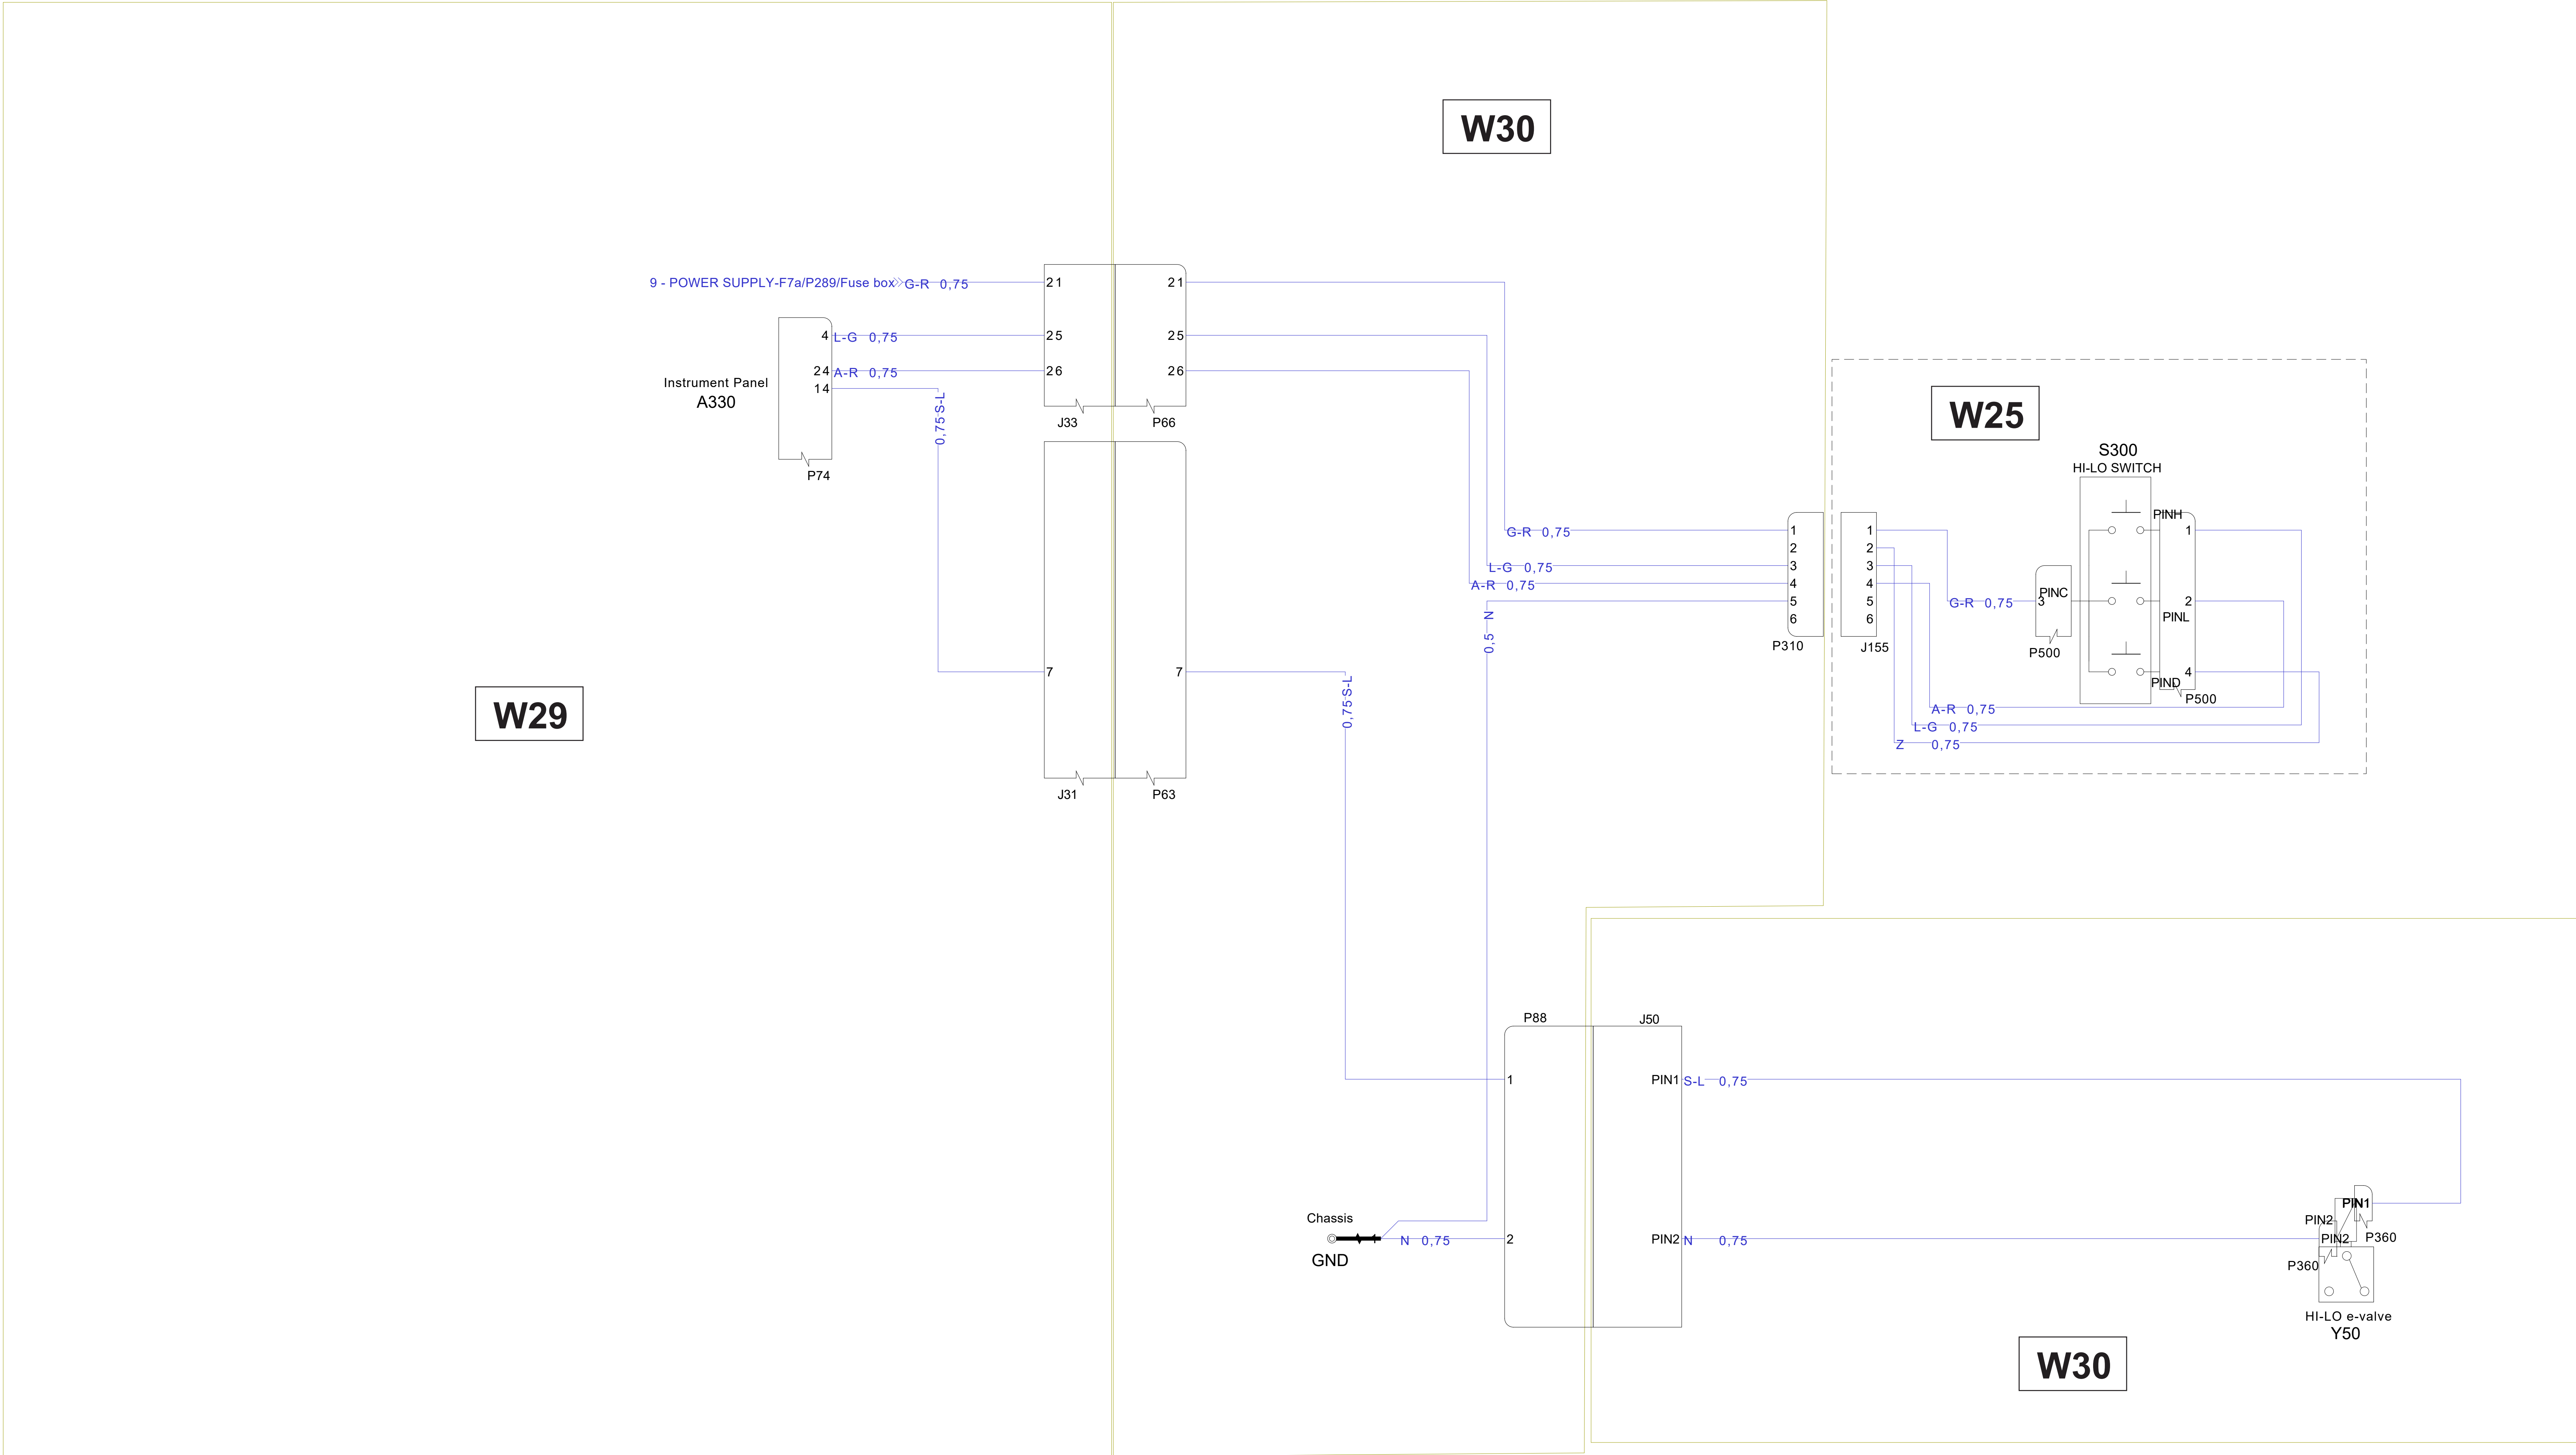 

   
J155 - Connection to P310
J31 - Connection to P63
J33 - Connection to P66
J50 - Connection to P88
P310 - Connection to J155
P360 - Connection to HI-LO solenoid valve Y50
P500 - Connection to HI-LO switch S300
P63 - Connection to J31
P66 - Connection to J33
P74 - Connection to Instrument panel A330
P88 - Connection to J50

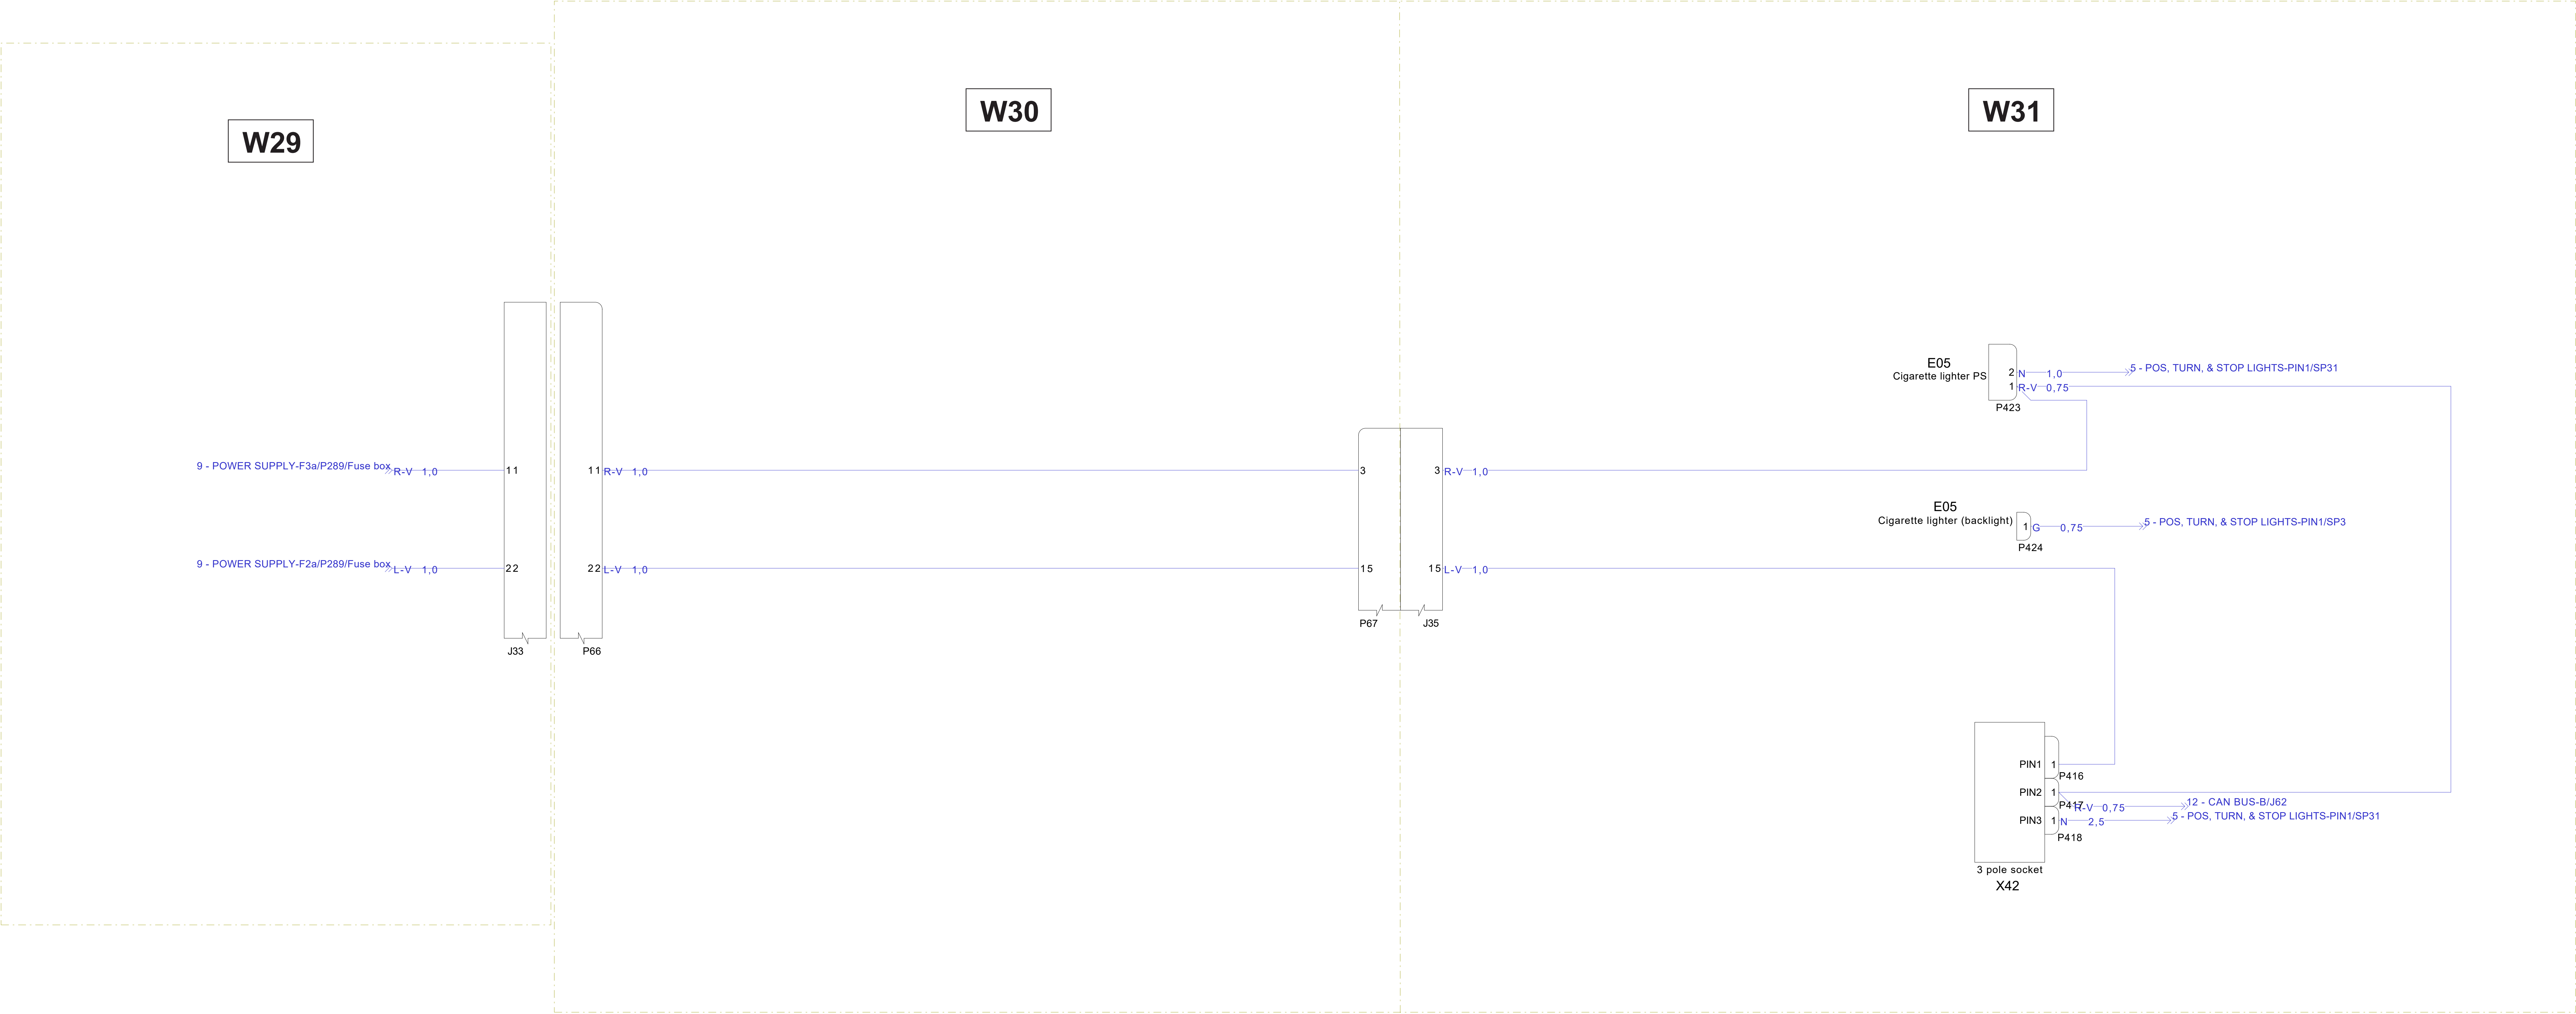


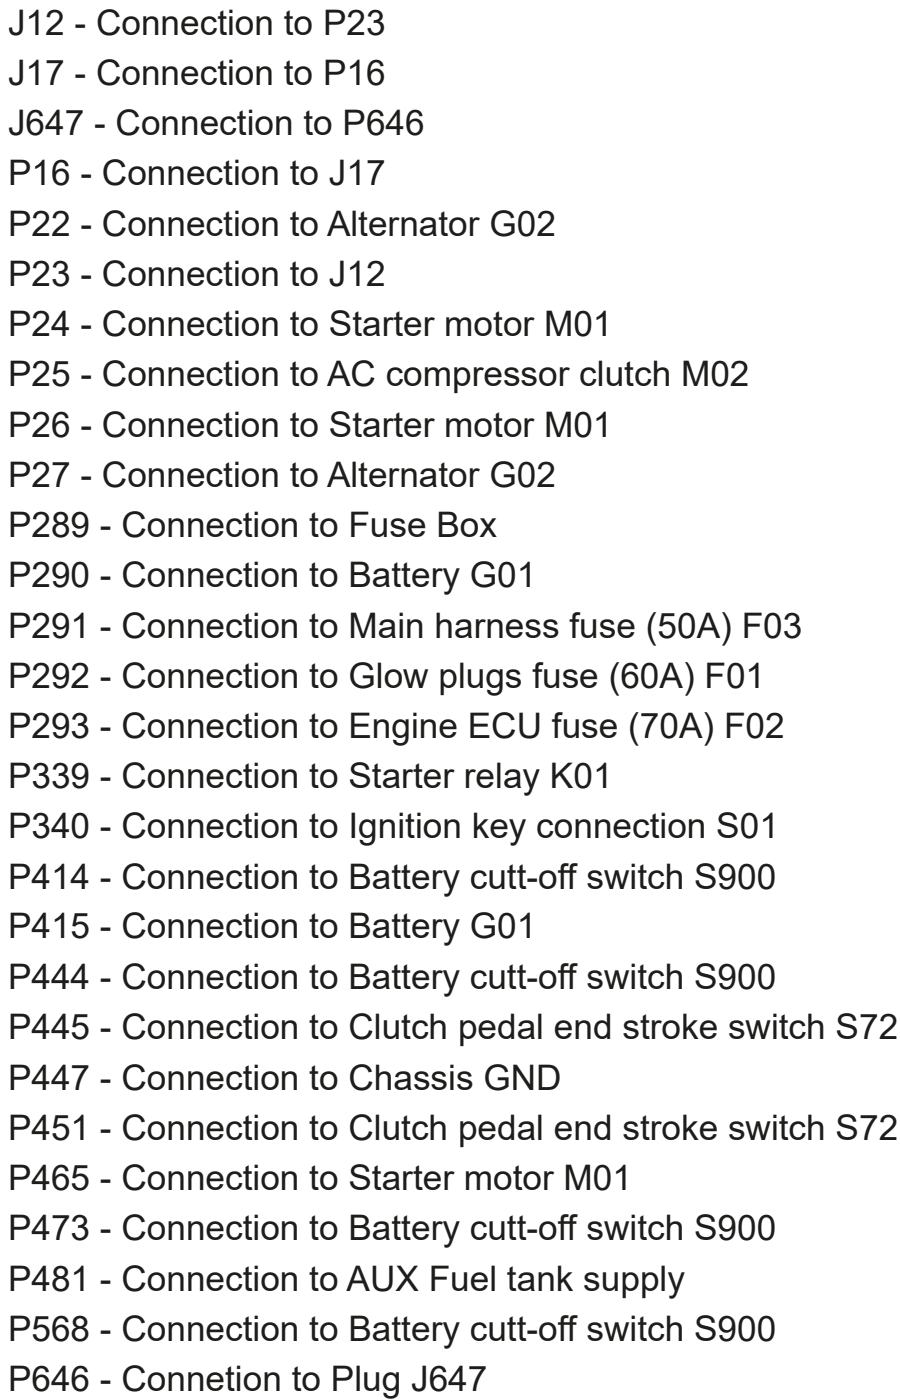


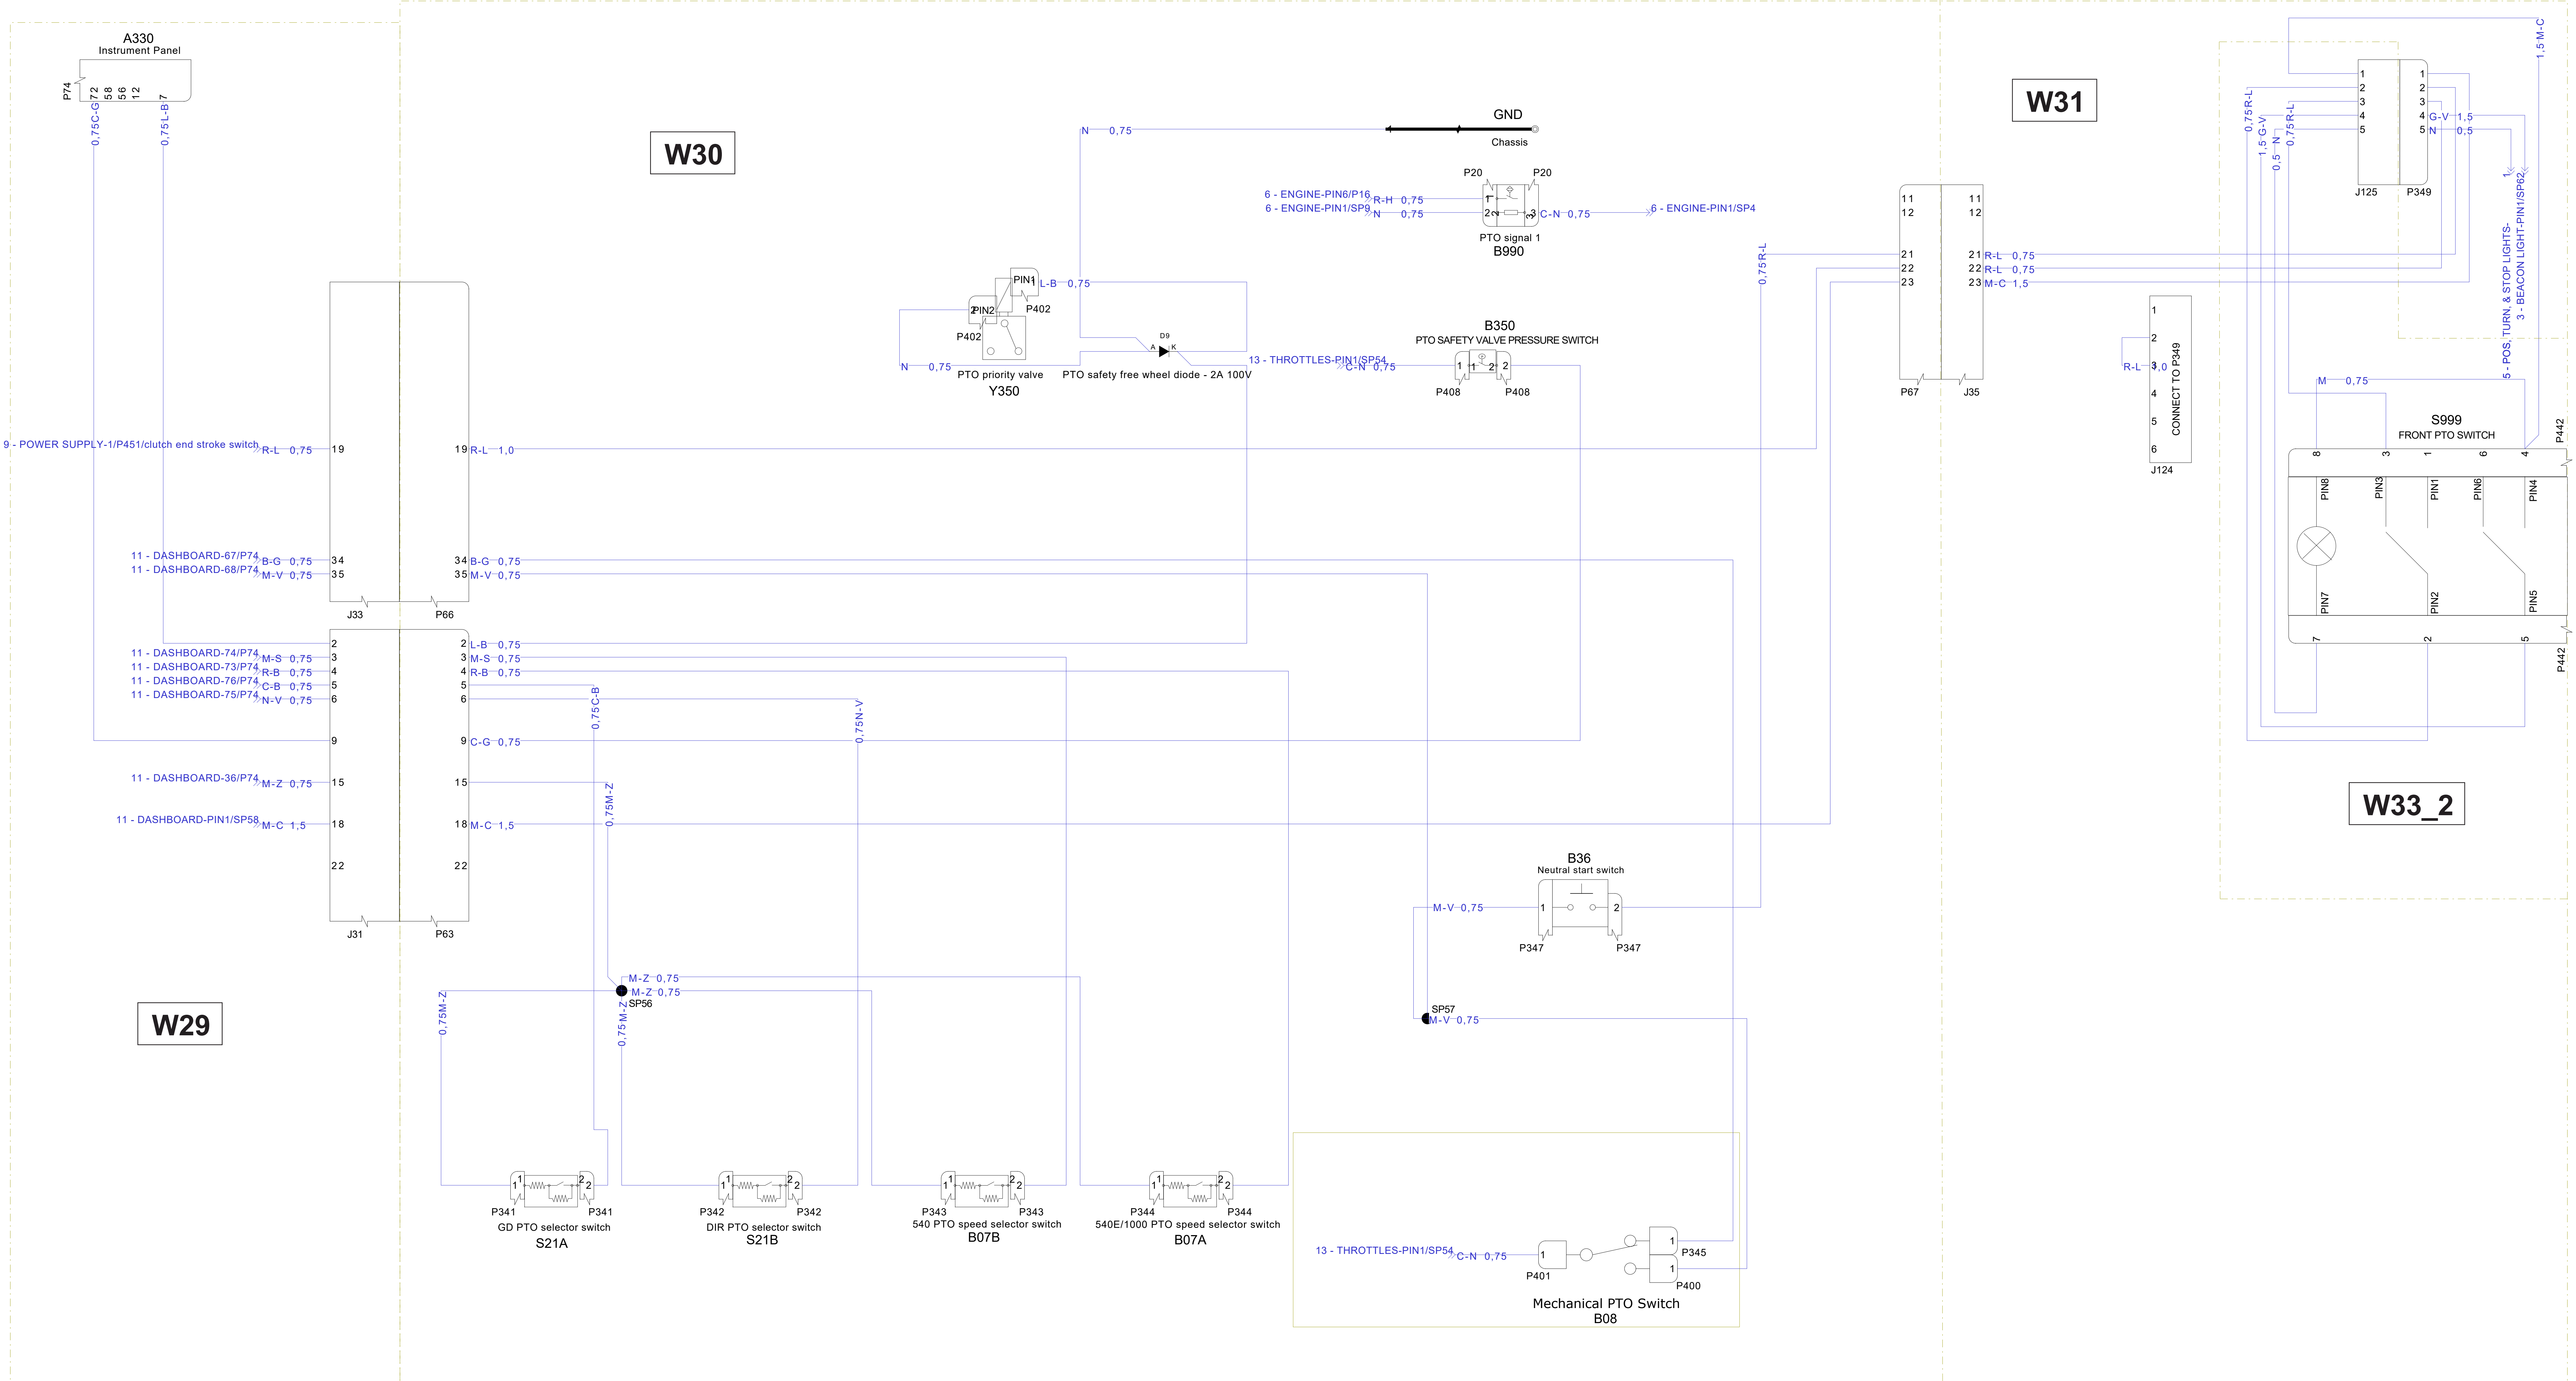

- J125 - Connection to P349
- J35 - Connection to P67
- J83 - Connection to P431
- J84 - Connection to P432
- P20 - Connection to PTO signal 1 B990
- P341 - Connection to GD PTO selector switch S21A
- P342 - Connection to DIR PTO selector switch S21B
- P343 - Connection to 540 PTO speed selector switch B07B
- P344 - Connection to 540E/1000 PTO speed selector switch B07A
- P345 - Connection to Mechanical PTO switch B08
- P347 - Connection to Neutral start switch B36
- P349 - Connection to J125
- P400 - Connection to Mechanical PTO switch B08
- P401 - Connection to Mechanical PTO switch B08
- P402 - Connection to PTO safety solenoid valve Y350
- P408 - Connection to PTO pressure switch B350
- P432 - Connection to J84
- P433 - Connection to Connection to Front PTO interlock relay K999
- P435 - Connection to Front PTO solenoid valve Y999
- P442 - Connection to Front PTO switch S999
- P63 - Connection to J31
- P66 - Connection to J33
- P67 - Connection to J35

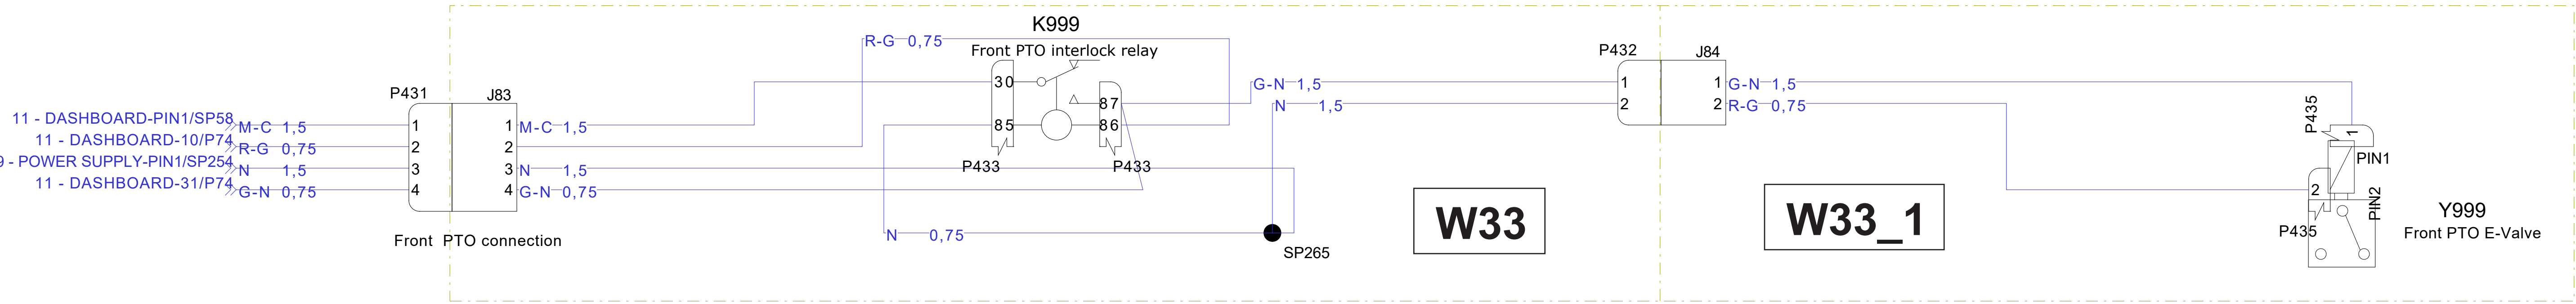 

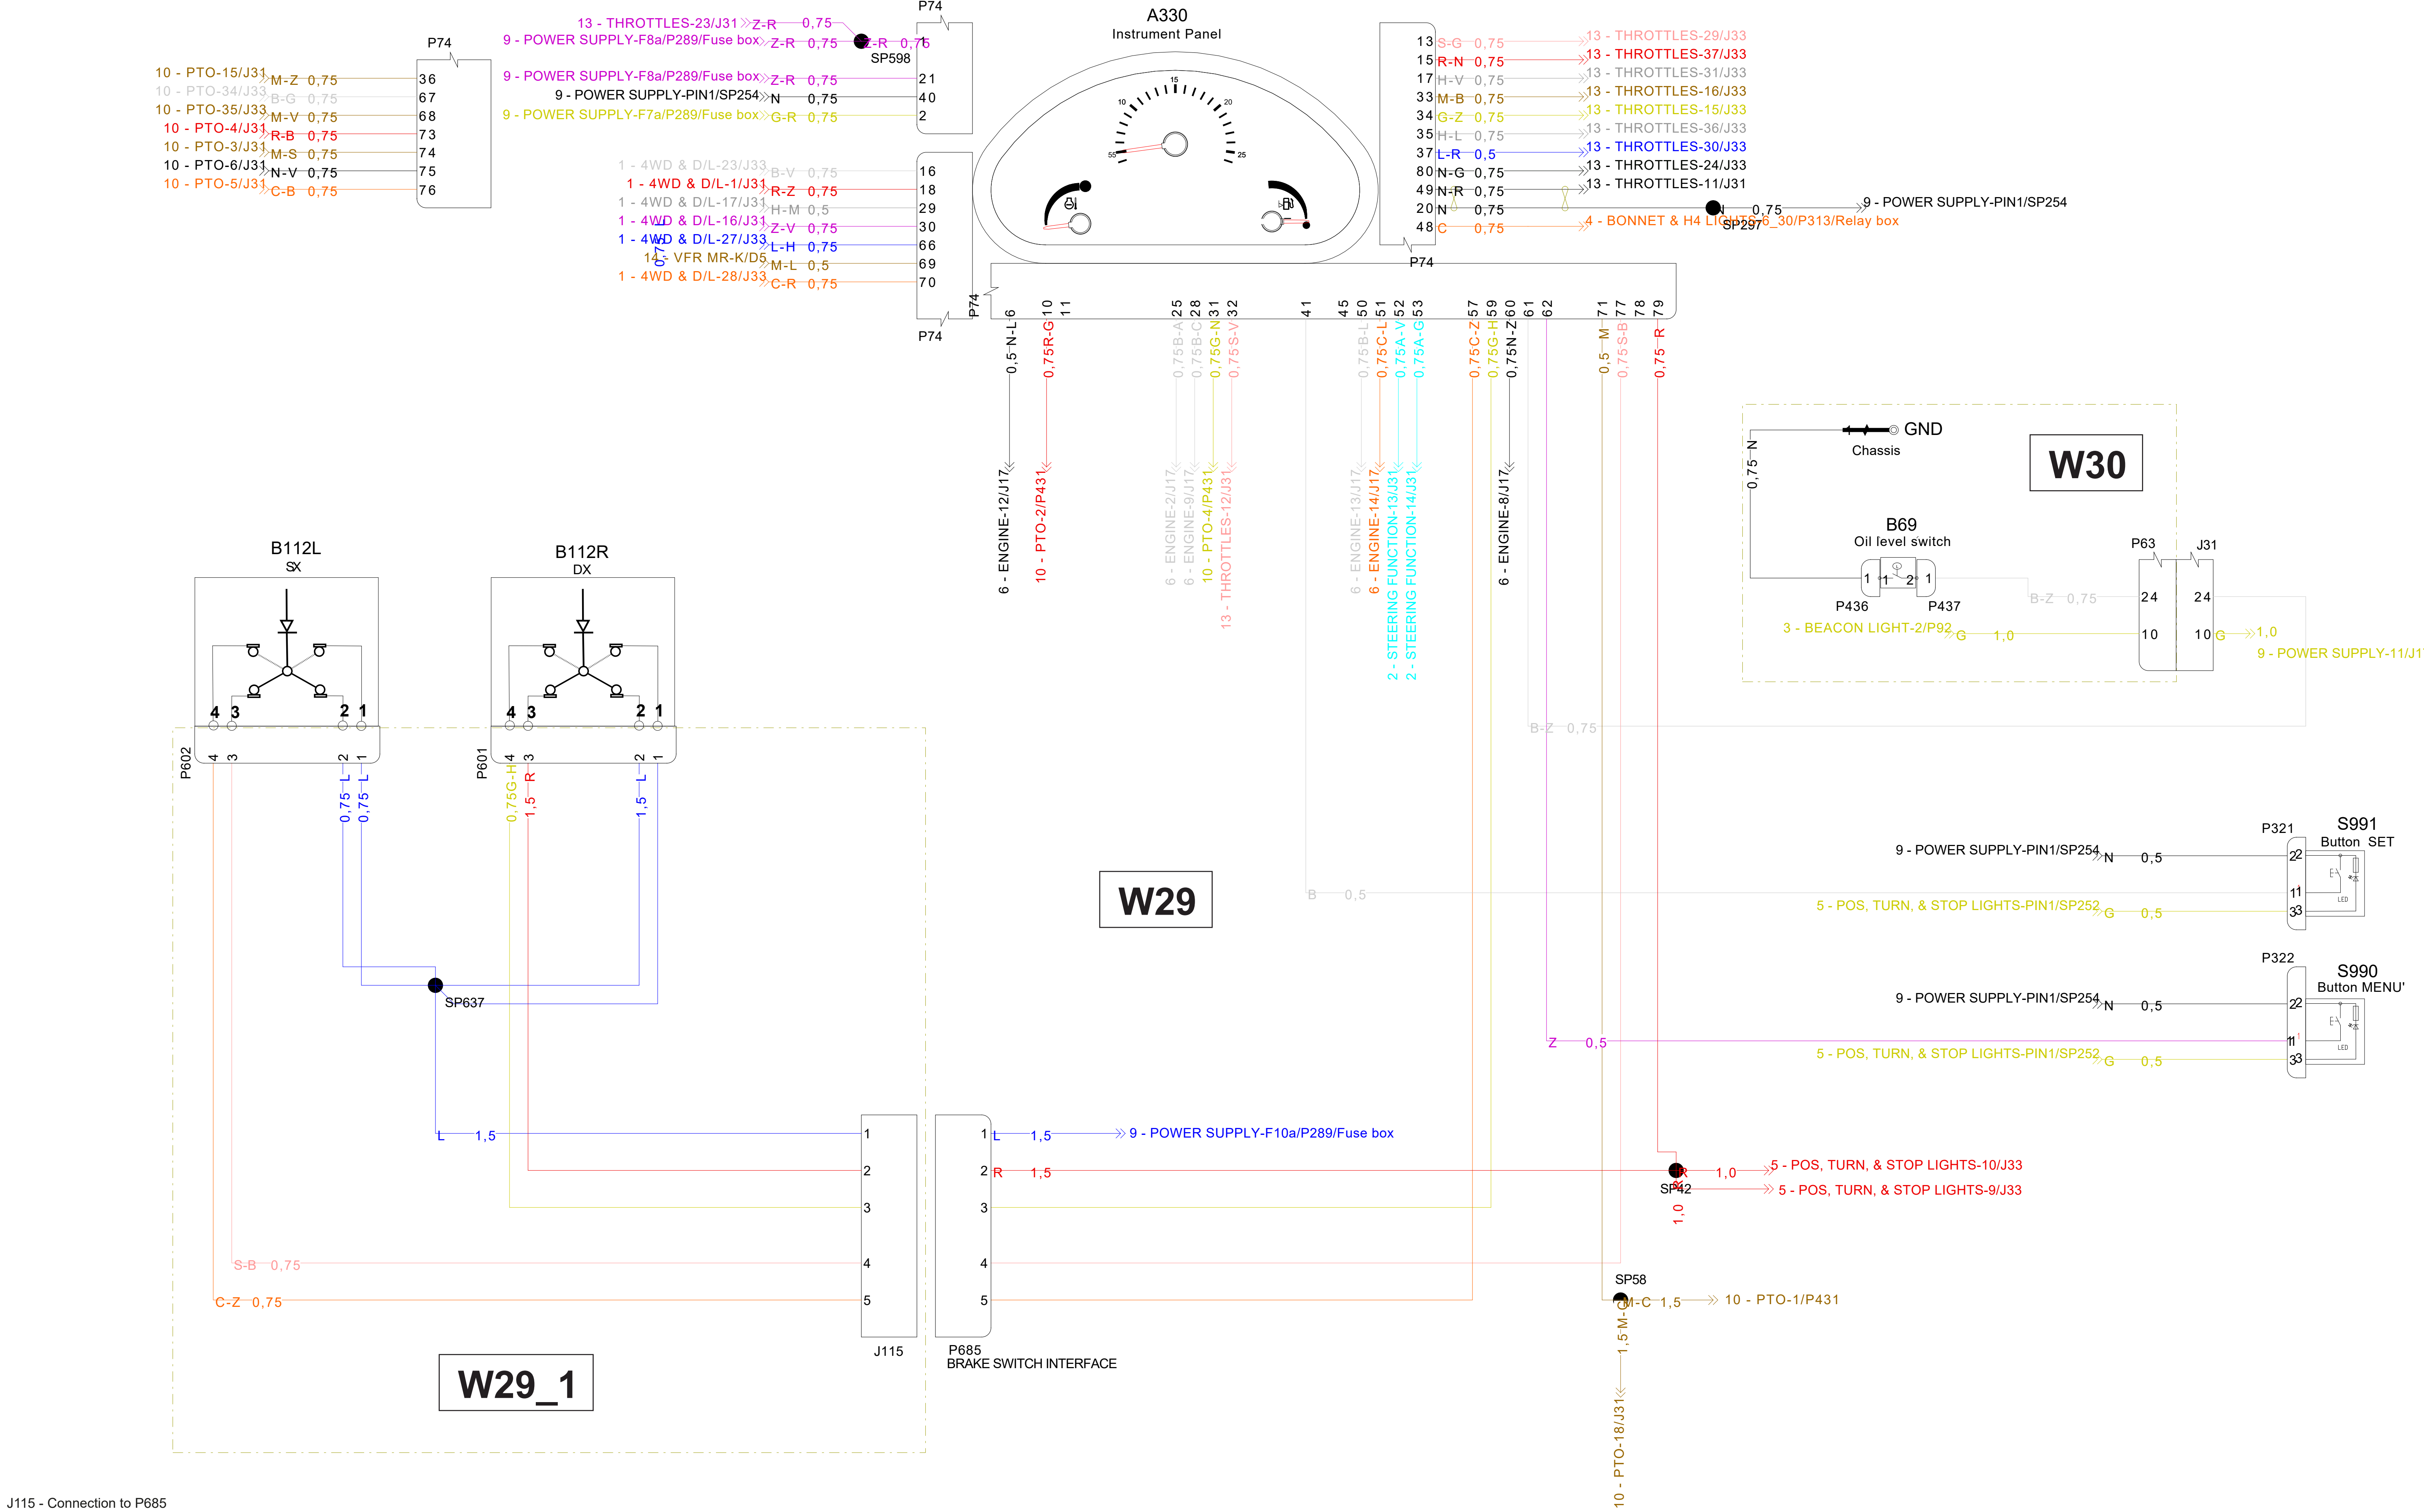 


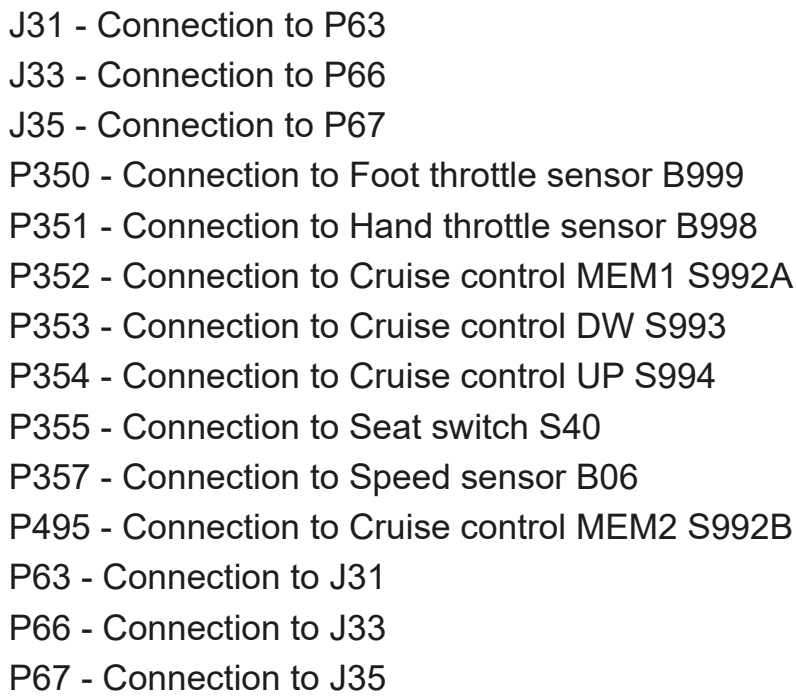  









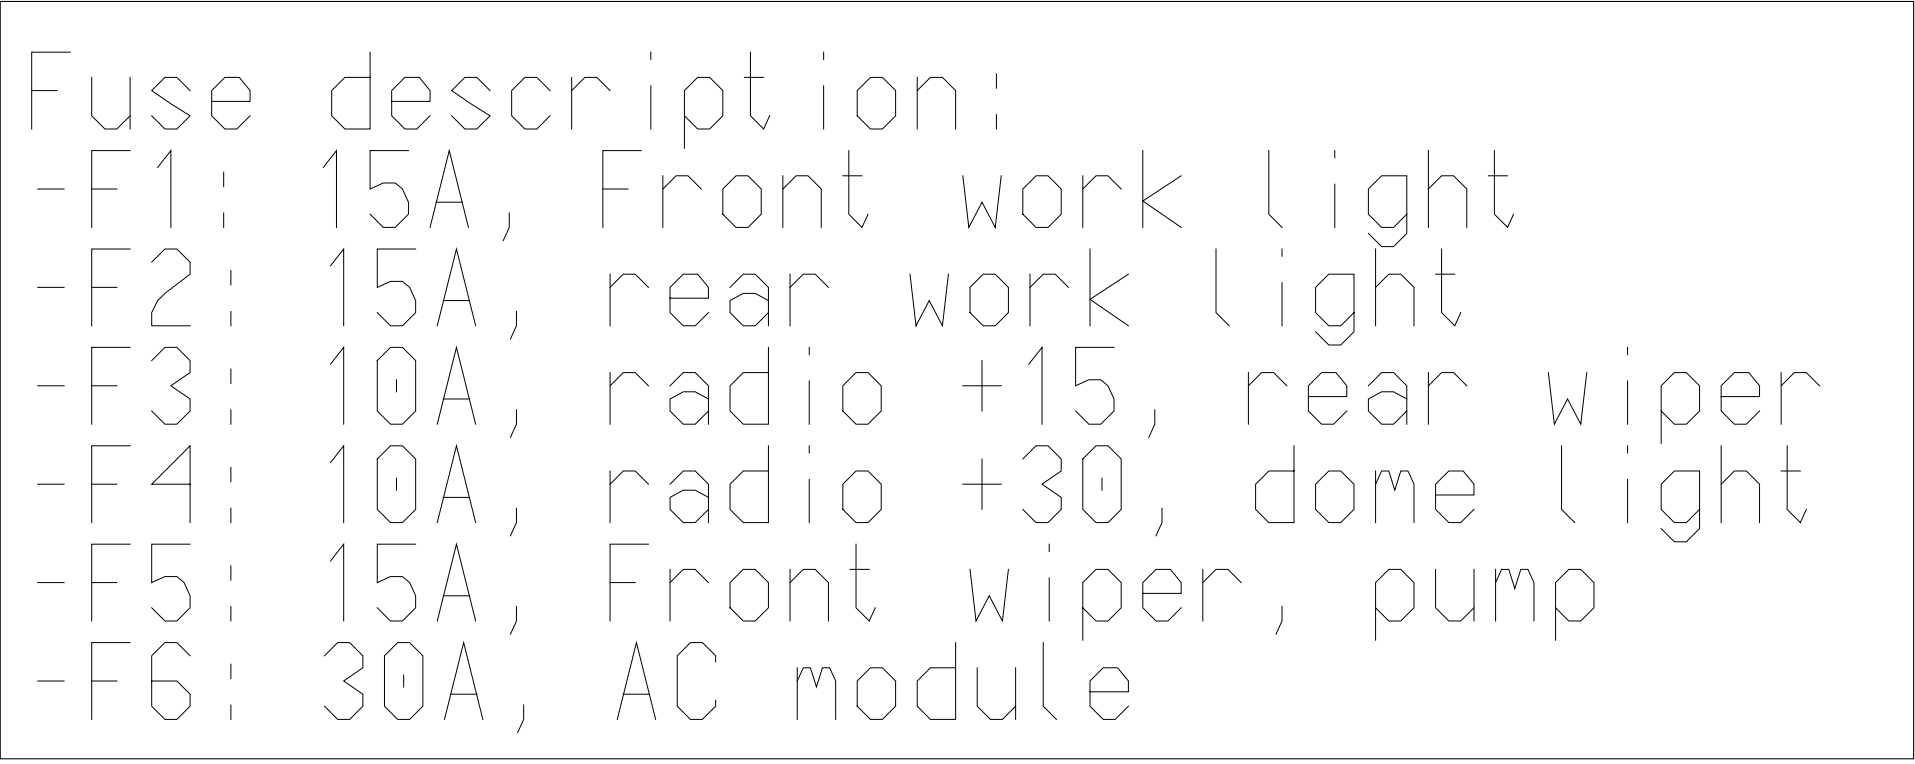


- P520 - Connection to Rear wiper motor M04
- P522 - Connection to Beacon light E27
- P523 - Connection to Front Wiper
- P524 - Connection to Front Wiper
- P526 - Connection to Connection to Antenna A010
- P527 - Connection to LH Speaker A006
- P527 - Connection to RH Speaker A005
- P528 - Connection to X1
- P529 - Connection to X4
- P530 - Connection to Internal light E12
- P531 - Connection to Front work lights switch S92A
- P532 - Connection to Rear work light switch S92B
- P537 - Connection to Connection to Maxi Fuse 70A P537
- P615 - Connection to Carter courtesy light E999
- P616 - Connection to Carter courtesy light E999

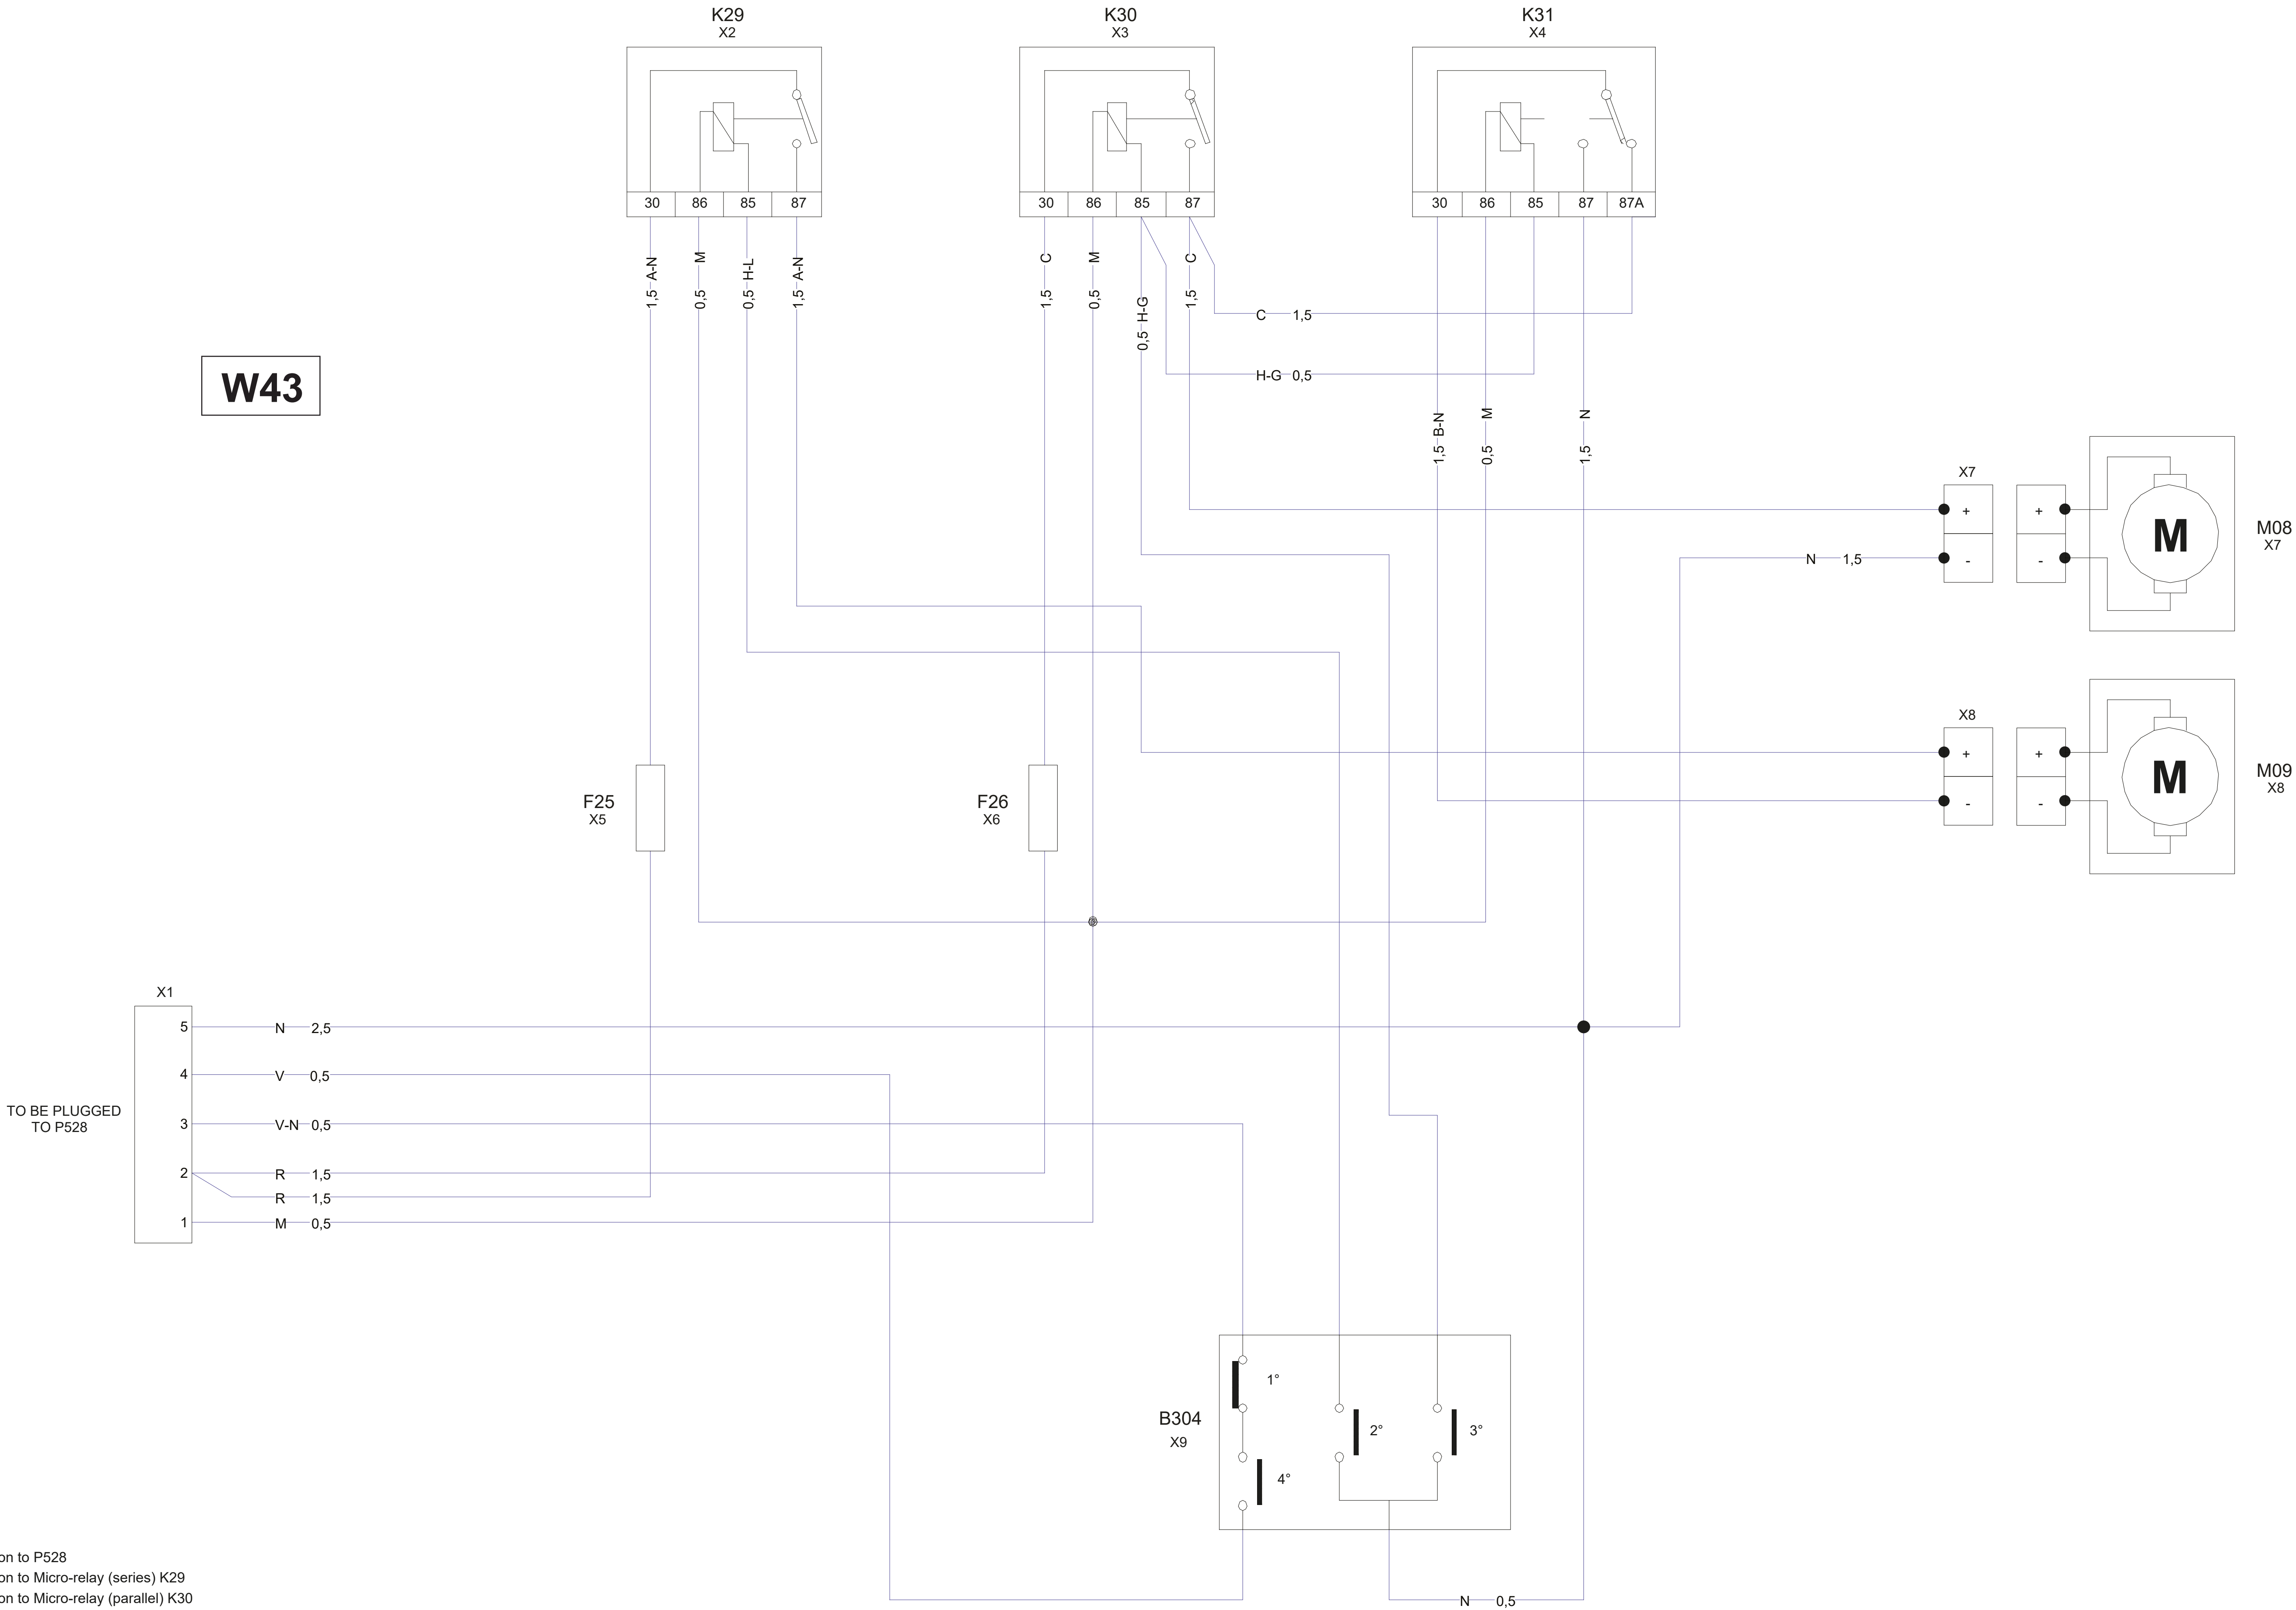 


 
X1 - Connection to P528
X2 - Connection to Micro-relay (series) K29
X3 - Connection to Micro-relay (parallel) K30
X4 - Connection to Micro-relay K31
X5 - Connection to Fan motor power supply F25
X6 - Connection to Fan motor power supply F26
X7 - Connection to RH Fan motor M08
X8 - Connection to LH Fan motor M09
X9 - Connection to A/C pressure switch B304

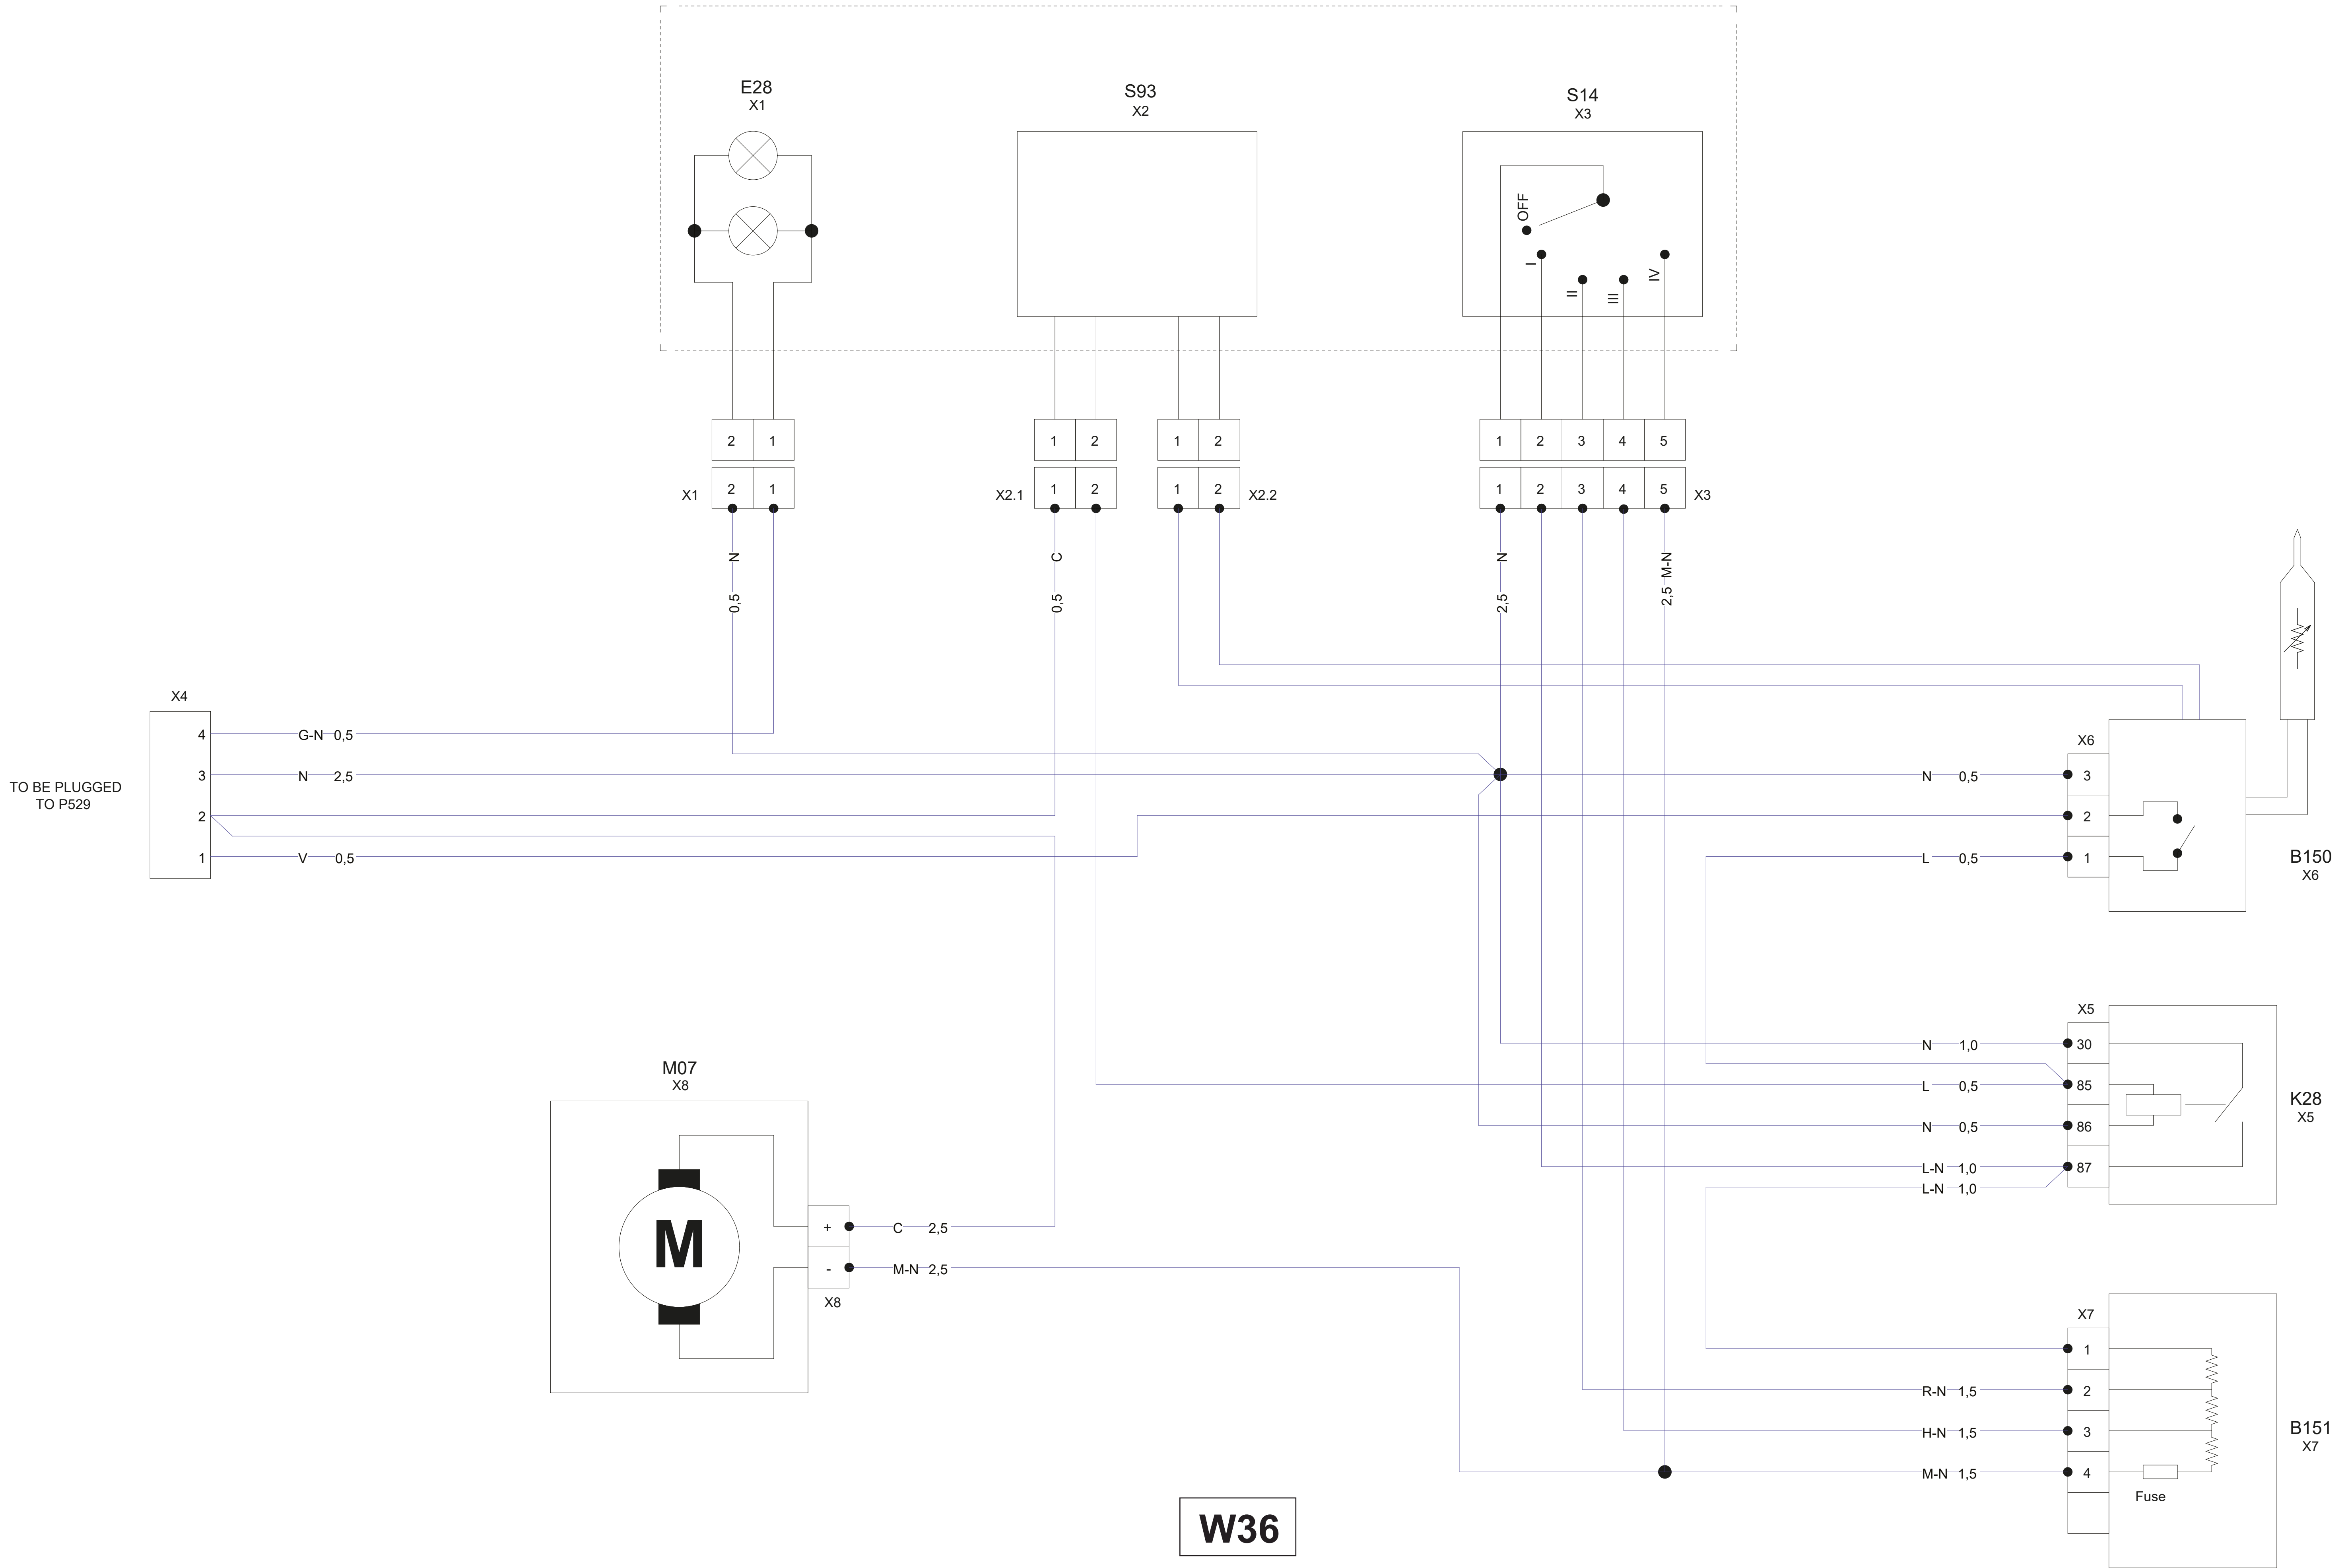


     
- X1 - Connection to A/C control panel backlights E28
- X2 - Connection to Heating and air-conditioning switch S93
- X3 - Connection to Fan speed switch S14
- X4 - Connection to P529
- X5 - Connection to Fan speed relay K28
- X6 - Connection to A/C temperature sensor B150
- X7 - Connection to Blower speed resistor B151
- X8 - Connection to A/C blower M07

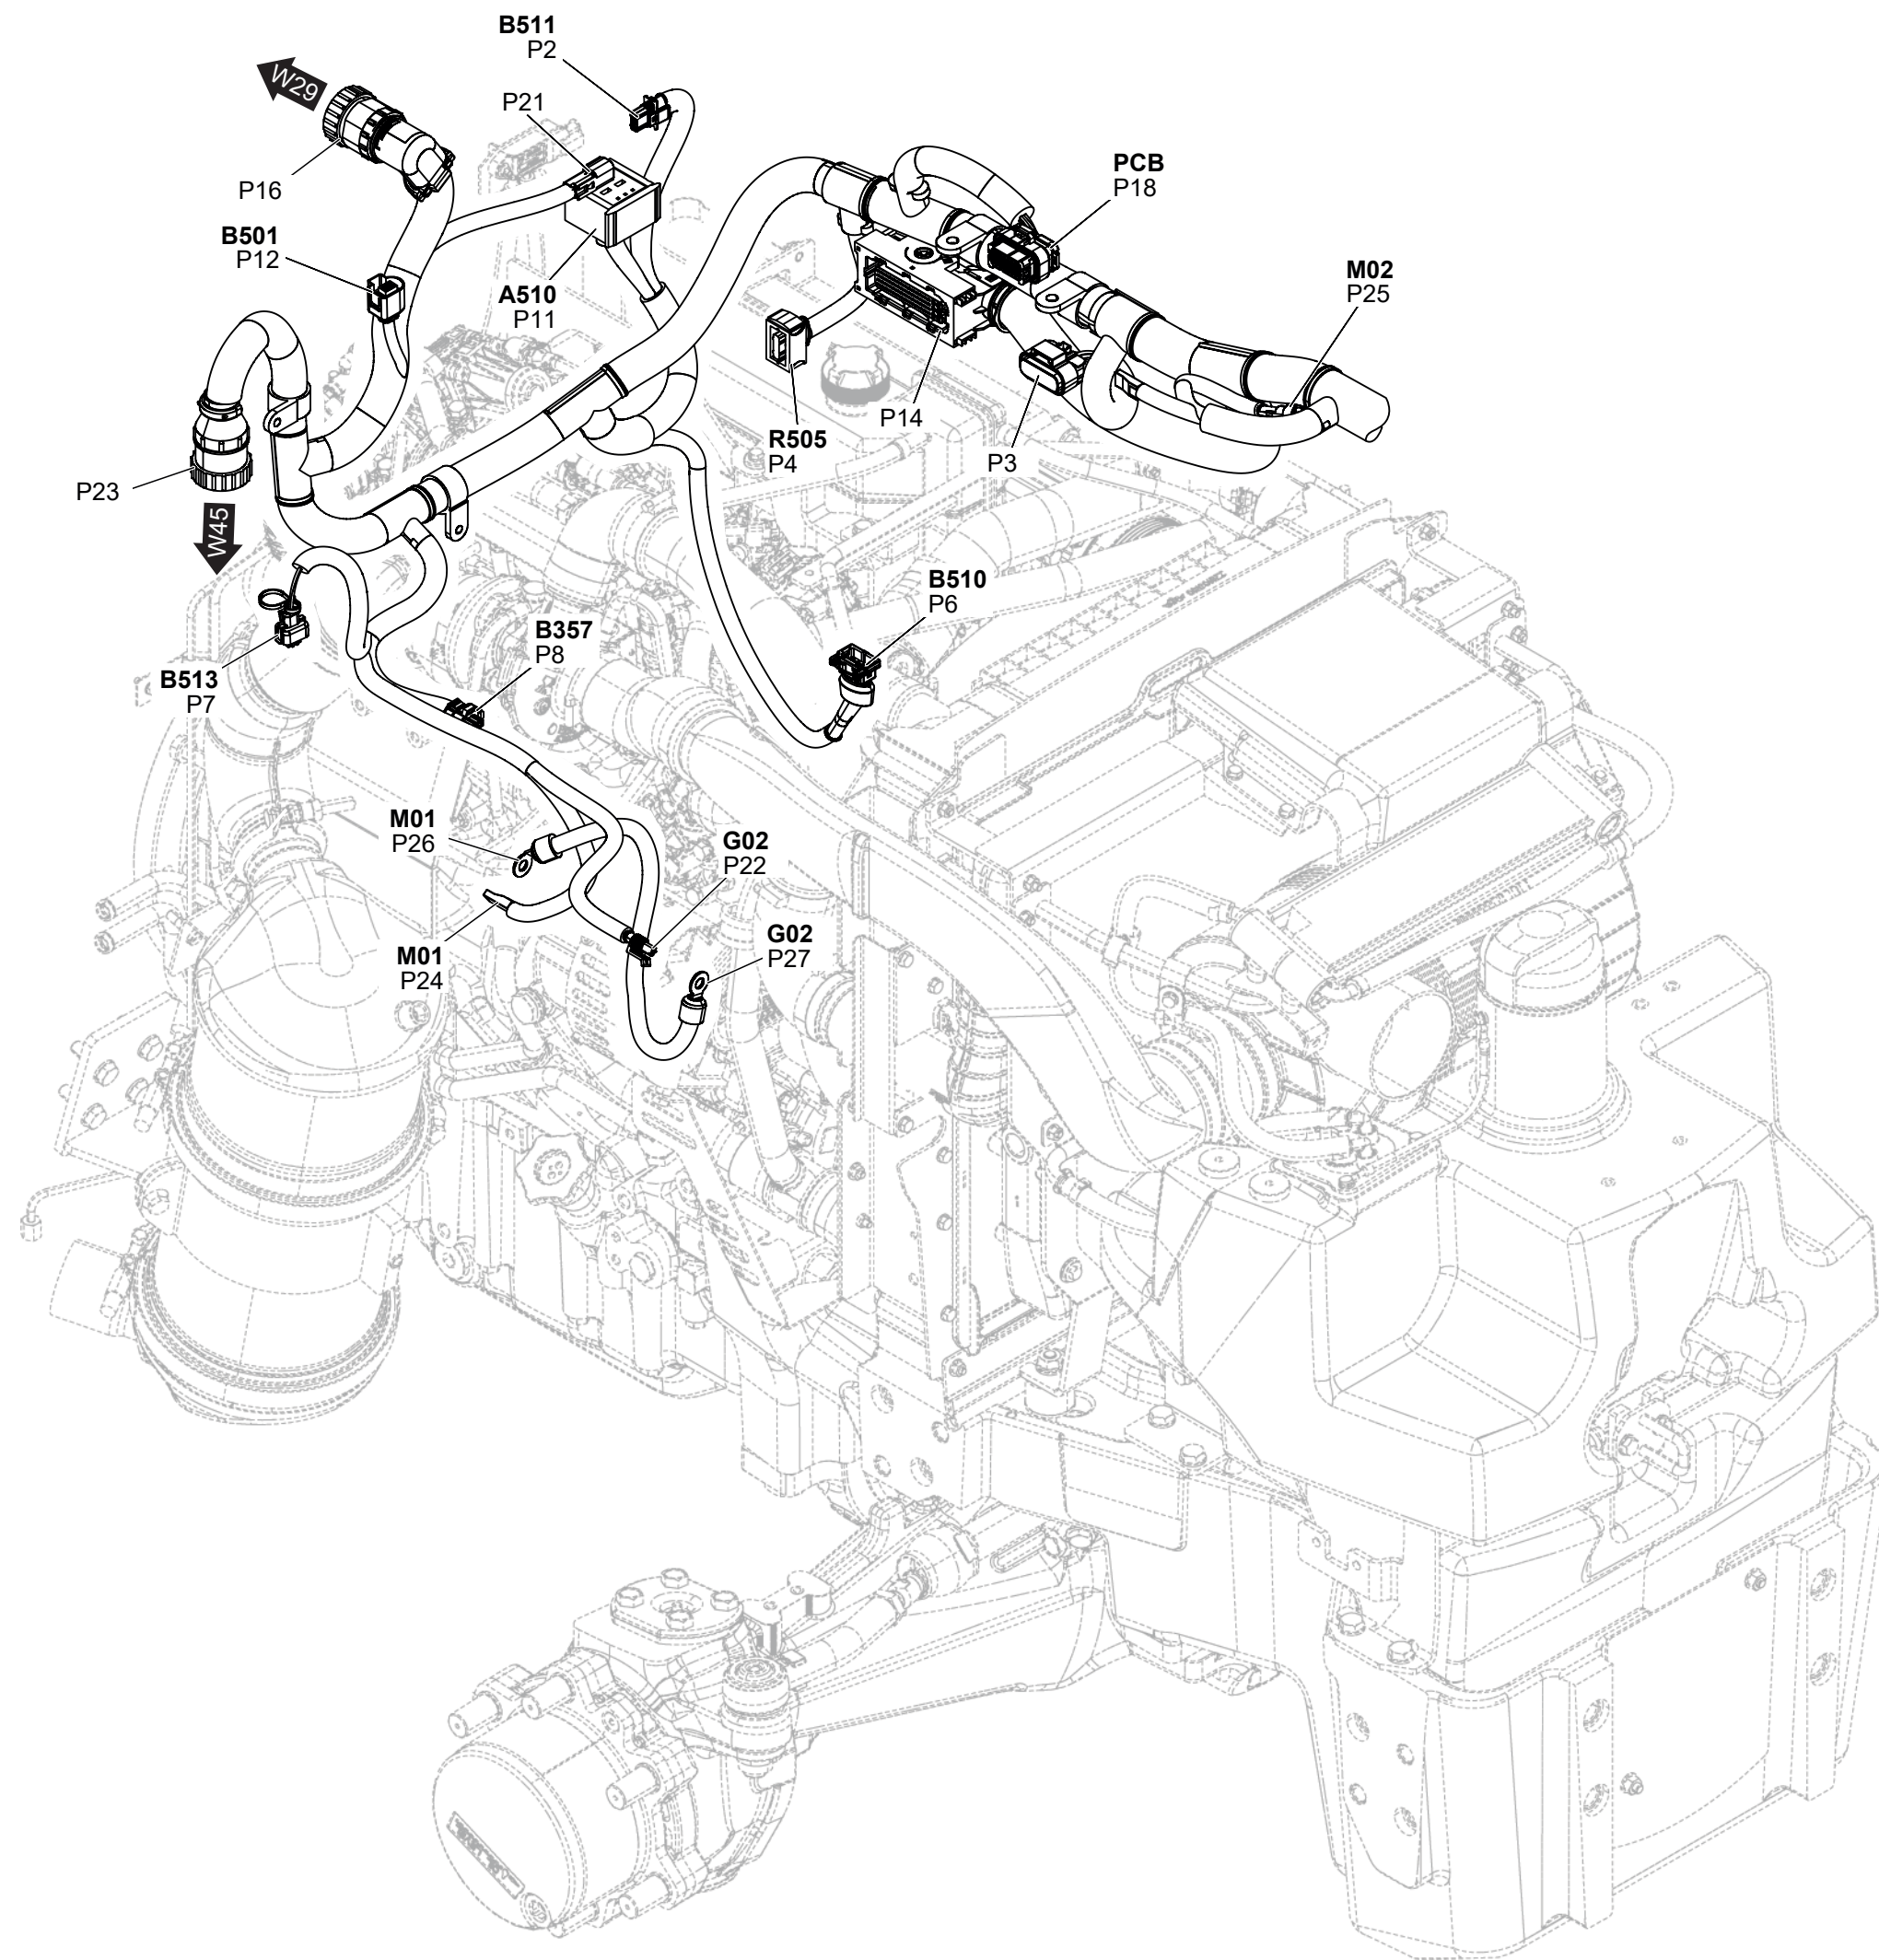 


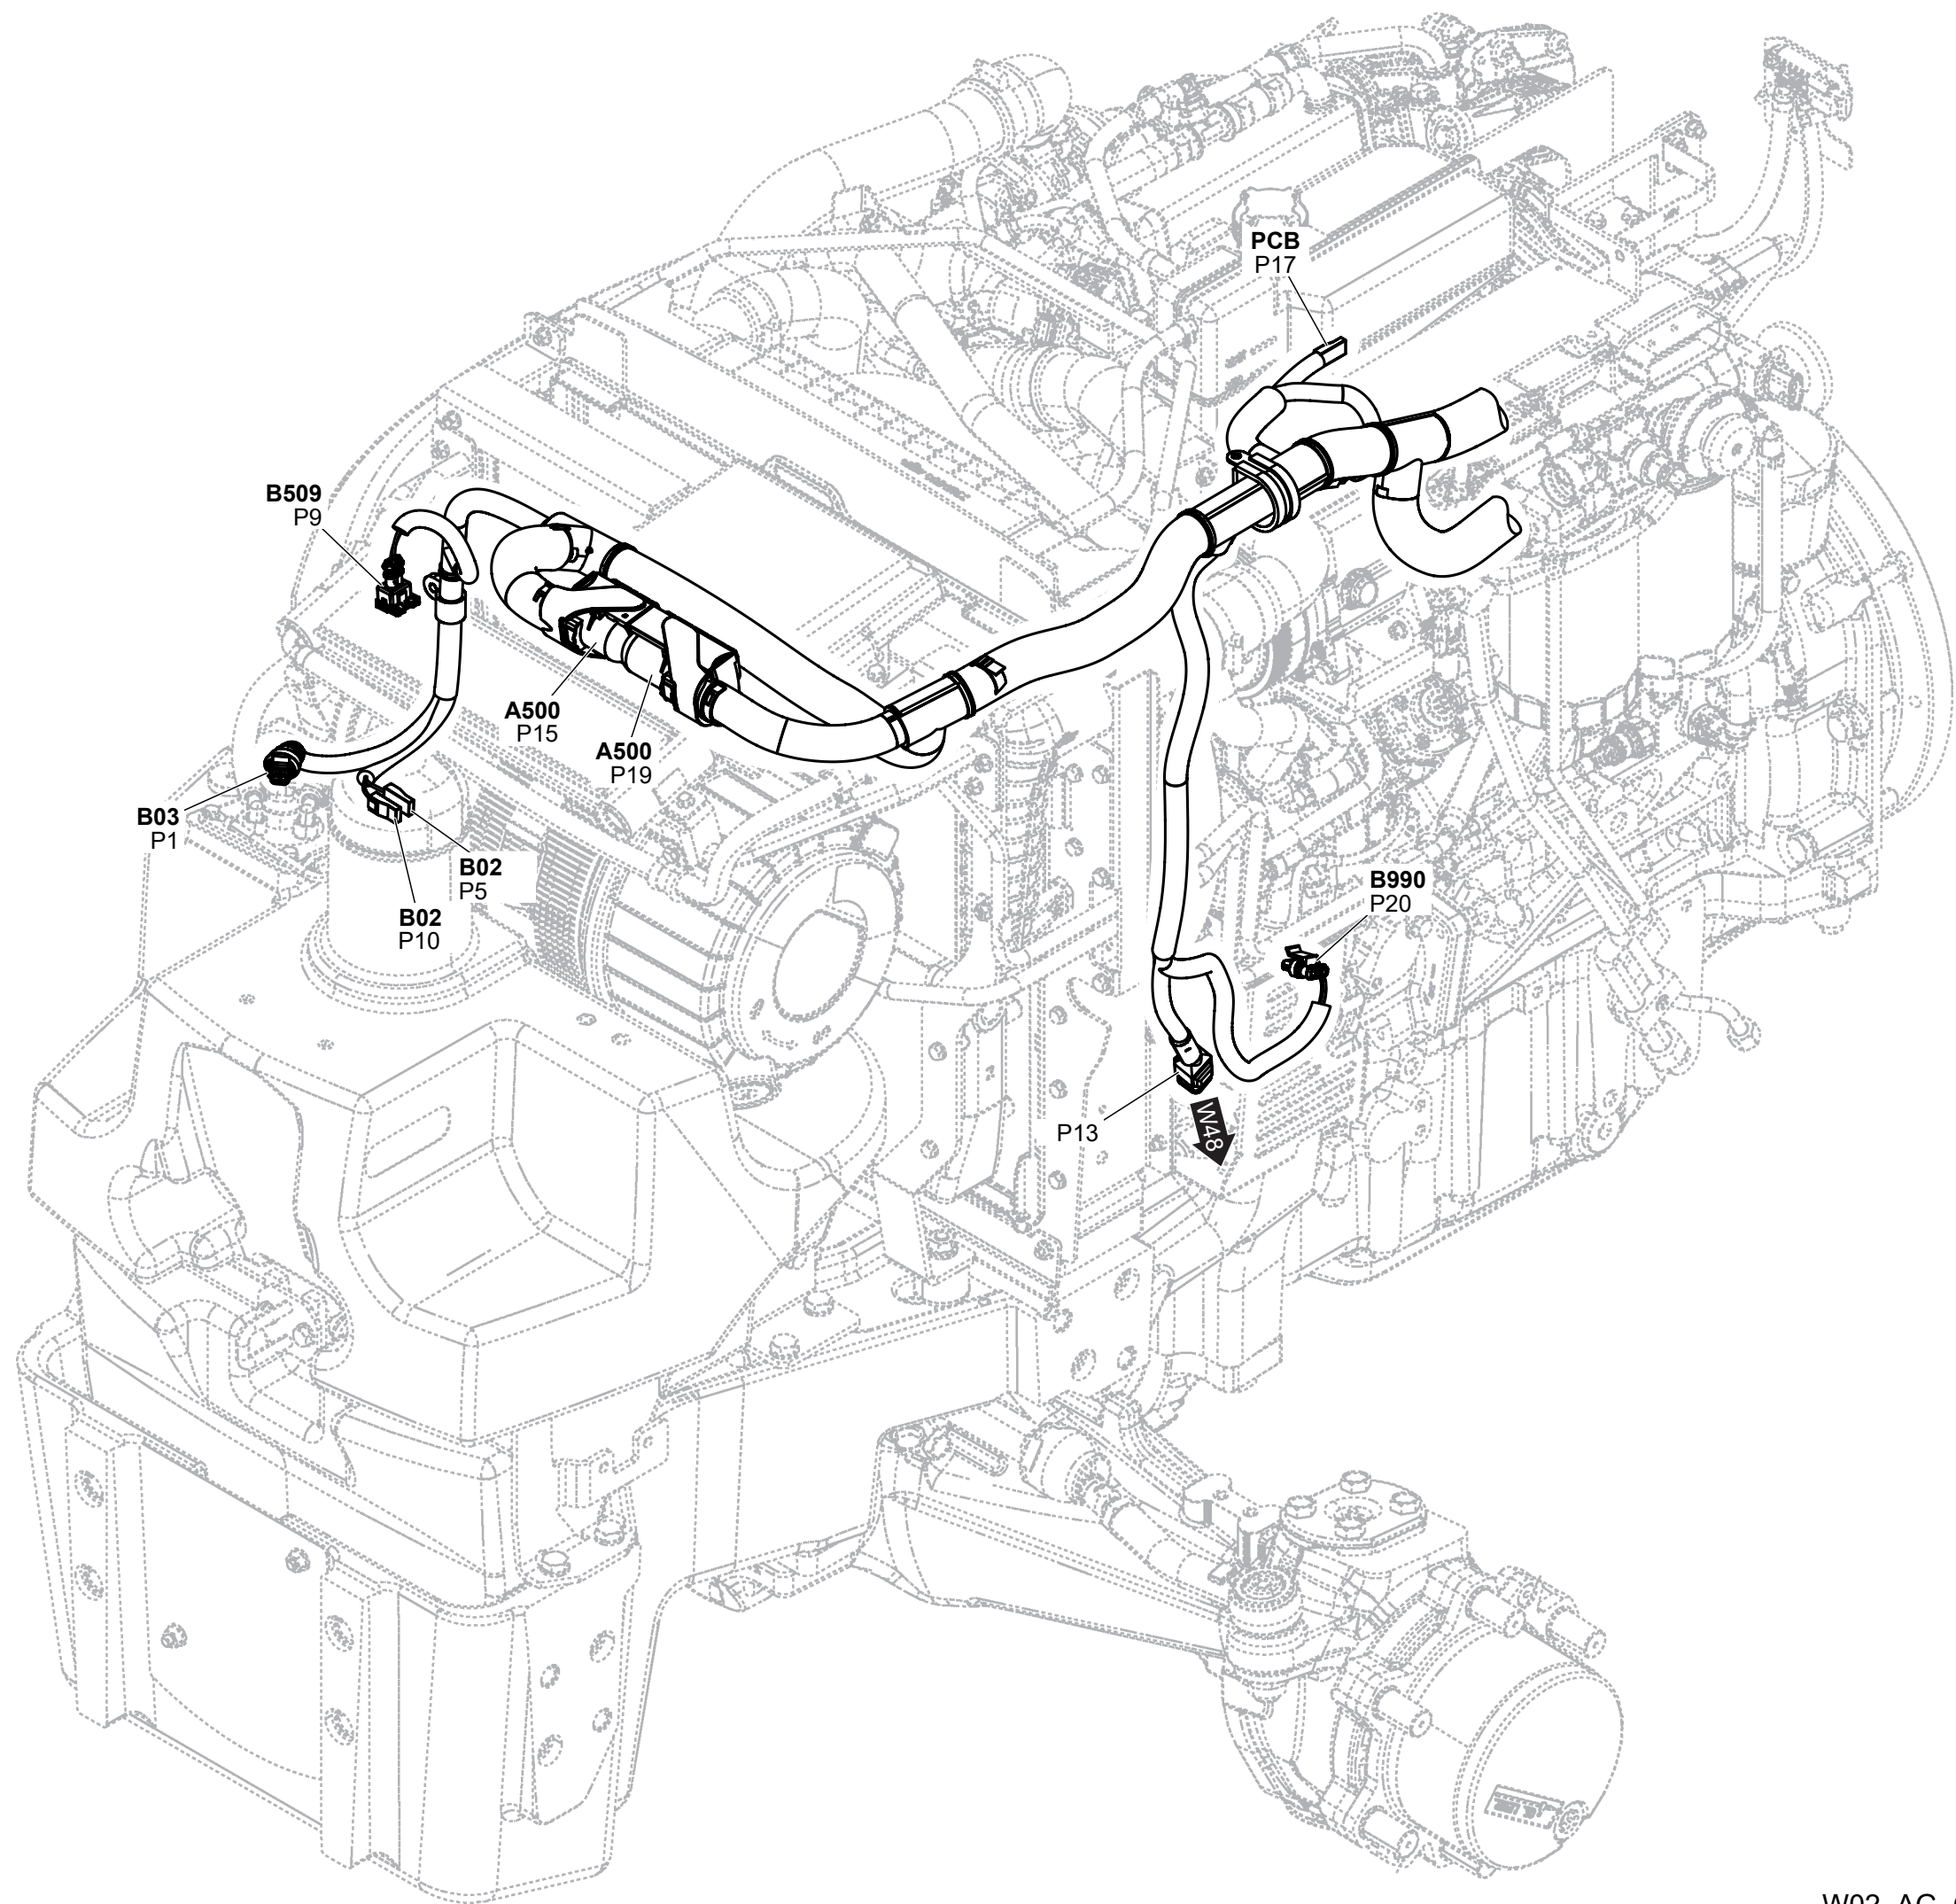 


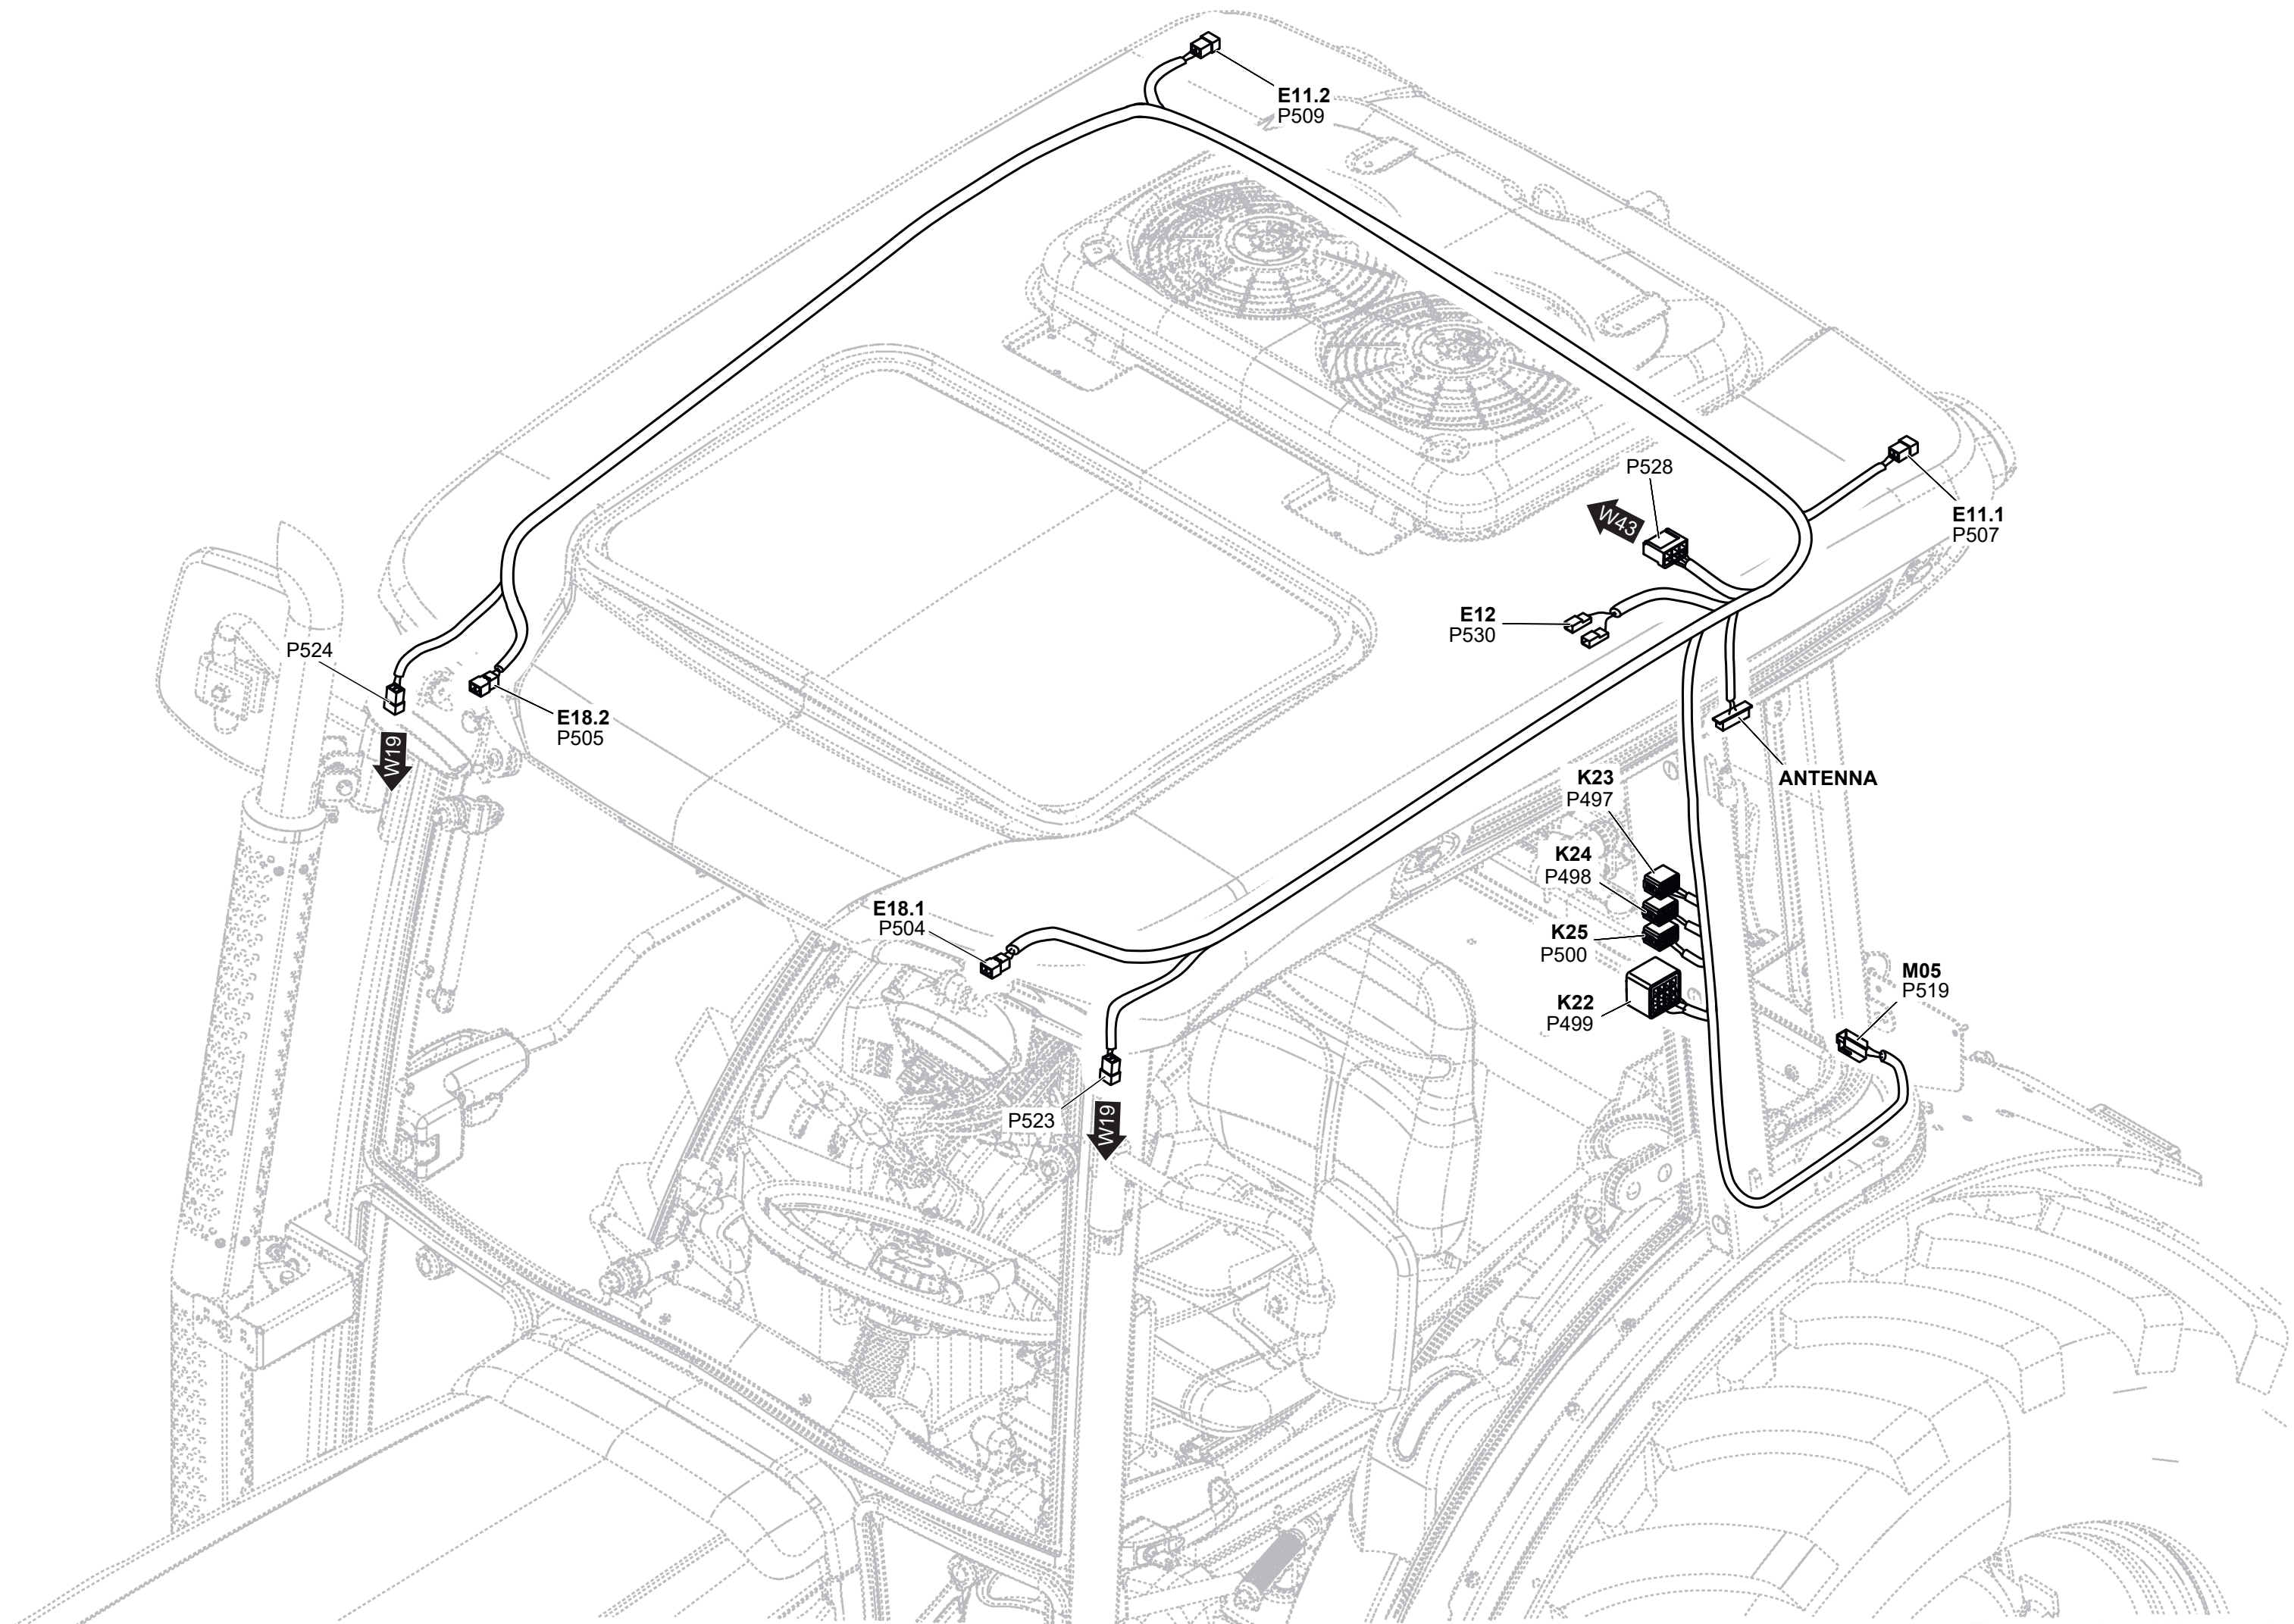 


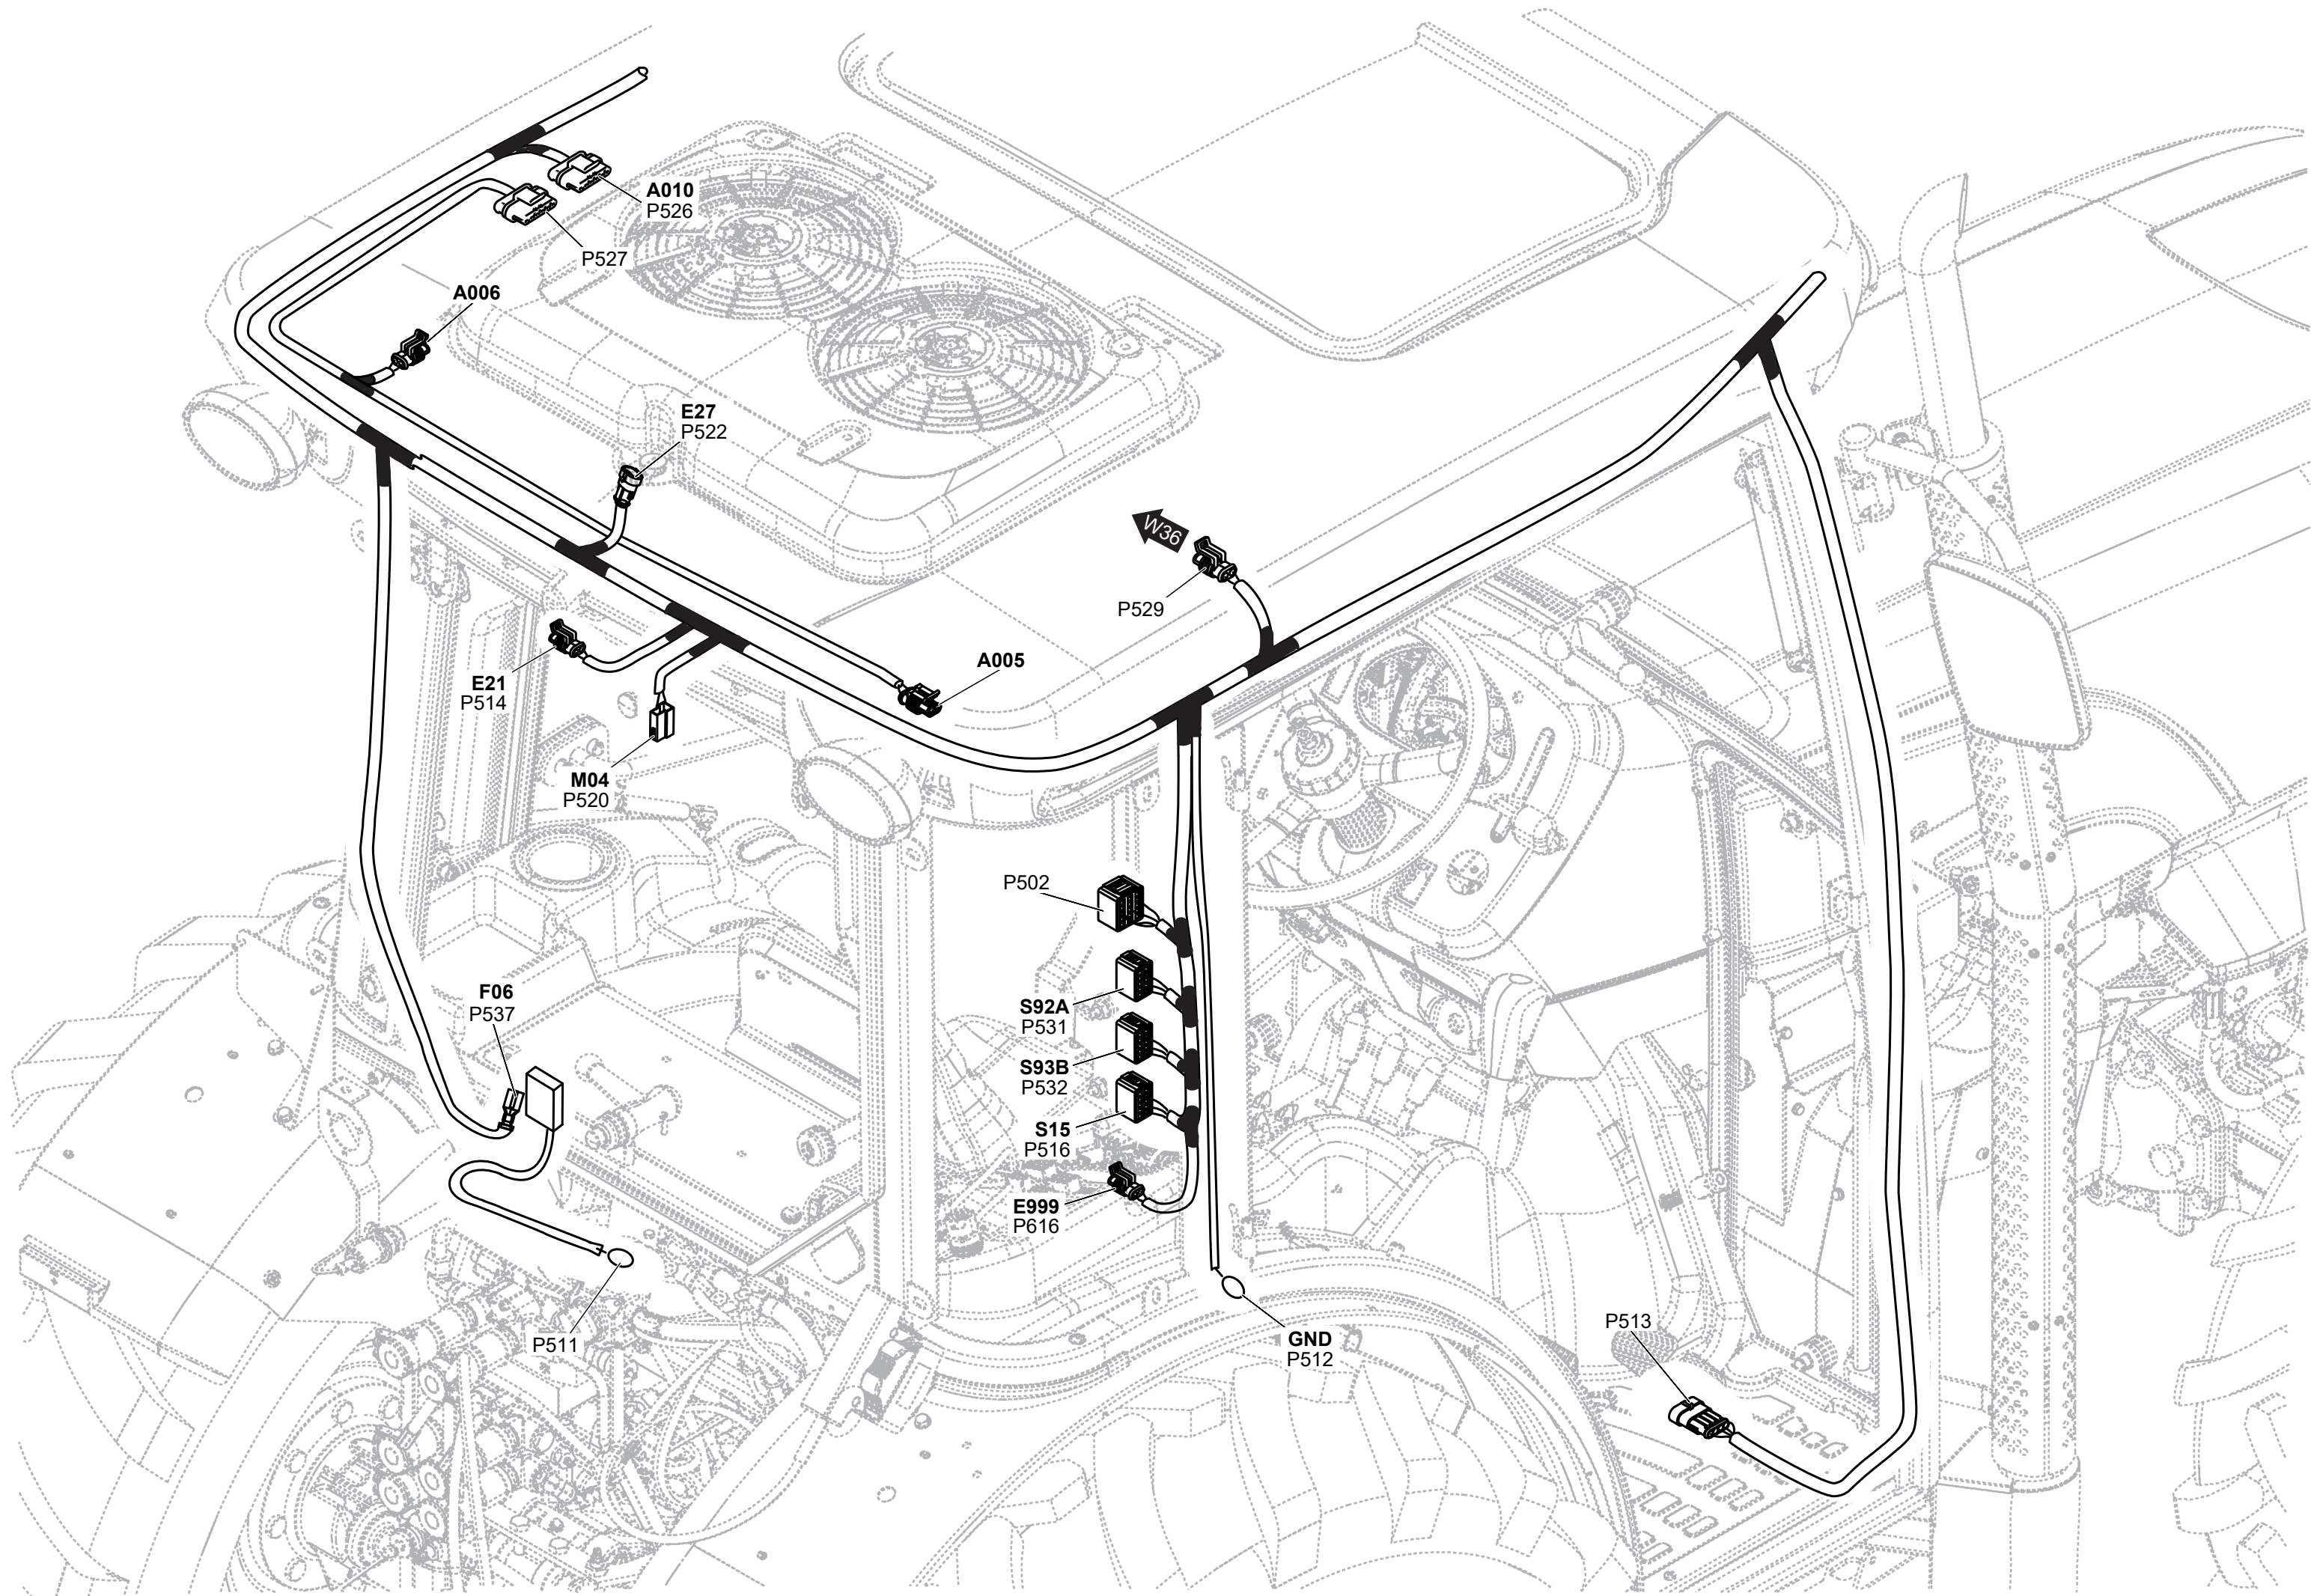 


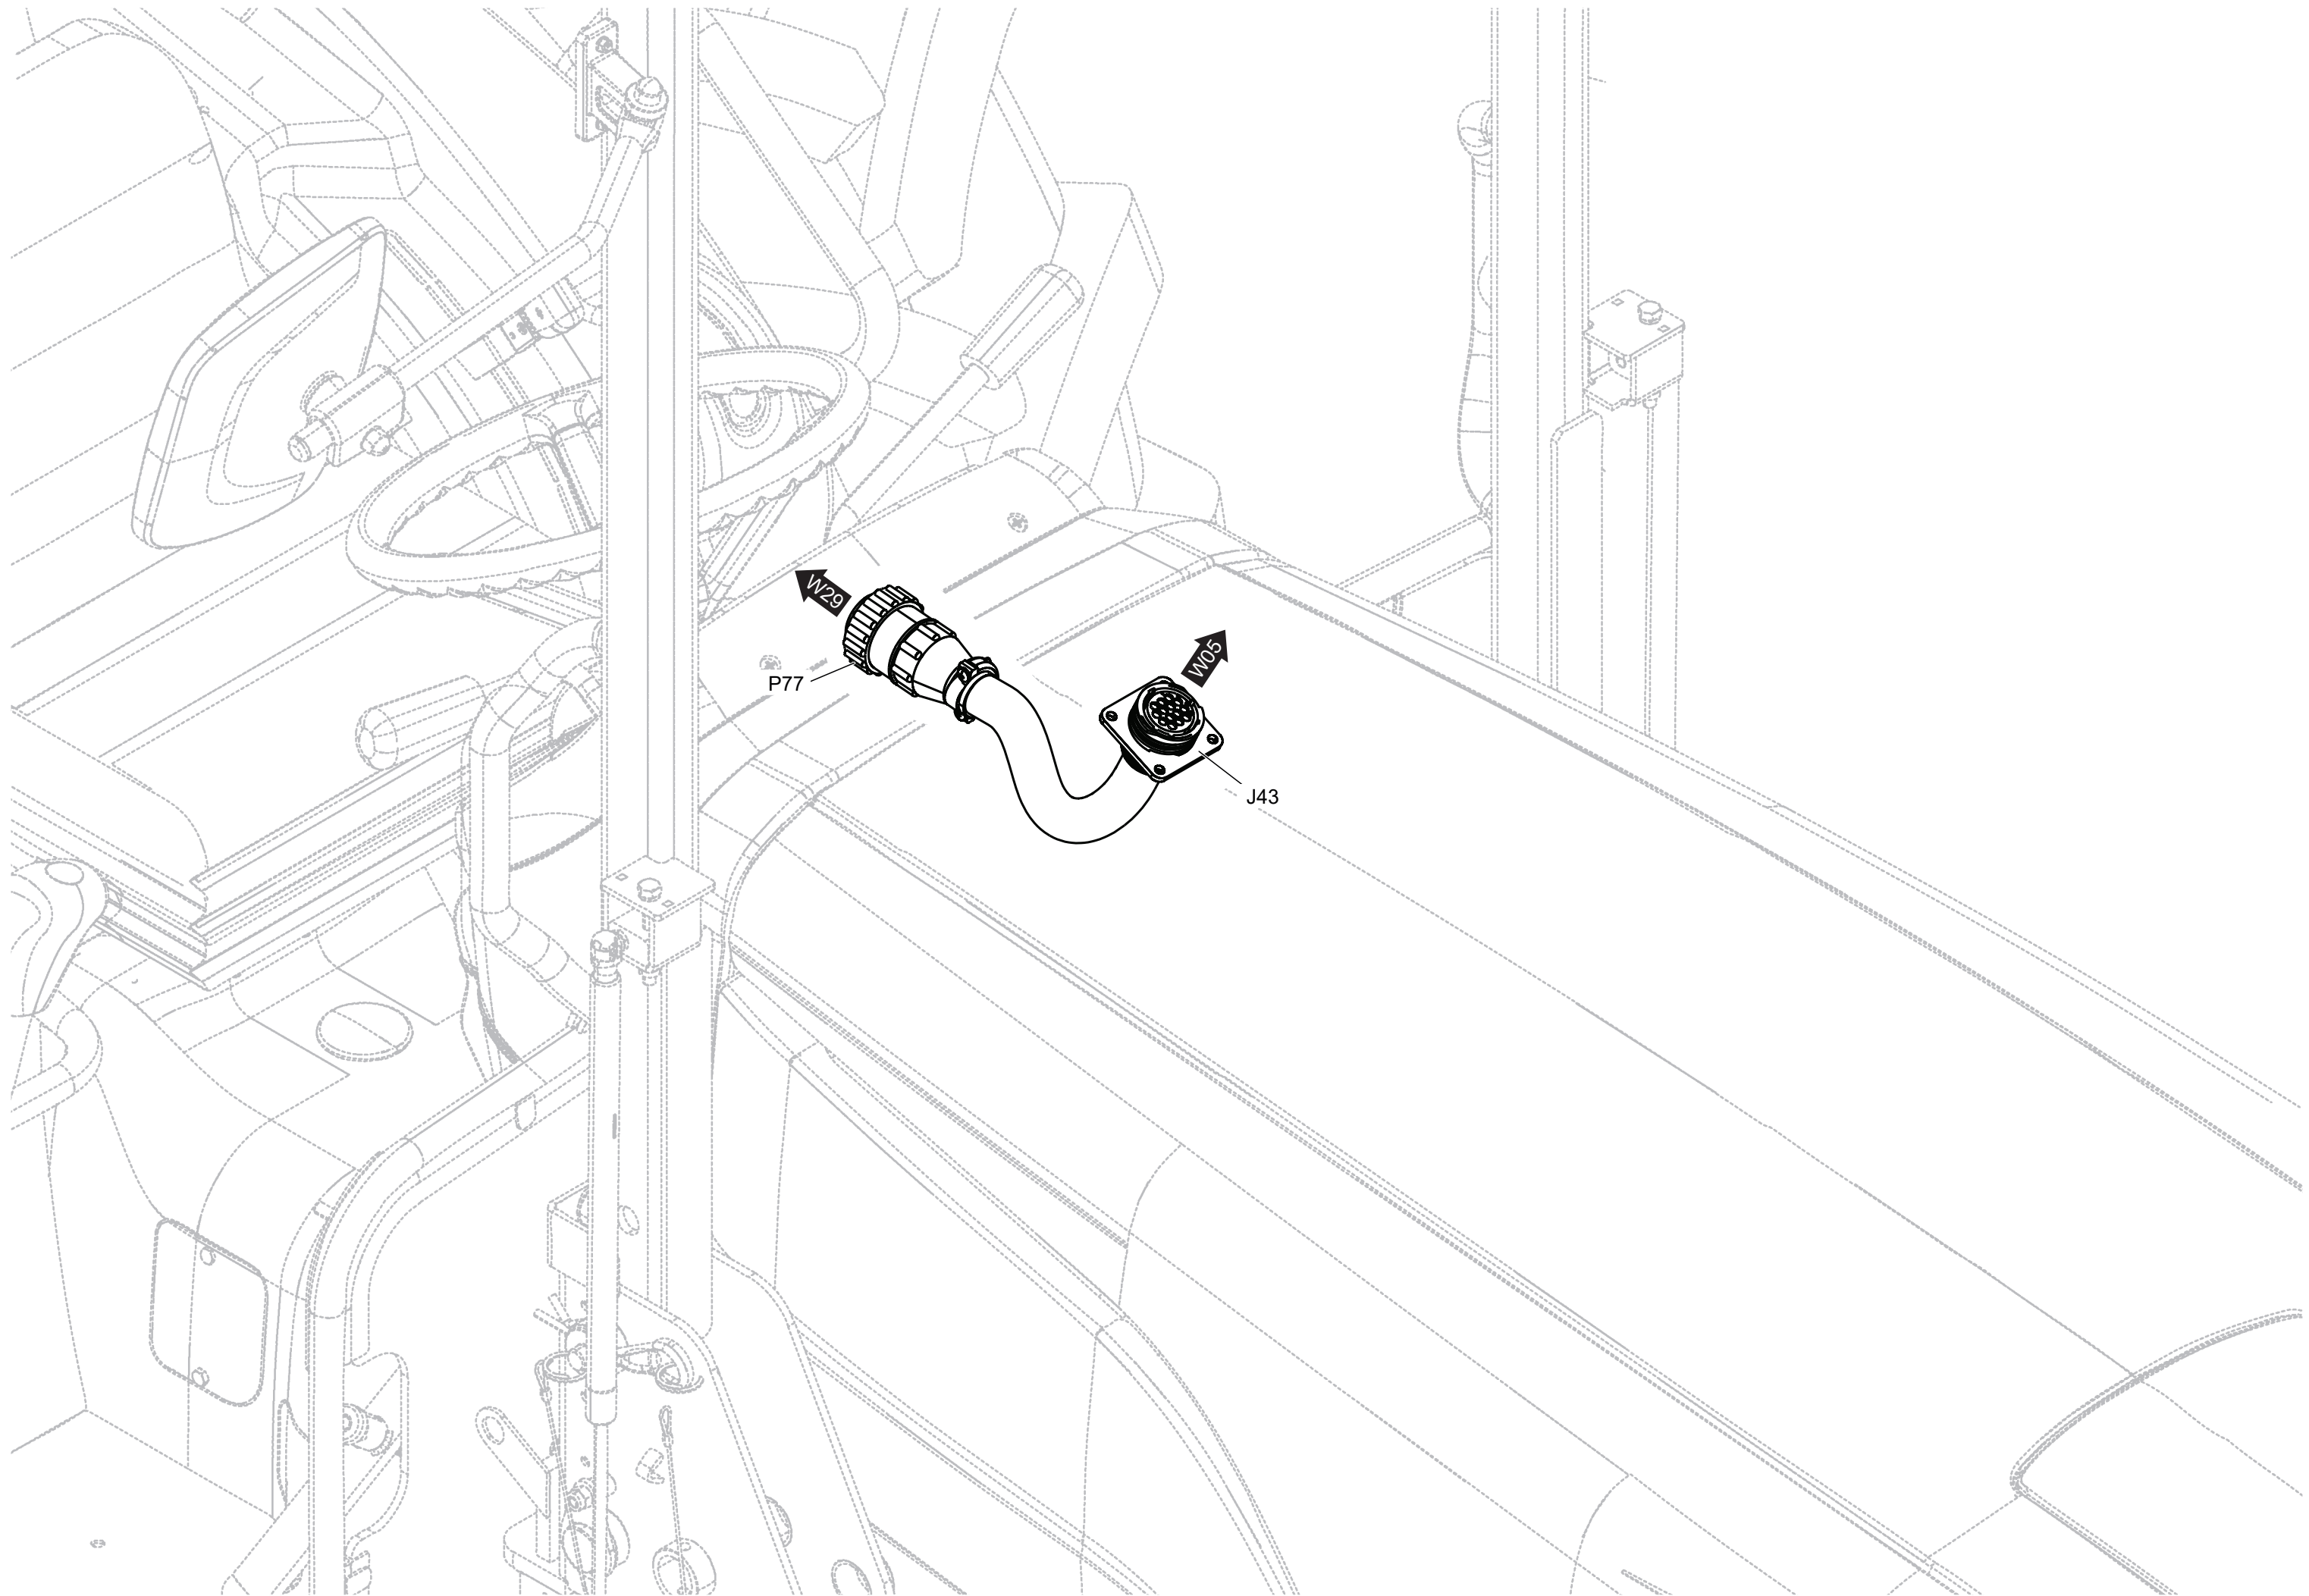 


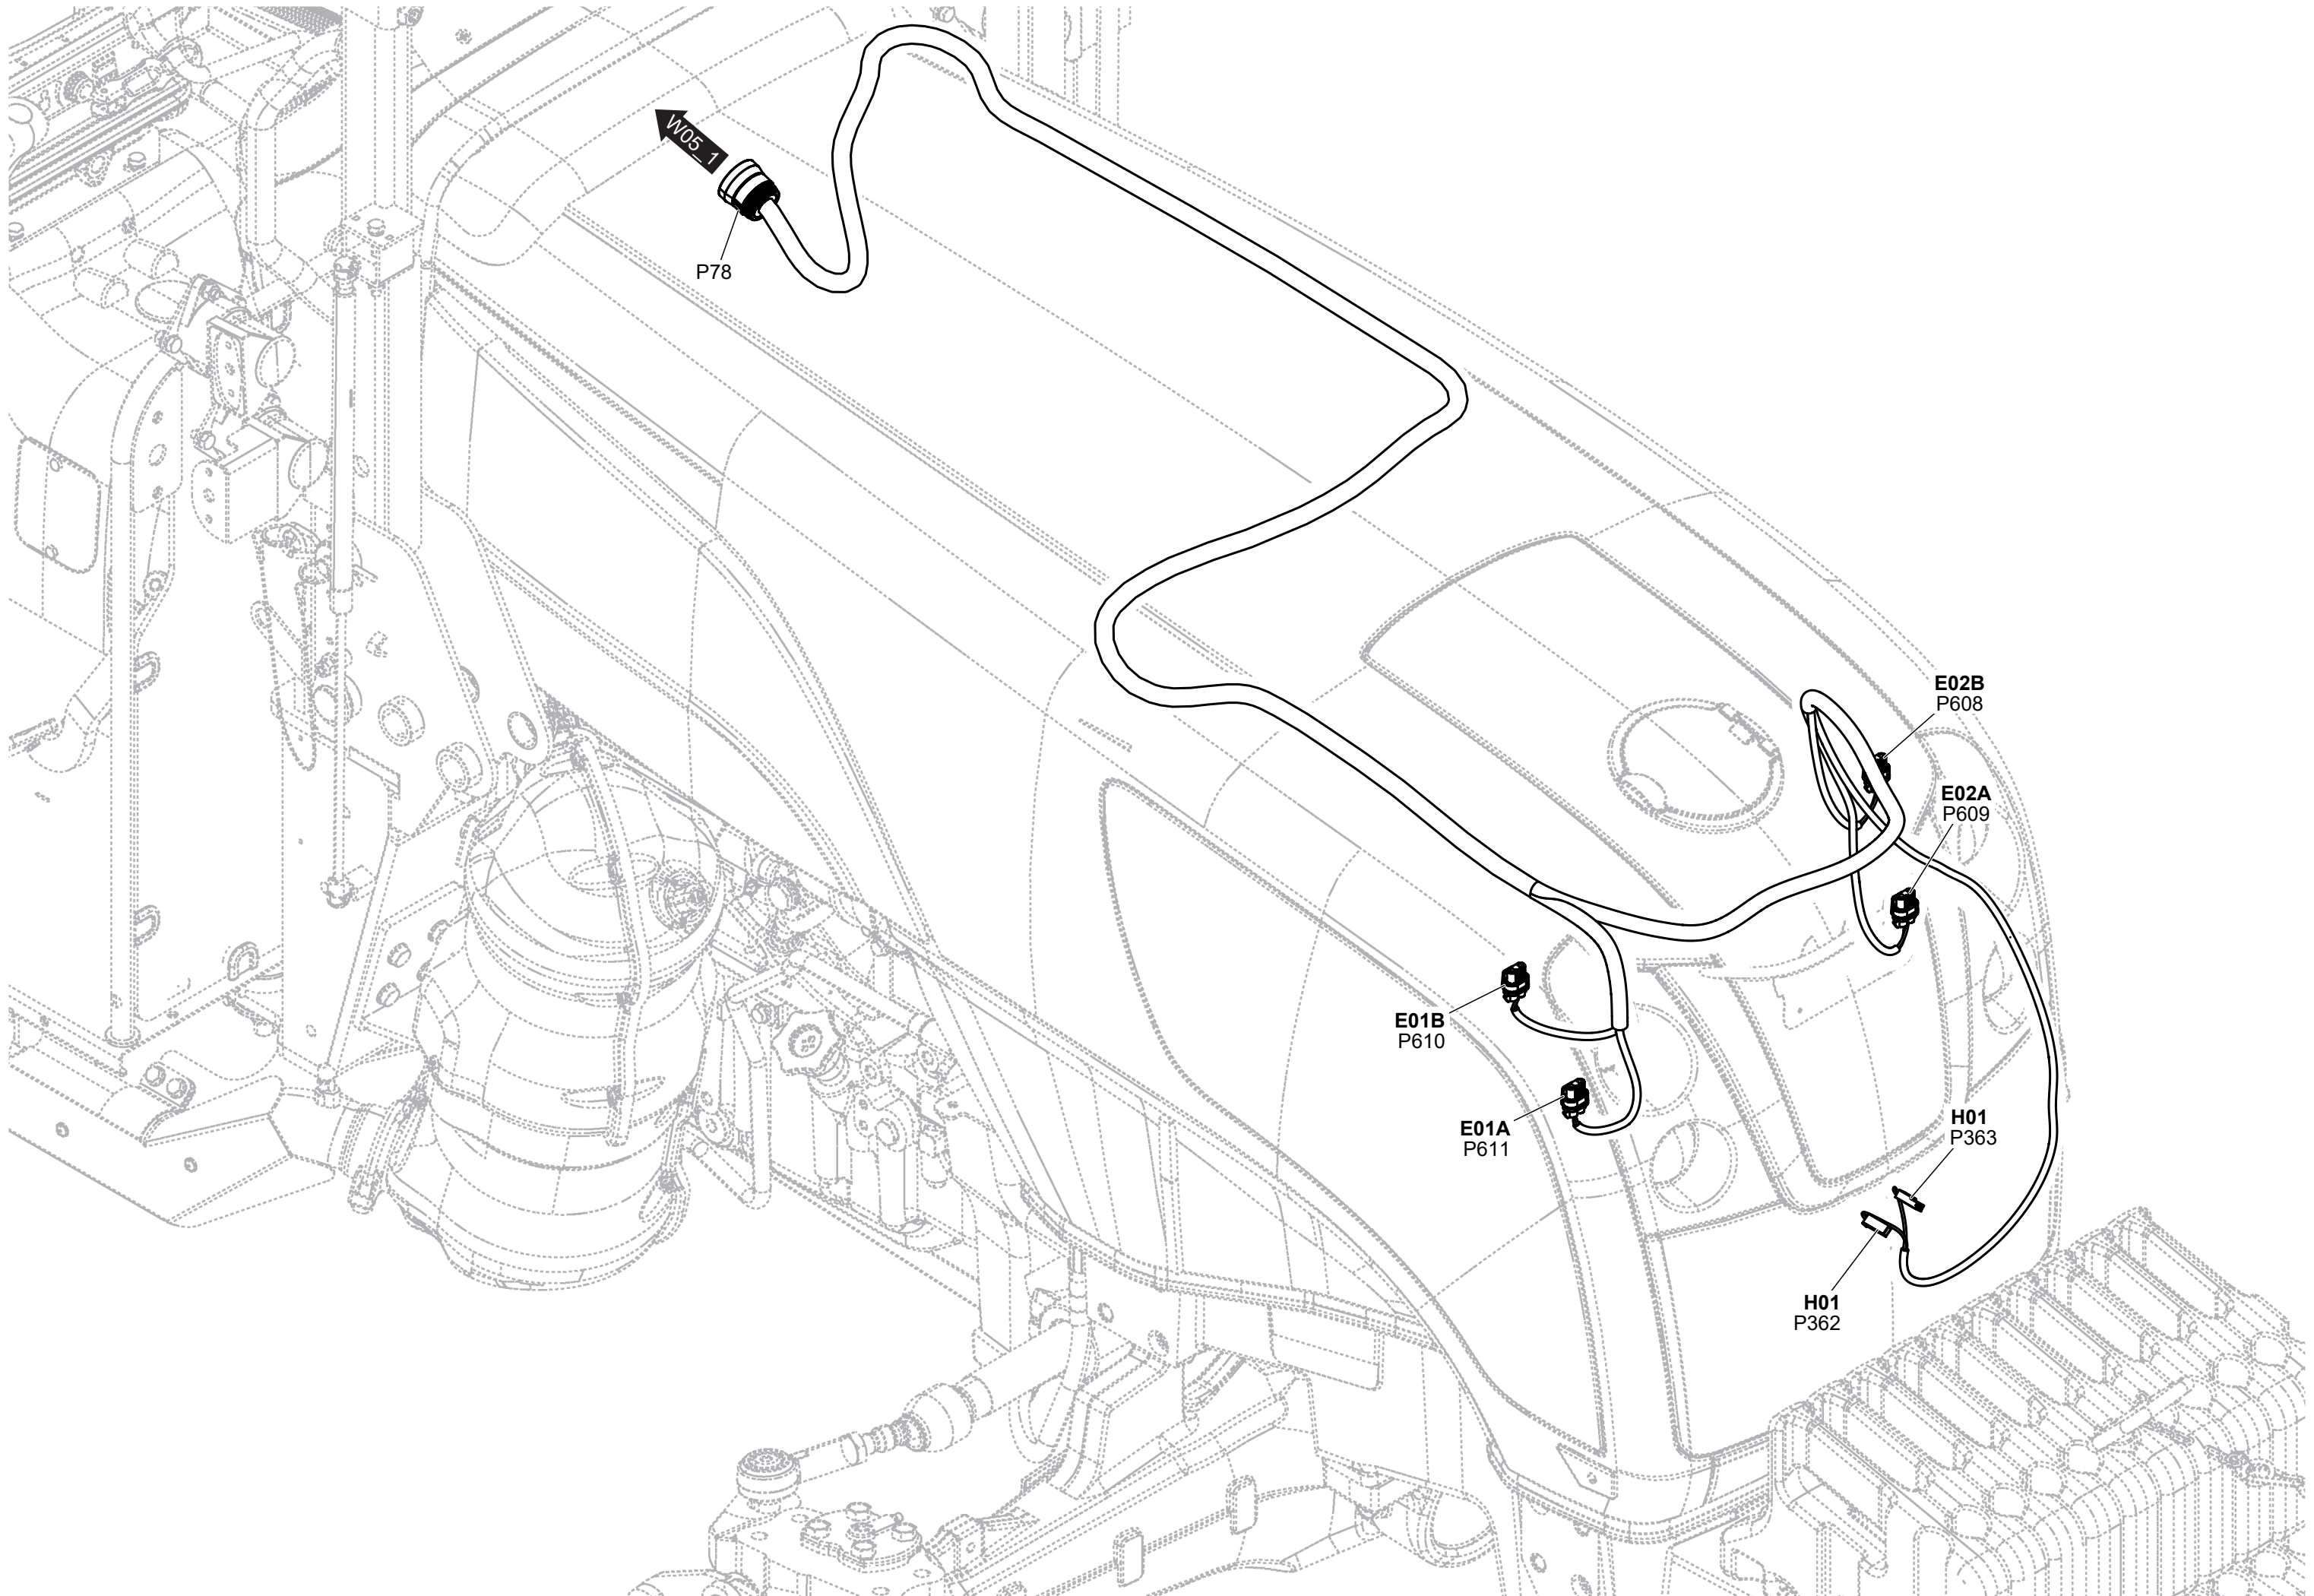 


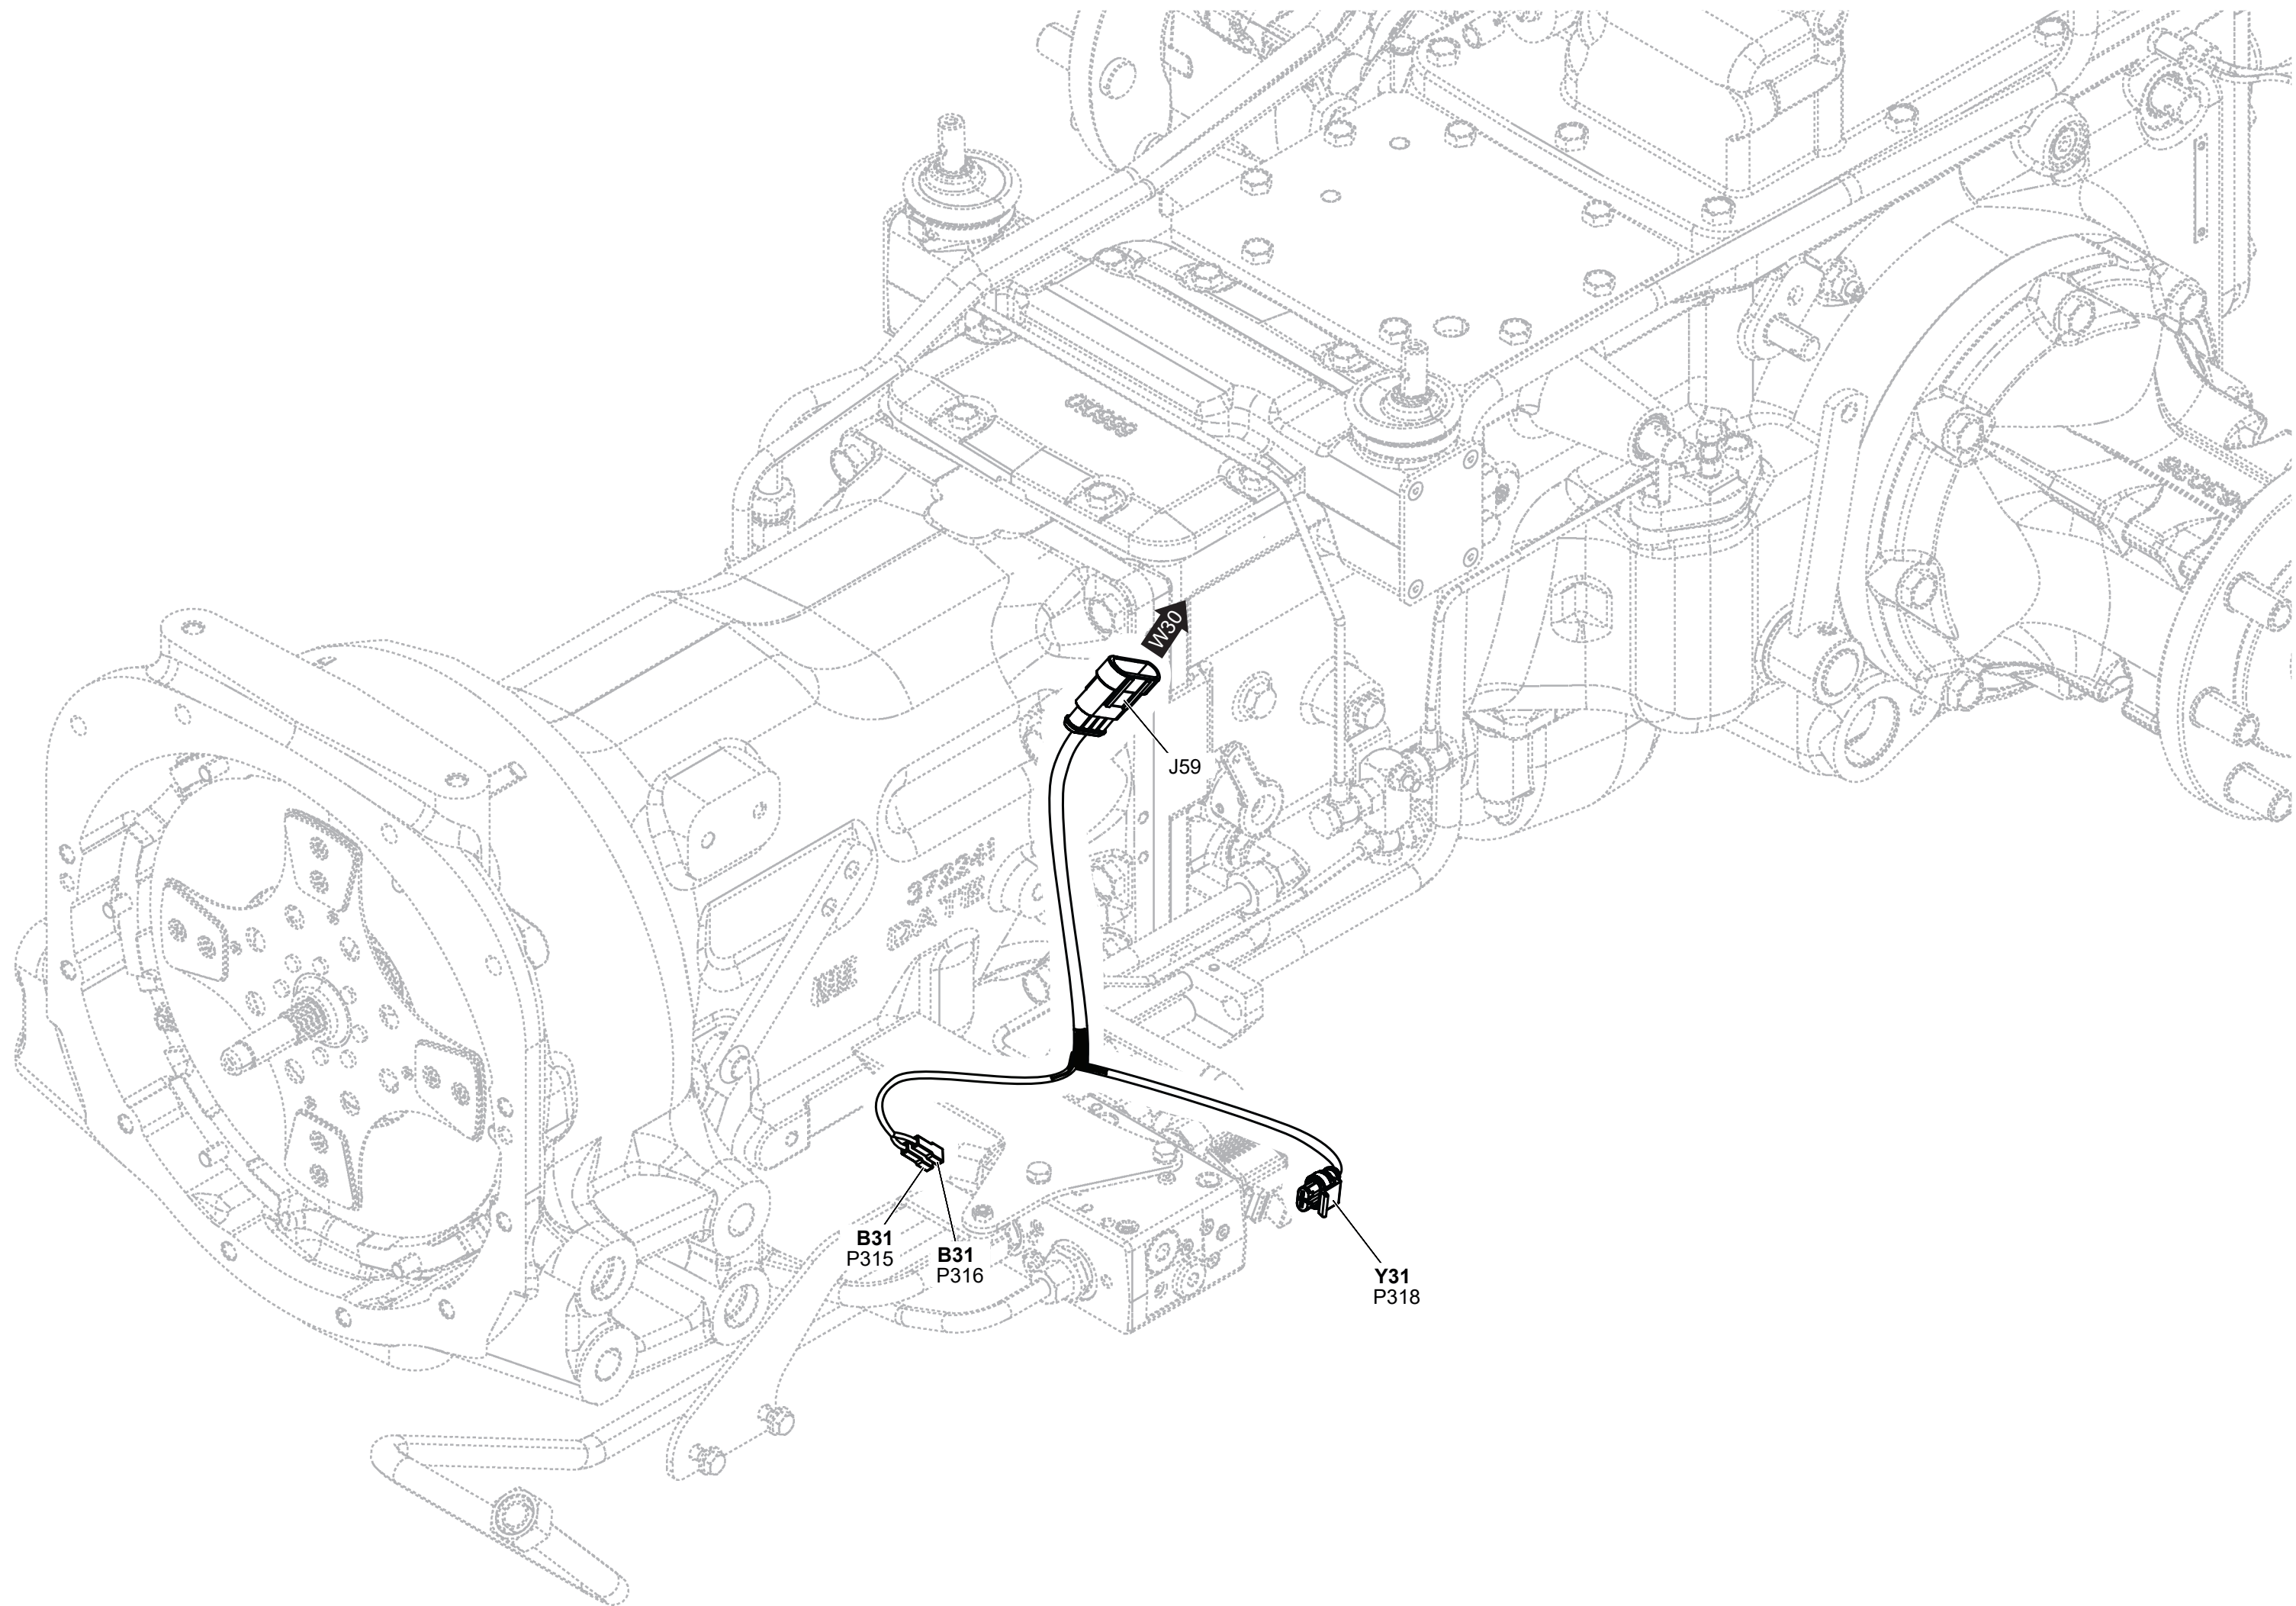 


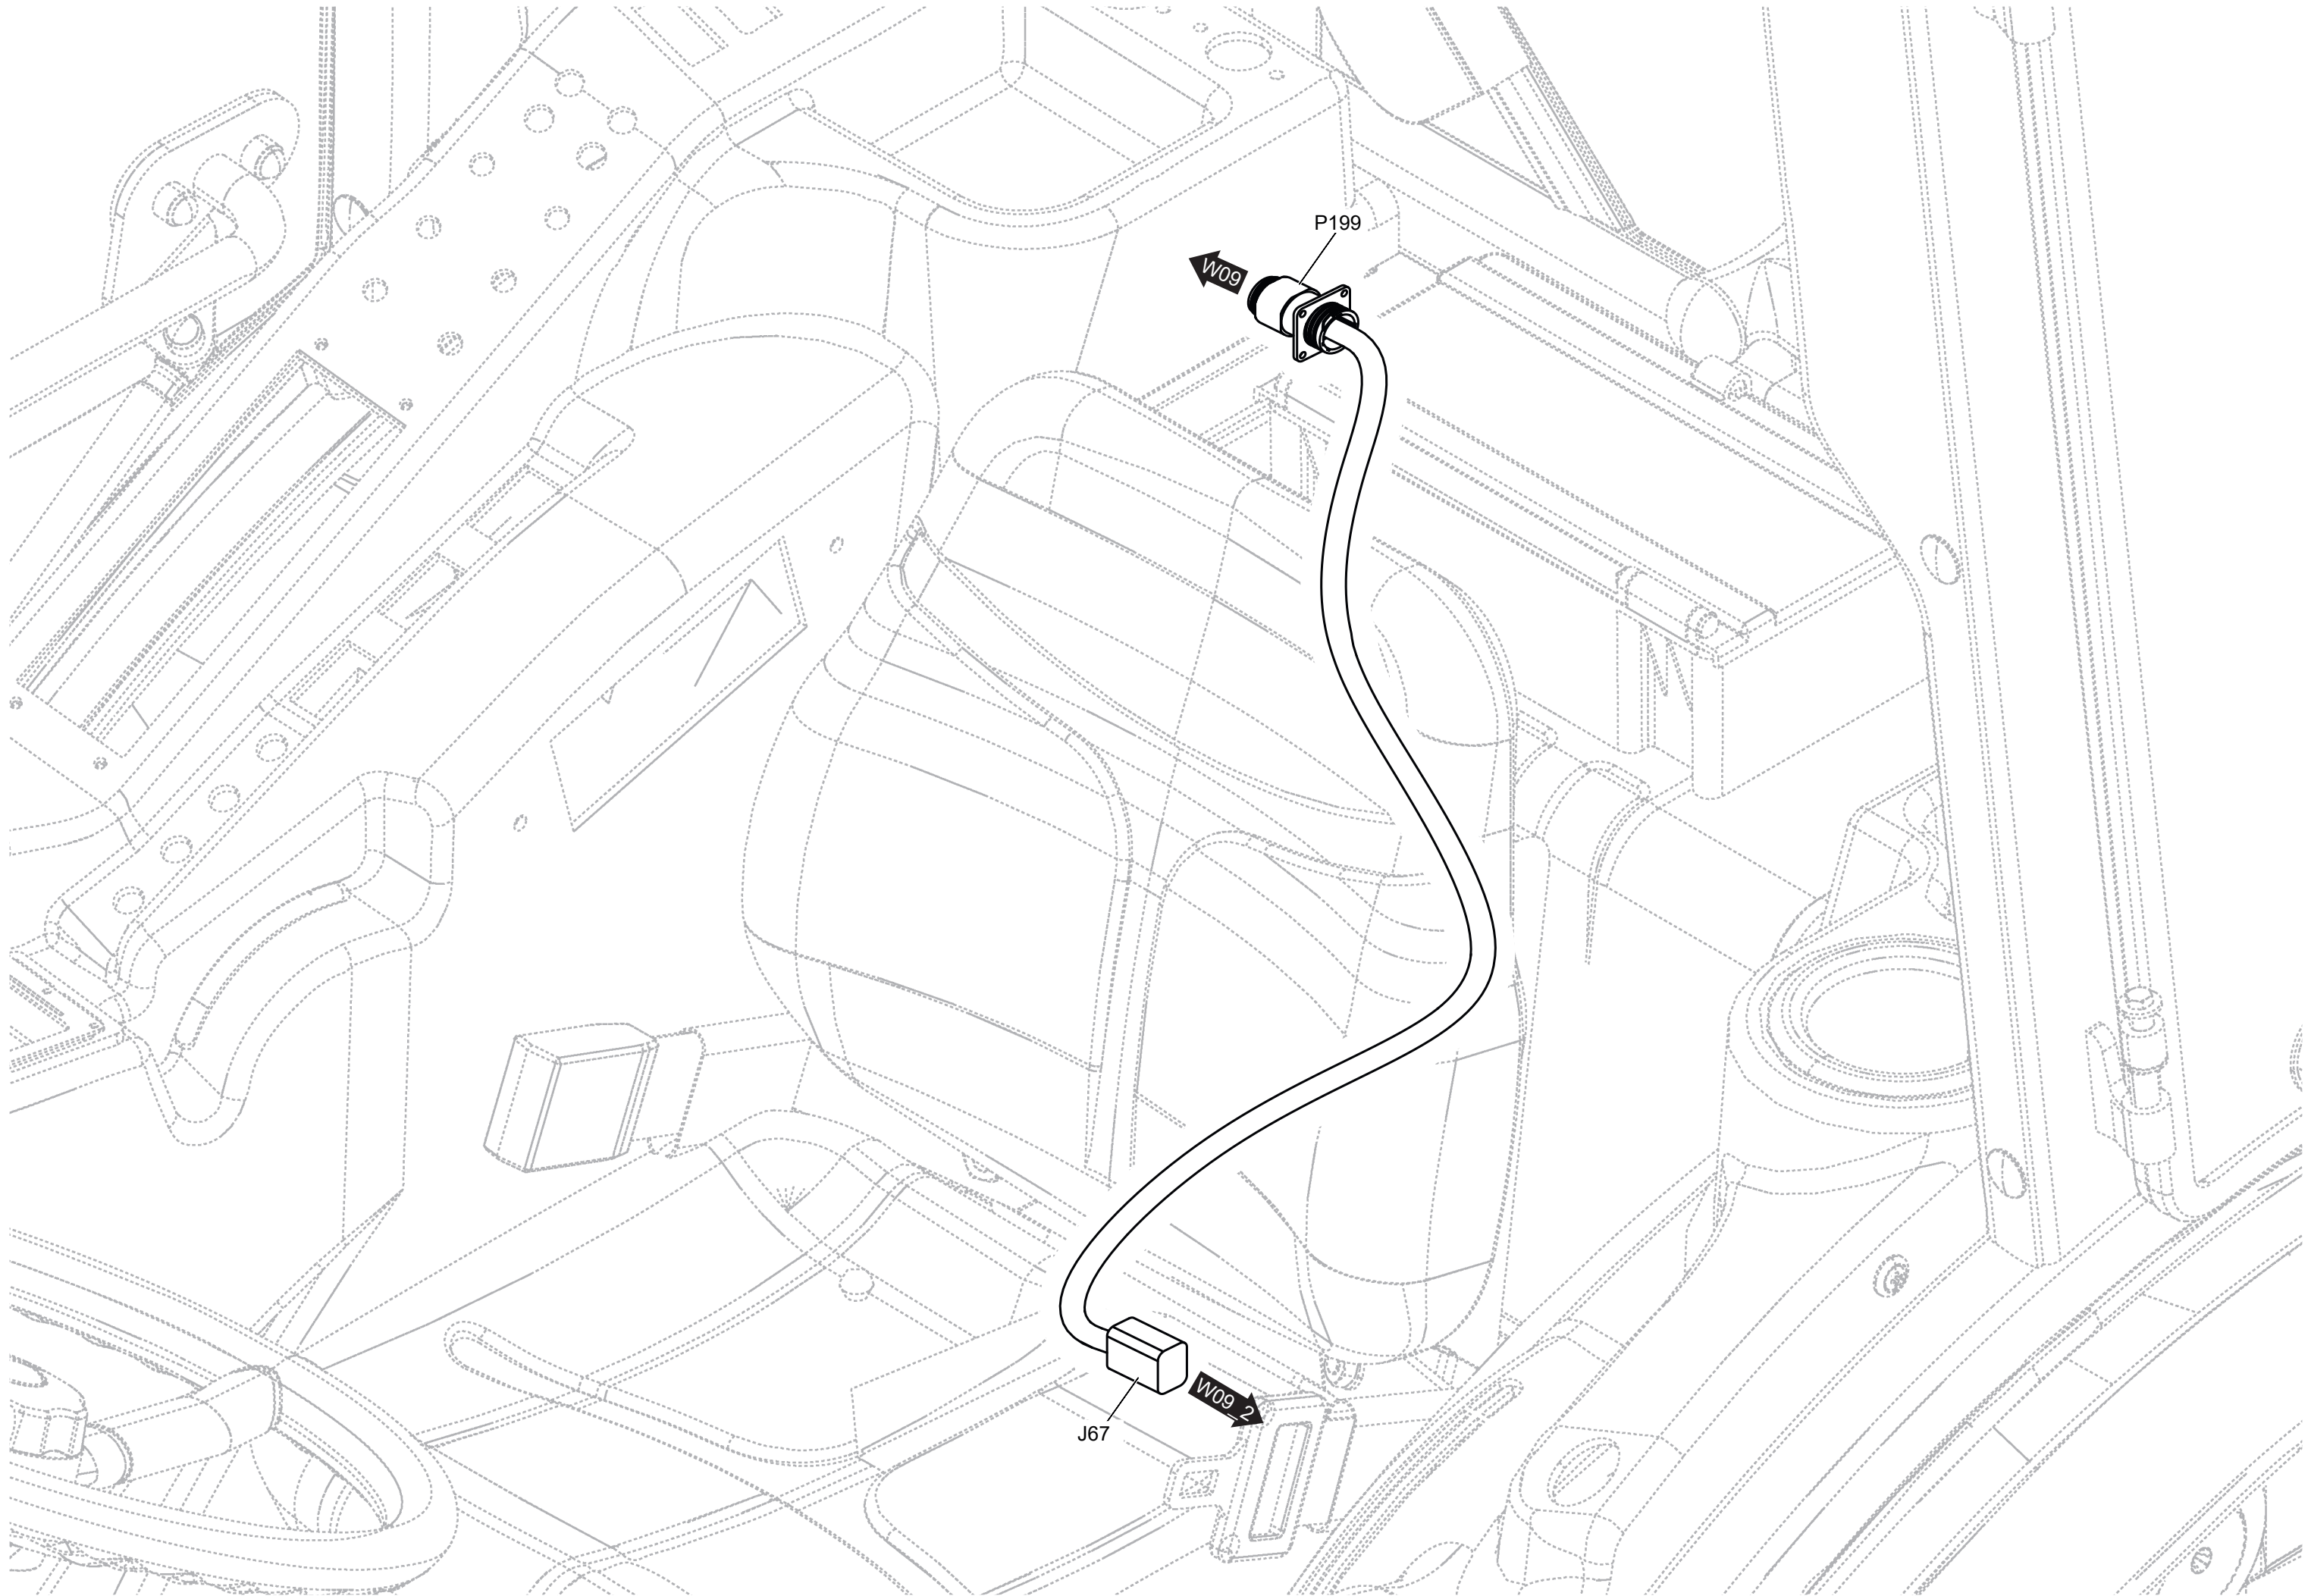 


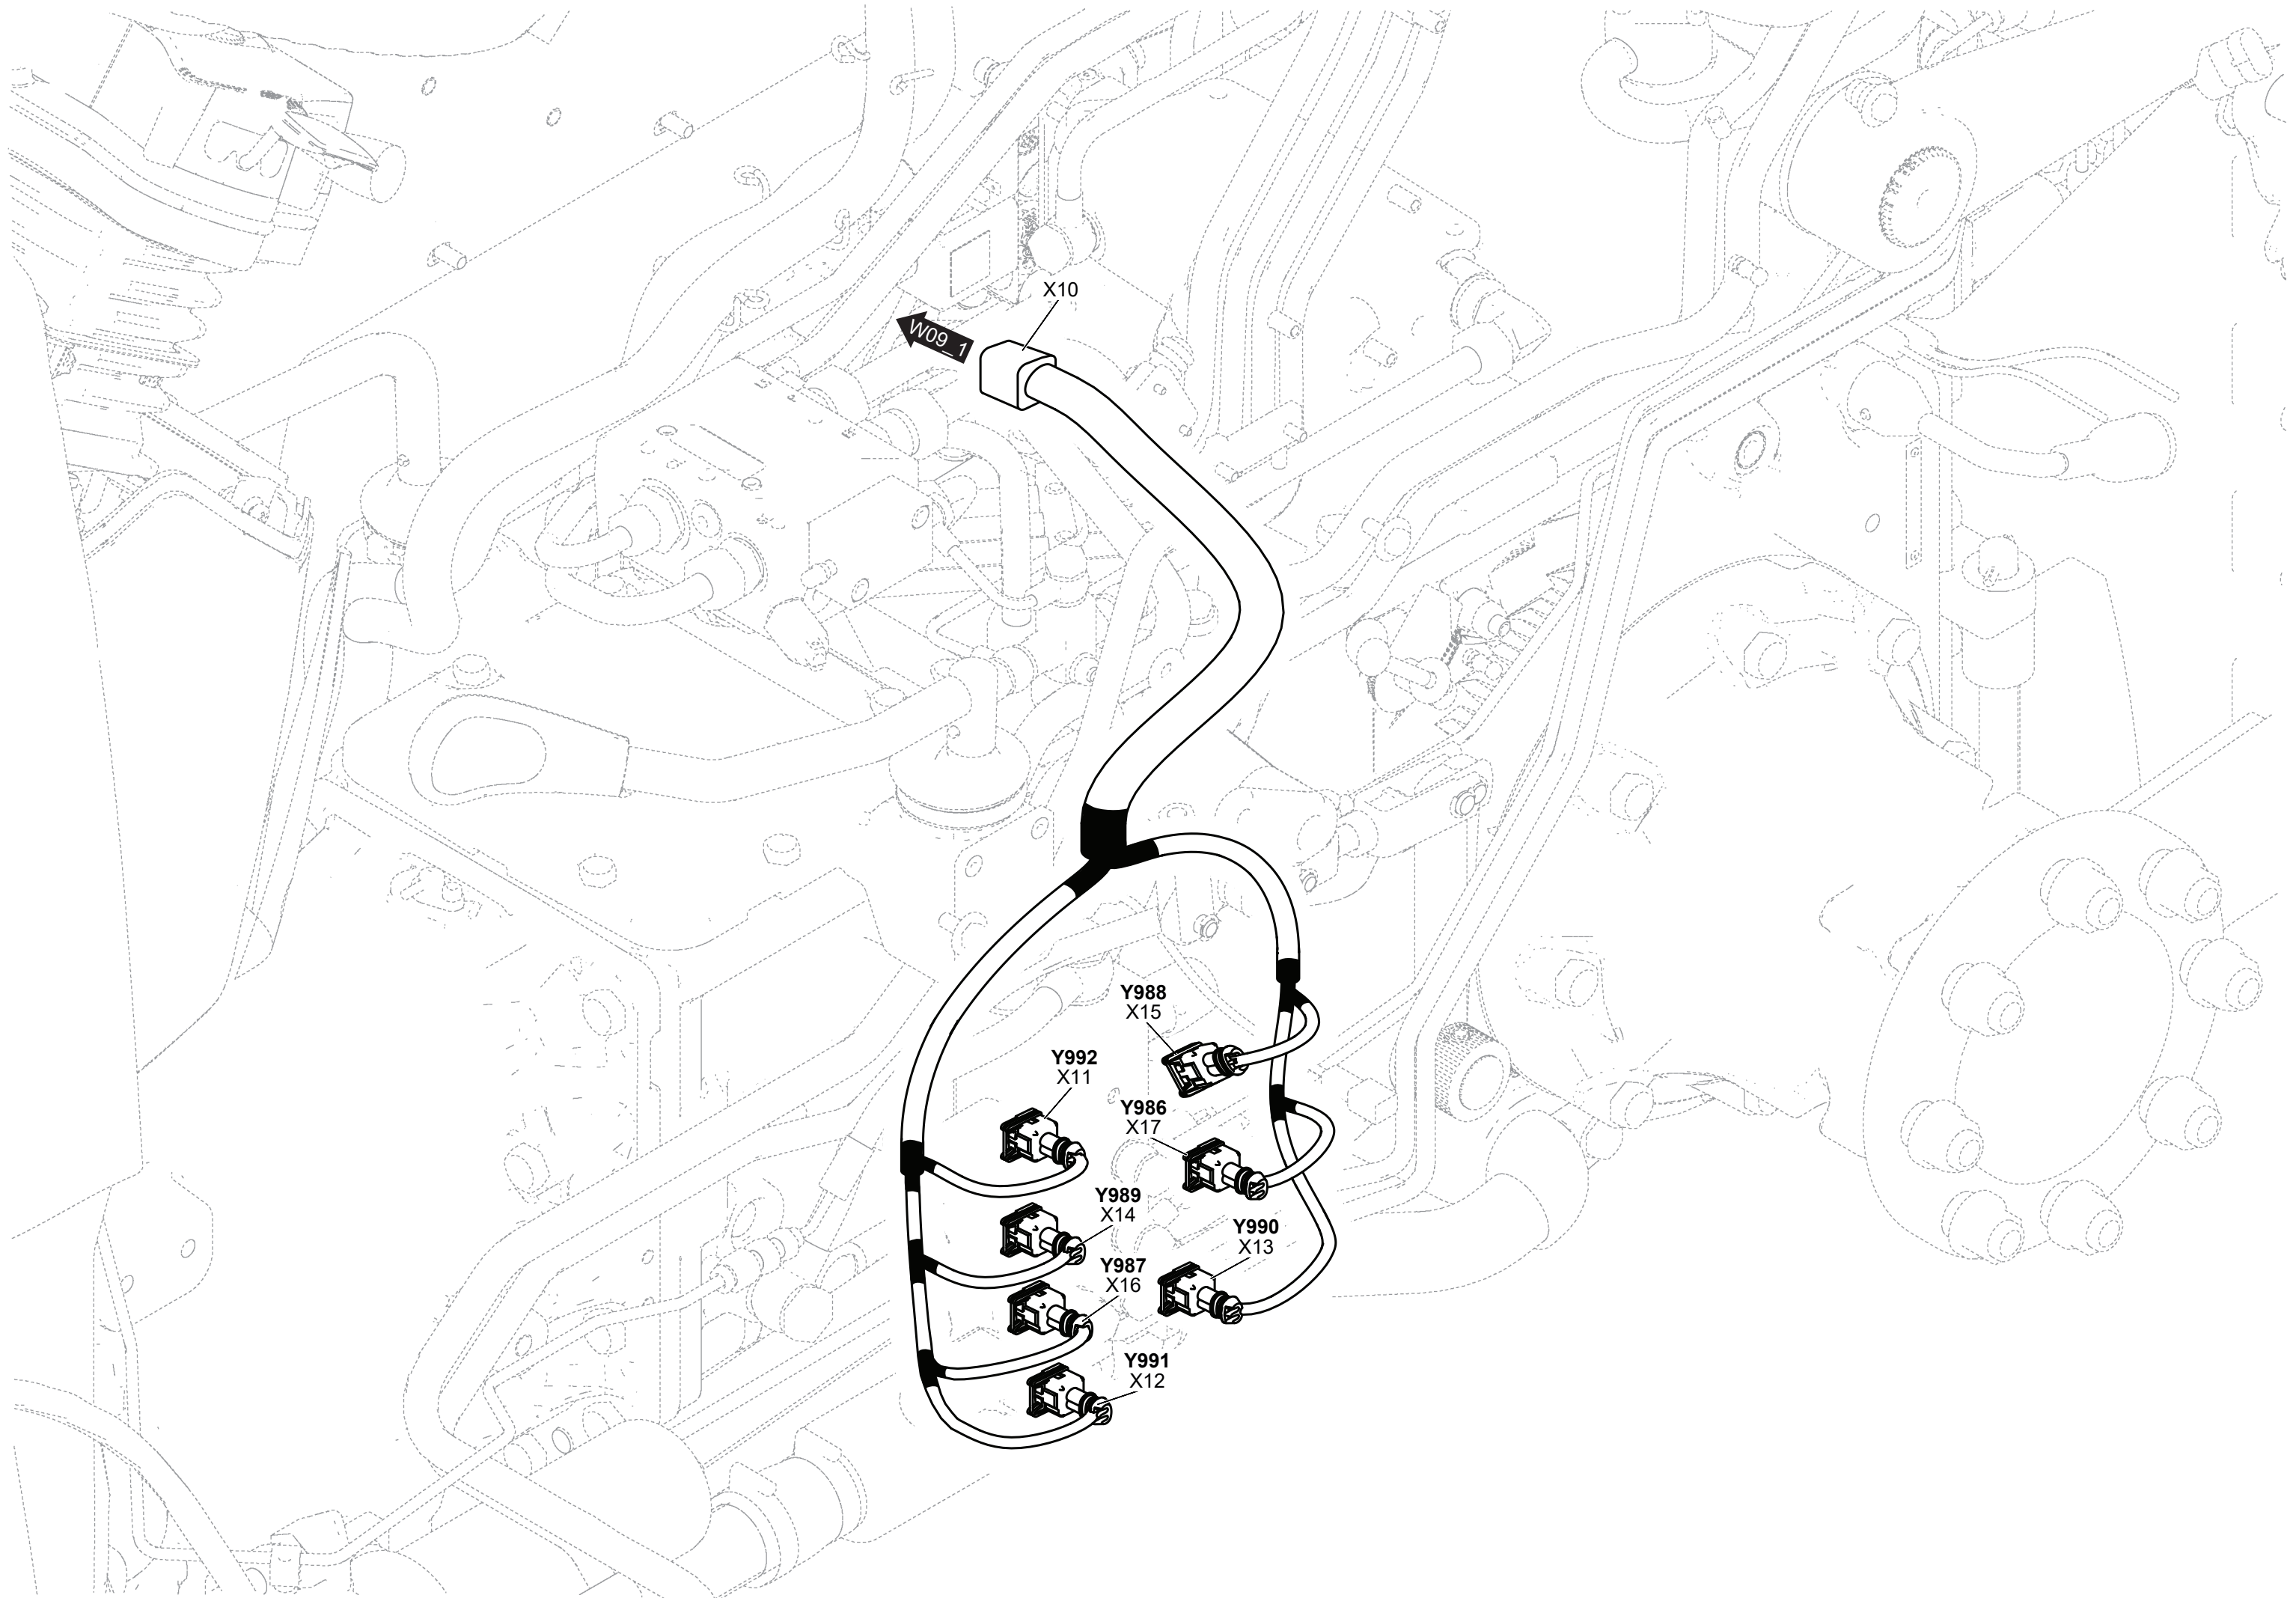 


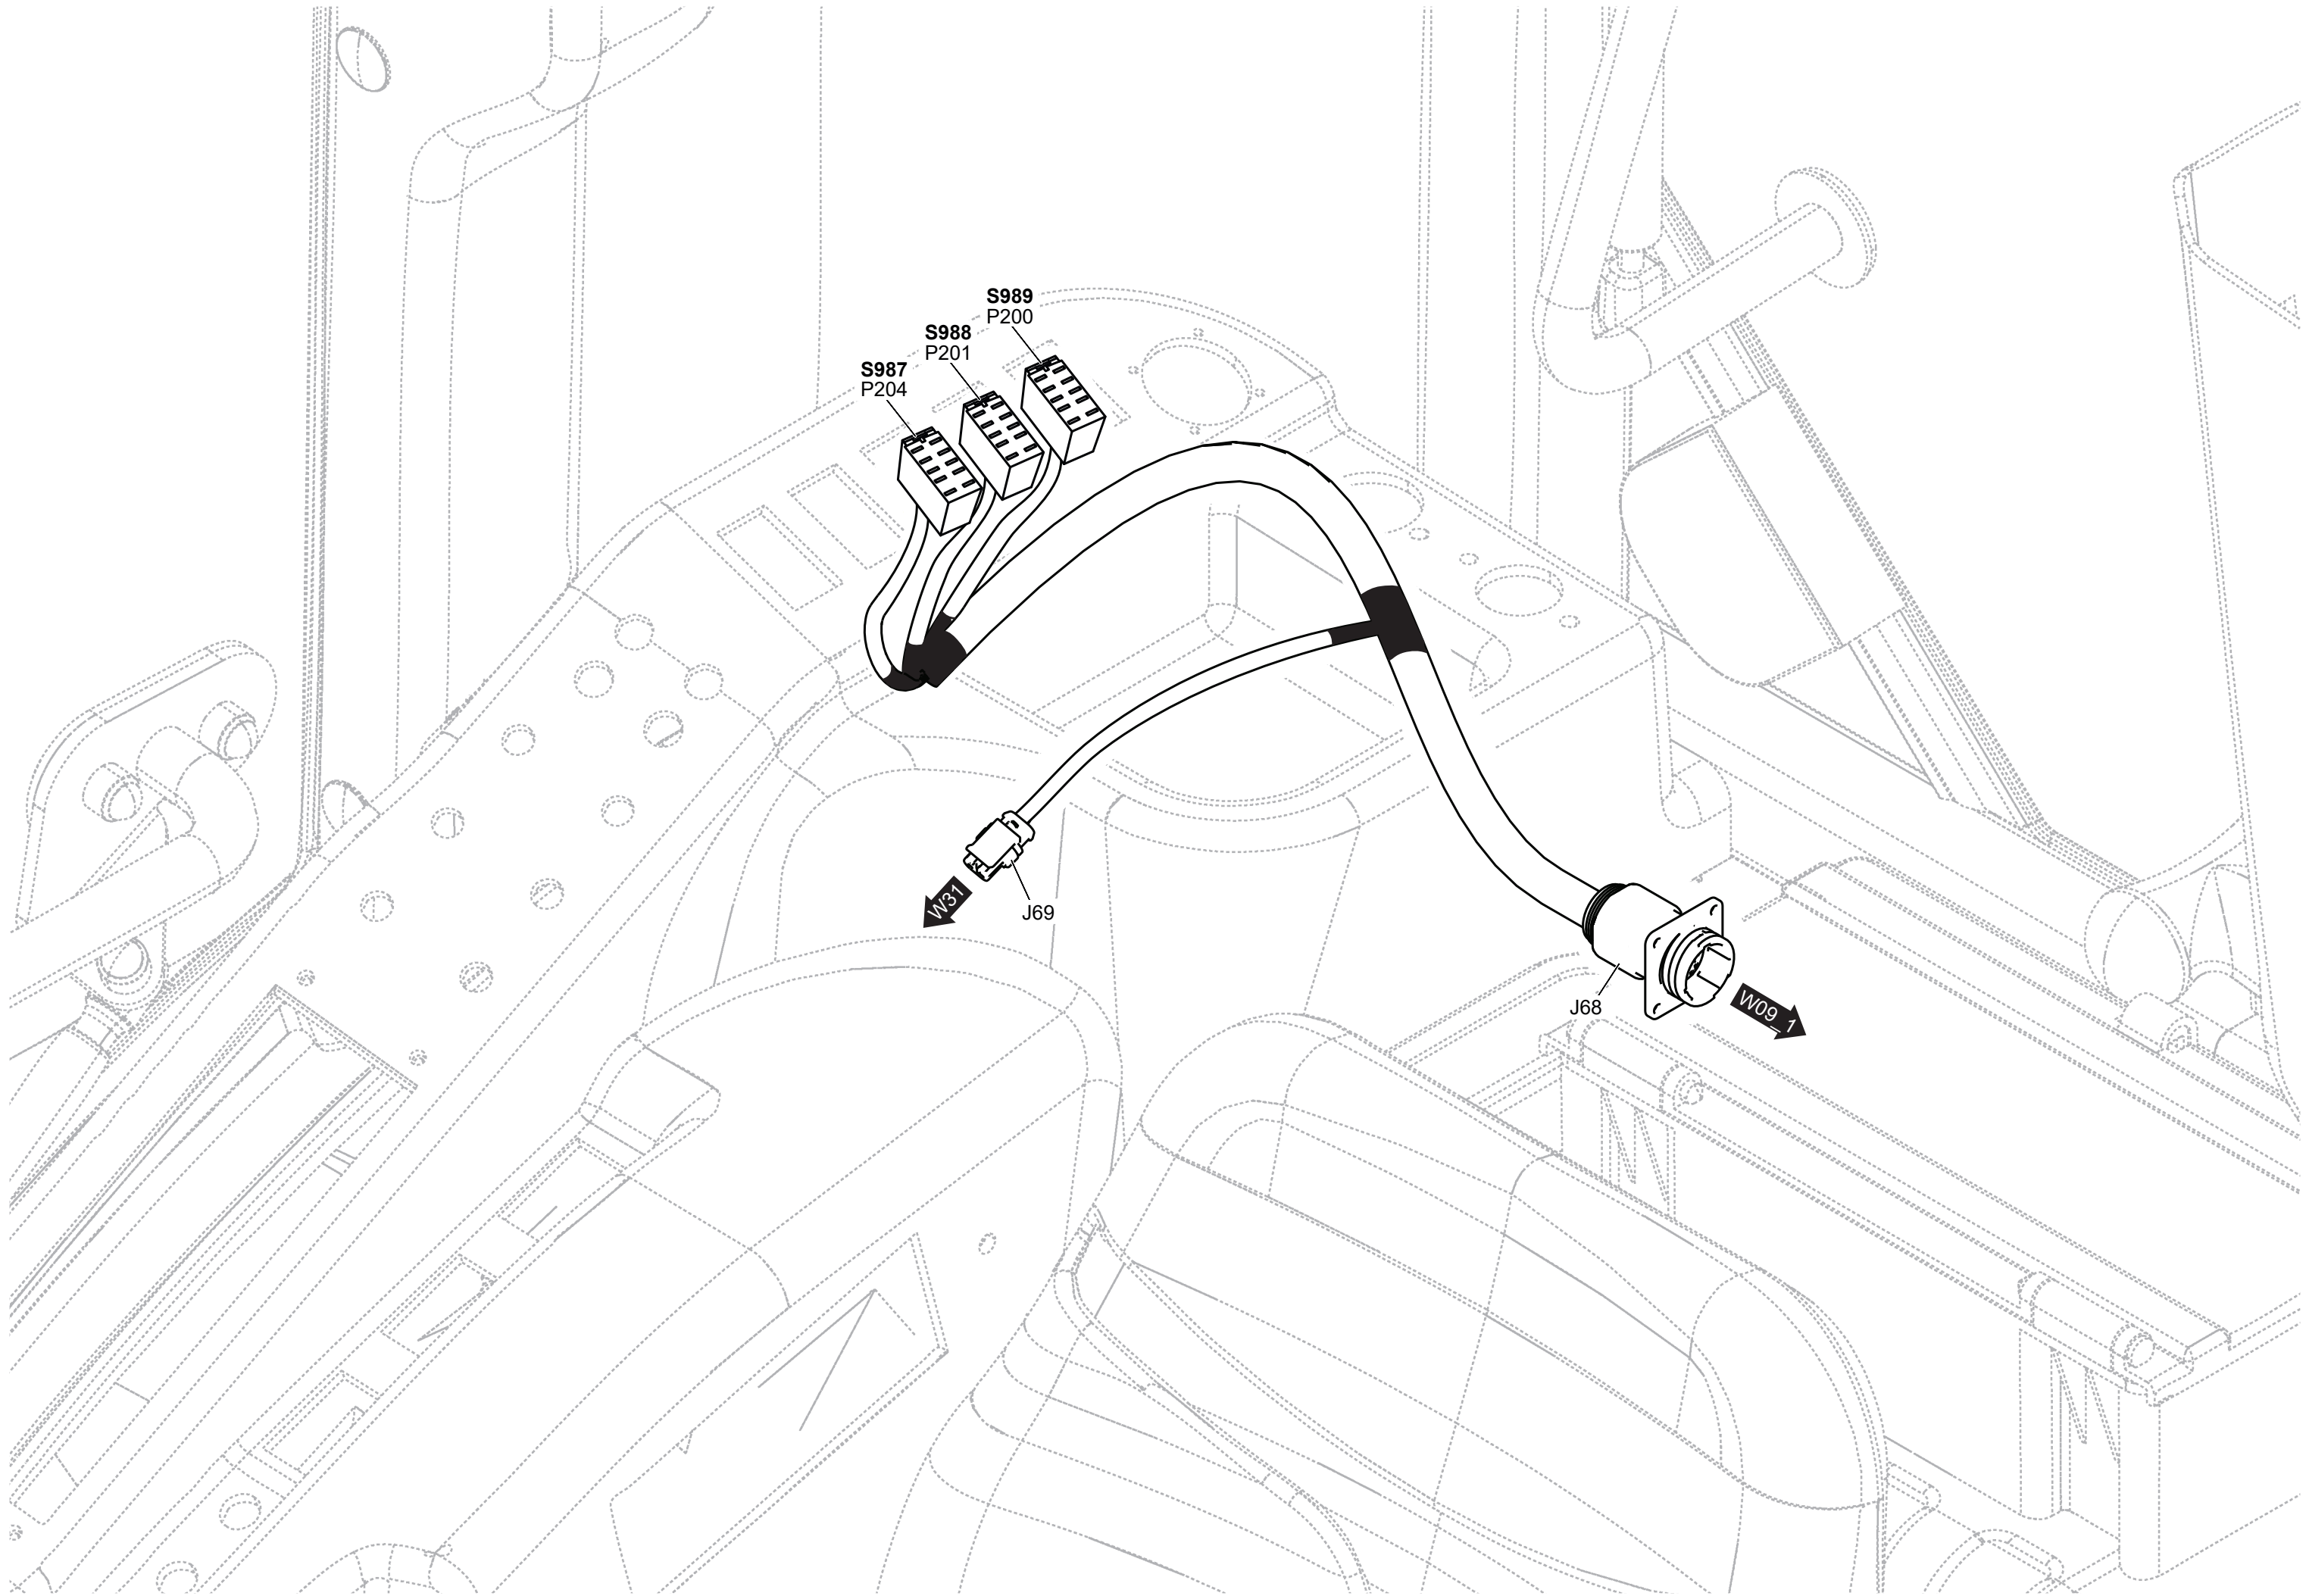 


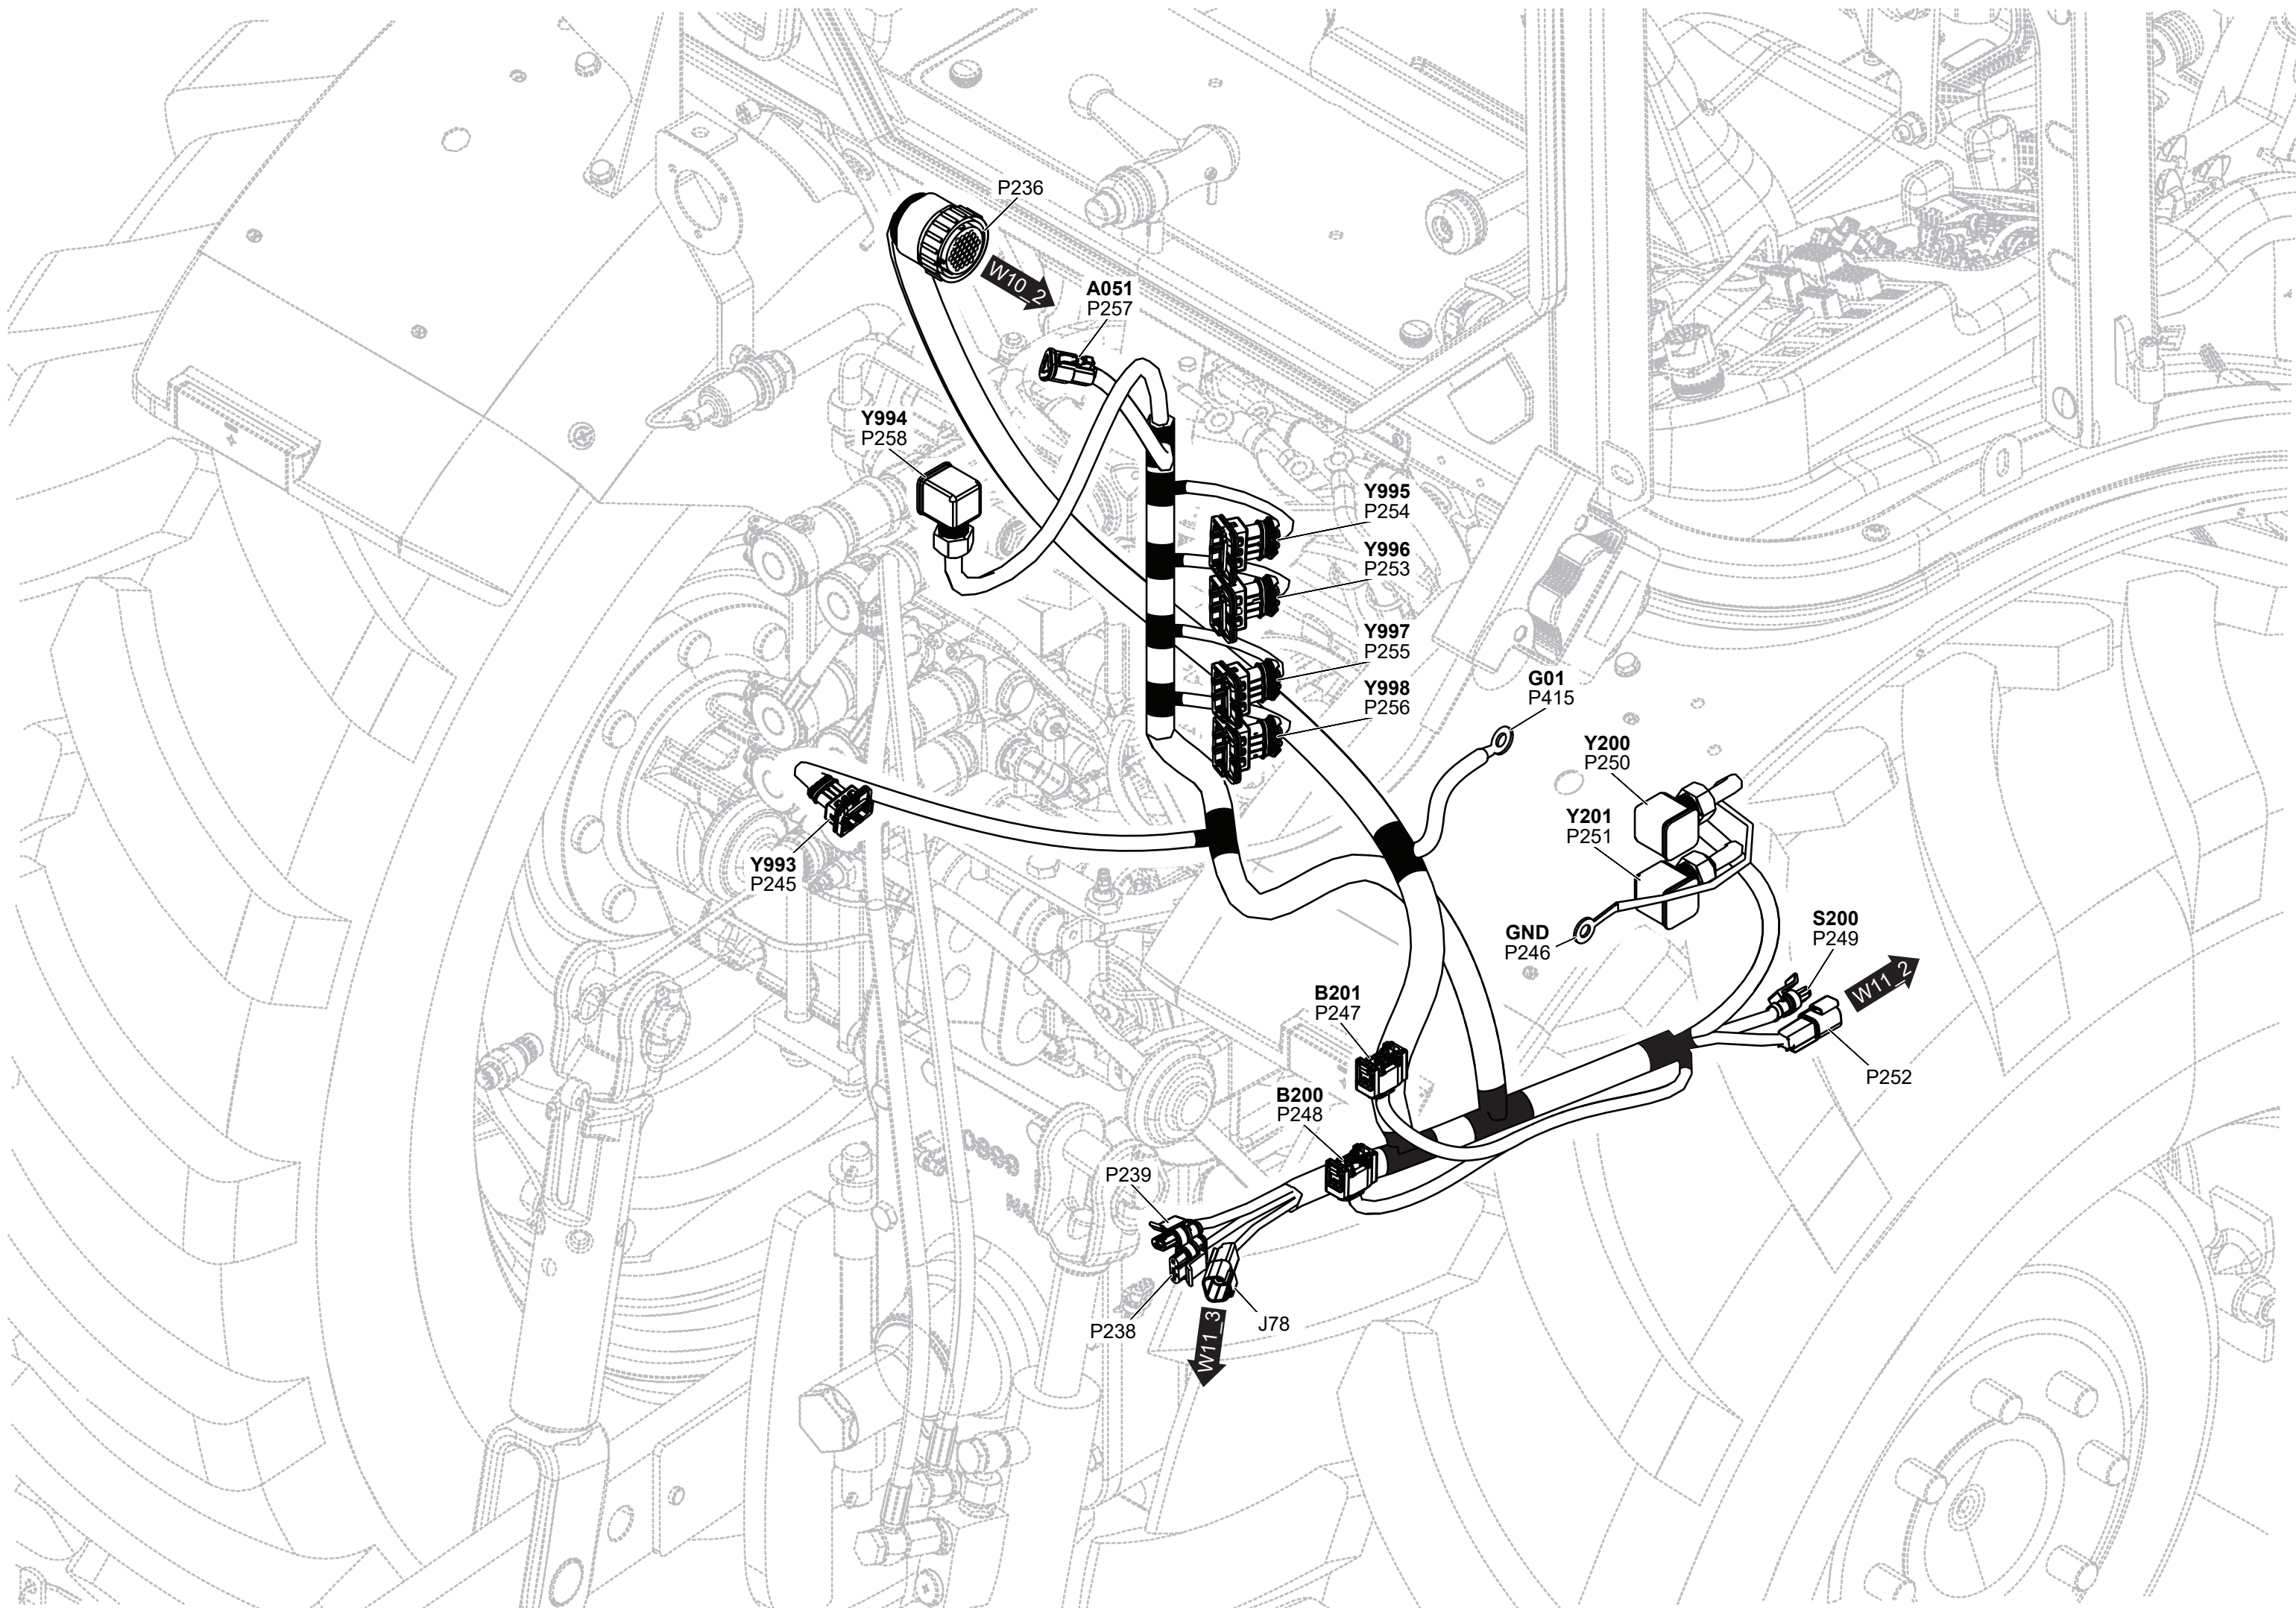 


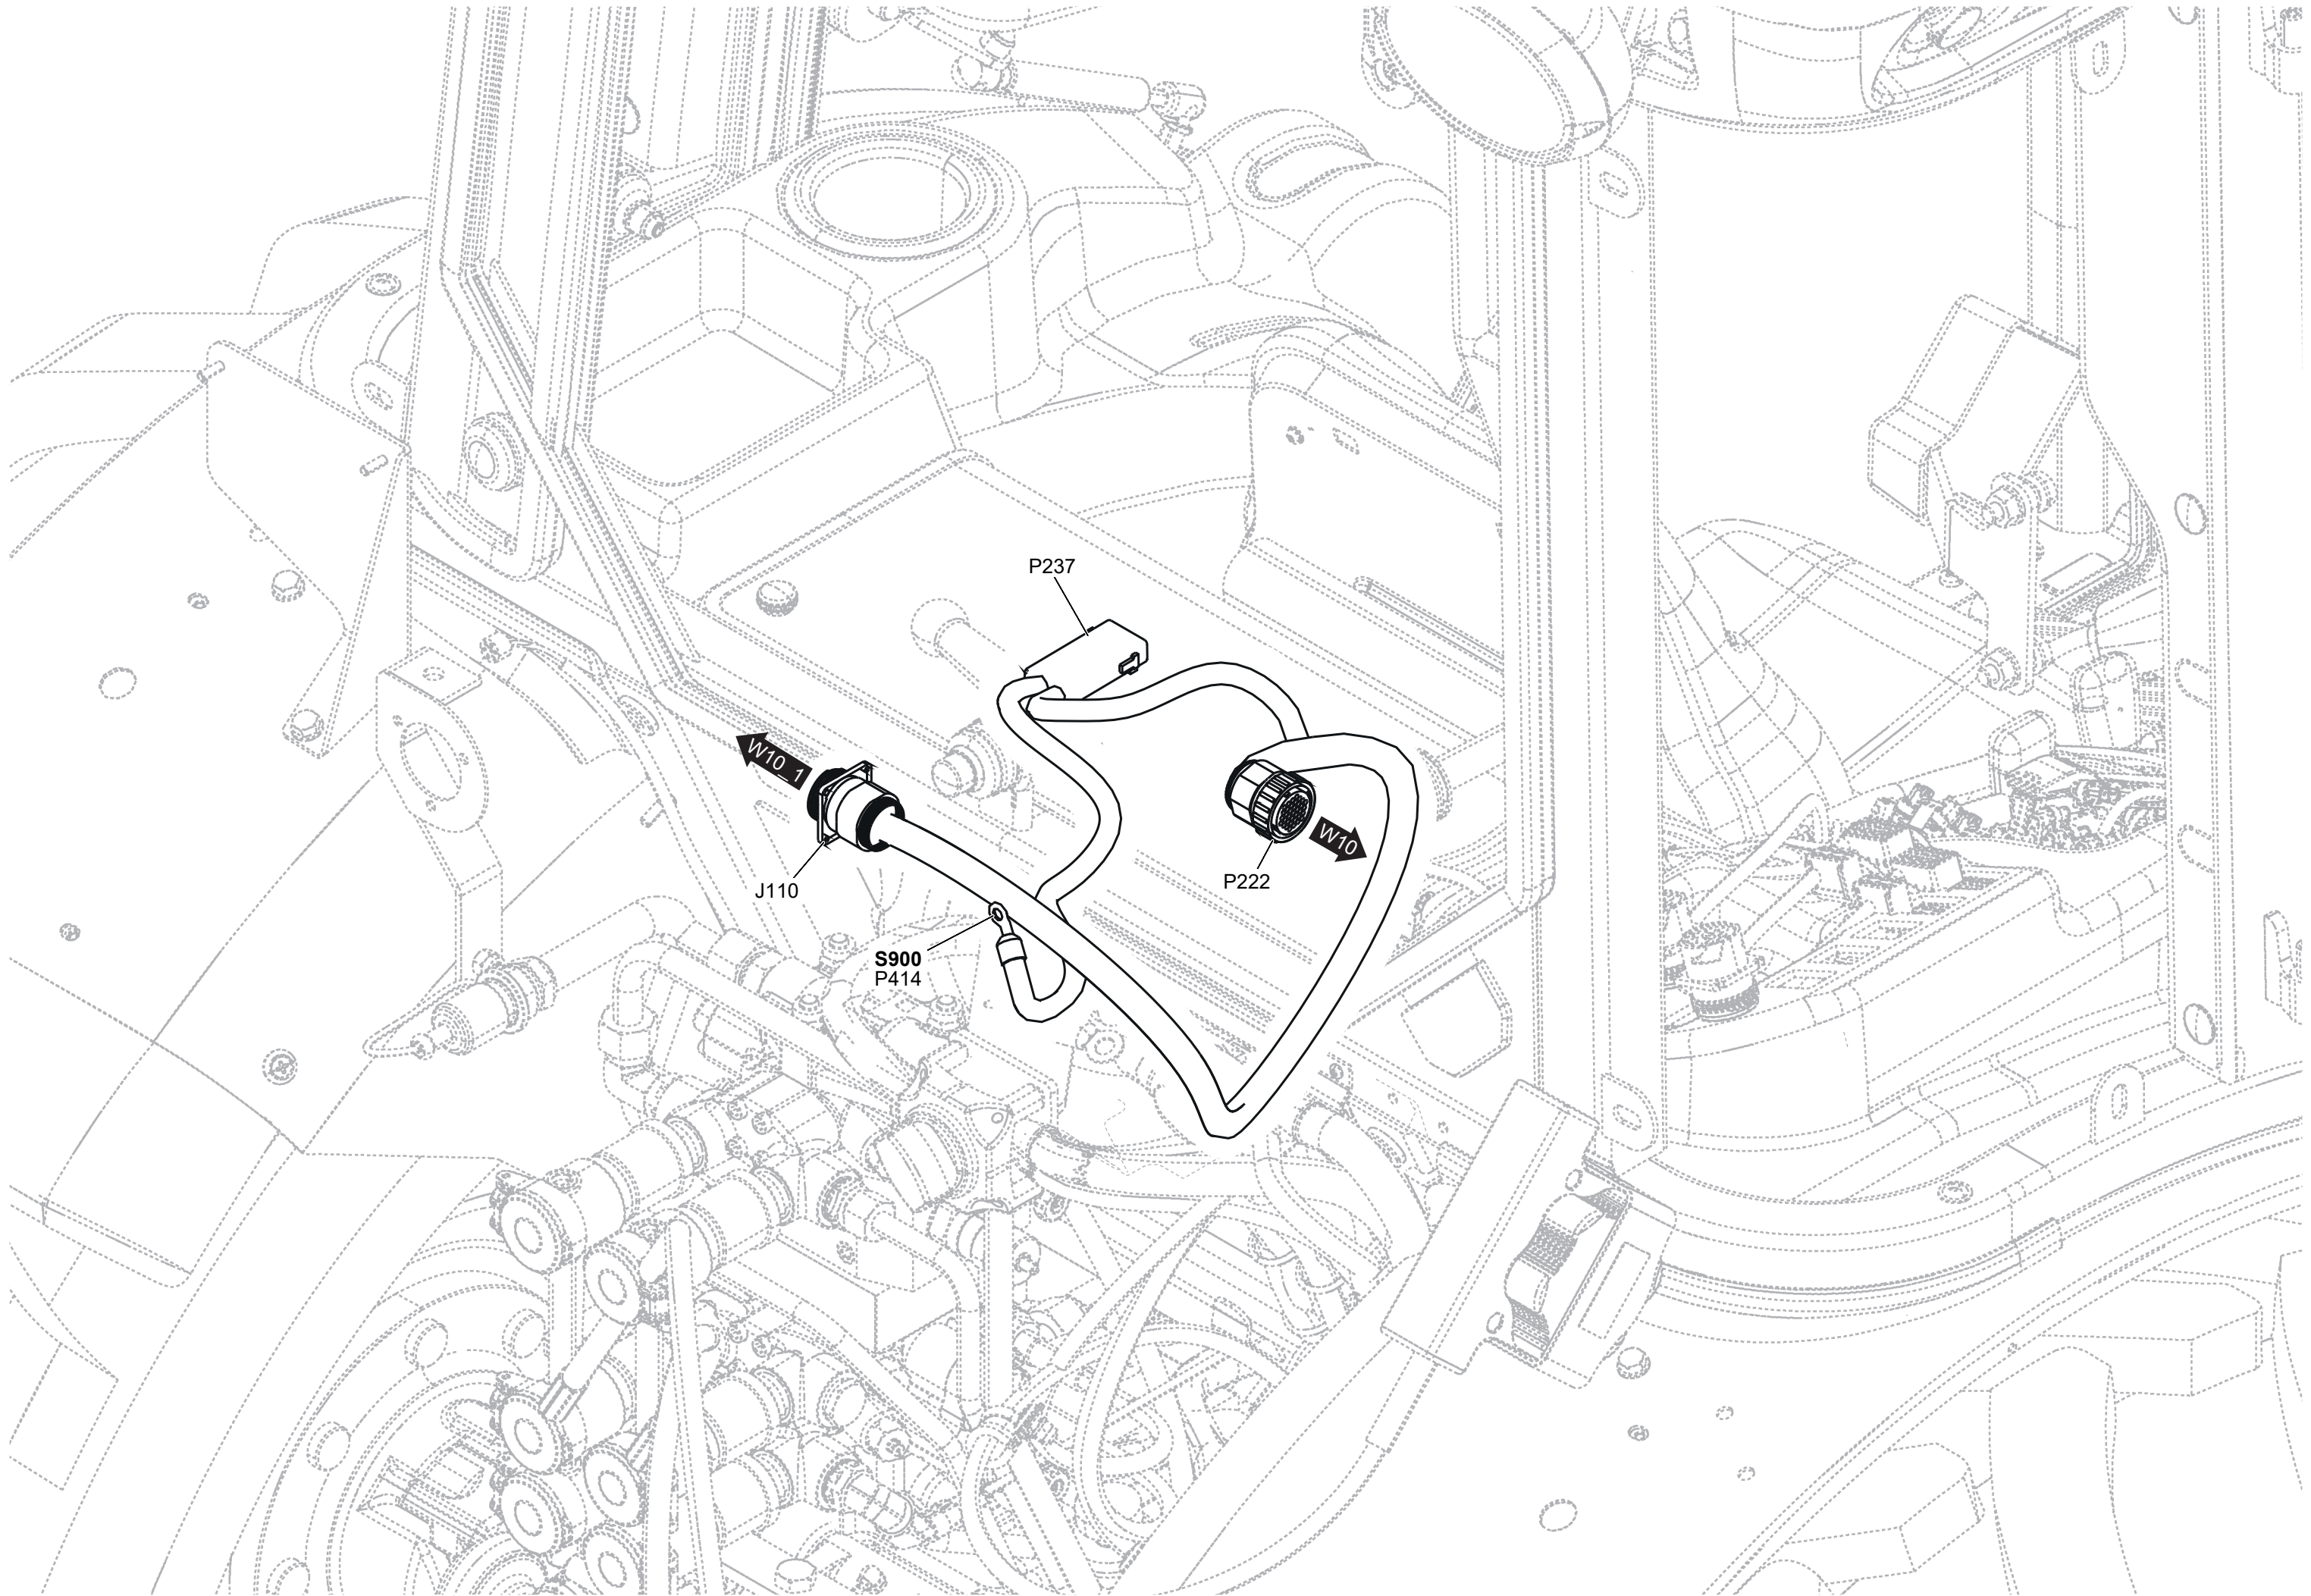 


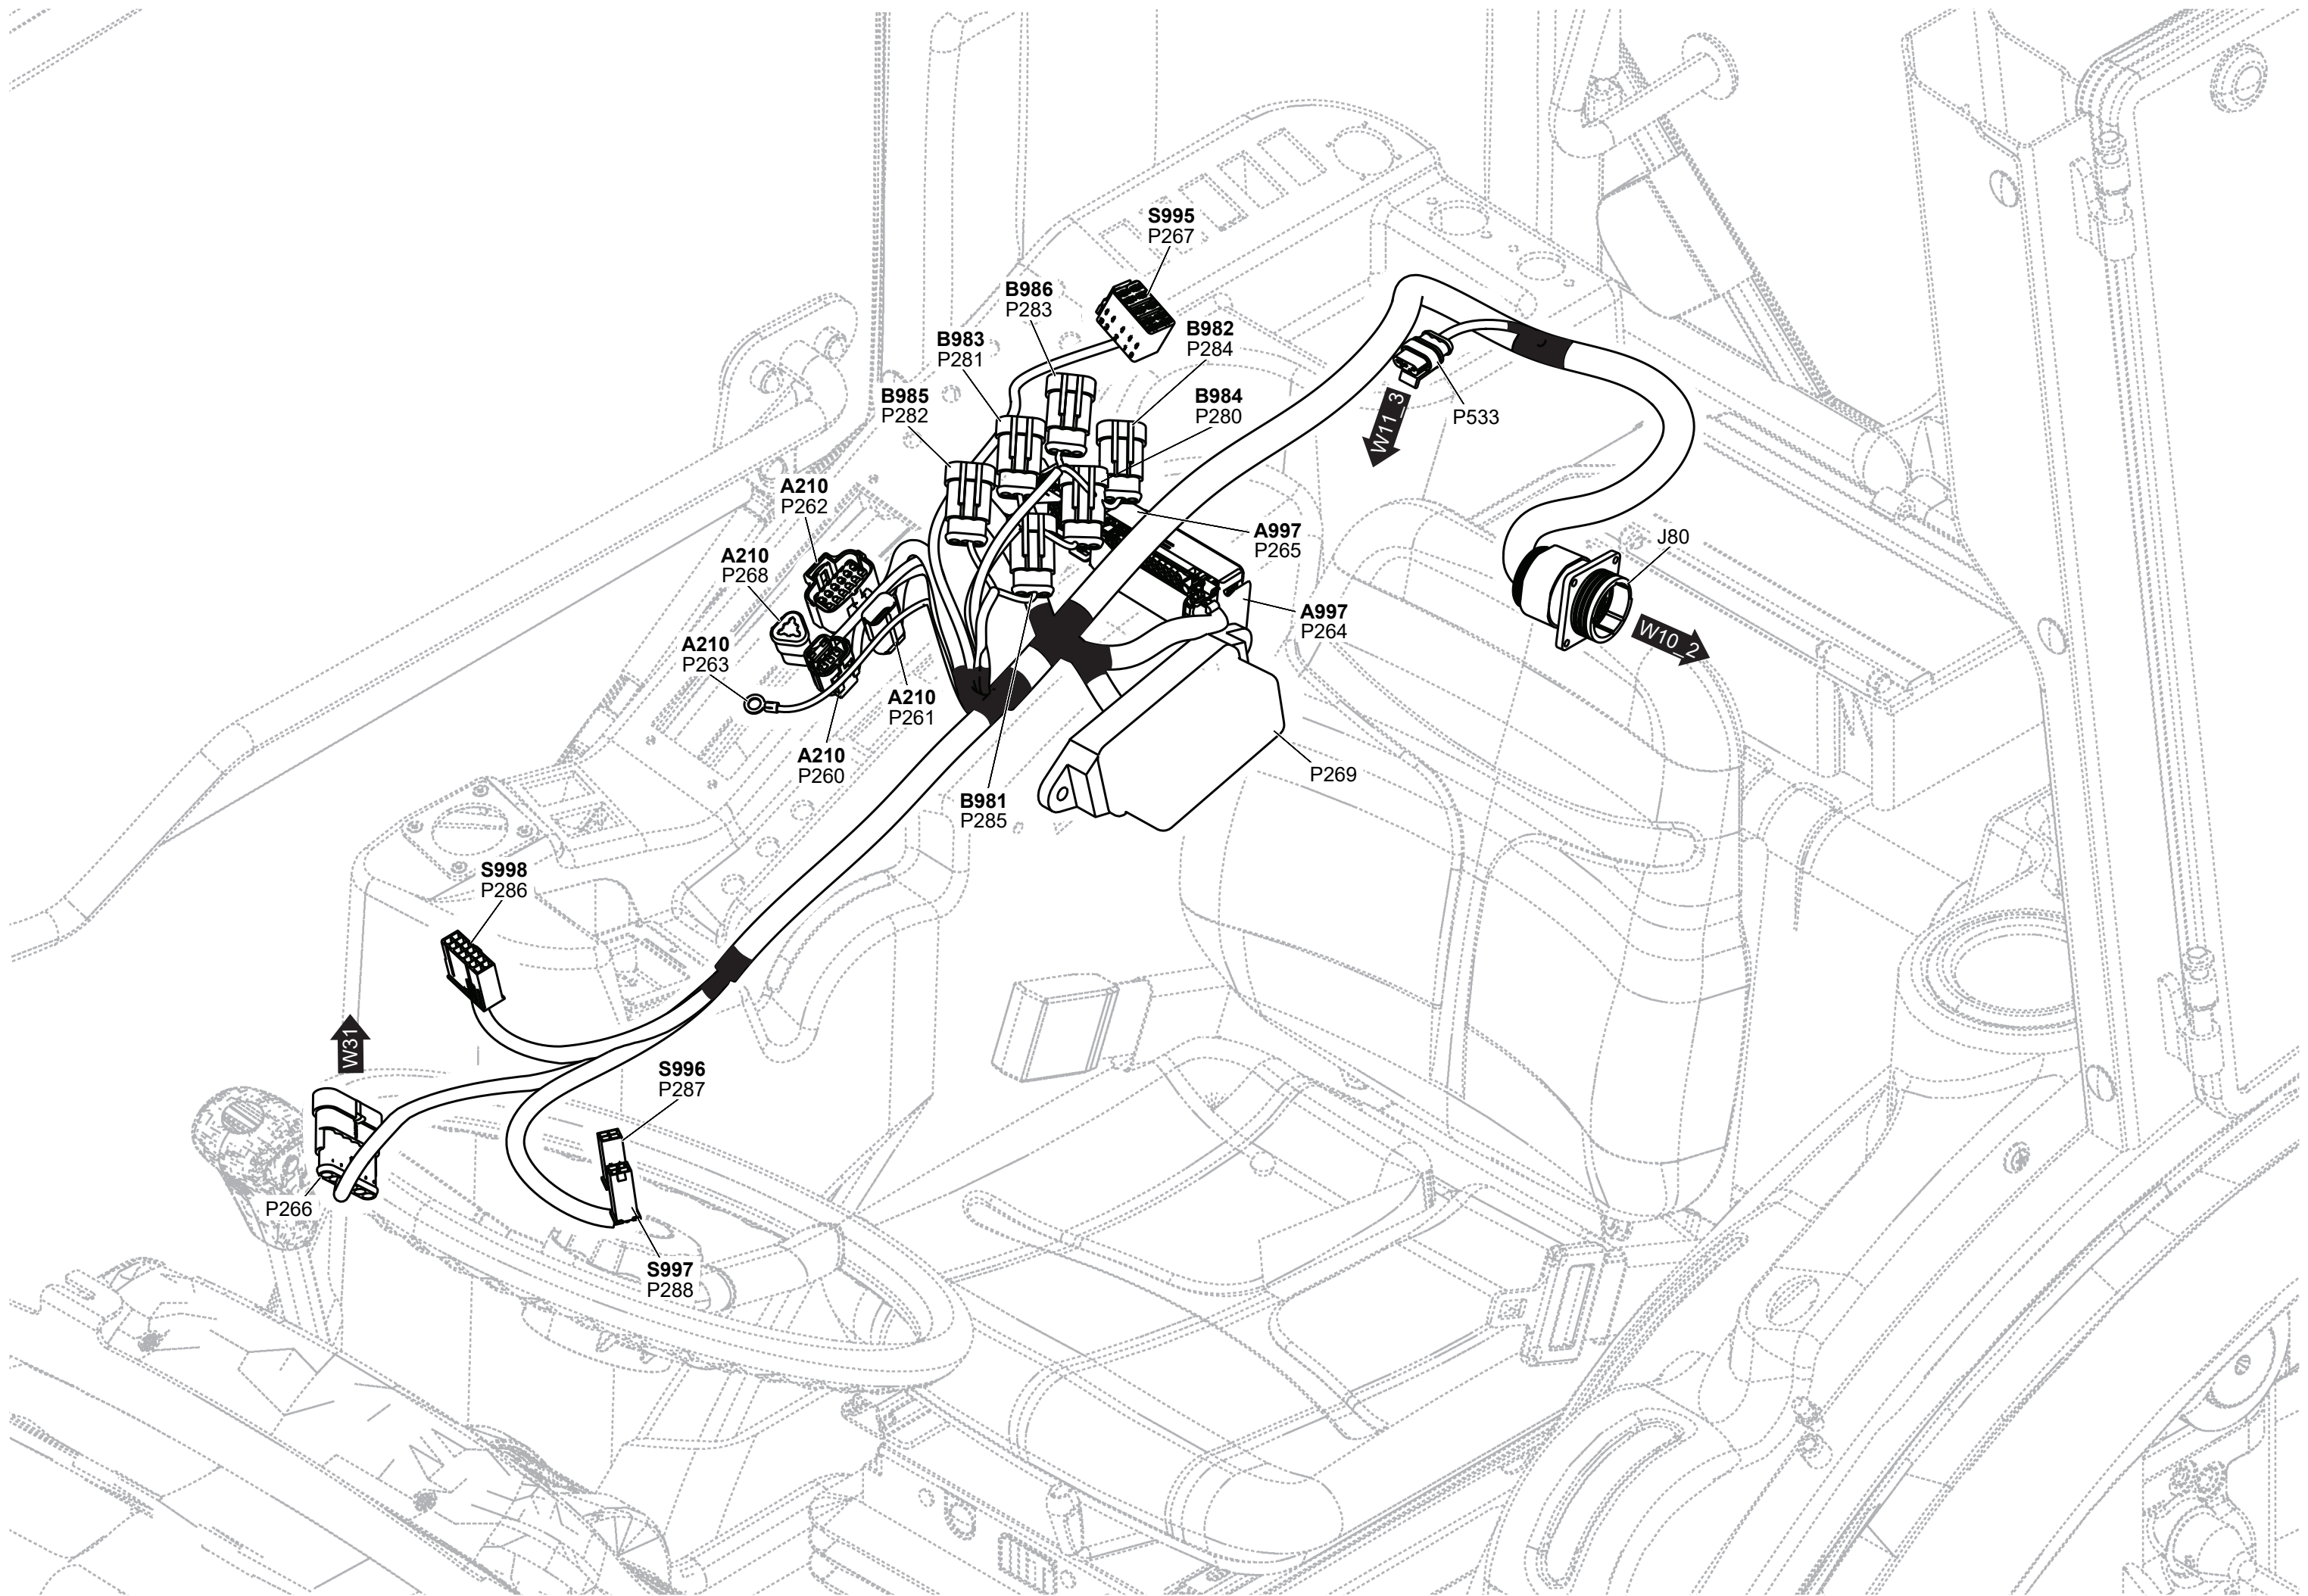 


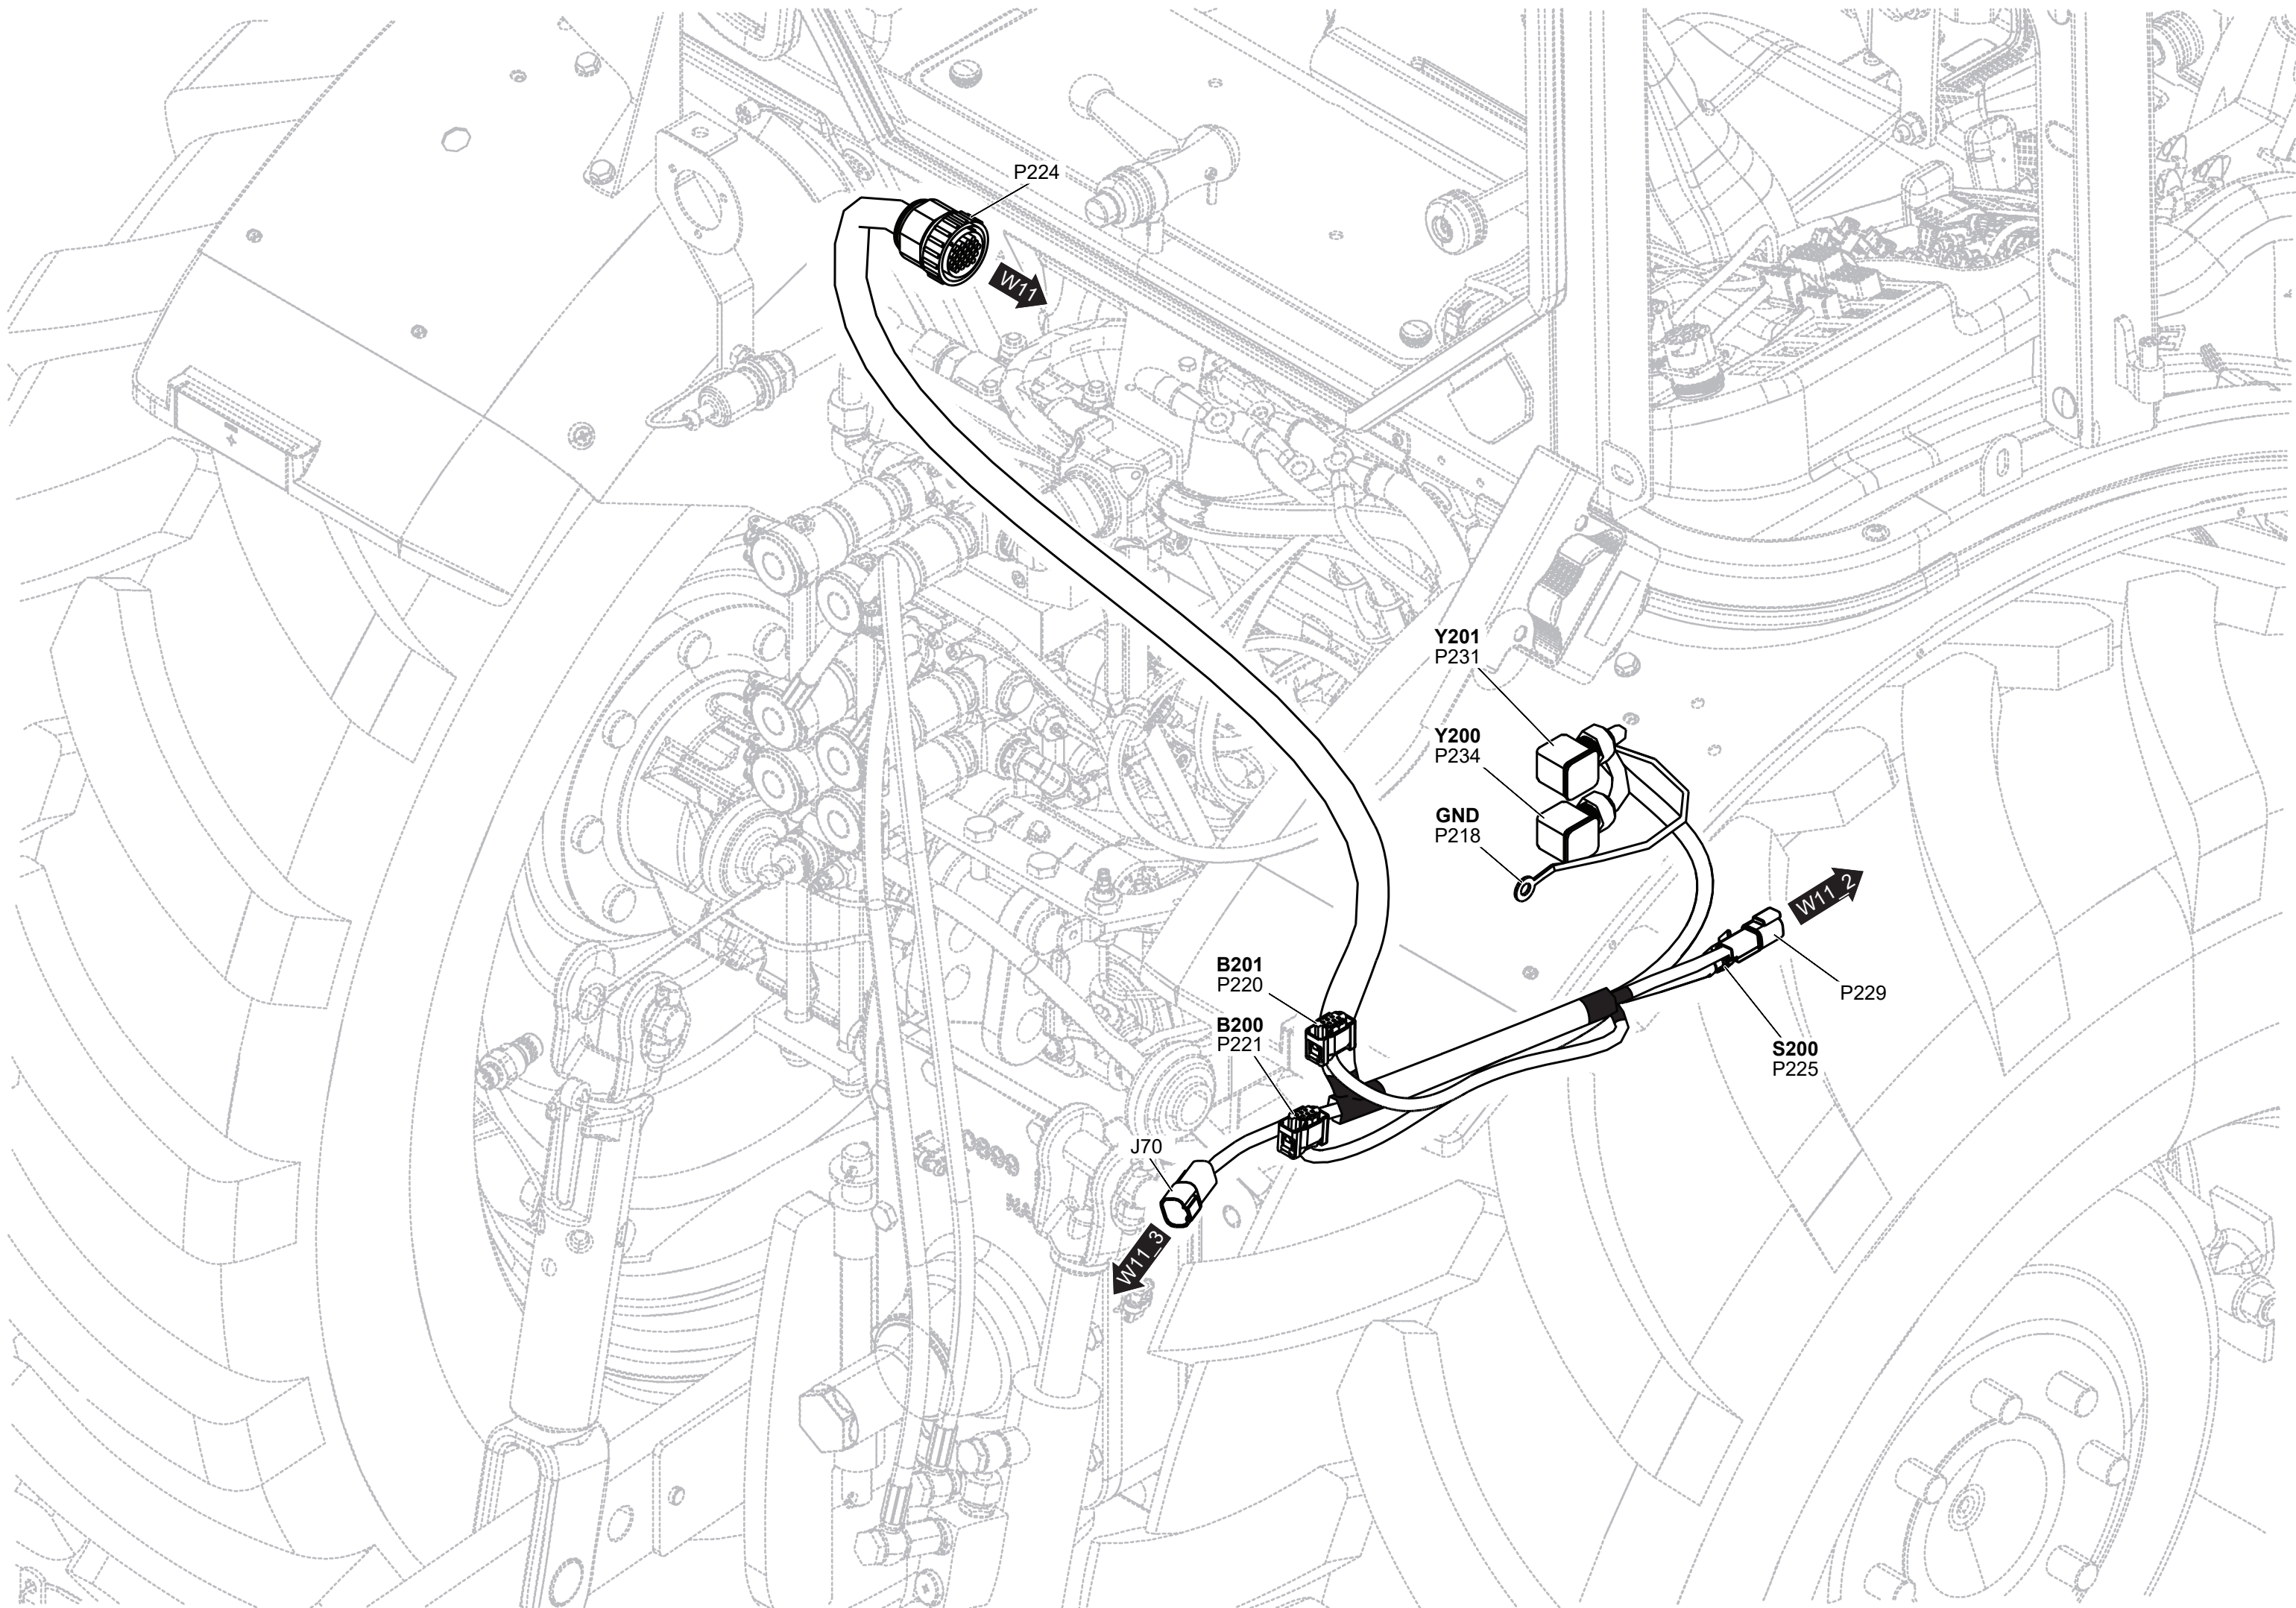 


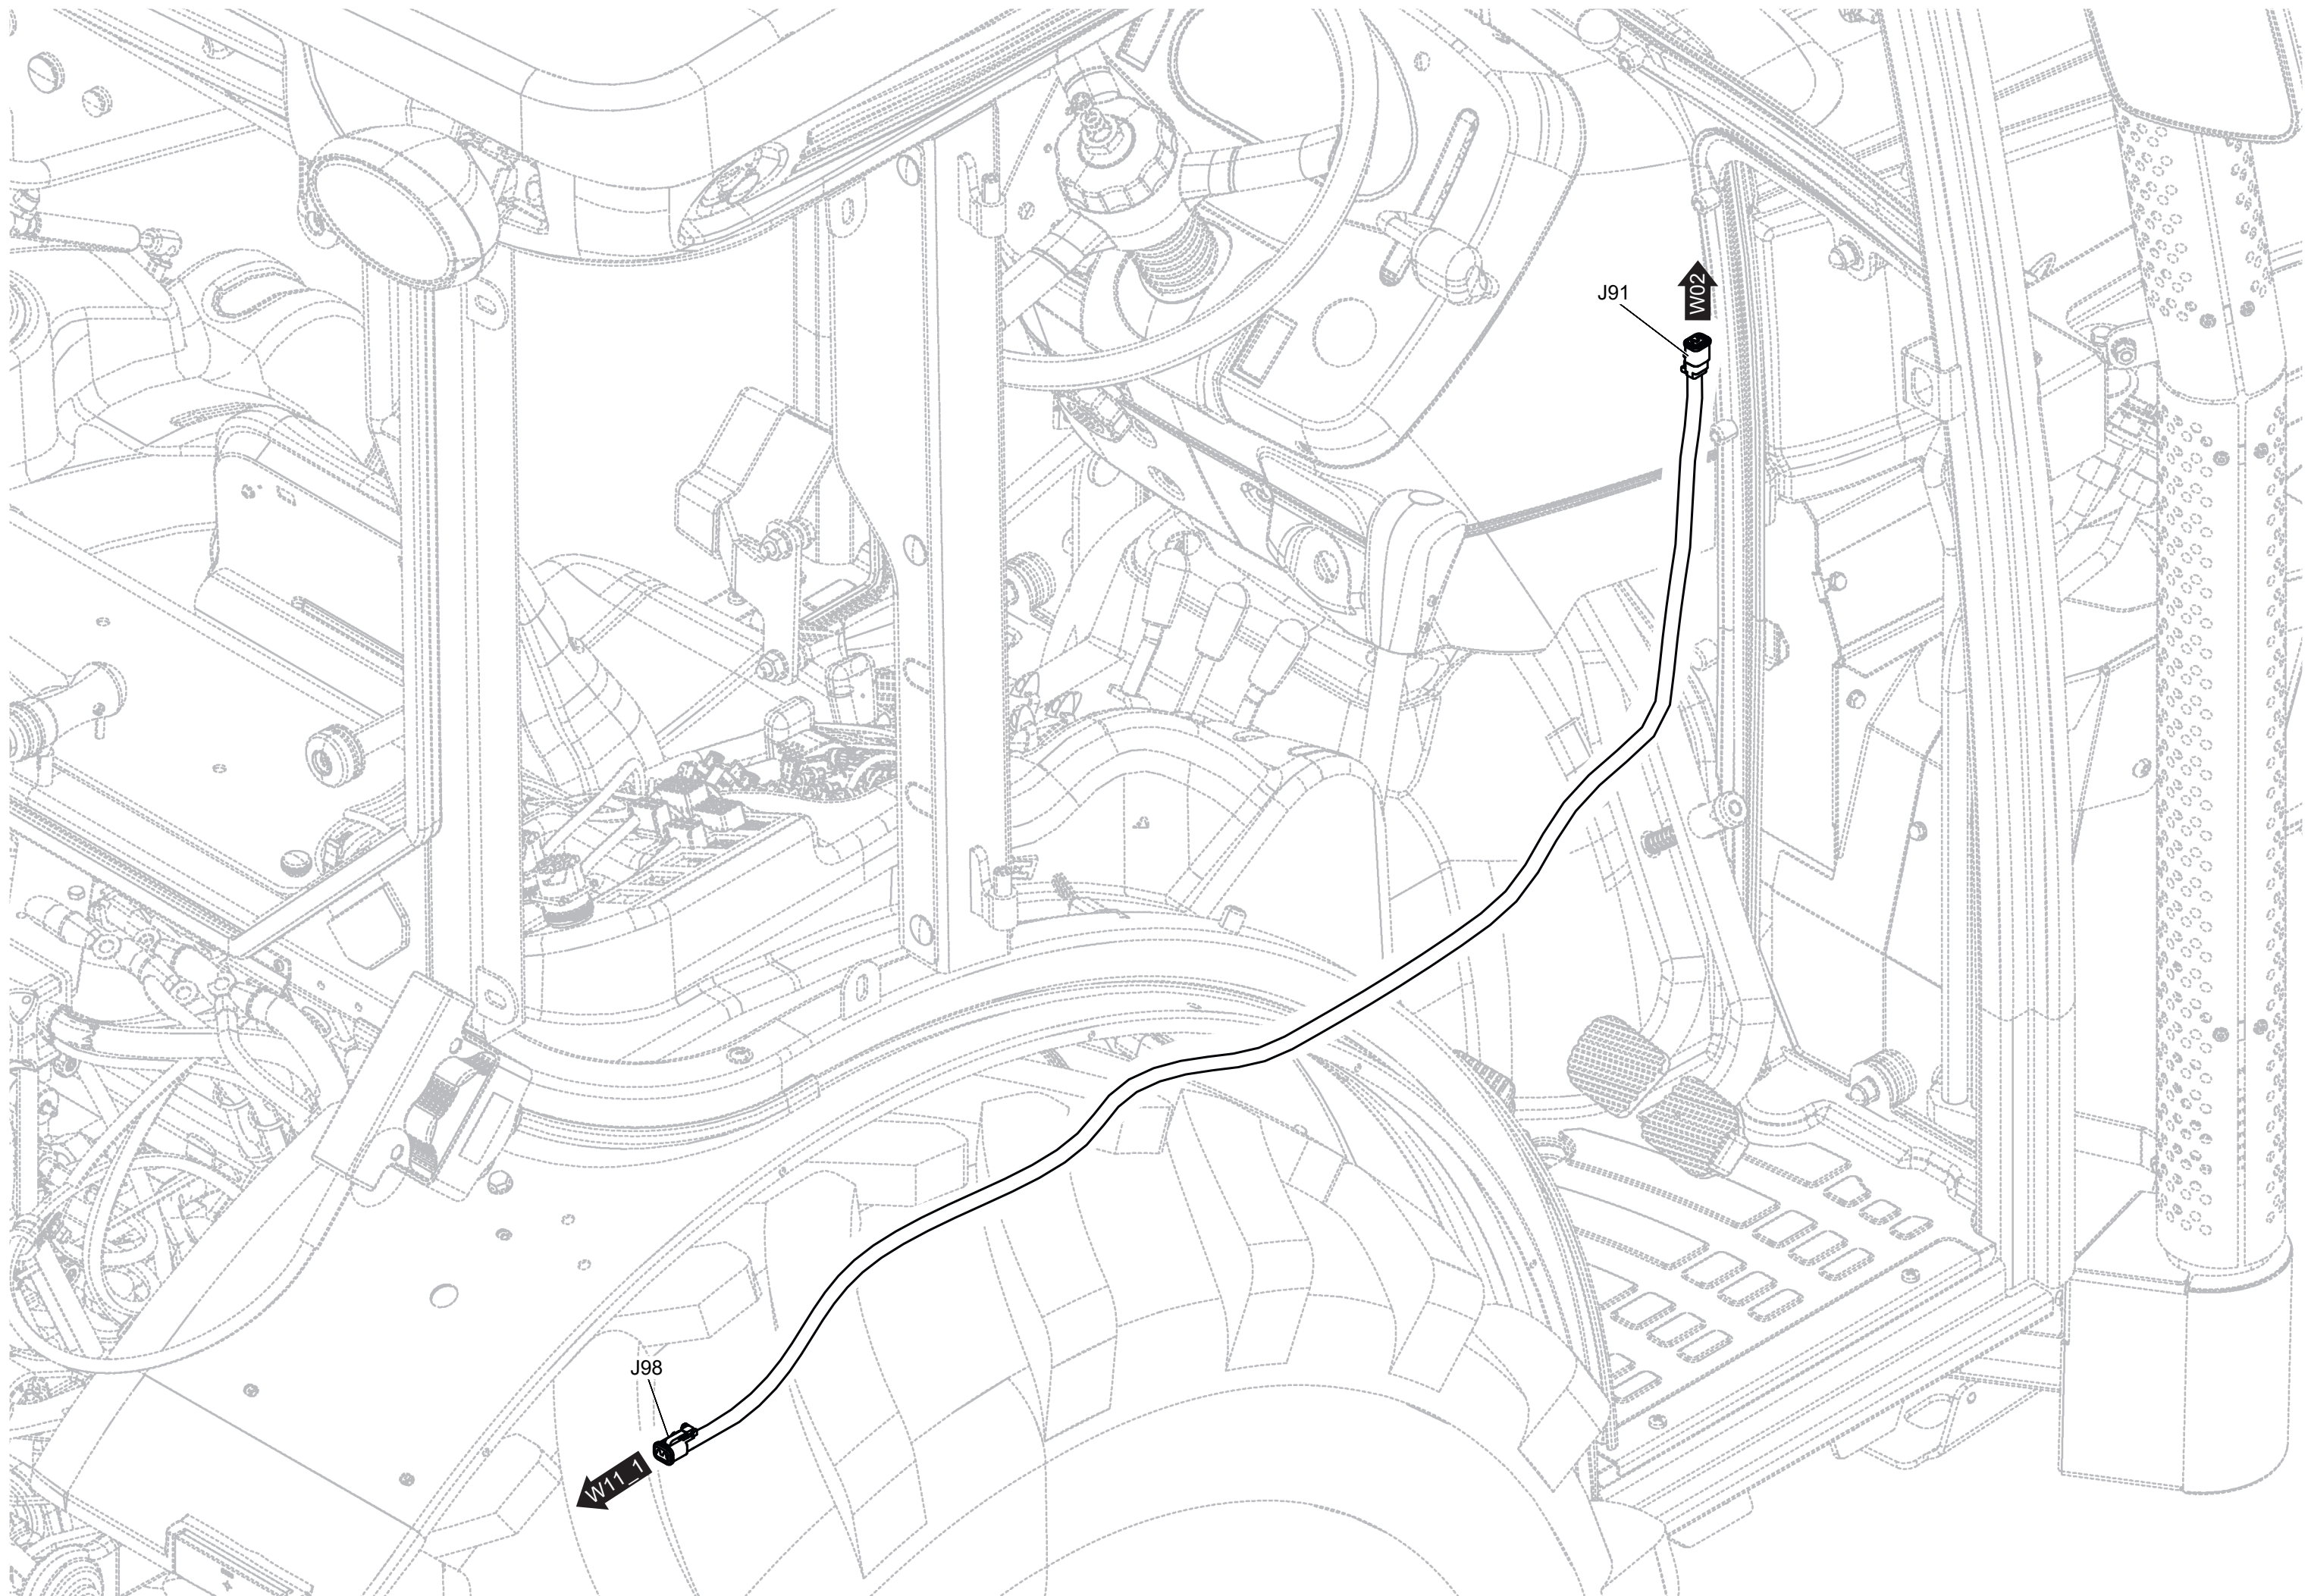 


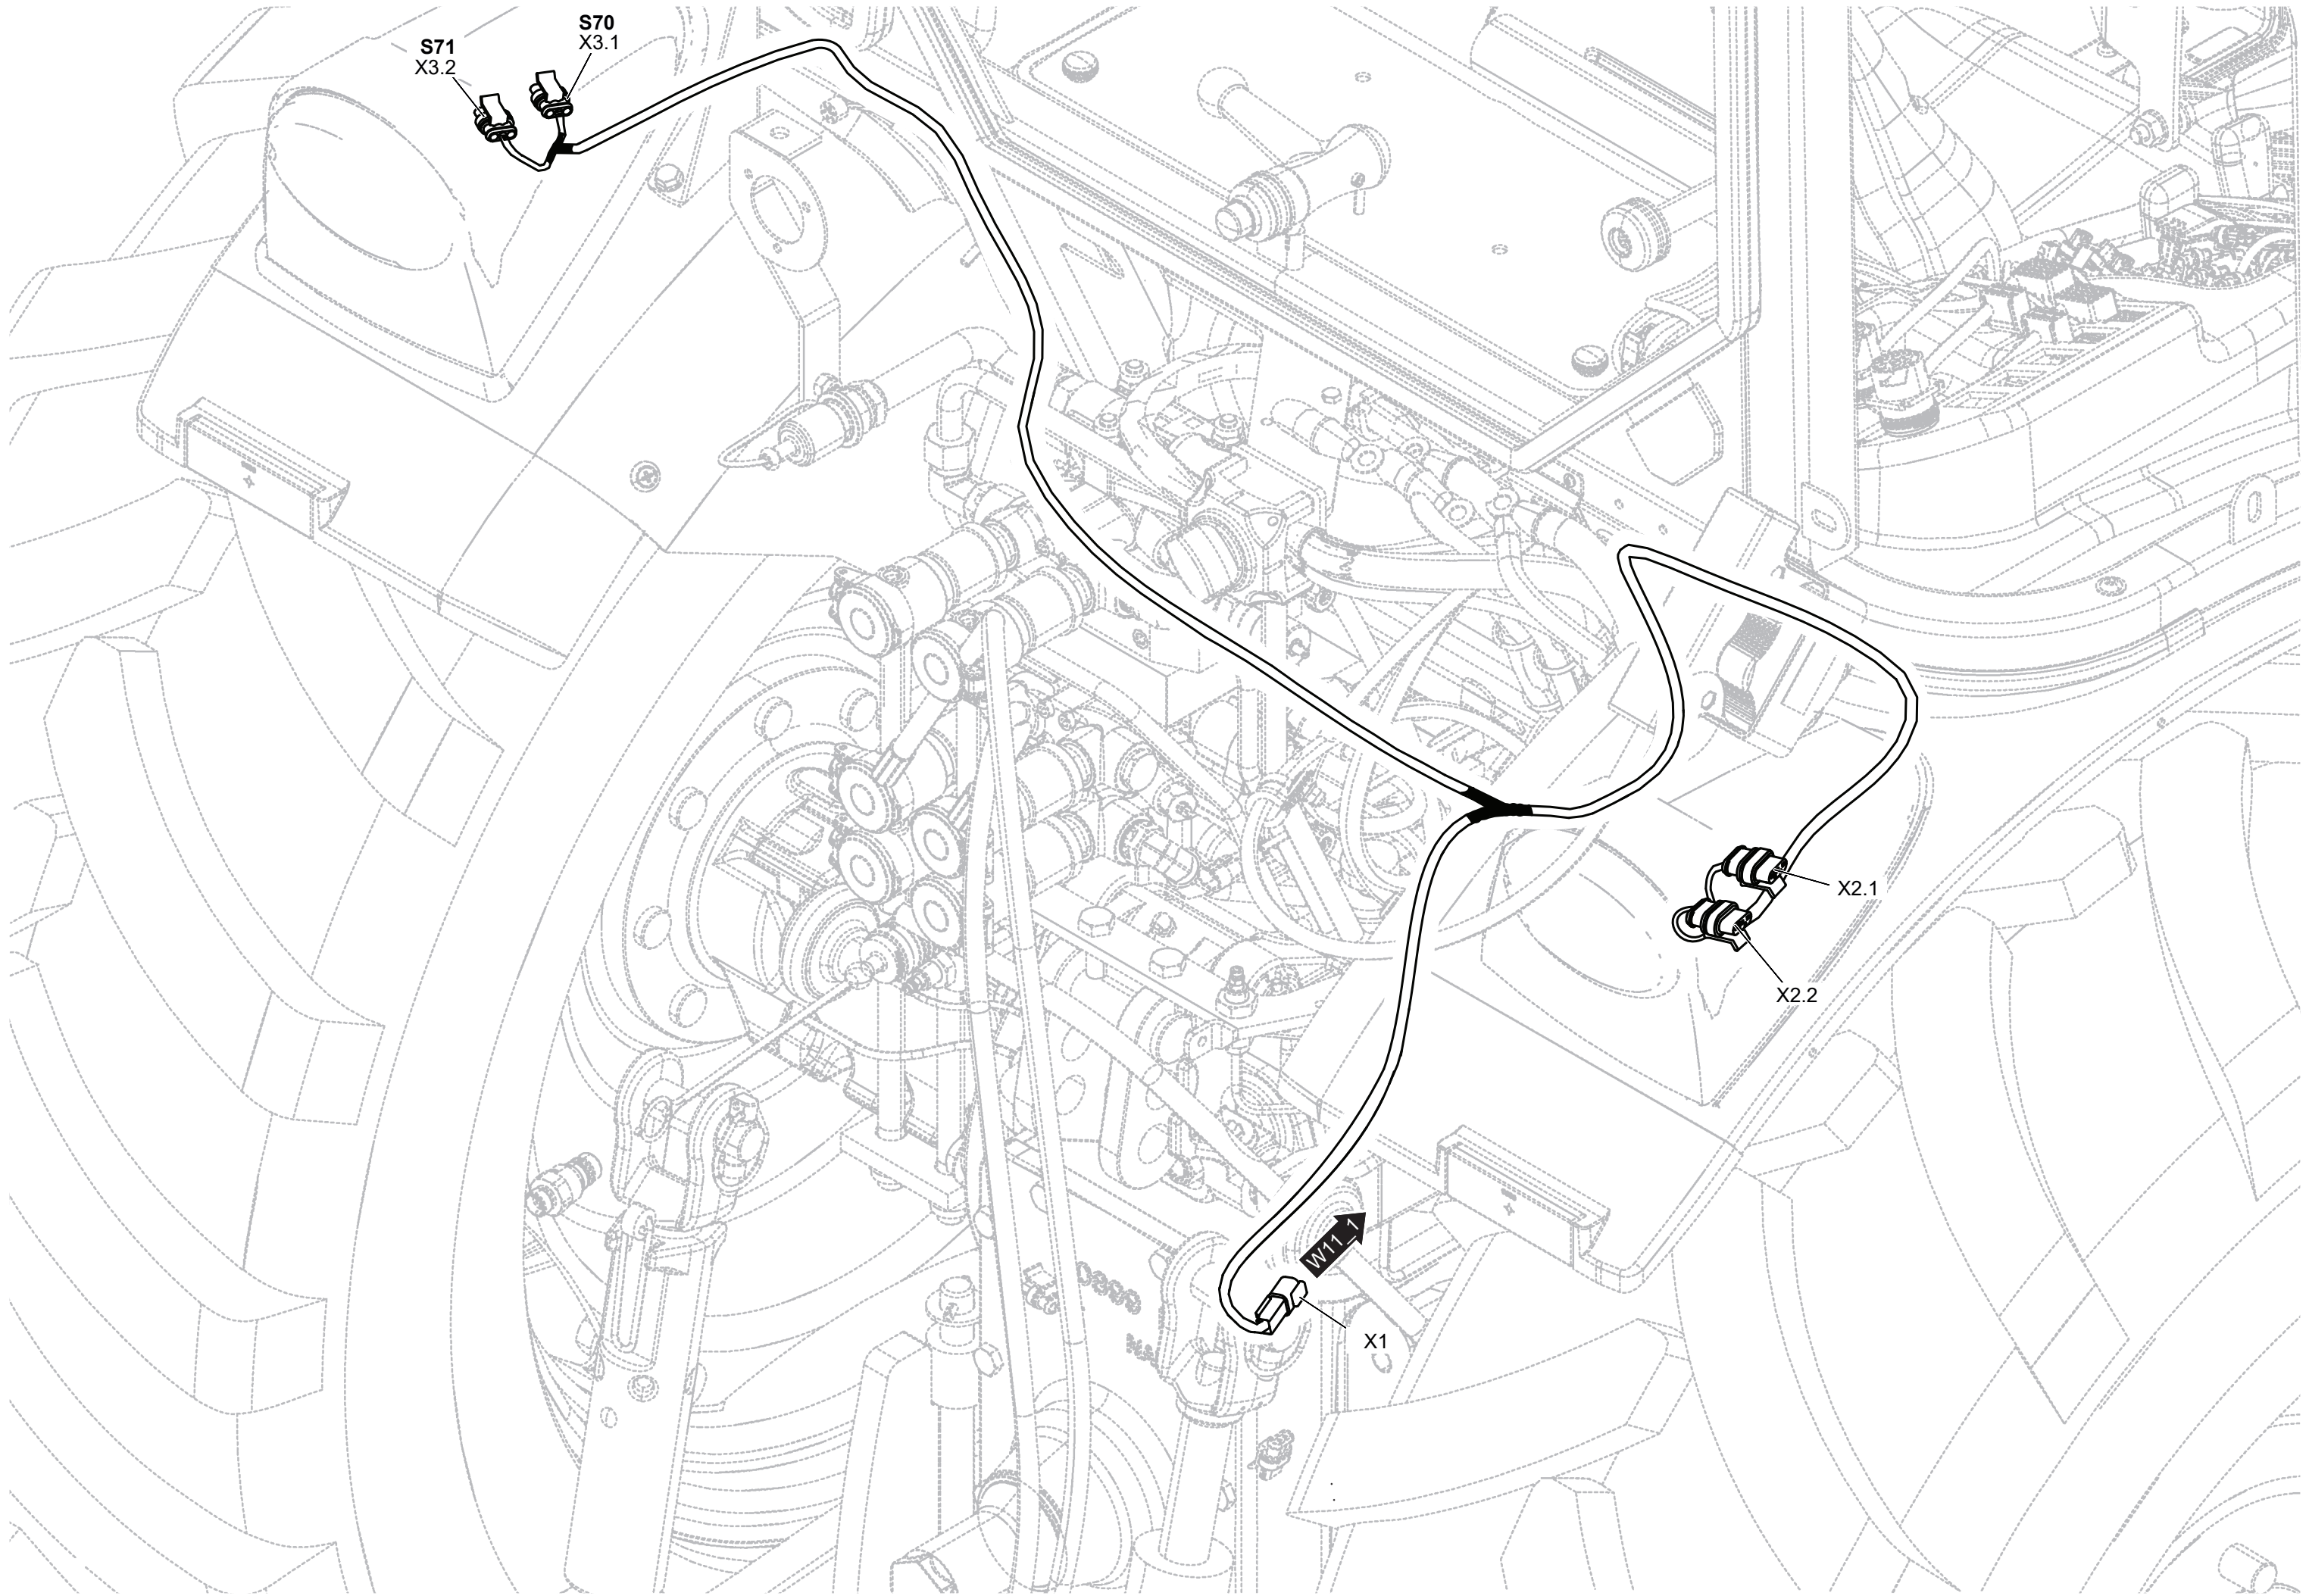

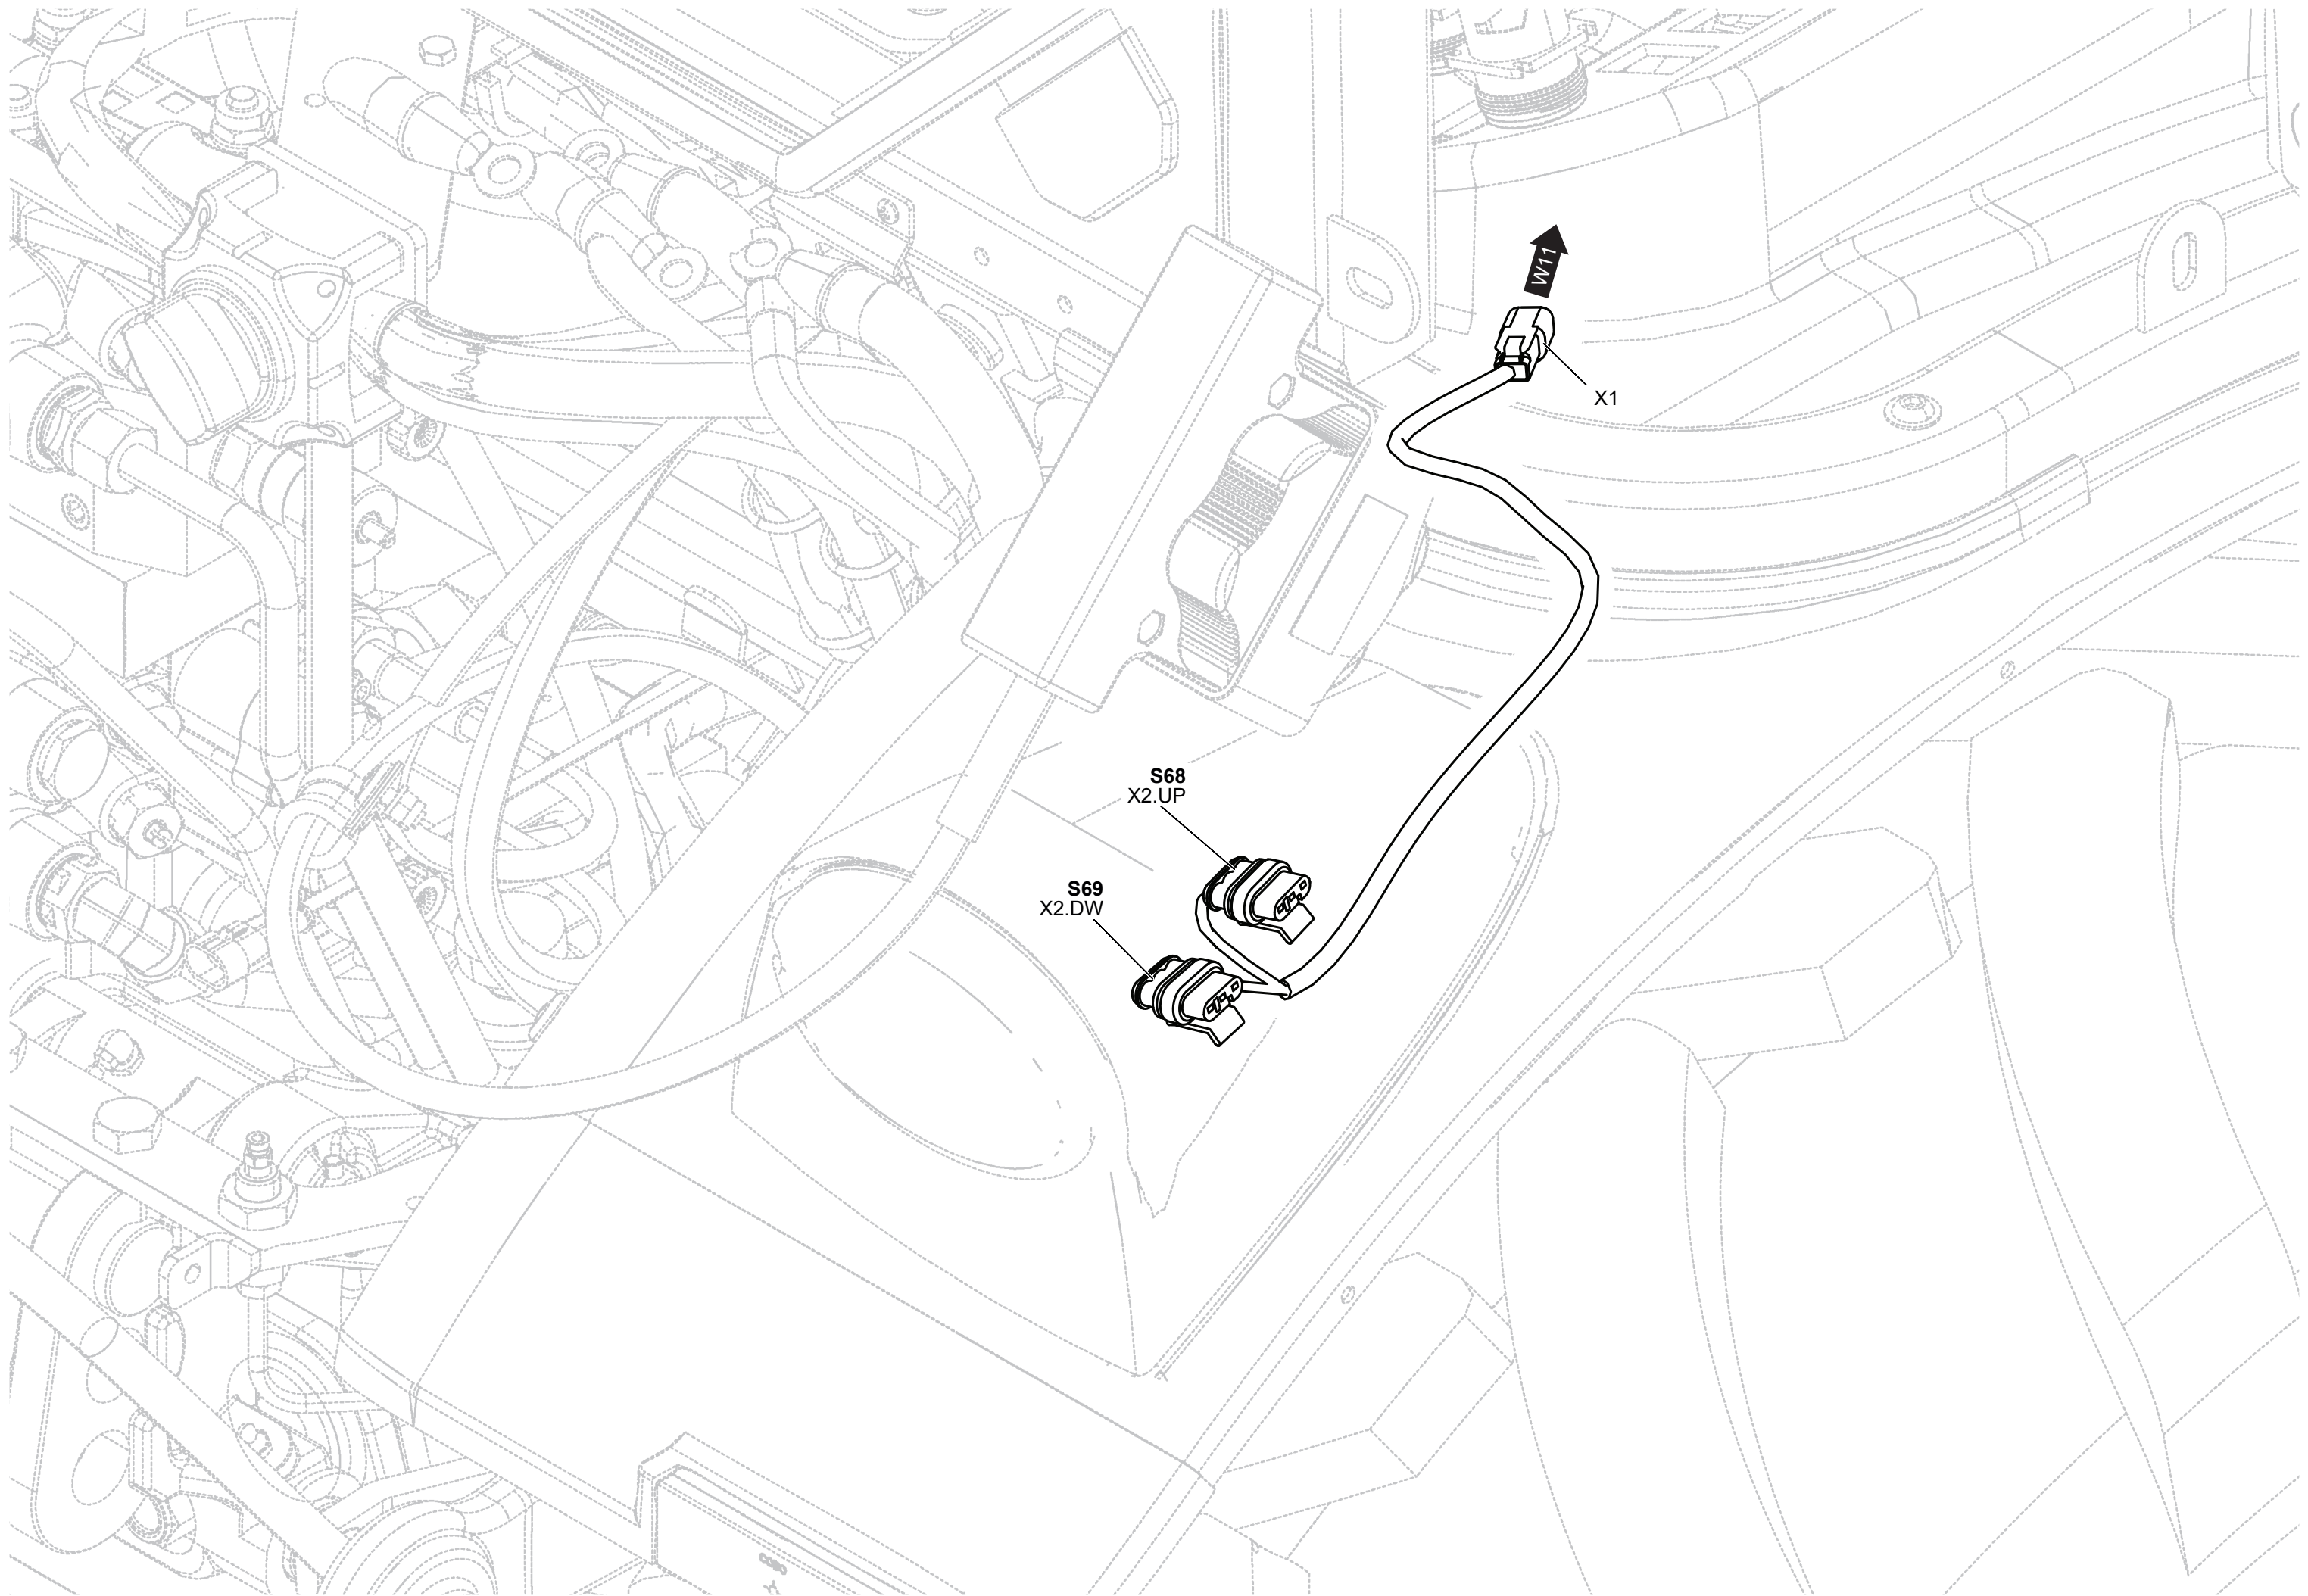

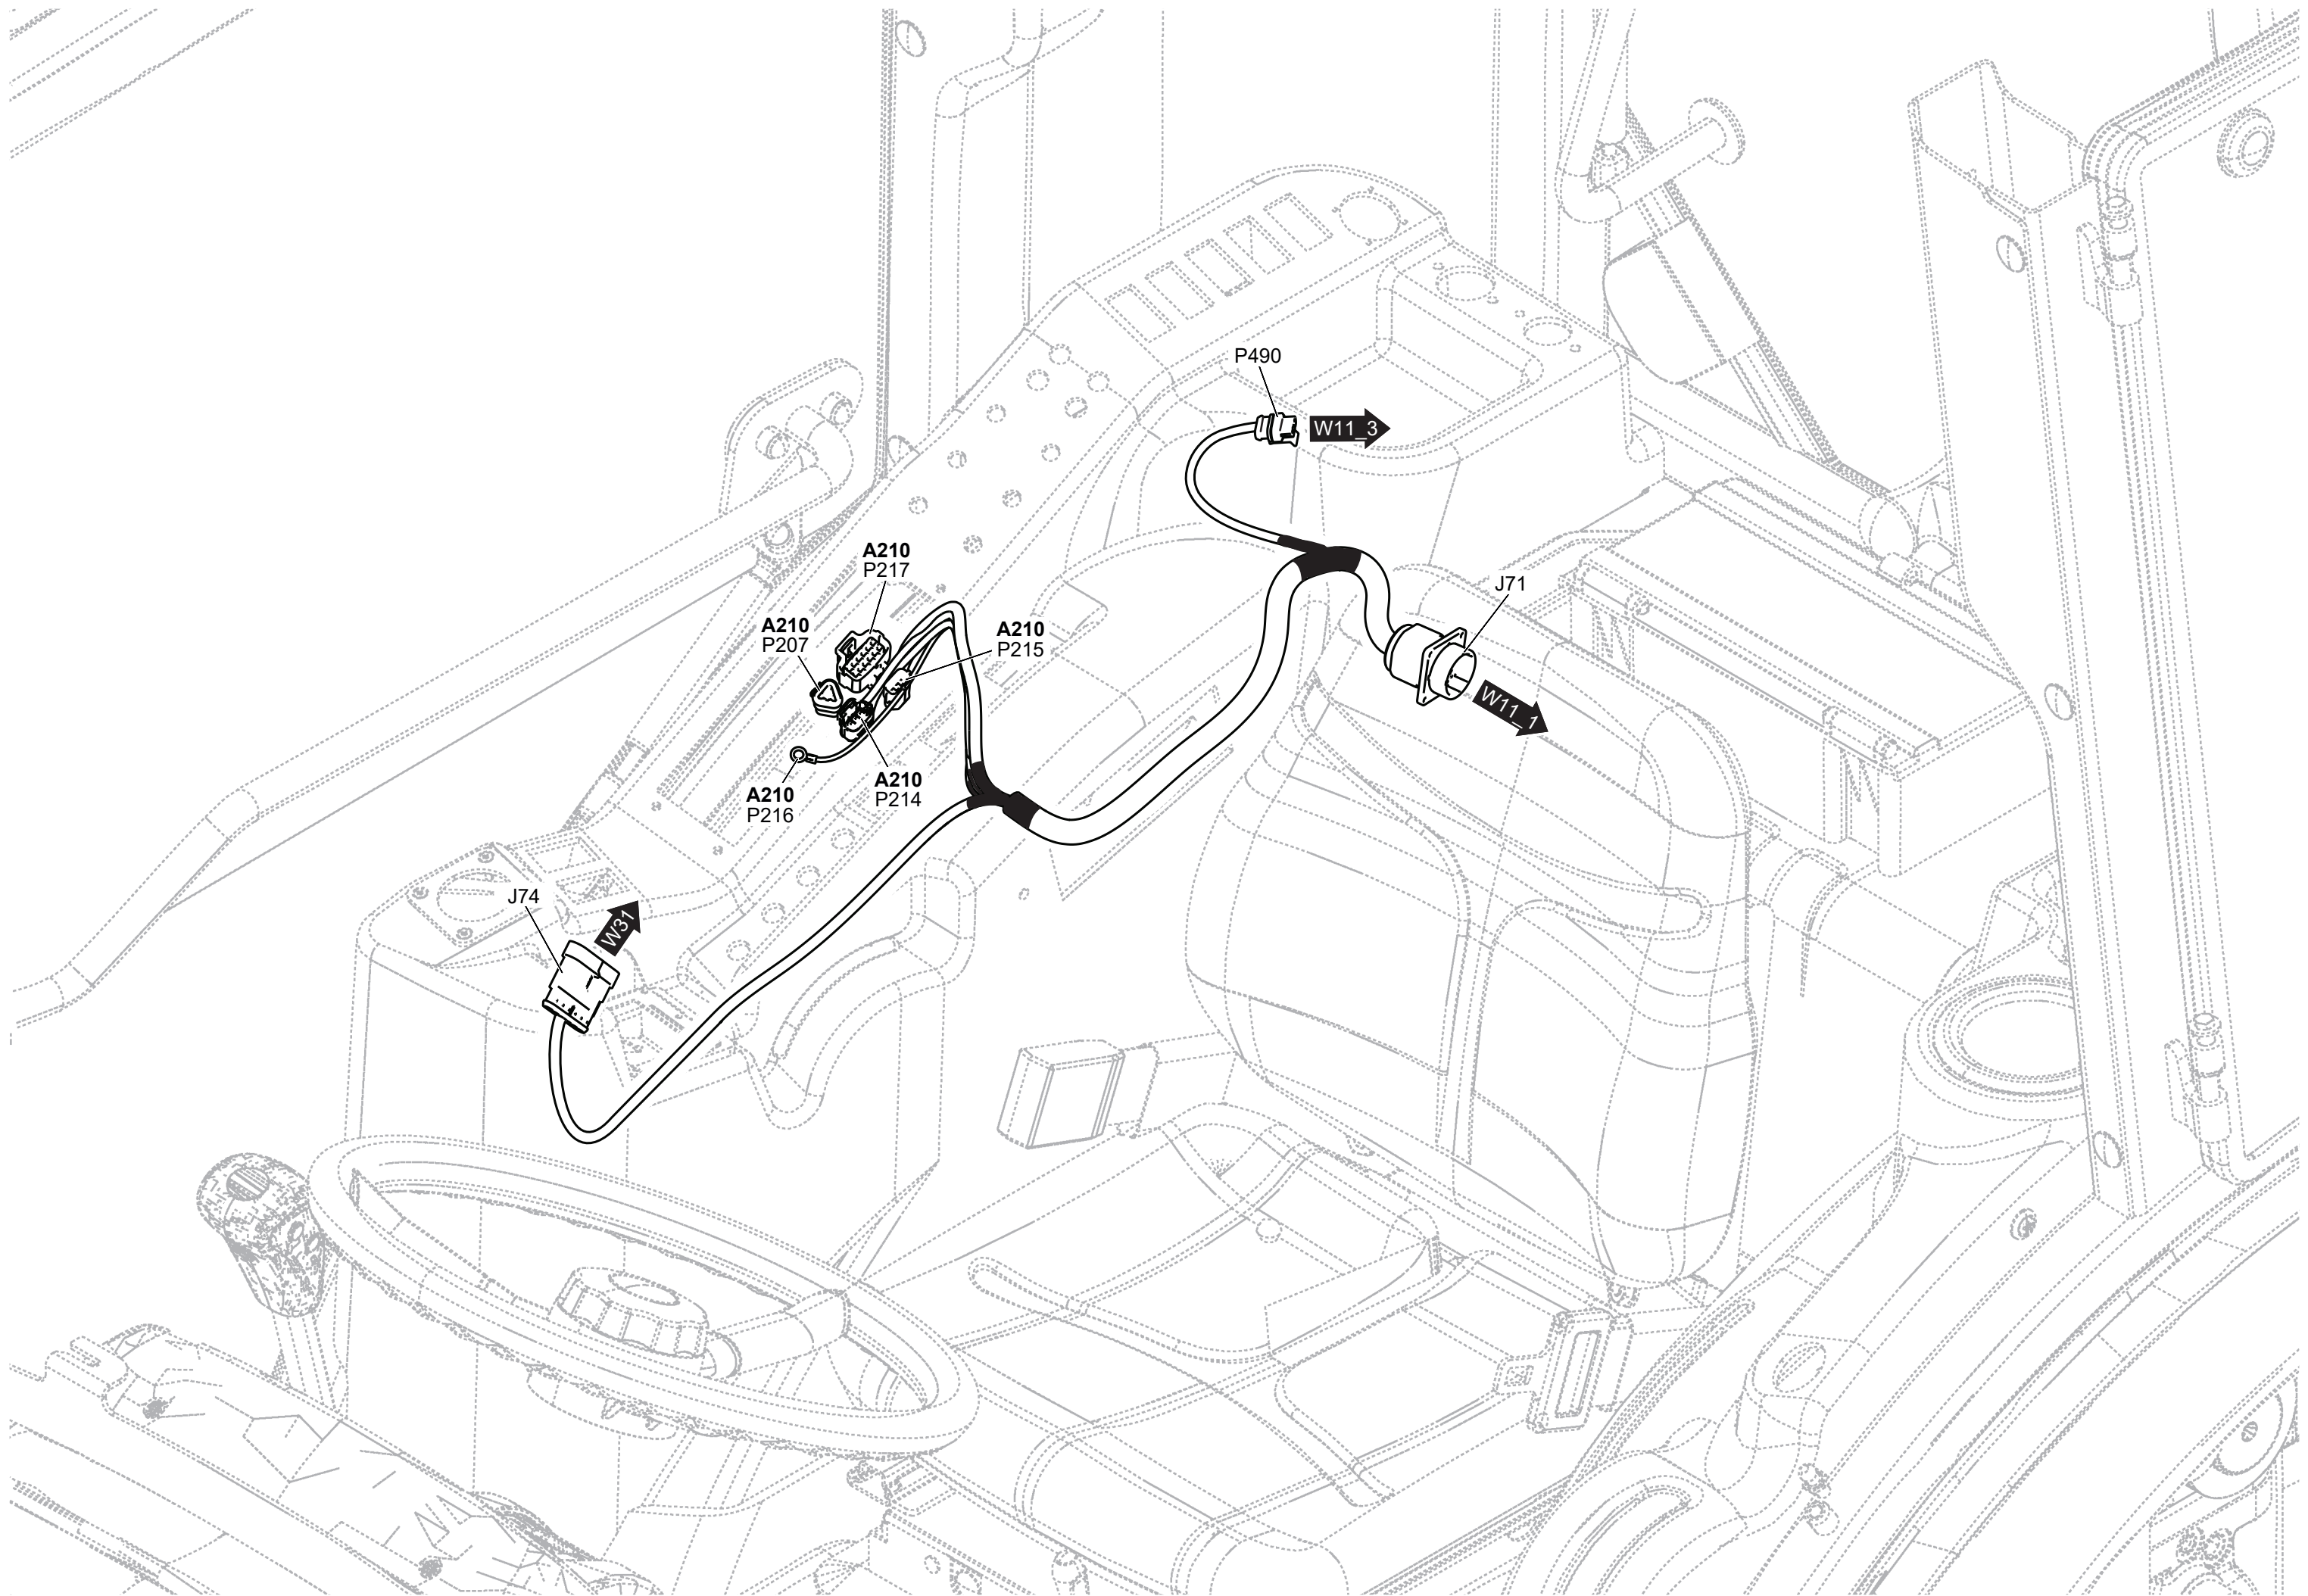

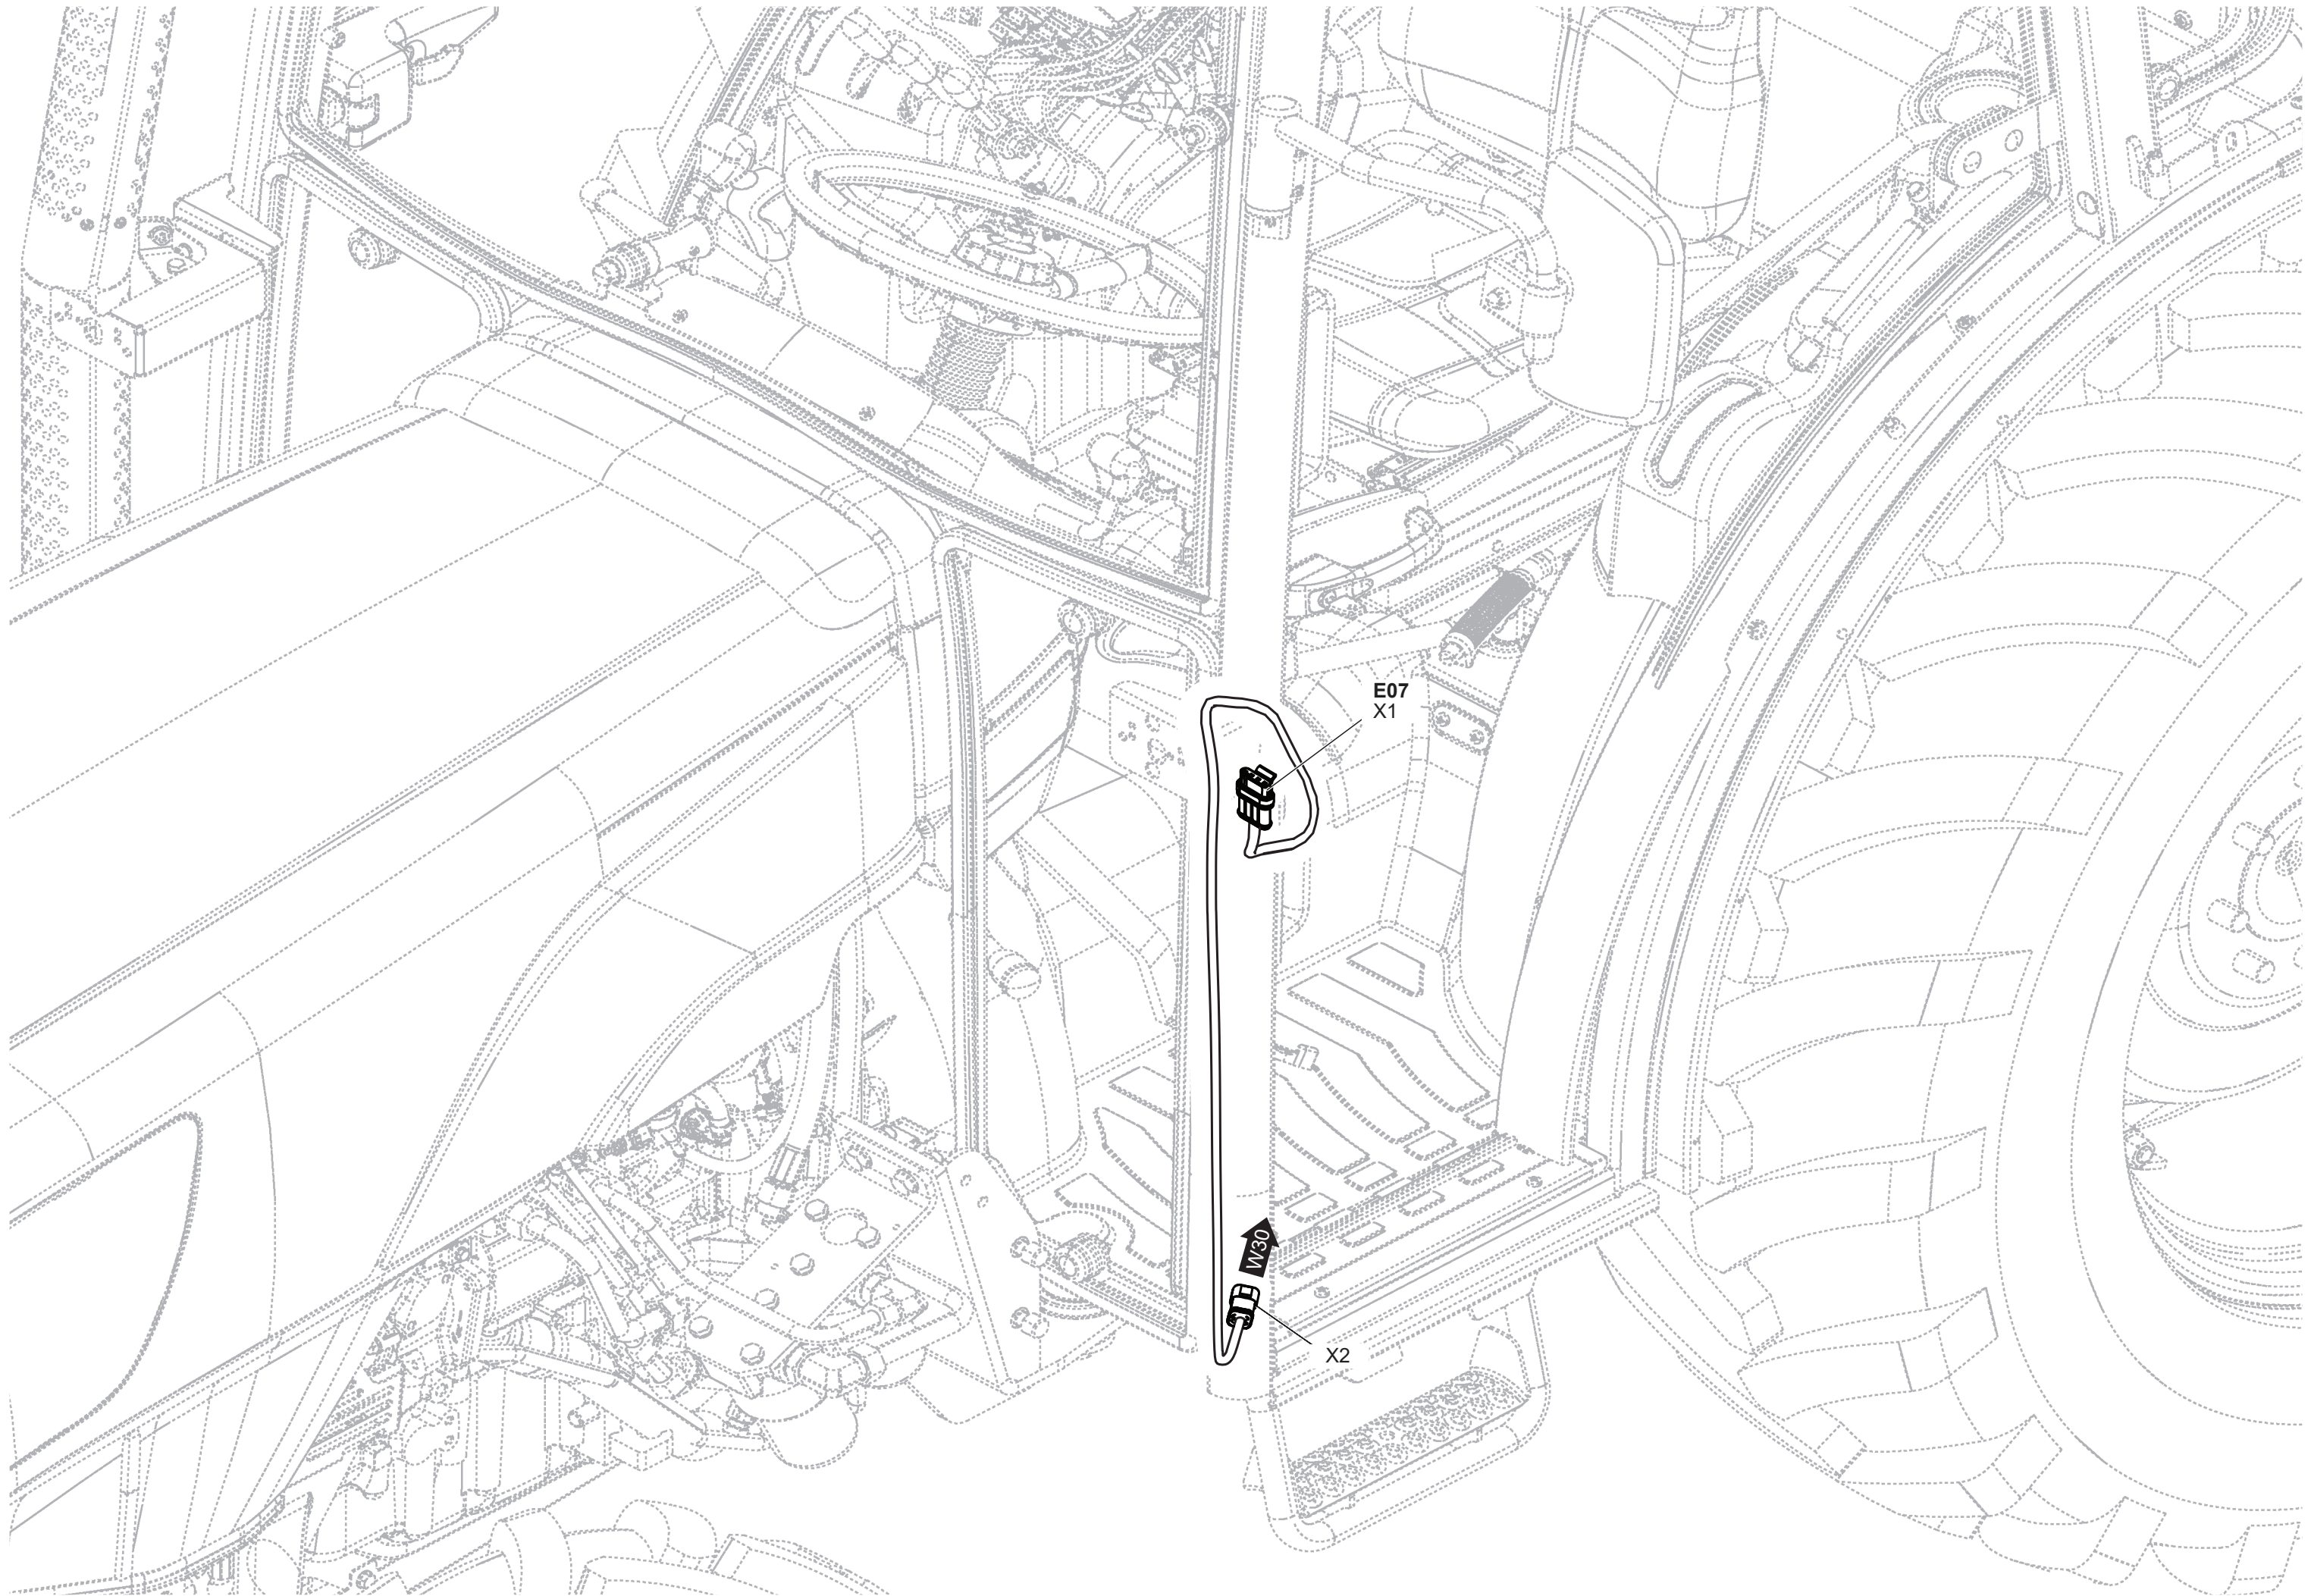


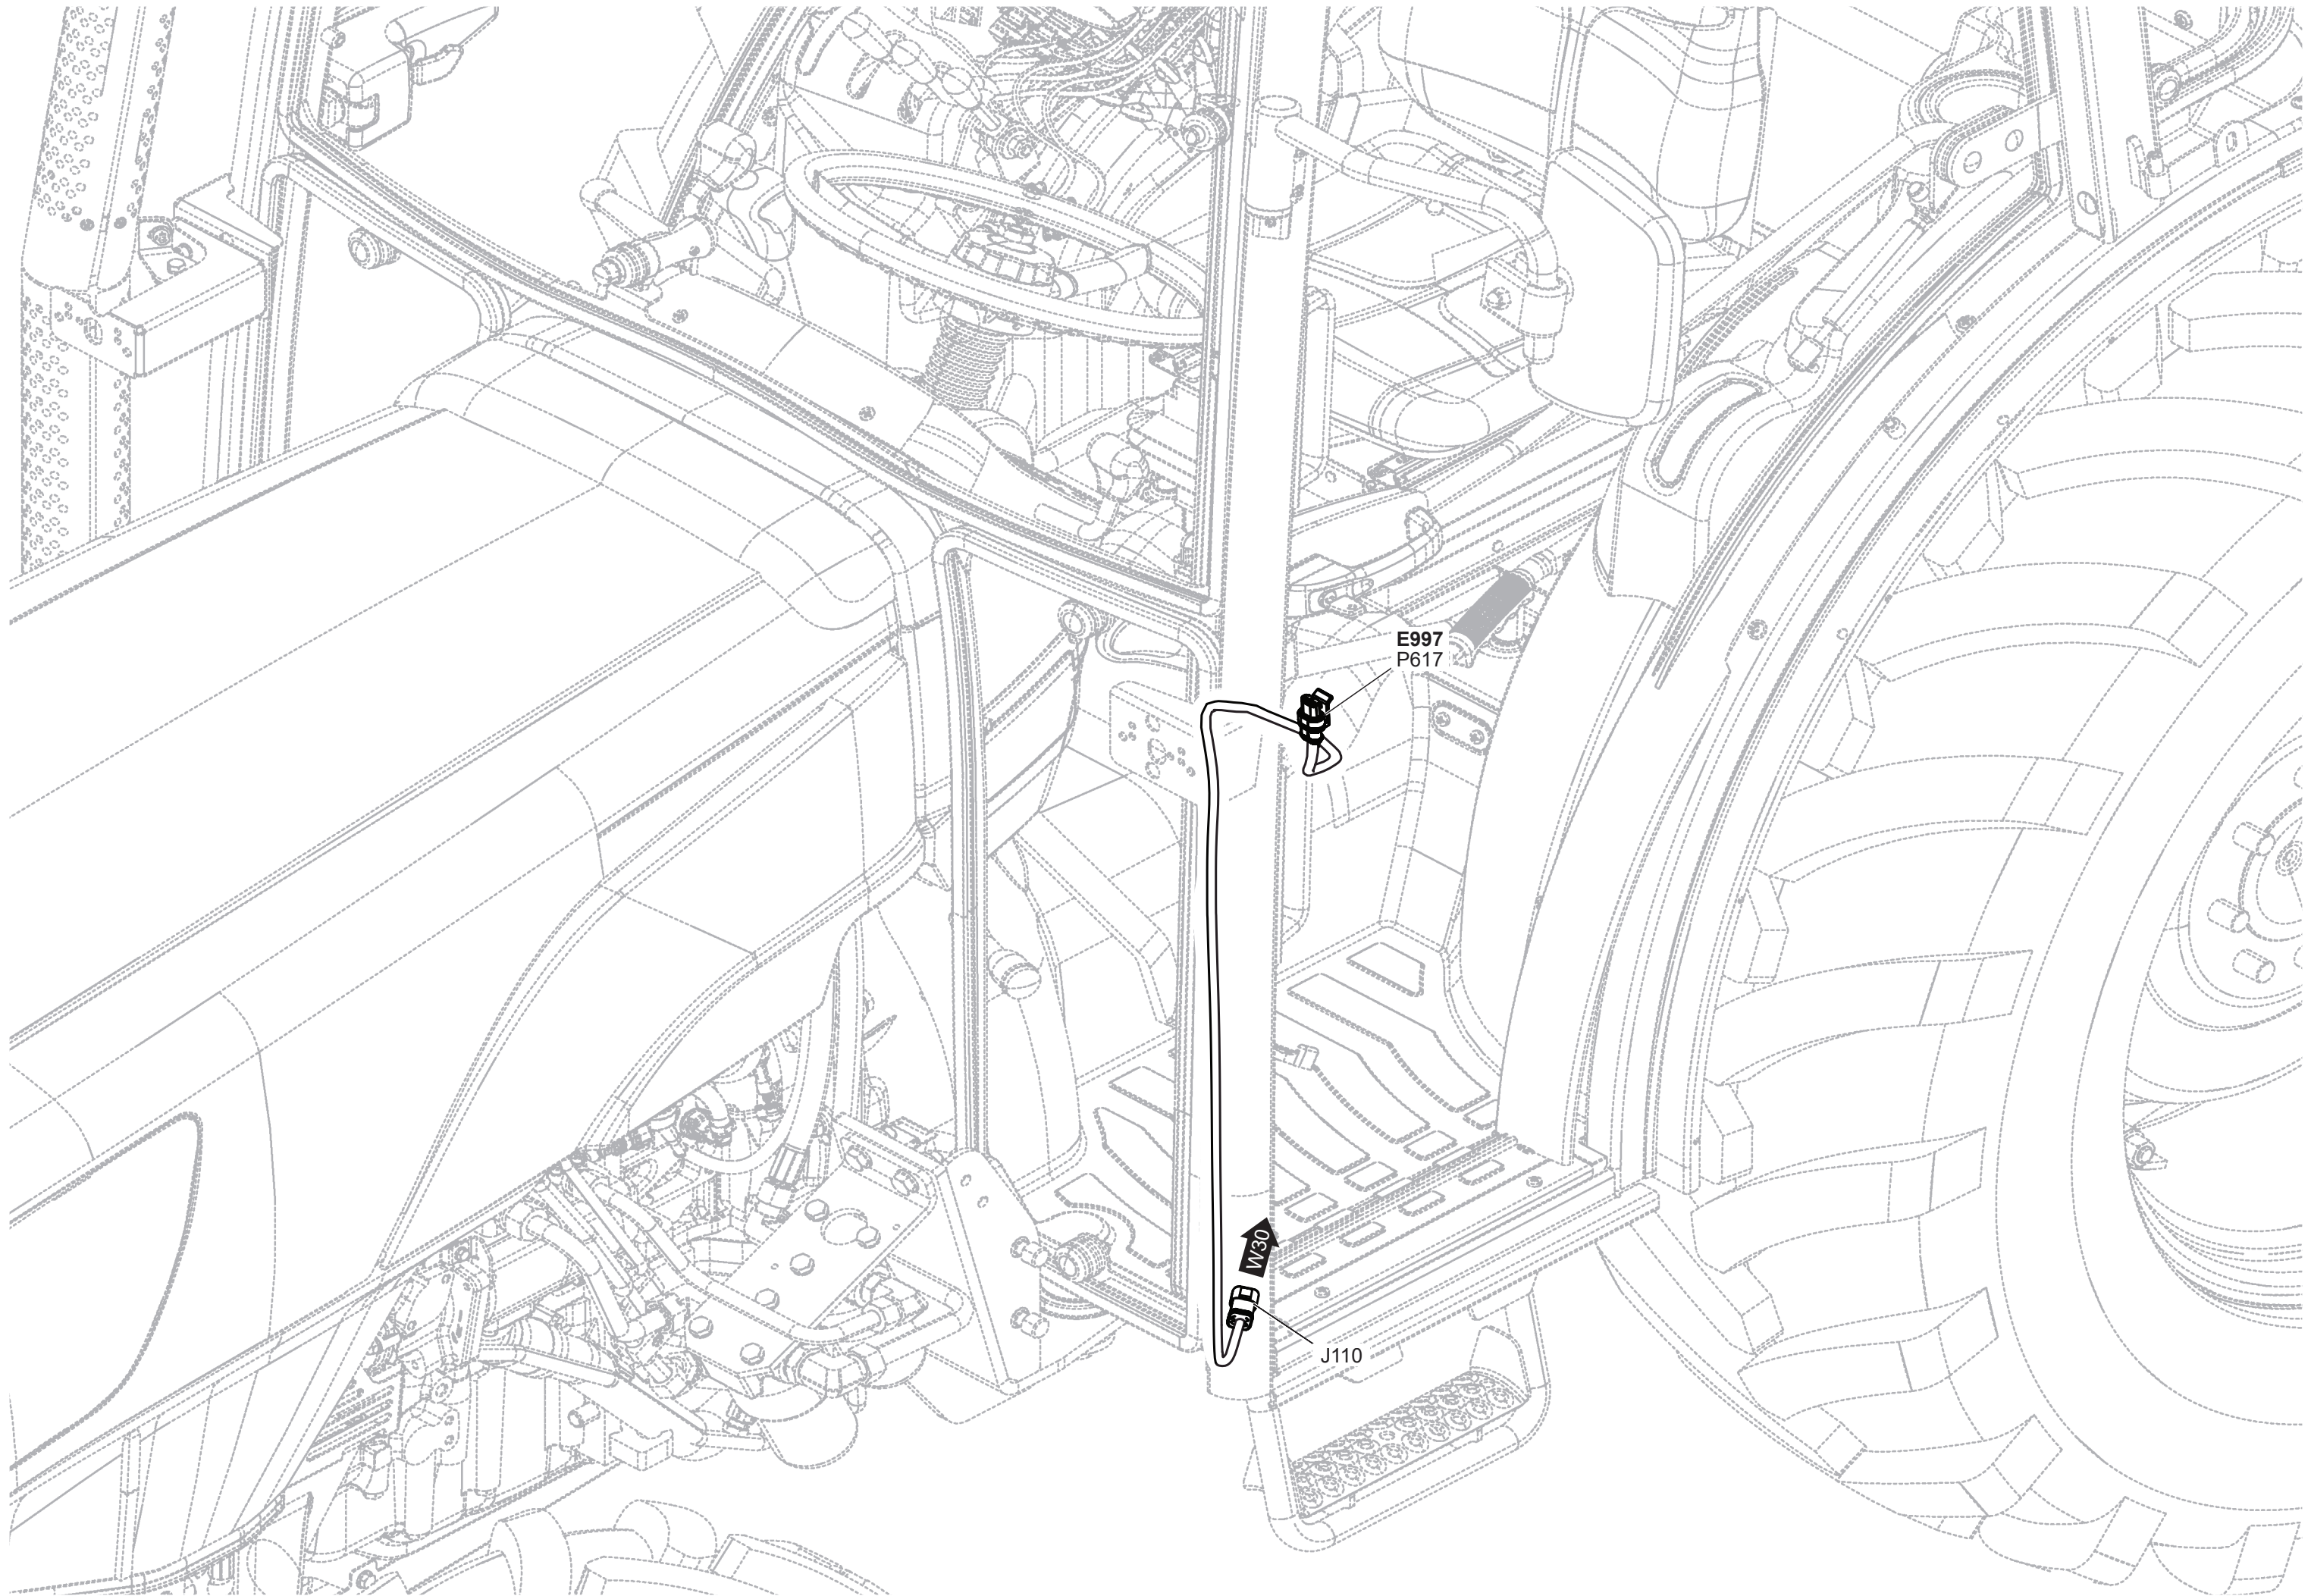



E997
P617


J110

    W30

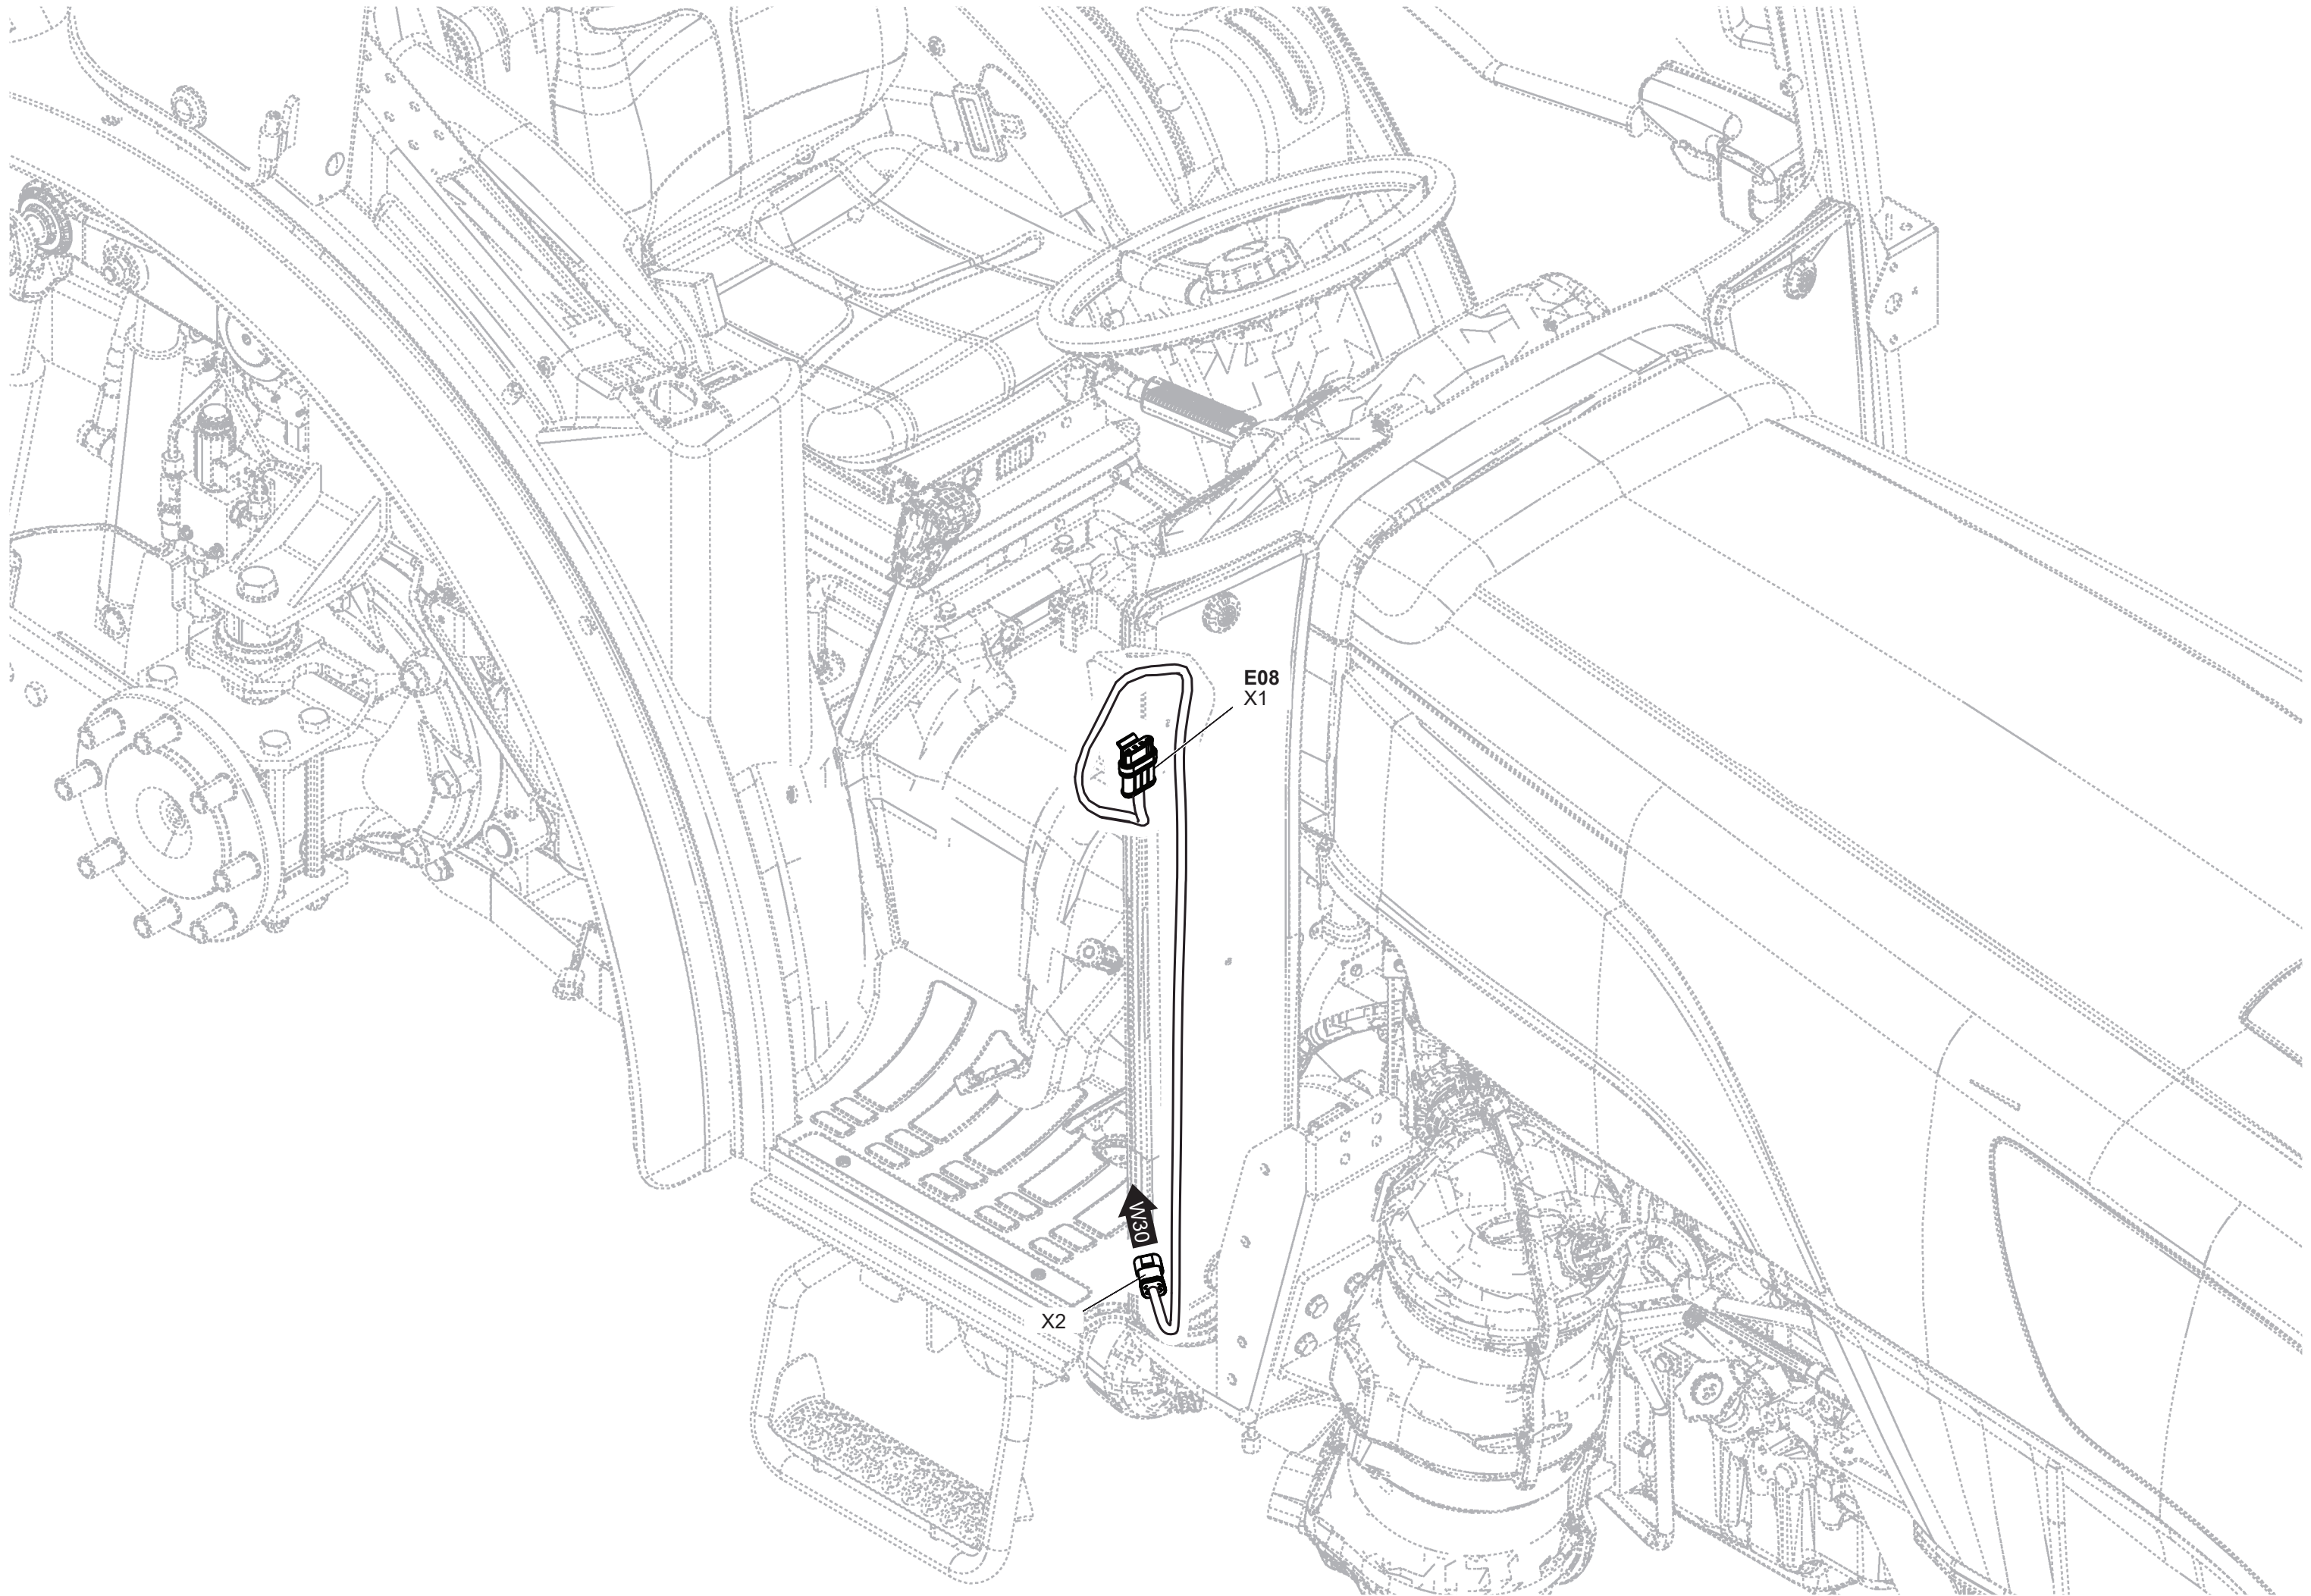

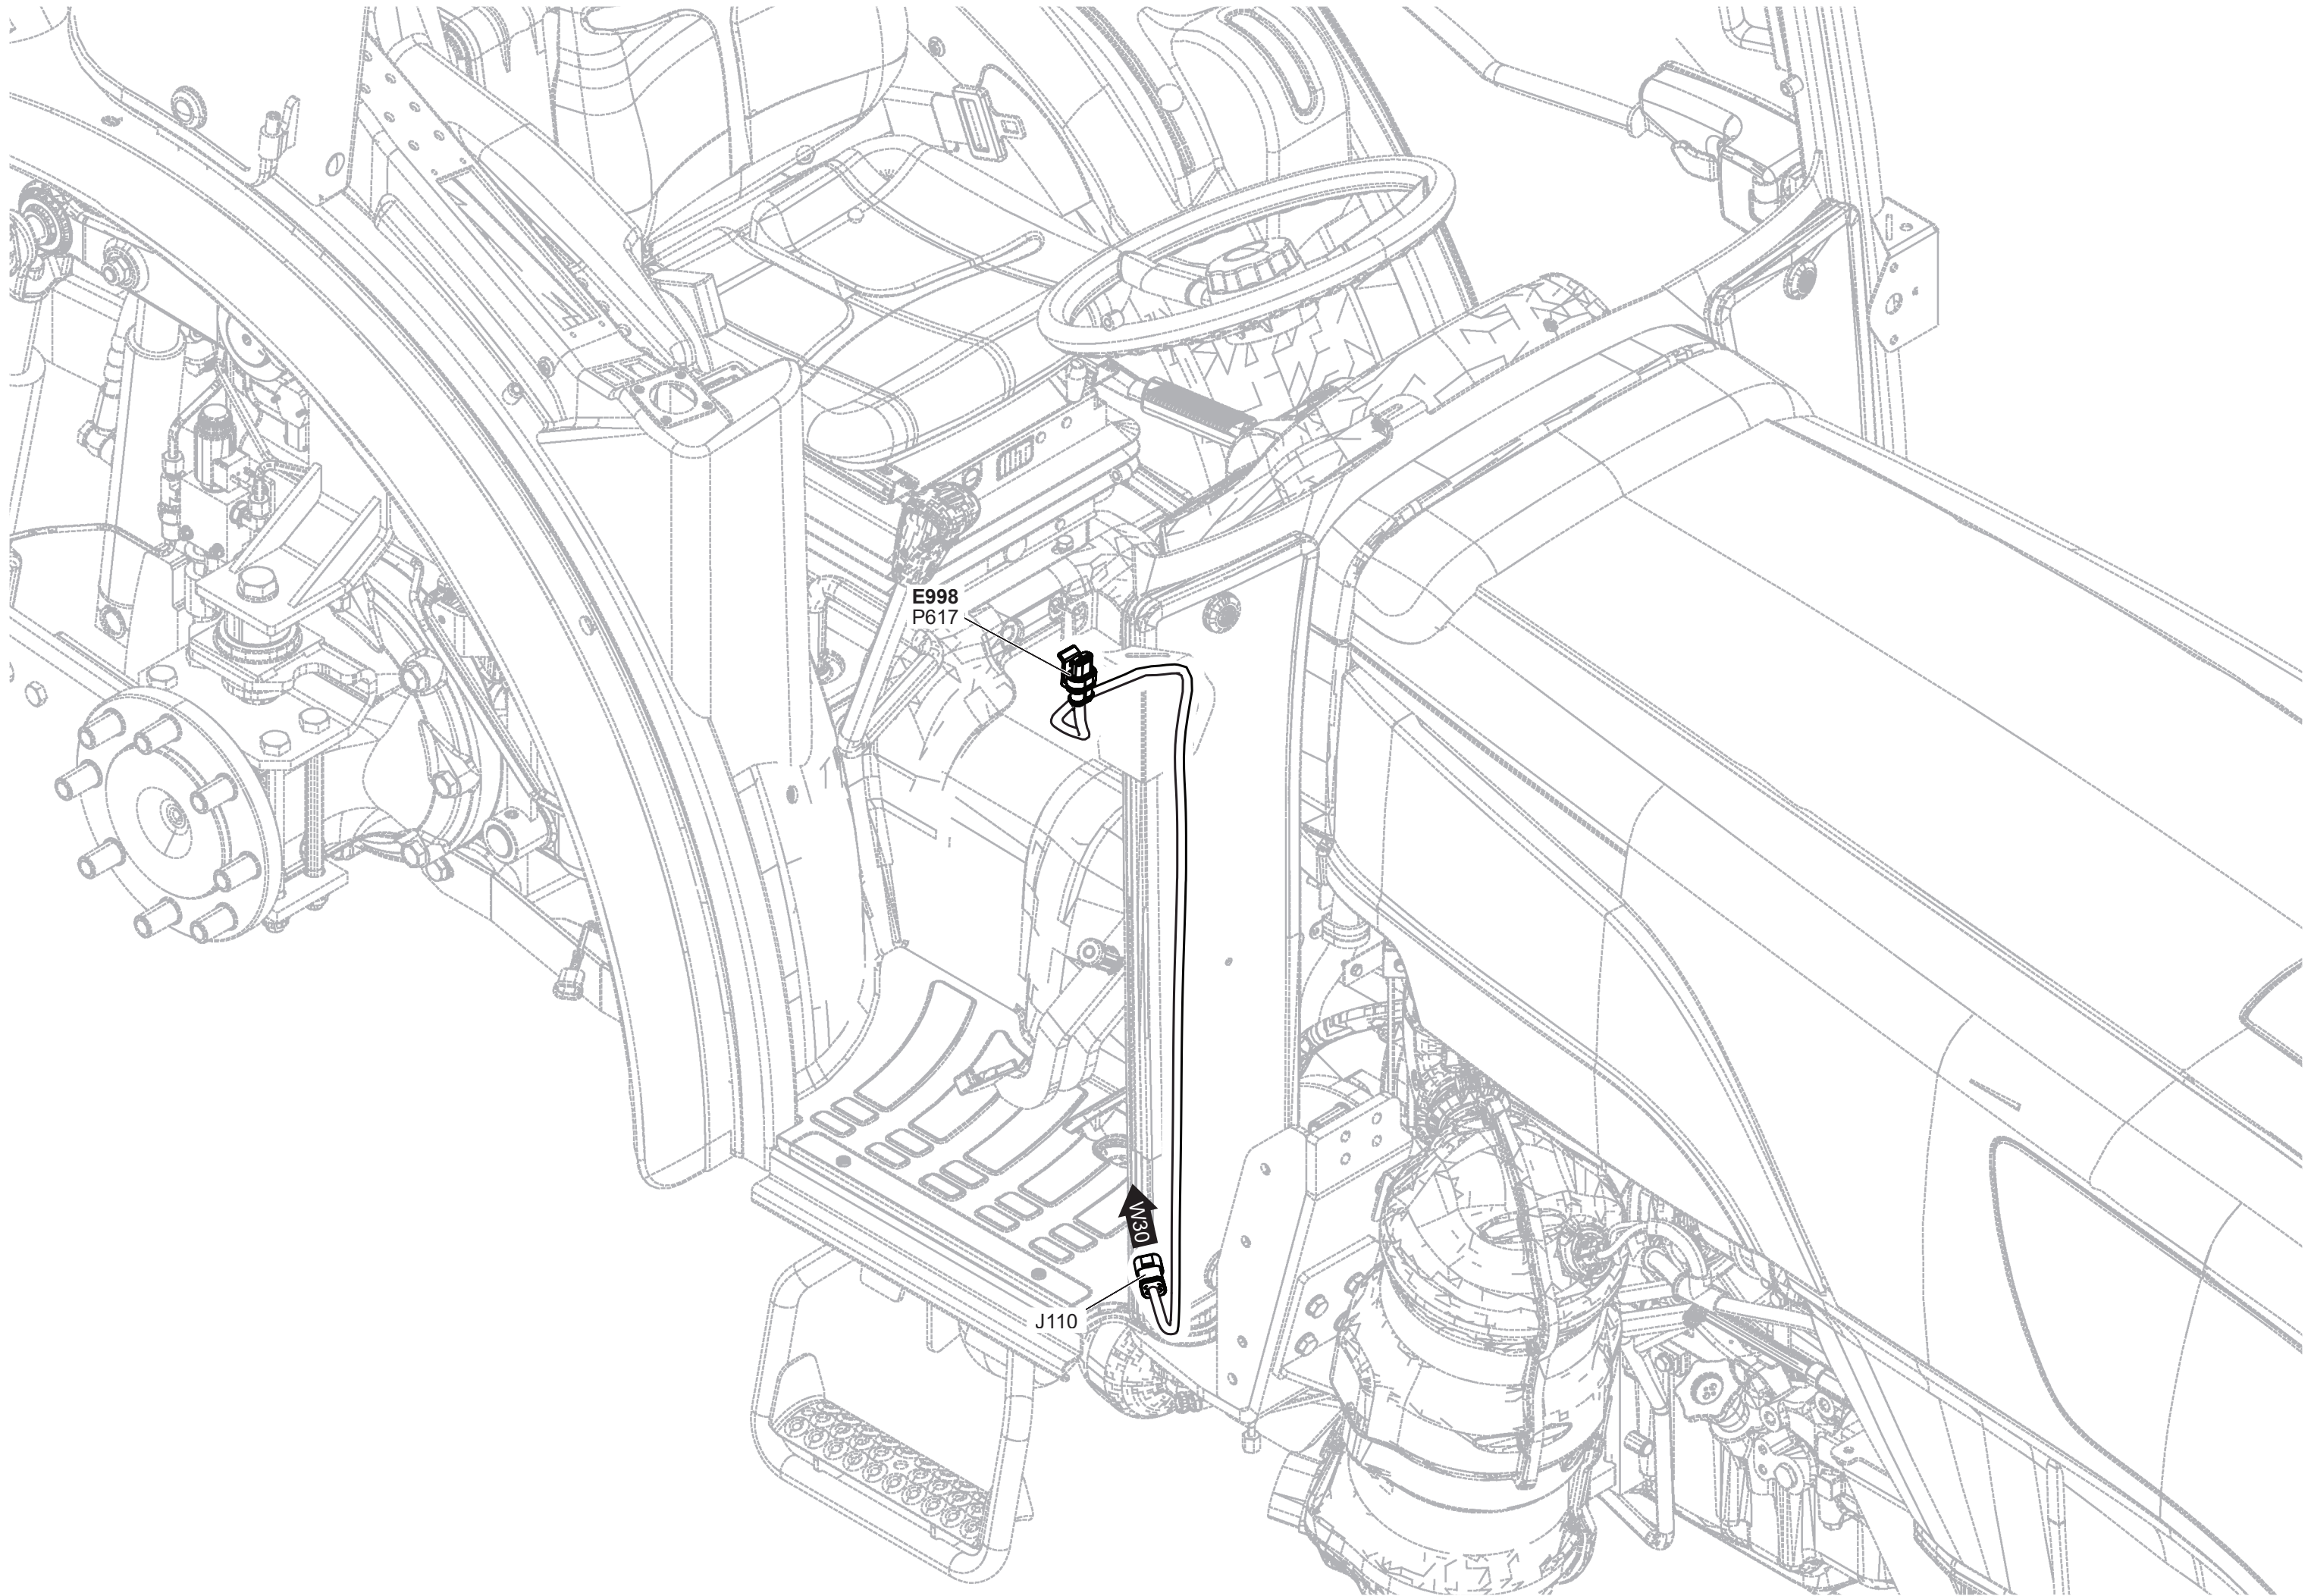


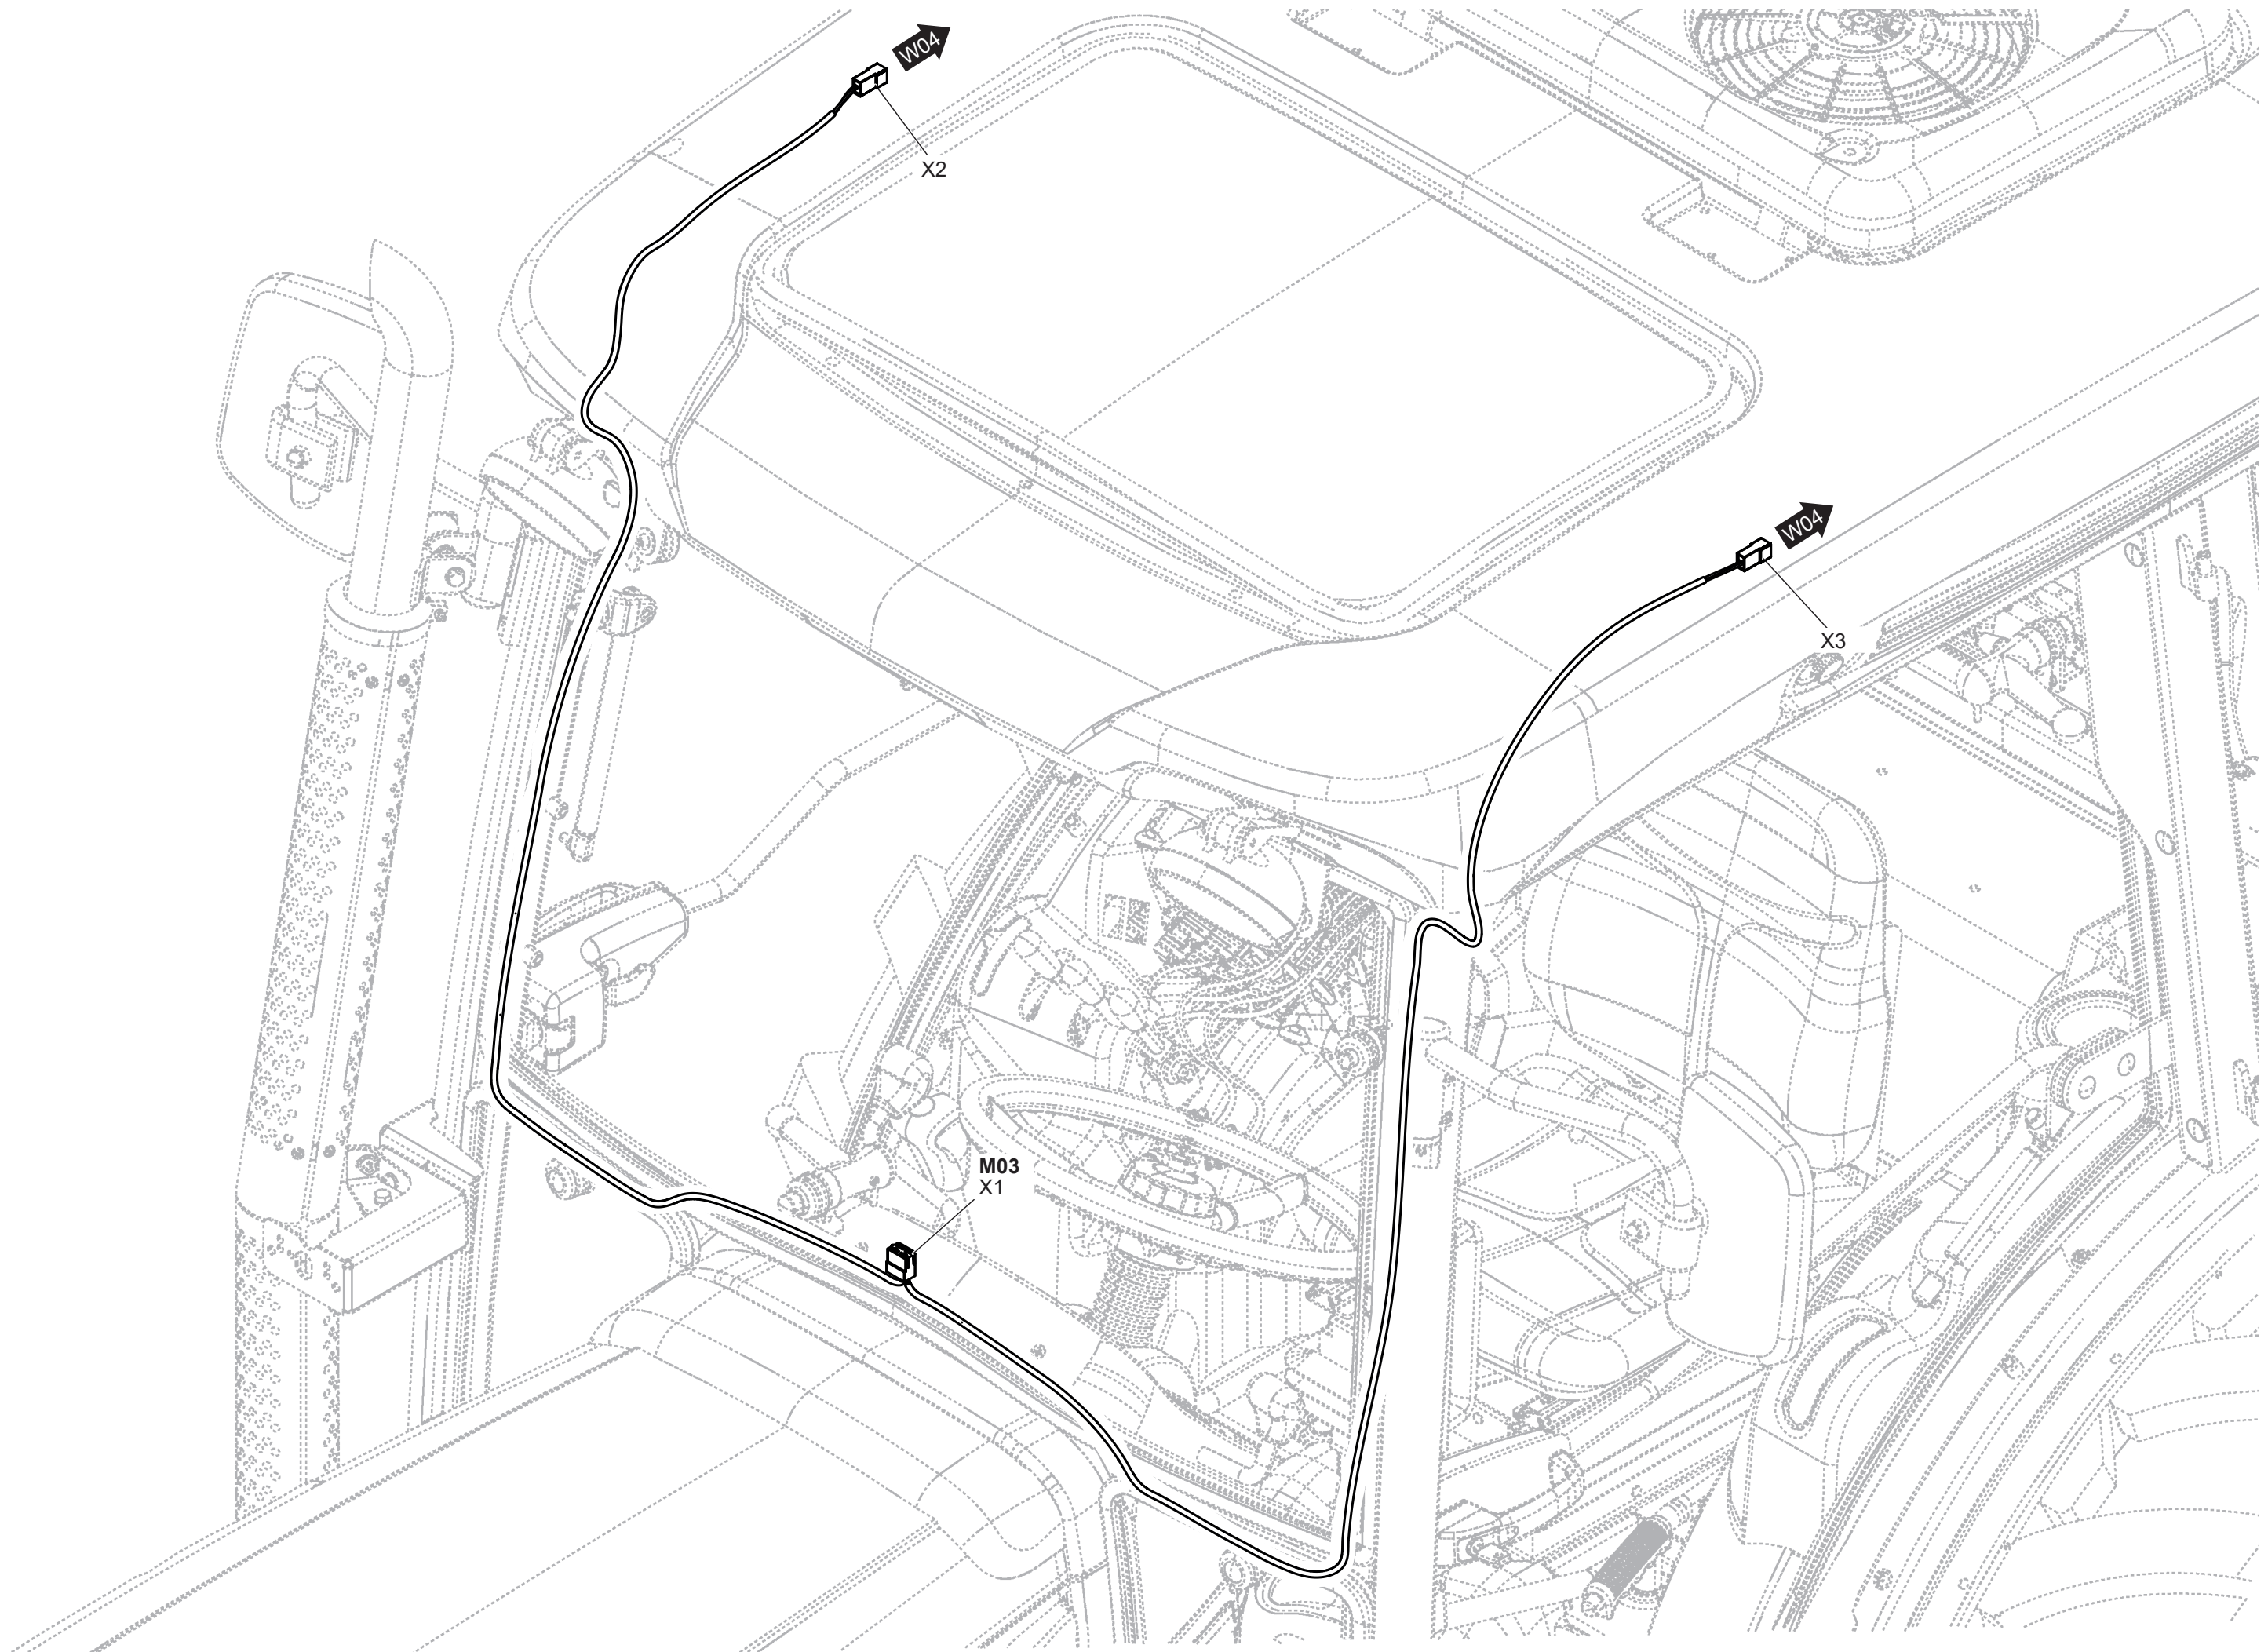



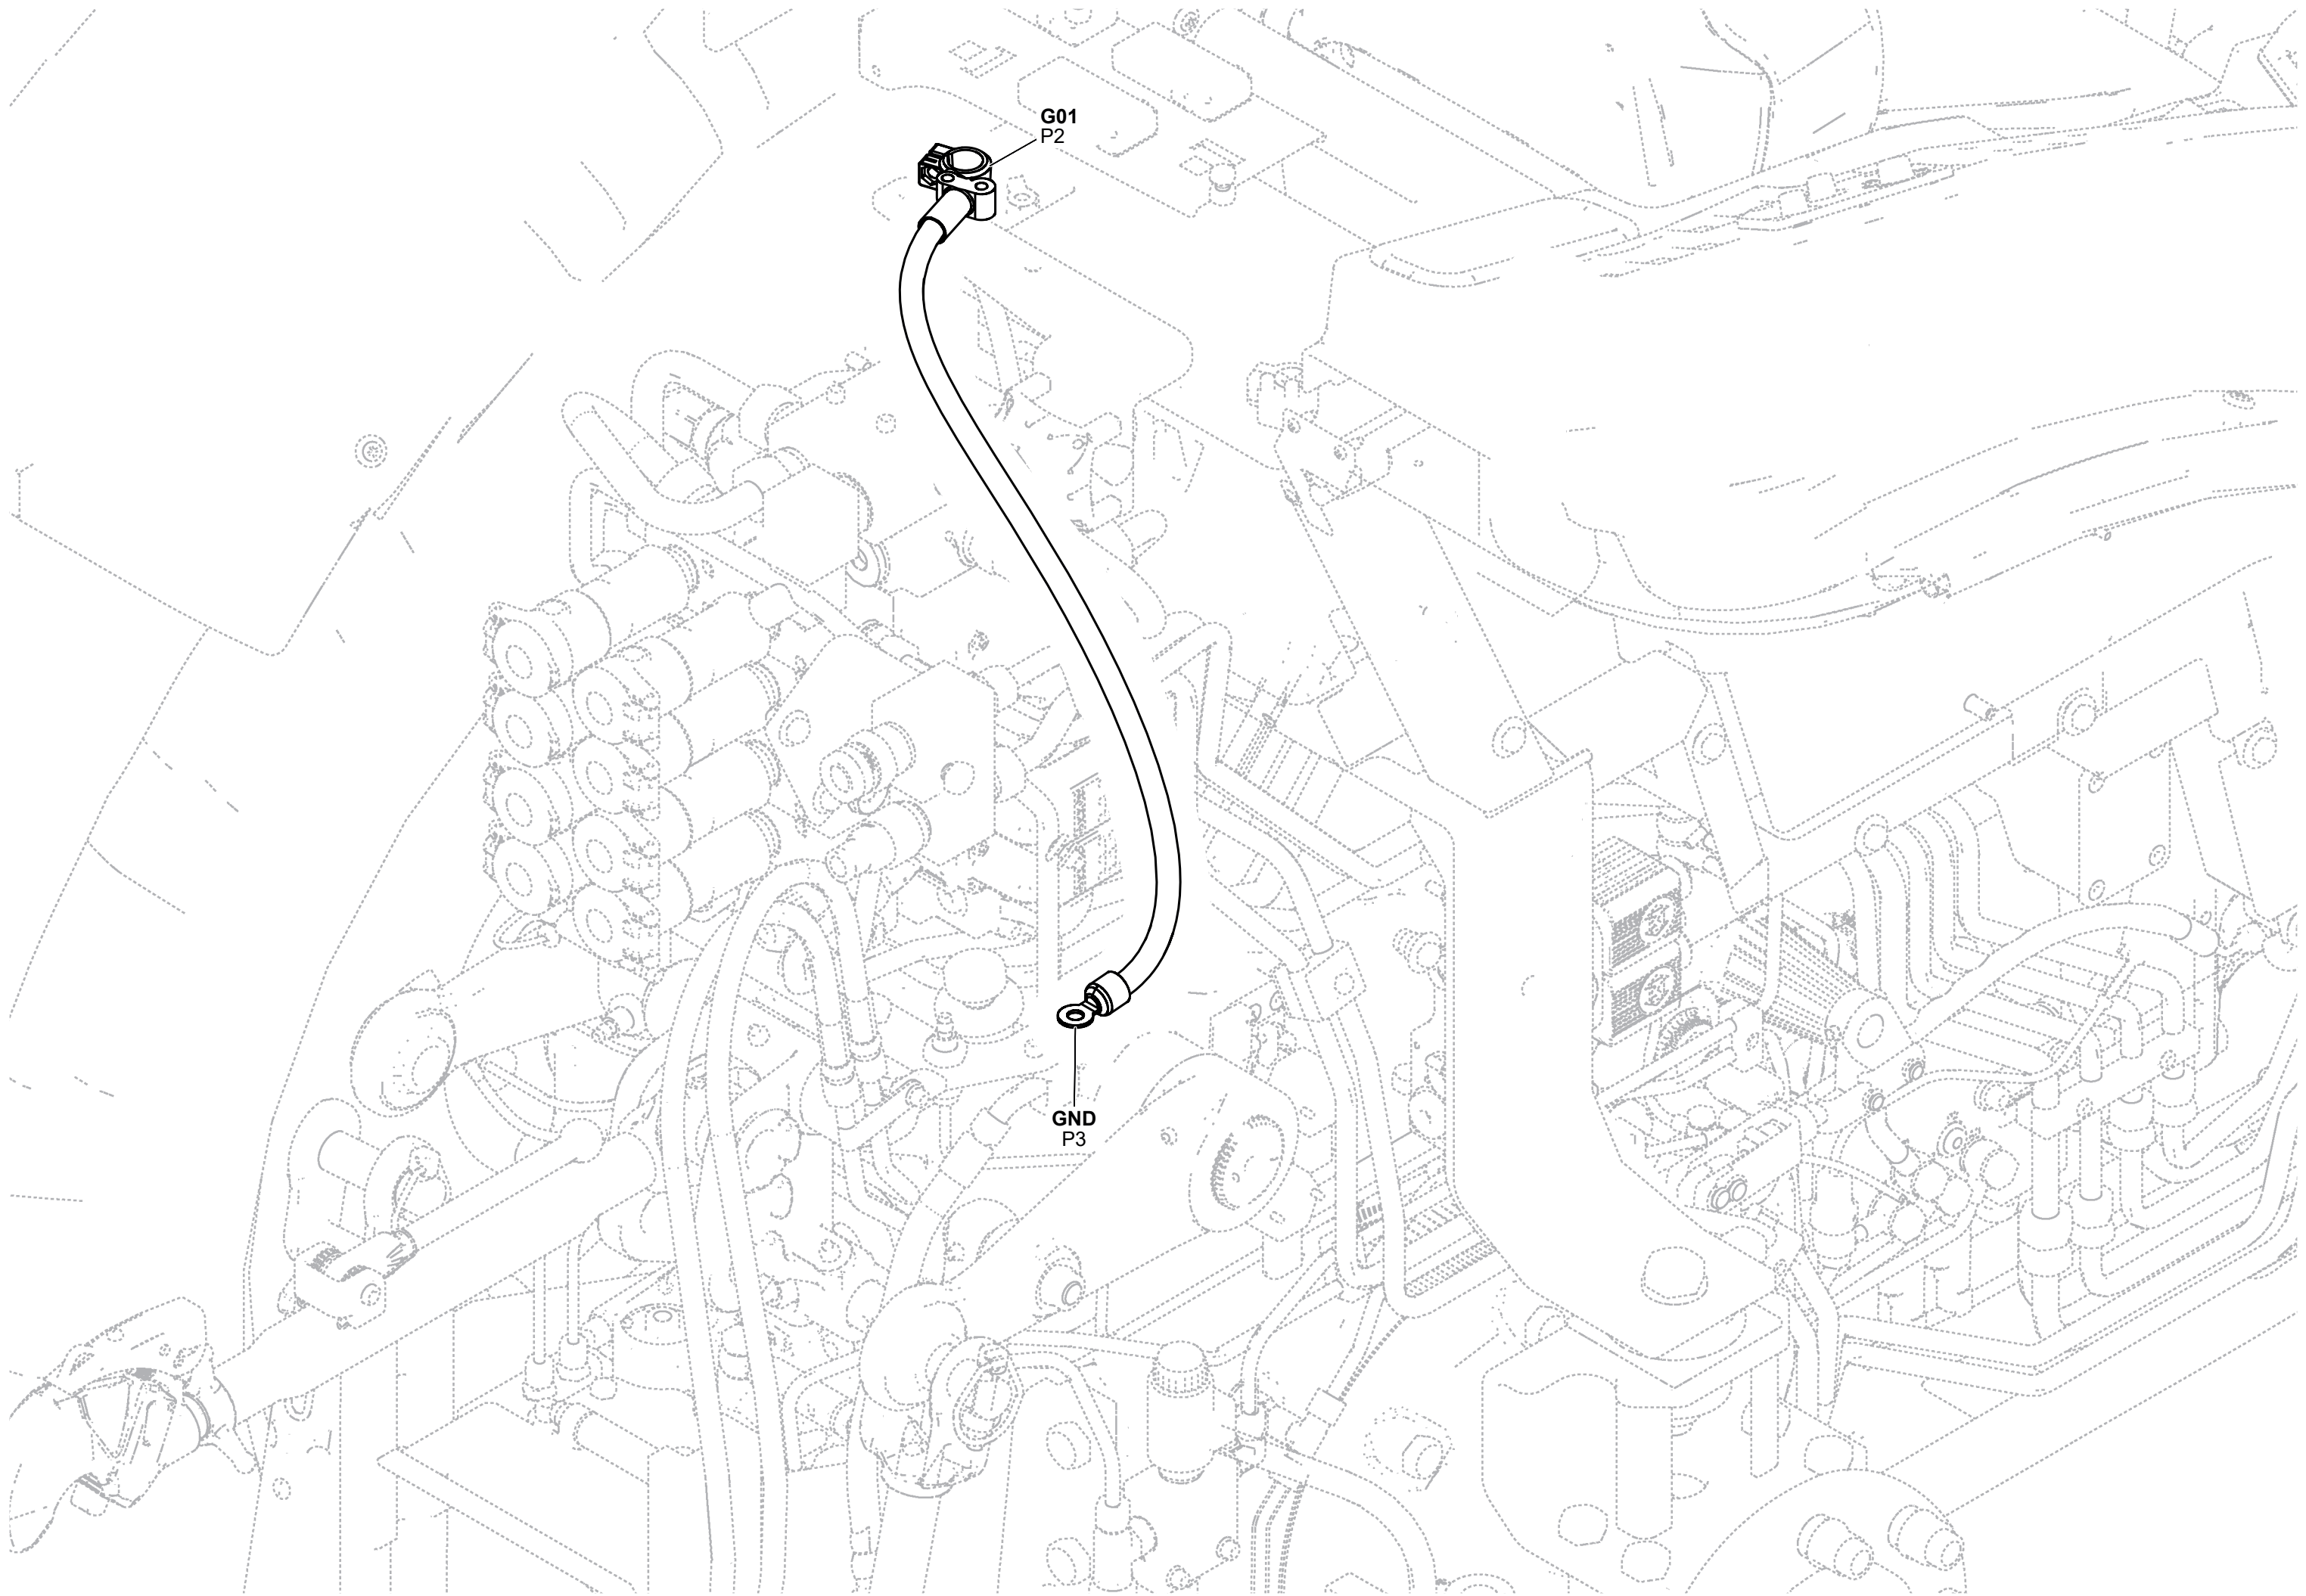



G01
P2

      
GND
P3

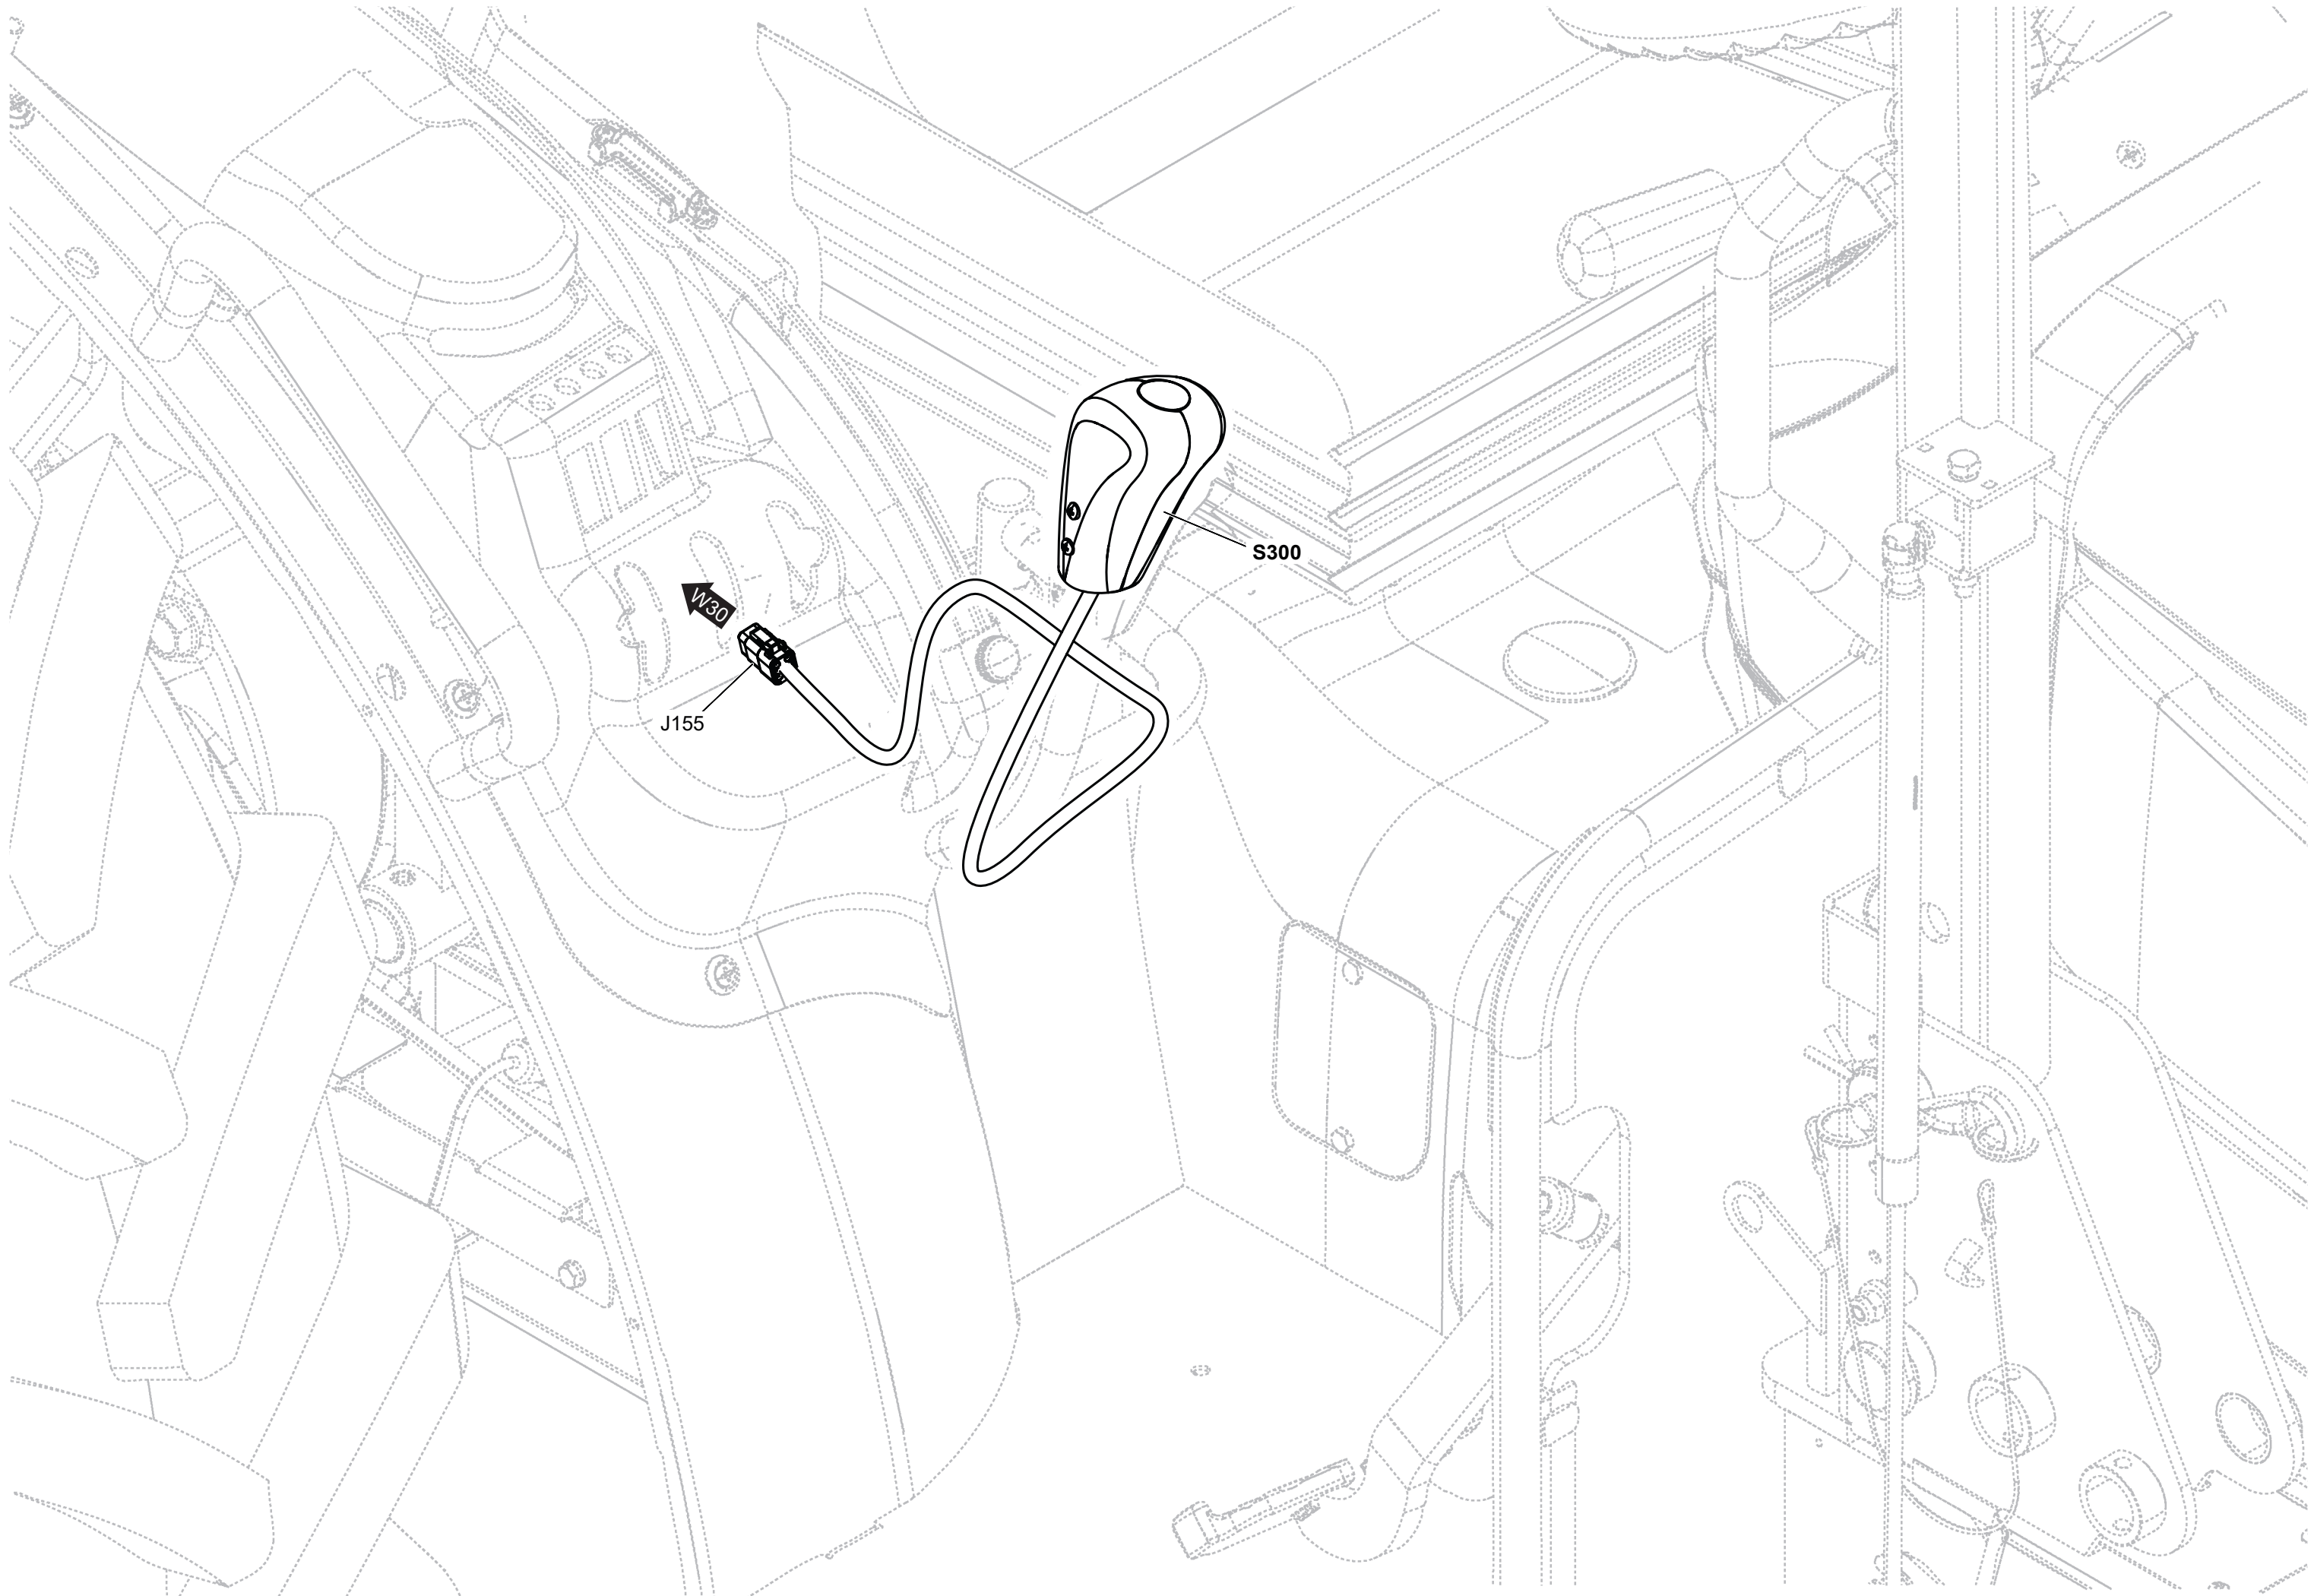 


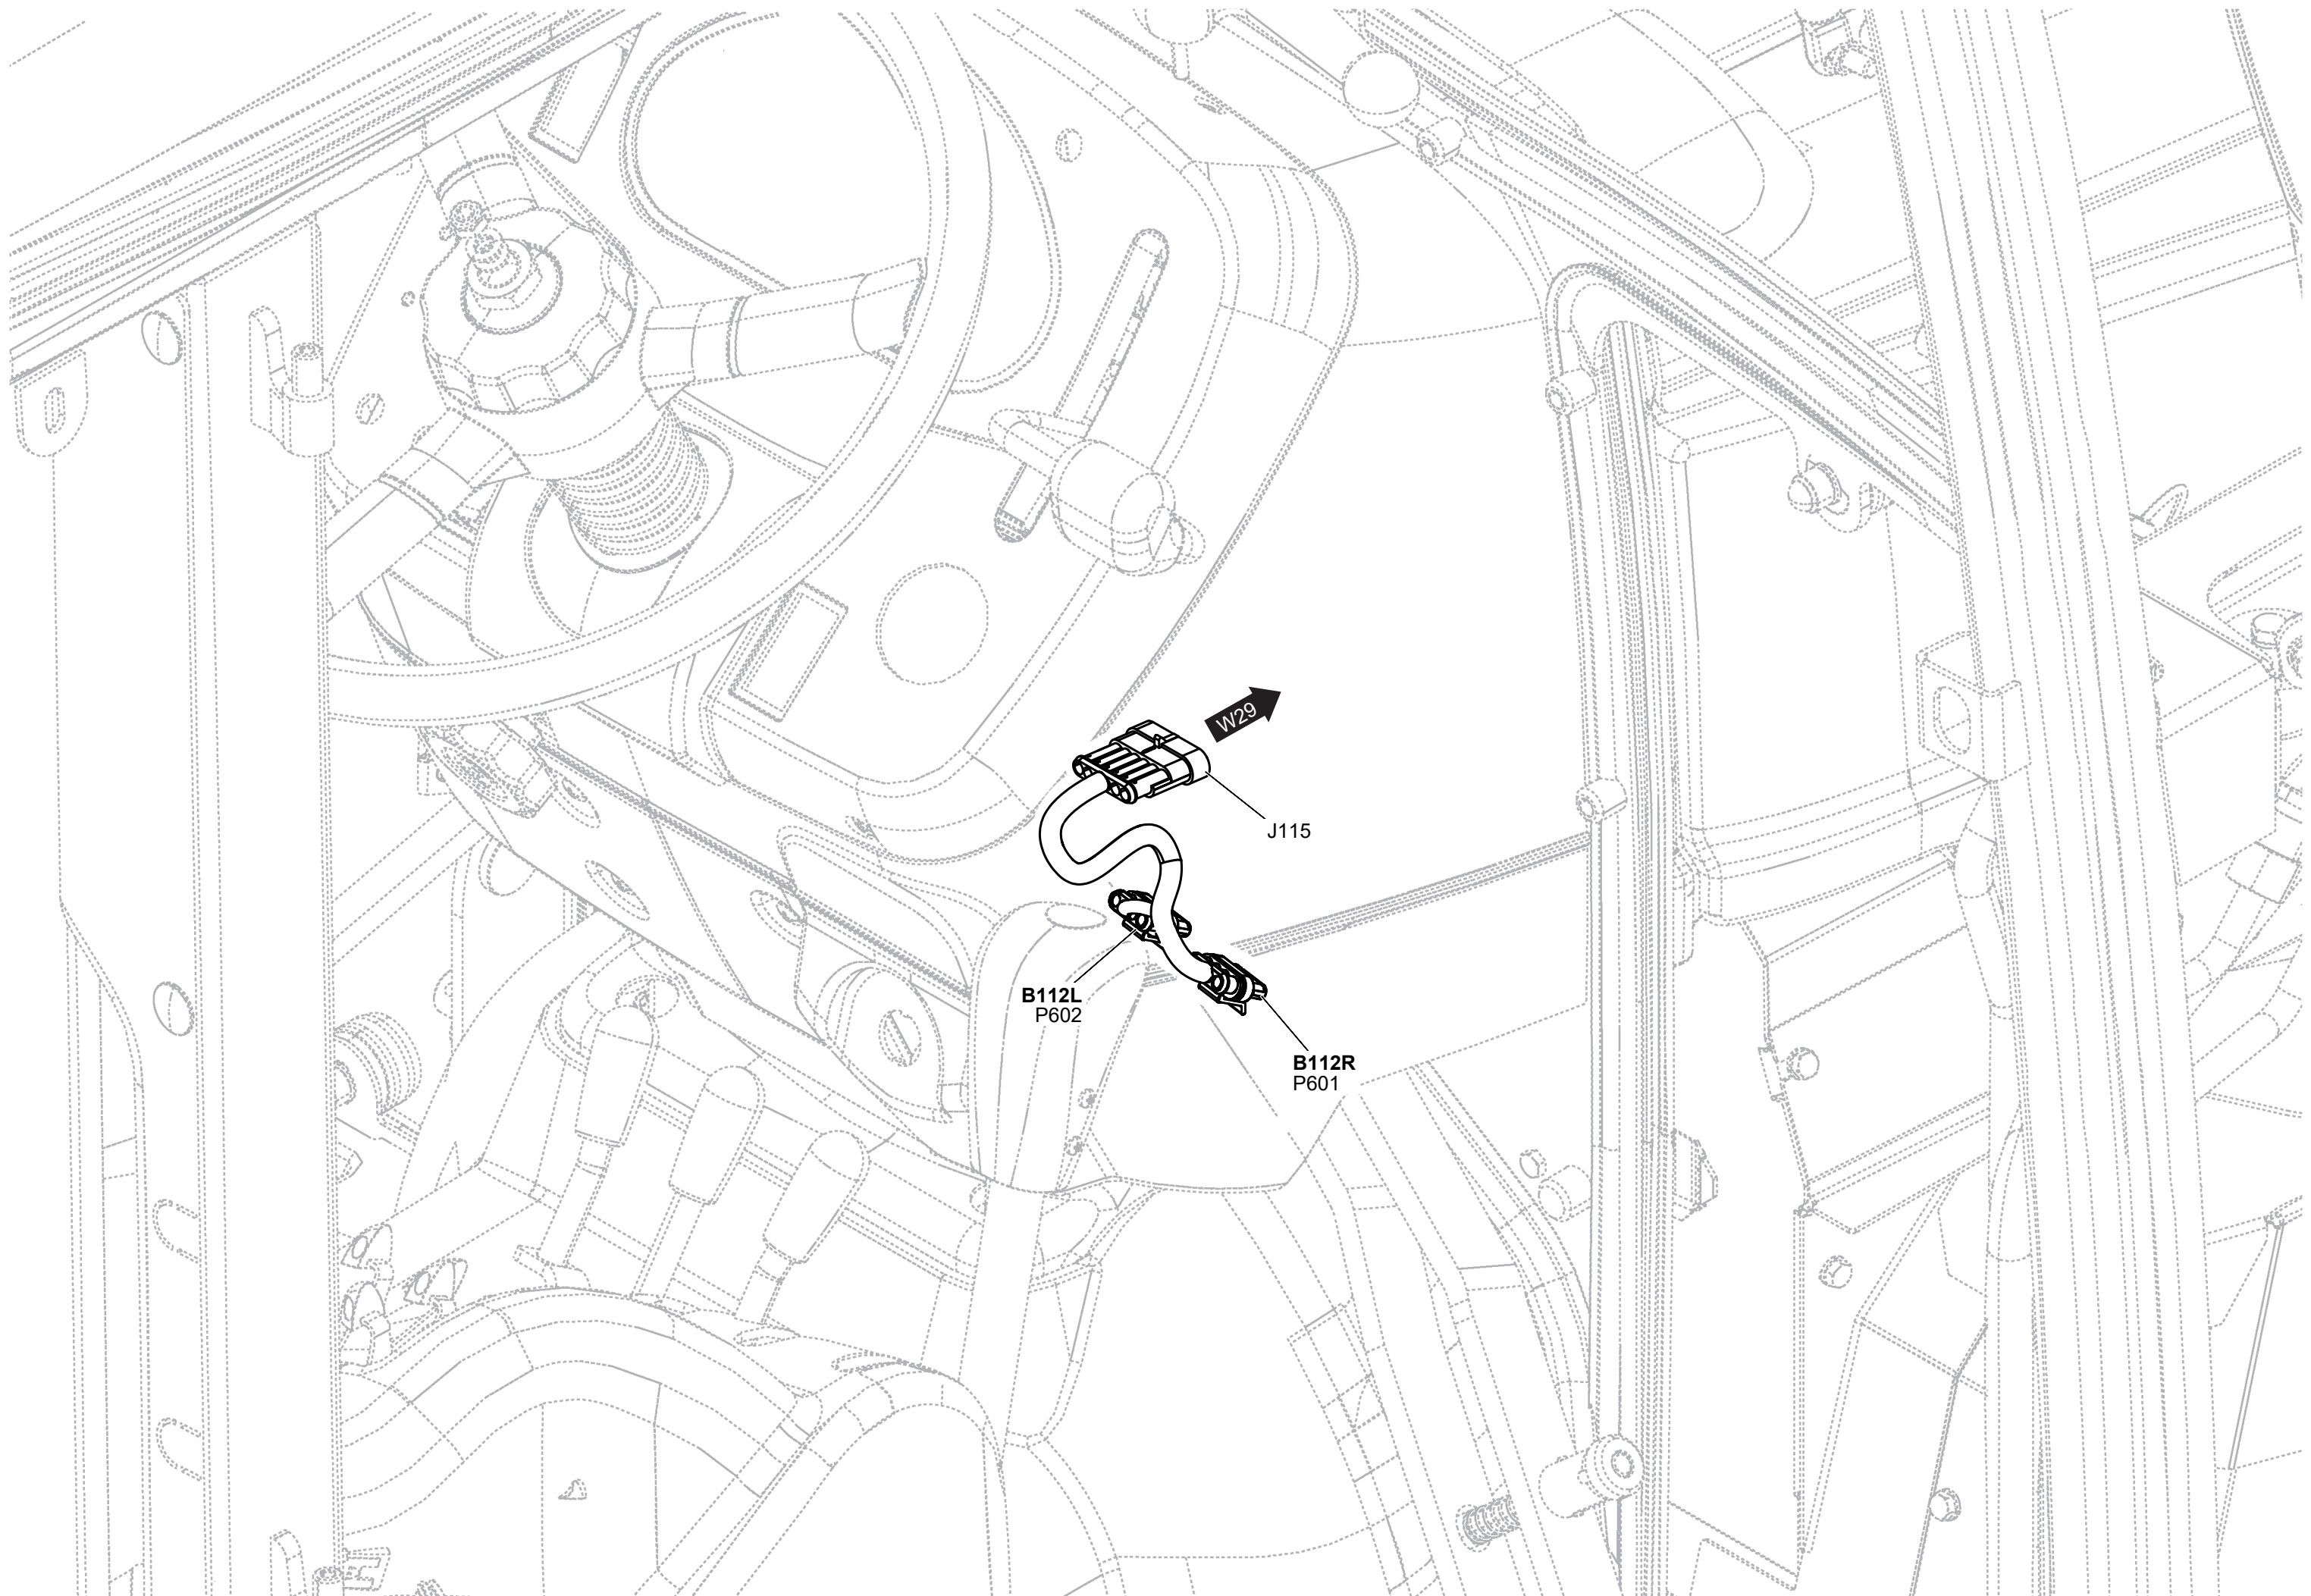 


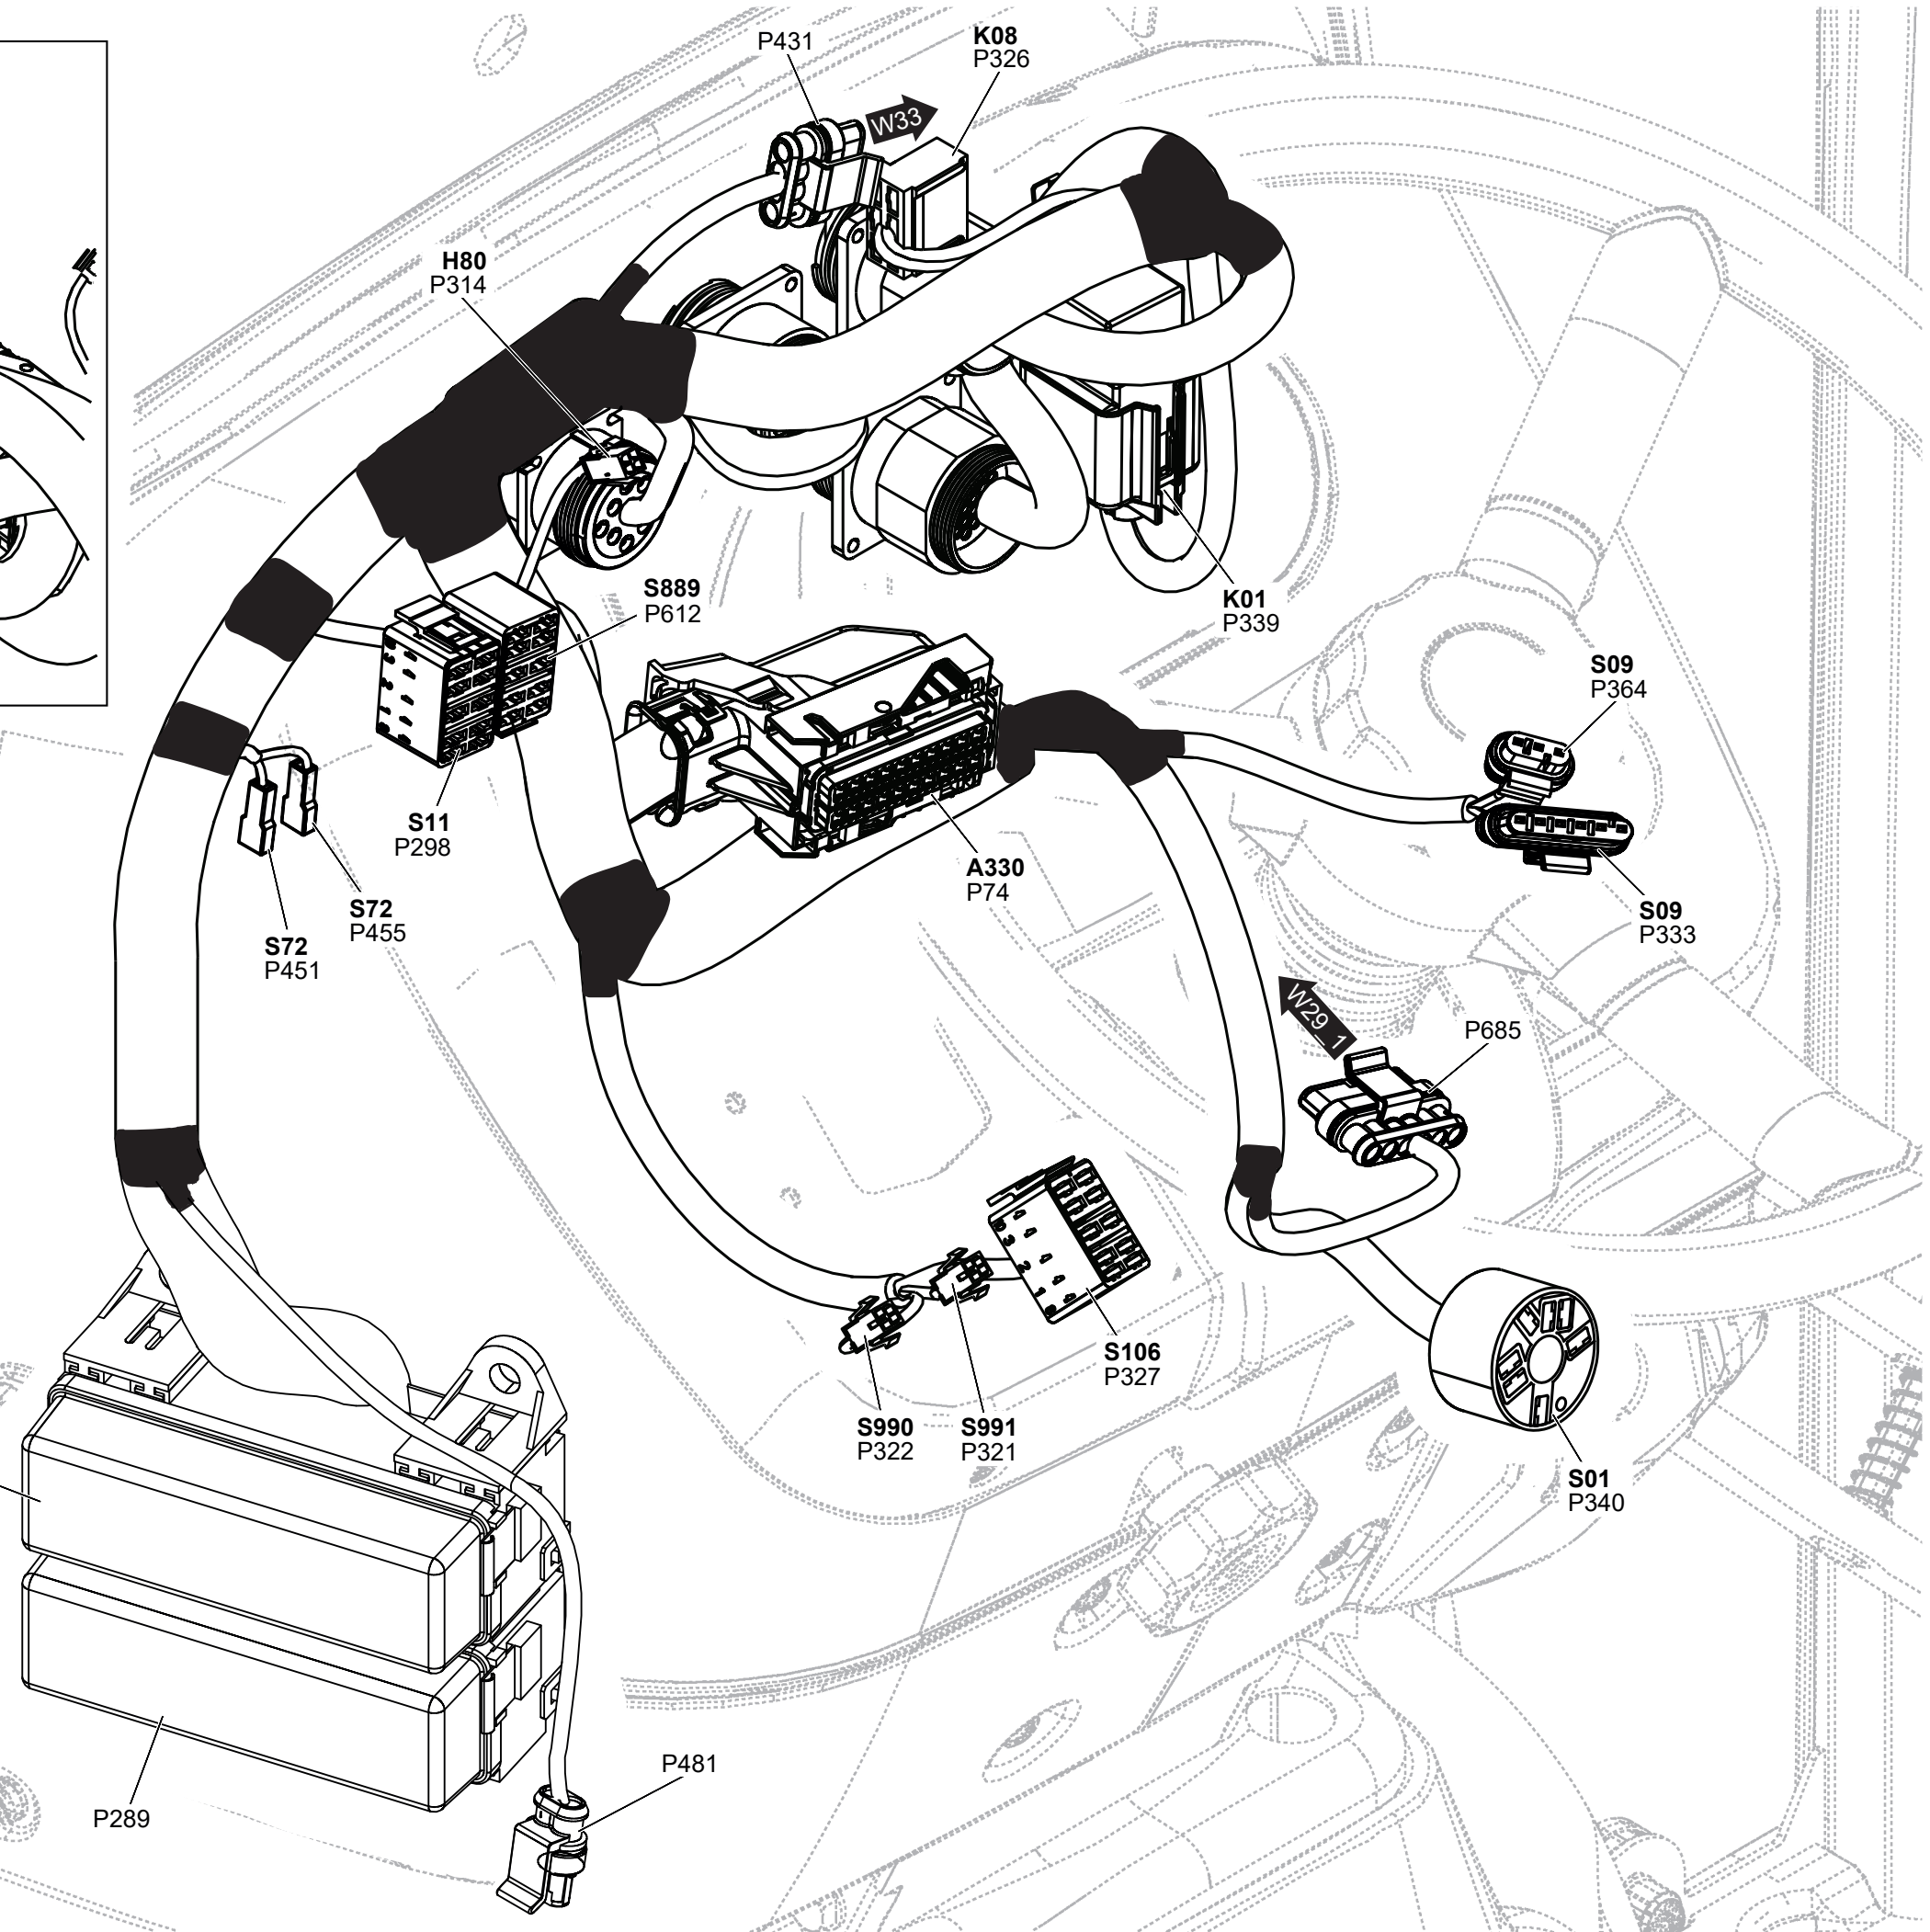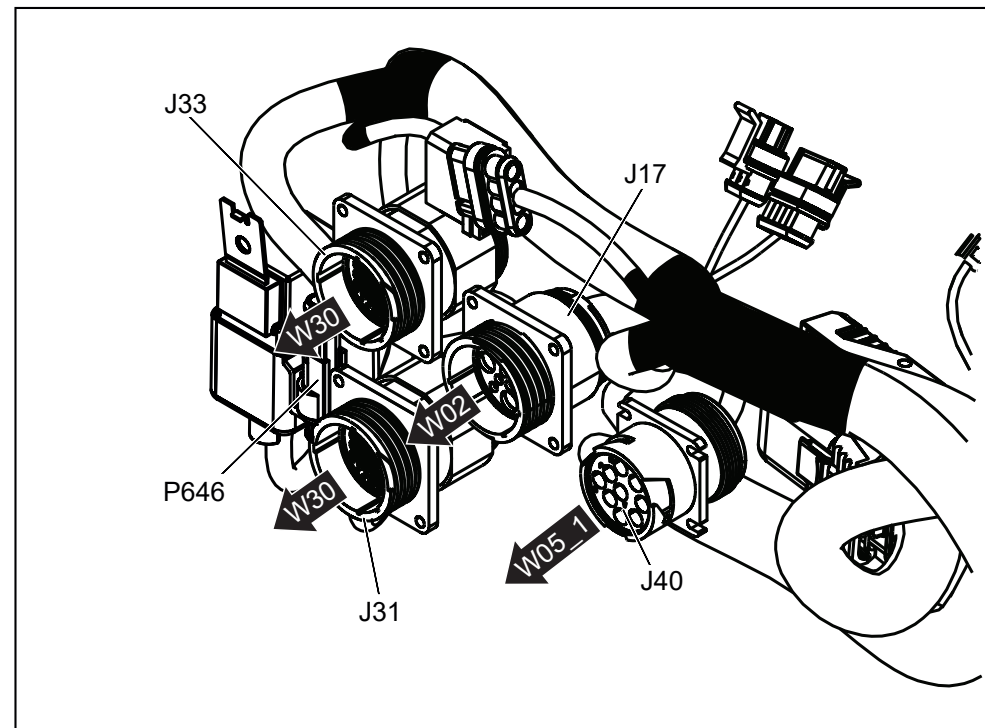 


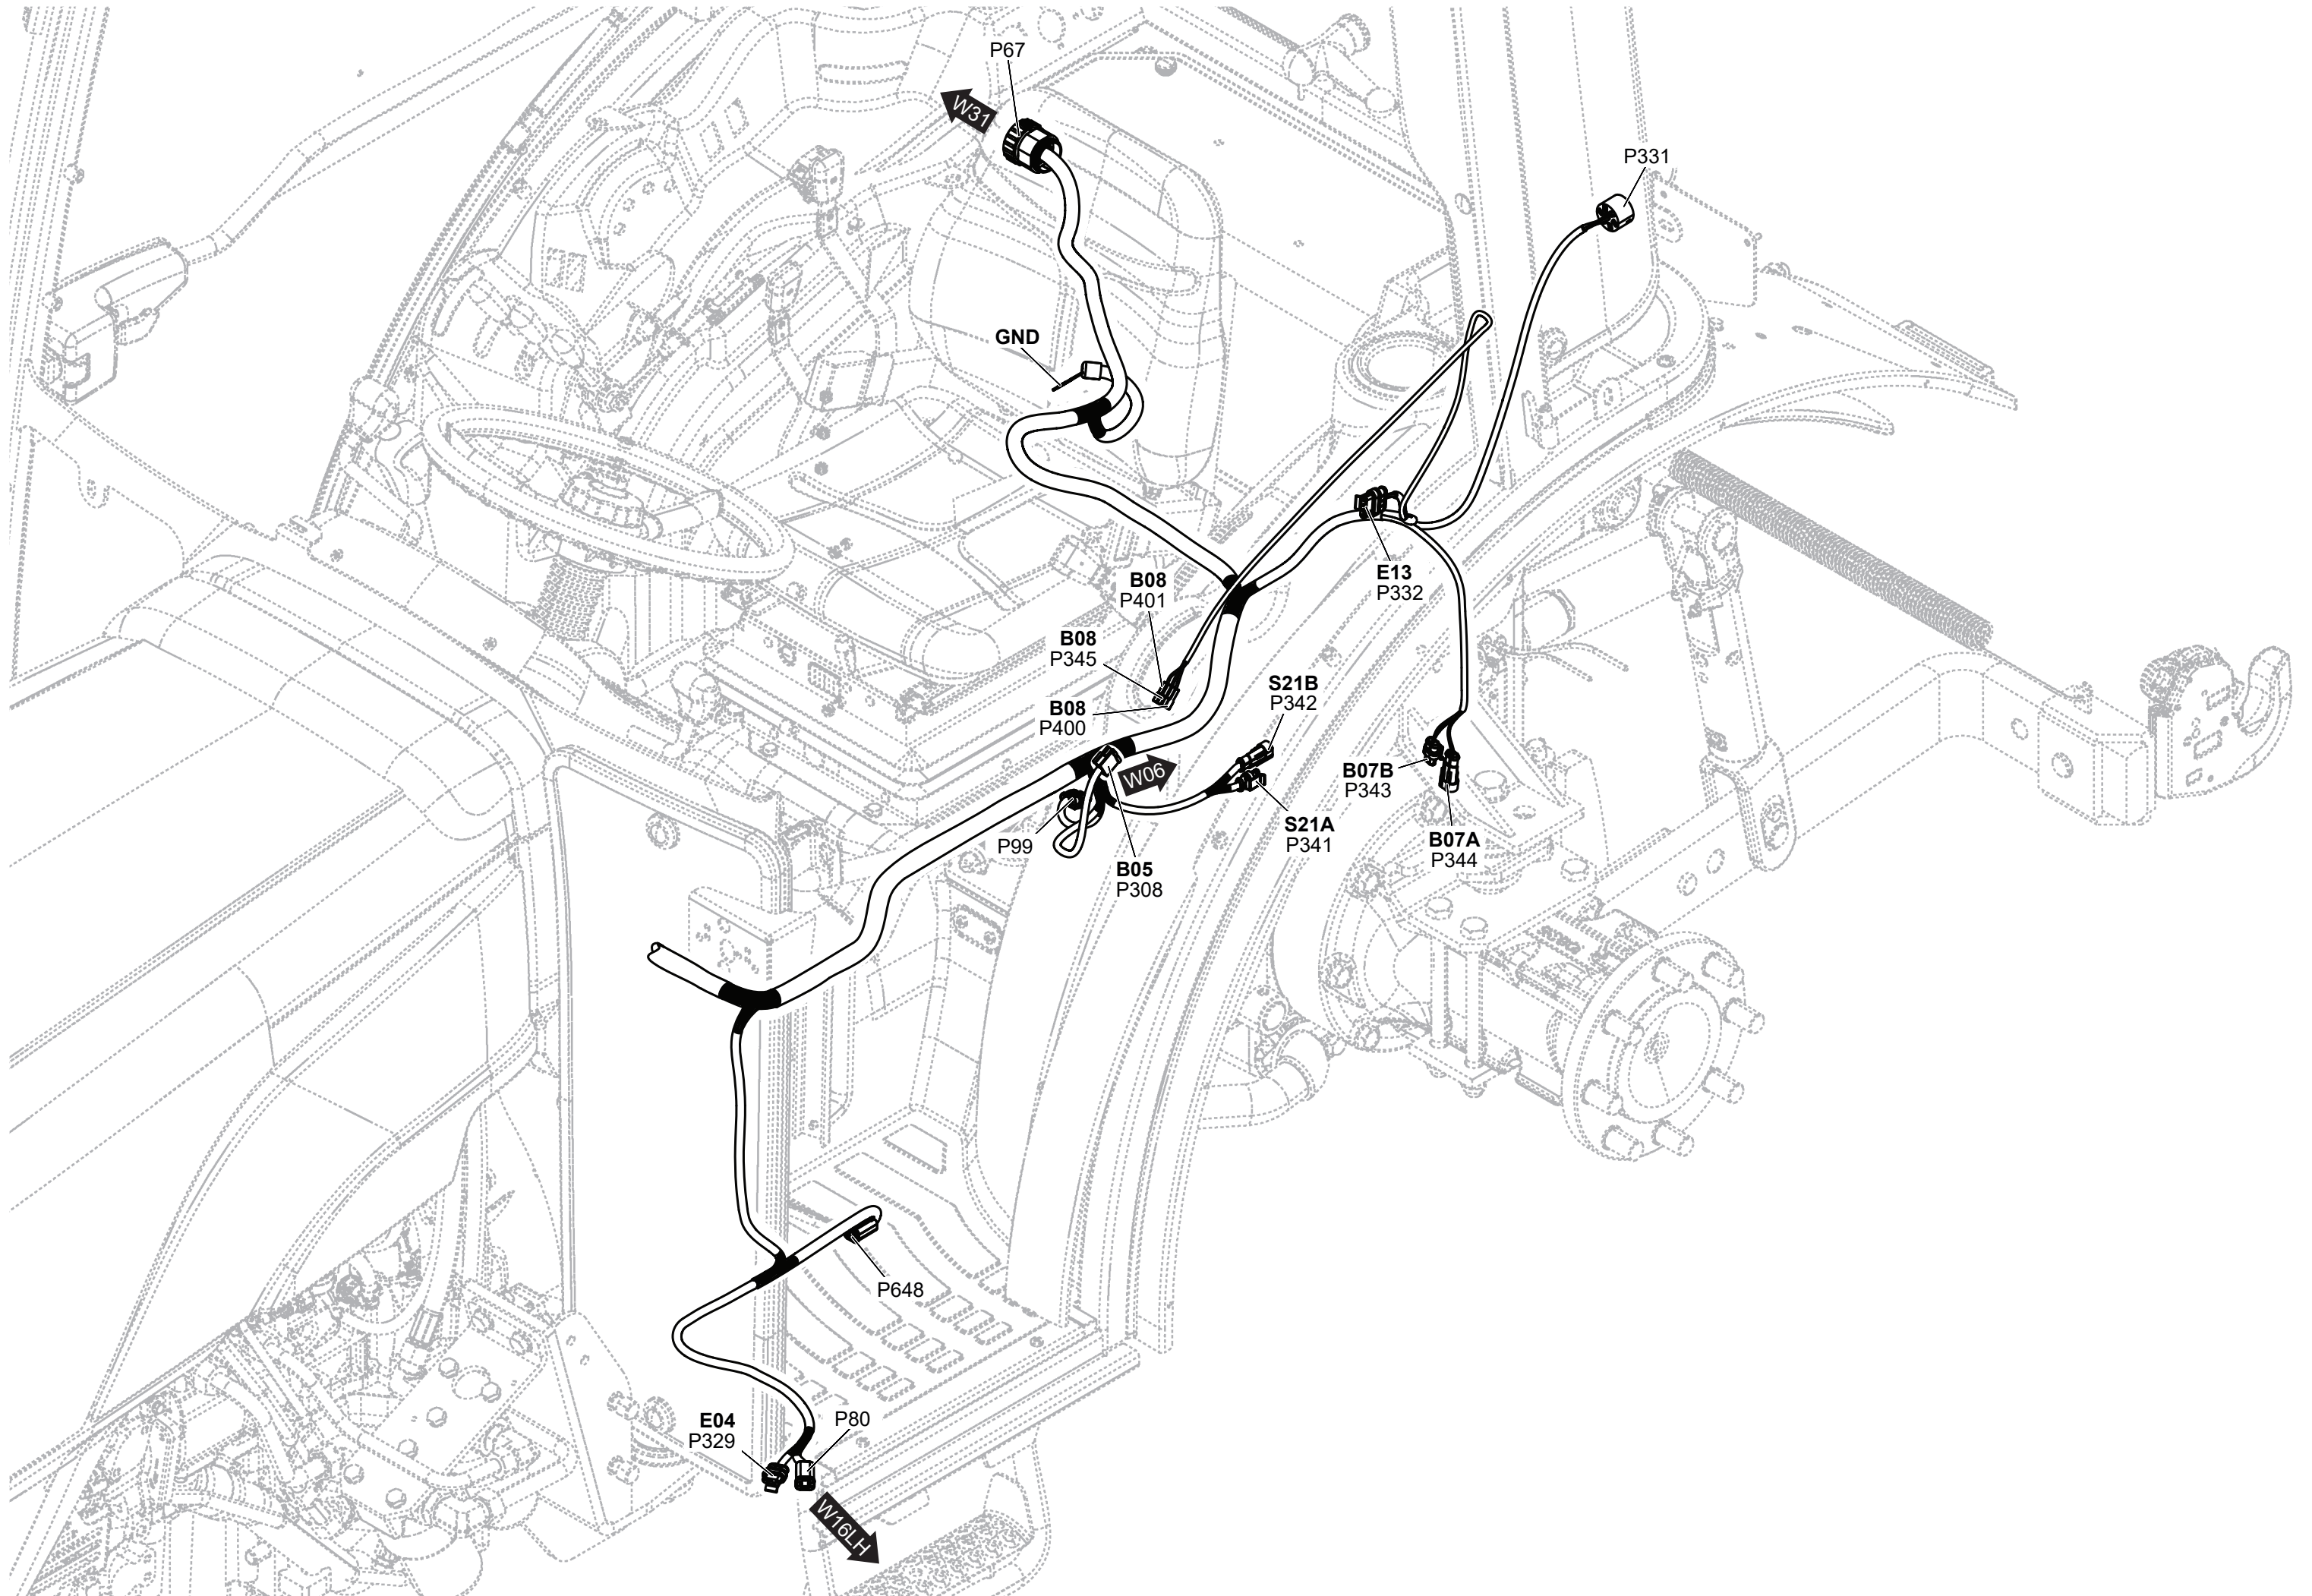 


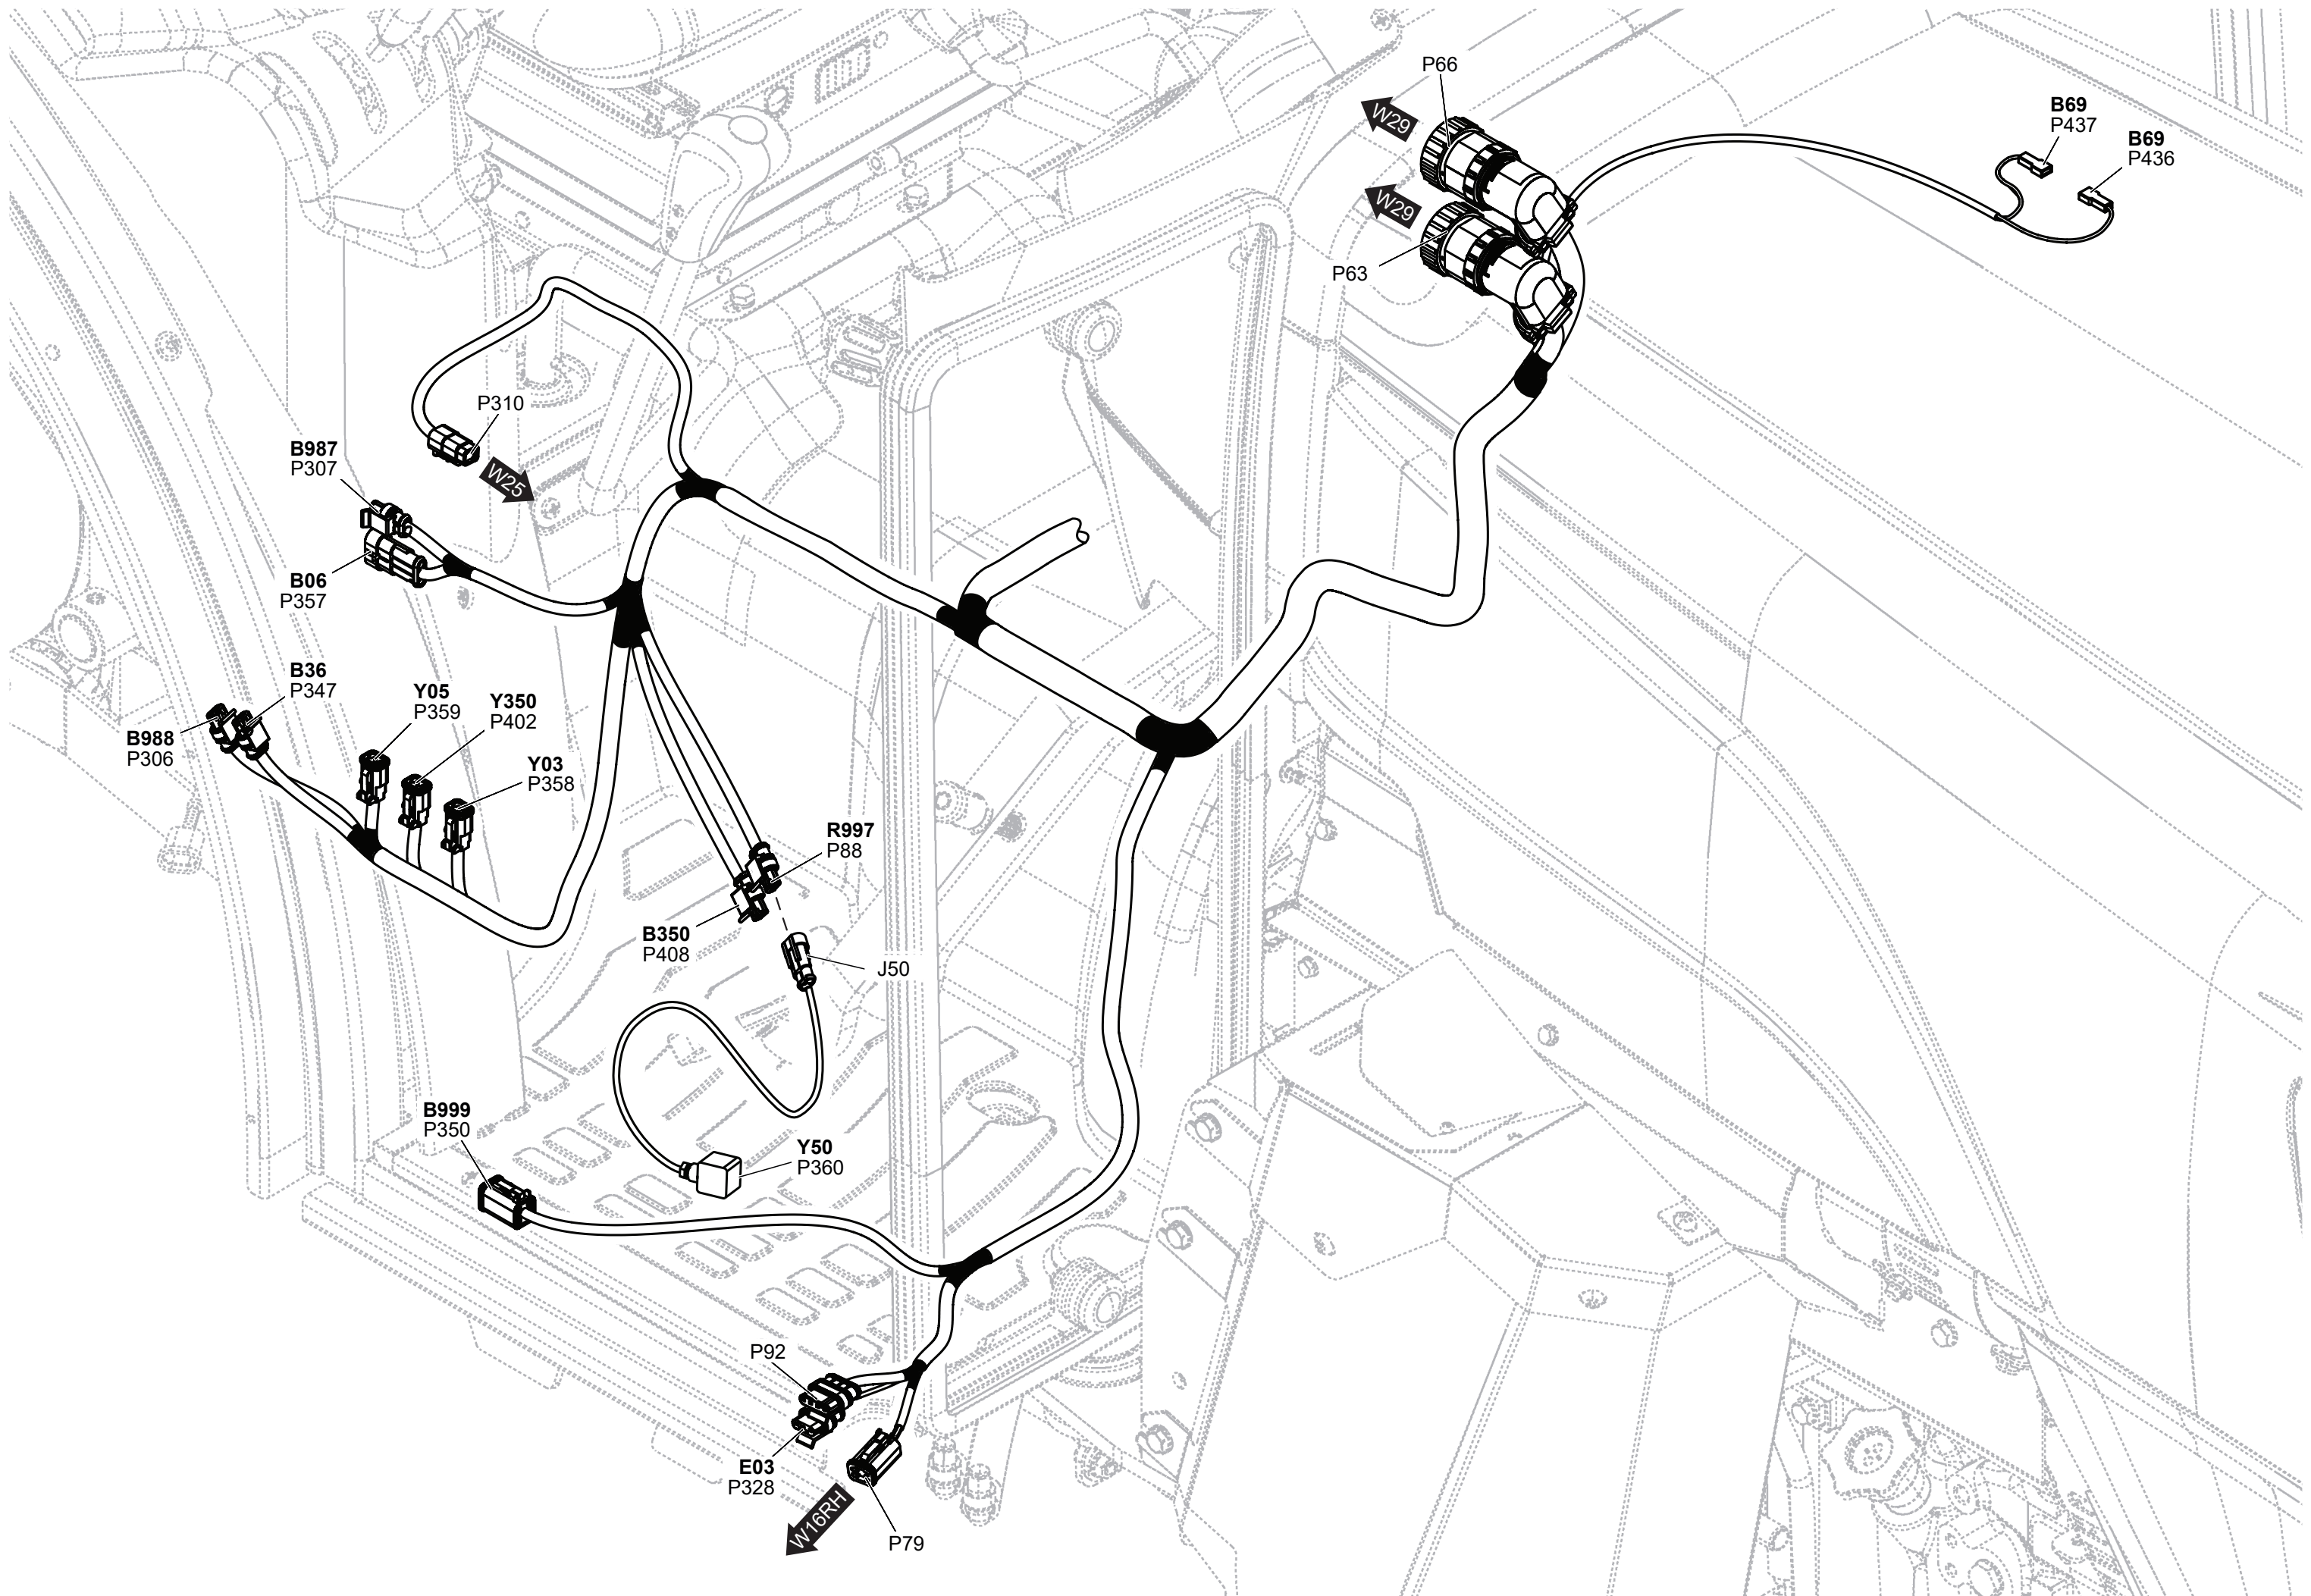 


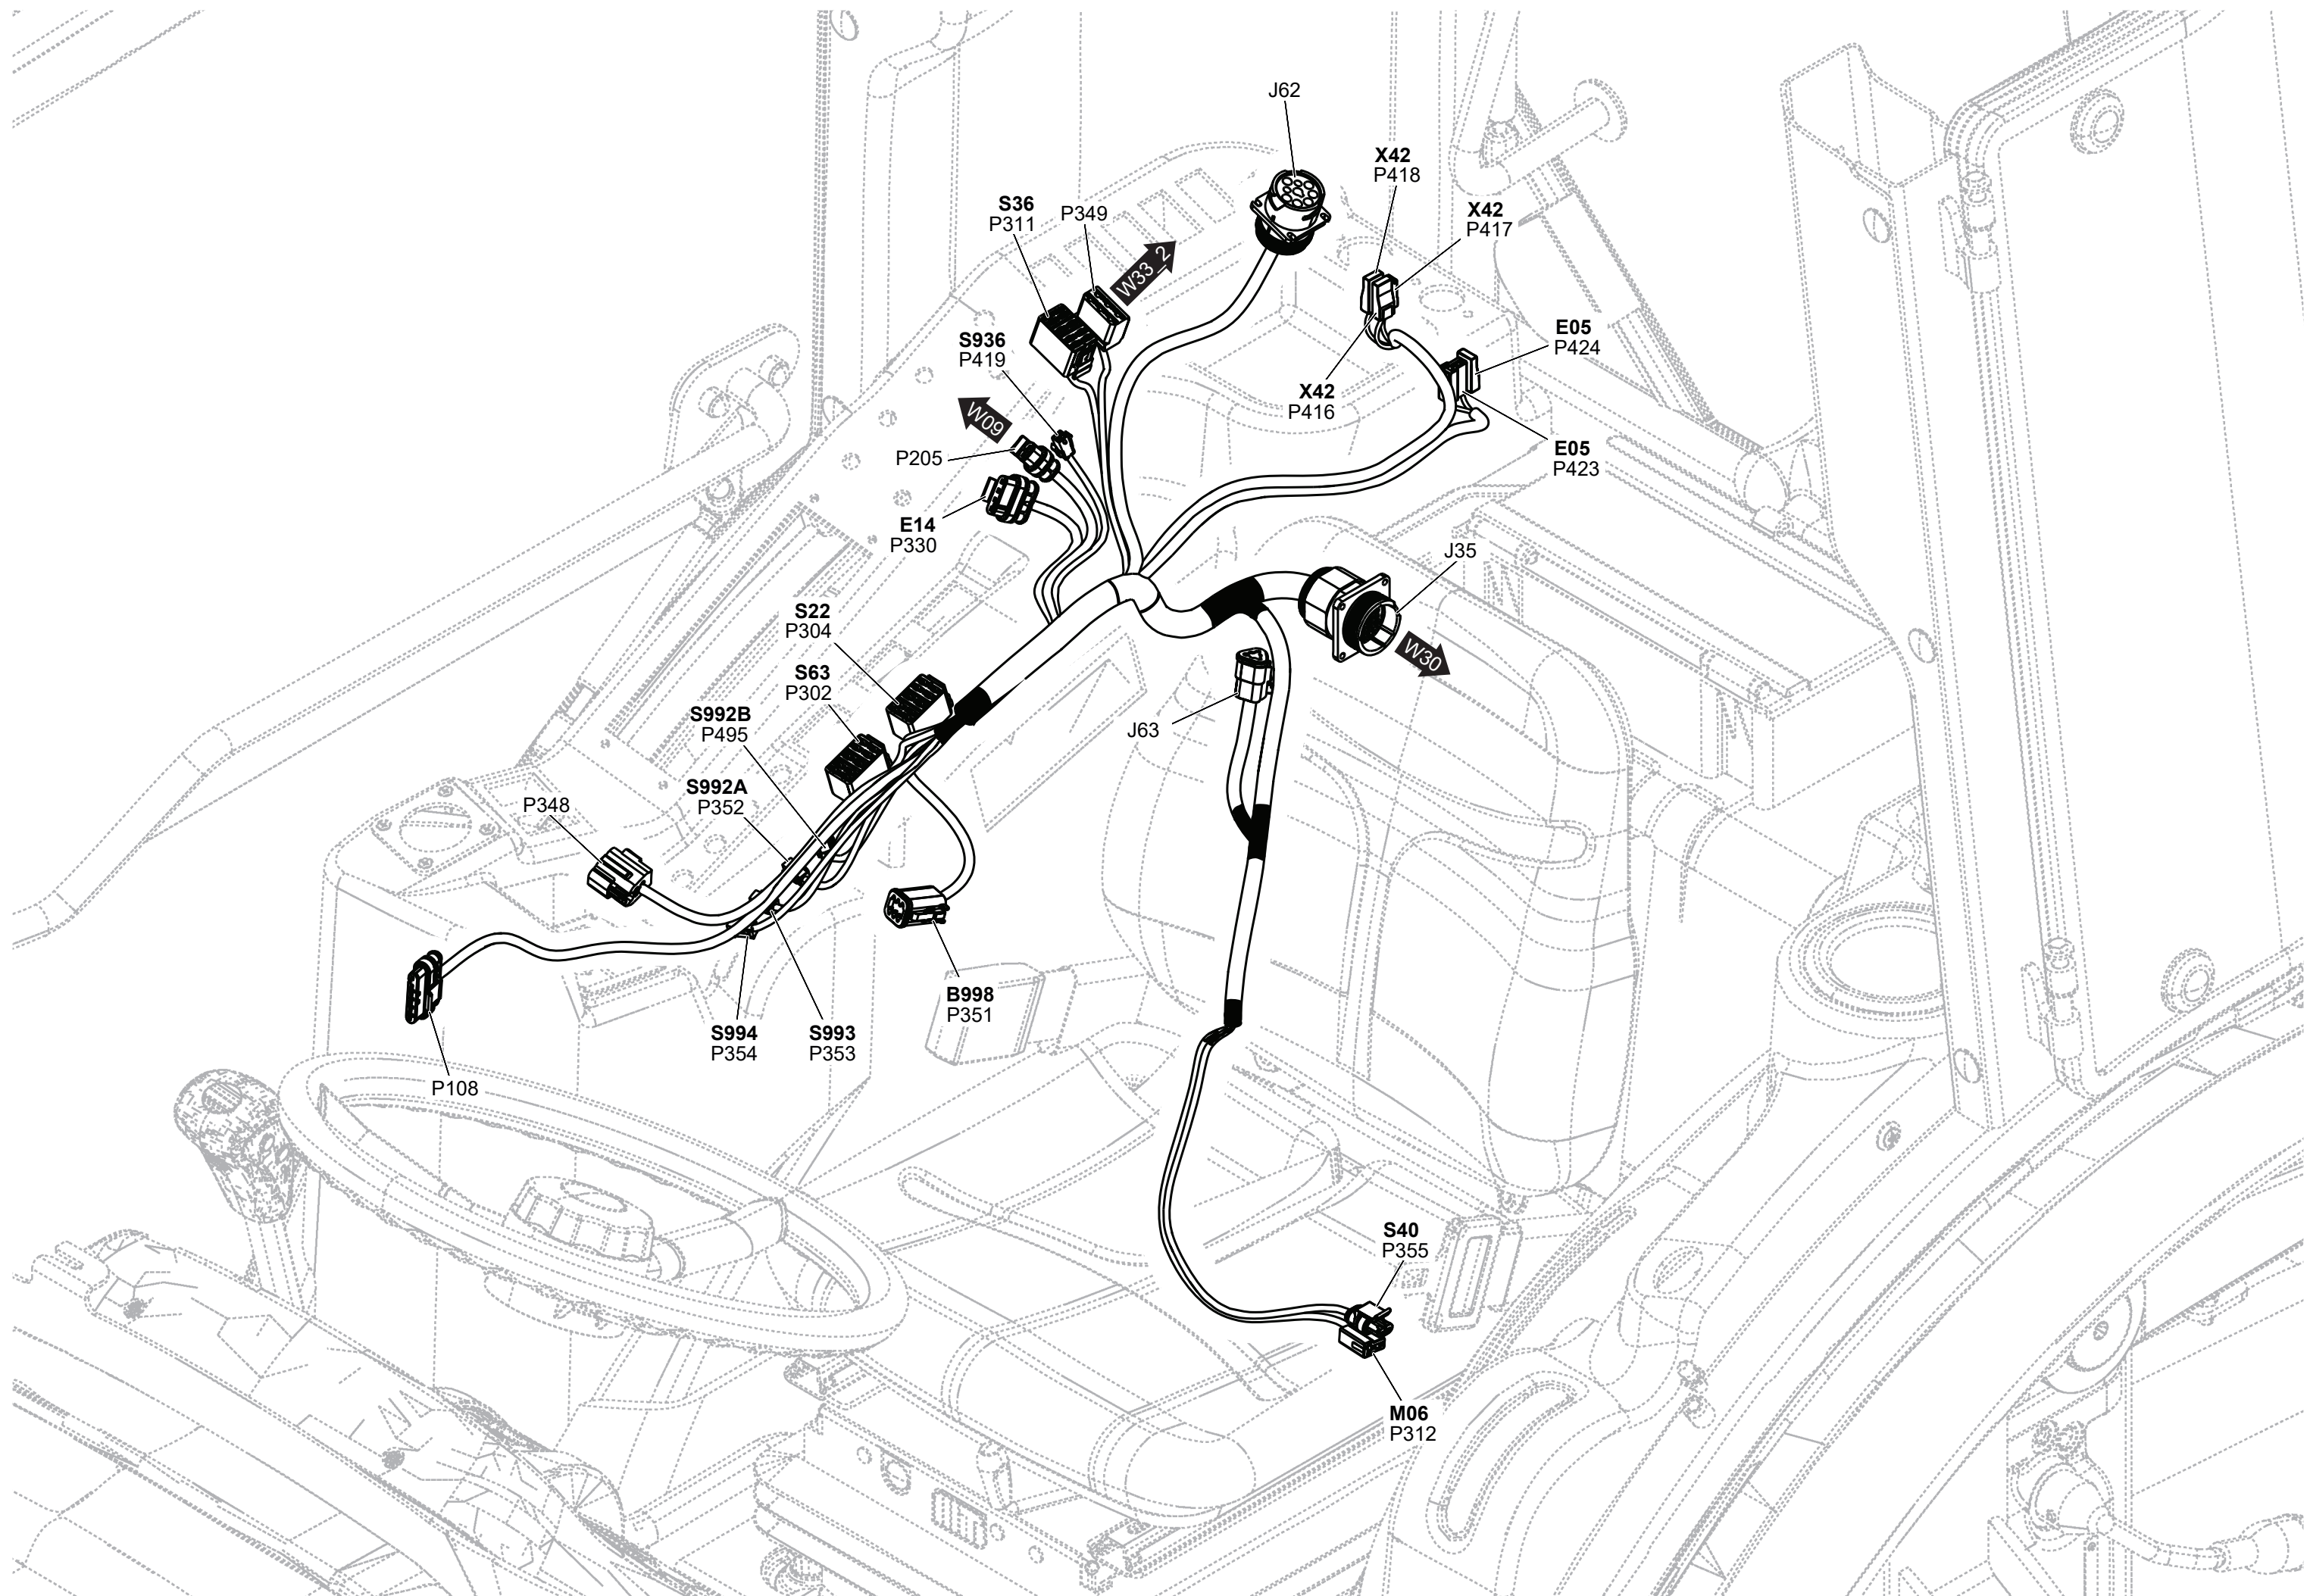 


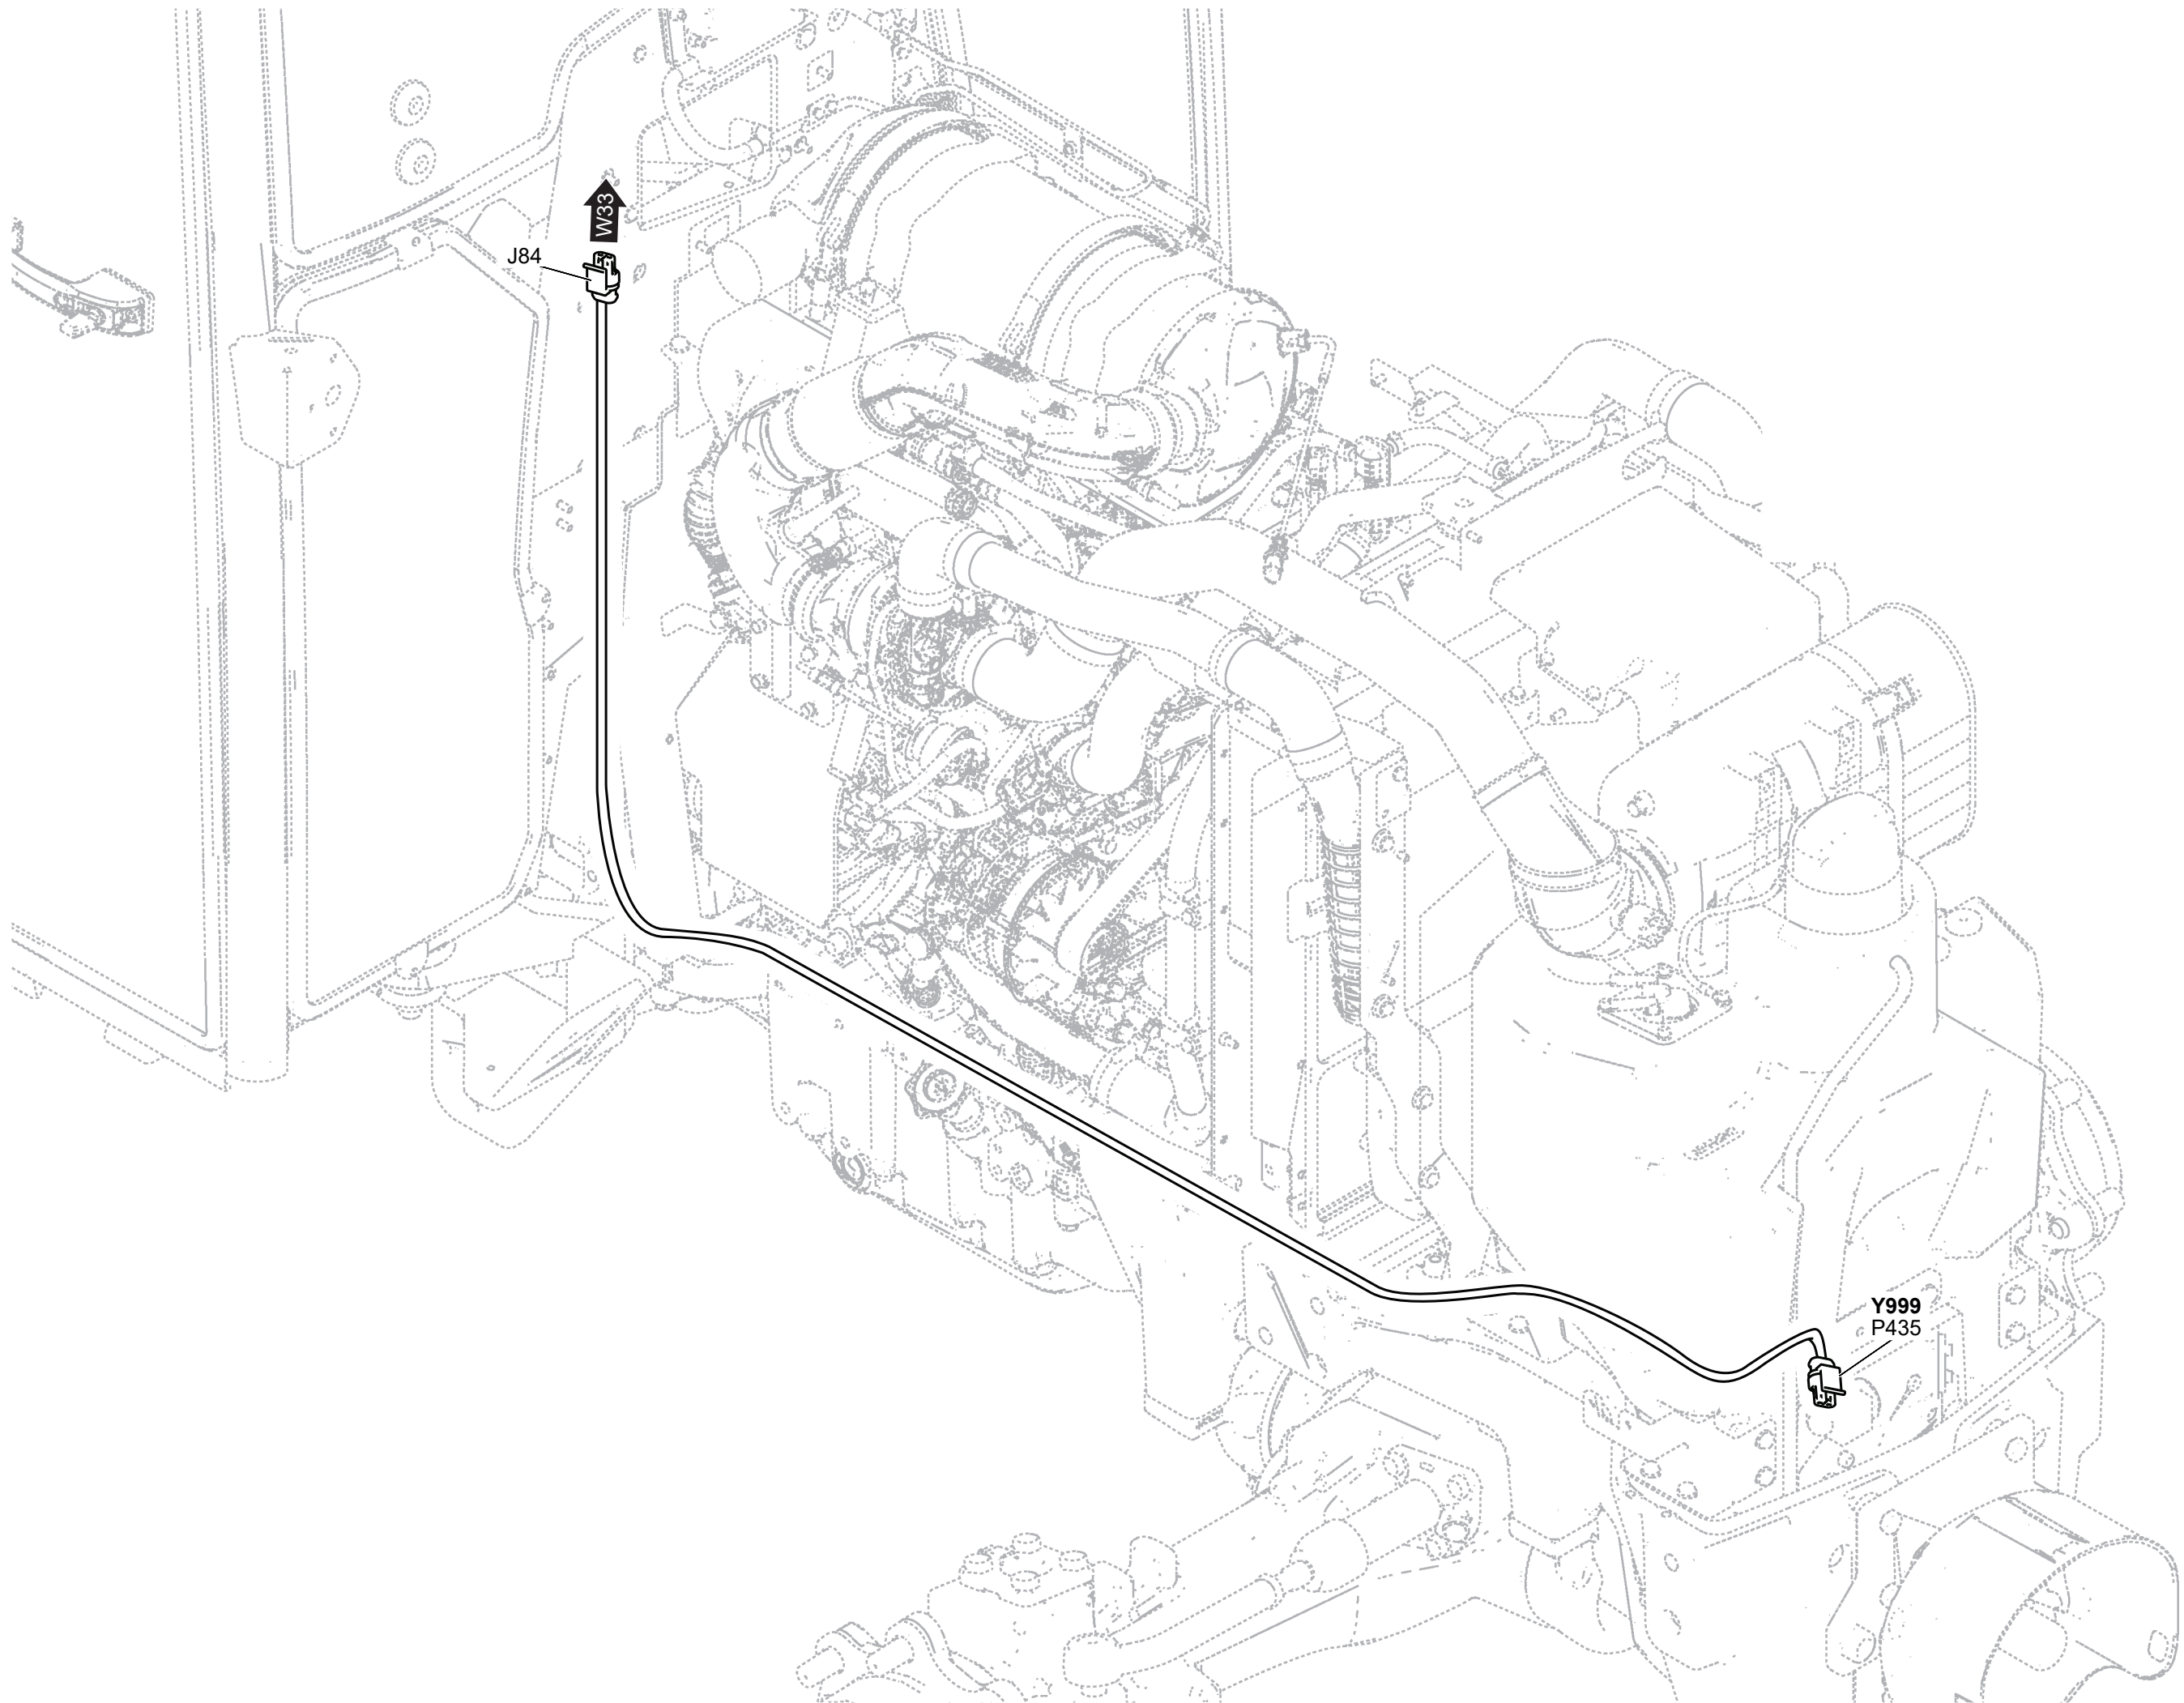 


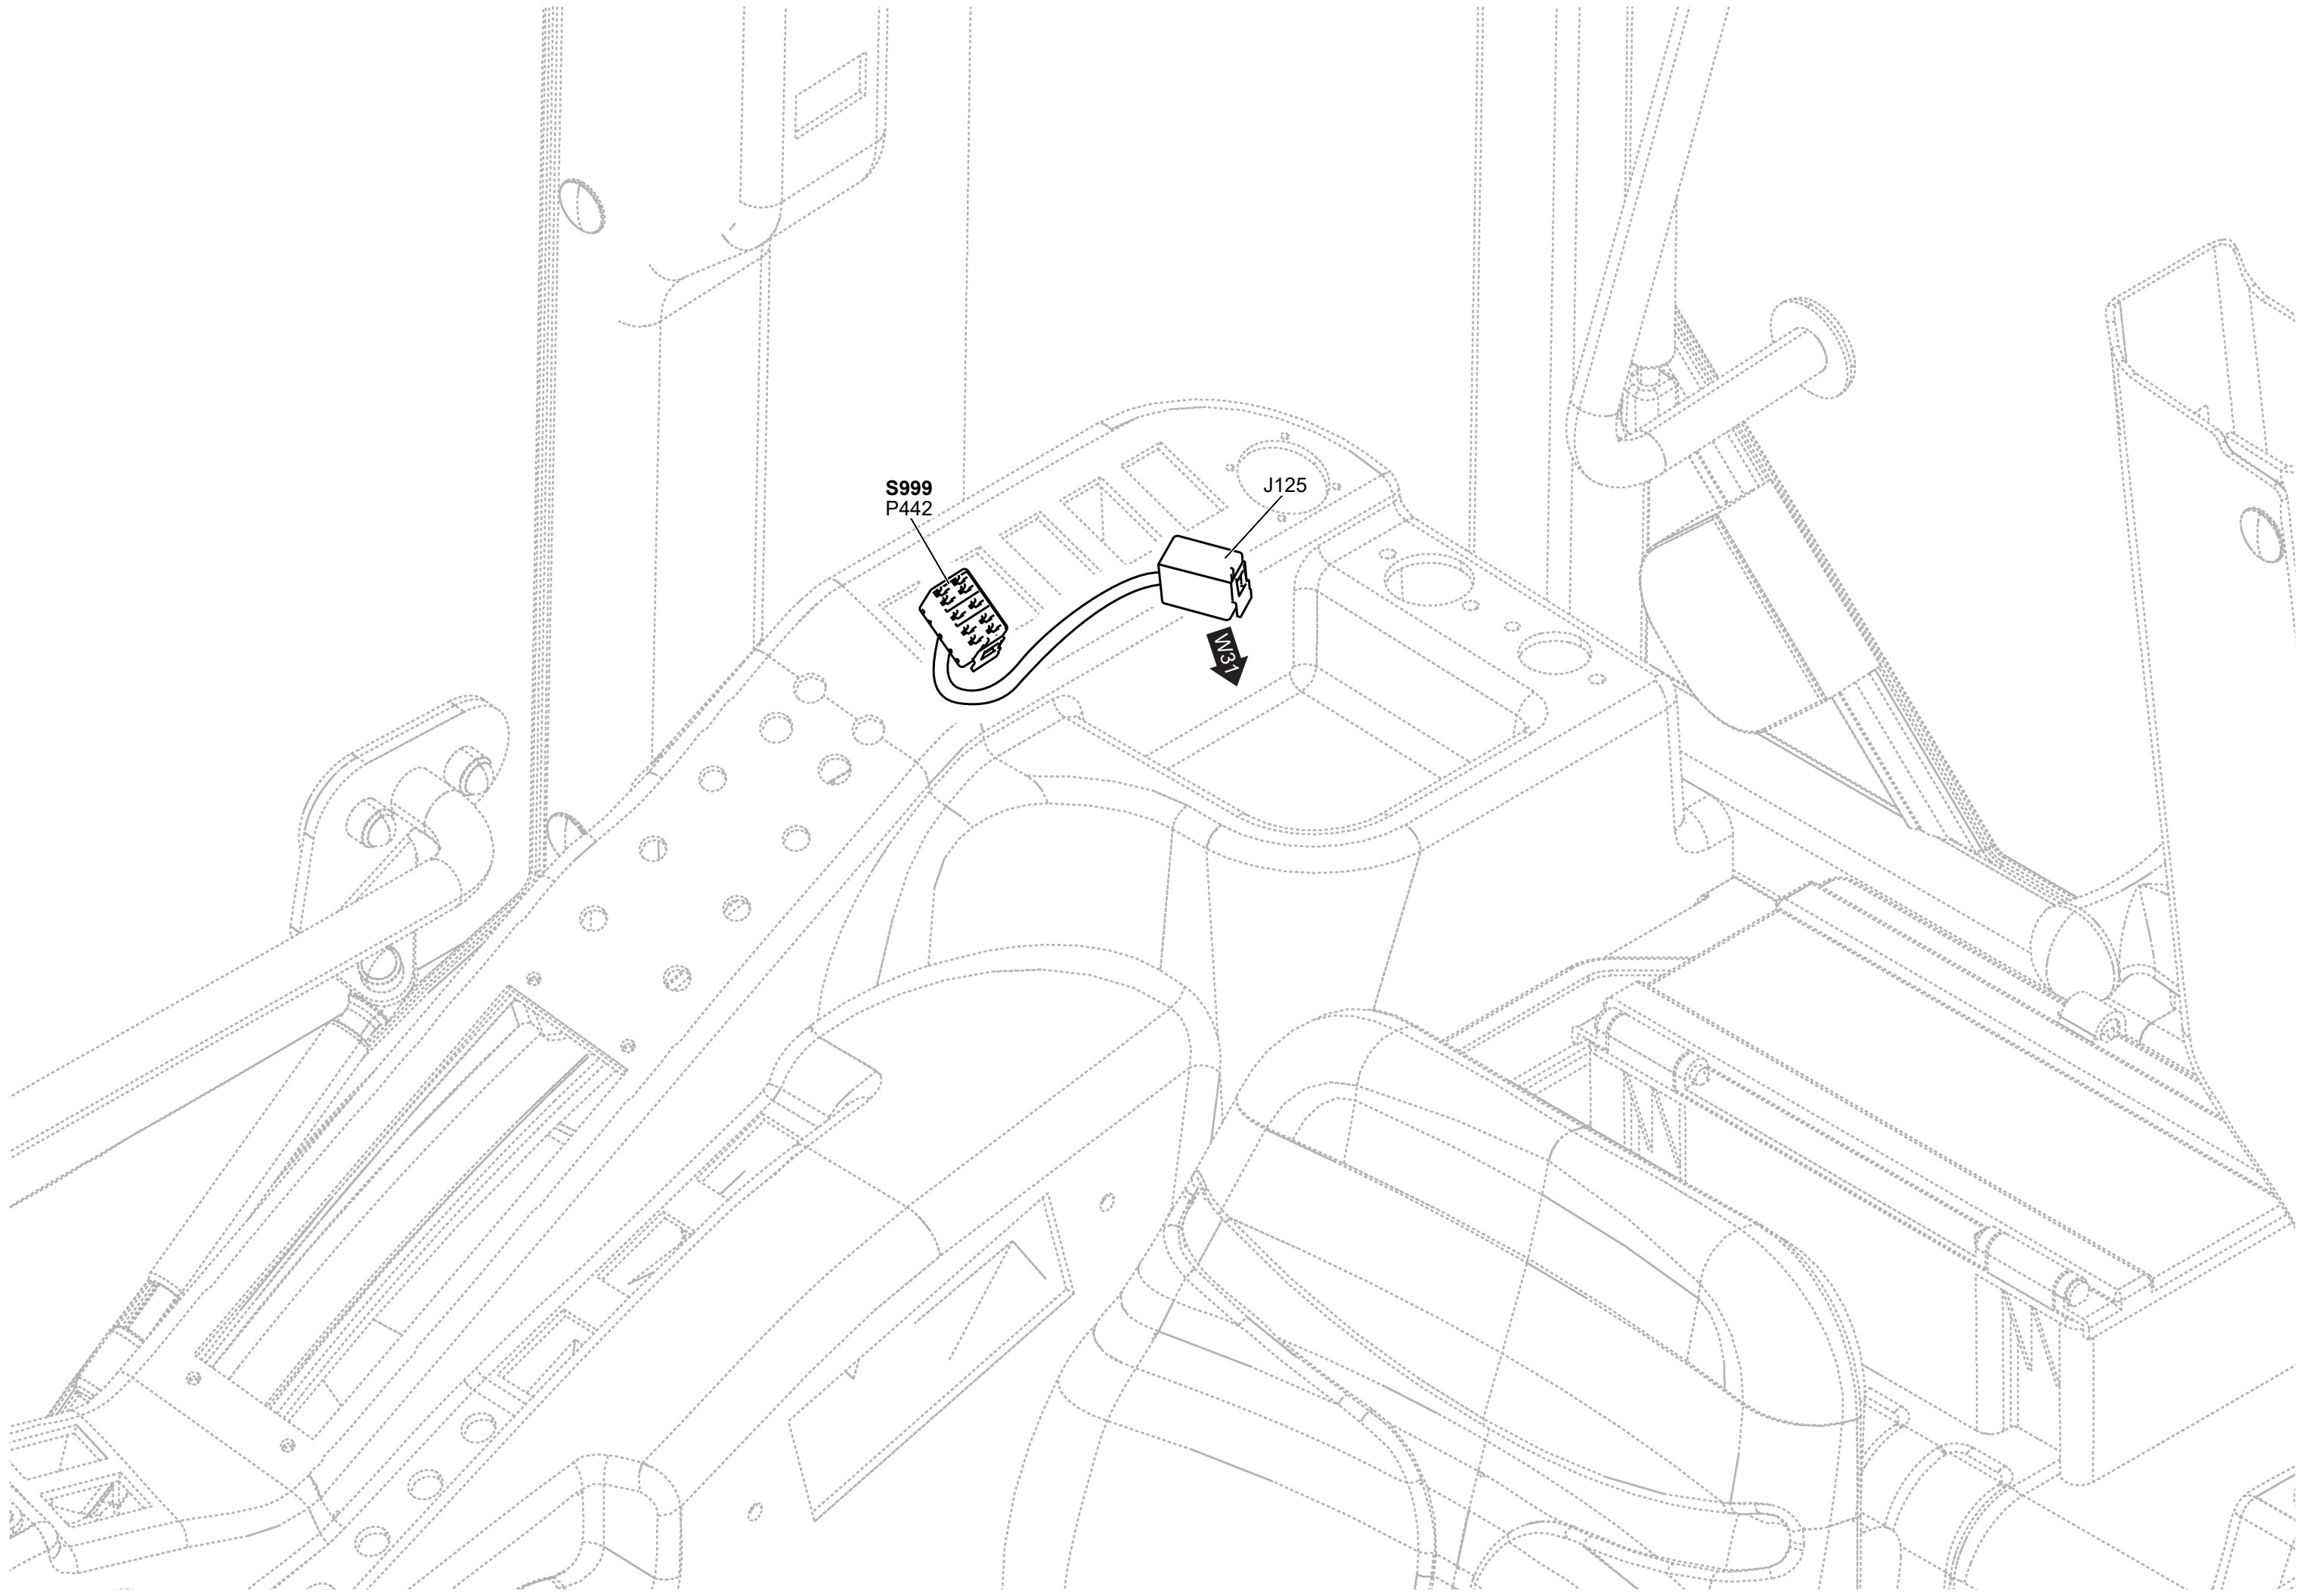 


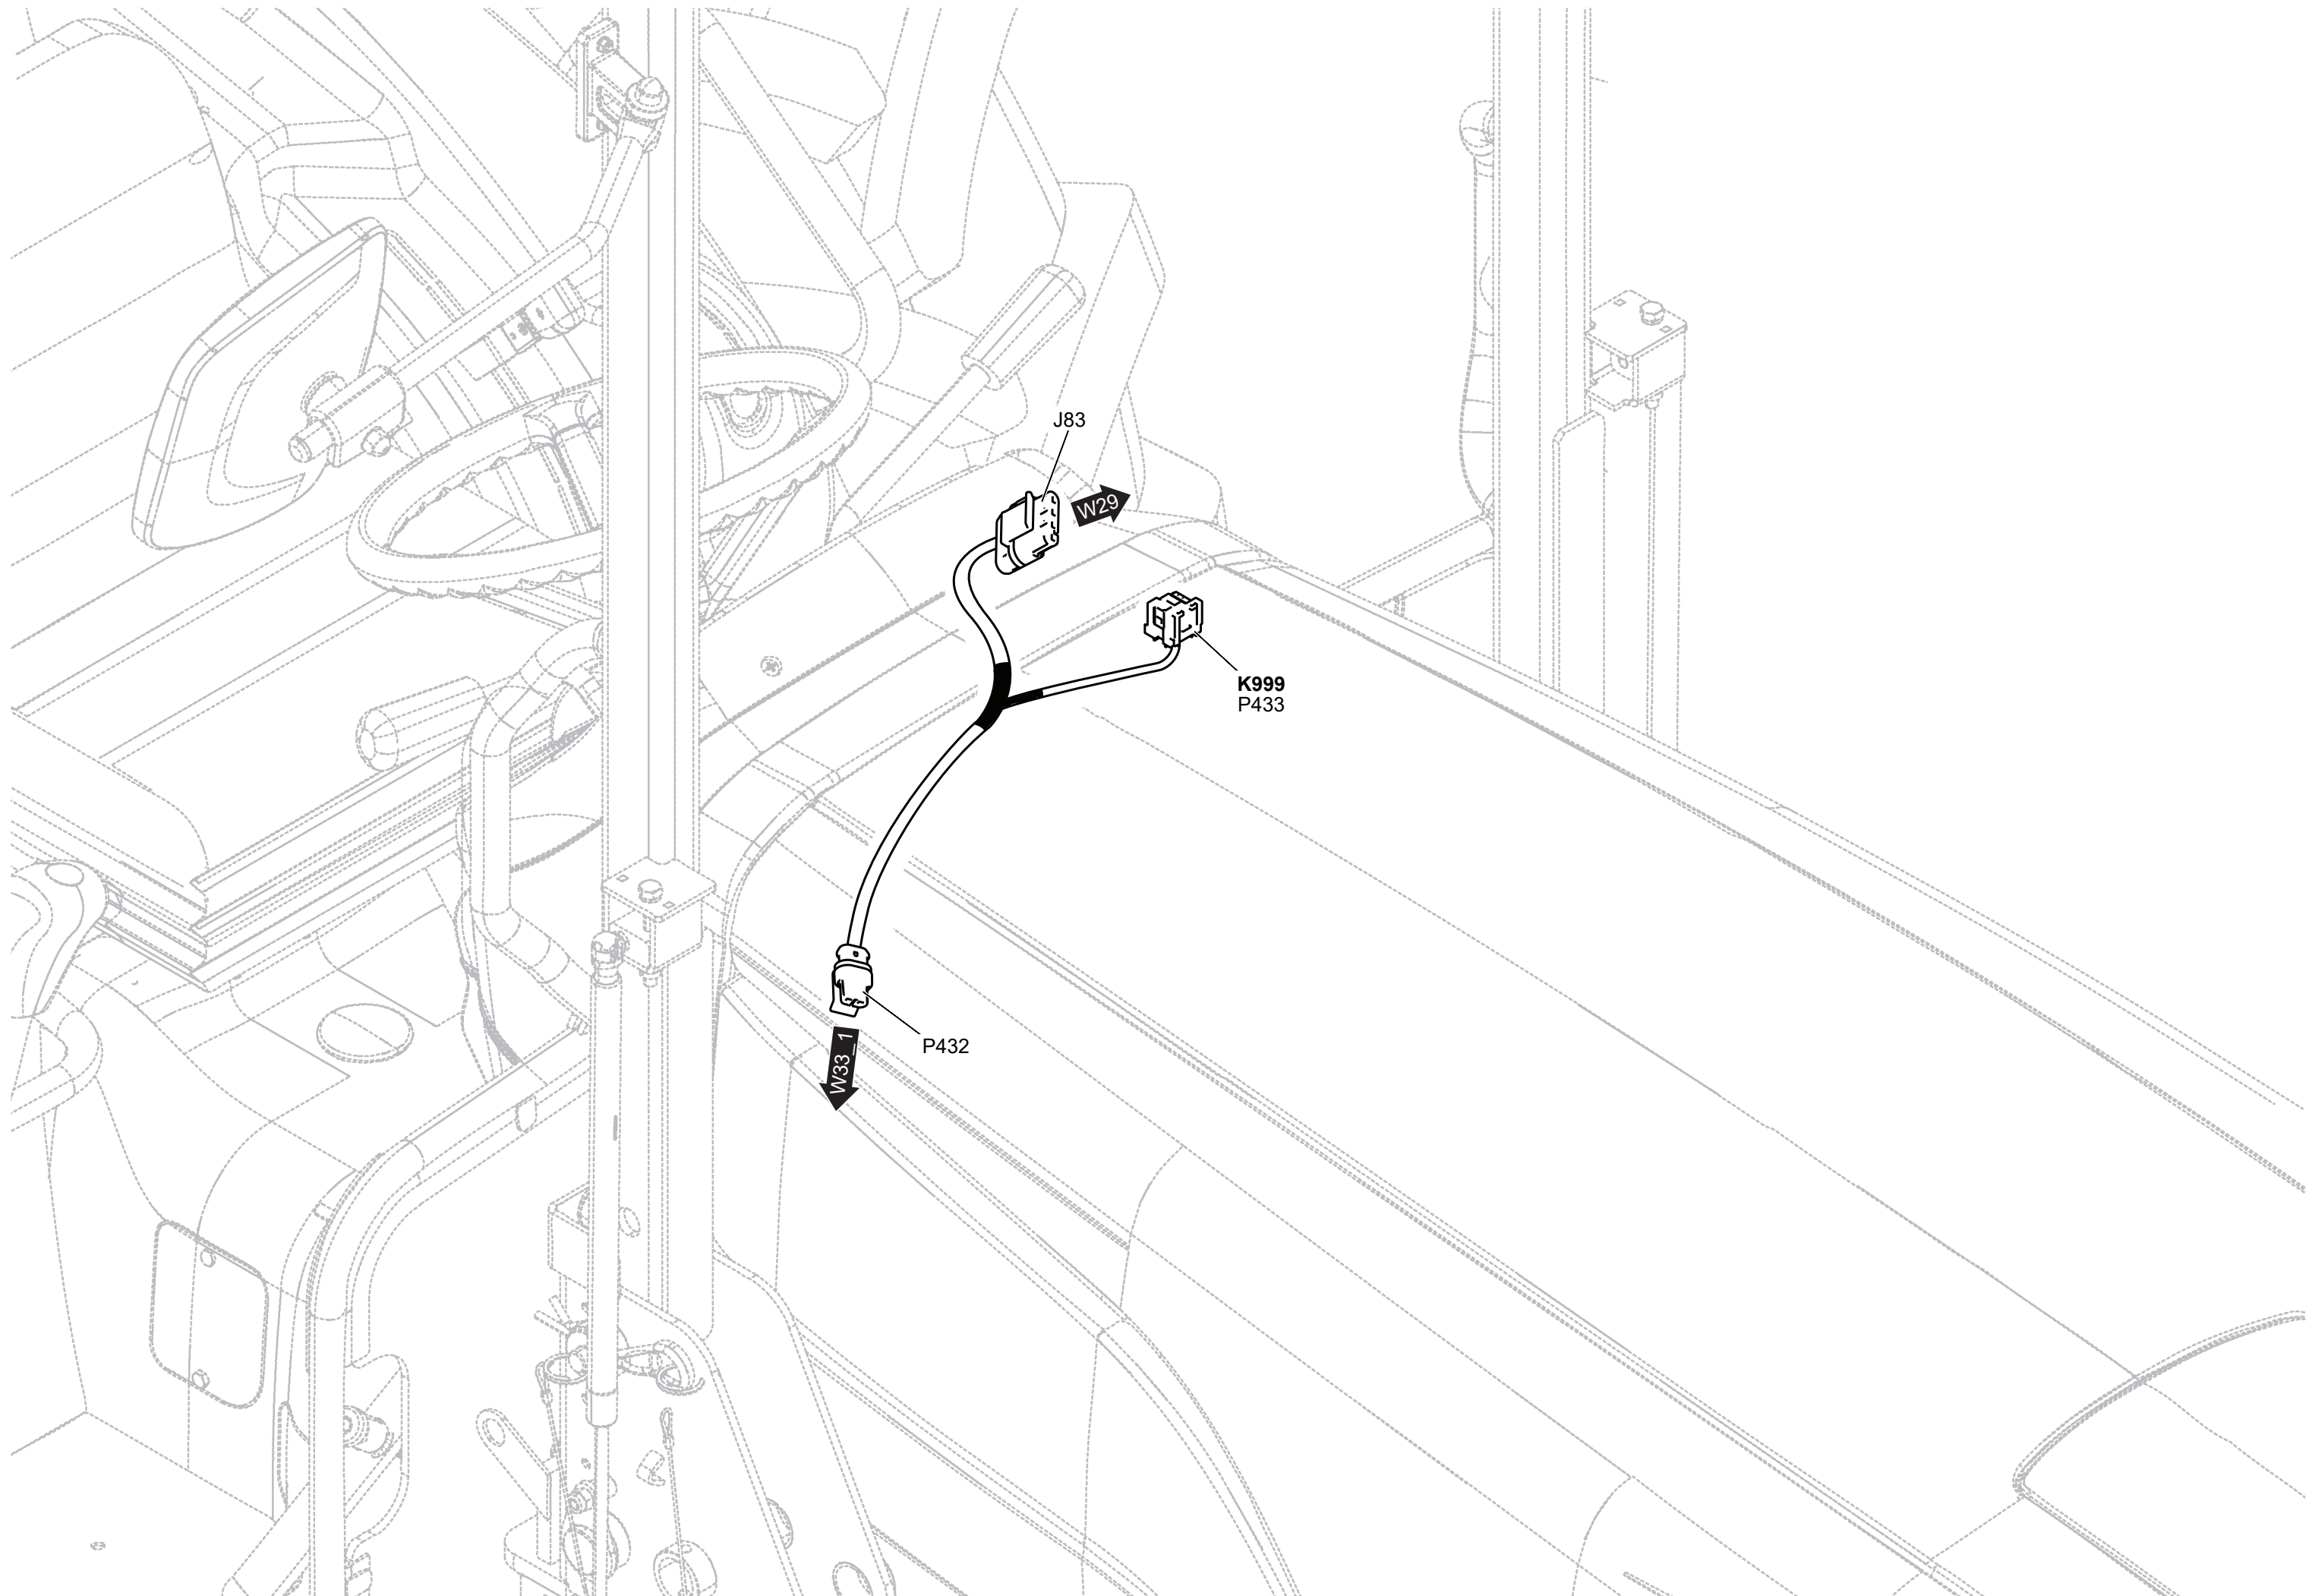 


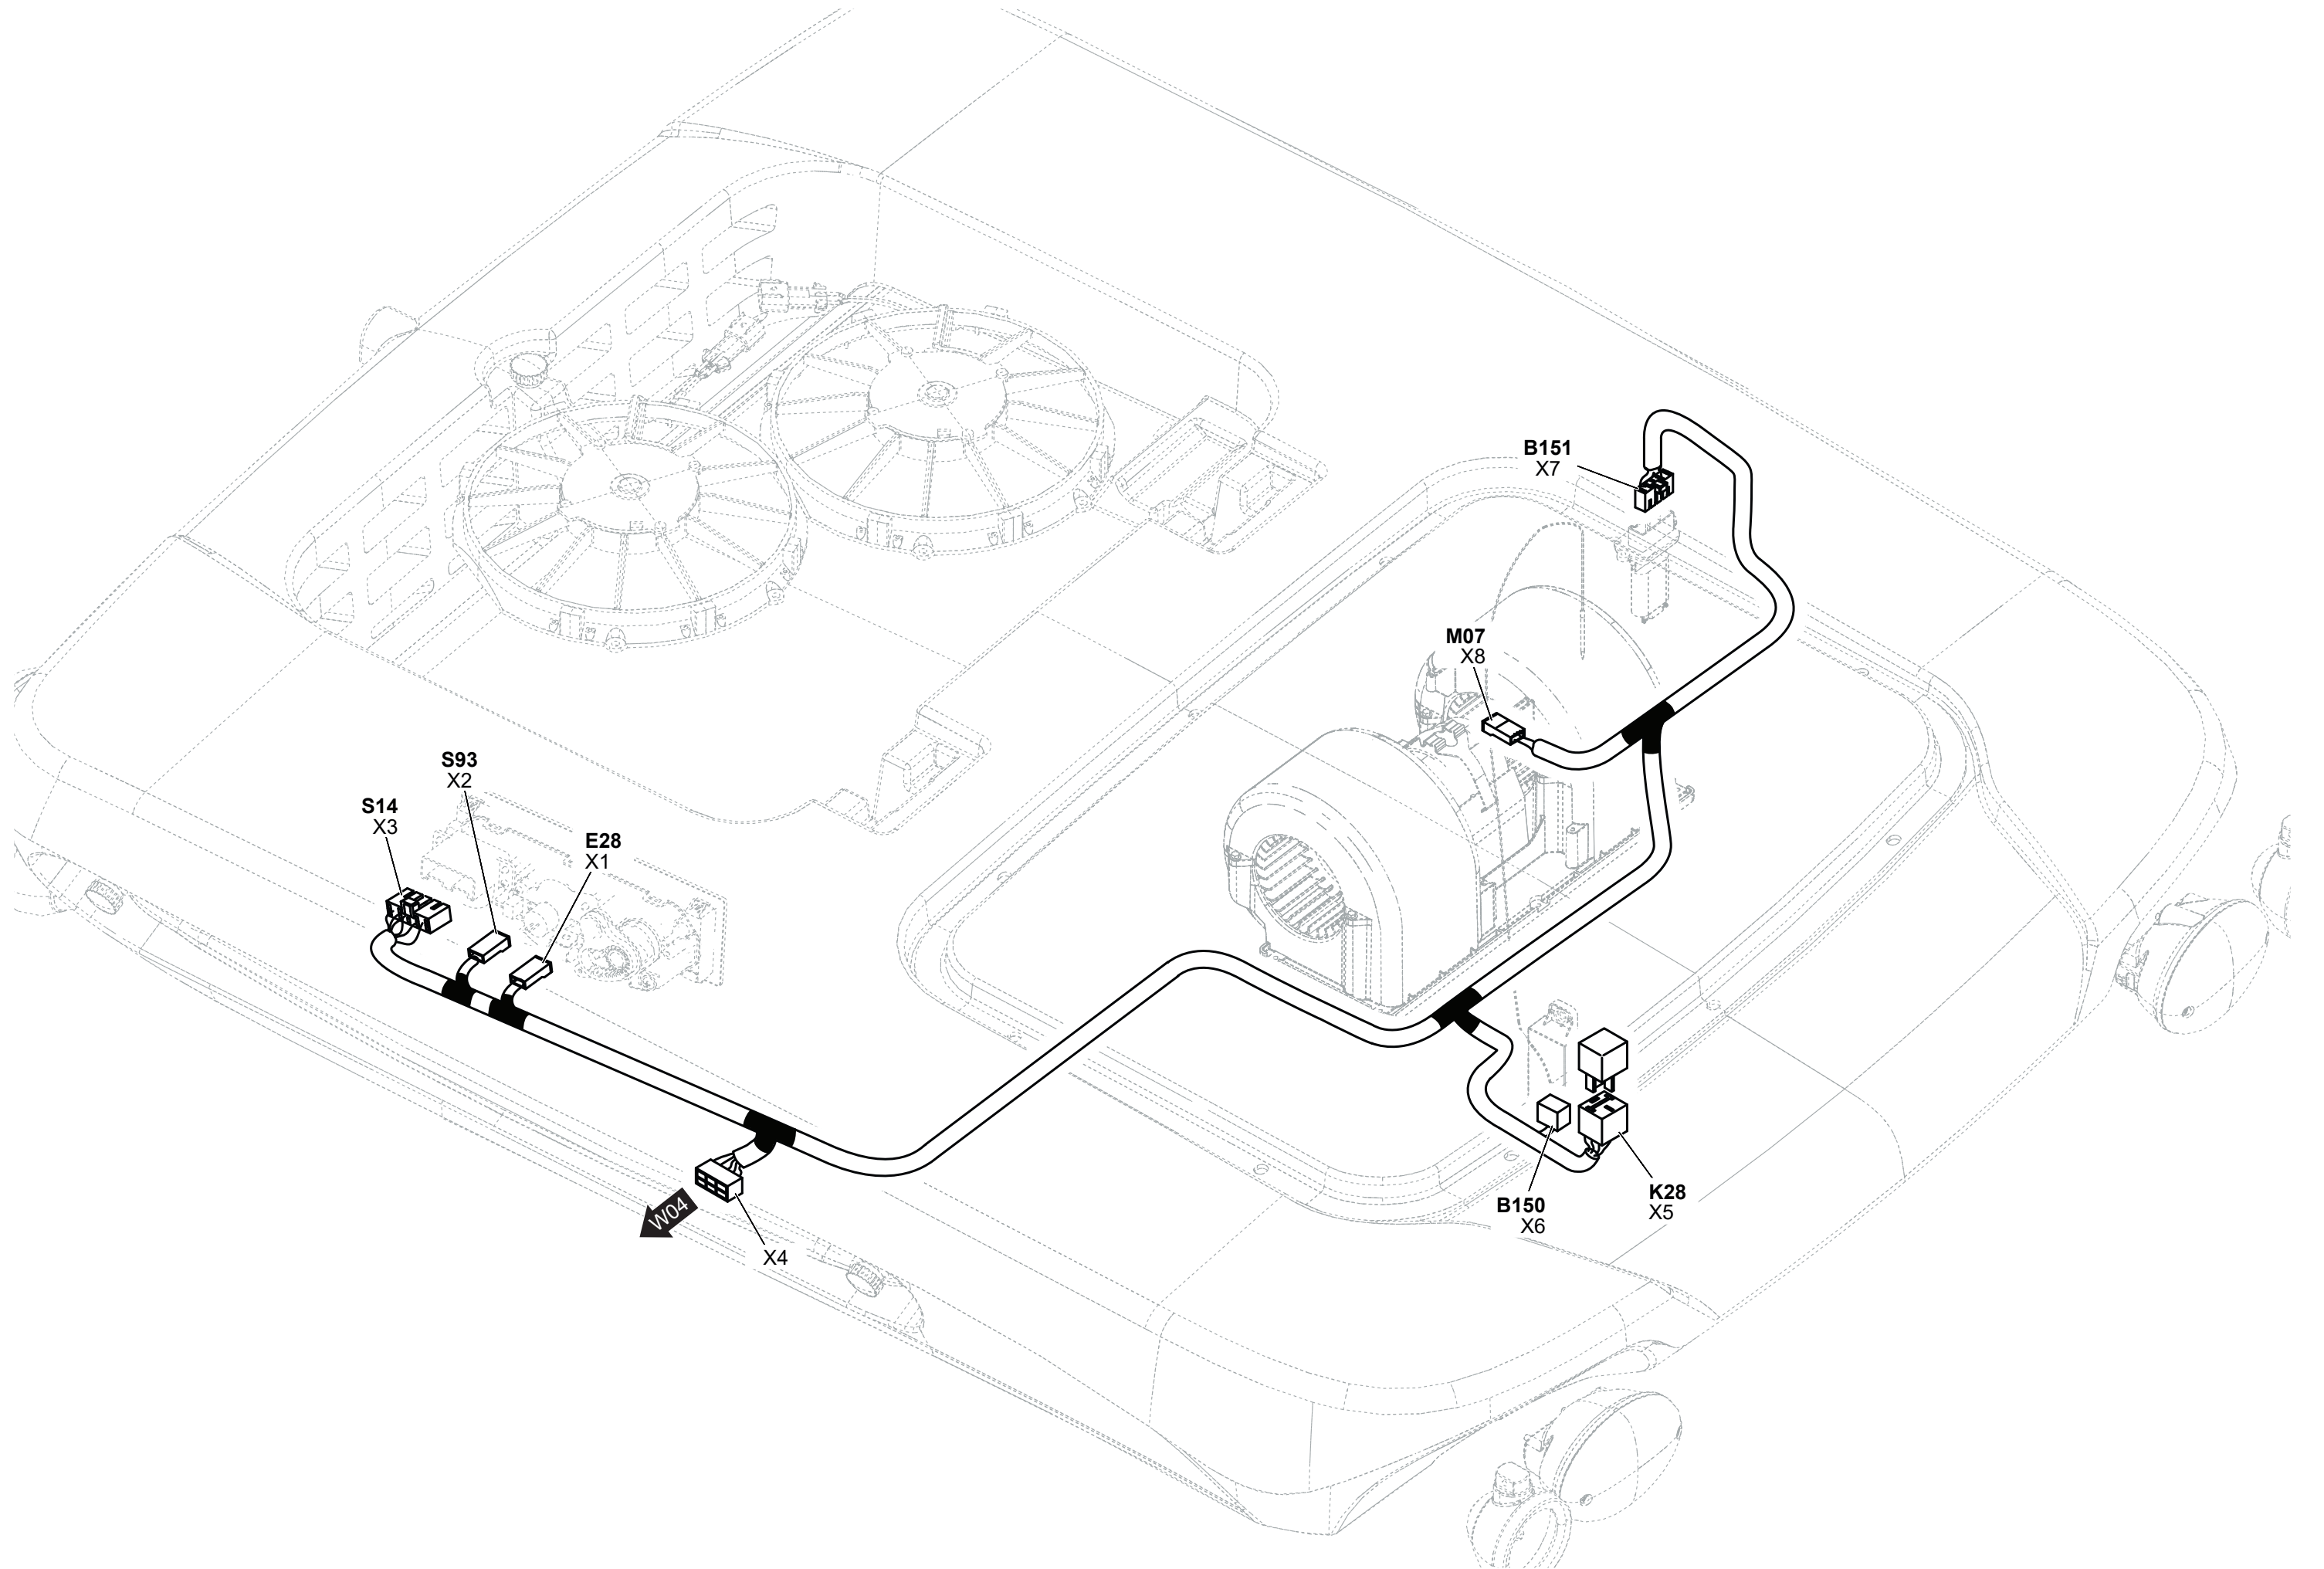 


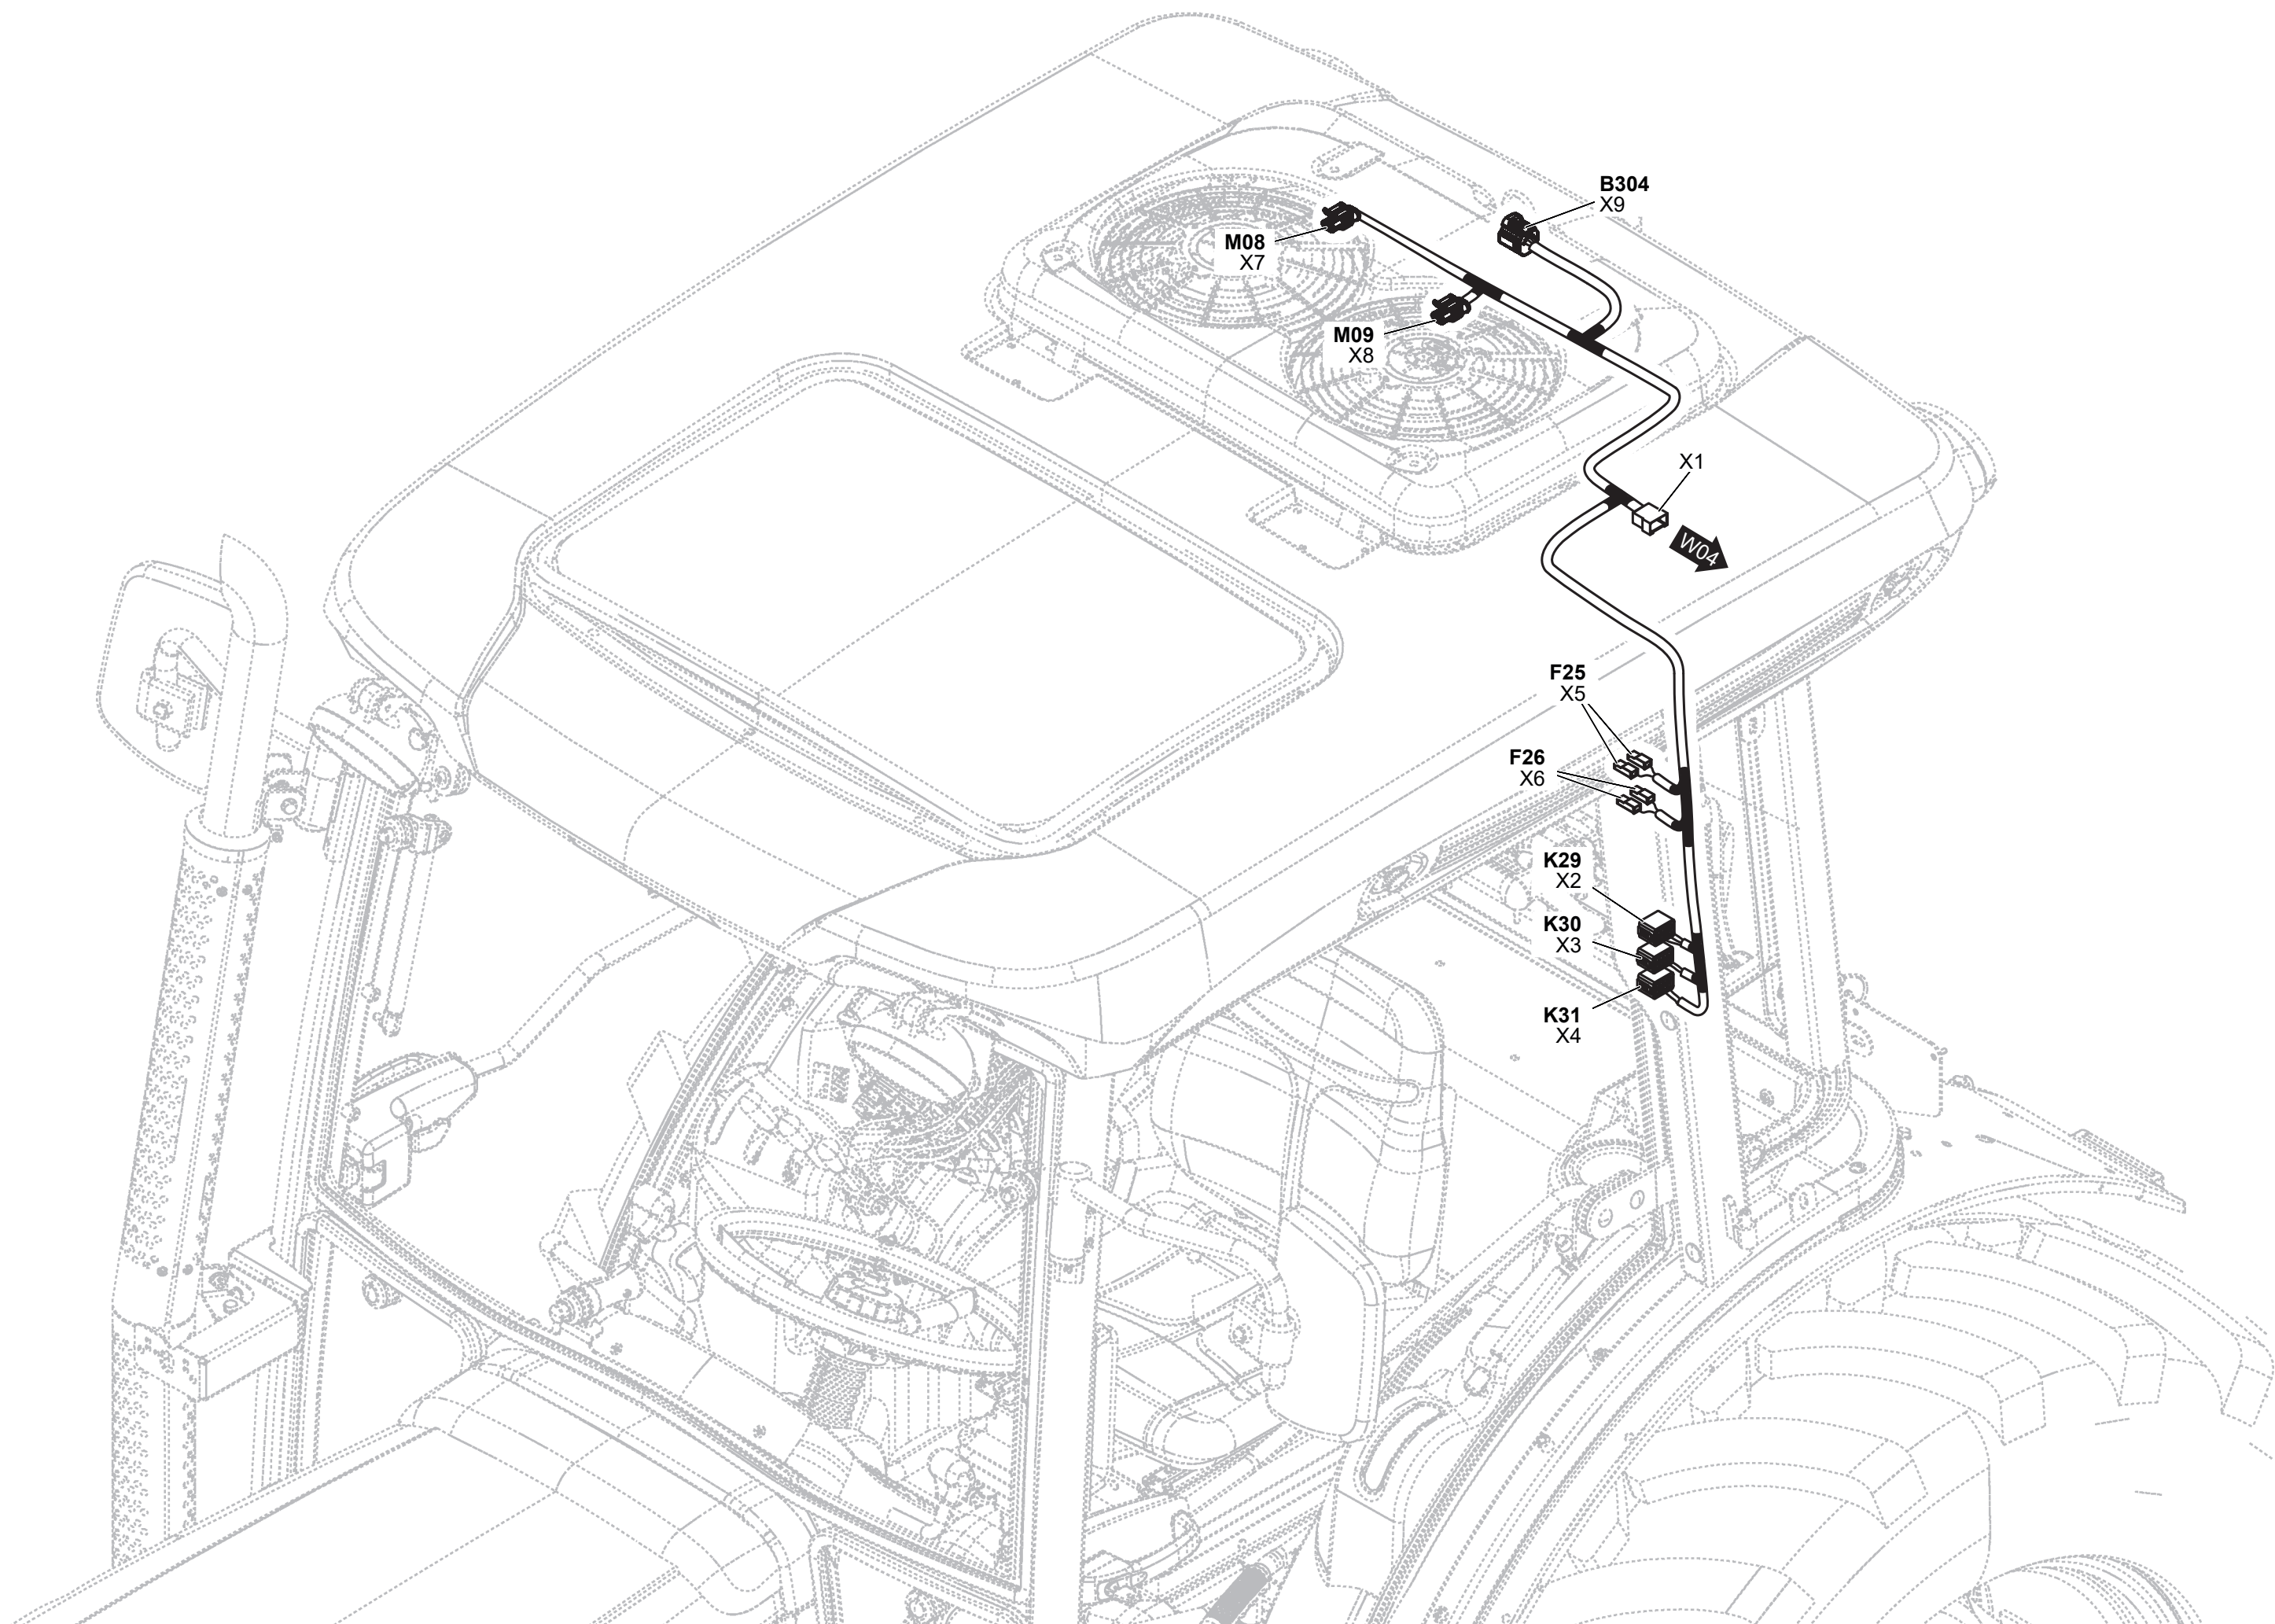 


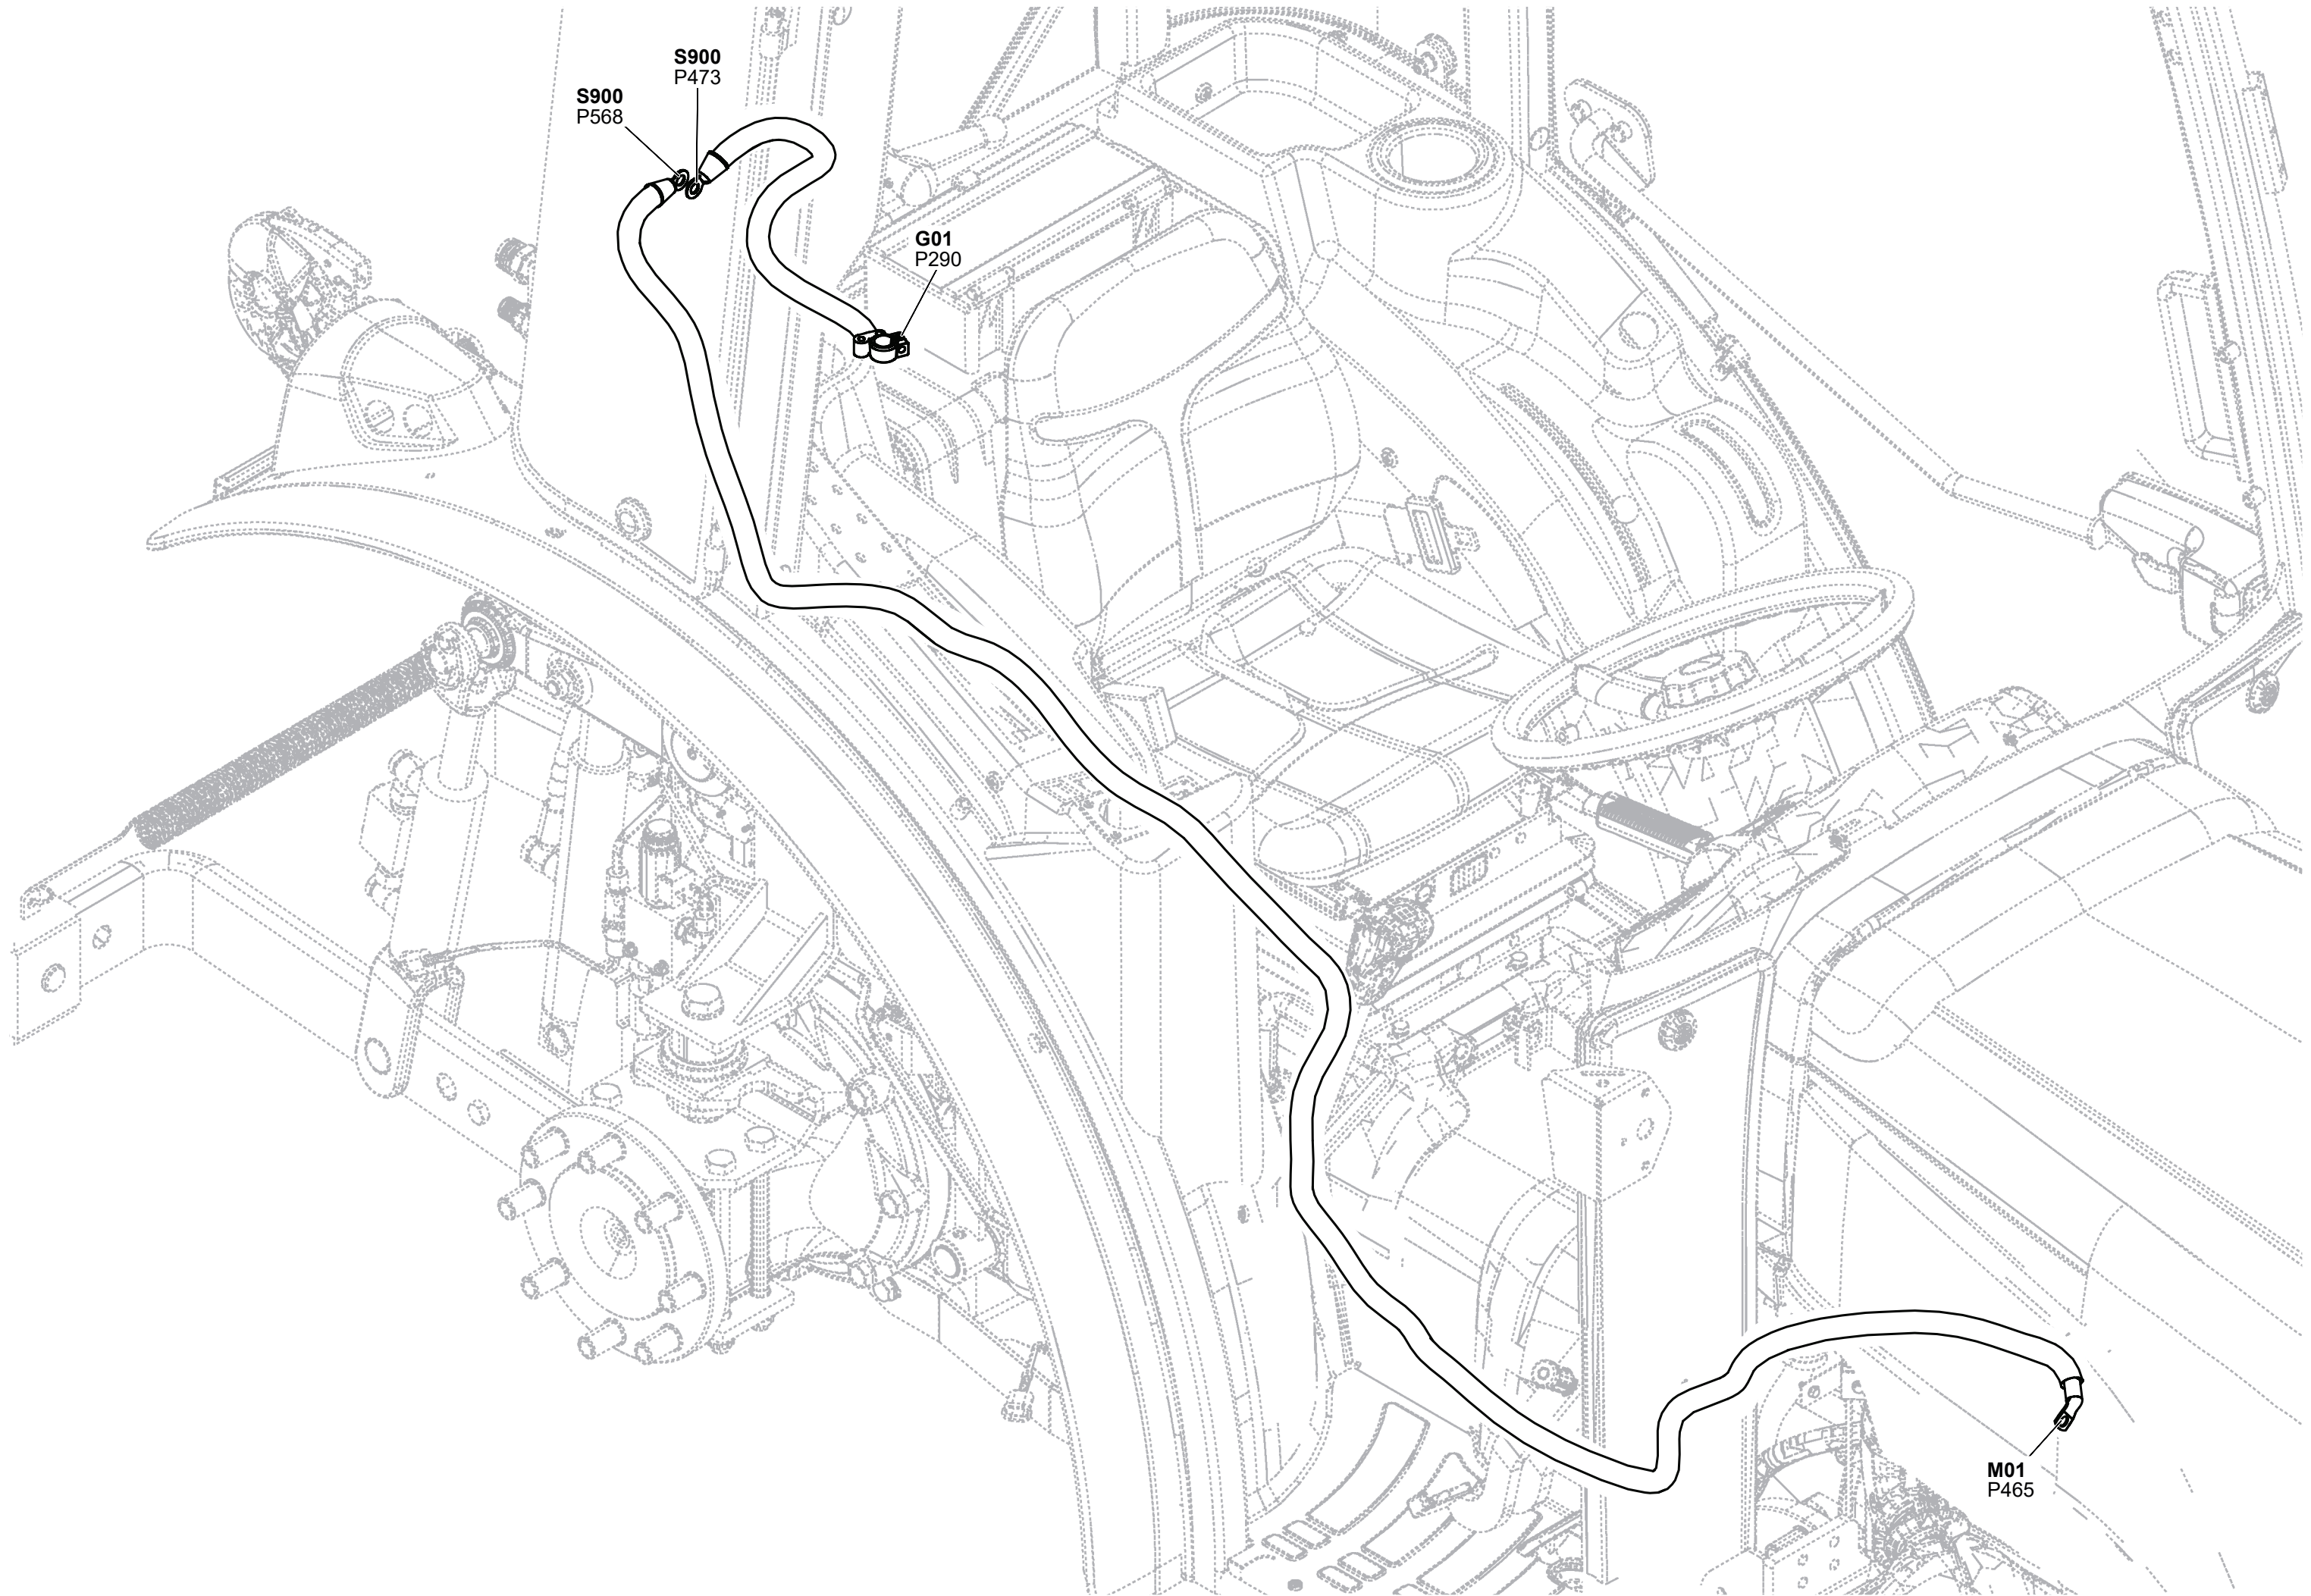 


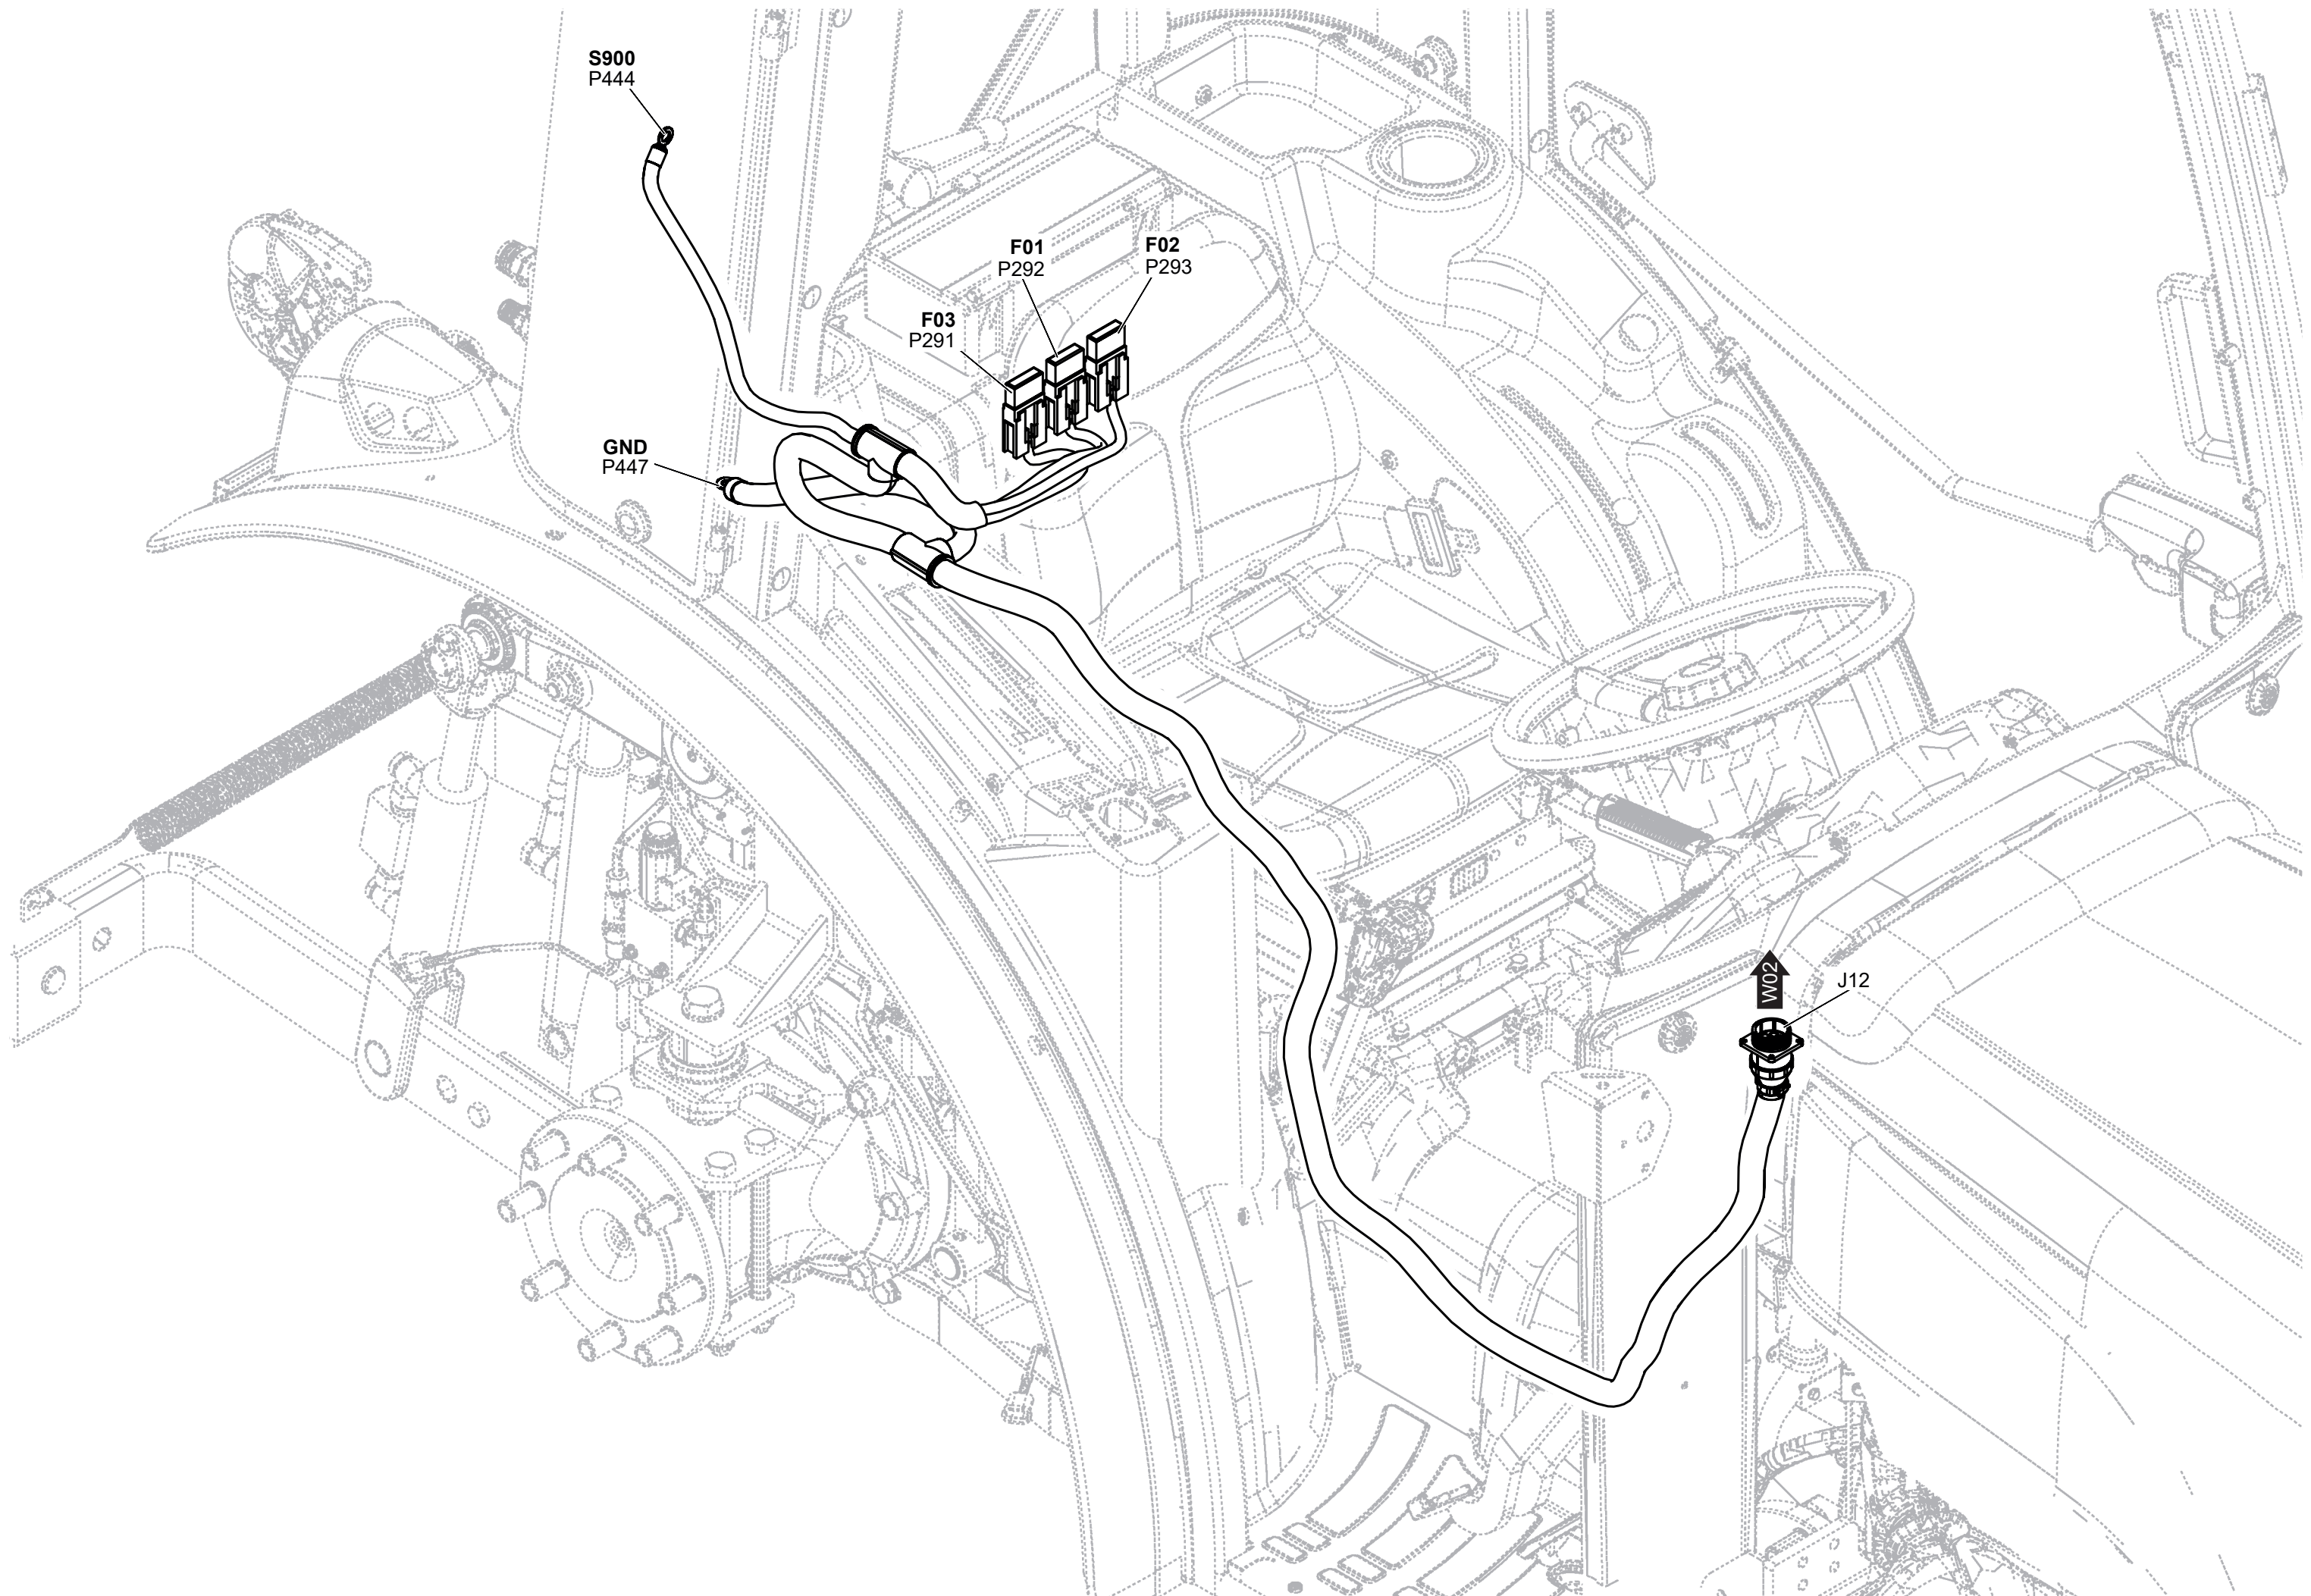 


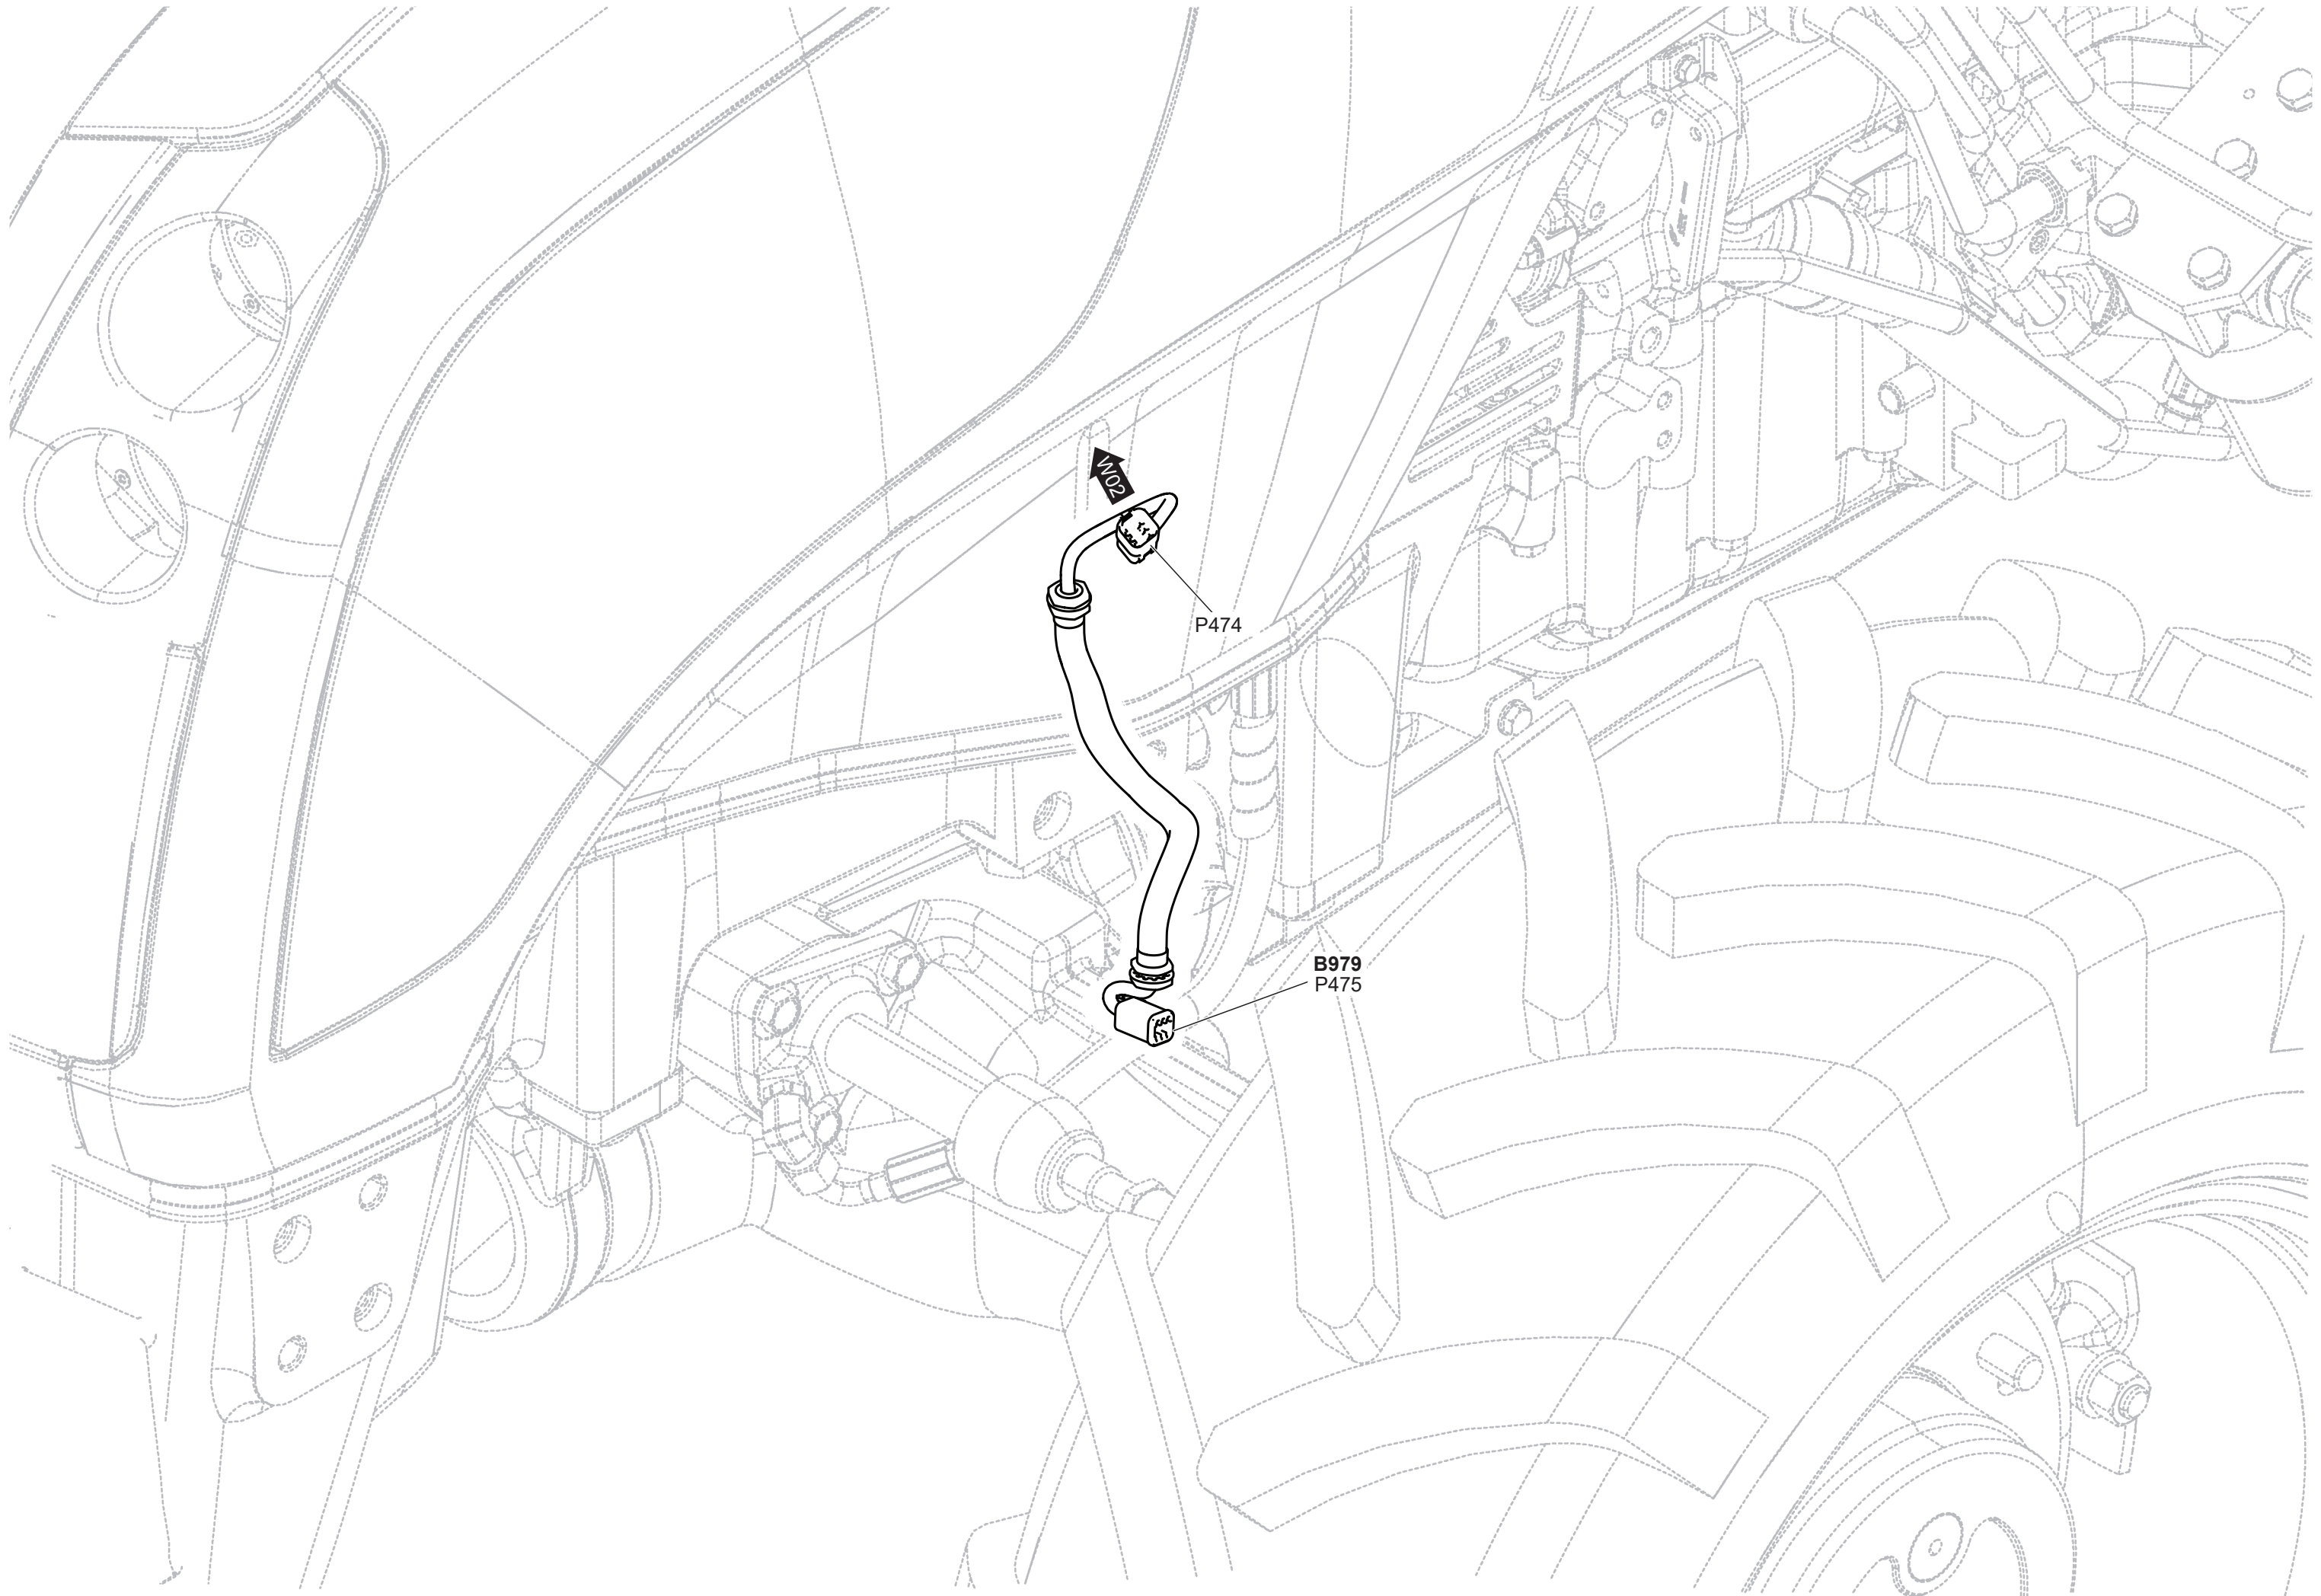

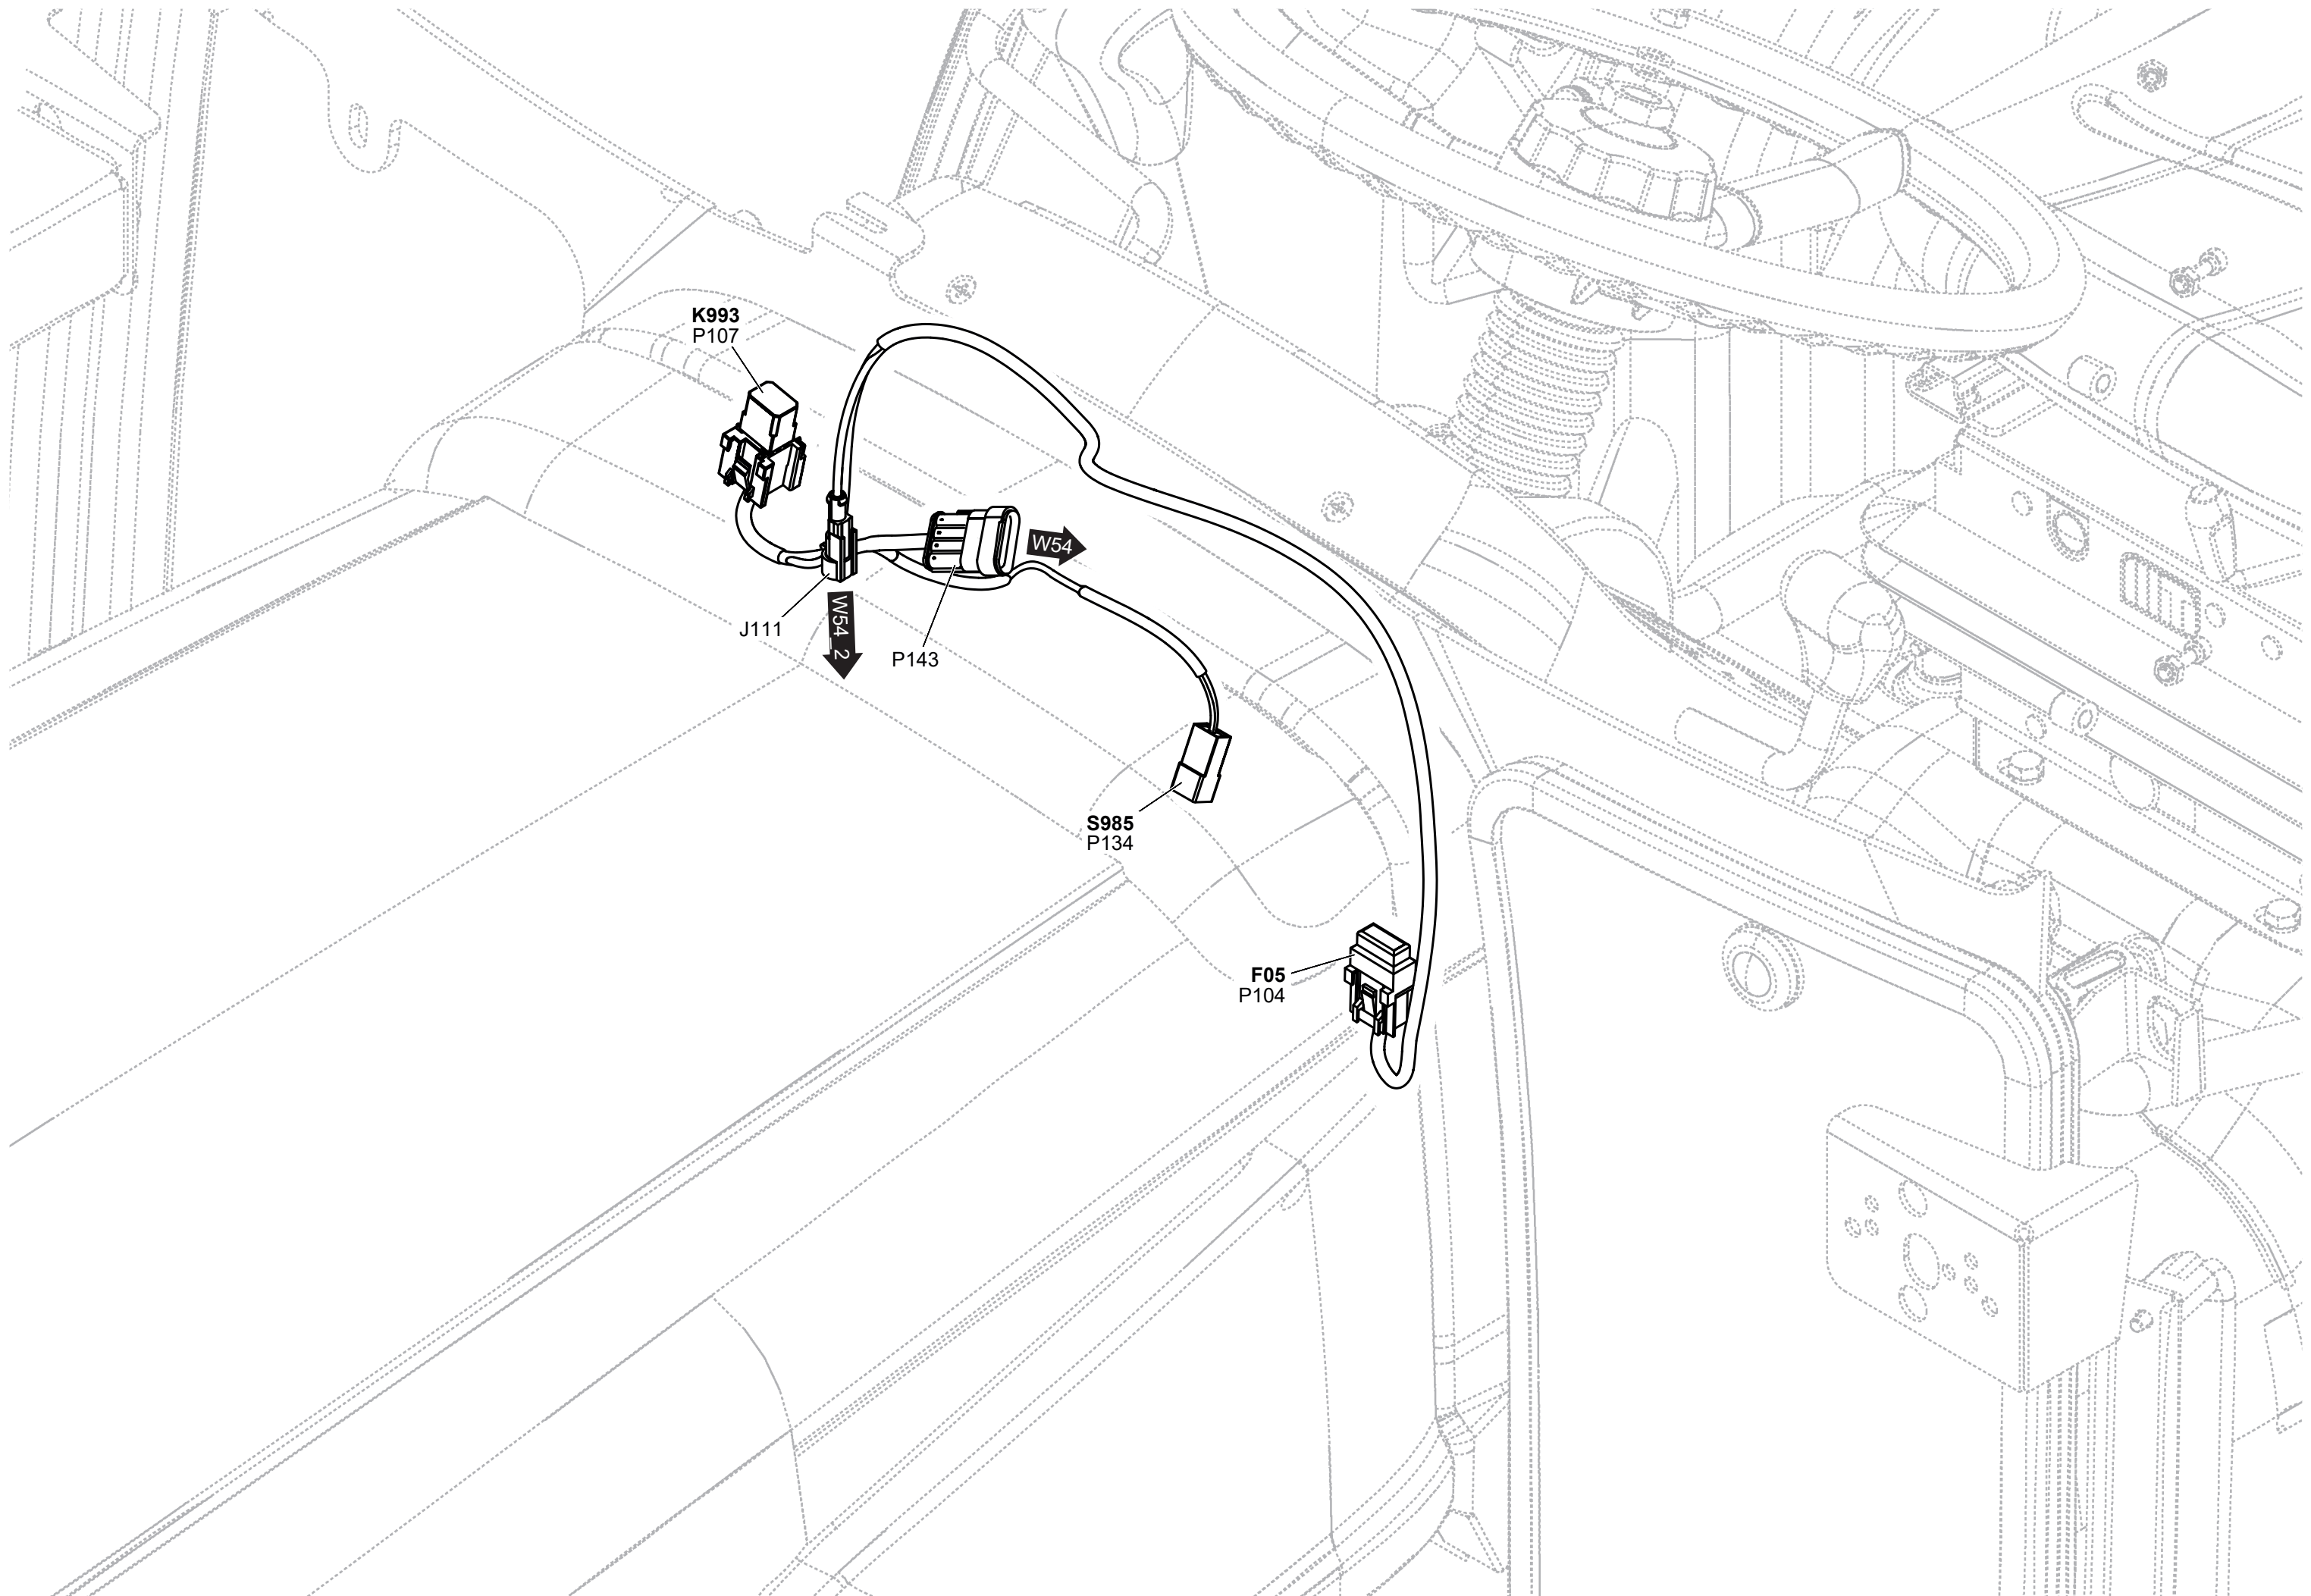

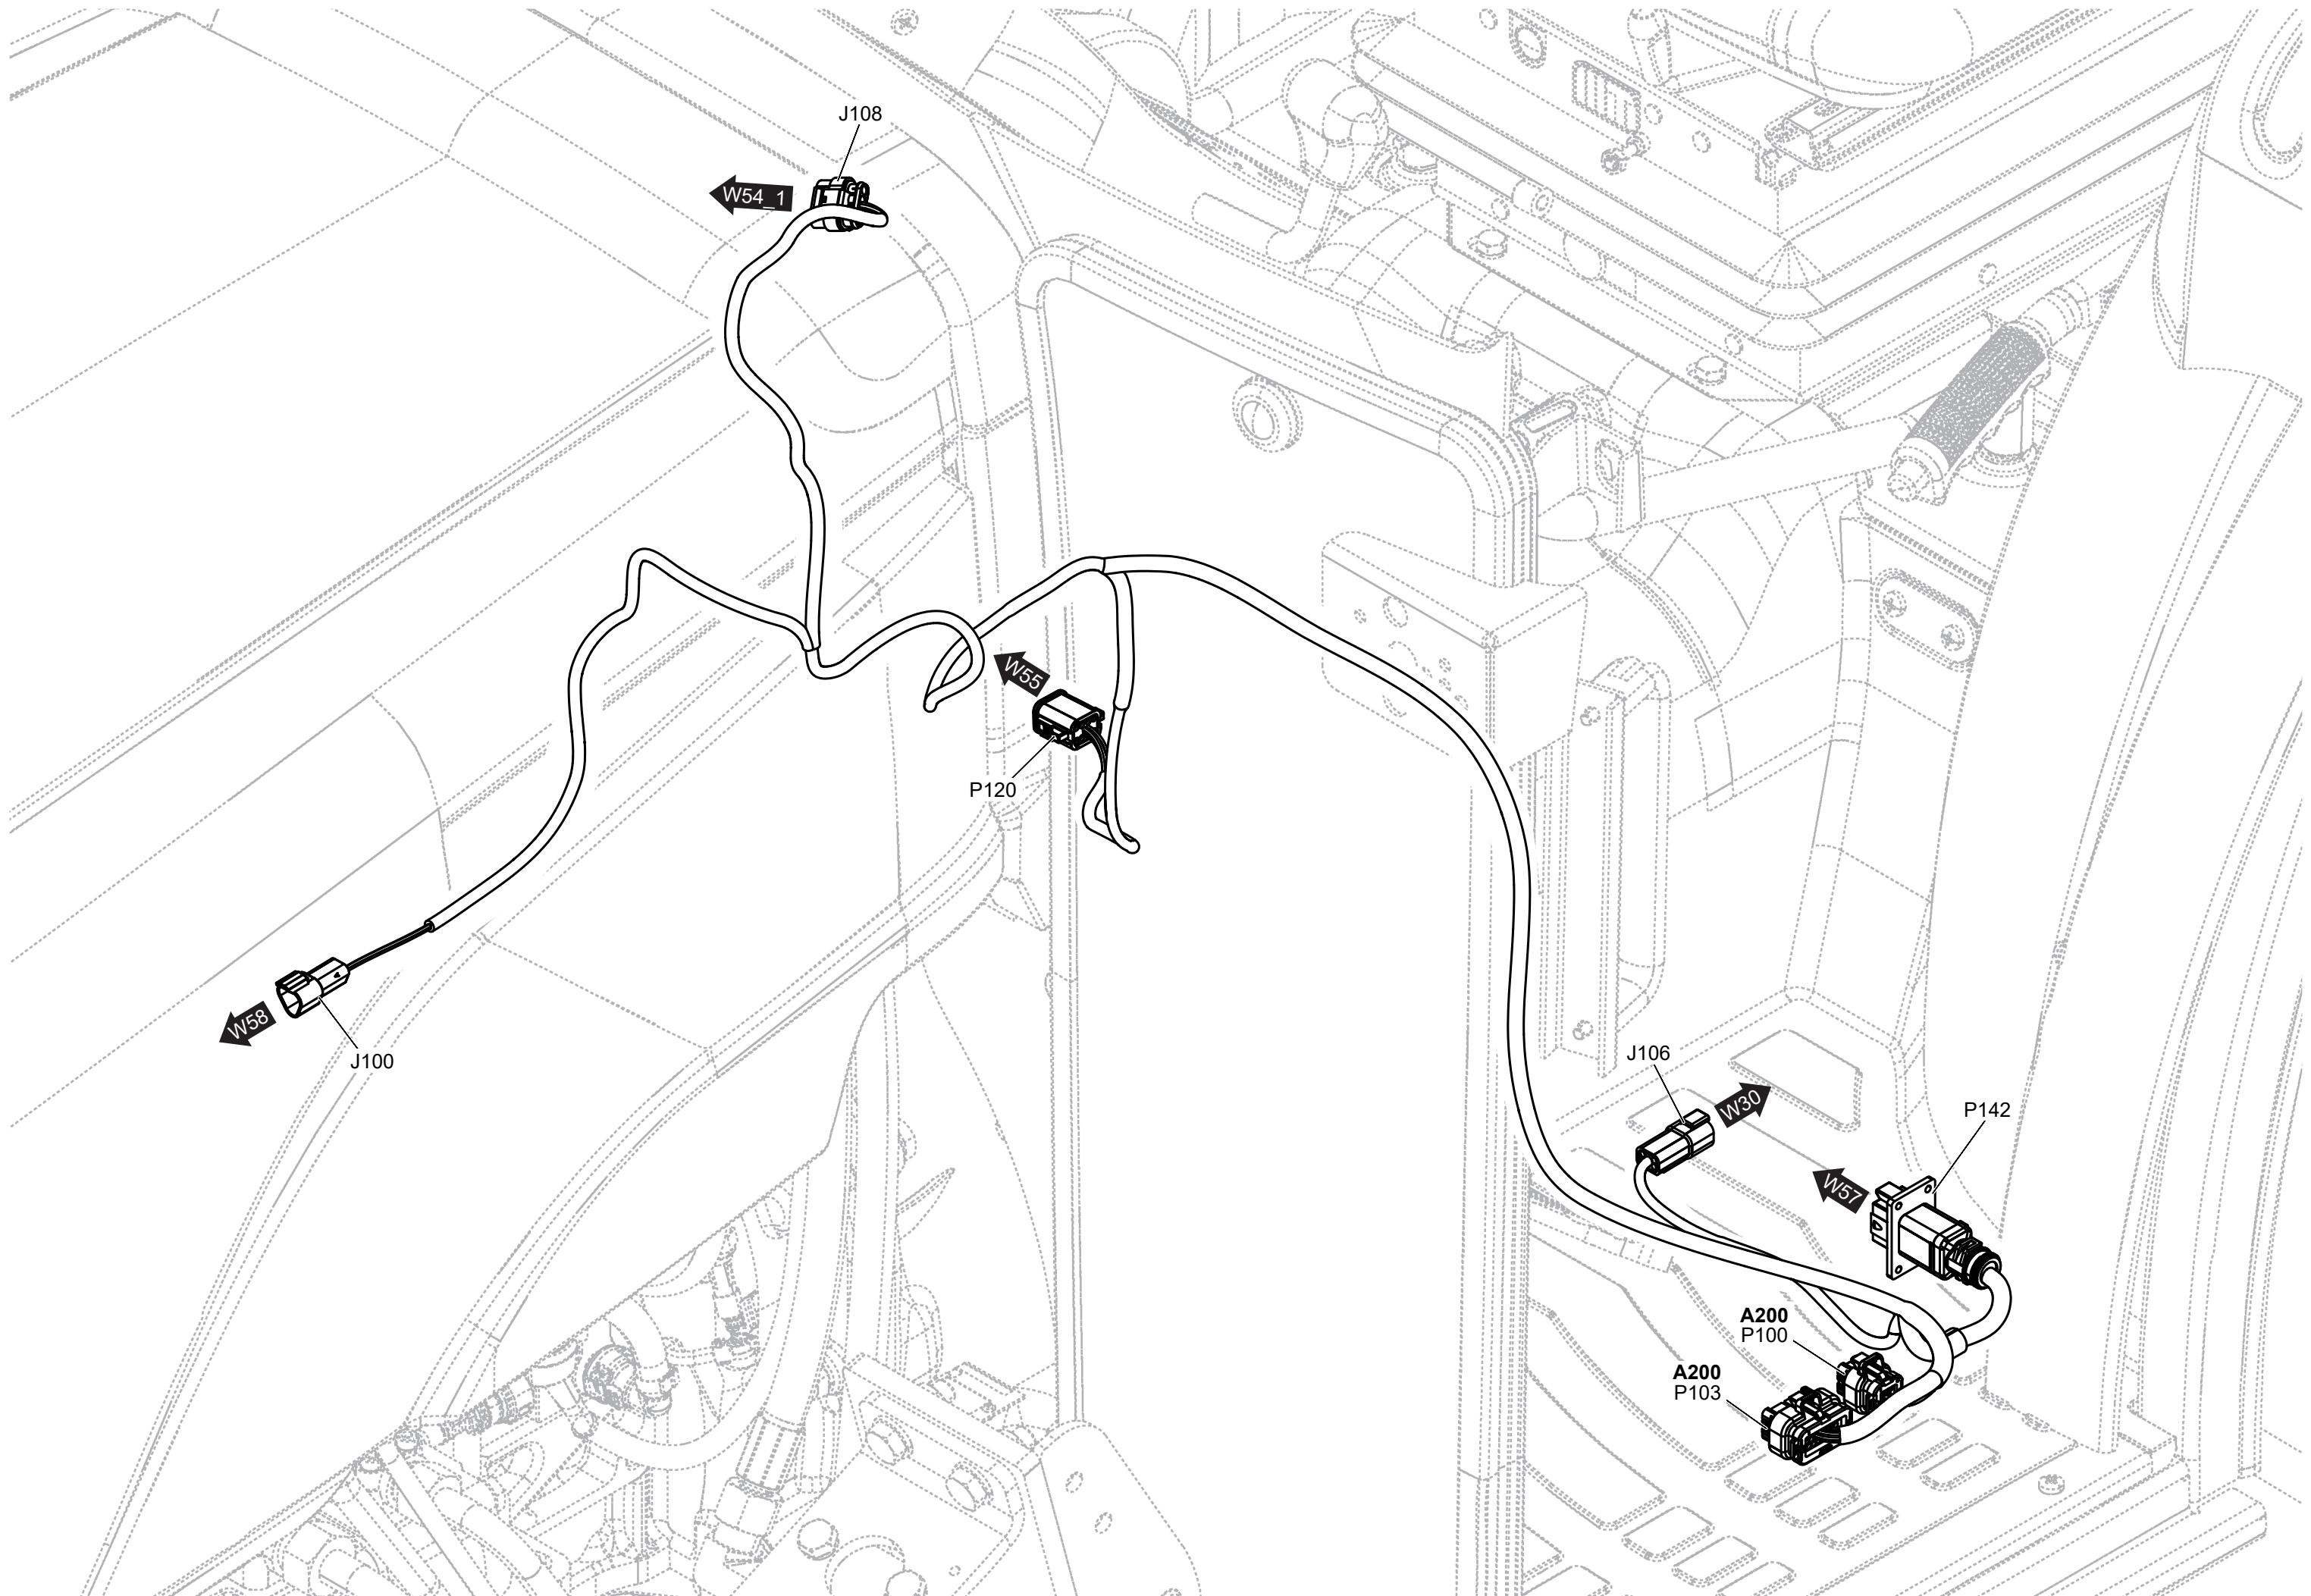

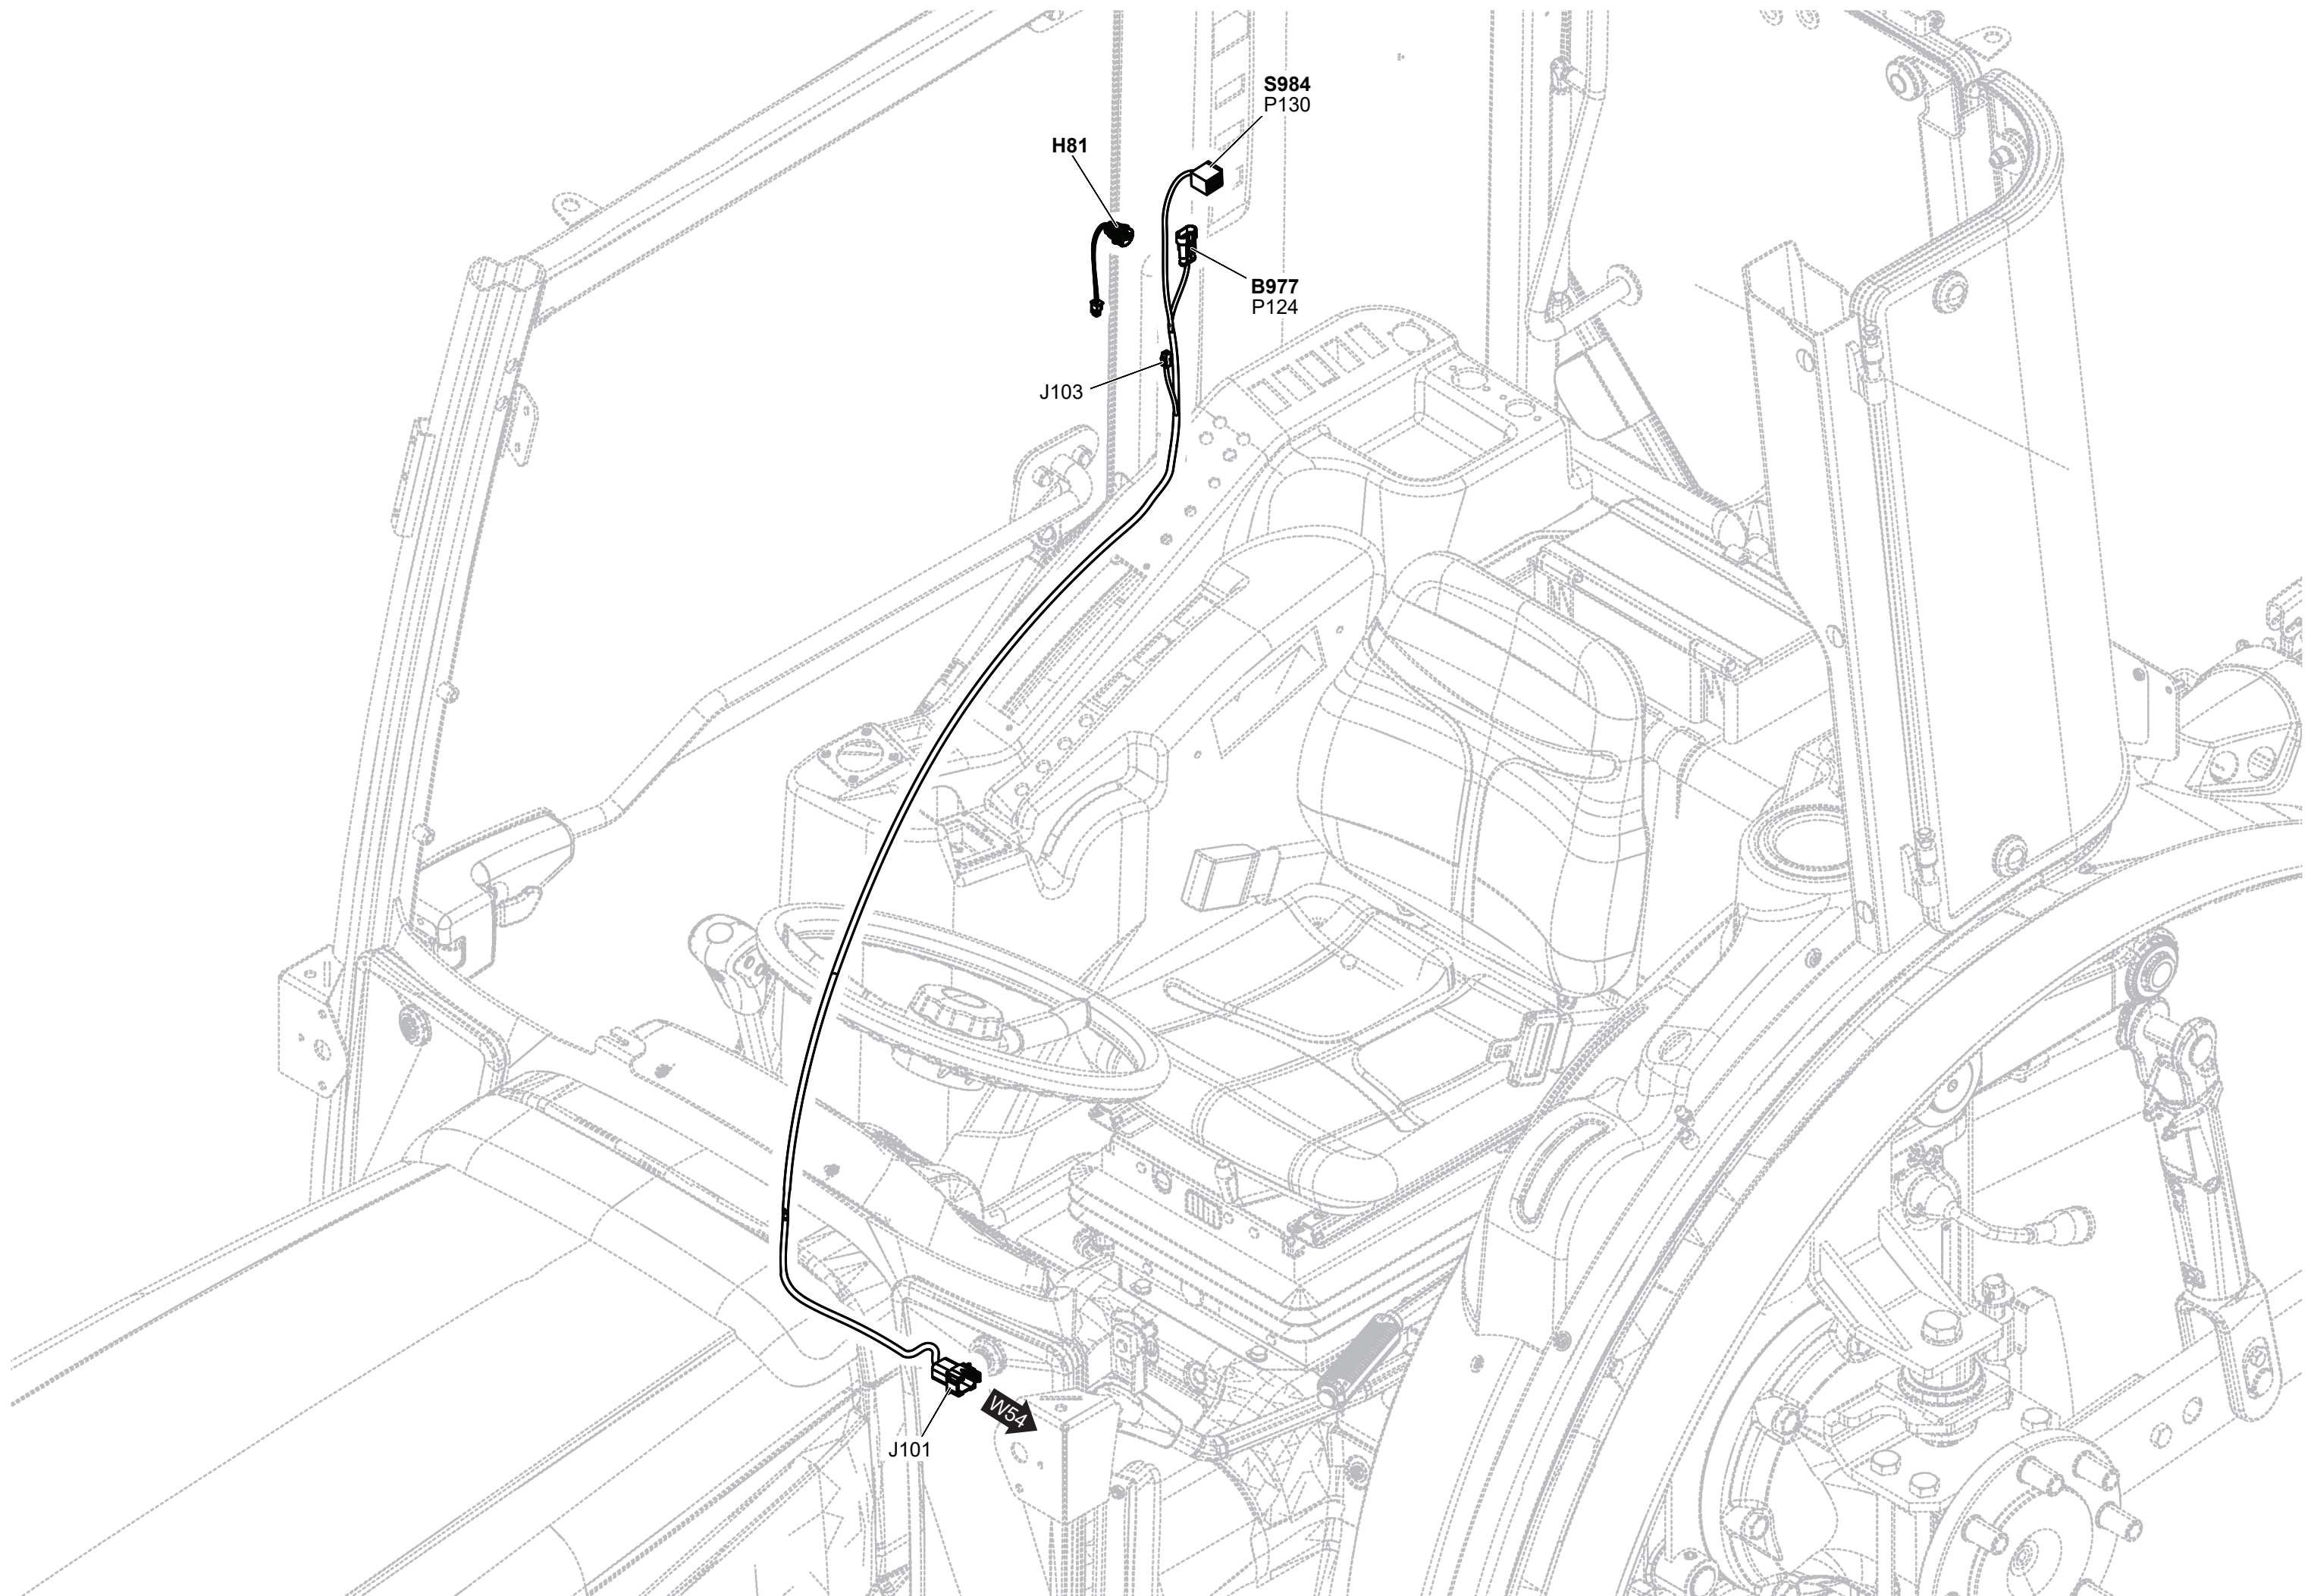

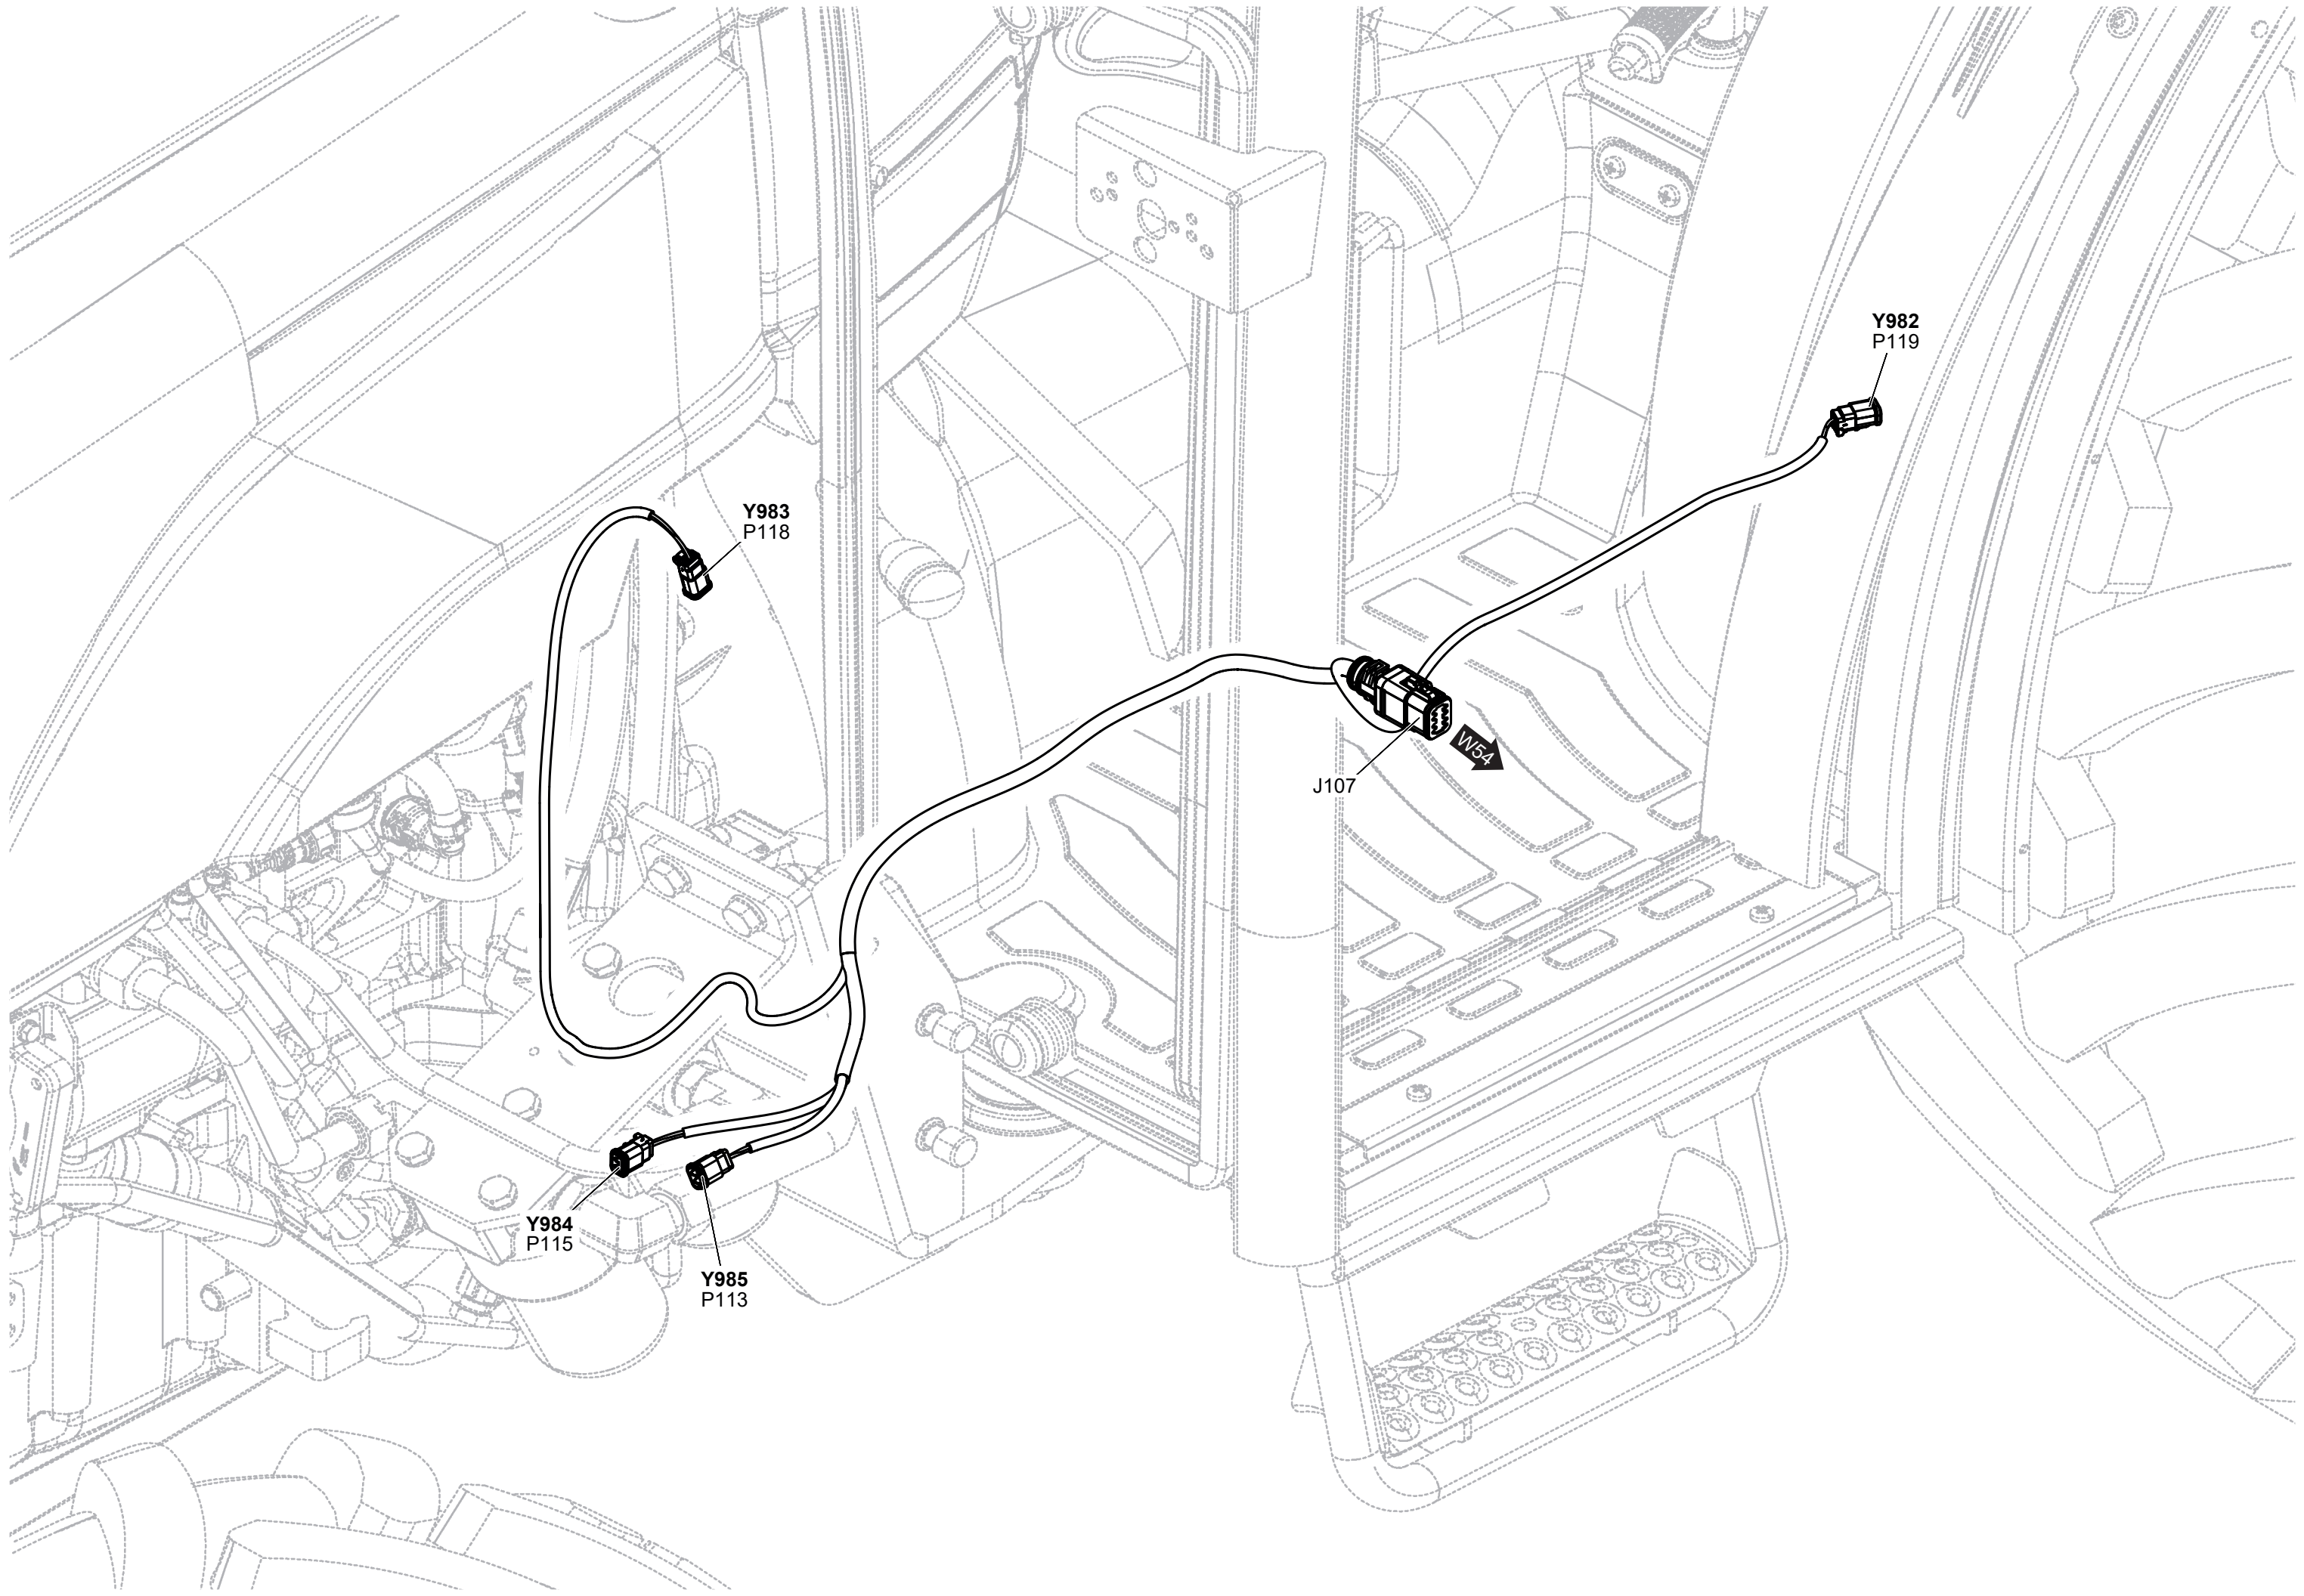

Y982
P119

 
Y983
P118

J107


W54

Y984
P115


Y985
P113

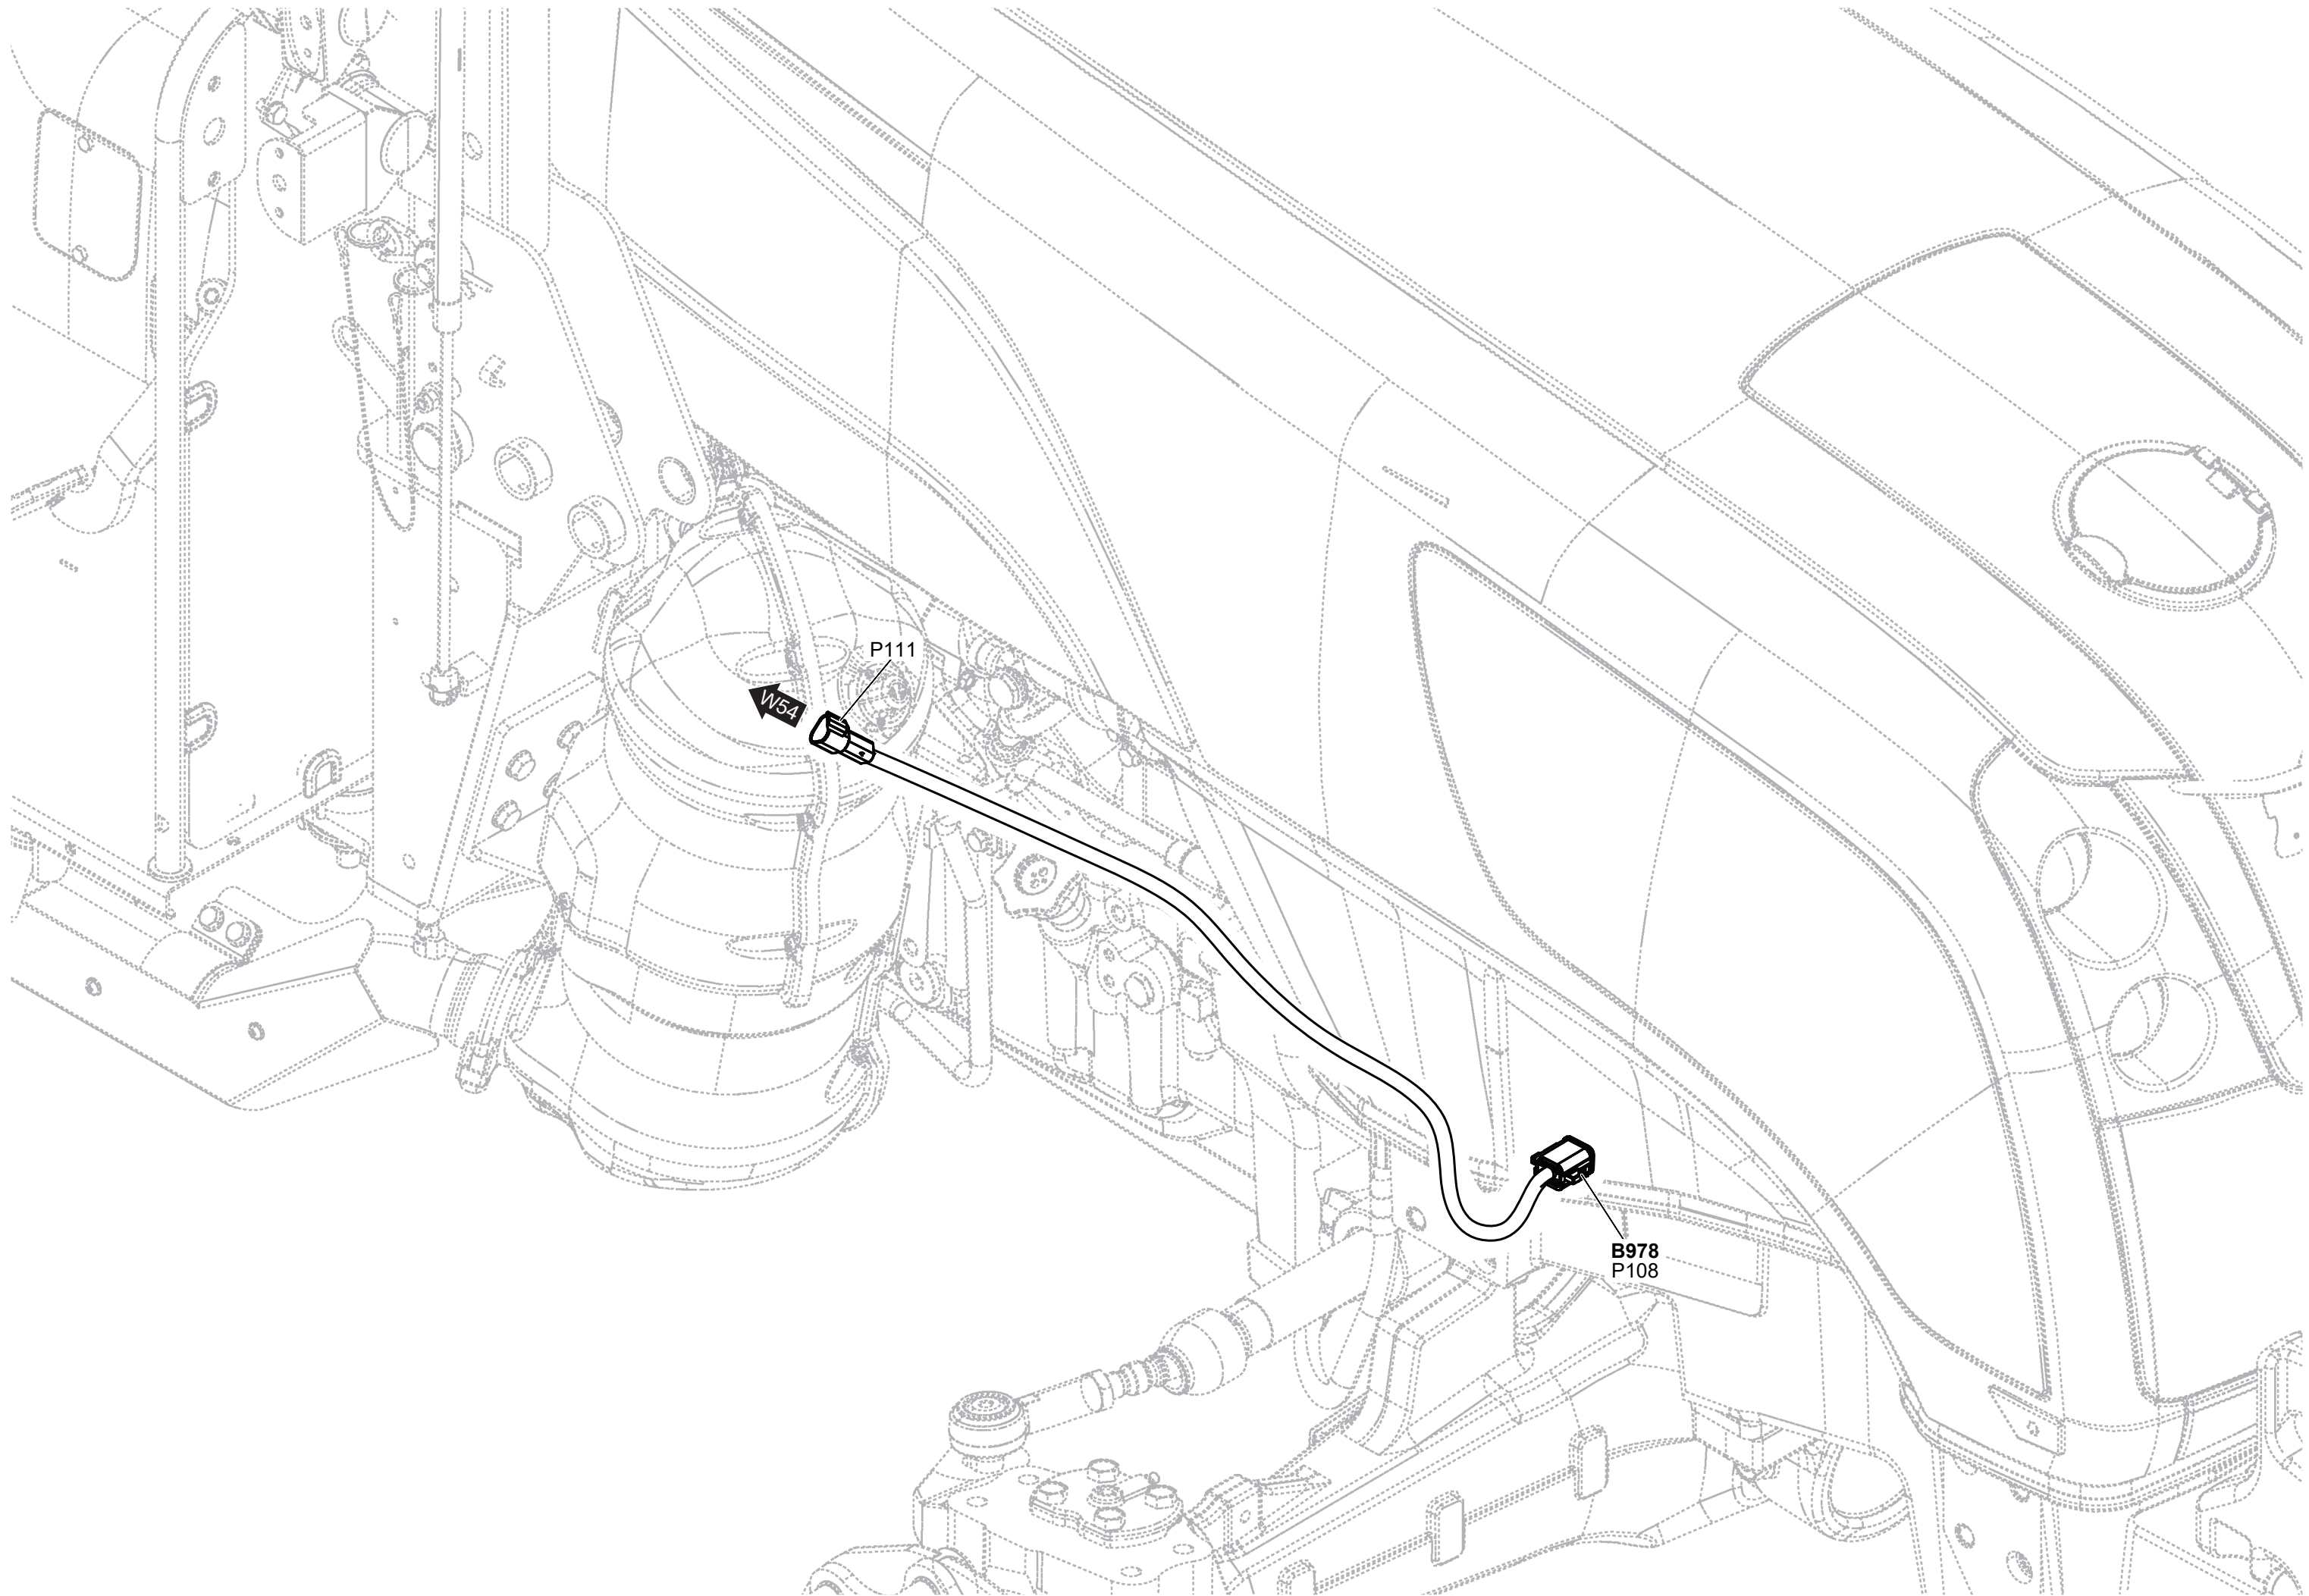


A005 - RH Speaker

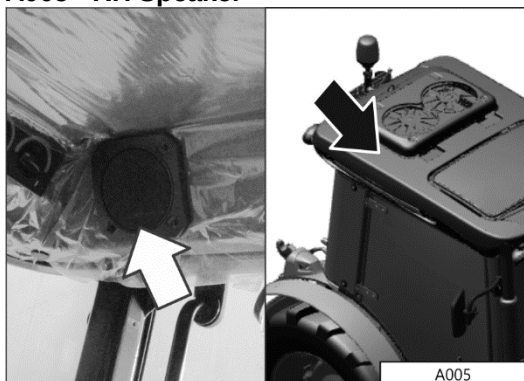 


A006 - LH Speaker

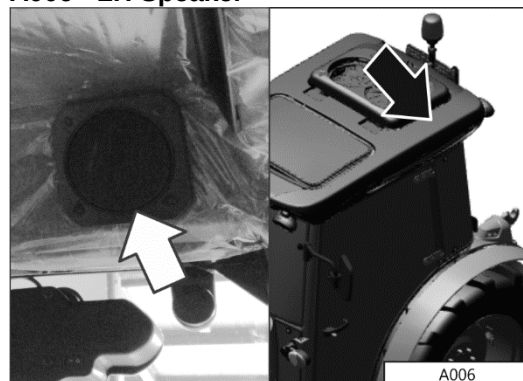 


A051 - E-SCVS CAN Bus resistor

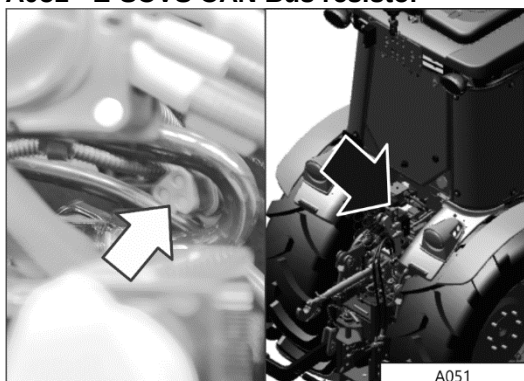 


A200 - IFAS control unit

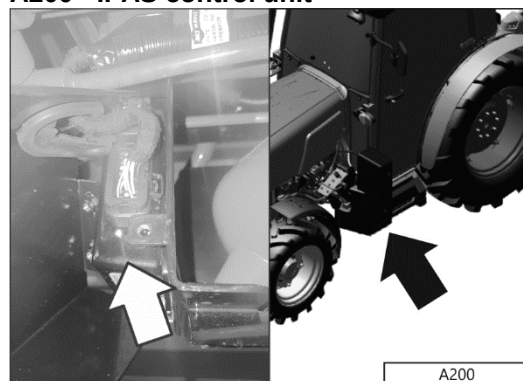 


A210 - Electronic hitch control unit

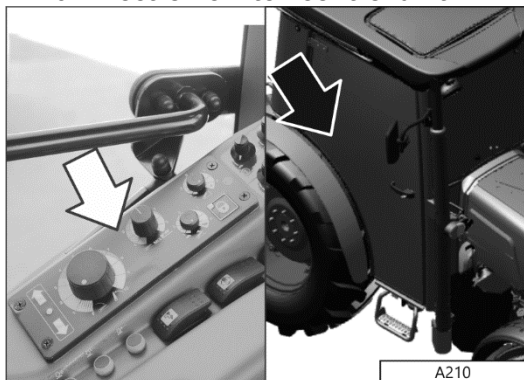 


A330 - Instrument panel

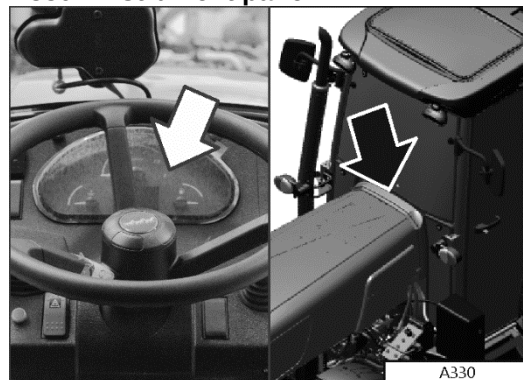 


A500 - Engine control unit

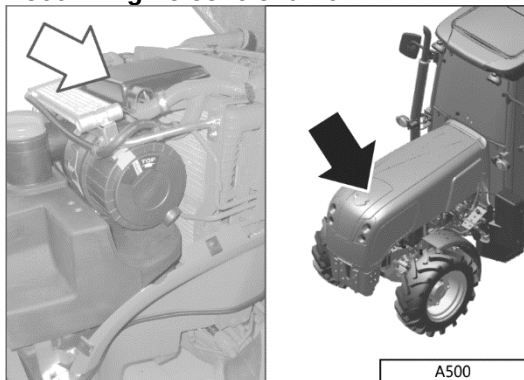 


A510 - Glow plug ECU

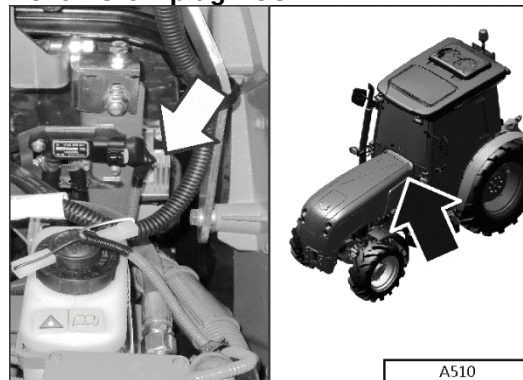 


A997 - E-SCVS control unit

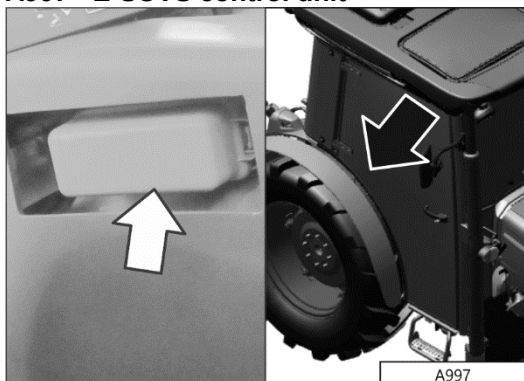 


B02 - Air filter switch

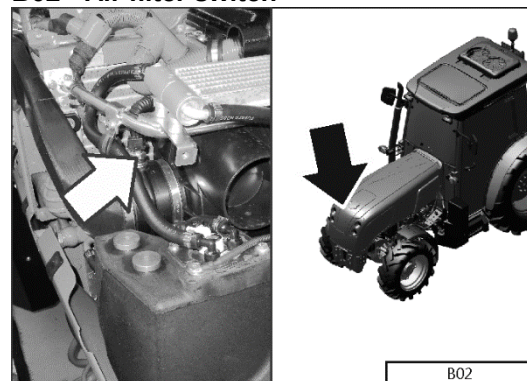 


B03 - Fuel level sensor

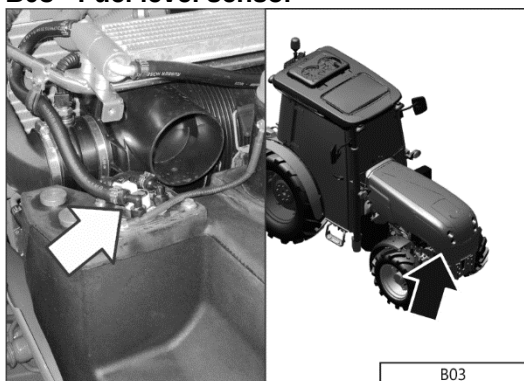 


B05 - Hand brake switch

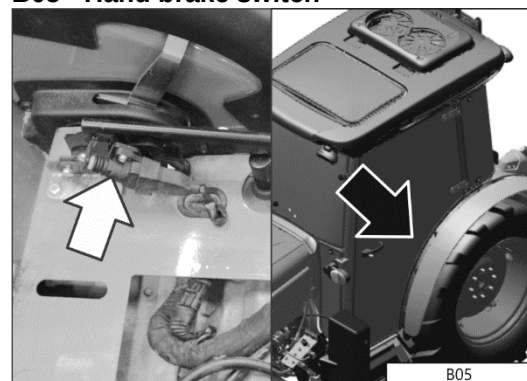 


B06 - Speed Sensor

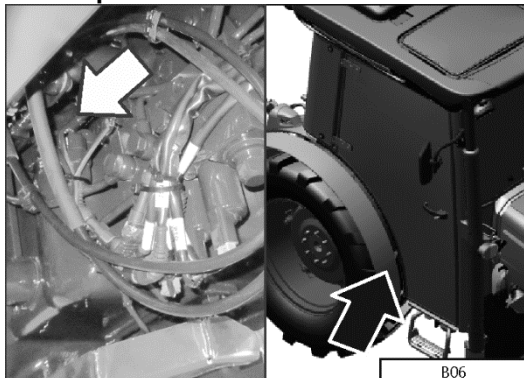 

 
B07A - 540E/1000 PTO speed selector switch

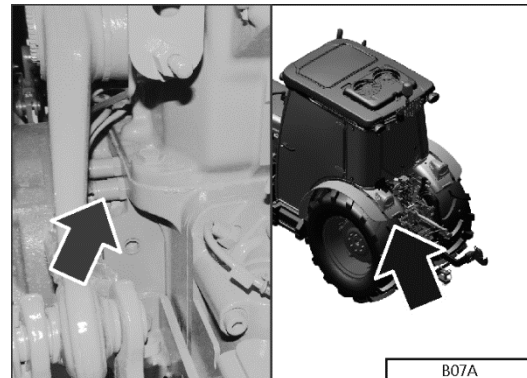


B07B - 540 PTO speed selector switch

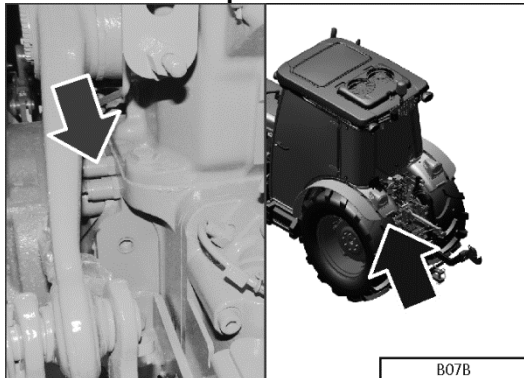 


B08 - Mechanical PTO switch

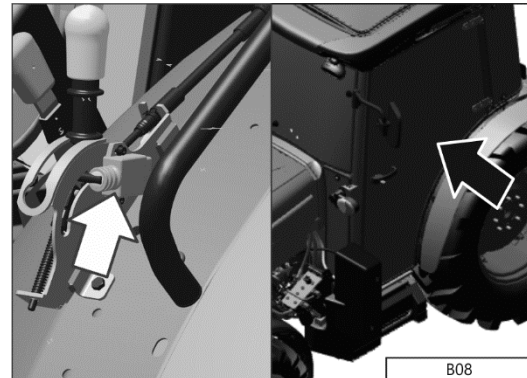 


B31 - Trailer brake pressure sensor

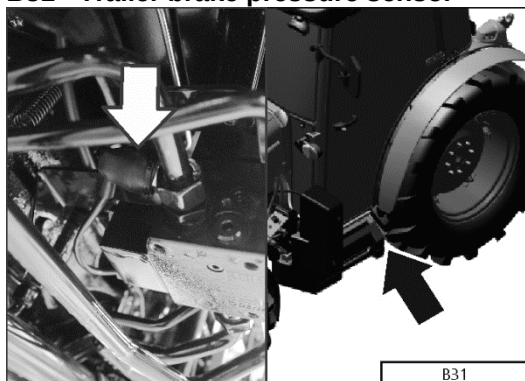 


B36 - Neutral start switch

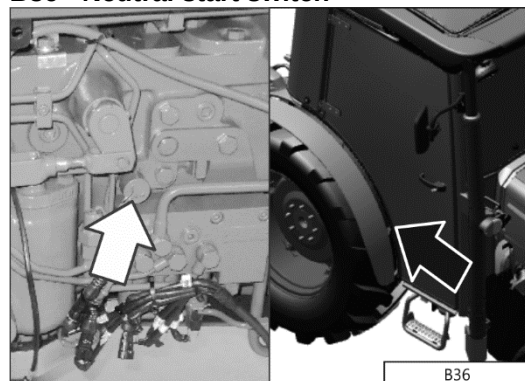 


B69 - Brakes oil level switch

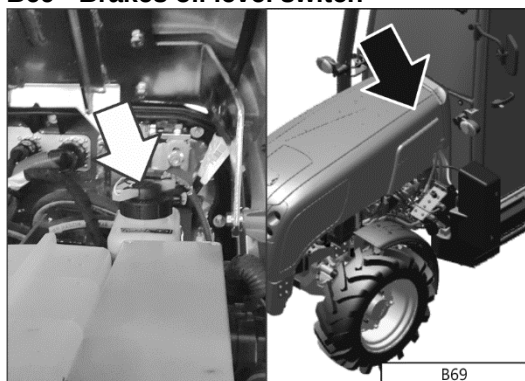 


B112L - LHS brake pedal switch

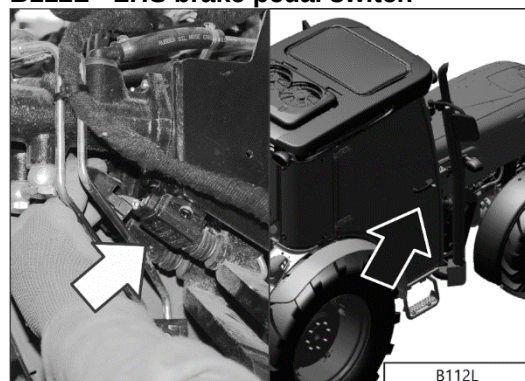 


B112R - RHS brake pedal switch

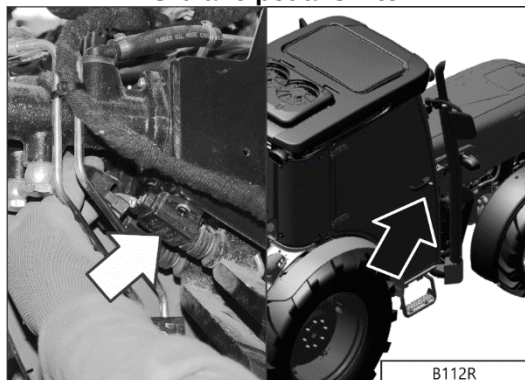 


B200 - Electronic hitch position sensor

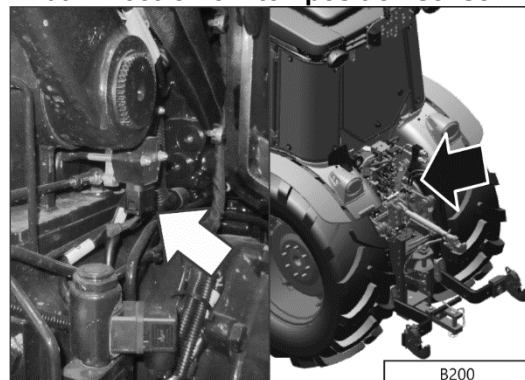 


B201 - Electronic hitch draft sensor

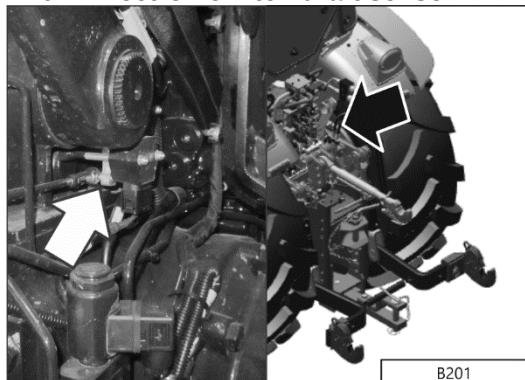 


B350 - PTO pressure switch

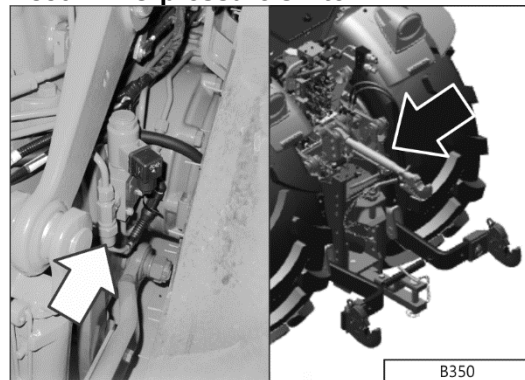 


B501 - Lambda sond

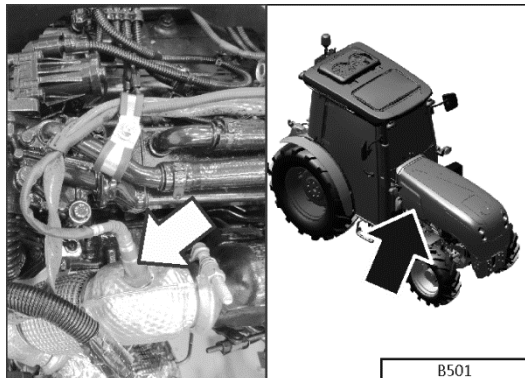 


B509 - Air temperature sensor

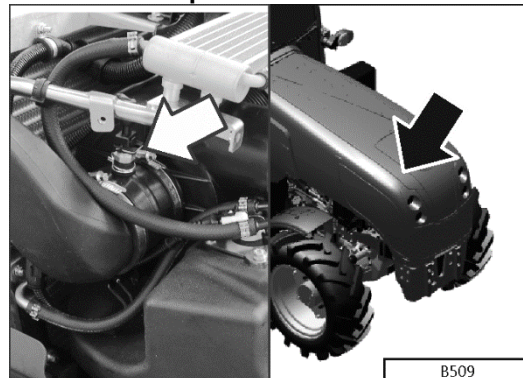 


B510 - Water in fuel switch

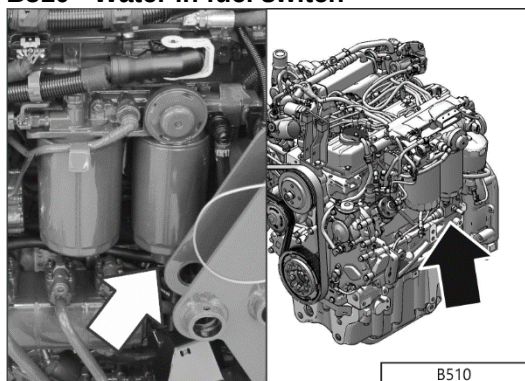 


B511 - Delta pressure sensor

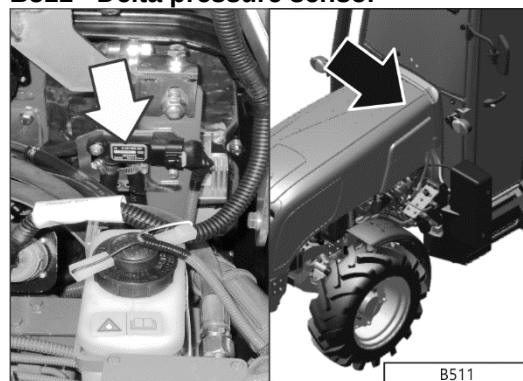 


B512 - Exhaust gas temperature sensor 1

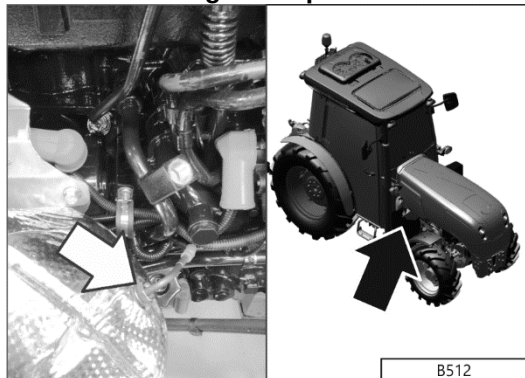 


B513 - Exhaust gas temperature sensor 2

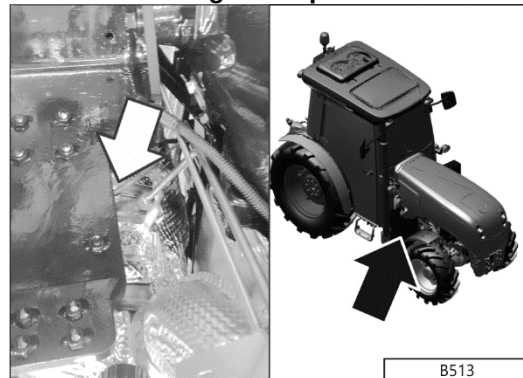 


B977 - IFAS position potentiometer

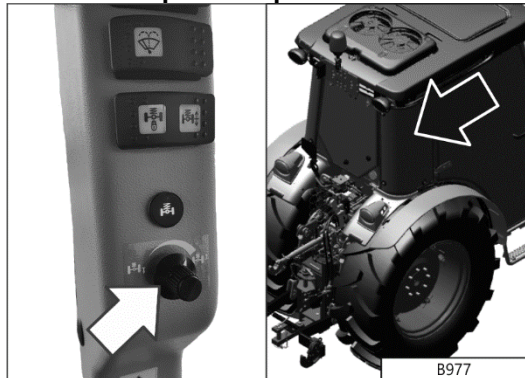 


B978 - IFAS position sensor

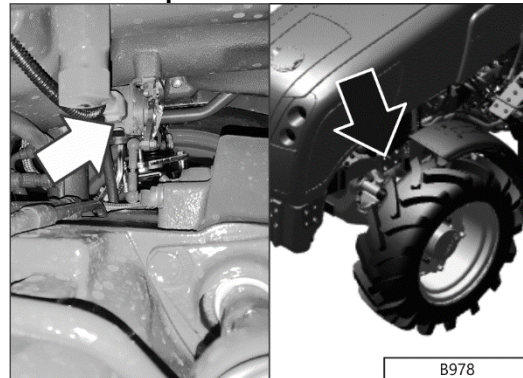 


B979 - Steering angle sensor

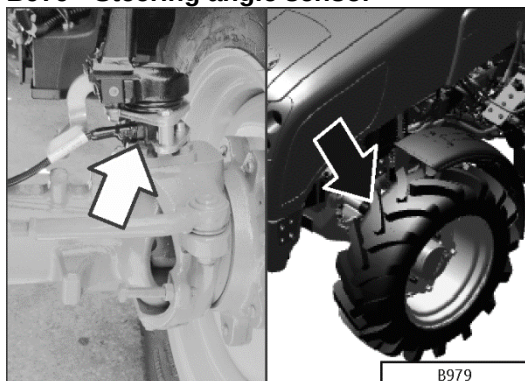 


B981 - Flow regulator finger 2

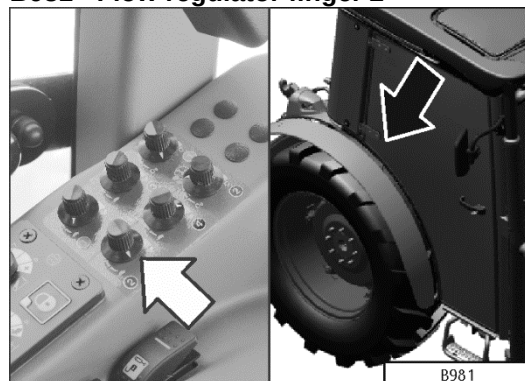 


B982 - Time setpoint finger 2

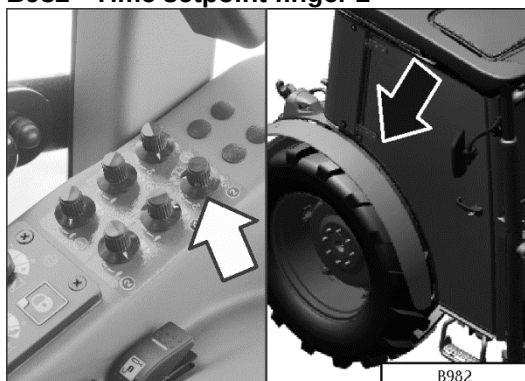 


B983 - Flow regulator joy X axis

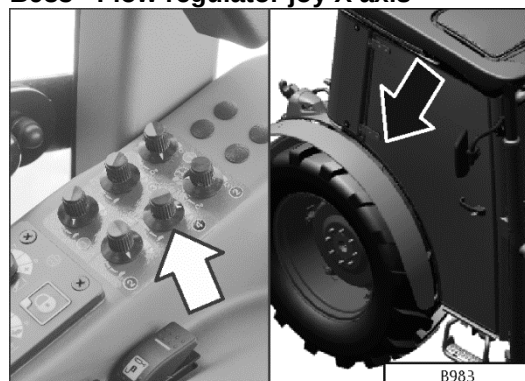 


B984 - Flow regulator joy Y axis

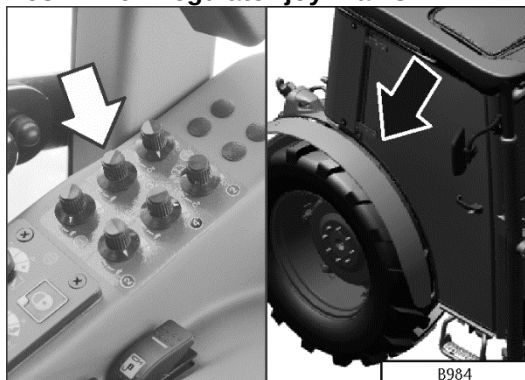 


B985 - Flow regulator finger 1

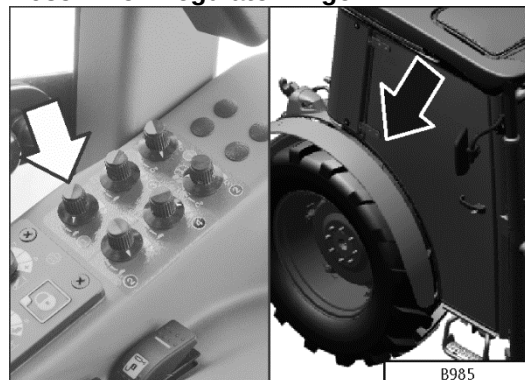 


B986 - Time setpoint finger 1

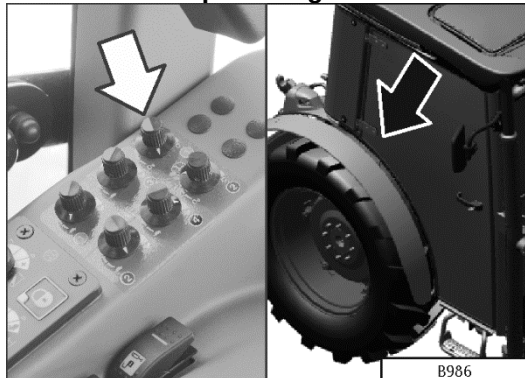 


B987 - Diff-lock pressure switch

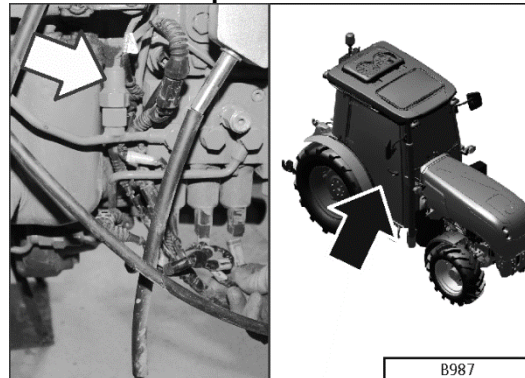 


B988 - 4WD pressure switch

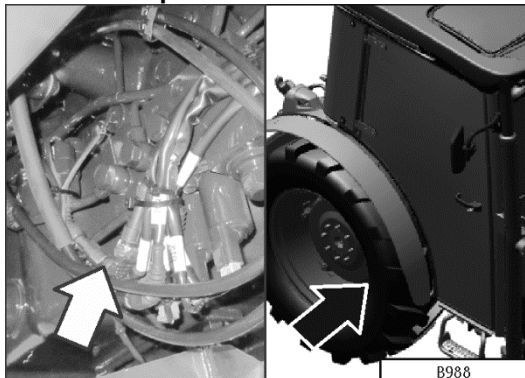 


B990 - PTO signal 1

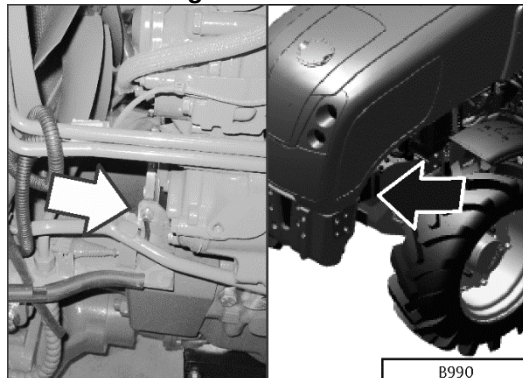 


B998 - Hand throttle sensor

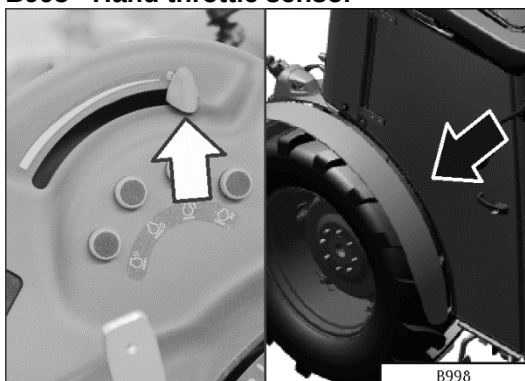 


B999 - Foot throttle sensor

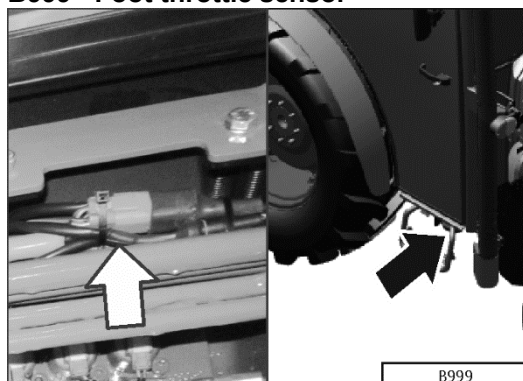 


E01A - RHS Low beam

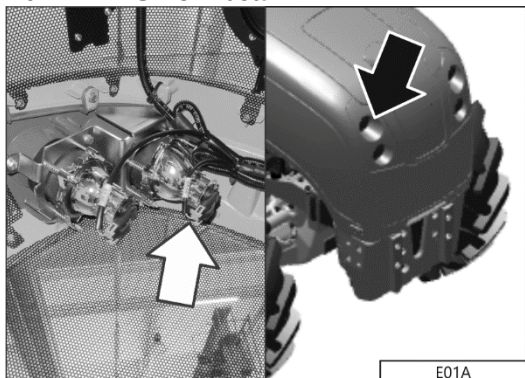 


E01B - RHS High beam

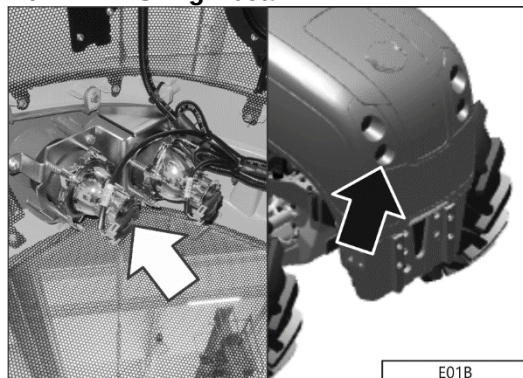 


E02A - LHS Low beam

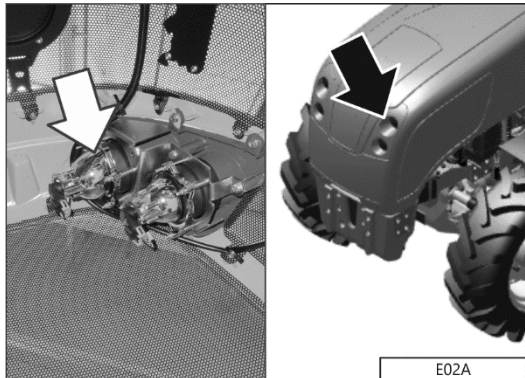 


E02B - LHS High beam

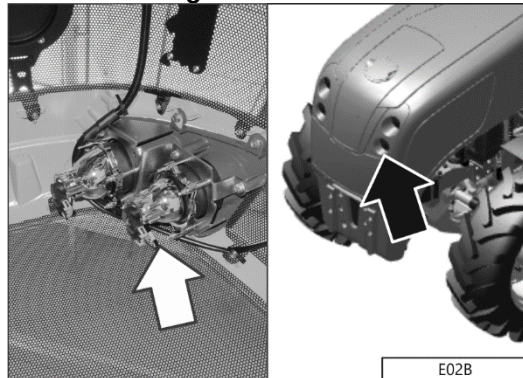 


E03 - RH grabrail light

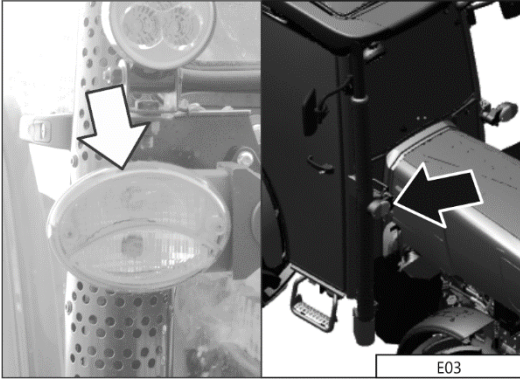 


E04 - LH grabrail light

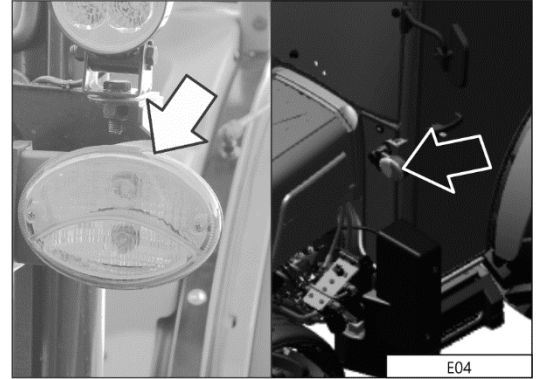 


E05 - Cigarette lighter

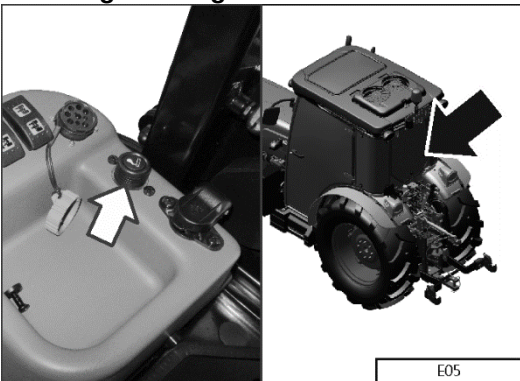 


E07 - Front LH H4 light

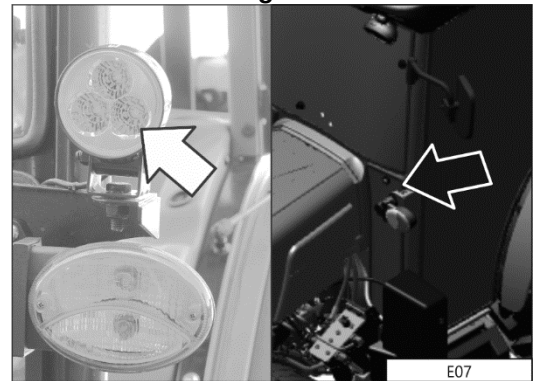 


E08 - Front RH H4 light

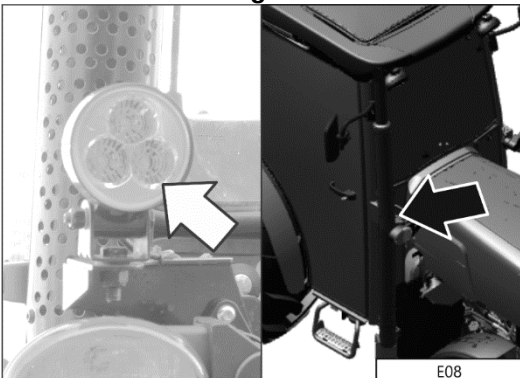 


E11.1 - Rear LH roof work light

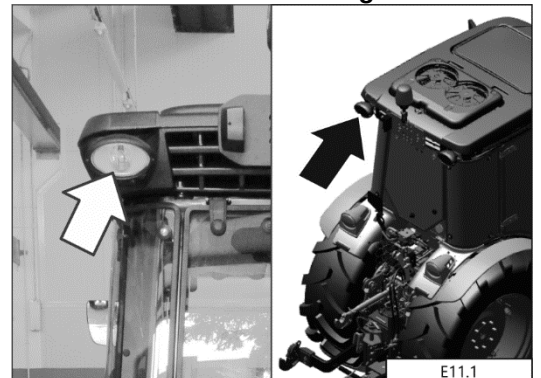 


E11.2 - Rear RH roof work light

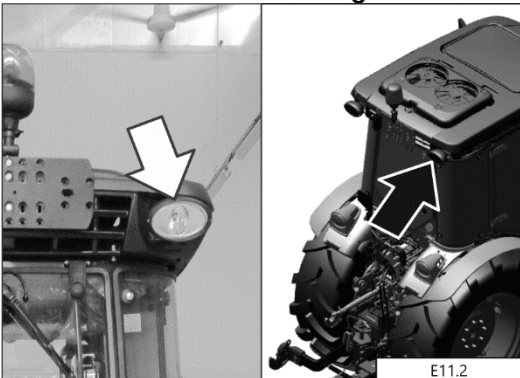 


E12 - Internal light

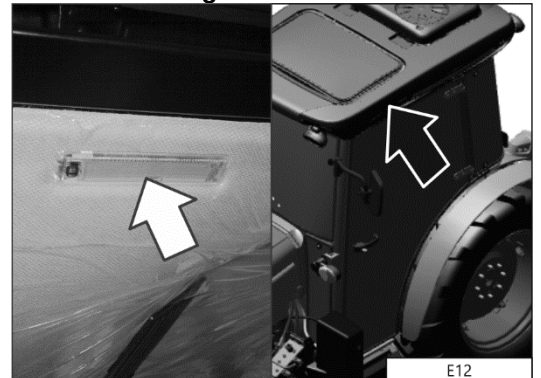 


E13 - Rear LH road light

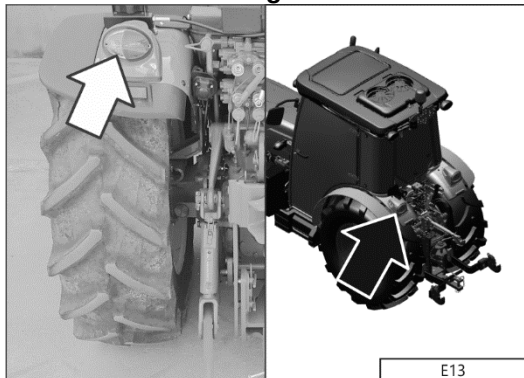 


E14 - Rear RH road light

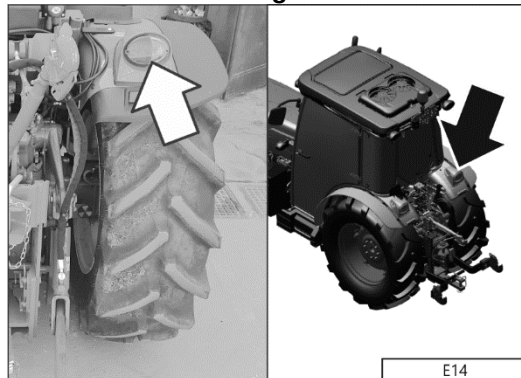 


E18.1 - Front LH roof work light

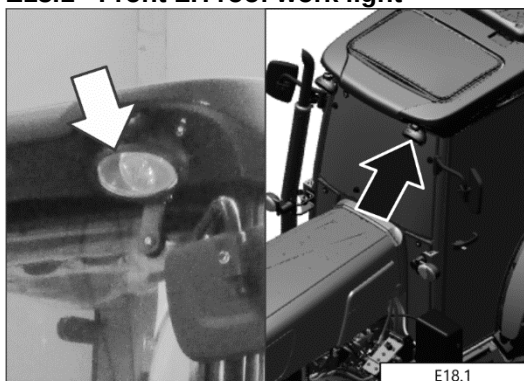 


E18.2 - Front RH roof work light

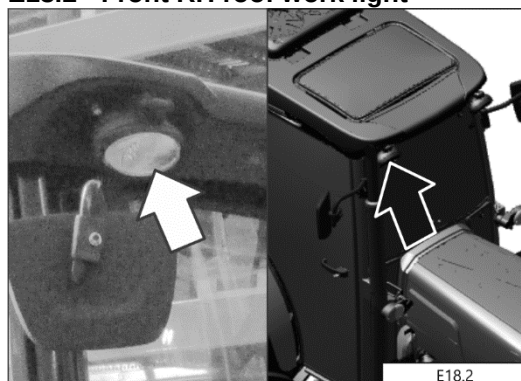 


E21 - Licence plate light

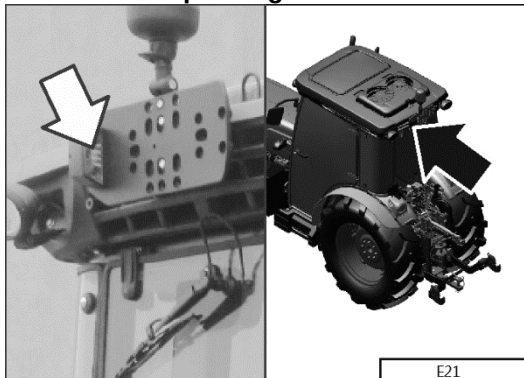 


E27 - Beacon light

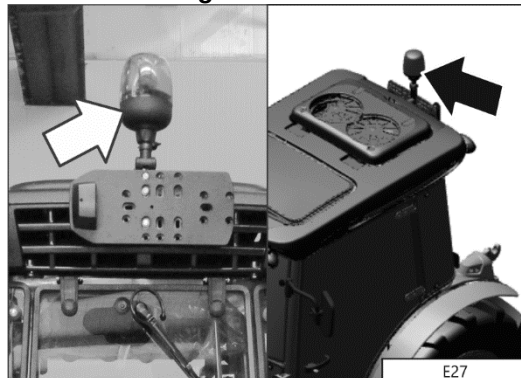 


E997 - Front LH H3 light

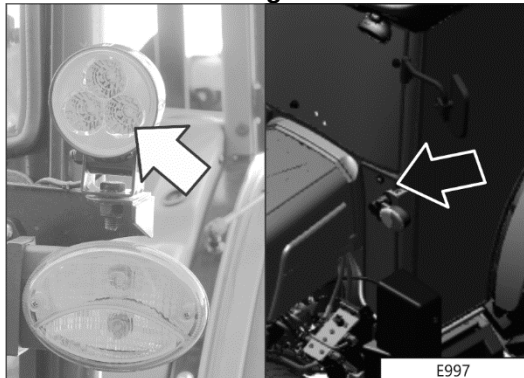 


E998 - Front RH H3 light

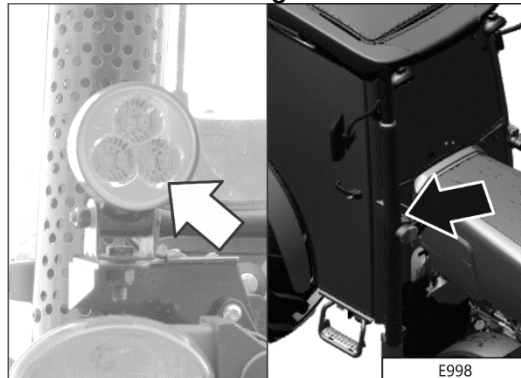 


E999 - Courtesy light

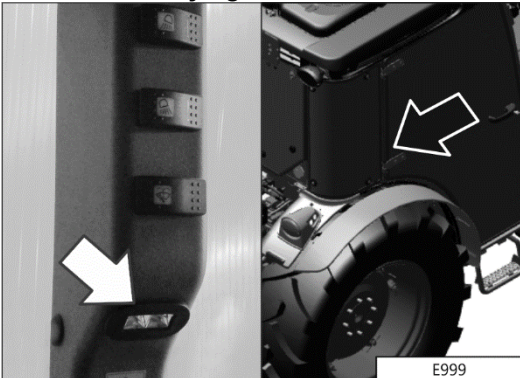 


F01 - Glow plug fuse

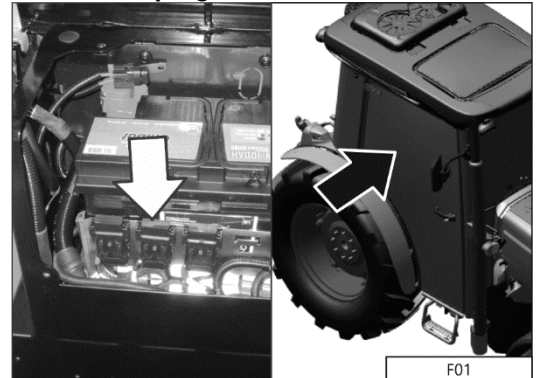 


F02 - Engine ECU fuse

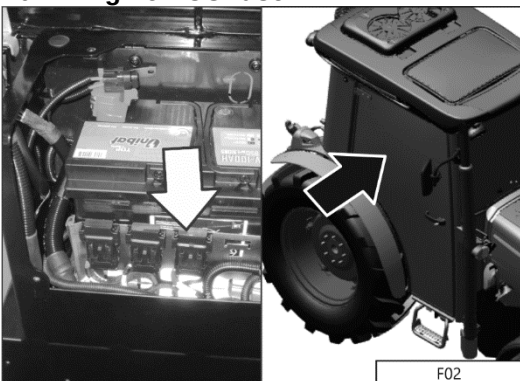 


F03 - Main fuse

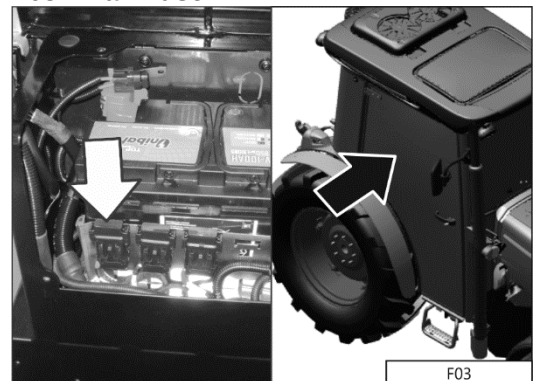 


F05 - IFAS main fuse (15A)

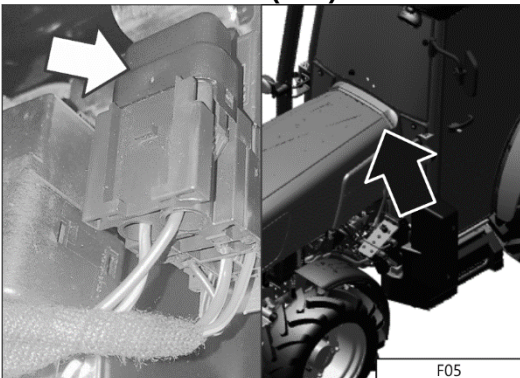 


G01 - Battery

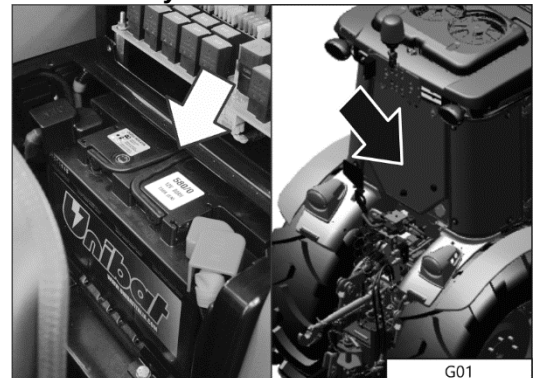 


G02 - Alternator

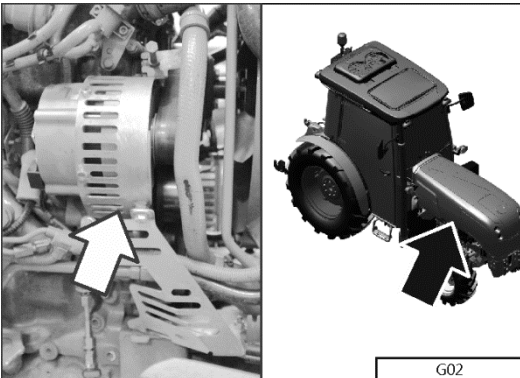 


H01 - Claxon

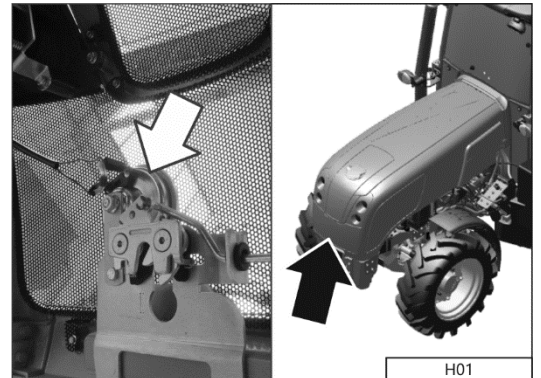 


H80 - Trailer brake switch

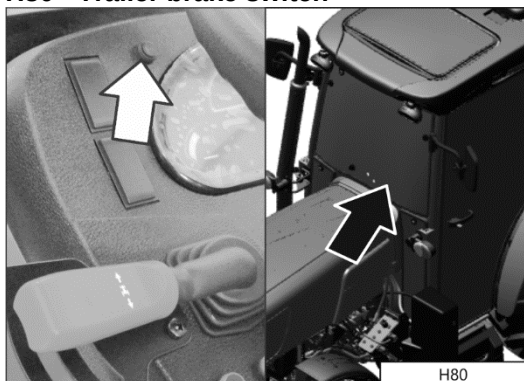 


H81 - IFAS led

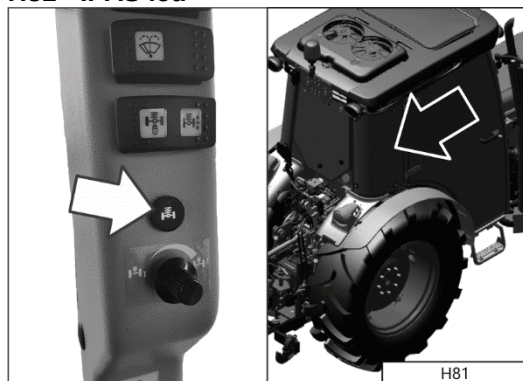 


K01 - Starter relay

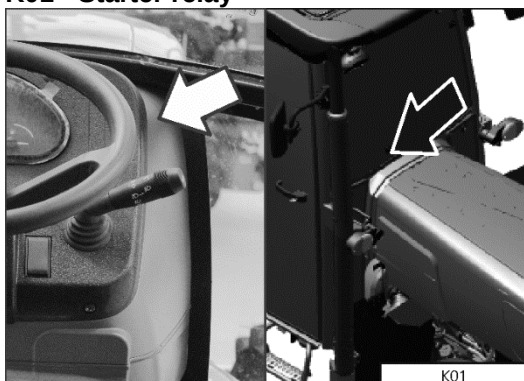 


K08 - Flasher unit

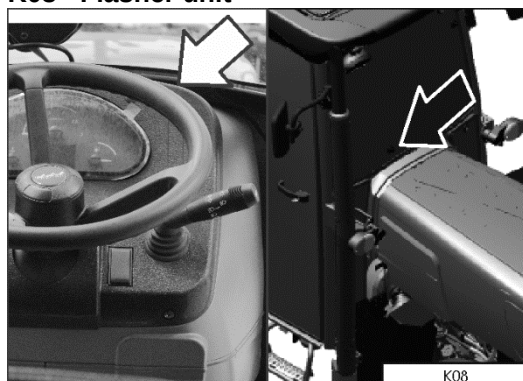 


K993 - IFAS relay

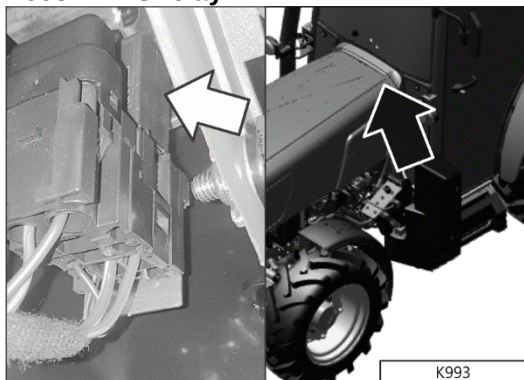 


M01 - Starter motor

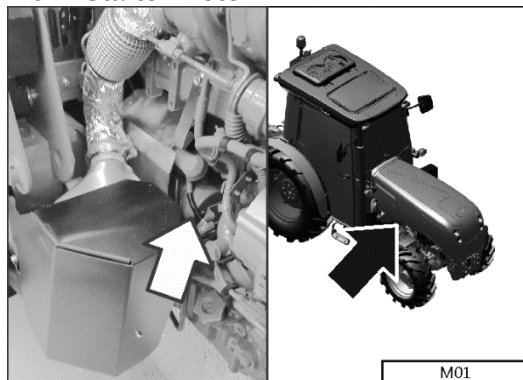 


M02 - AC compressor clutch

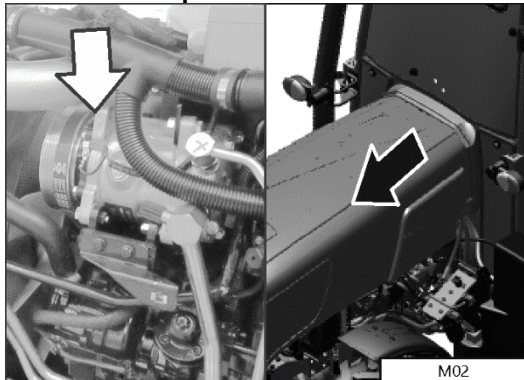 


M03 - Front wiper motor

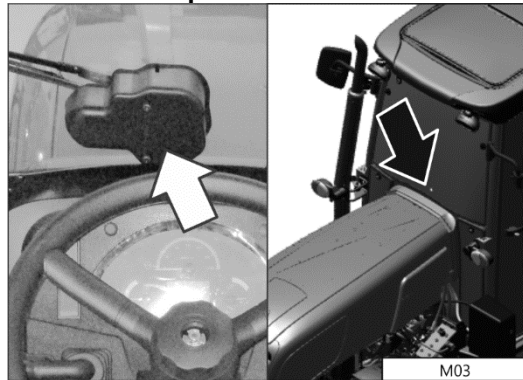 


M04 - Rear wiper motor

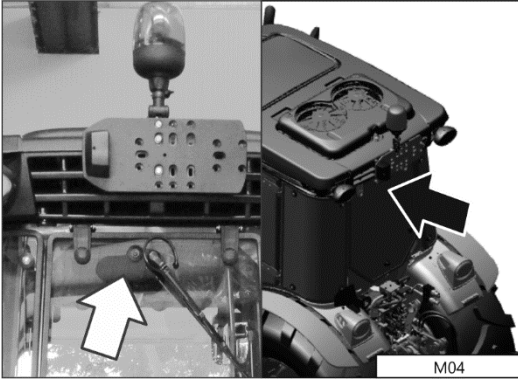 


M05 - Wiper pump

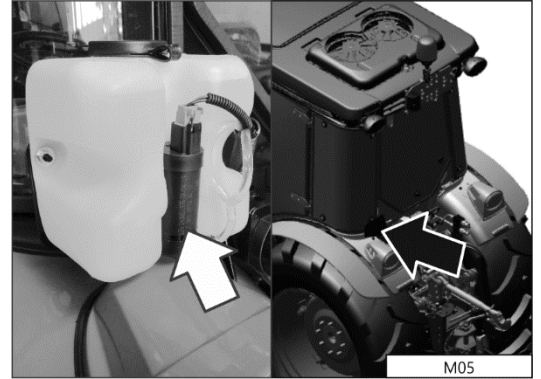 


M06 - Air seat

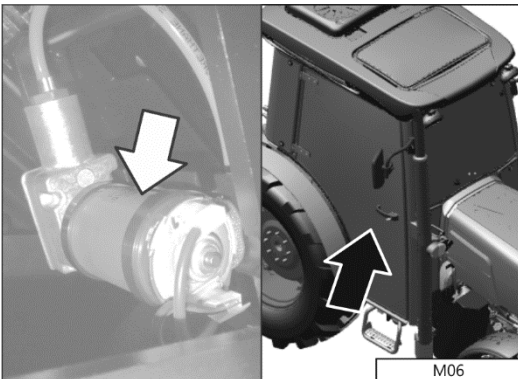 


M07 - AC blower

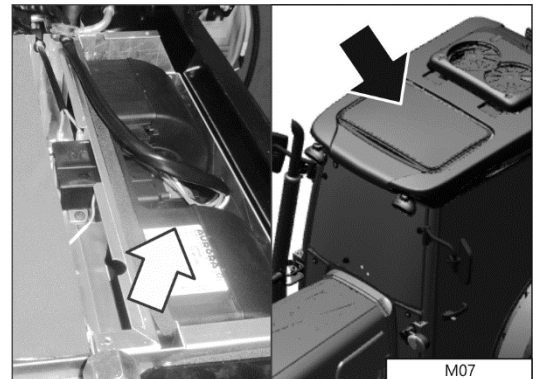 


M08 - RH fan motor

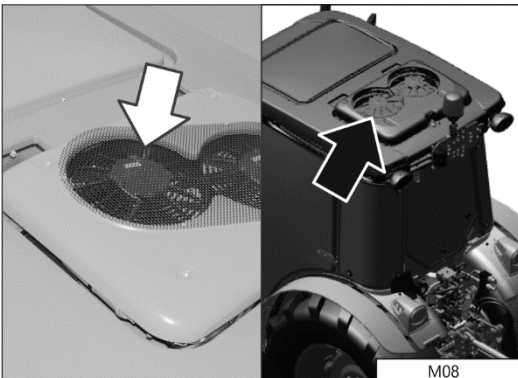 


M09 - LH fan motor

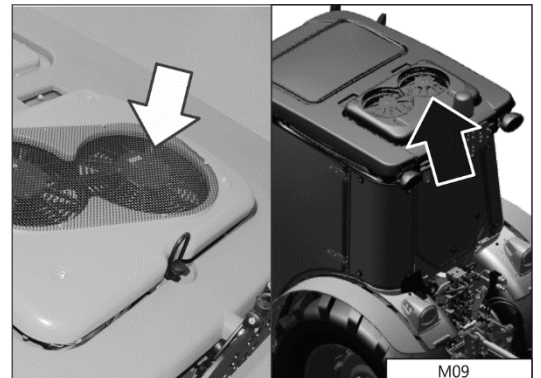 


PCB

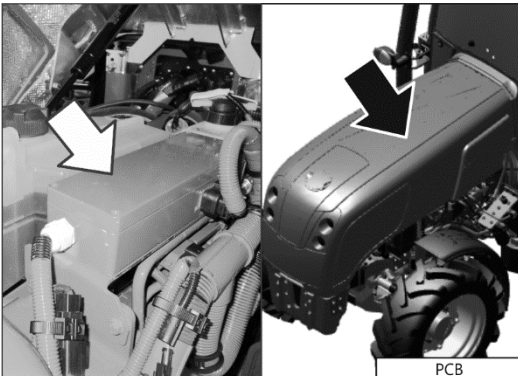 


R505 - Fuel filter heating

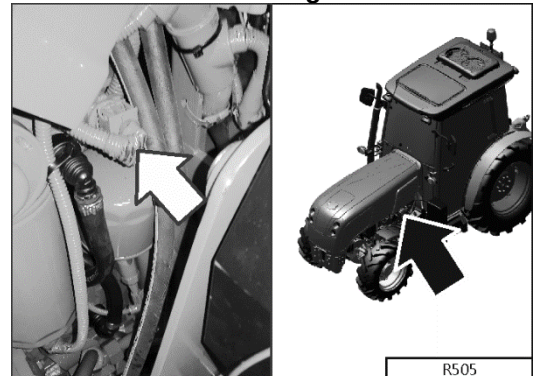 


S01 - Ignition switch

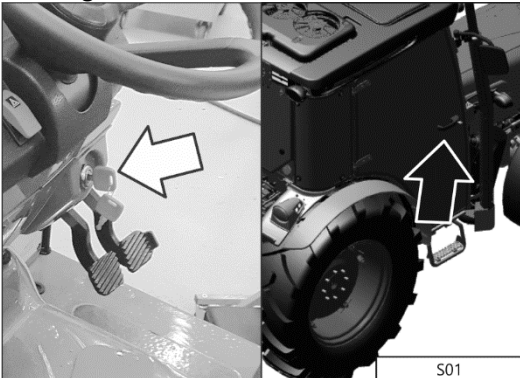 


S09 - Blinker lever

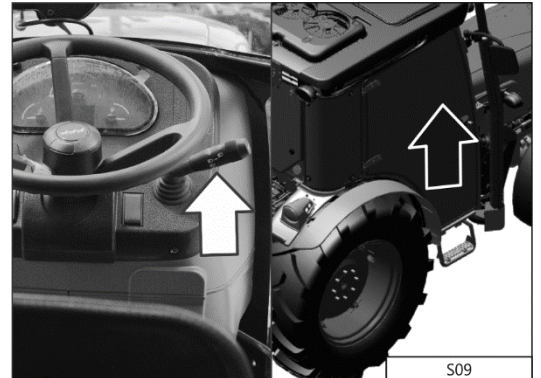 


S11 - H4 lights switch

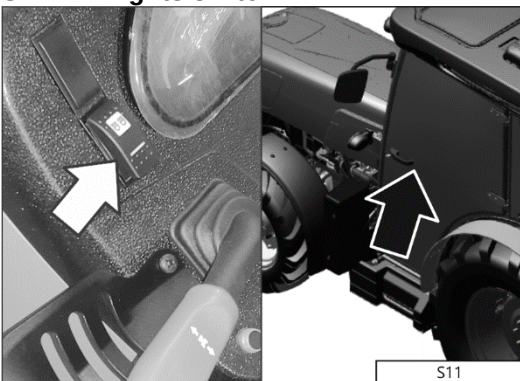 


S15 - Front wiper switch

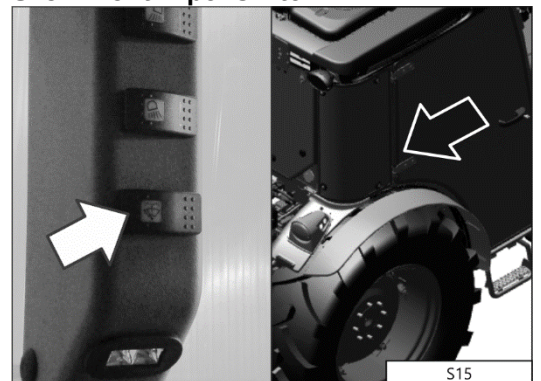 


S21A - GD PTO selector switch

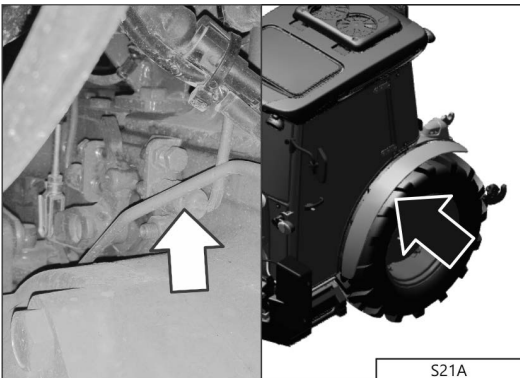 


S21B - DIR PTO selector switch

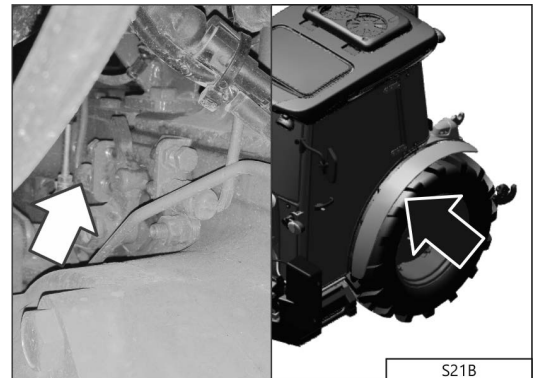 


S22 - Diff-lock switch

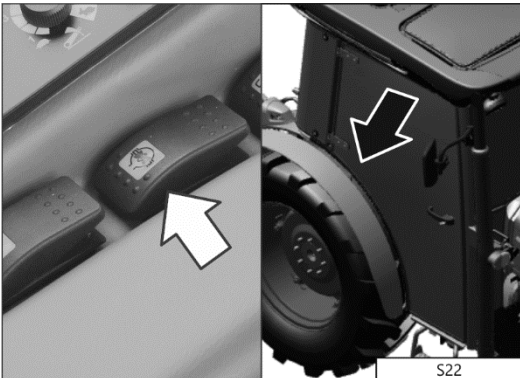 


S36 - Beacon switch

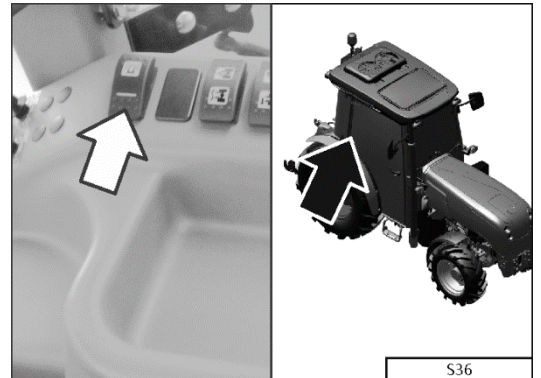 


S40 - Seat switch

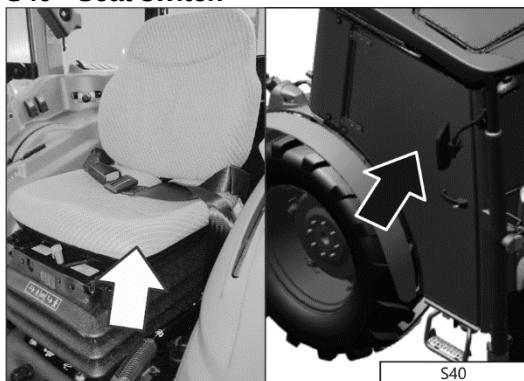 


S63 - 4WD switch

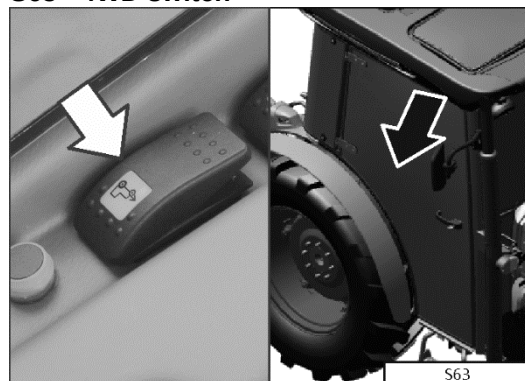 


S68 - RHS Remote control switch UP

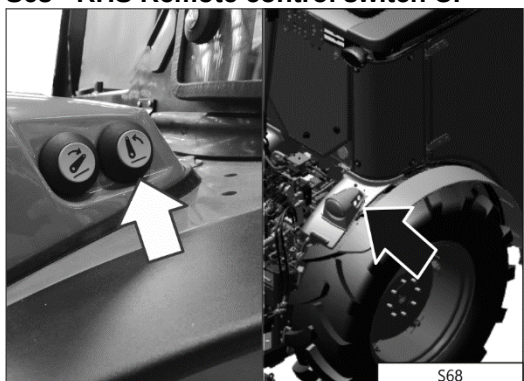 


S69 - RHS Remote control switch DOWN

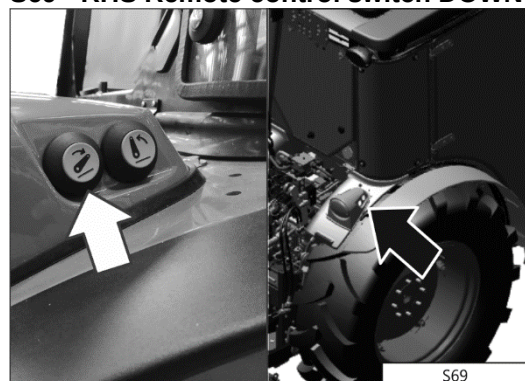 


S70 - LHS Remote control switch UP

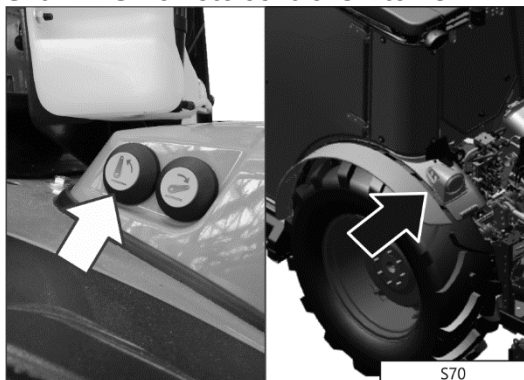 


S71 - LHS Remote control switch DOWN

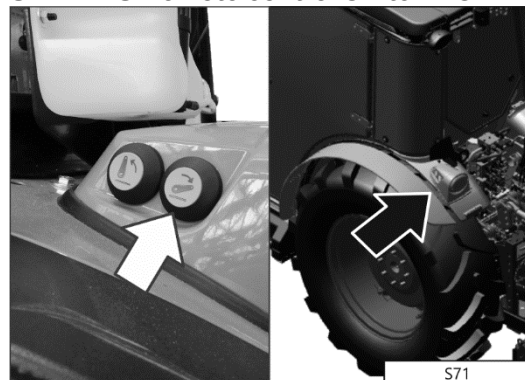 


S72 - Clutch pedal end stroke switch

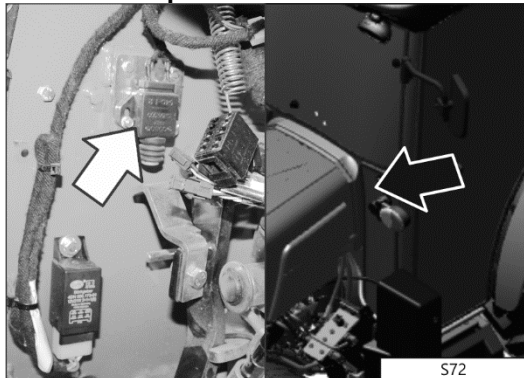 


S92A - Front work lights switch

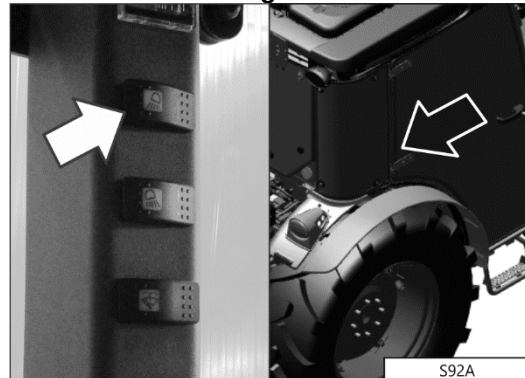 


S92B - Rear work lights switch

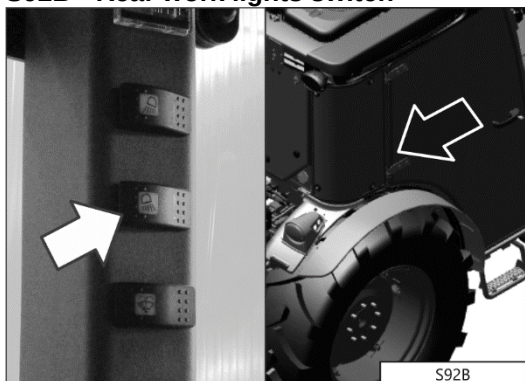 


S106 - Hazard switch

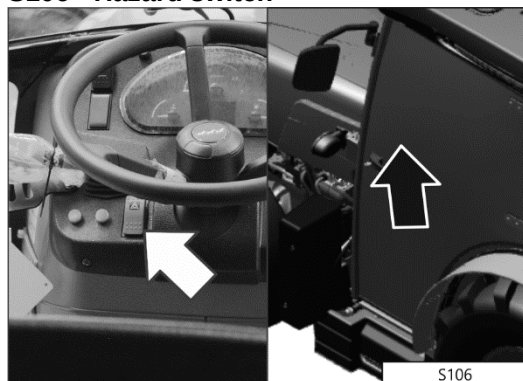 


S200 - End stroke switch

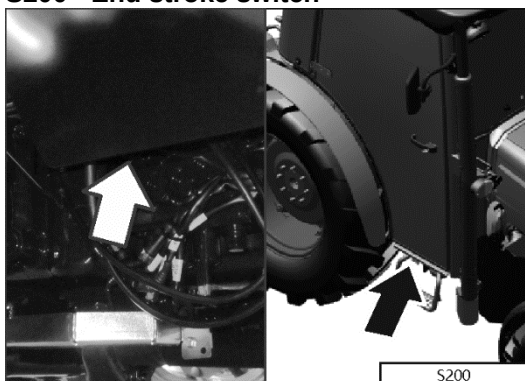 


S300 - HI-LO switch

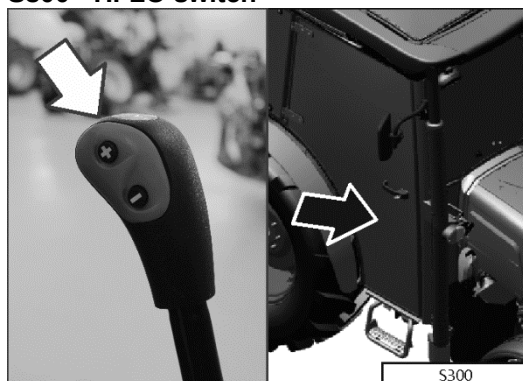 


S990 - Battery cutt-off switch

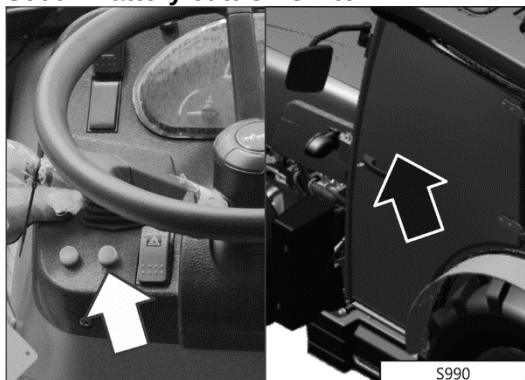 


S936 - 4WD steering function

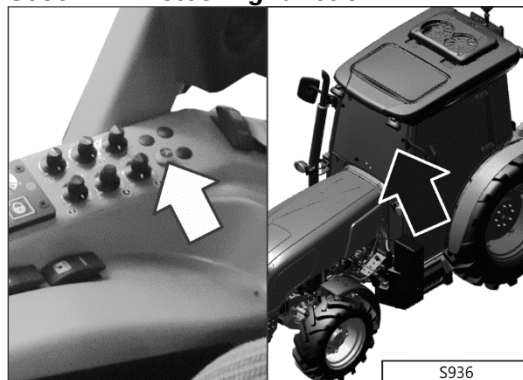 


S984 - IFAS mode switch

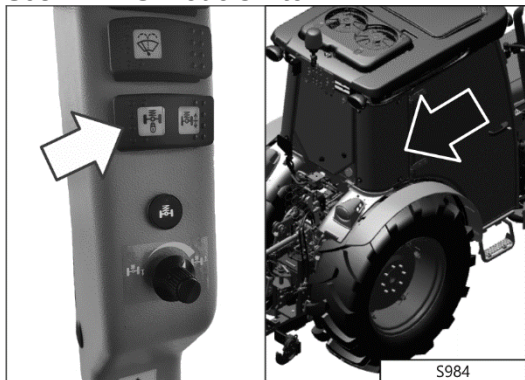 


S985 - IFAS calibration button

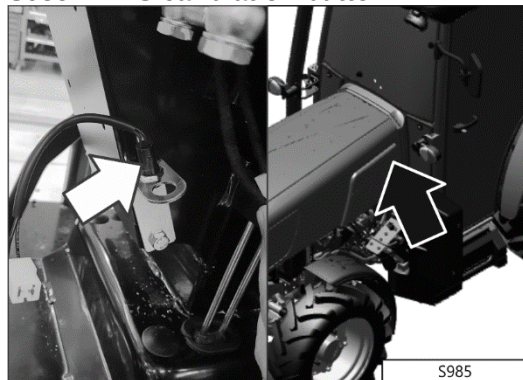 


S987 - RIGID-FLOTT switch

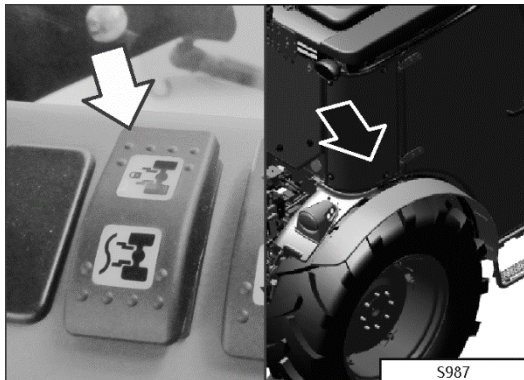 


S988 - LEFT-RIGHT switch

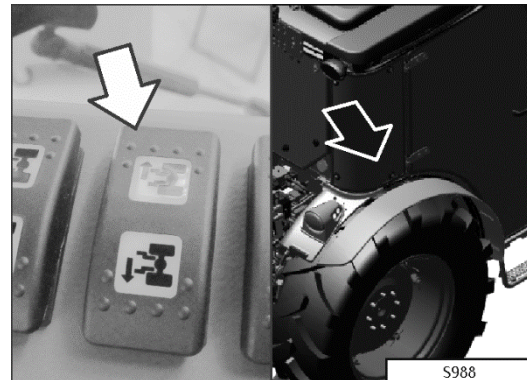 


S989 - UP-DOWN switch

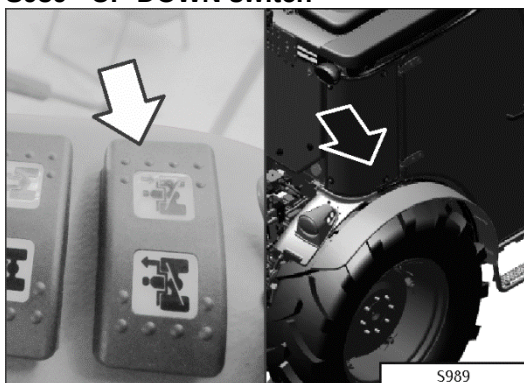 


S990 - Button menu

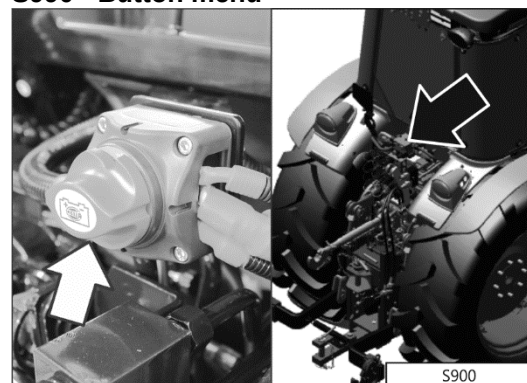 


S991 - Button set

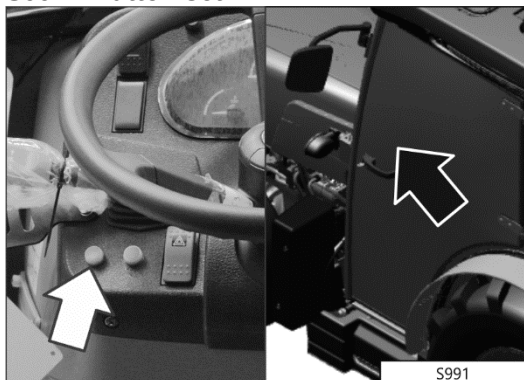 


S992A - Cruise control MEM1

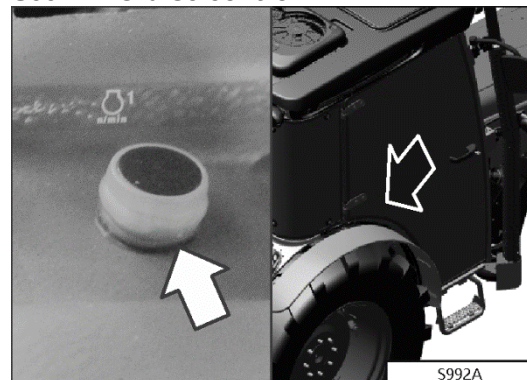 


S992B - Cruise control MEM2

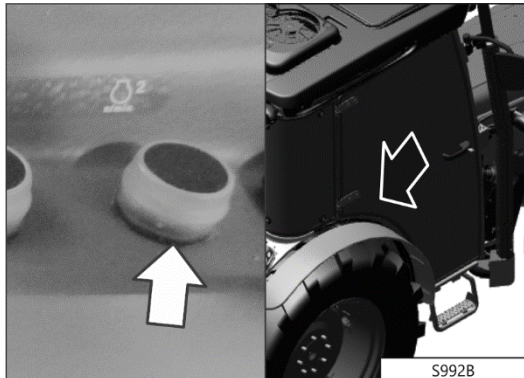 


S993 - Cruise control DW

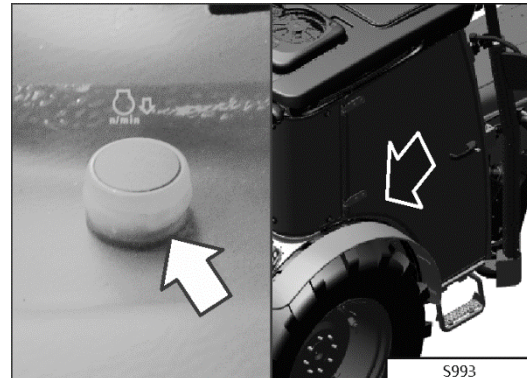 


S994 - Cruise control UP

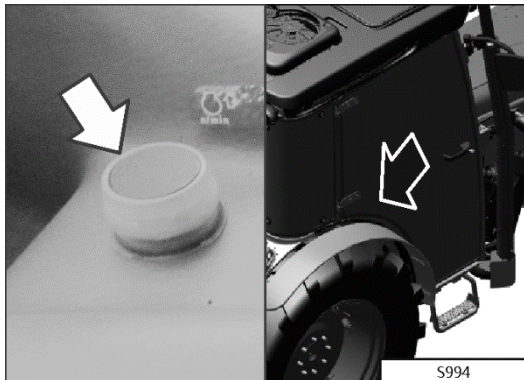 


S995 - E-SCVS safety switch

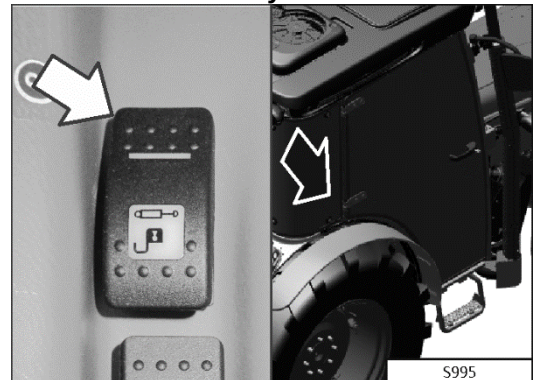 


S996 - Finger tip 1

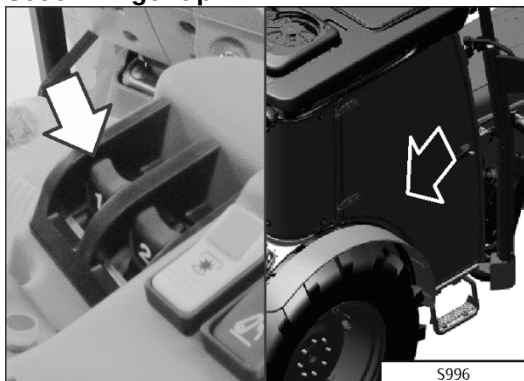 


S997 - Finger tip 2

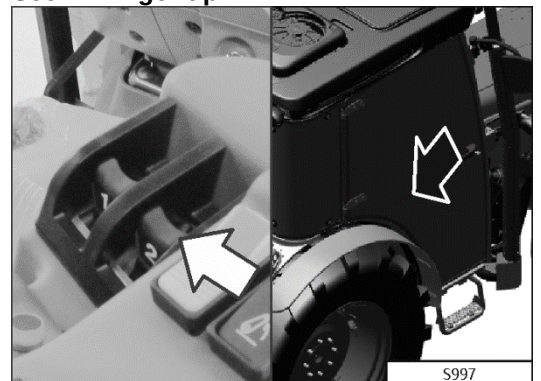 


S998 - Joystick

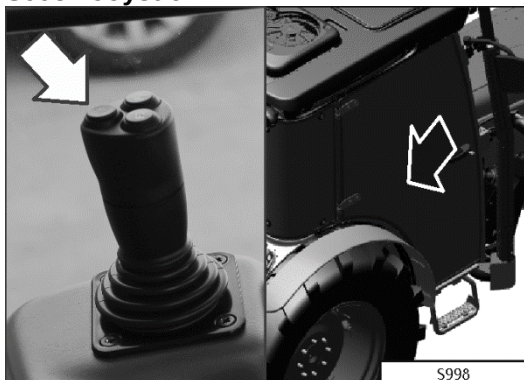 


S999 - Front PTO switch

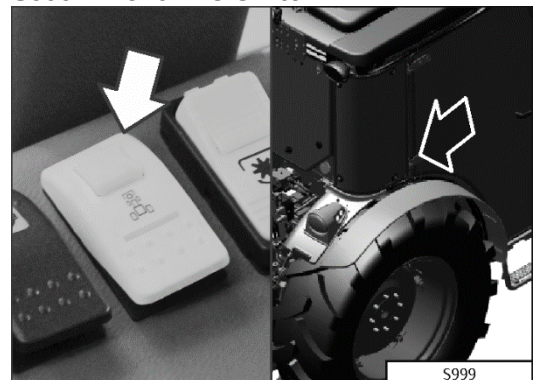 


X42 - 3 pole socket

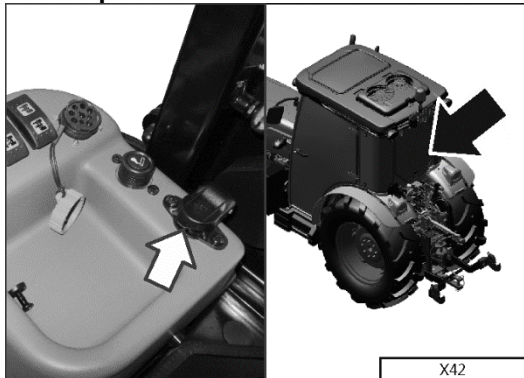 


Y03 - 4WD solenoid valve

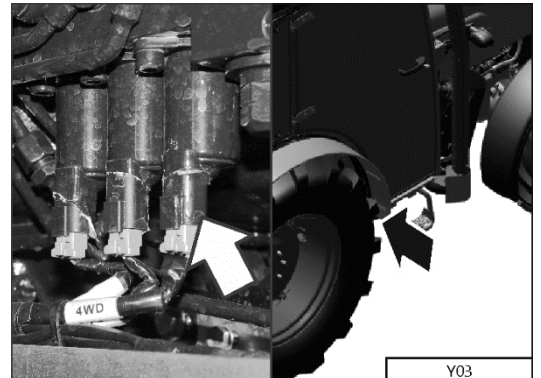 


Y05 - Diff-lock solenoid valve

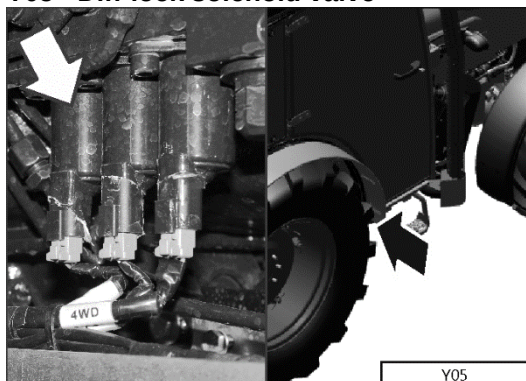 


Y31 - Trailer brake solenoid valve

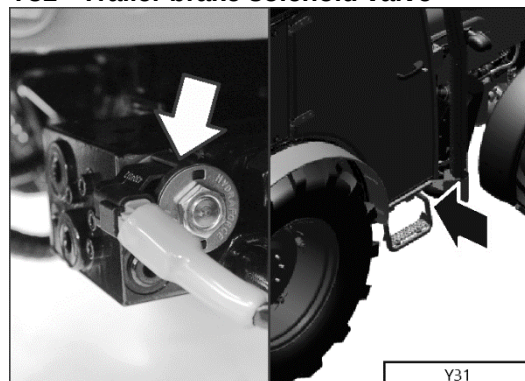 

 
Y200 - Electronic hitch solenoid valve UP

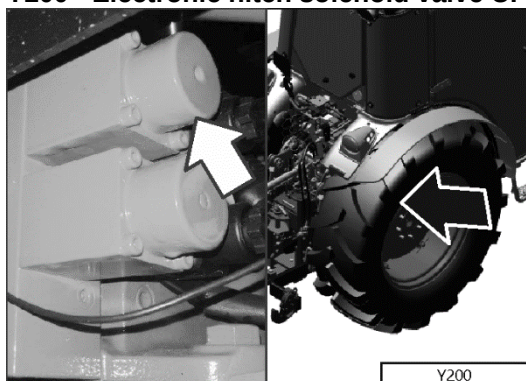

 
Y201 - Electronic hitch solenoid valve DOWN

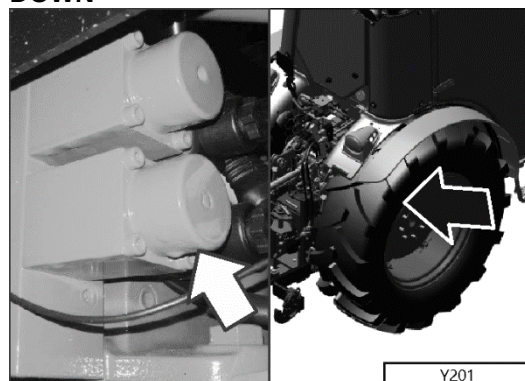


Y350 - PTO safety solenoid valve

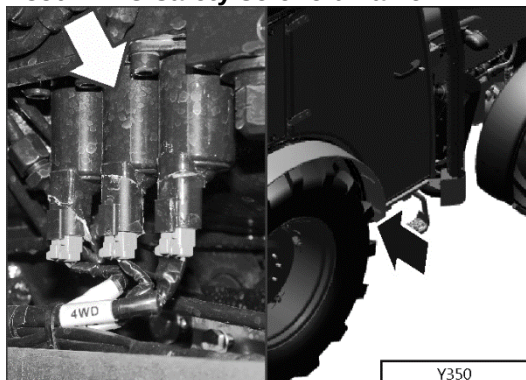 


Y982 - IFAS rod lock out solenoid valve

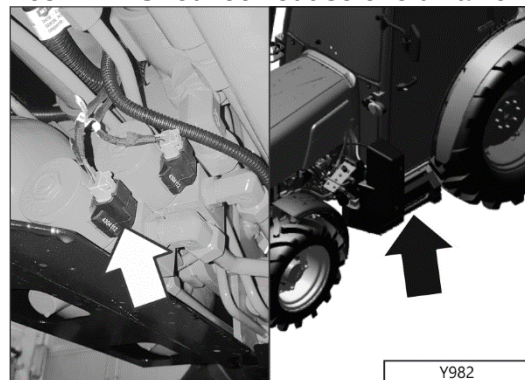 

 
Y983 - IFAS piston lock out solenoid valve

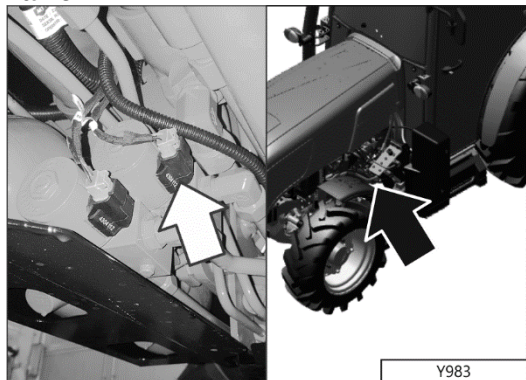


Y984 - IFAS axle lower solenoid valve

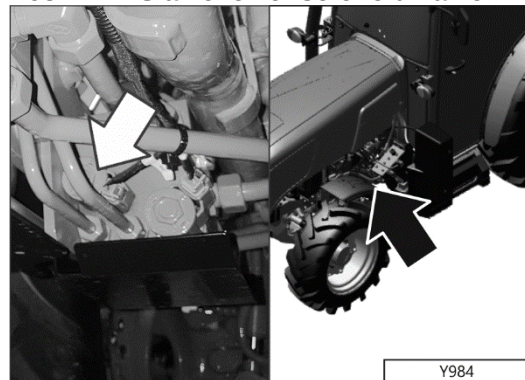 


Y985 - IFAS axle raise solenoid valve

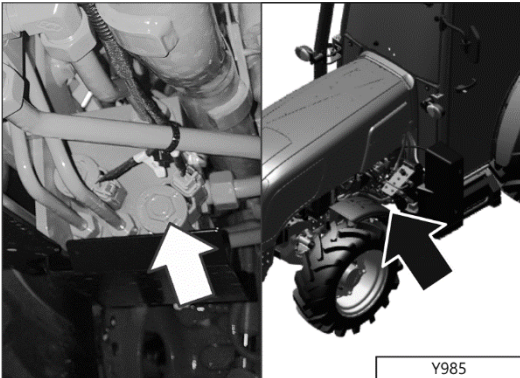 


Y986 - Deport solenoid valve 7

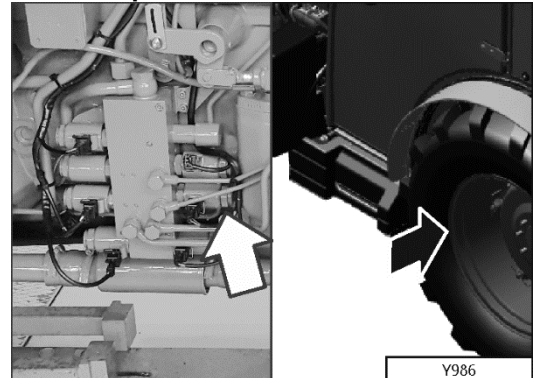 


Y987 - Deport solenoid valve 6

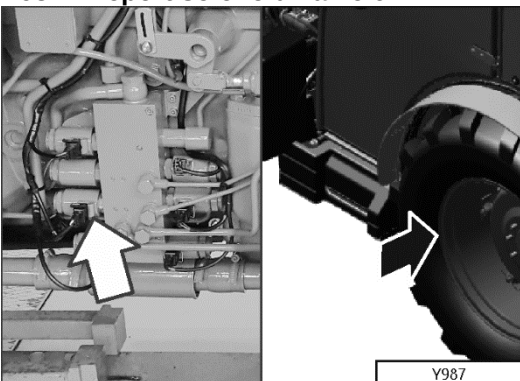 


Y988 - Deport solenoid valve 5

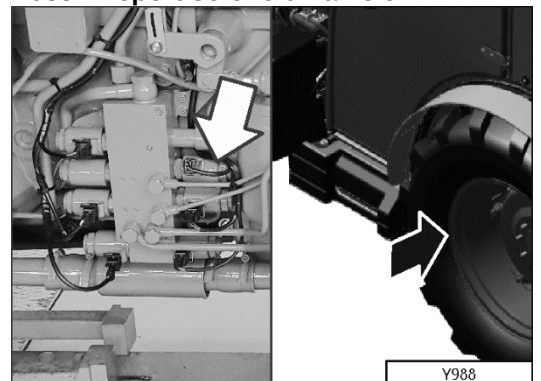 


Y989 - Deport solenoid valve 4

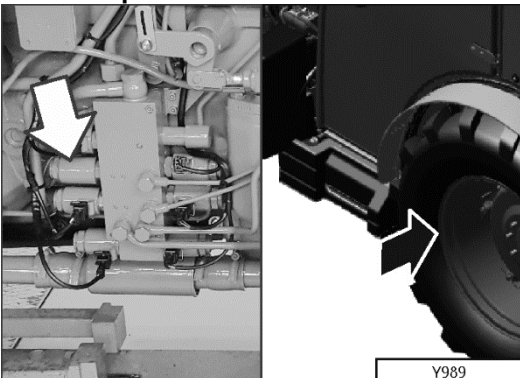 


Y990 - Deport solenoid valve 3

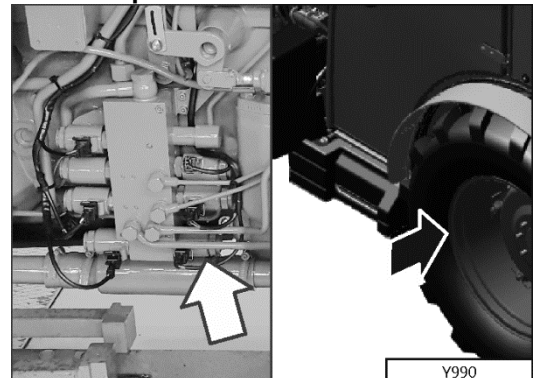 


Y991 - Deport solenoid valve 2

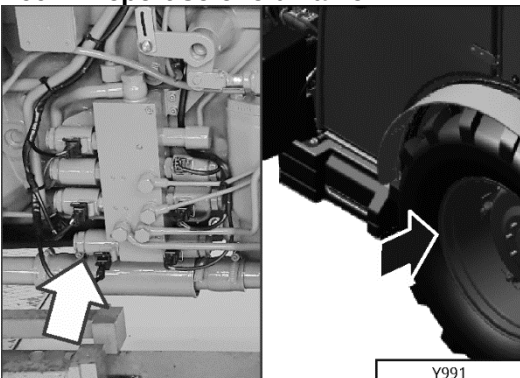 


Y992 - Deport solenoid valve 1

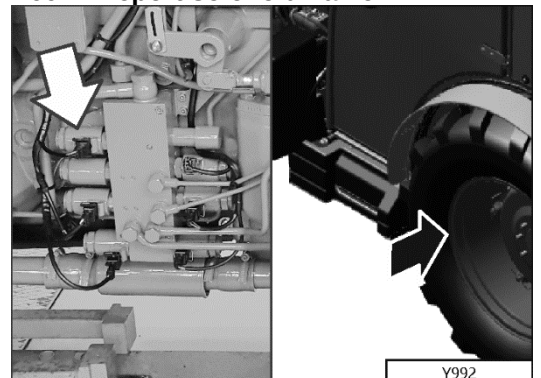 


Y993 - Safety solenoid valve

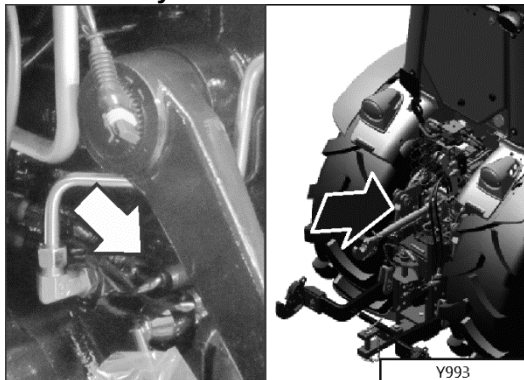 


Y994 - Priority solenoid valve

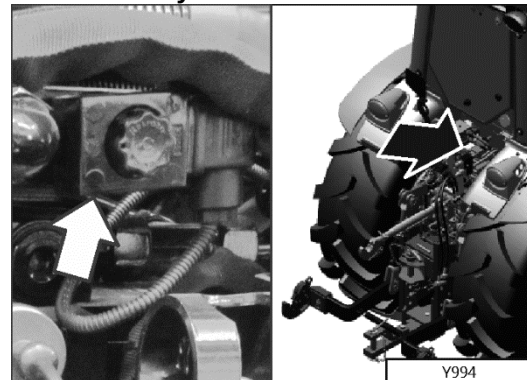 


Y995 - E-SCV valve 6

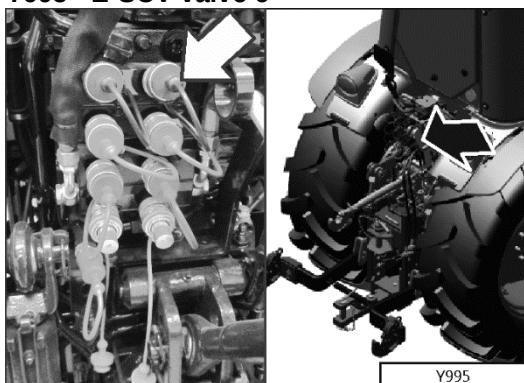 


Y996 - E-SCV valve 5

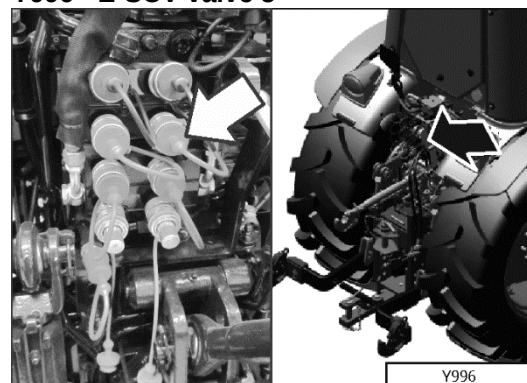 

Y997 - E-SCV valve 4

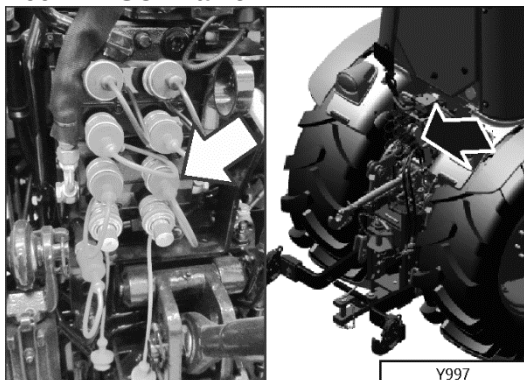 

Y998 - E-SCV valve 3

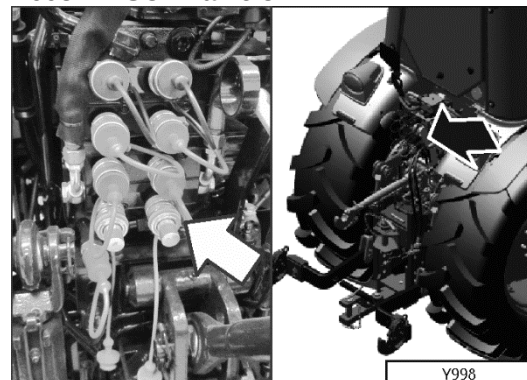 

Y999 - Front PTO solenoid valve

