 
 
 




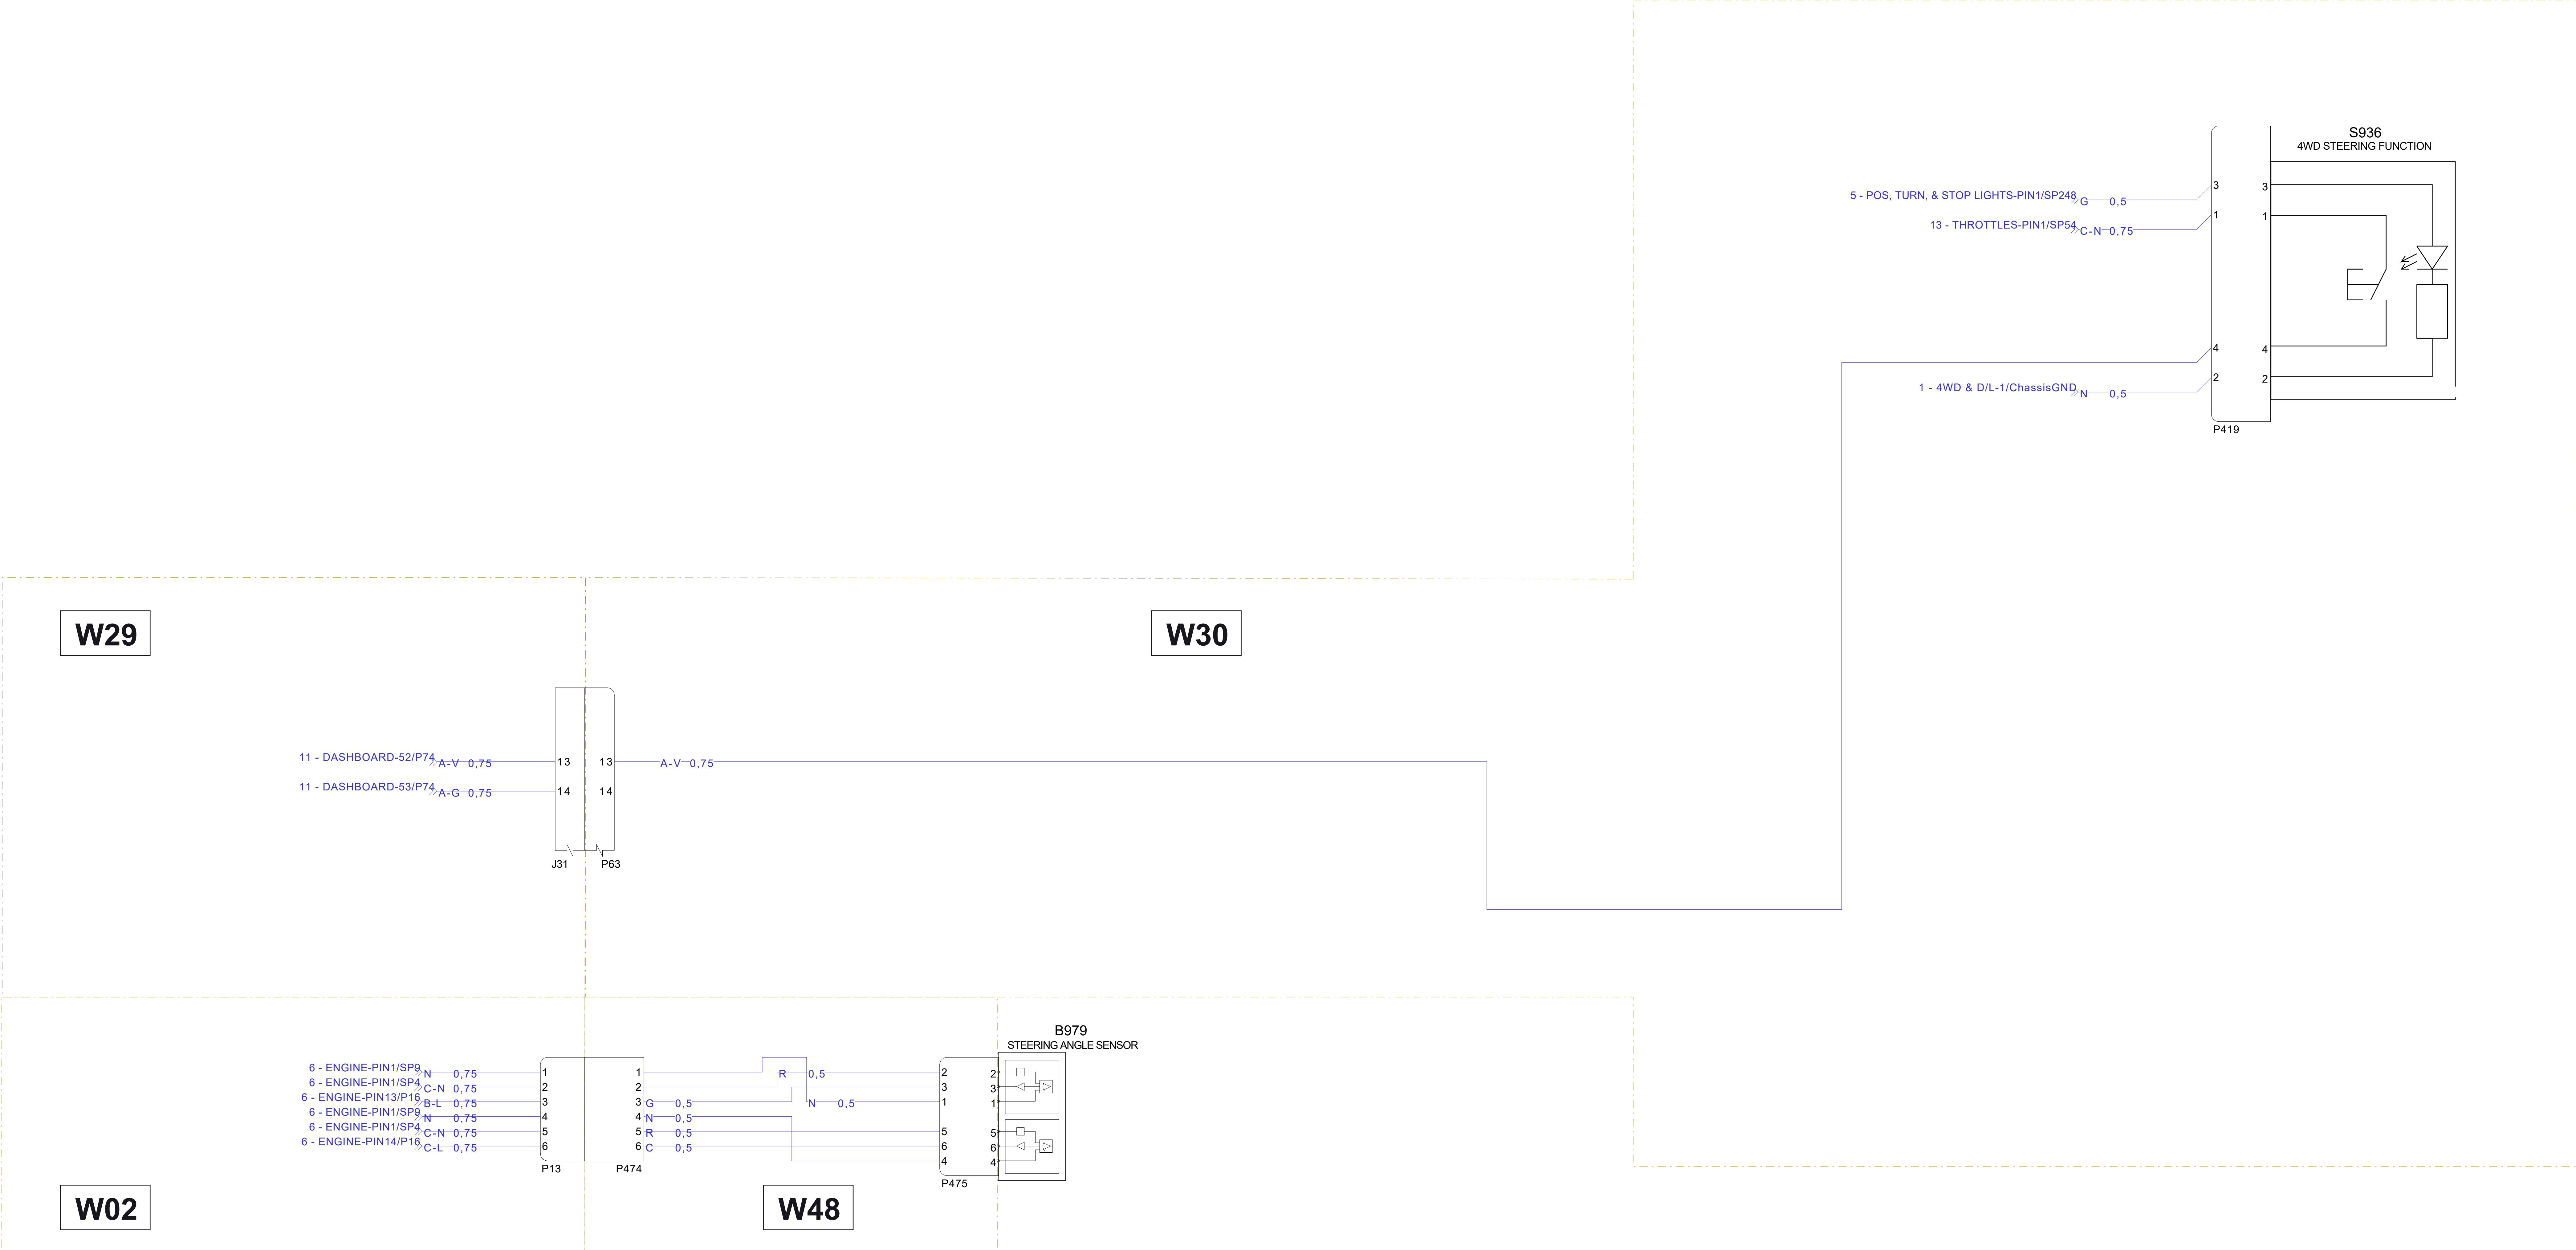

J31 - Connection to P63
P13 - Connection to P474
P419 - Connection to 4WD Steering function S936
P474 - Connection to P13
P475 - Connection to Steering angle sensor B979
P63 - Connection to J31

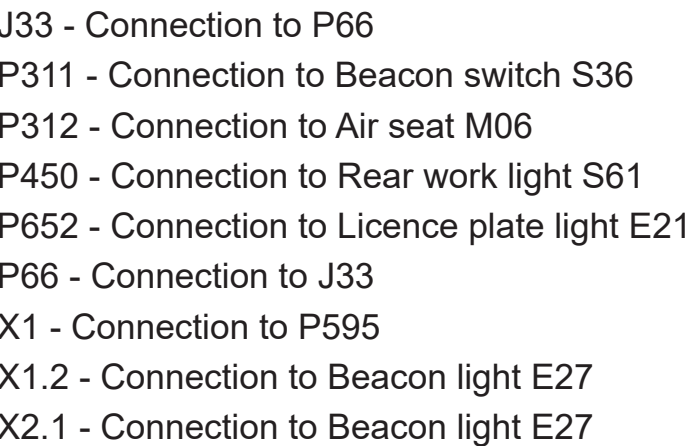

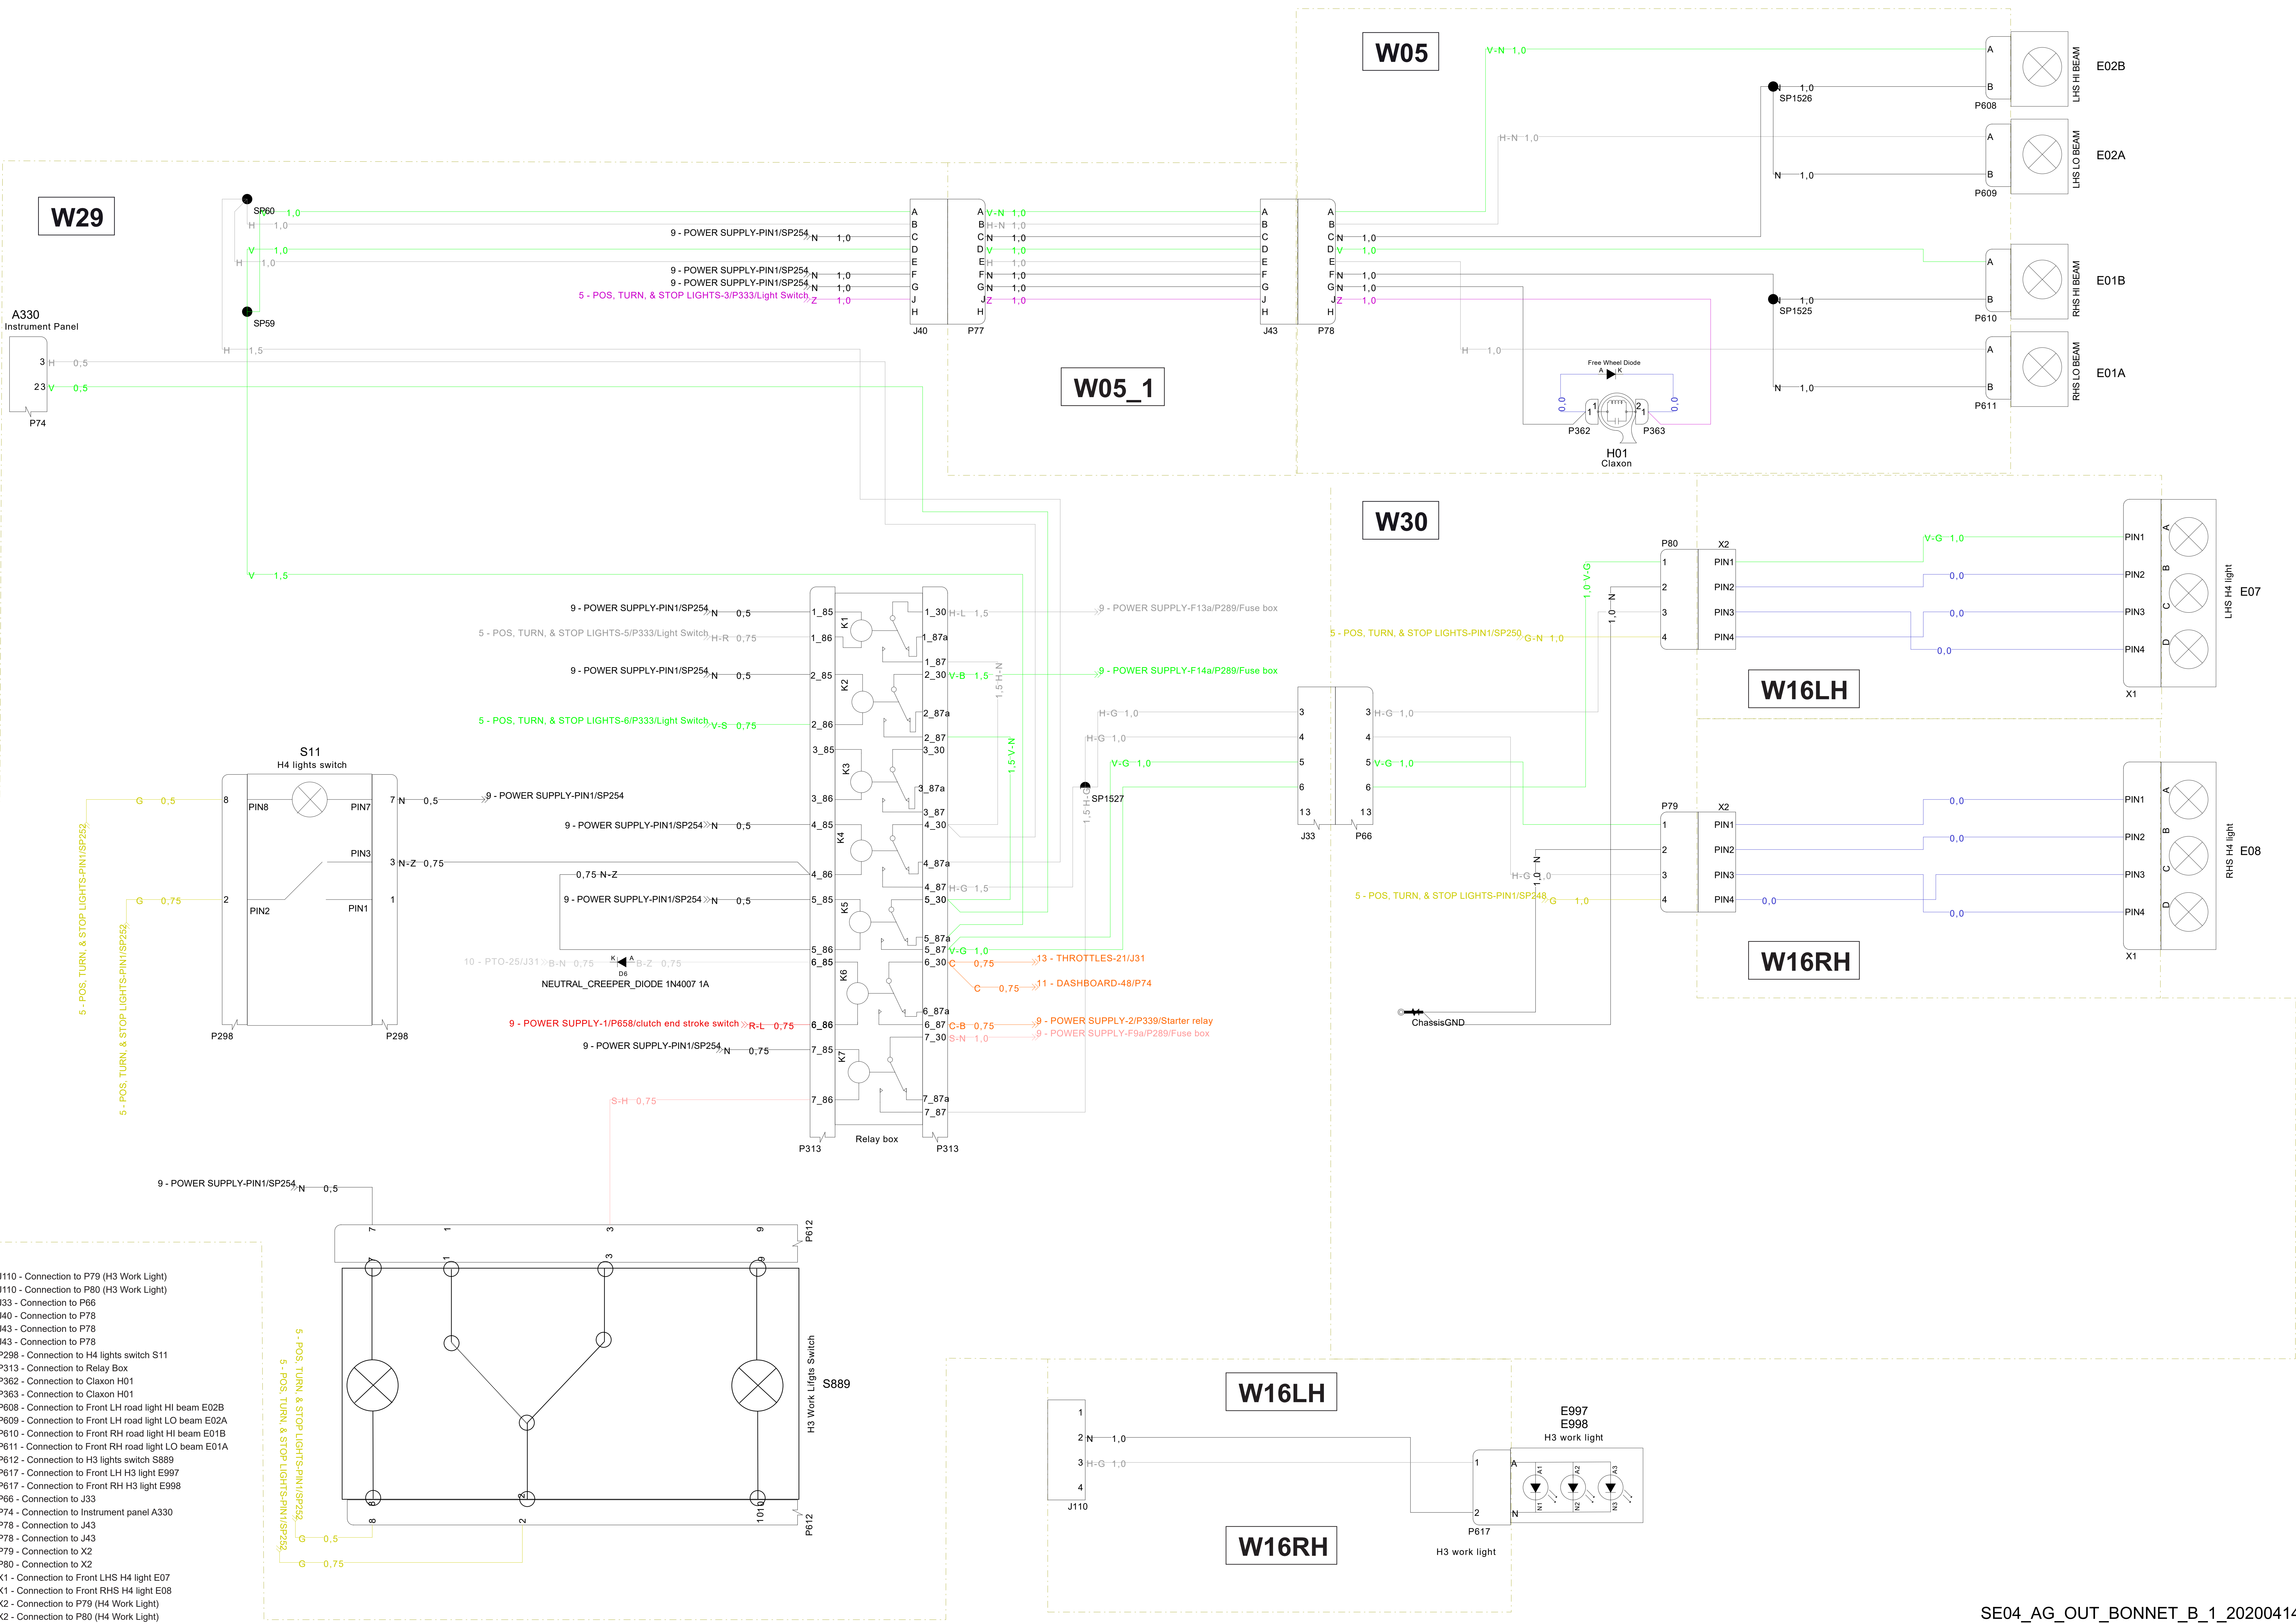 


 


- J33 - Connection to P66
- P326 - Connection to Flasher Unit
- P327 - Connection to Hazard switch S106
- P328 - Connection to RH grabrail light E03
- P329 - Connection to LH grabrail light E04
- P330 - Connection to Rear RH road light E14
- P331 - Connection to Trailer socket
- P332 - Connection to Rear LH road light E13
- P333 - Connection to Blinker lever S09
- P364 - Connection to Blinker lever S09
- P66 - Connection to J33
- P74 - Connection to Instrument panel A330



- P19 - Connection to Engine control unit A500
- J17 - Connection to P16
- P1 - Connection to Fuel level sensor B03
- P10 - Connection to Air filter switch B02
- P11 - Connection to Glow plug ECU A510
- P12 - Connection to Lambda sond B501
- P14 - Connection to Engine
- P15 - Connection to Engine control unit A500
- P16 - Connection to J17
- P17 - Connection to PCB
- P18 - Connection to PCB
- P2 - Connection to Delta pressure sensor B5
- P3 - Connection to Engine, Injector
- P4 - Connection to Fuel filter heating R505
- P5 - Connection to Air filter switch B02
- P6 - Connection to Water in fuel switch B510
- P7 - Connection to Exhaust gas temperature
- P8 - Connection to Exhaust gas temperature
- P9 - Connection to Air temperature sensor B5

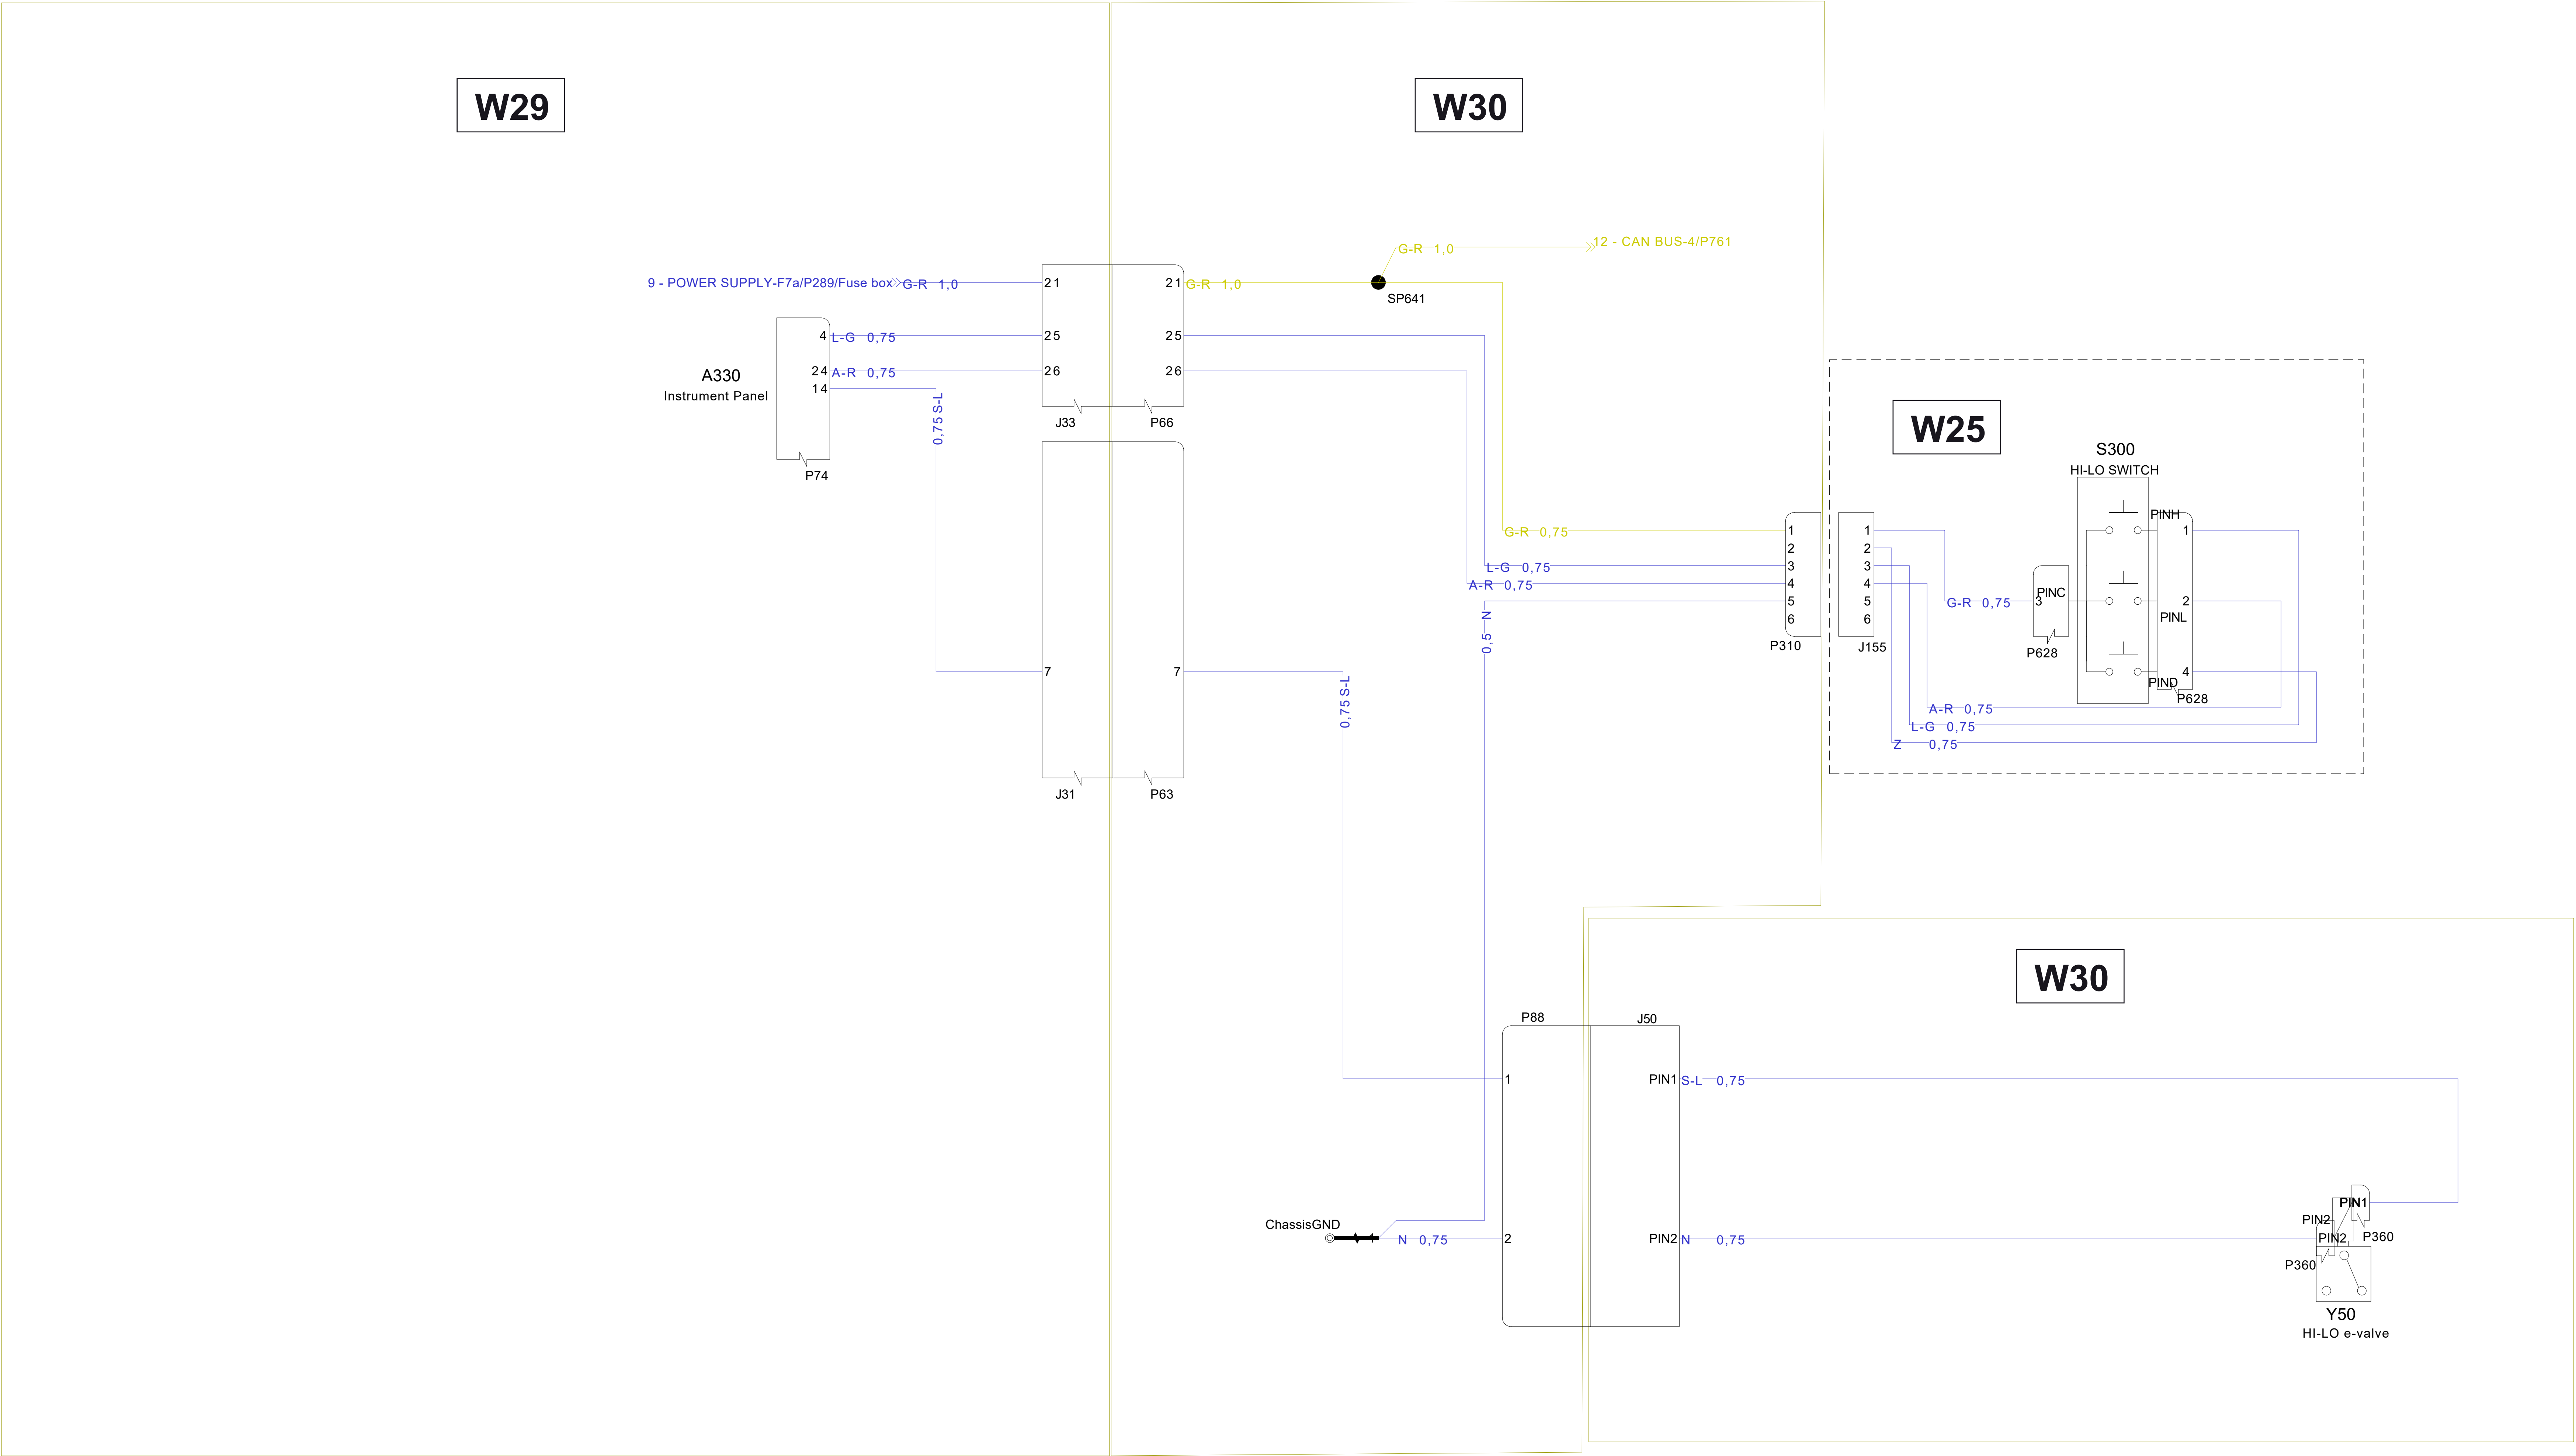

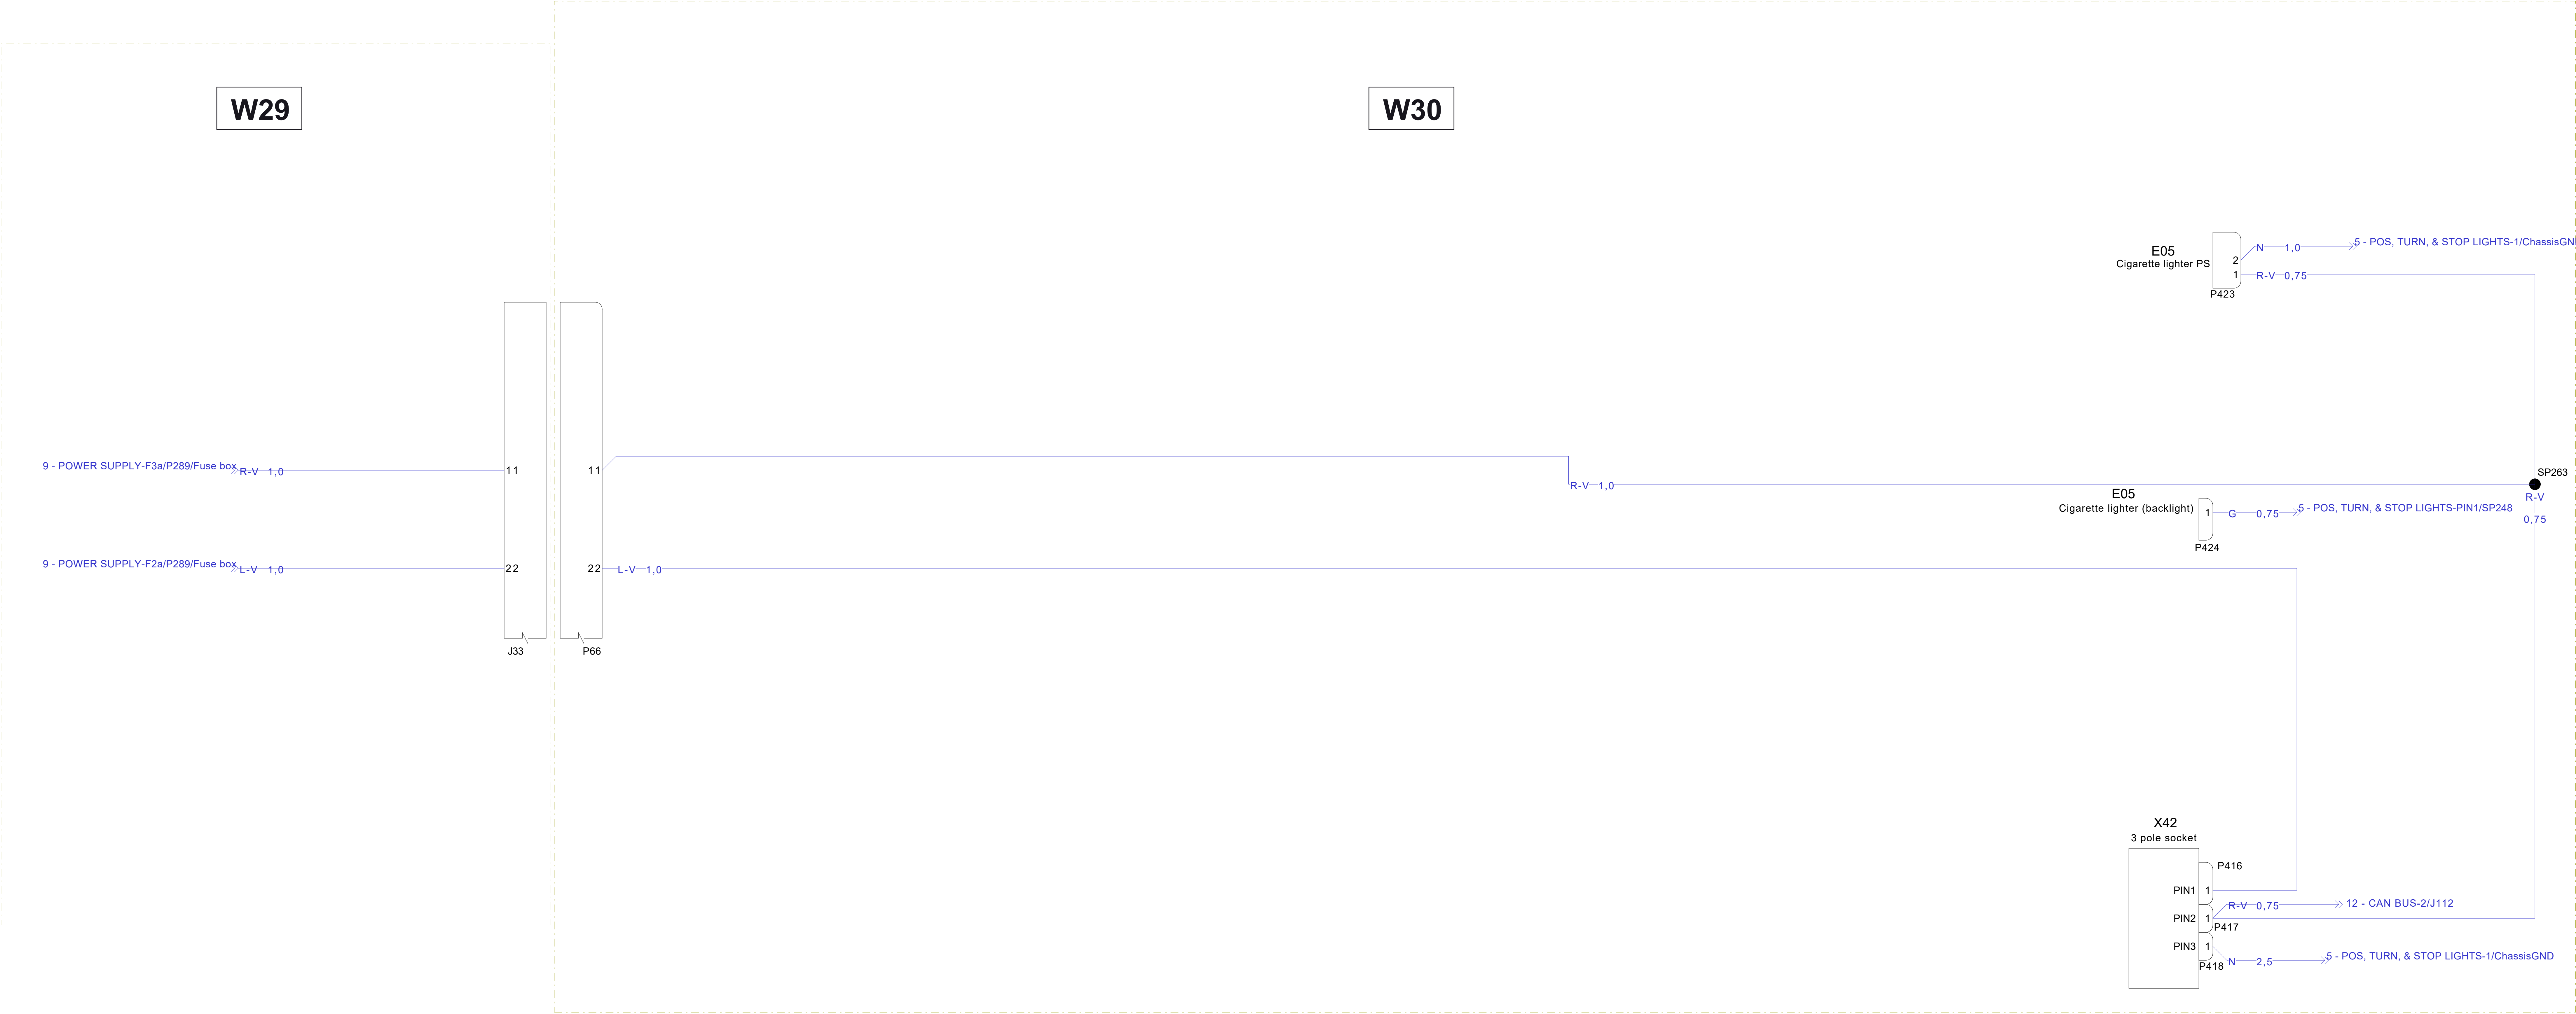

J33 - Connection to P66
P416 - Connection to 3 pole socket X42
P417 - Connection to 3 pole socket X42
P418 - Connection to 3 pole socket X42
P423 - Connection to Cigarette lighter PS E05
P424 - Connection to Cigarette lighter (Backlight) E05
P66 - Connection to J33

W45

 
W29

W02

W22


W45_1


J12 - Connection to P23
 J17 - Connection to P16
 J31 - Connection to P63
 P16 - Connection to J17
 P2 - Connection to Battery G01
 P22 - Connection to Alternator G02
 P23 - Connection to J12
 P24 - Connection to Starter motor M01
 P25 - Connection to AC compressor clutch M02 (Not used)
 P26 - Connection to Starter motor M01
 P27 - Connection to Alternator G02
 P289 - Connection to Fuse Box
 P290 - Connection to Battery G01
 P291 - Connection to Main harness fuse (50 A) F03
 P292 - Connection to Glow plugs fuse (60A) F01
 P293 - Connection to Engine ECU fuse (70A) F02
 P3 - Connection to GND
 P339 - Connection to Starter relay K01
 P340 - Connection to Ignition key connection S01
 P444 - Connection to Battery cutt-off switch S900
 P445 - Connection to Clutch pedal end stroke switch S72
 P447 - Connection to GND
 P451 - Connection to Clutch pedal end stroke switch S72
 P465 - Connection to Starter motor M01
 P473 - Connection to Battery cutt-off switch S900
 P481 - Connection to Aux fuel tank supply (Not used)
 P568 - Connection to Battery cutt-off switch S900
 P63 - Connection to J31

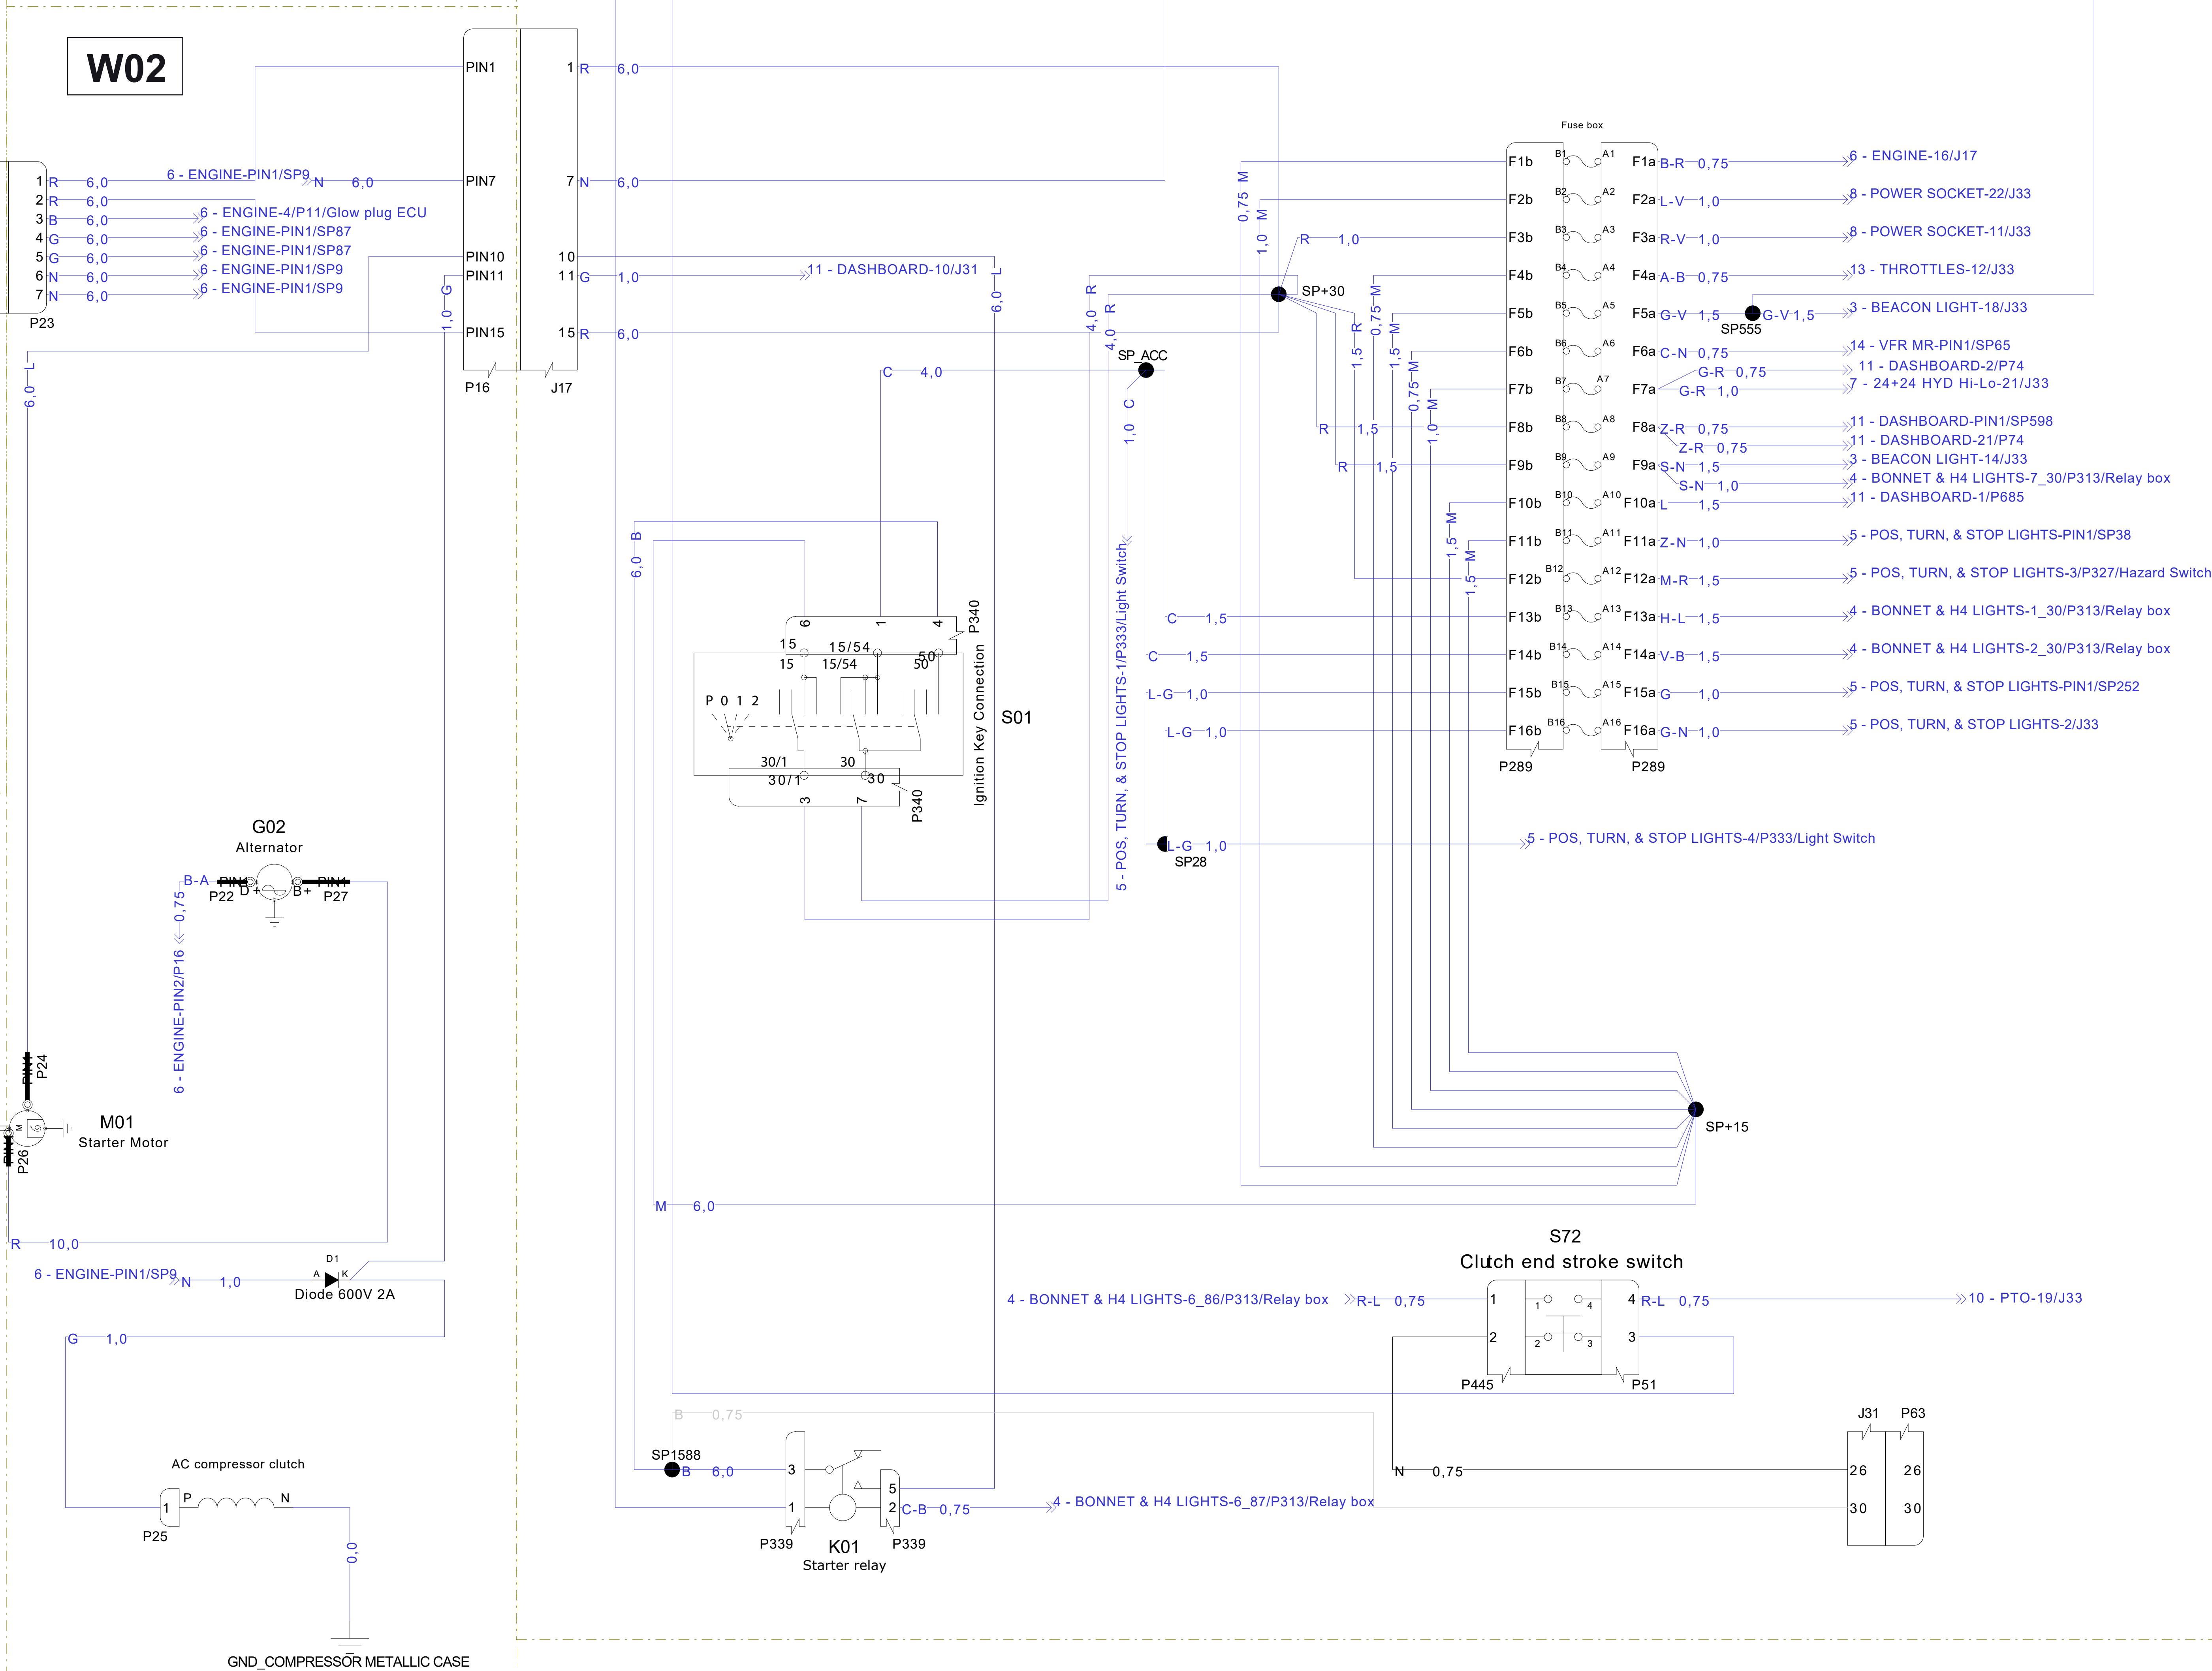




SE94 AG OUT PTO B 1 20200414

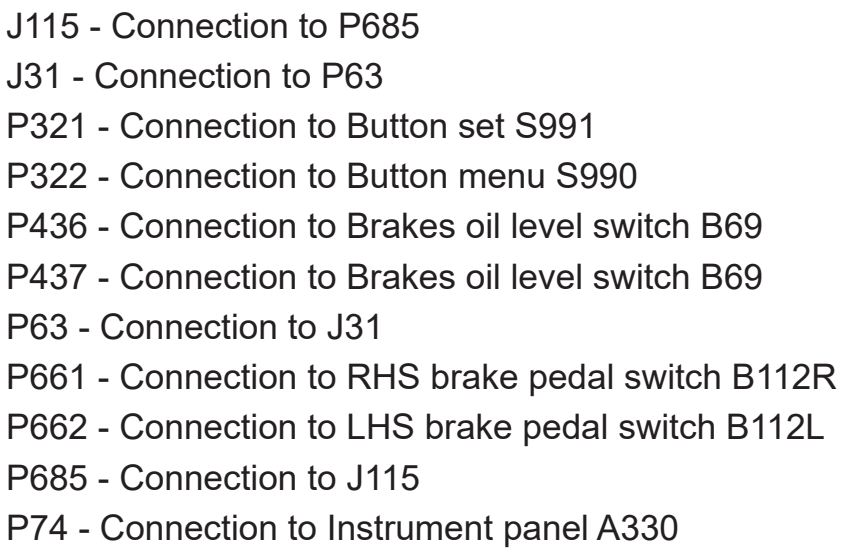 

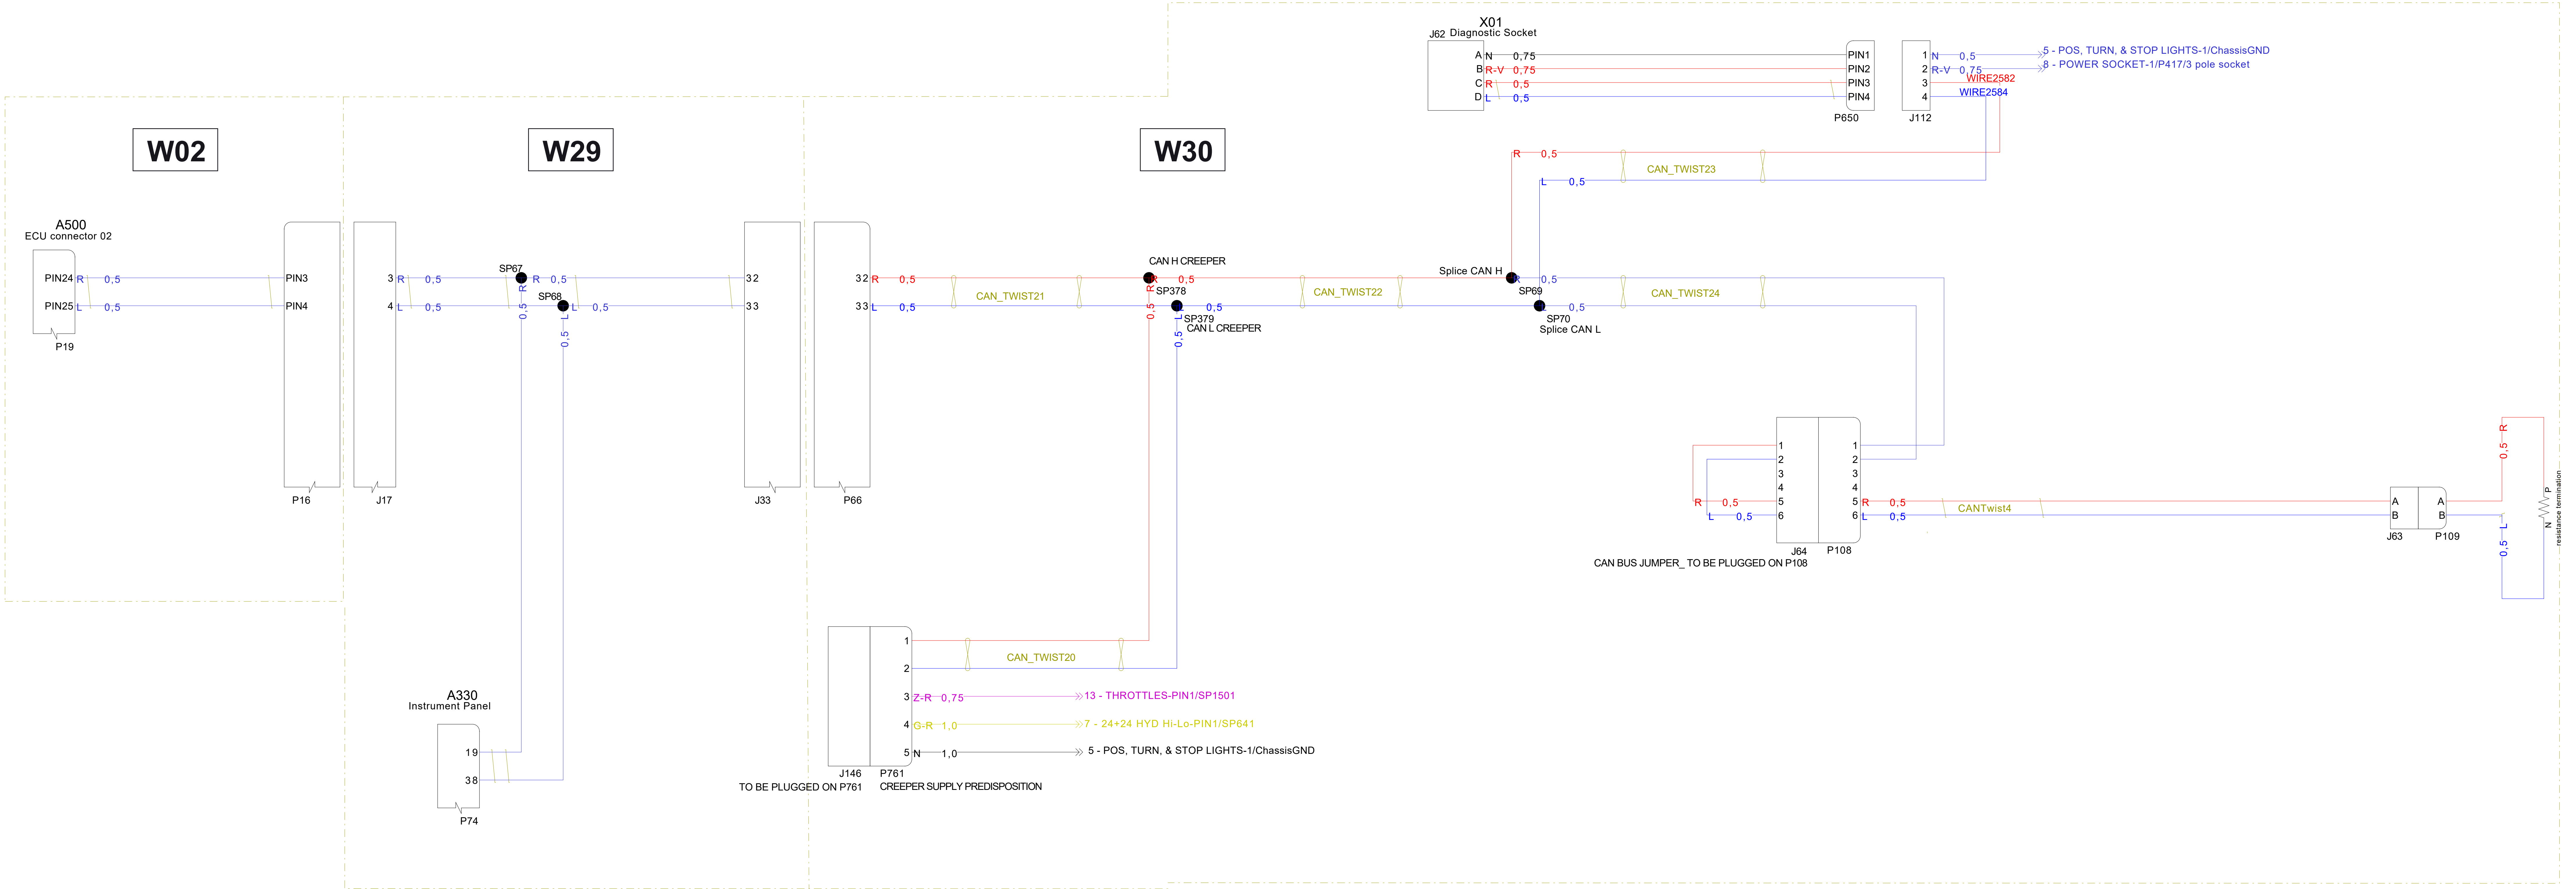 



P19 - Connection to Engine control unit A500
P74 - Connection to Instrument panel A330
J112 - Connection to P650
J146 - Connection to P761
J17 - Connection to P16
J33 - Connection to P66
J62 - Connection to Diagnostic Socket
J63 - Connection to P109
P109 - Connection to J63
P16 - Connection to J17
P66 - Connection to J33
P761 - Connection to J146 (CREEPER SUPPLY predisposition)
J64 - Connection to P108
P108 - Connection to Plug J64
P650 - Connection to J112




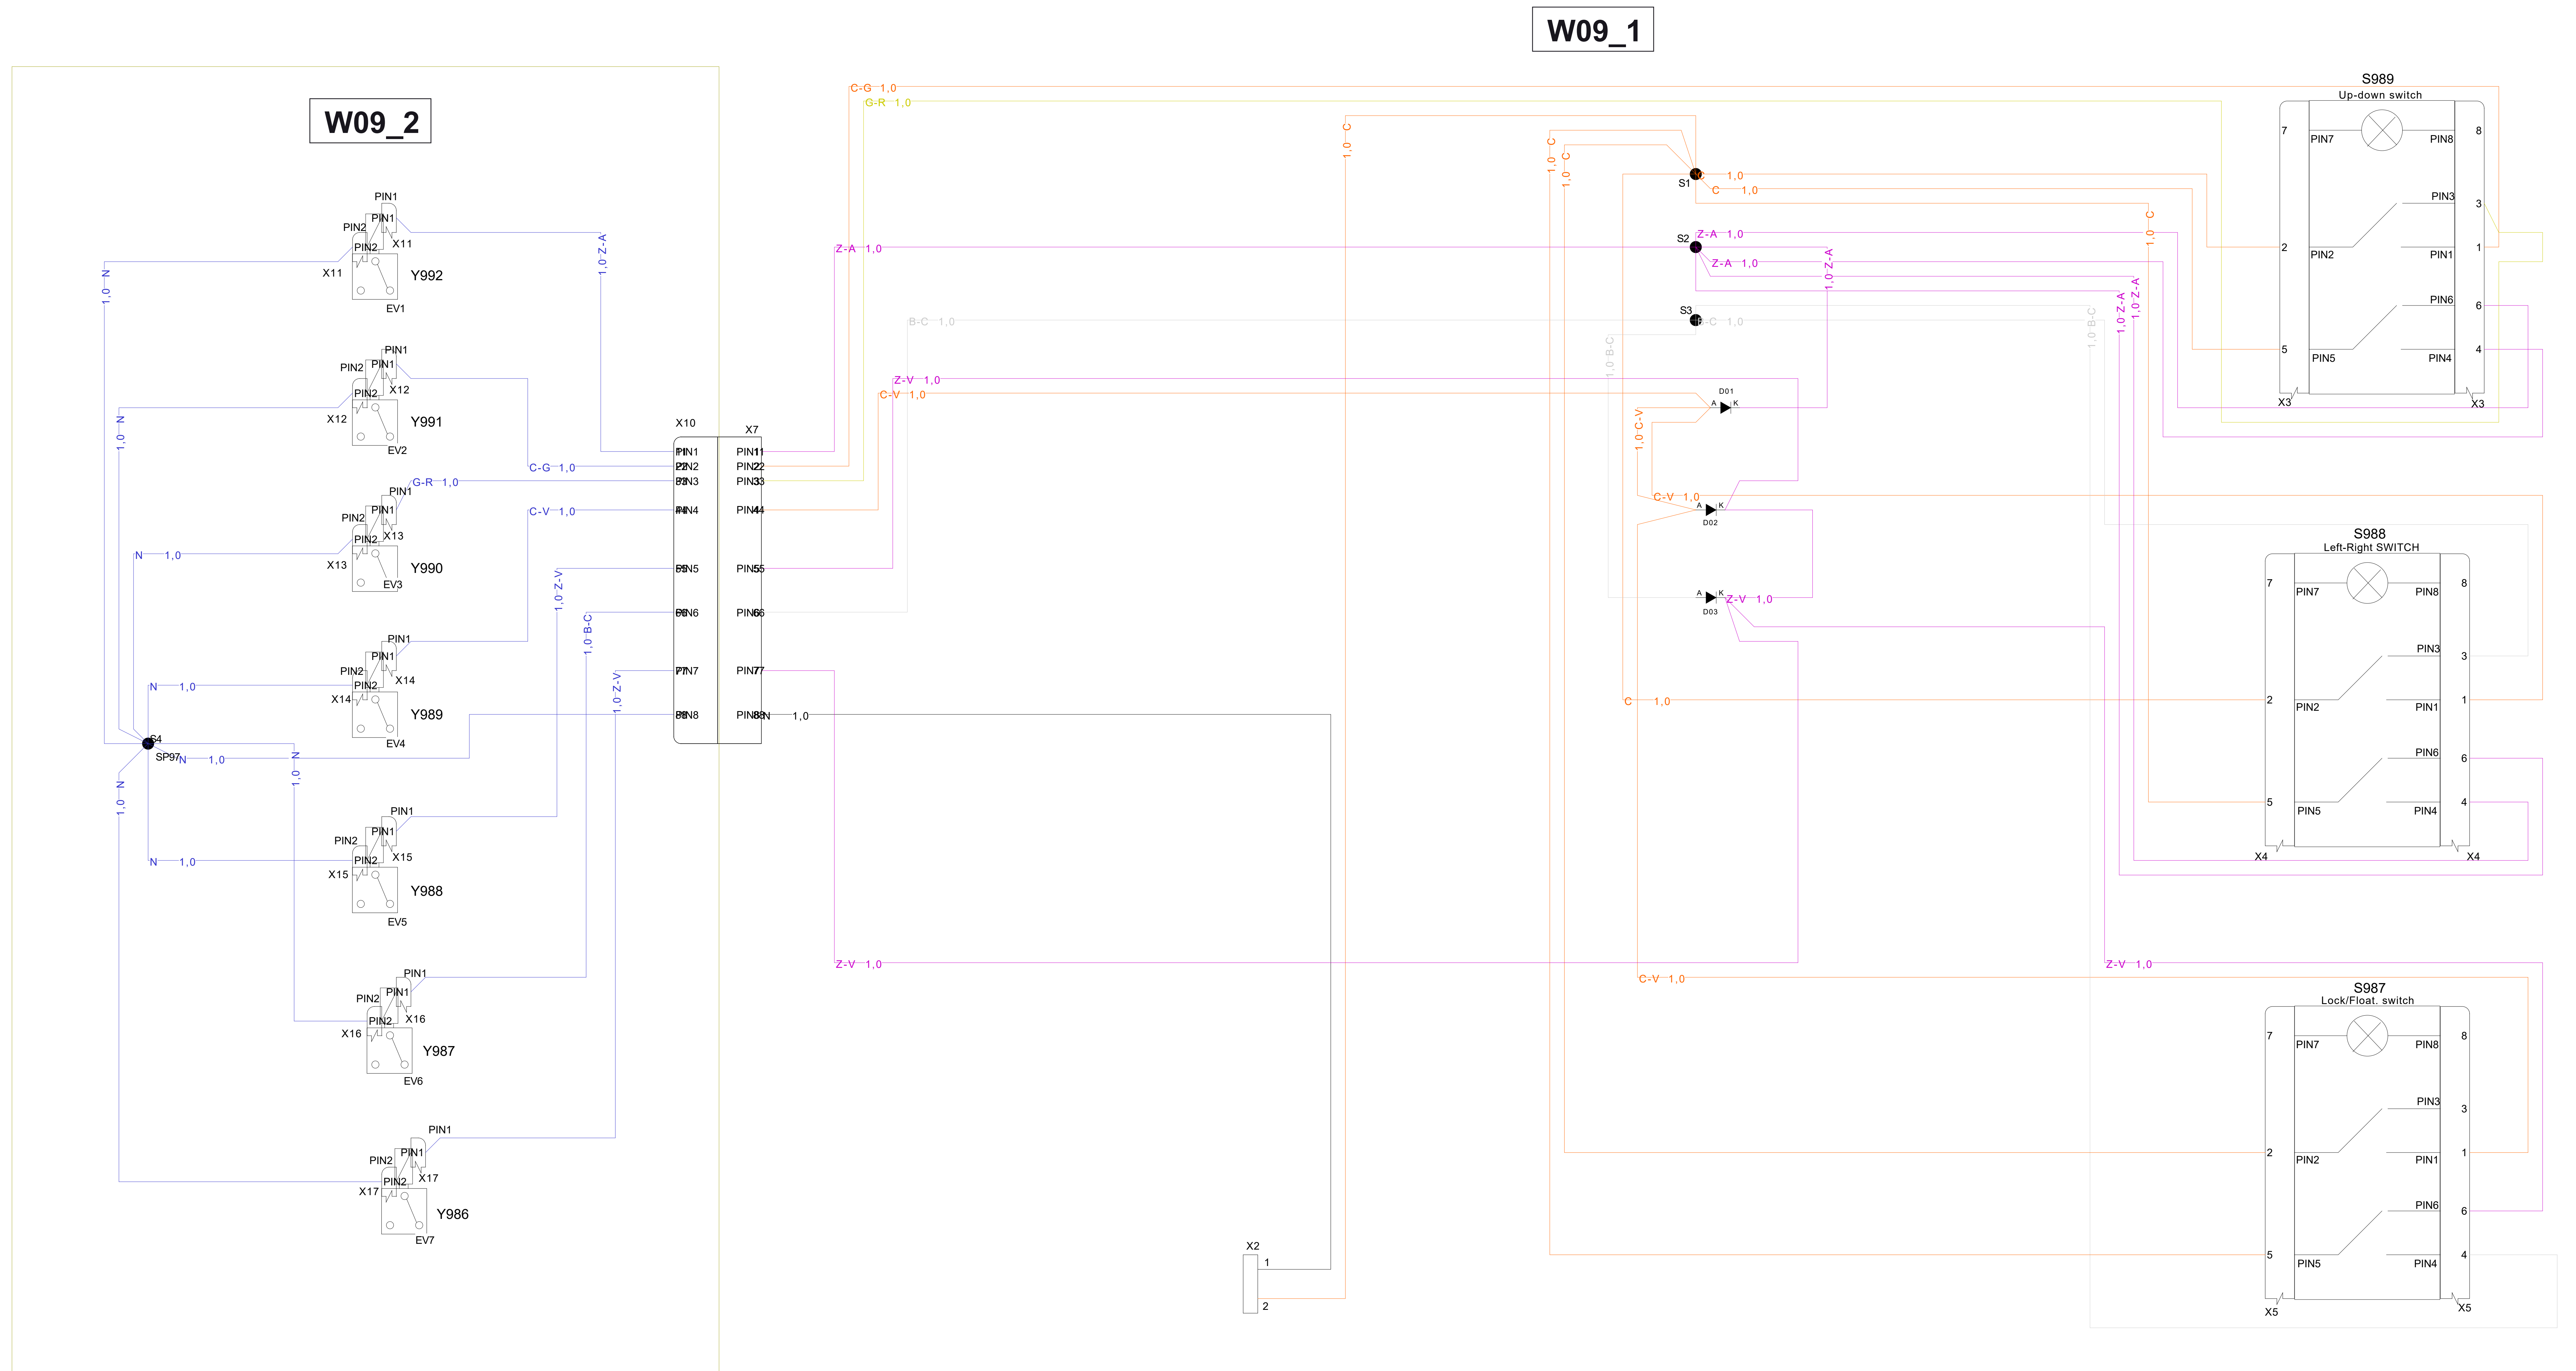 



- X10 - Connection to X7
- X11 - Connection to Deport solenoid valve 1 Y992
- X12 - Connection to Deport solenoid valve 2 Y991
- X13 - Connection to Deport solenoid valve 3 Y990
- X14 - Connection to Deport solenoid valve 4 Y989
- X15 - Connection to Deport solenoid valve 5 Y988
- X16 - Connection to Deport solenoid valve 6 Y987
- X17 - Connection to Deport solenoid valve 7 Y986
- X2 - Connection to Power supply interface
- X3 - Connection to UP-DOWN switch S989
- X4 - Connection to LEFT-RIGHT switch S988
- X5 - Connection to RIGID-FLOTT switch S987
- X7 - Connection to X10

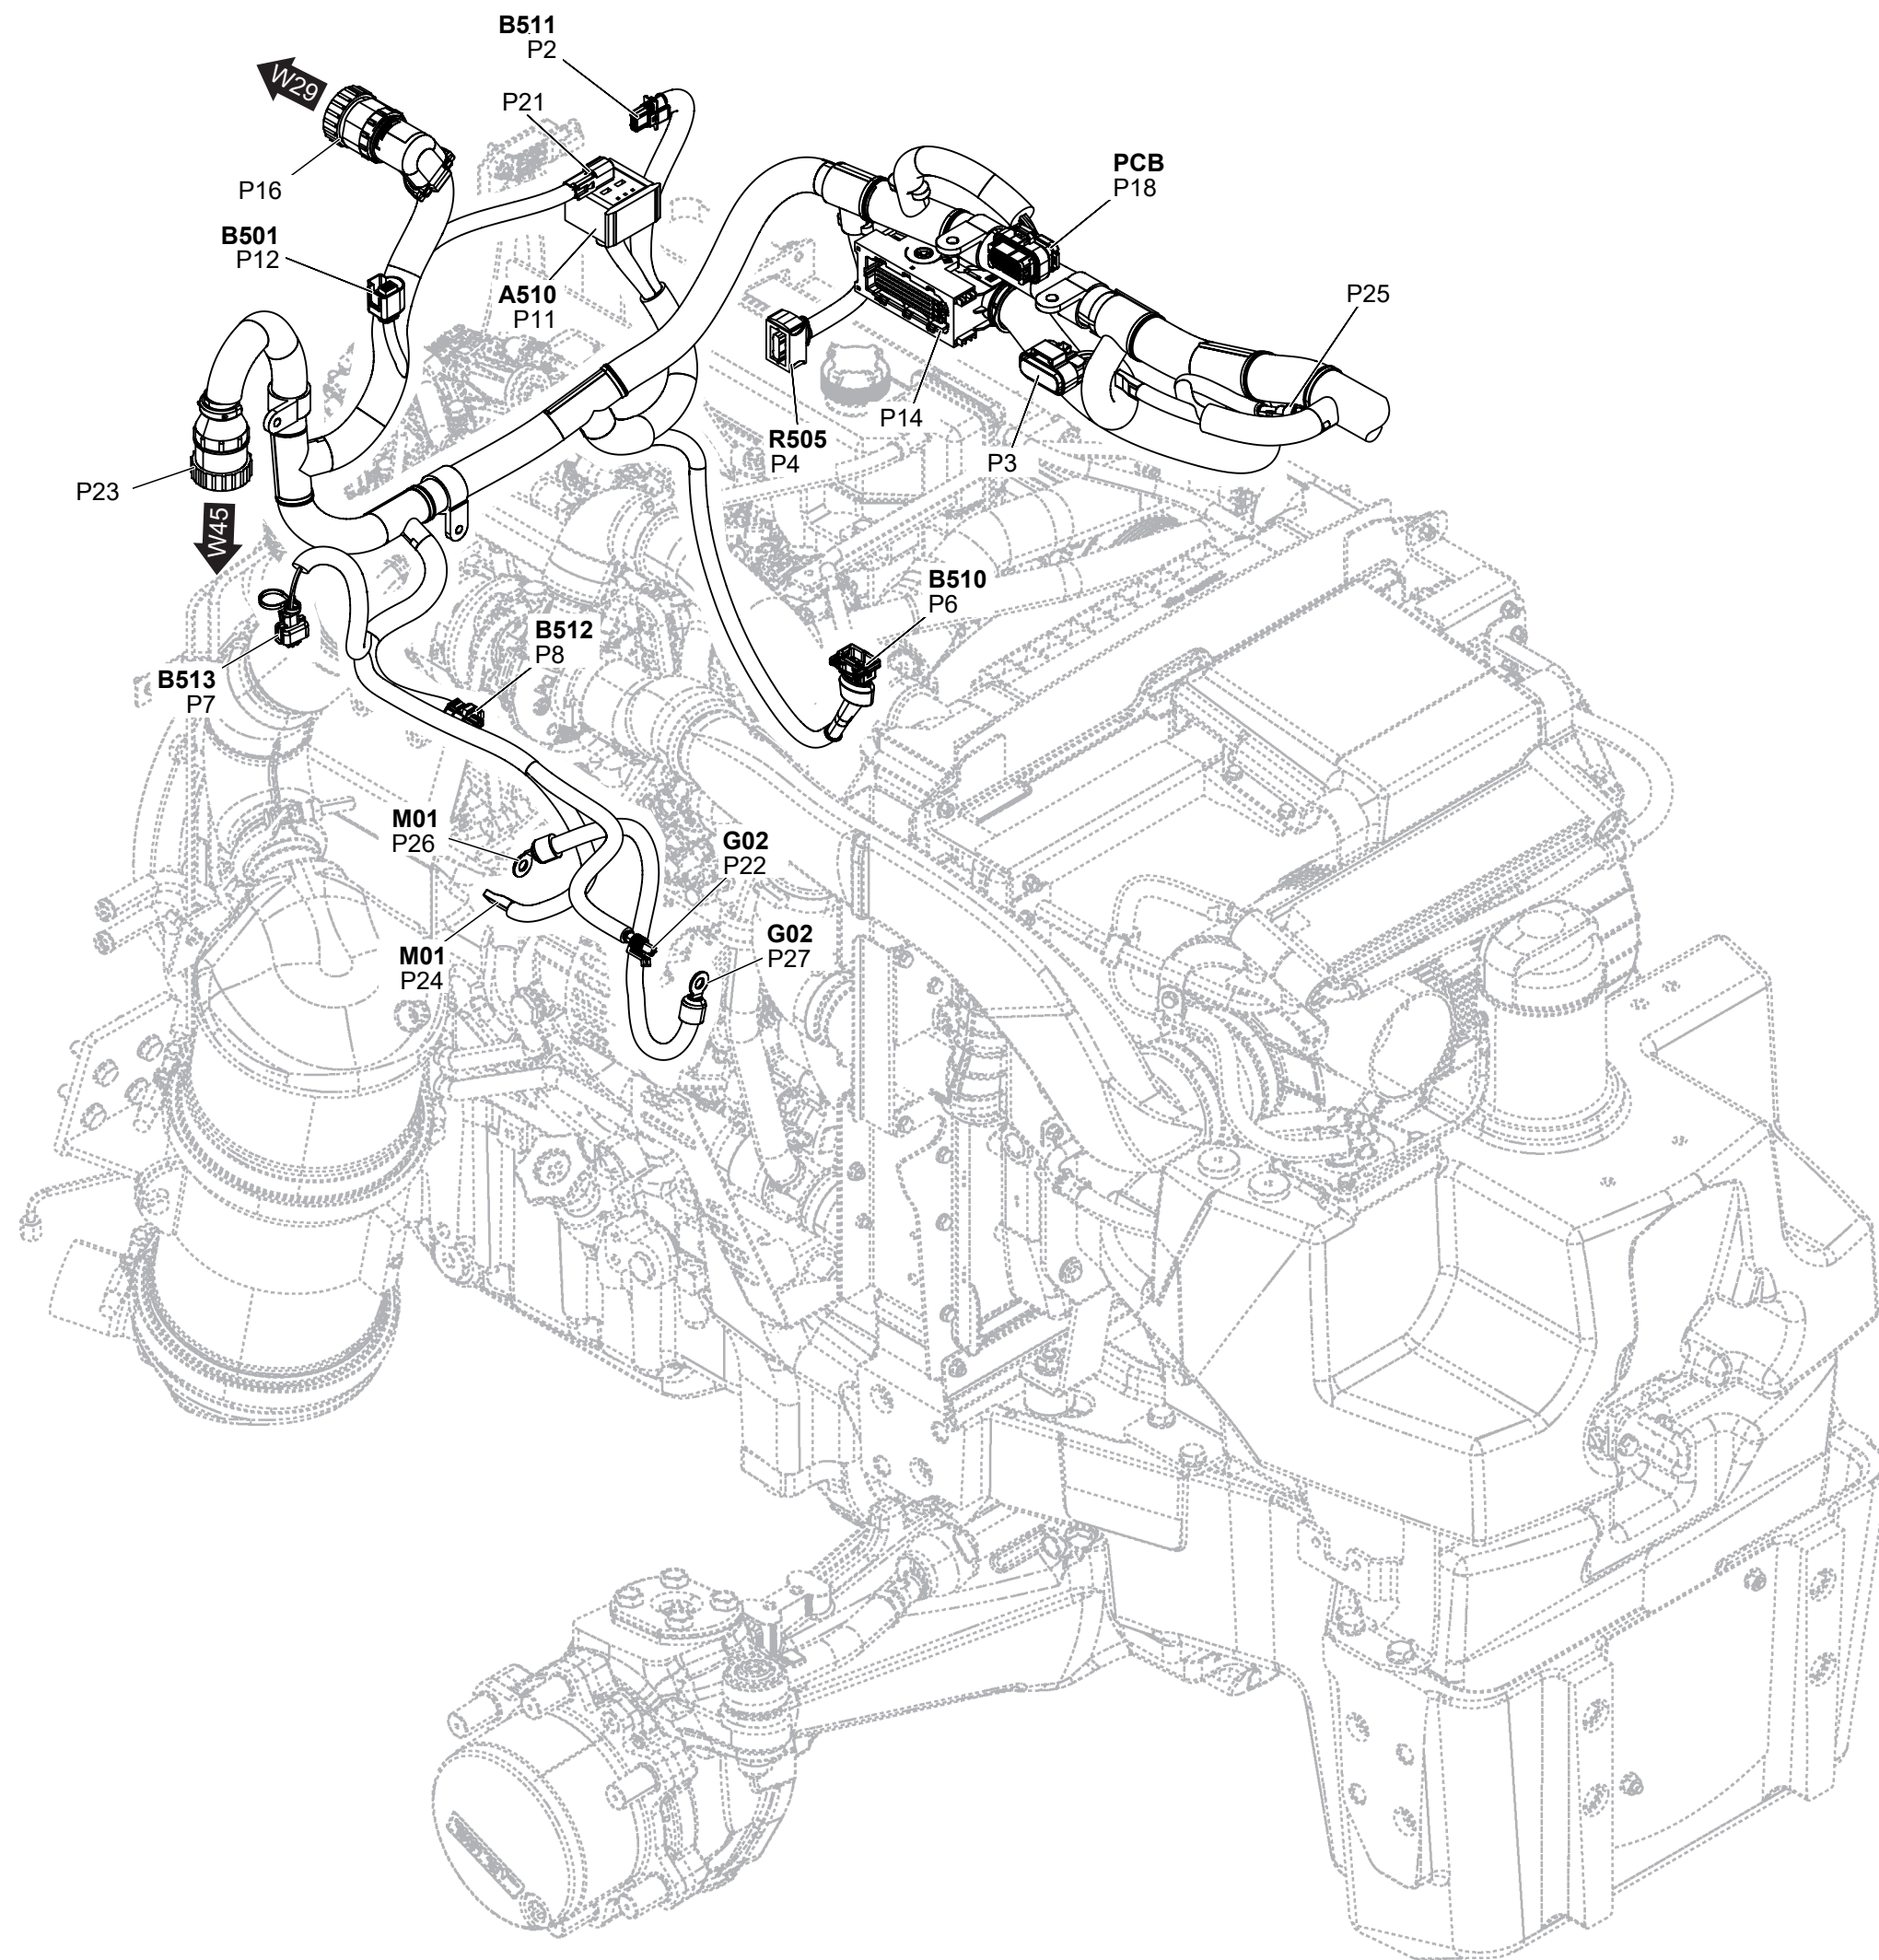 


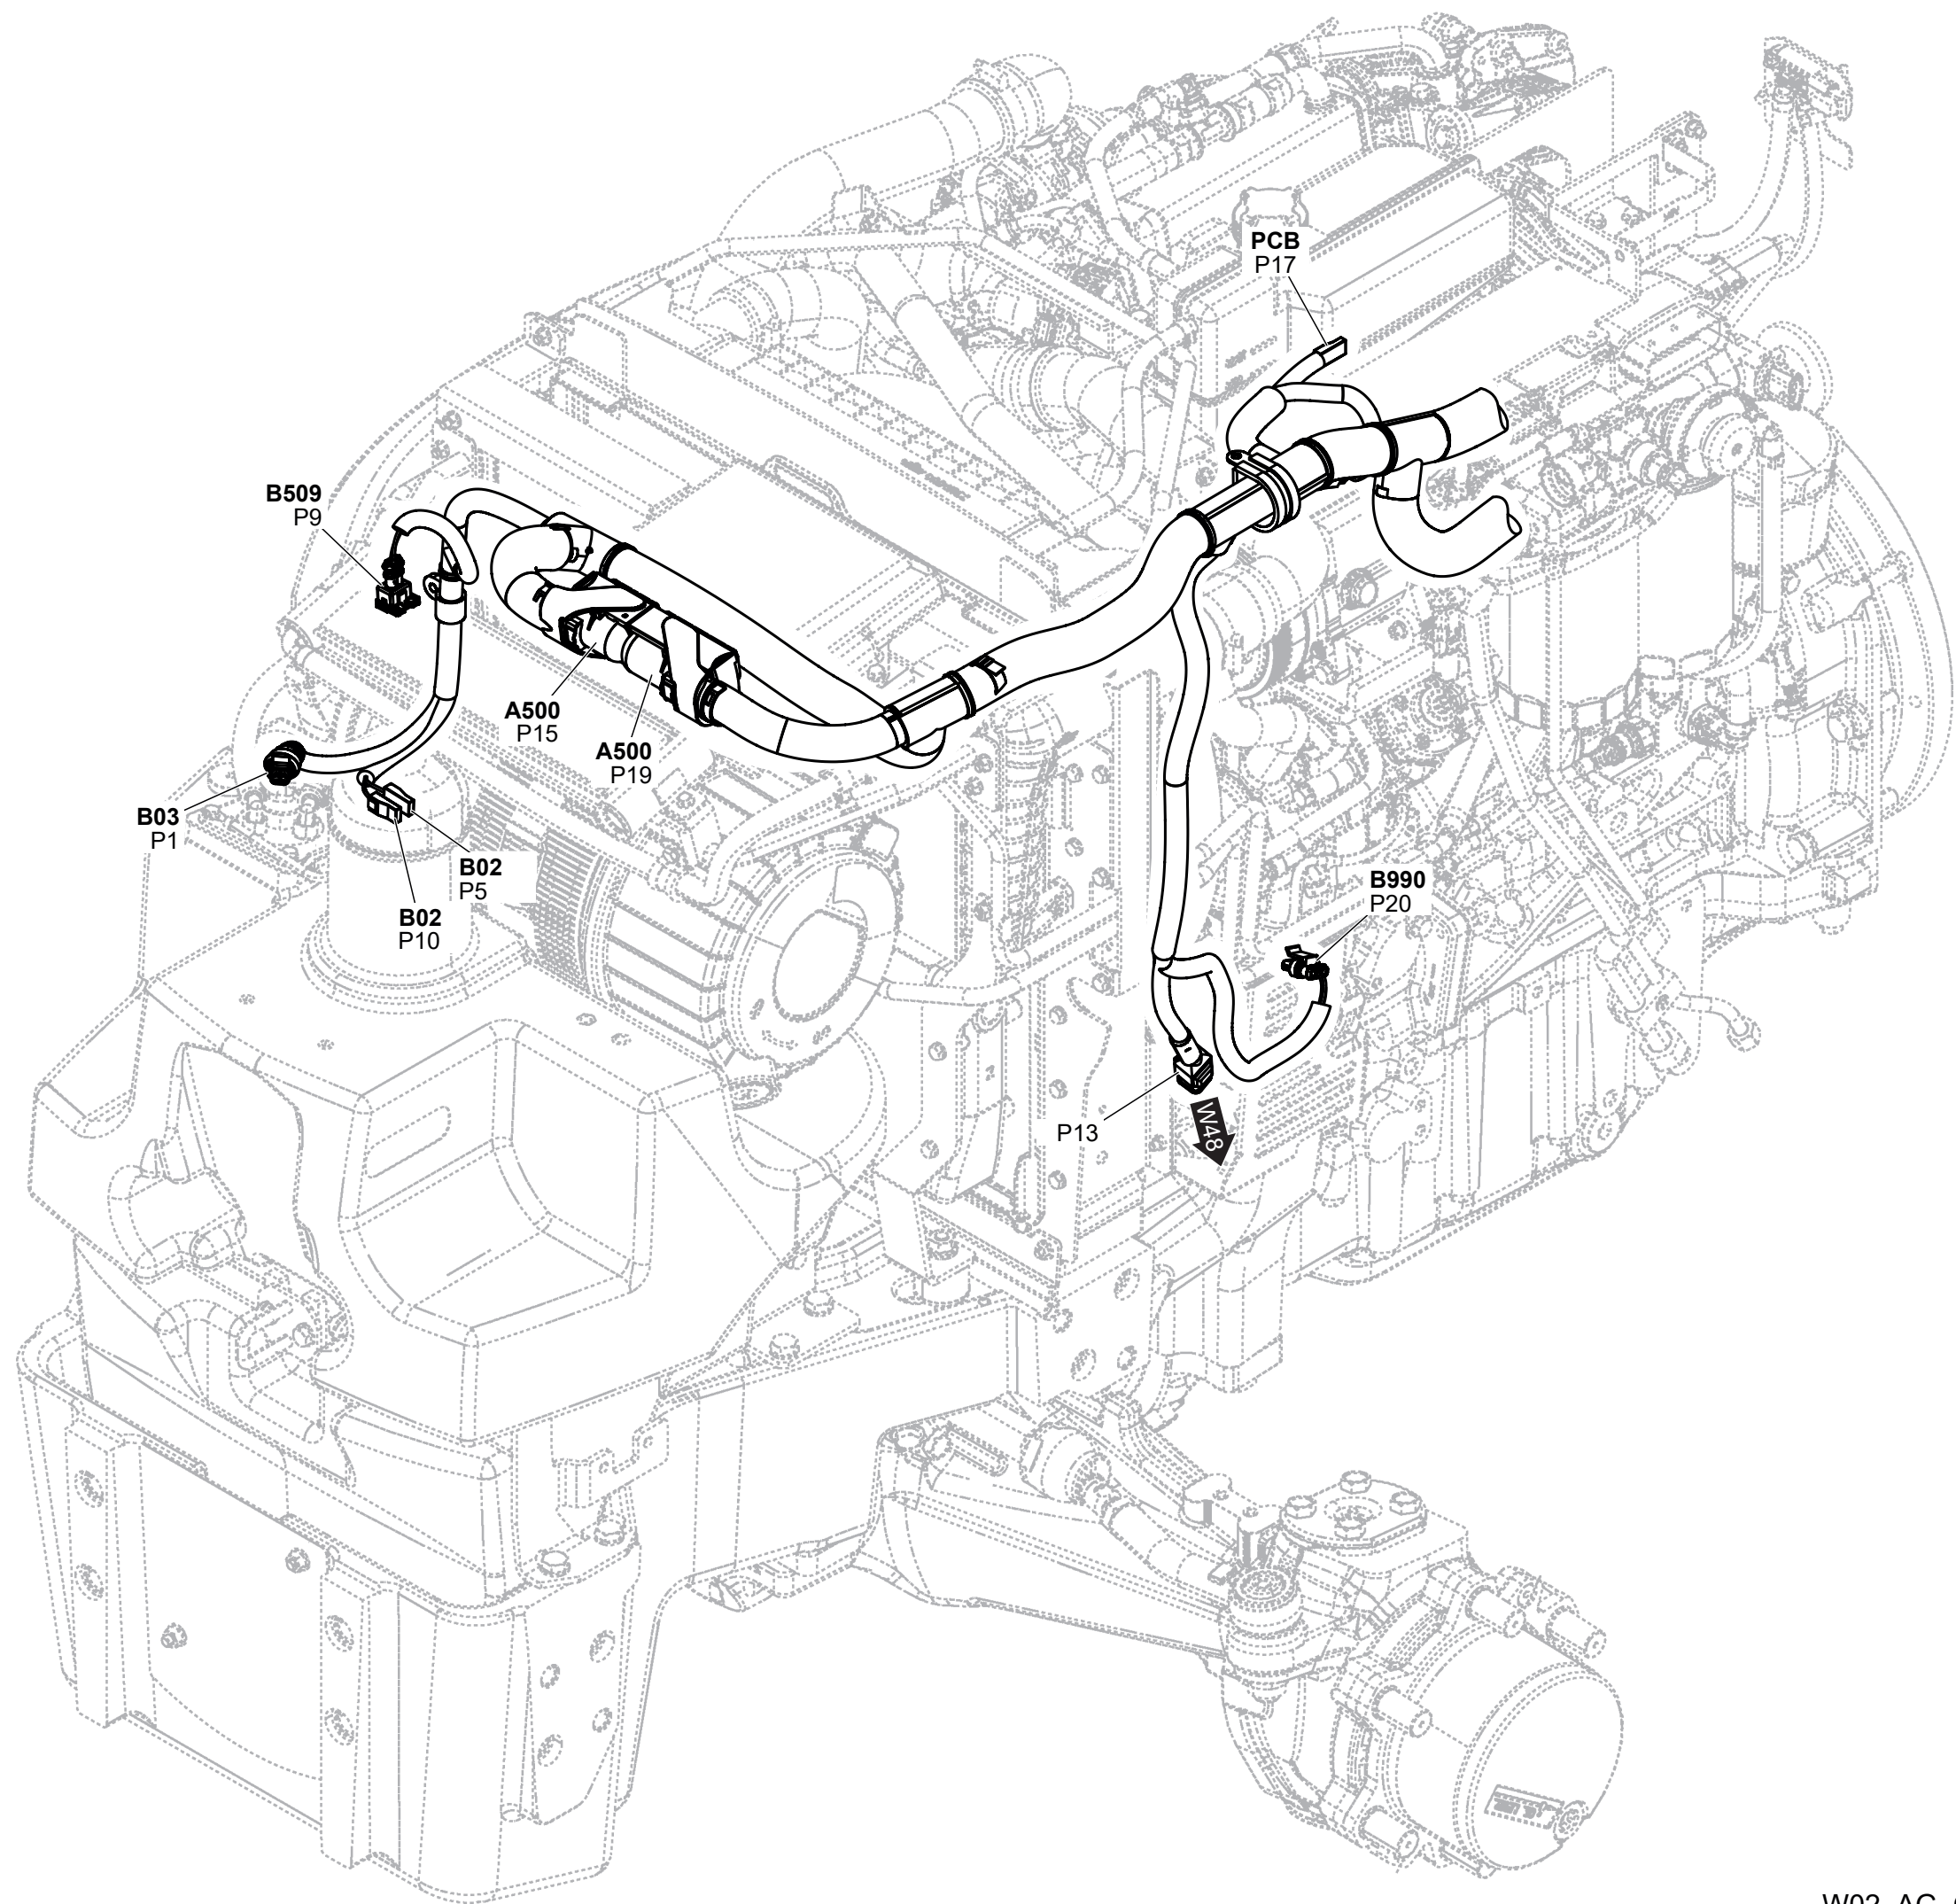 


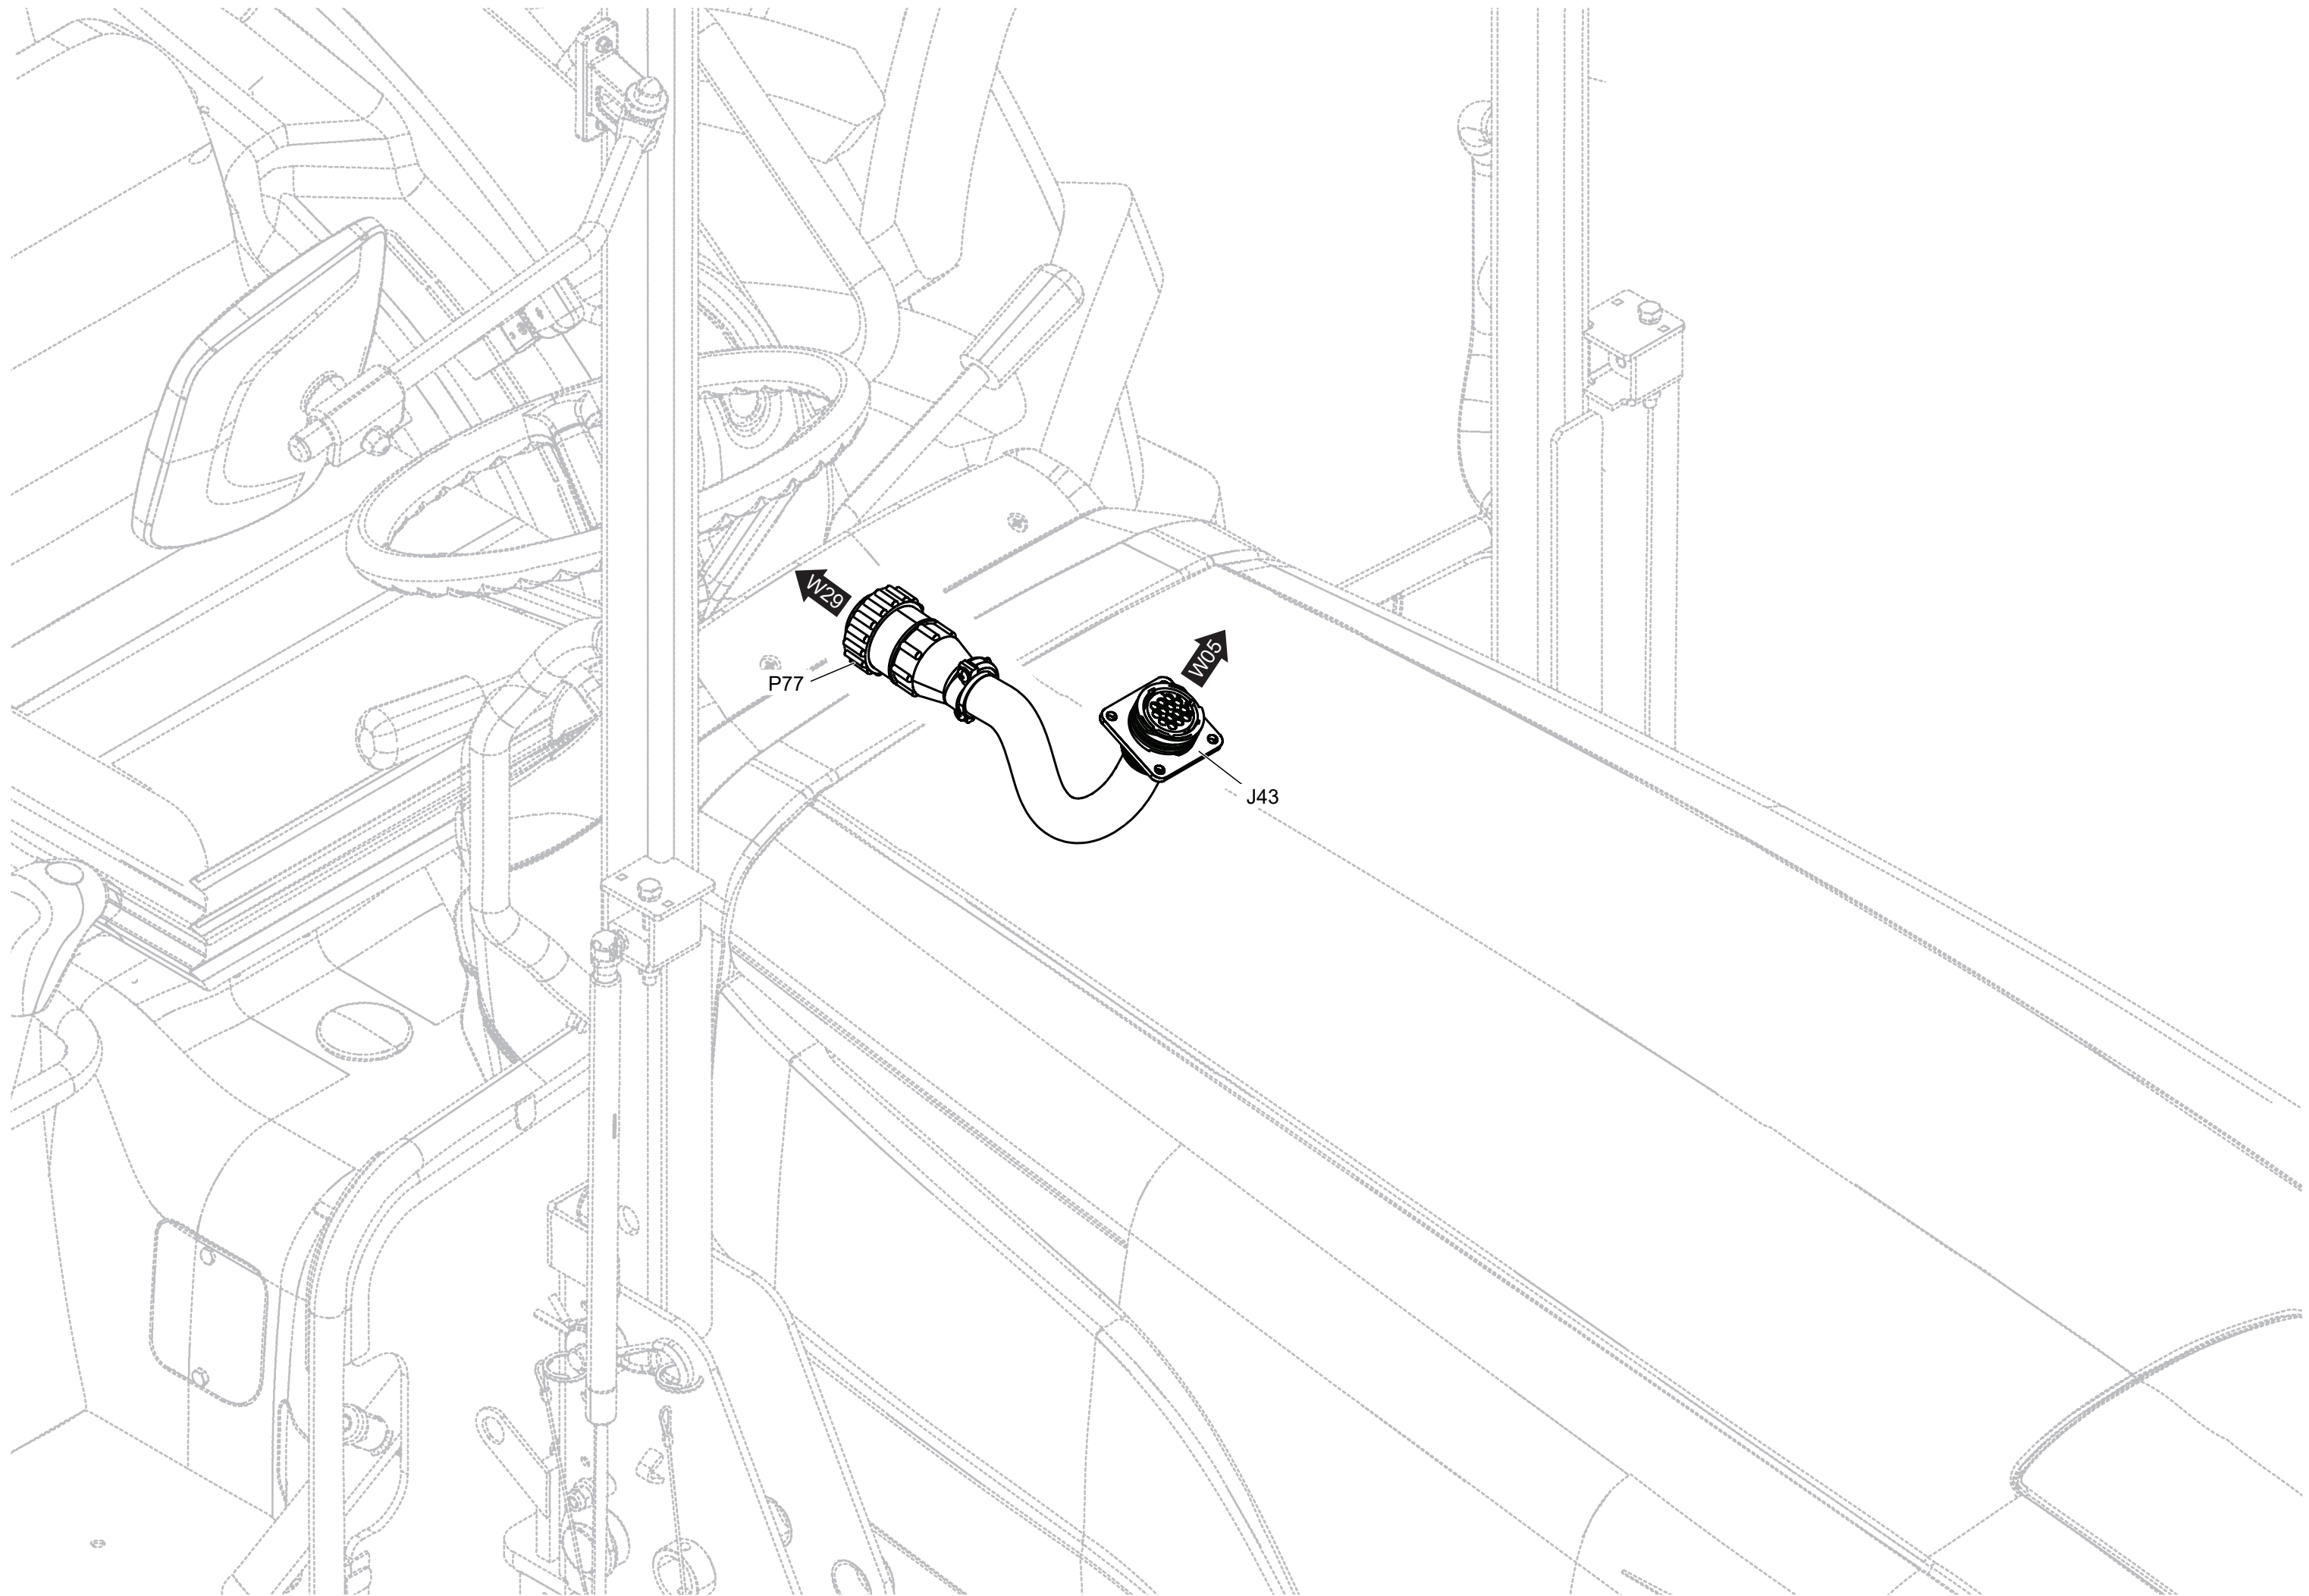 


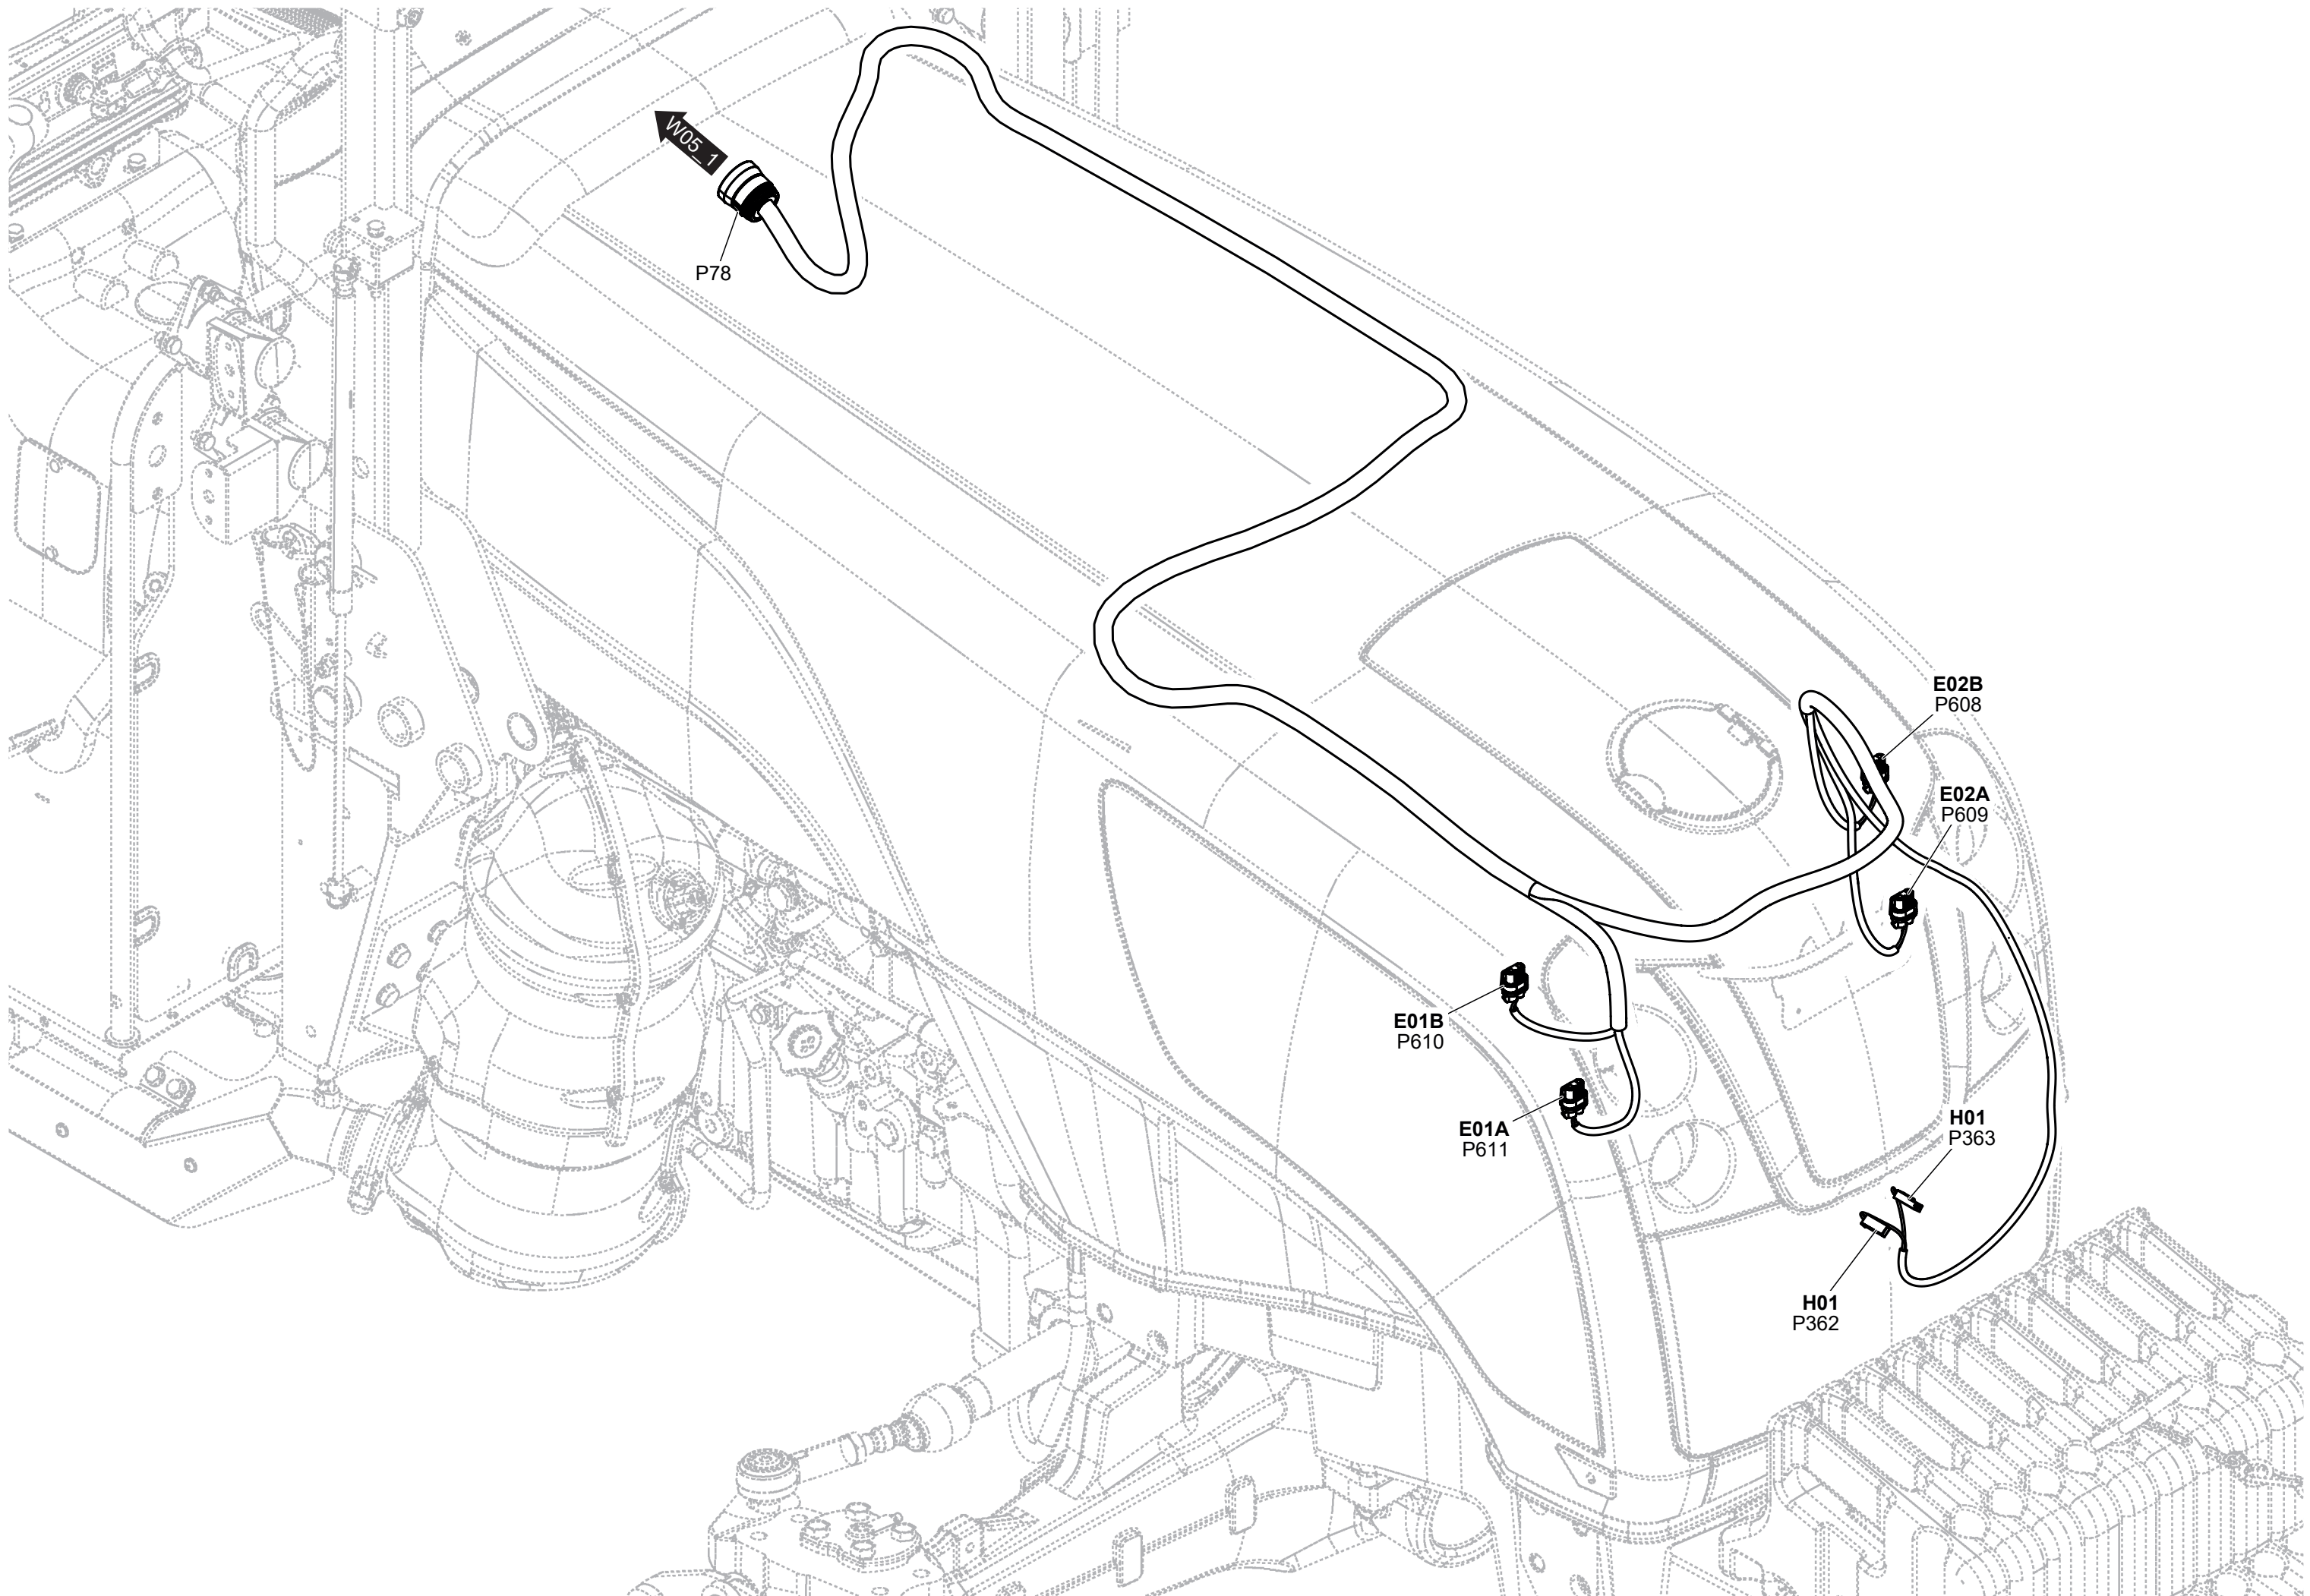 


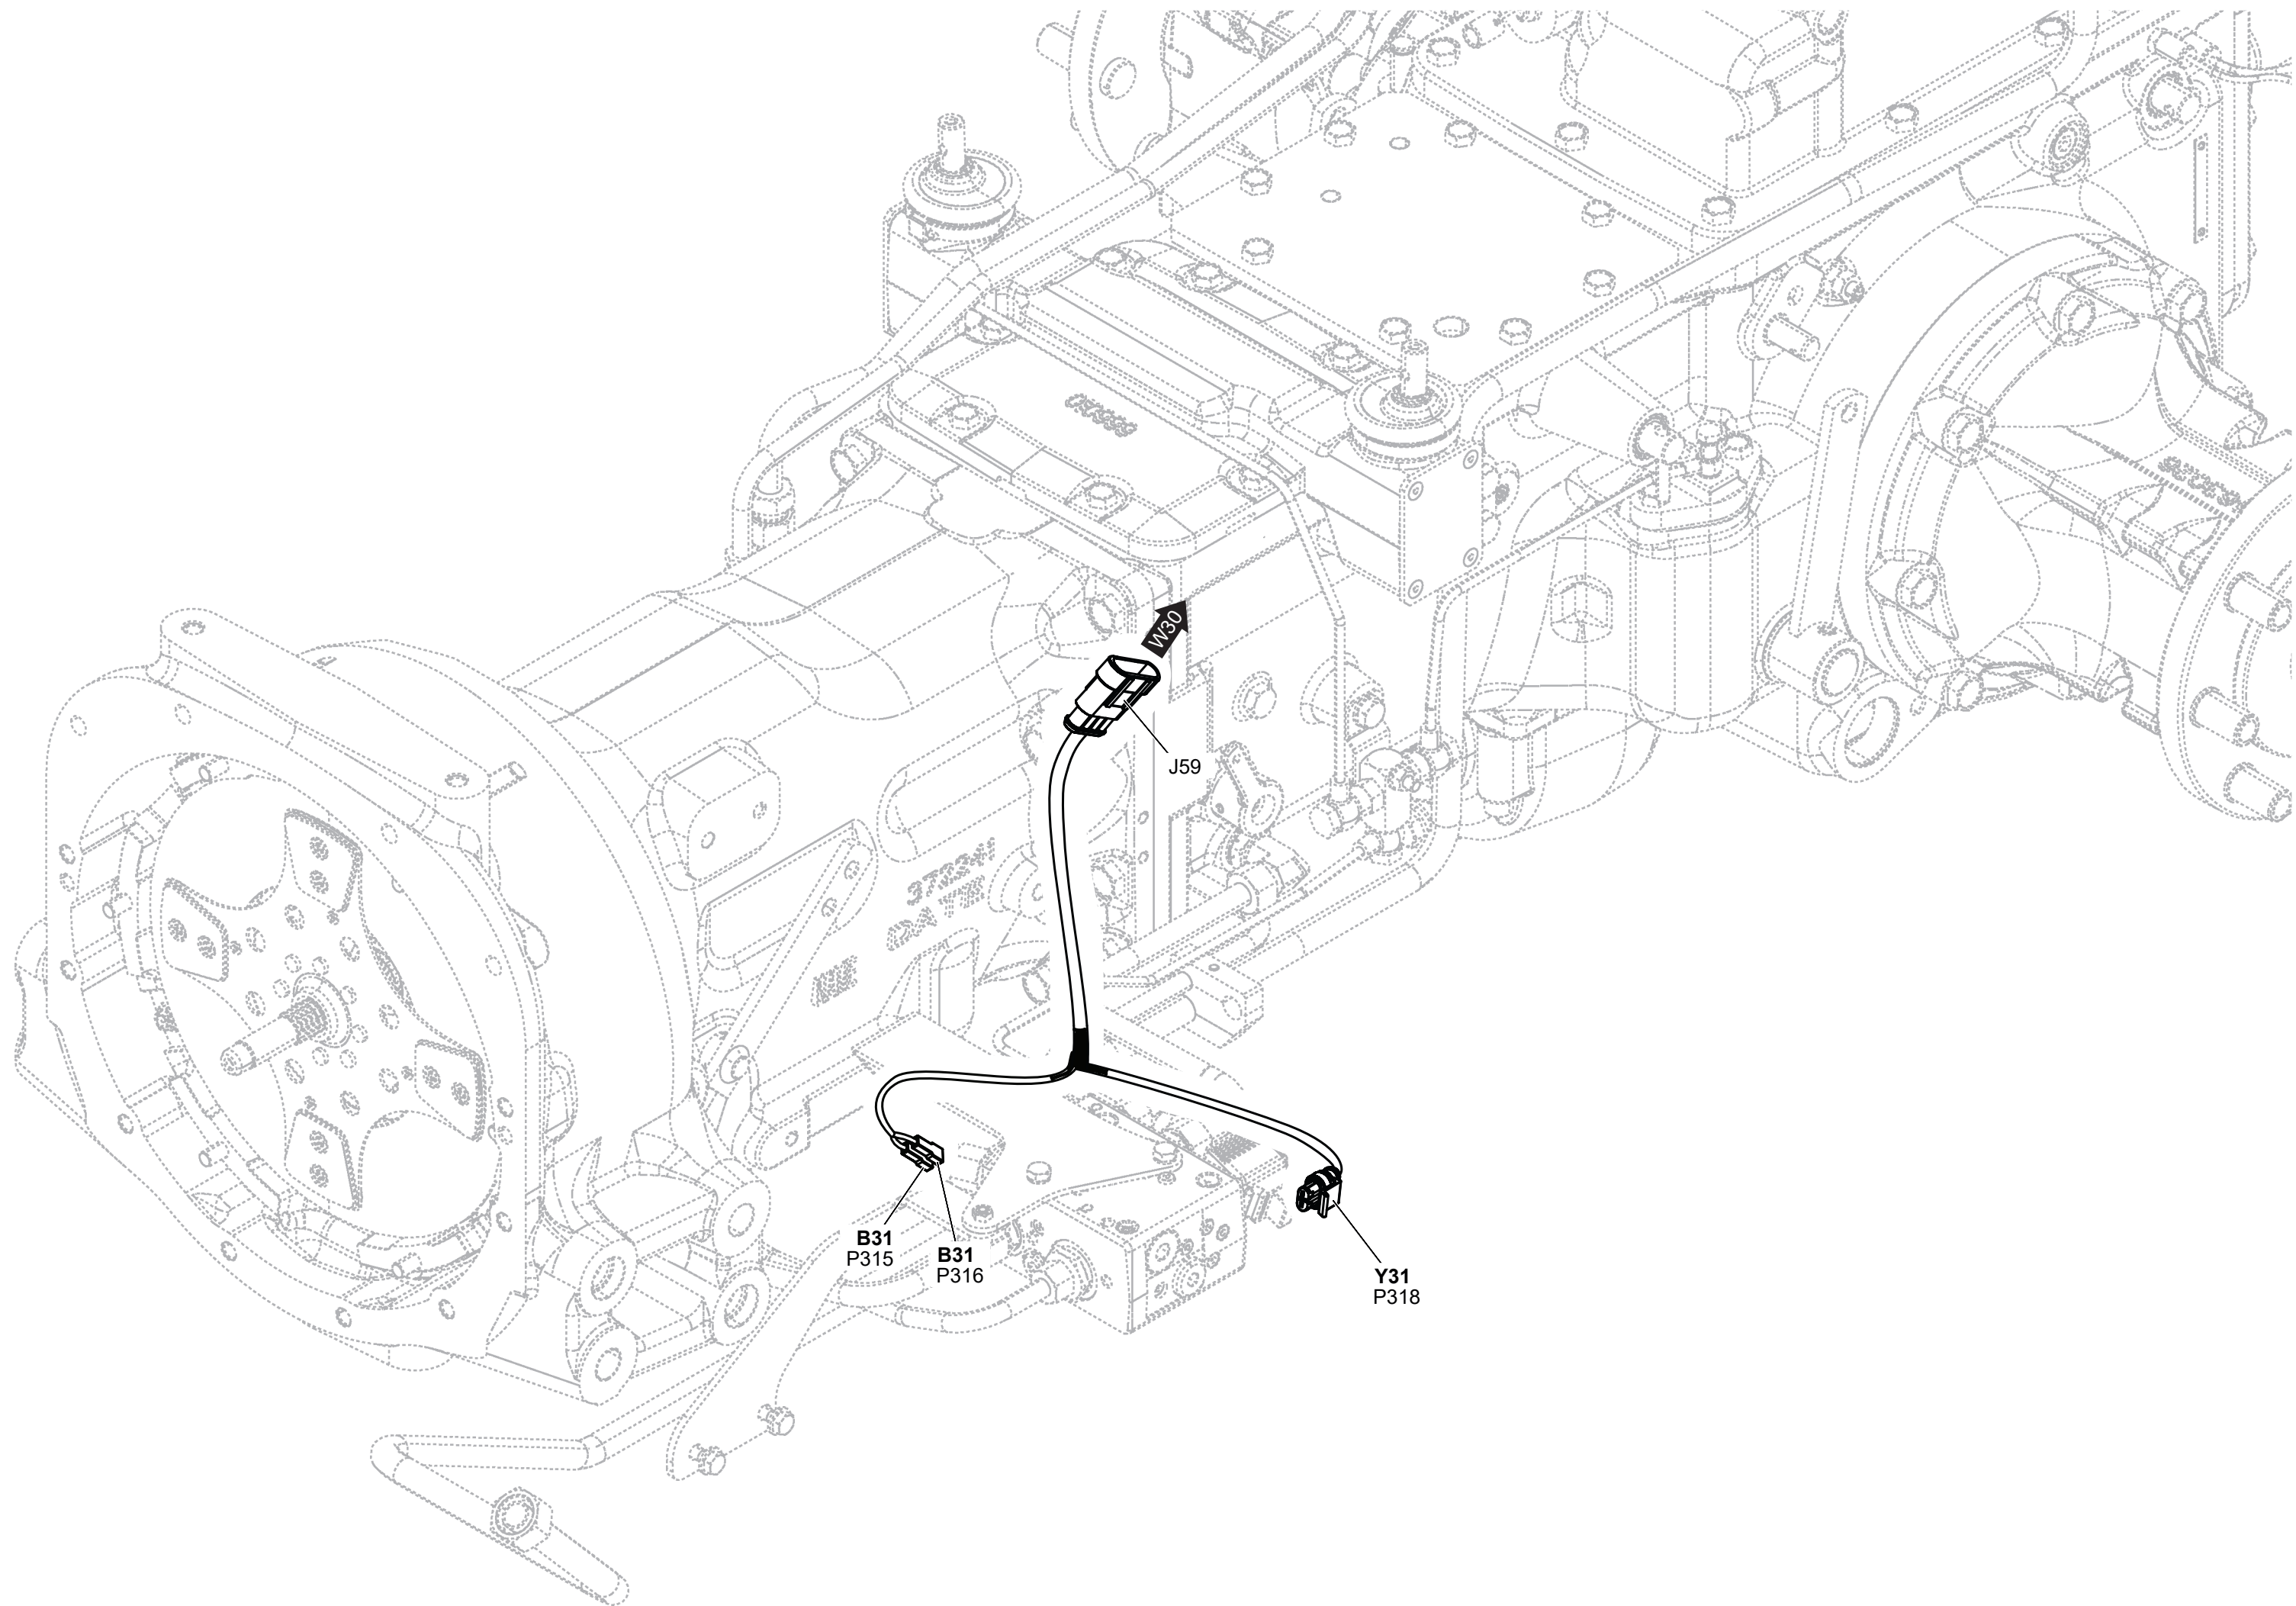      


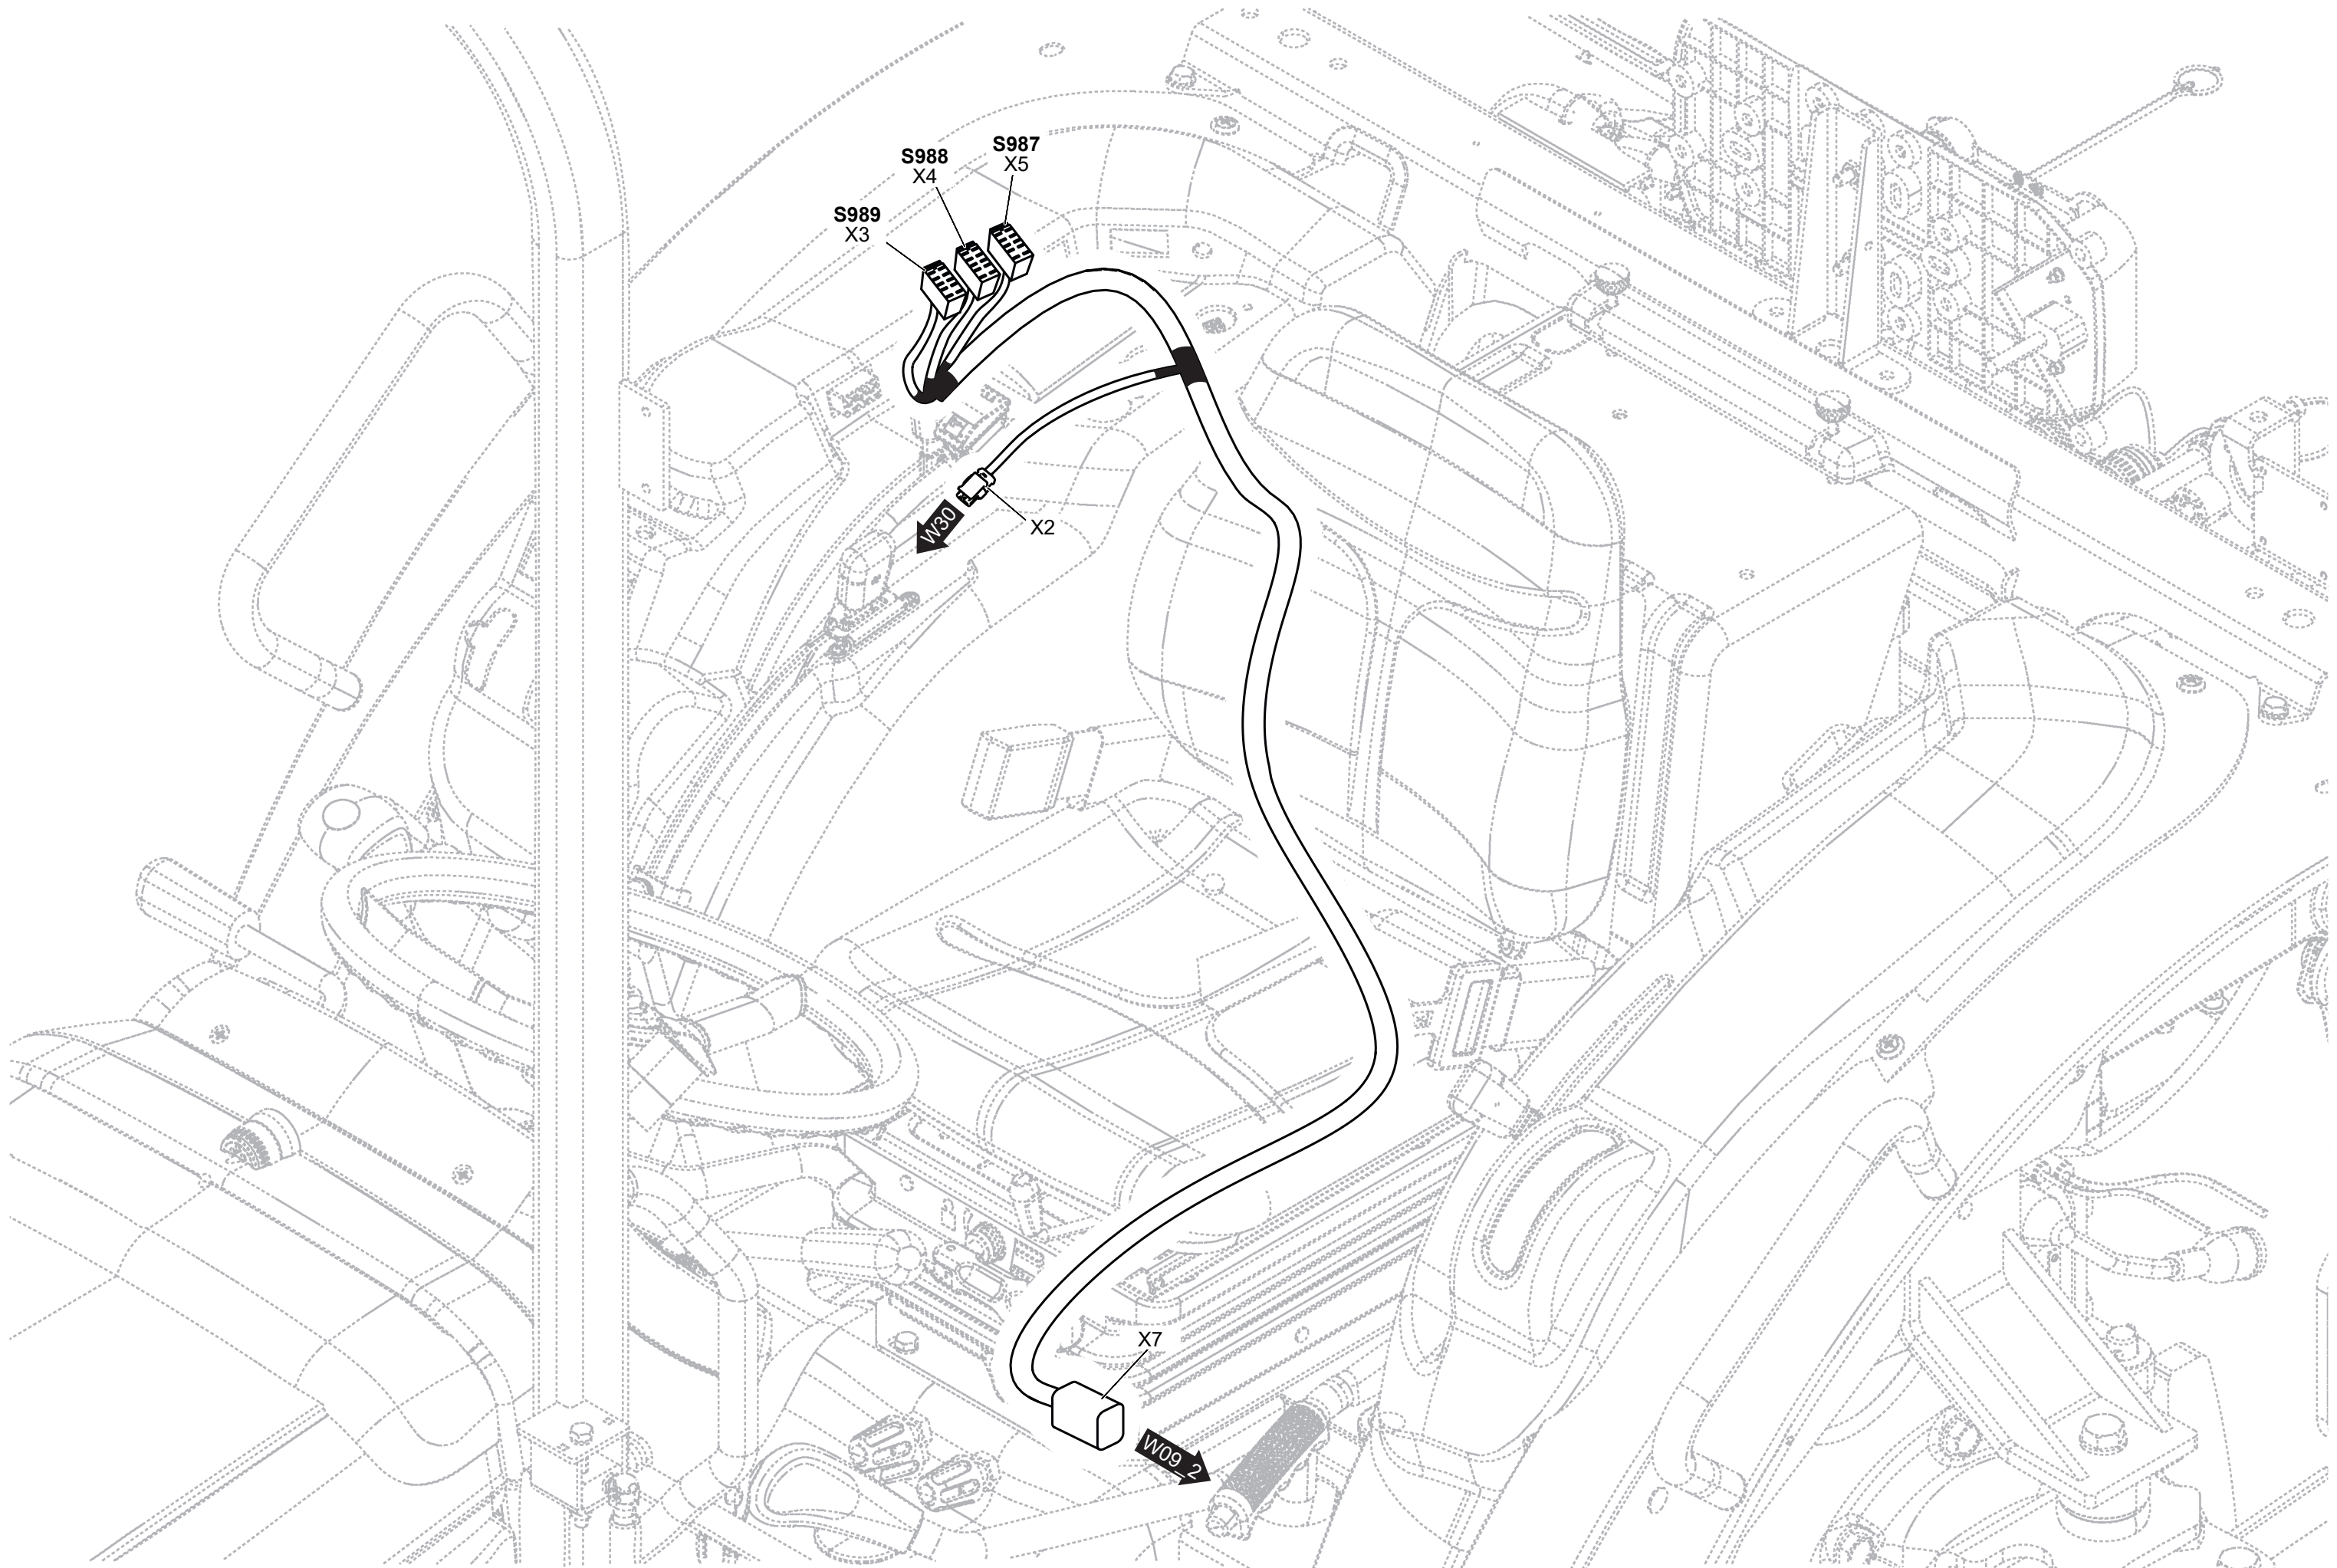 


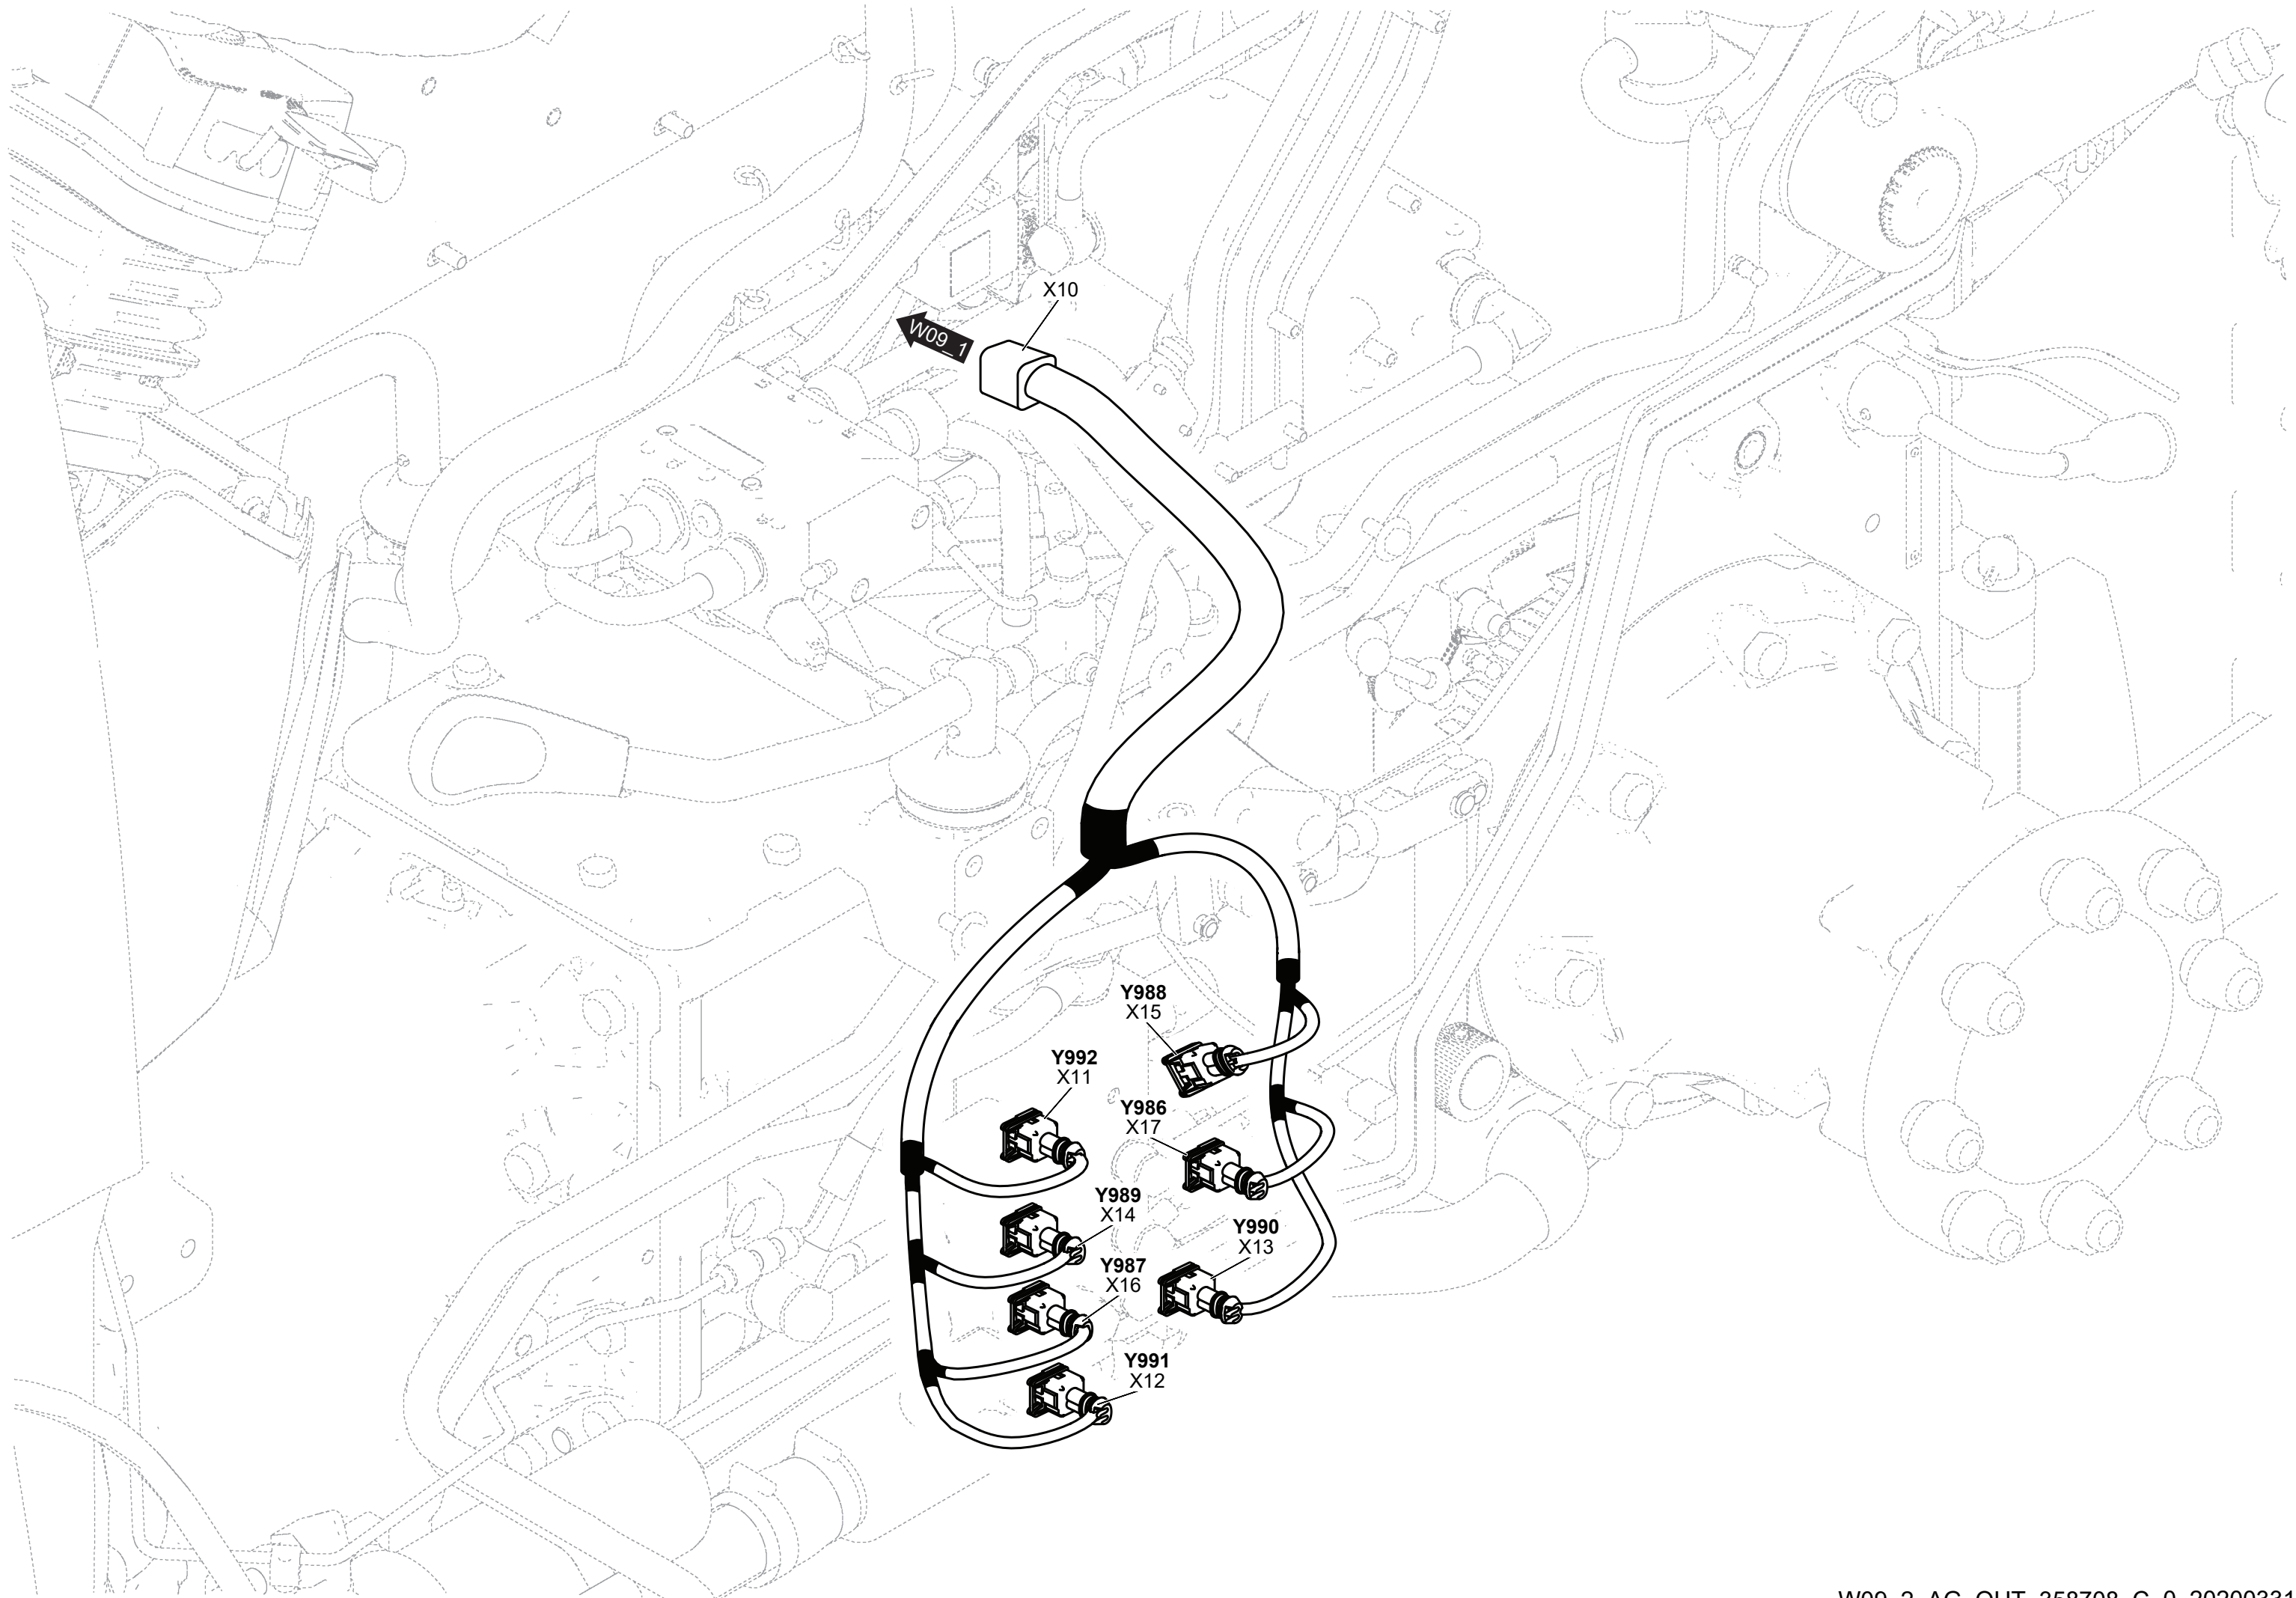 


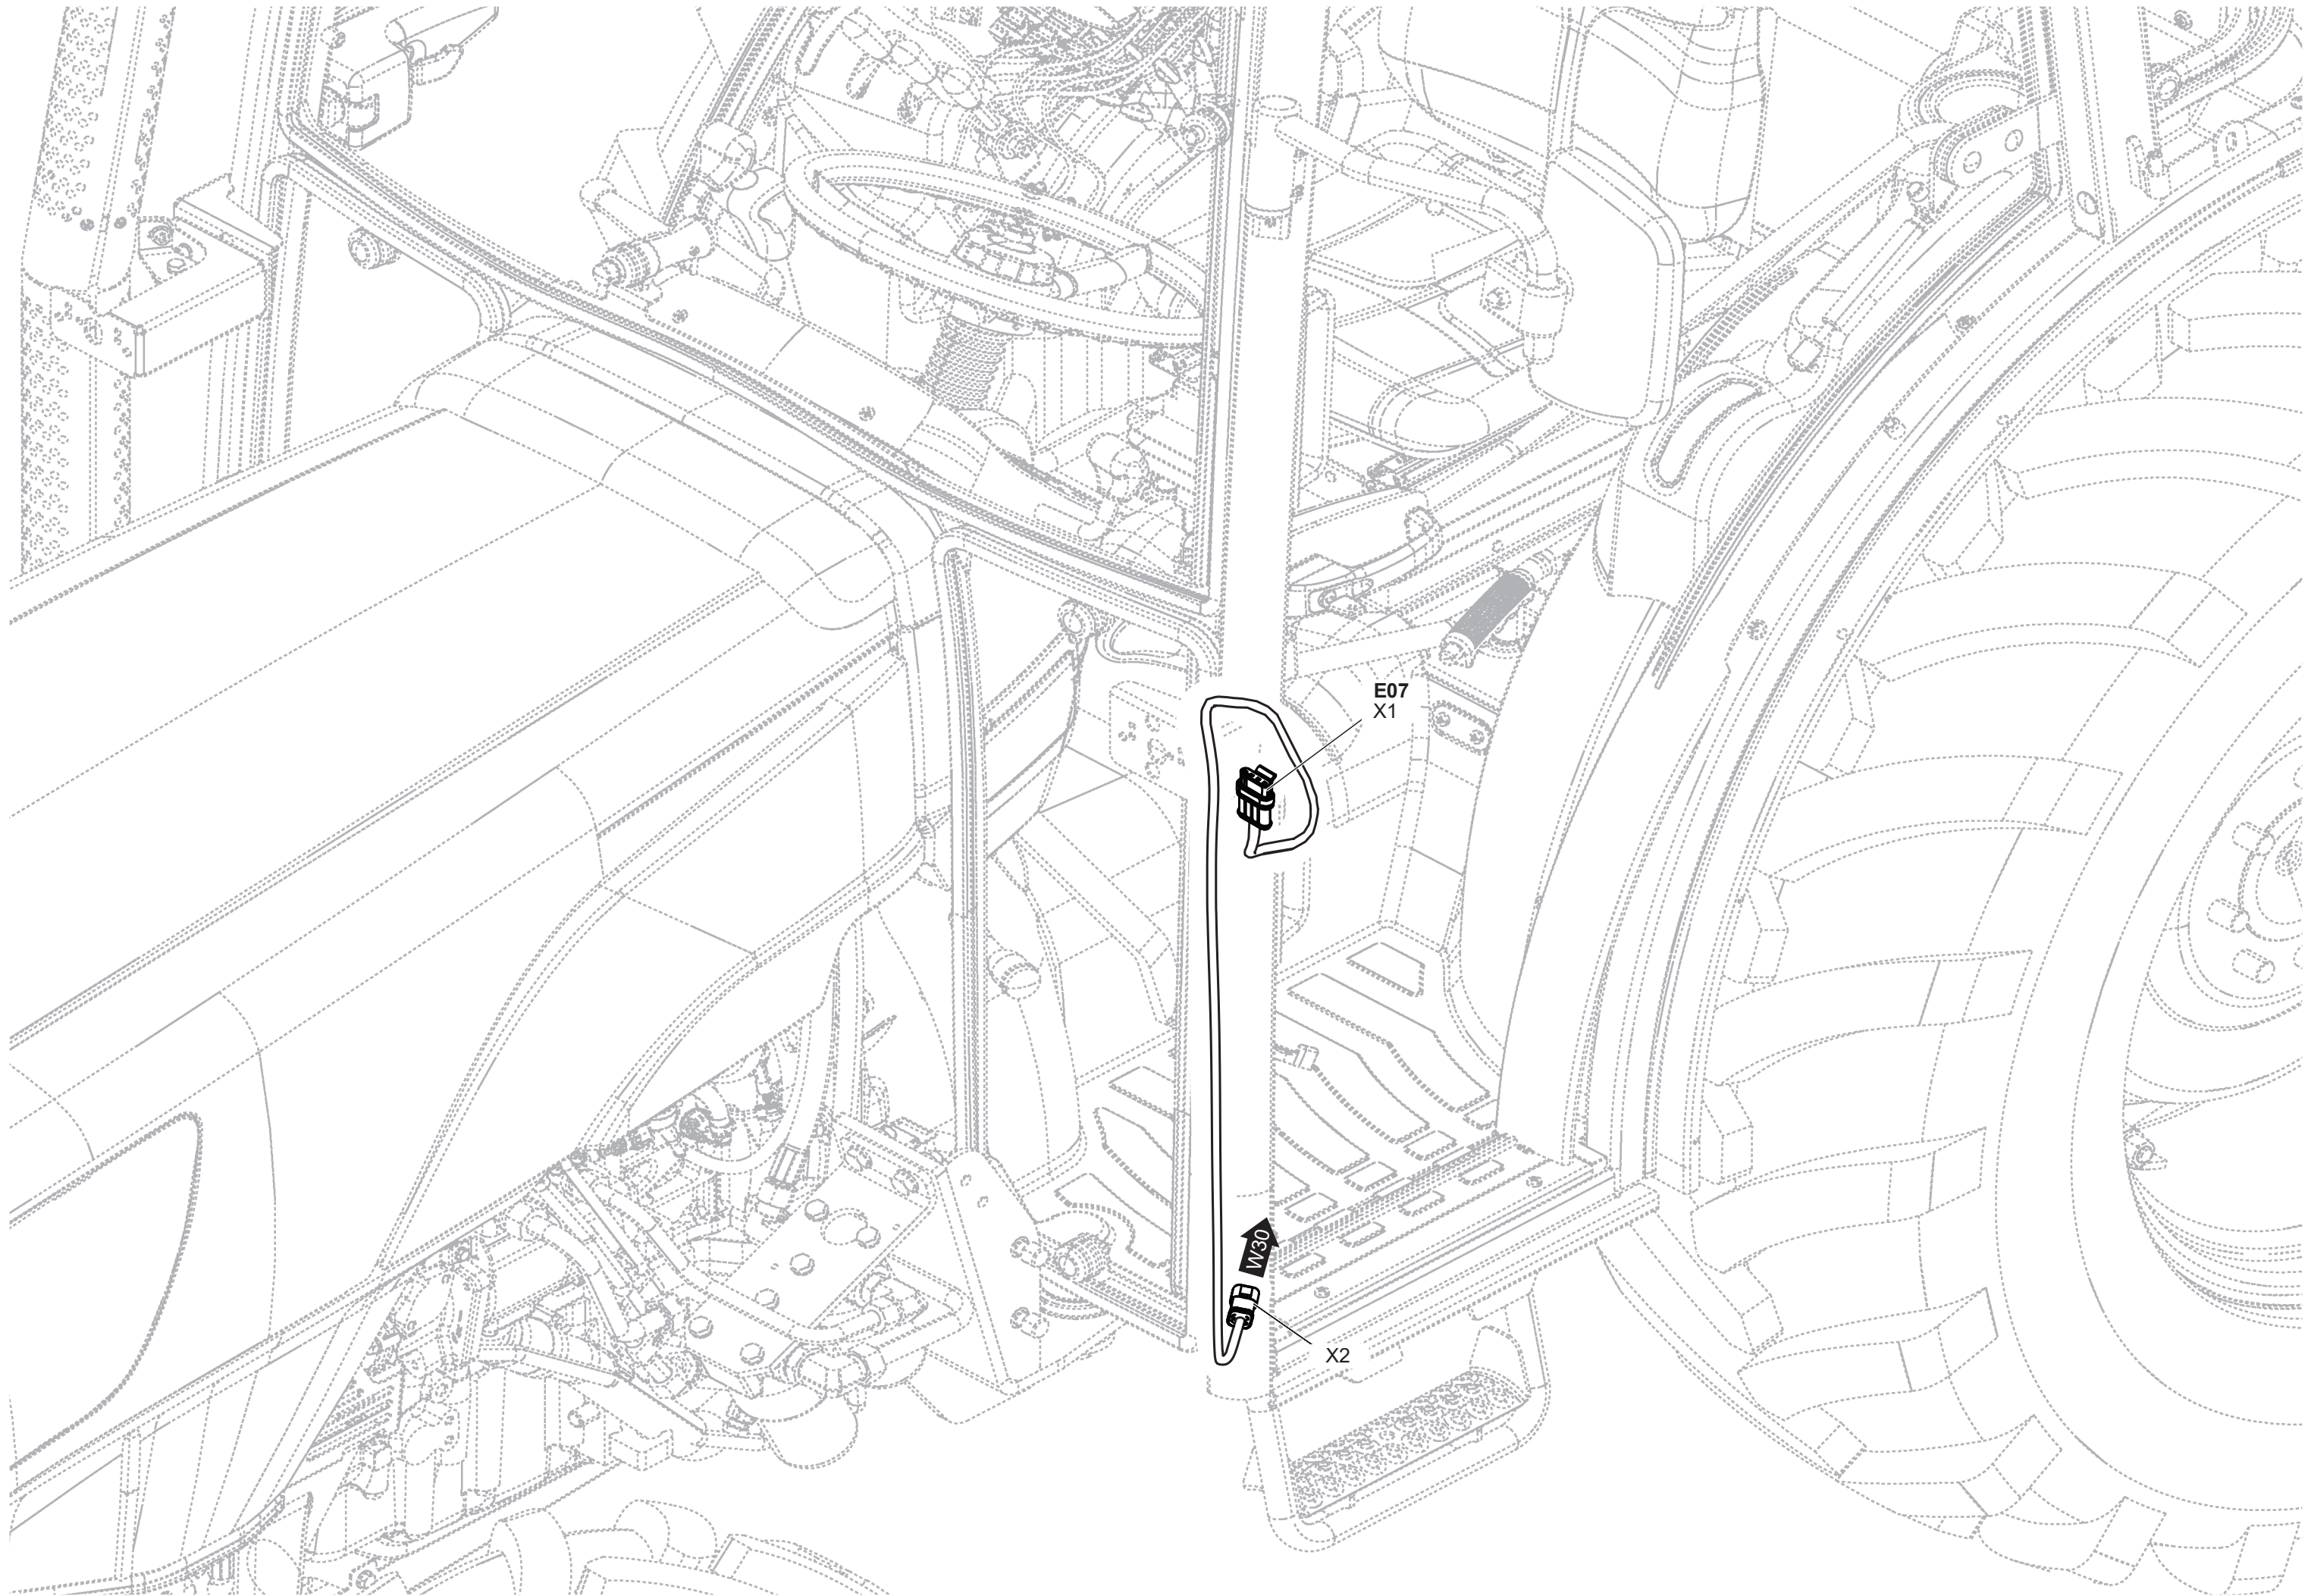 


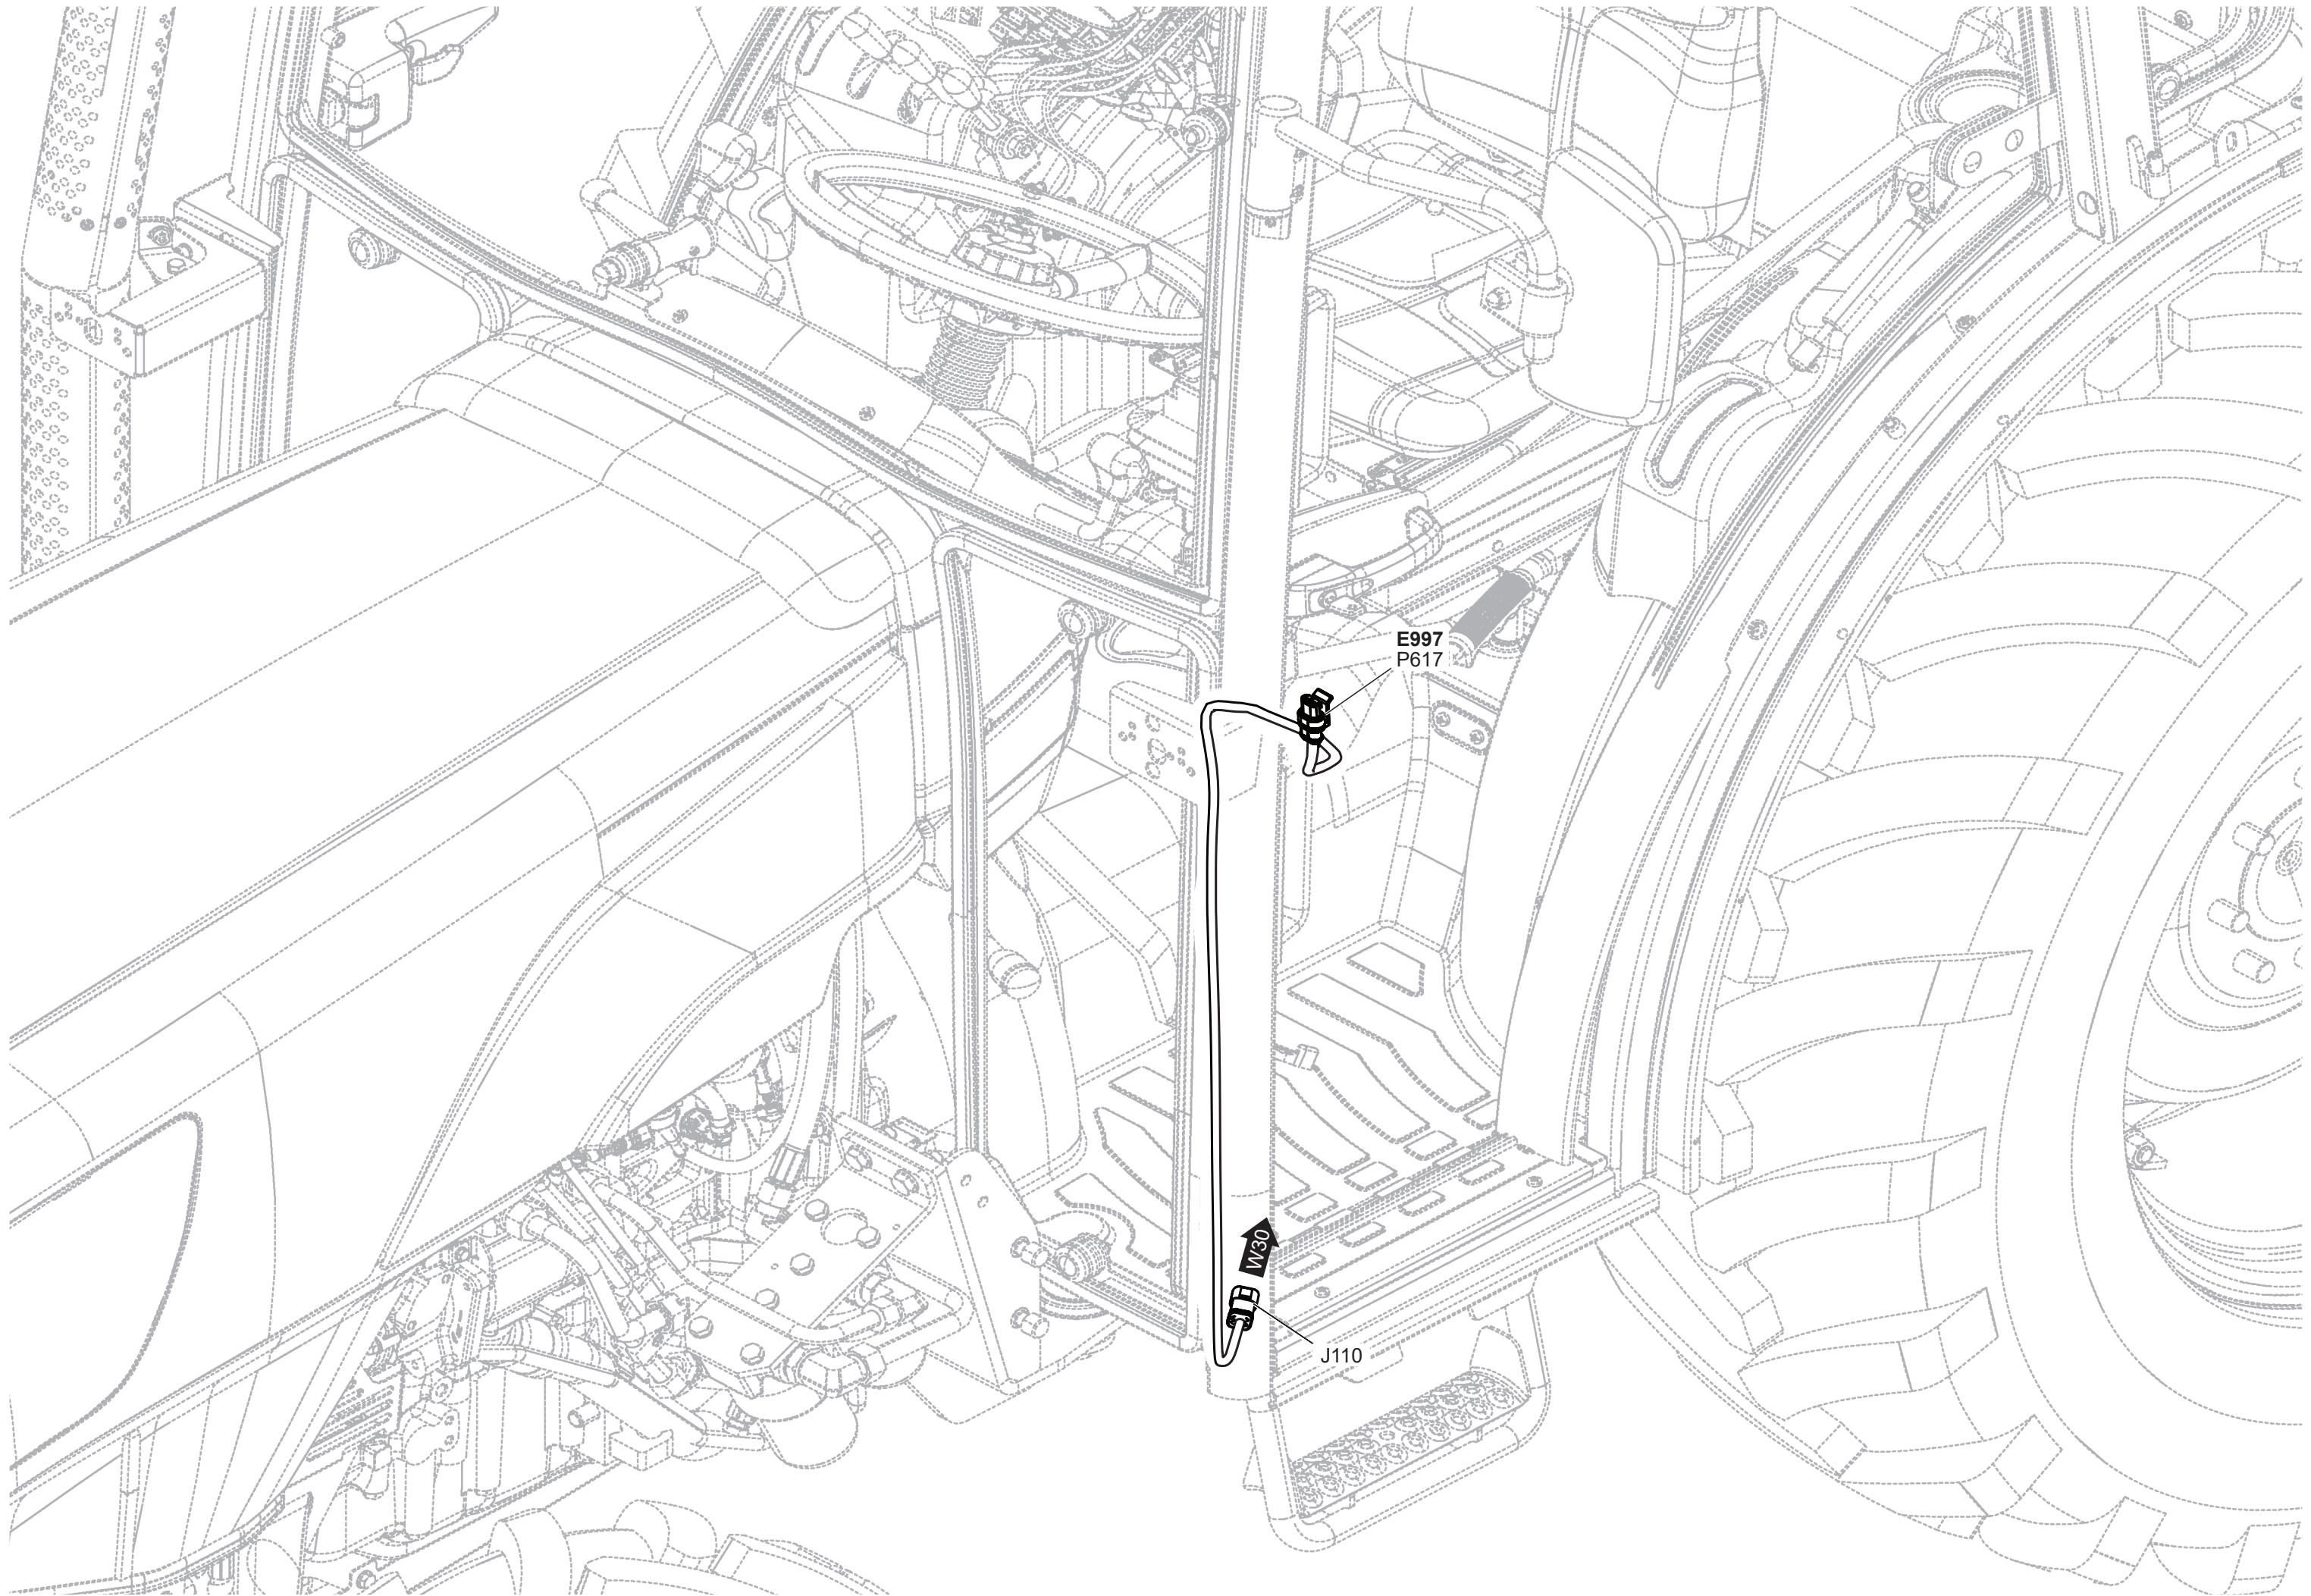 


 
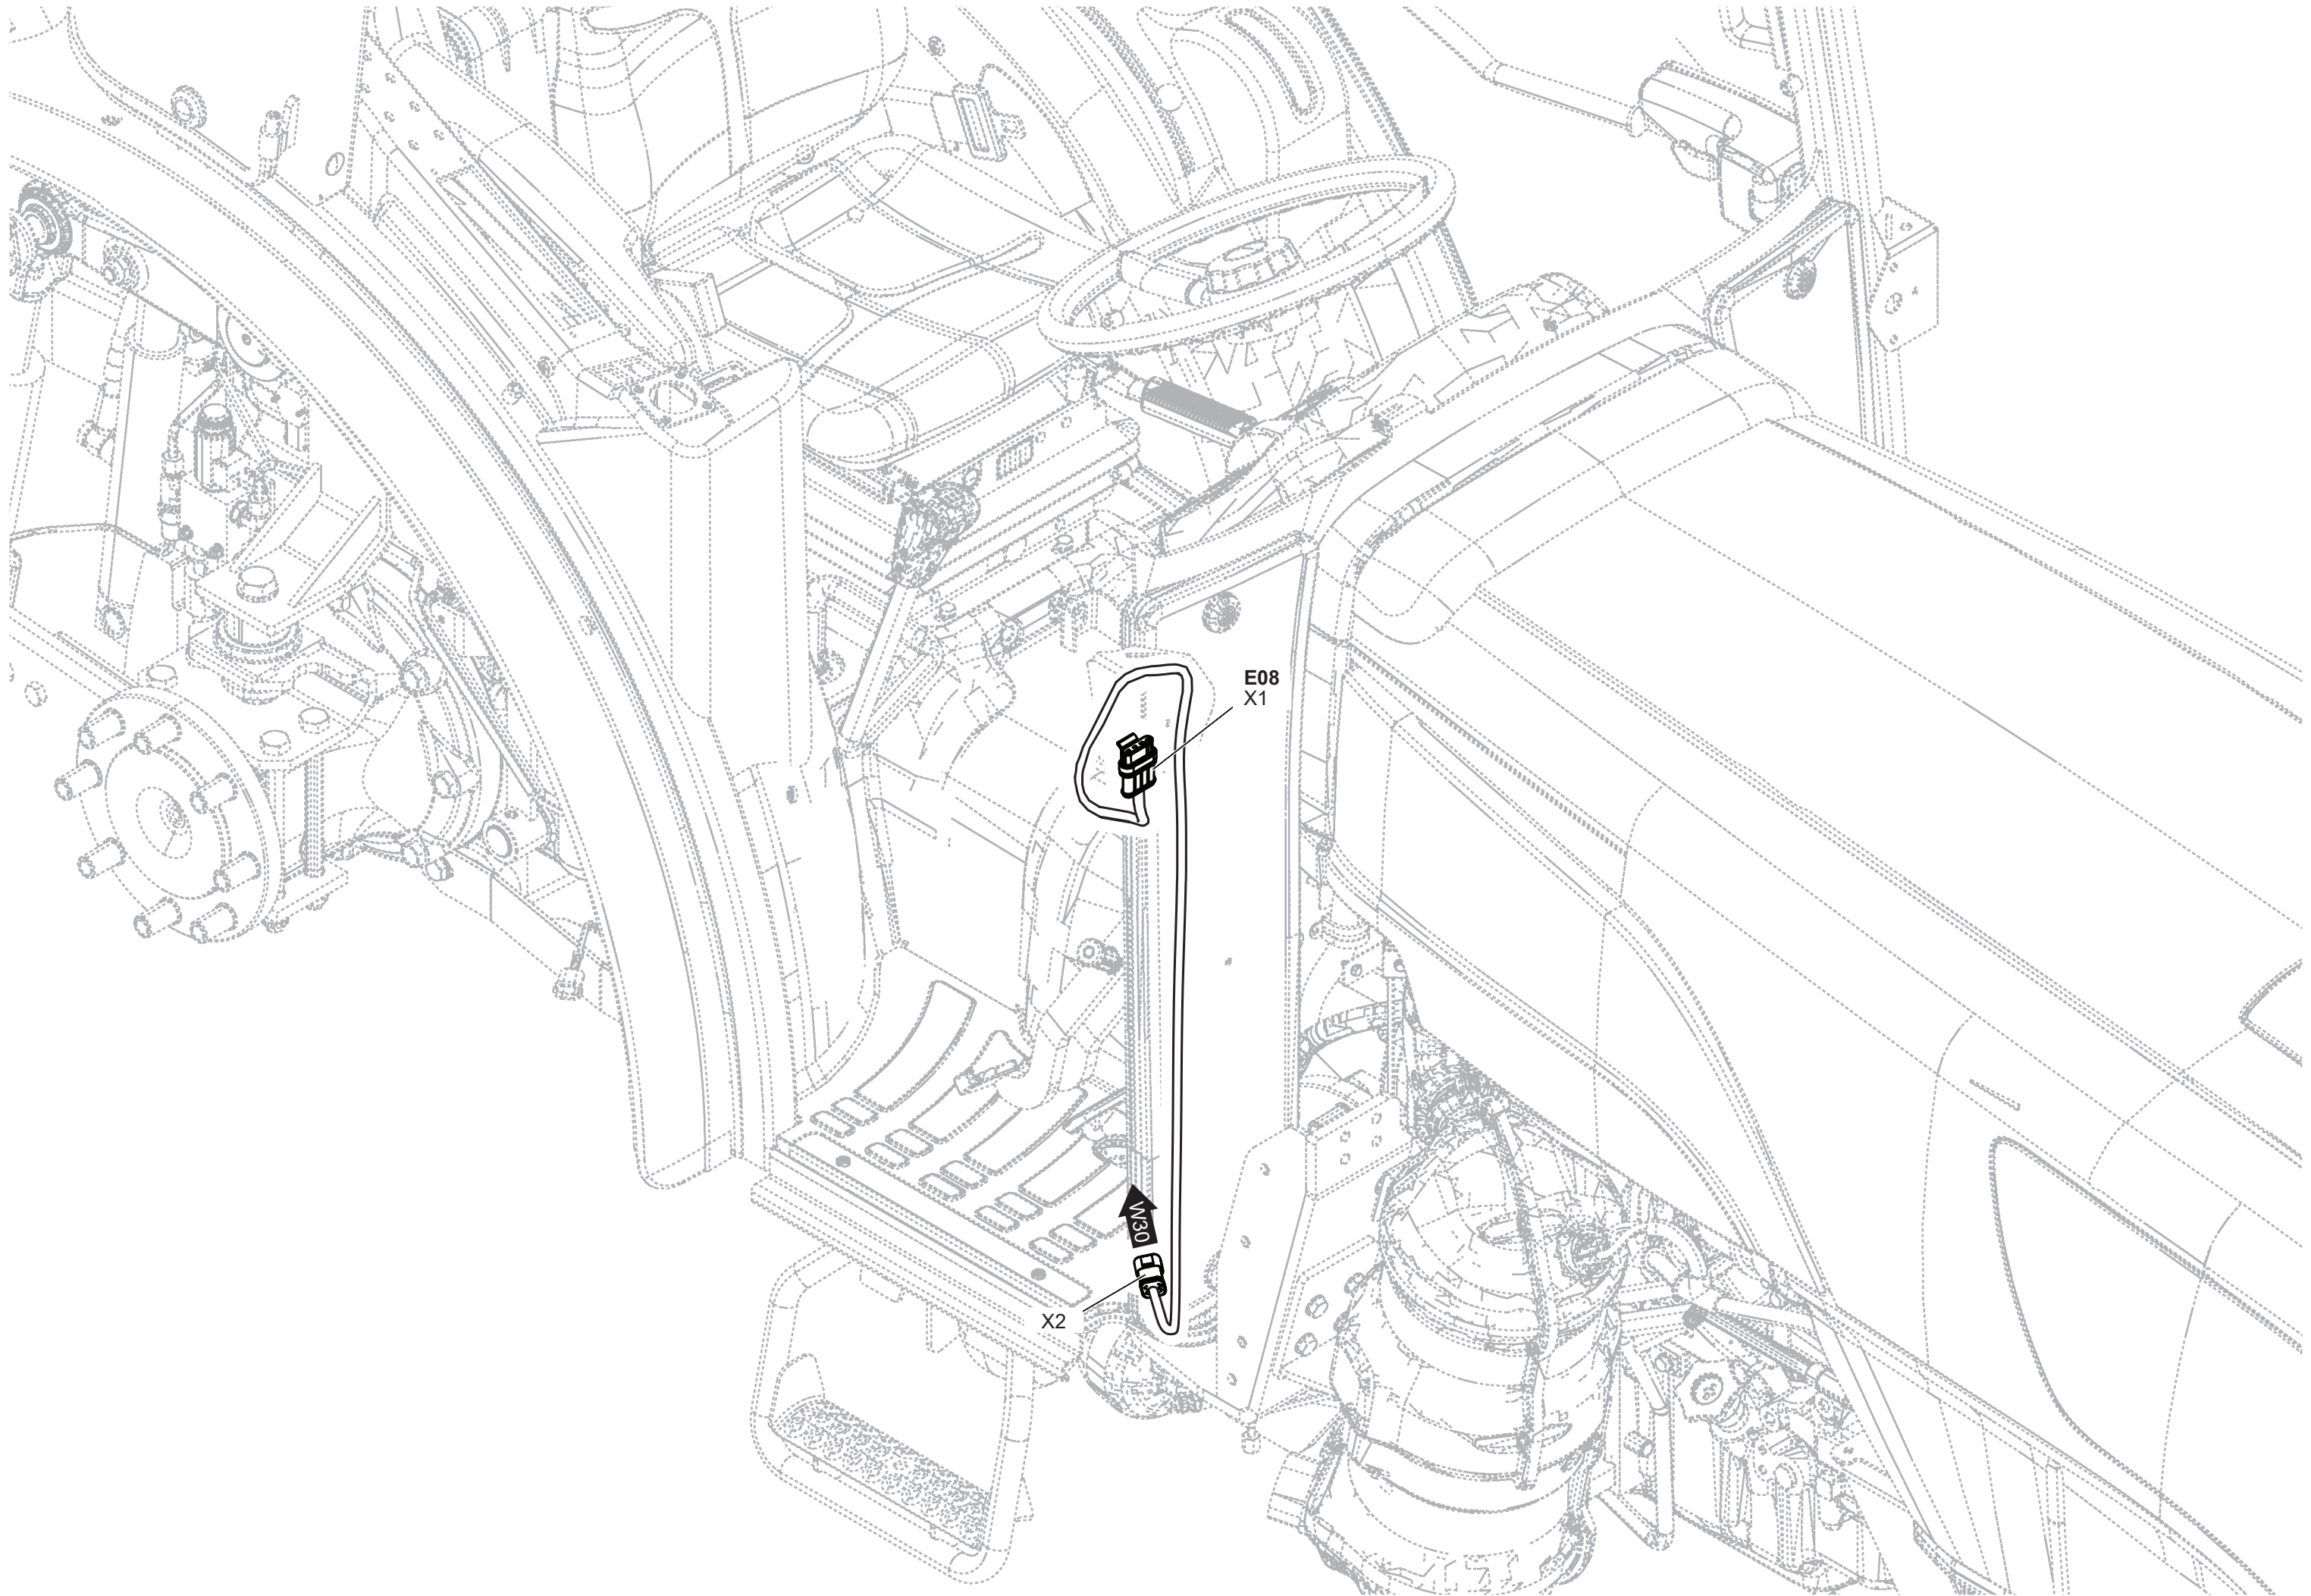 


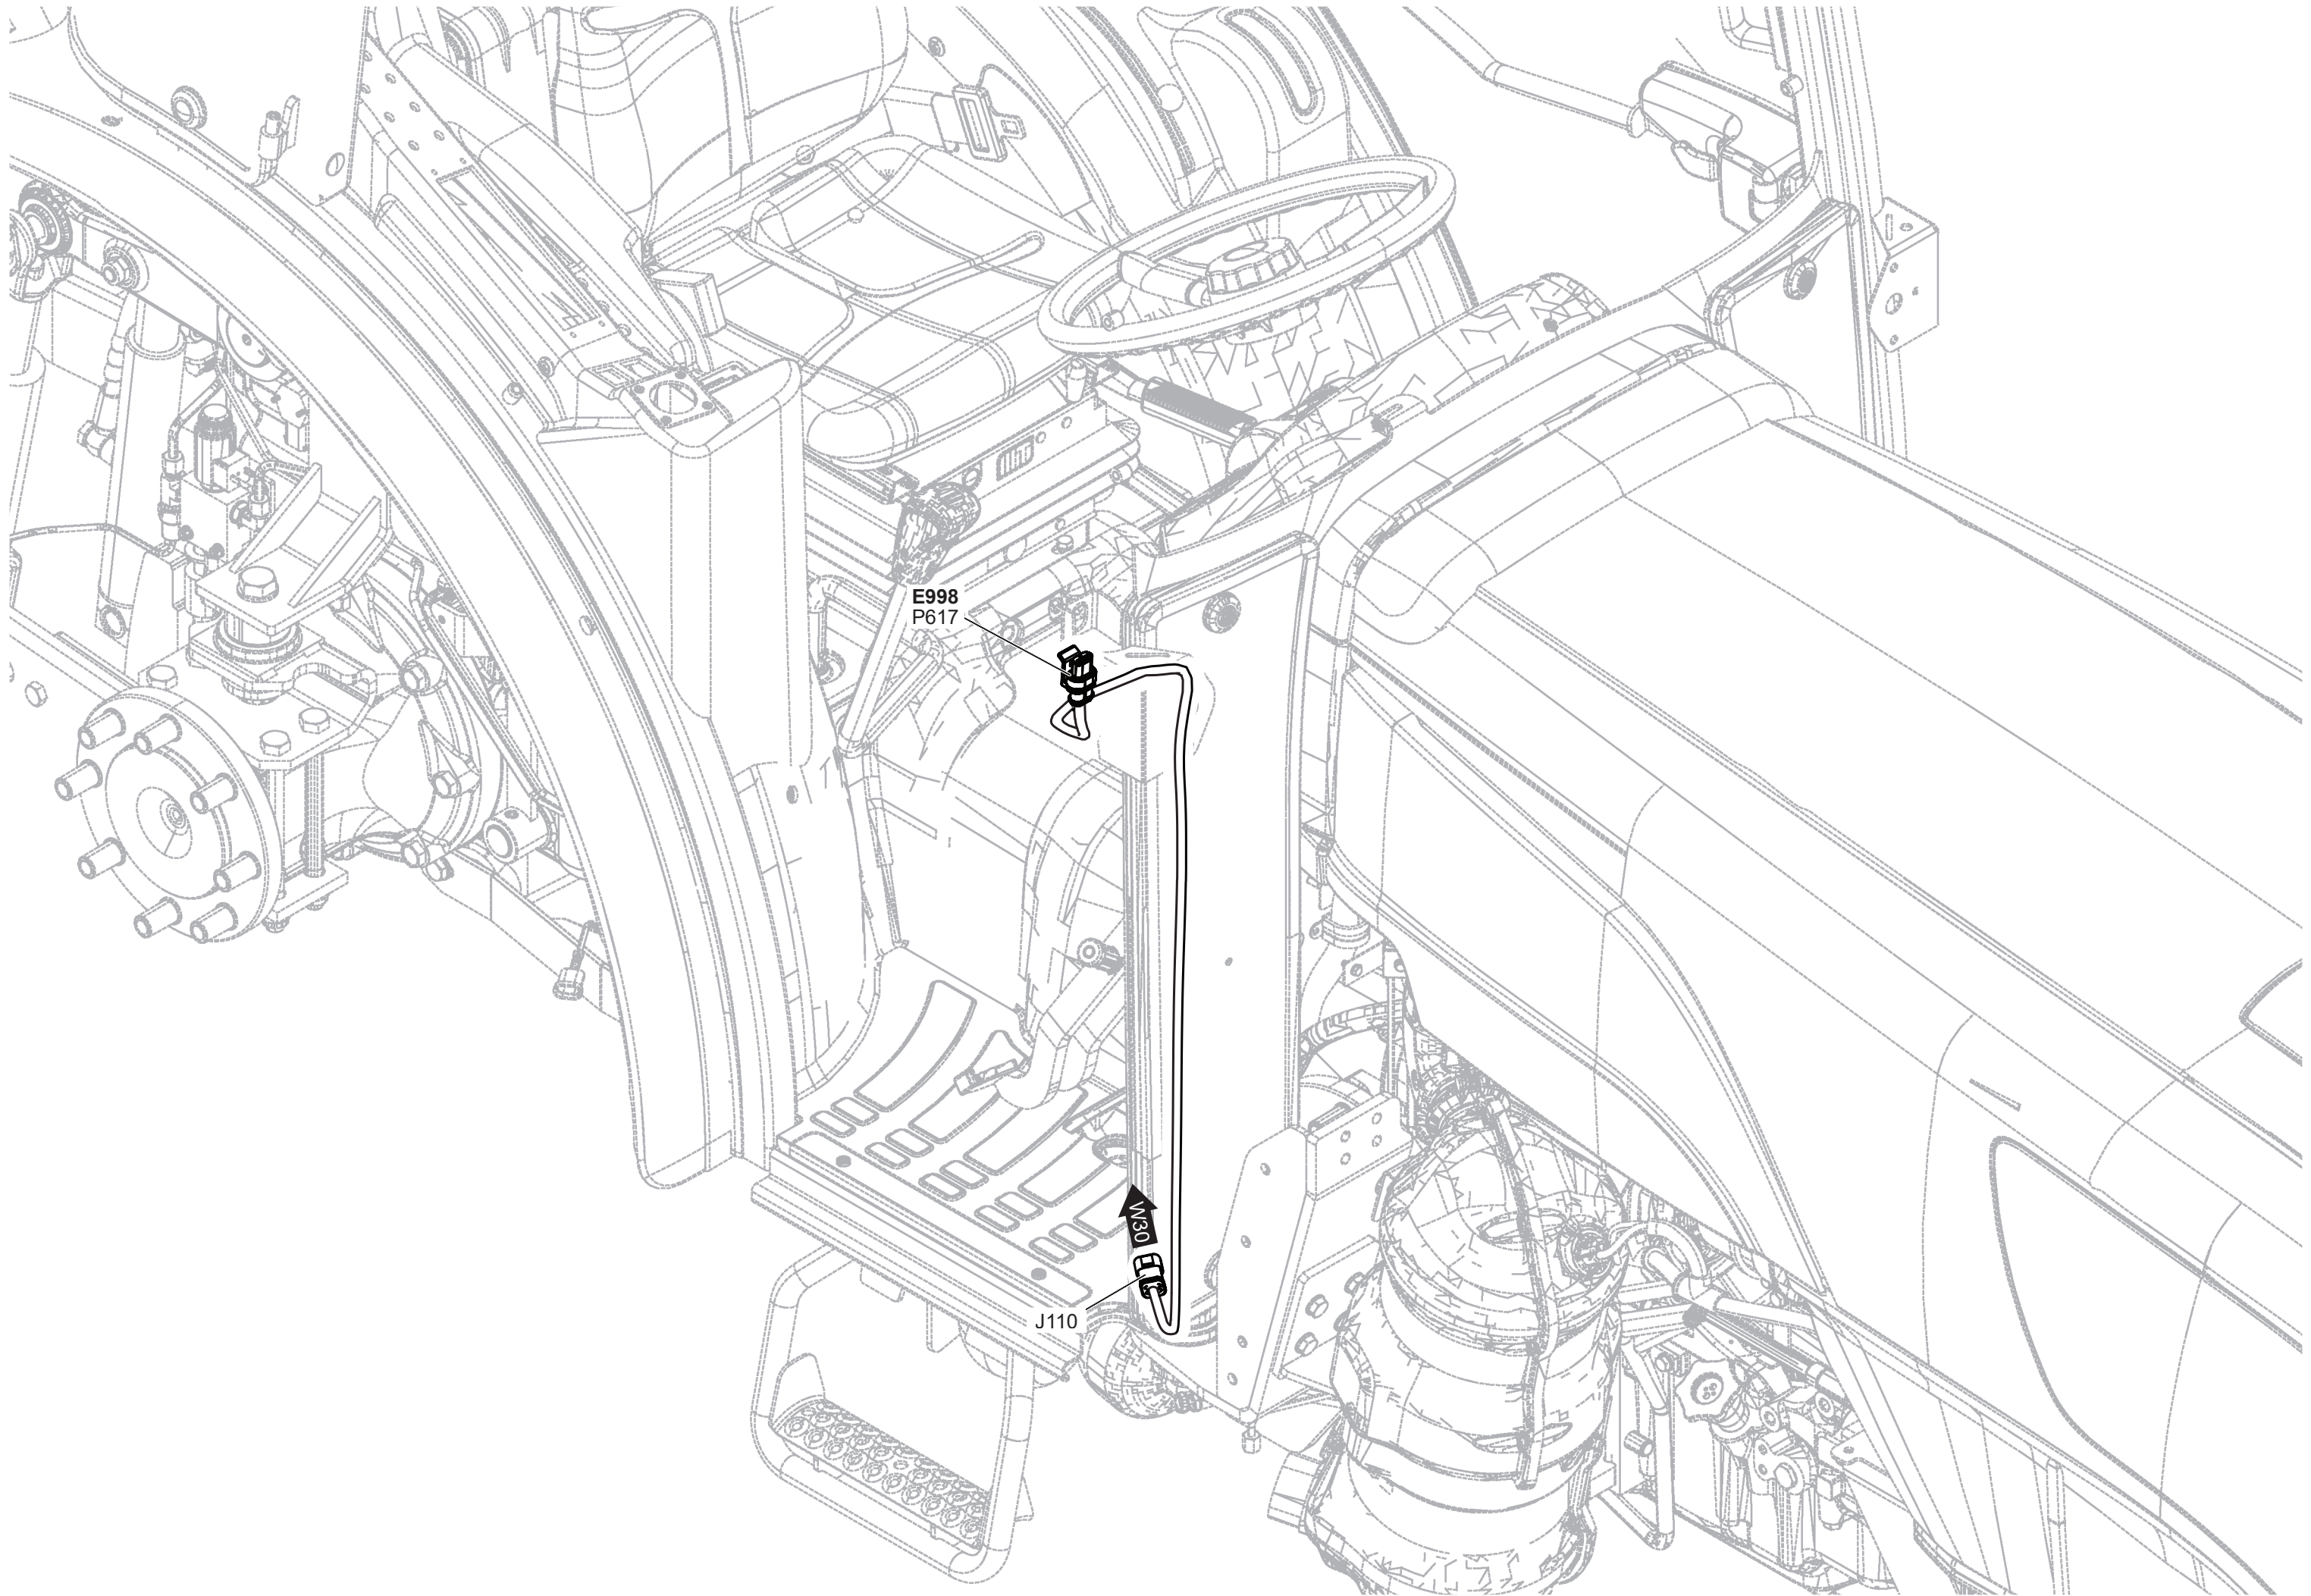 


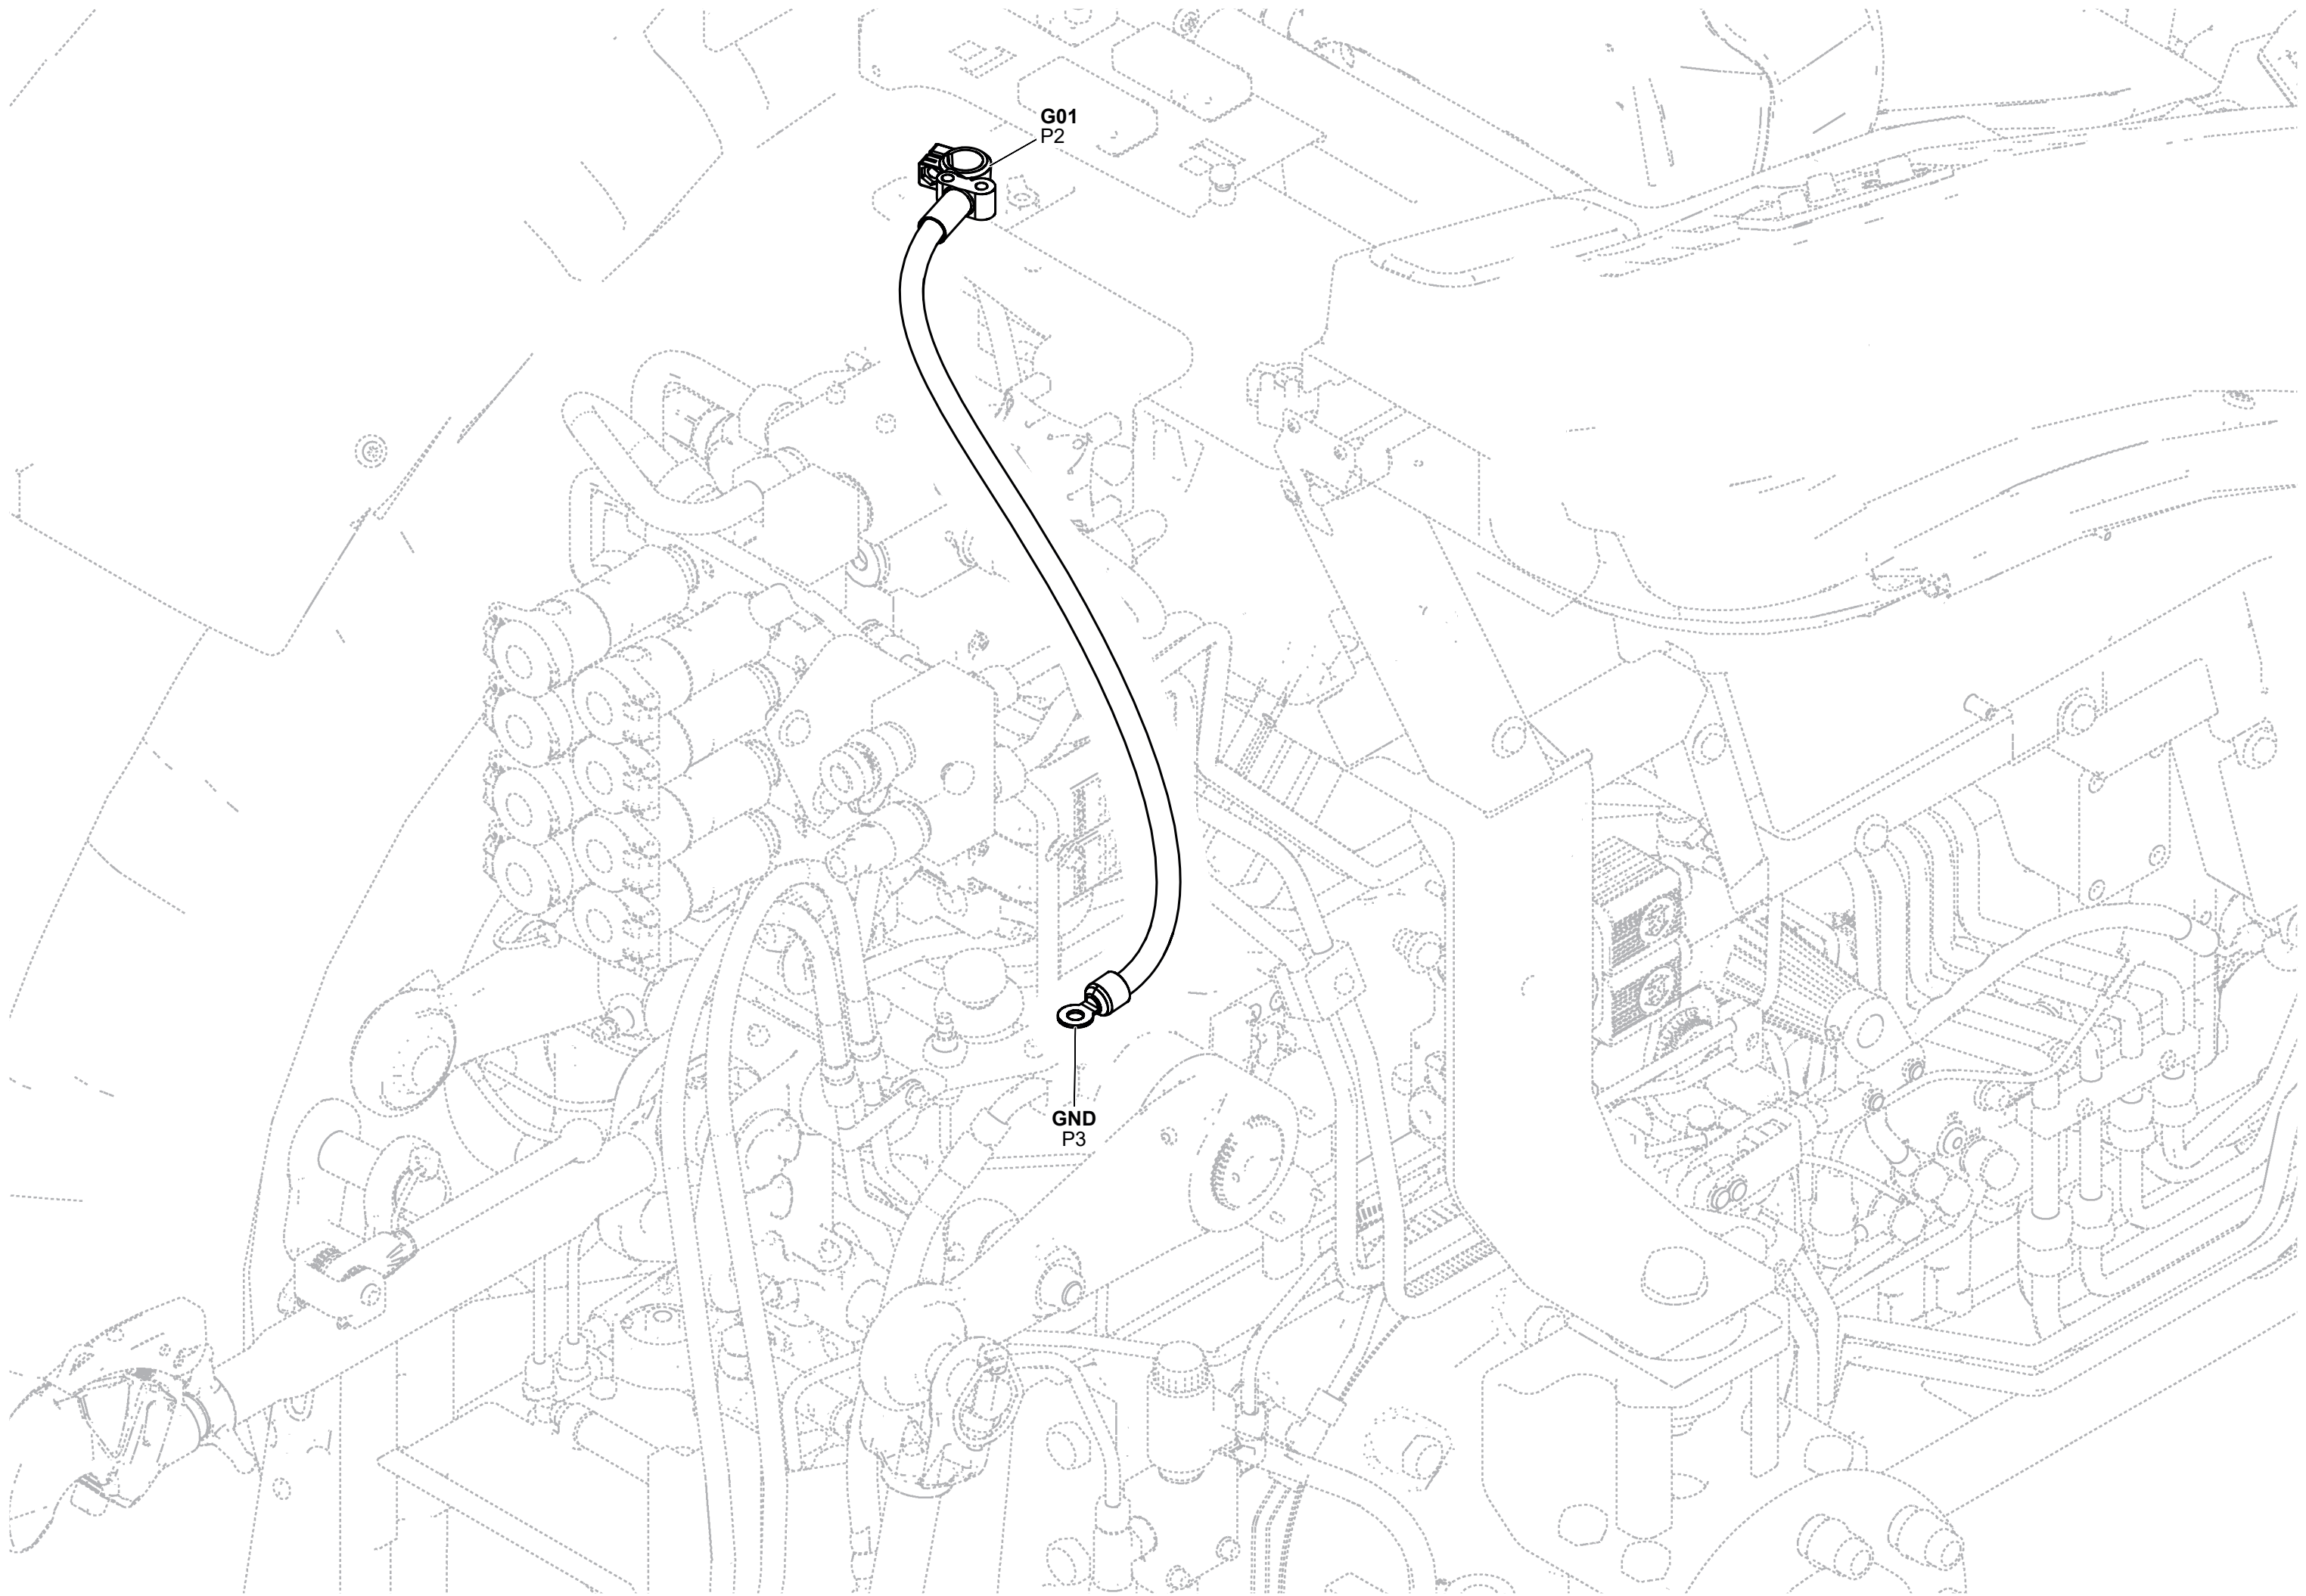 


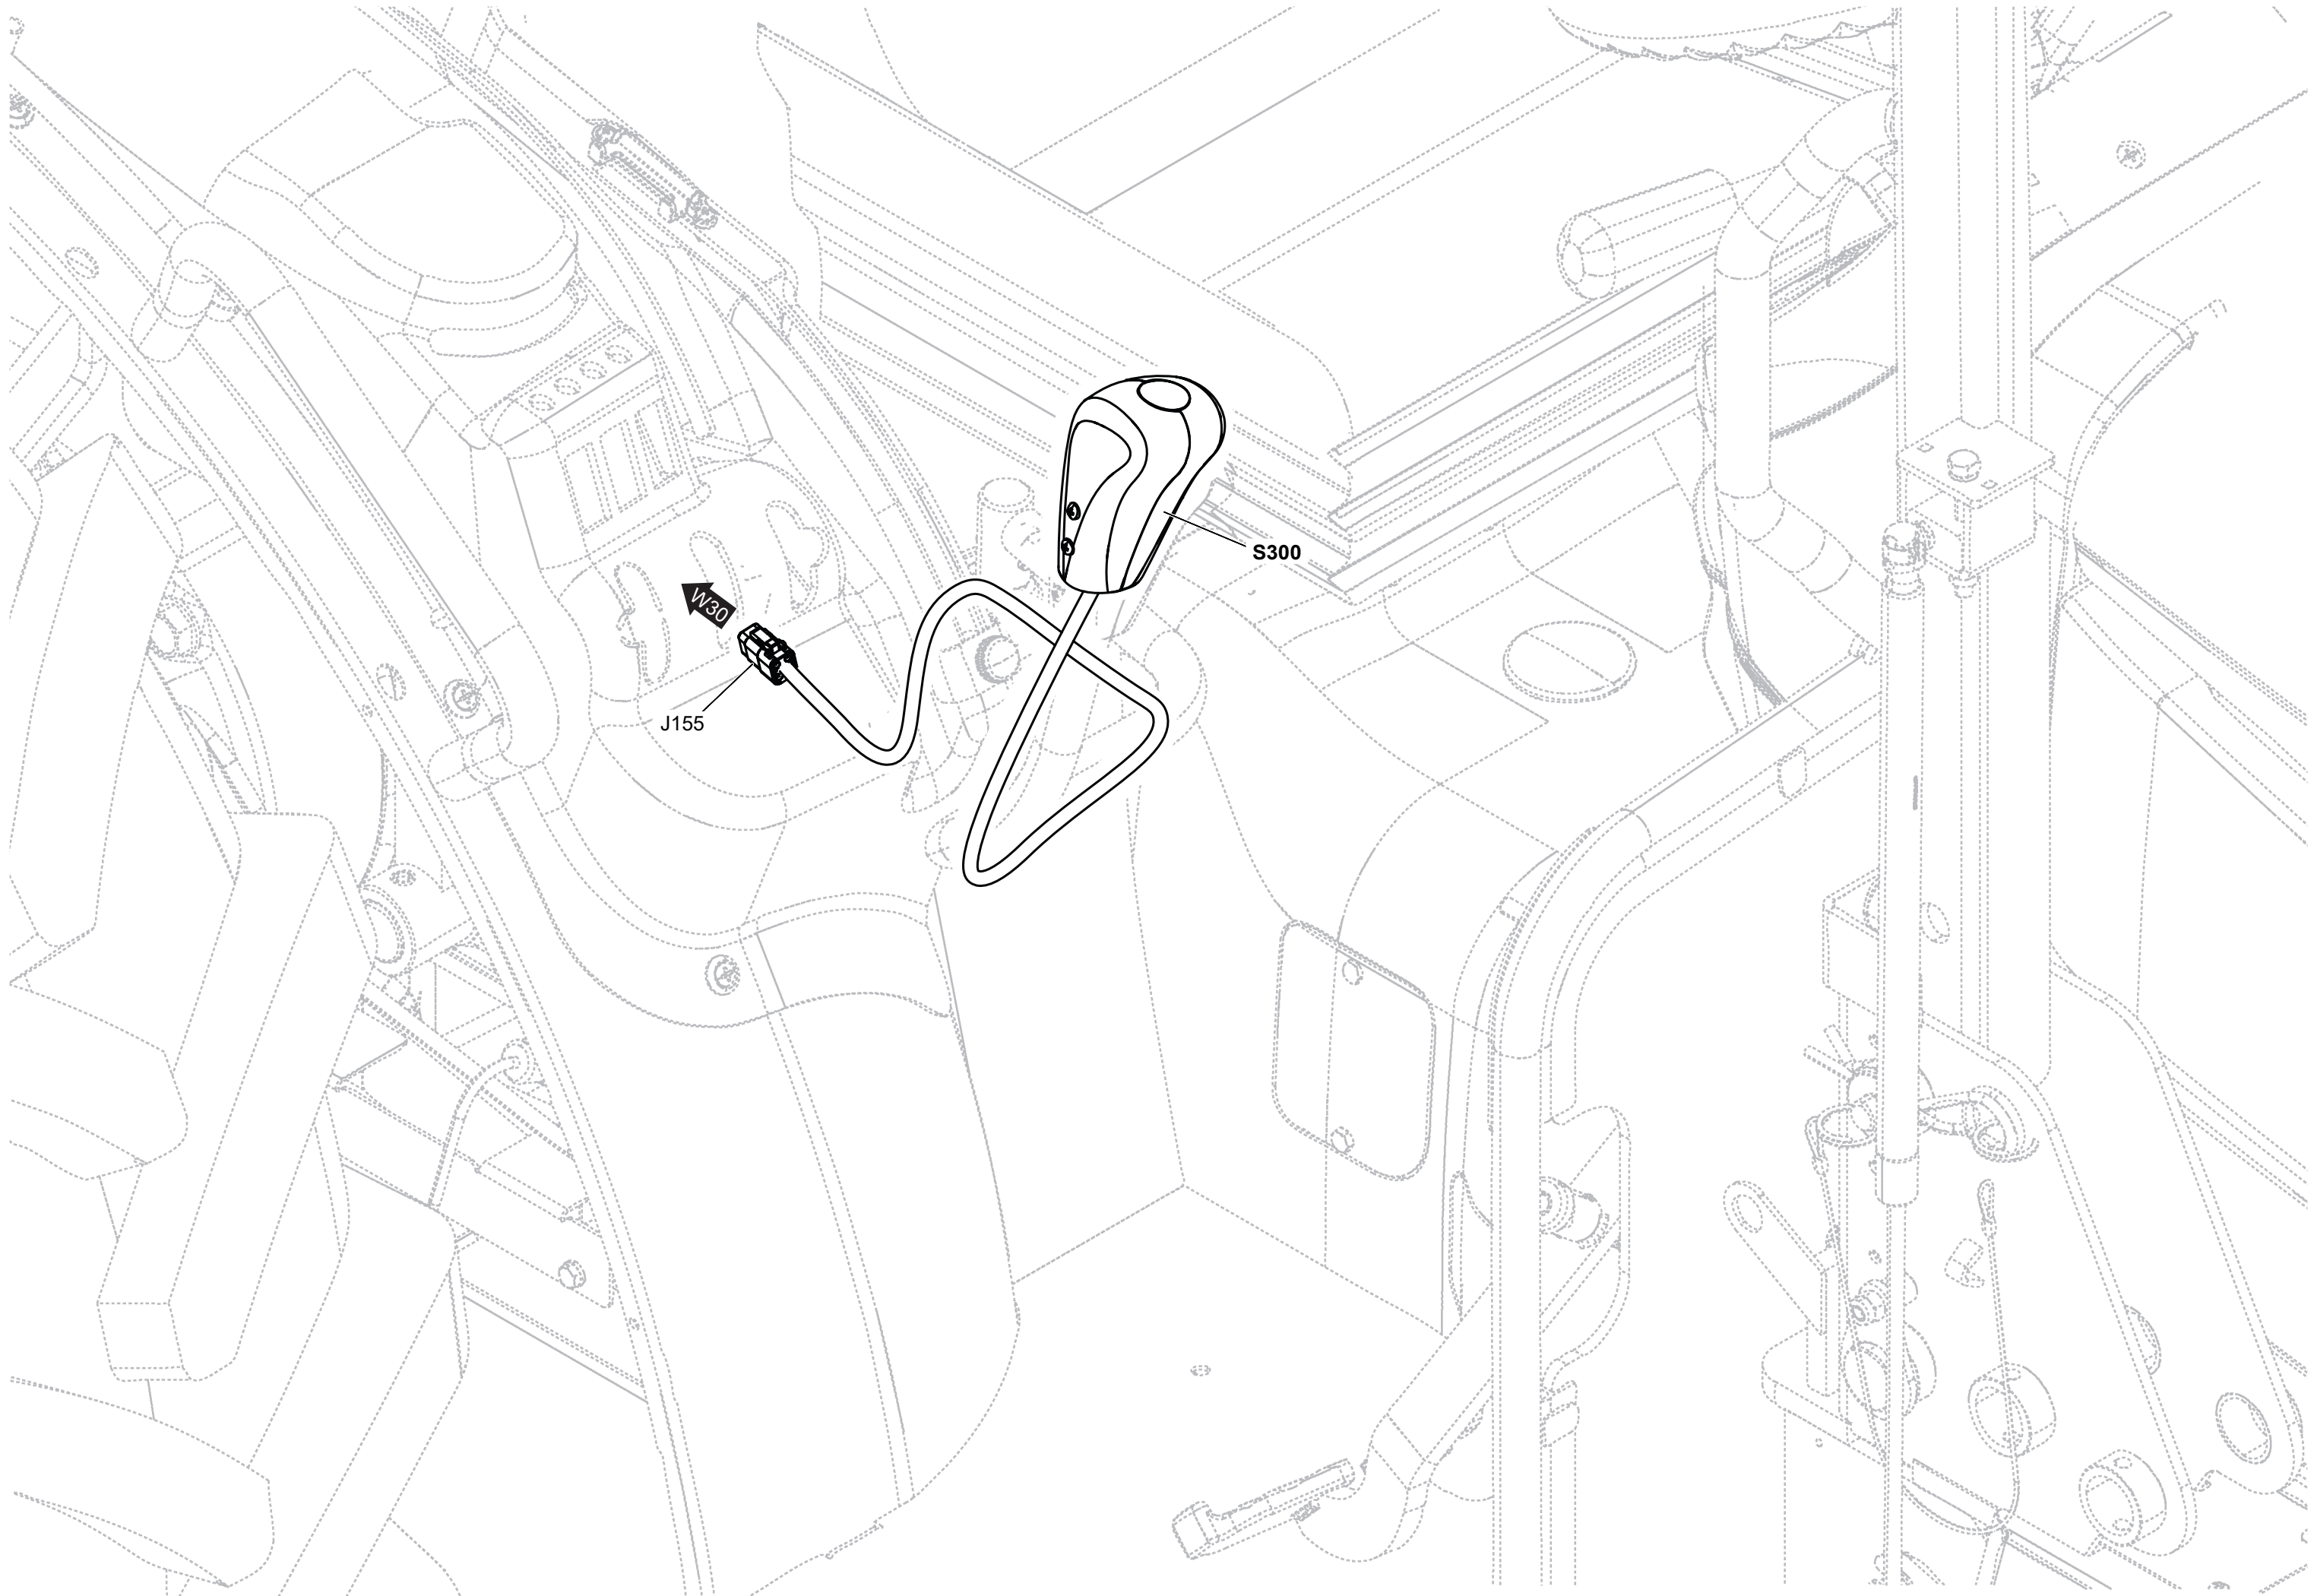 


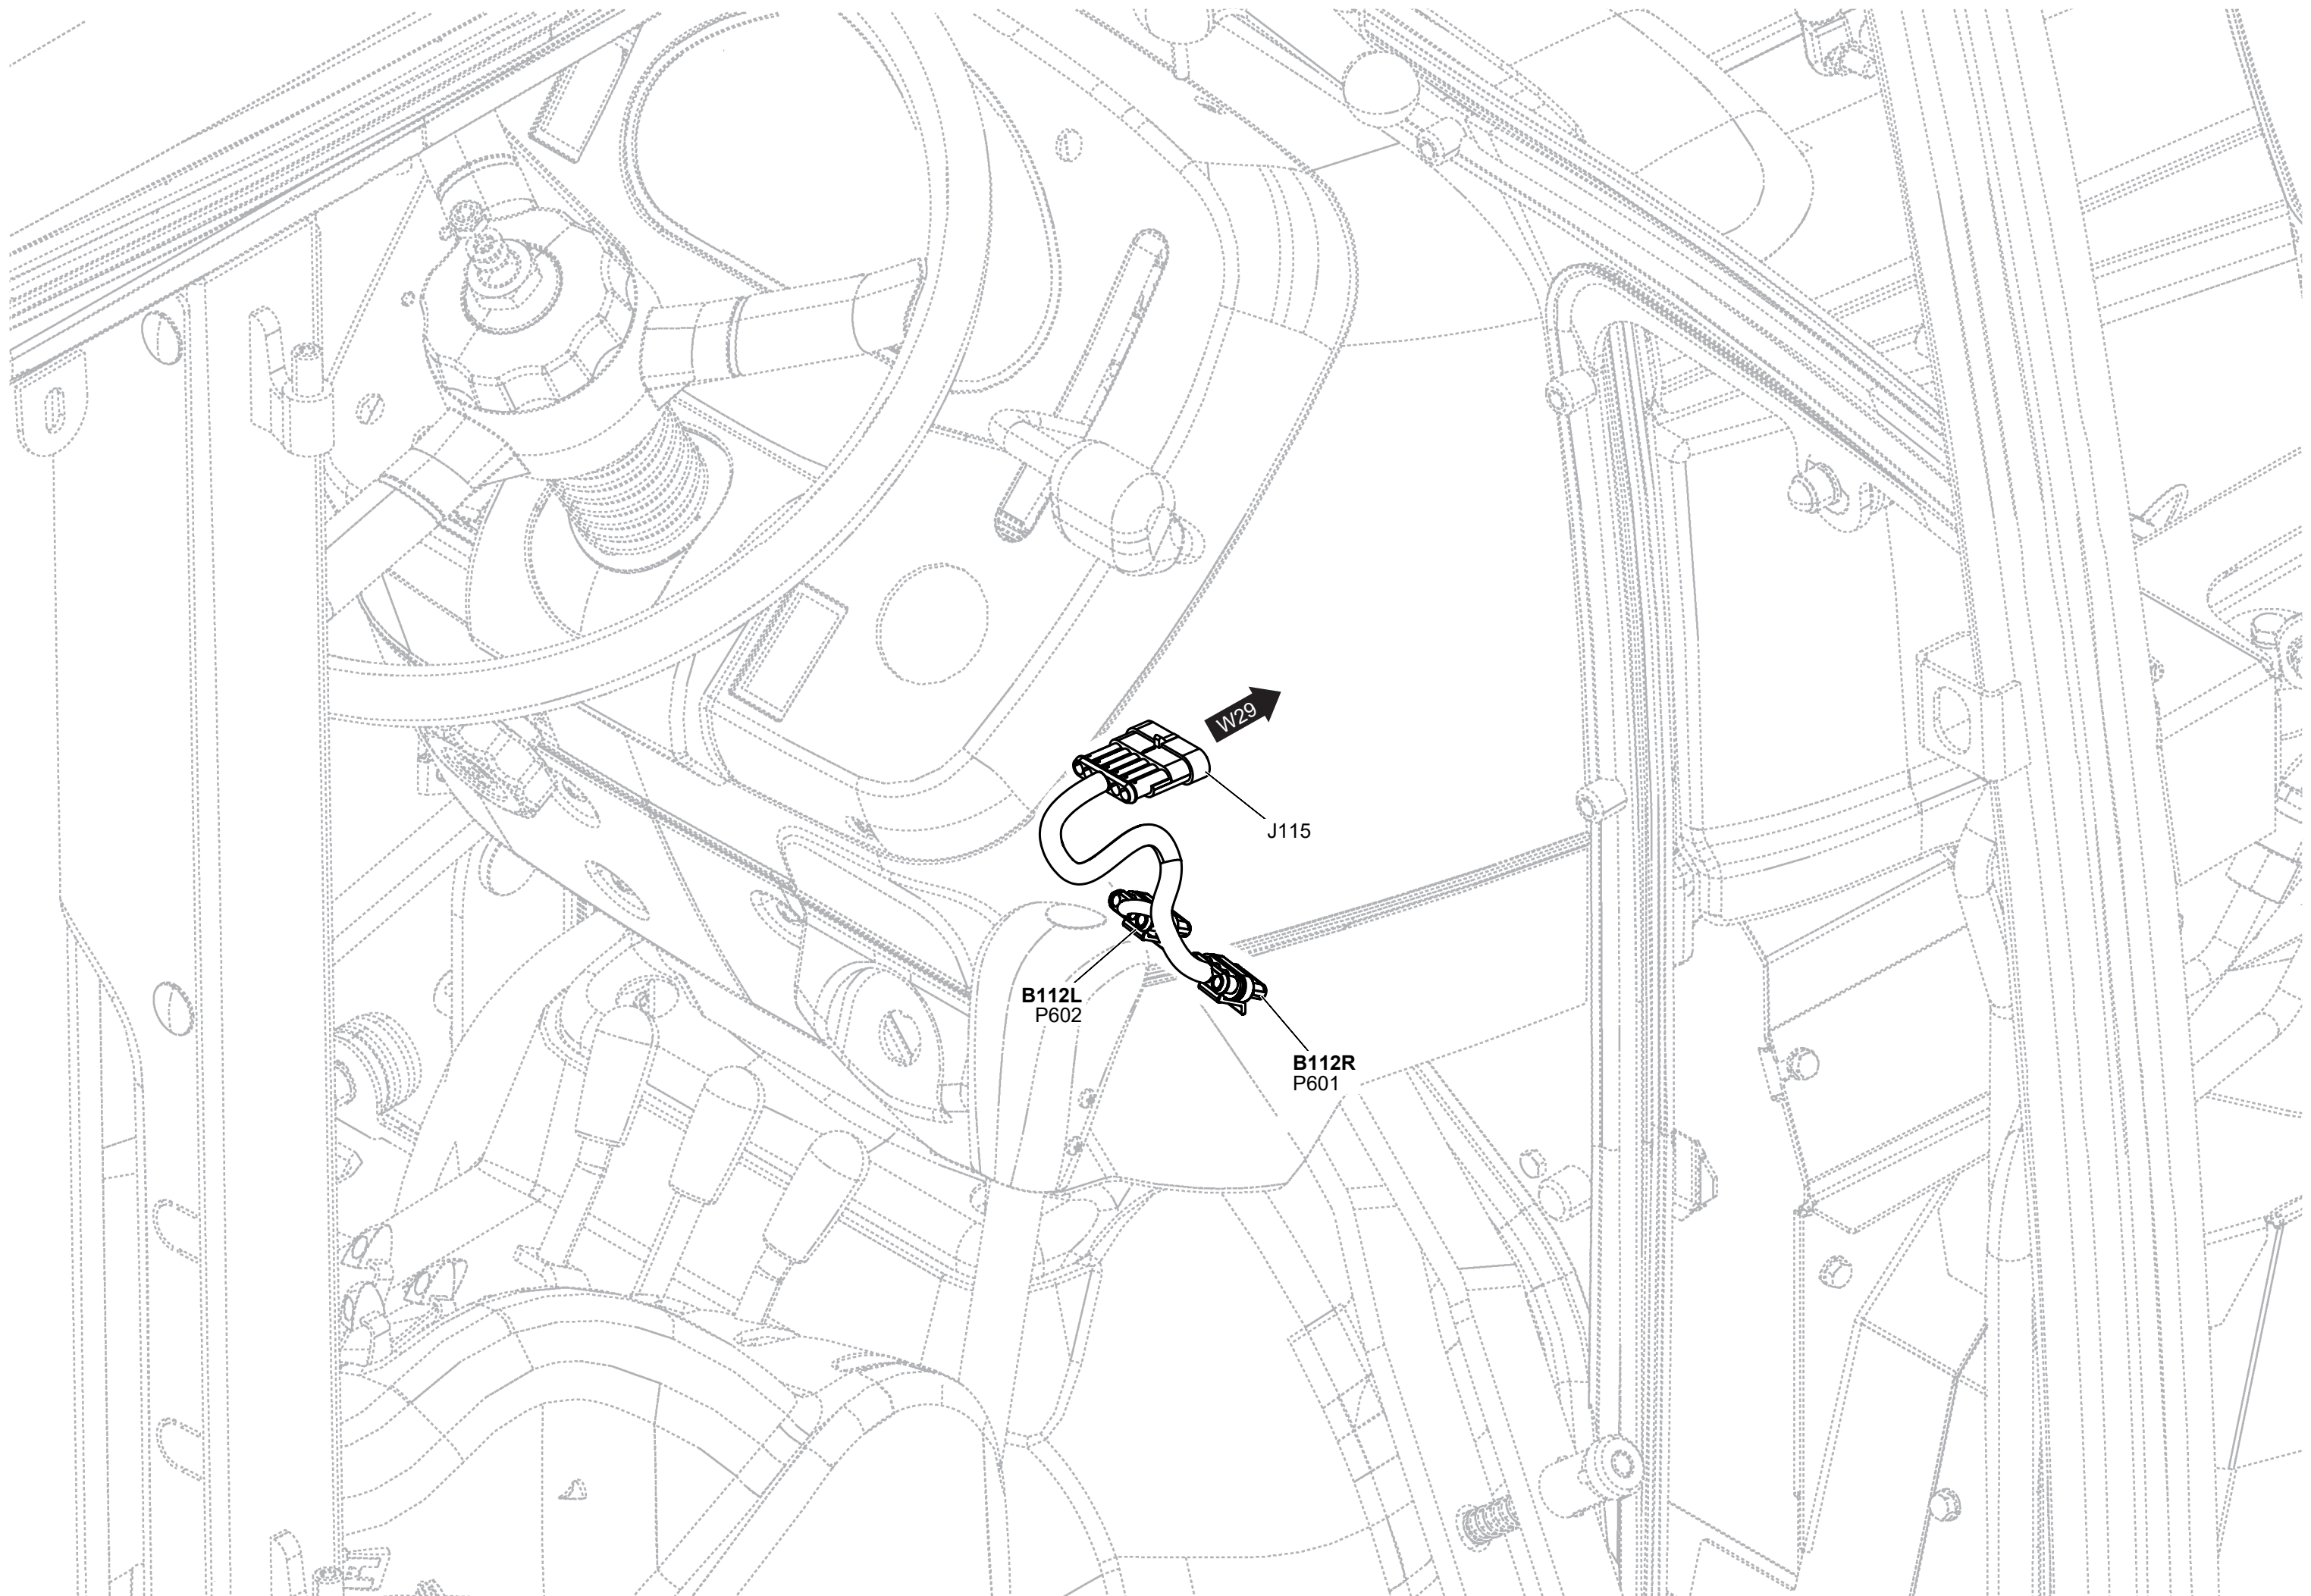 


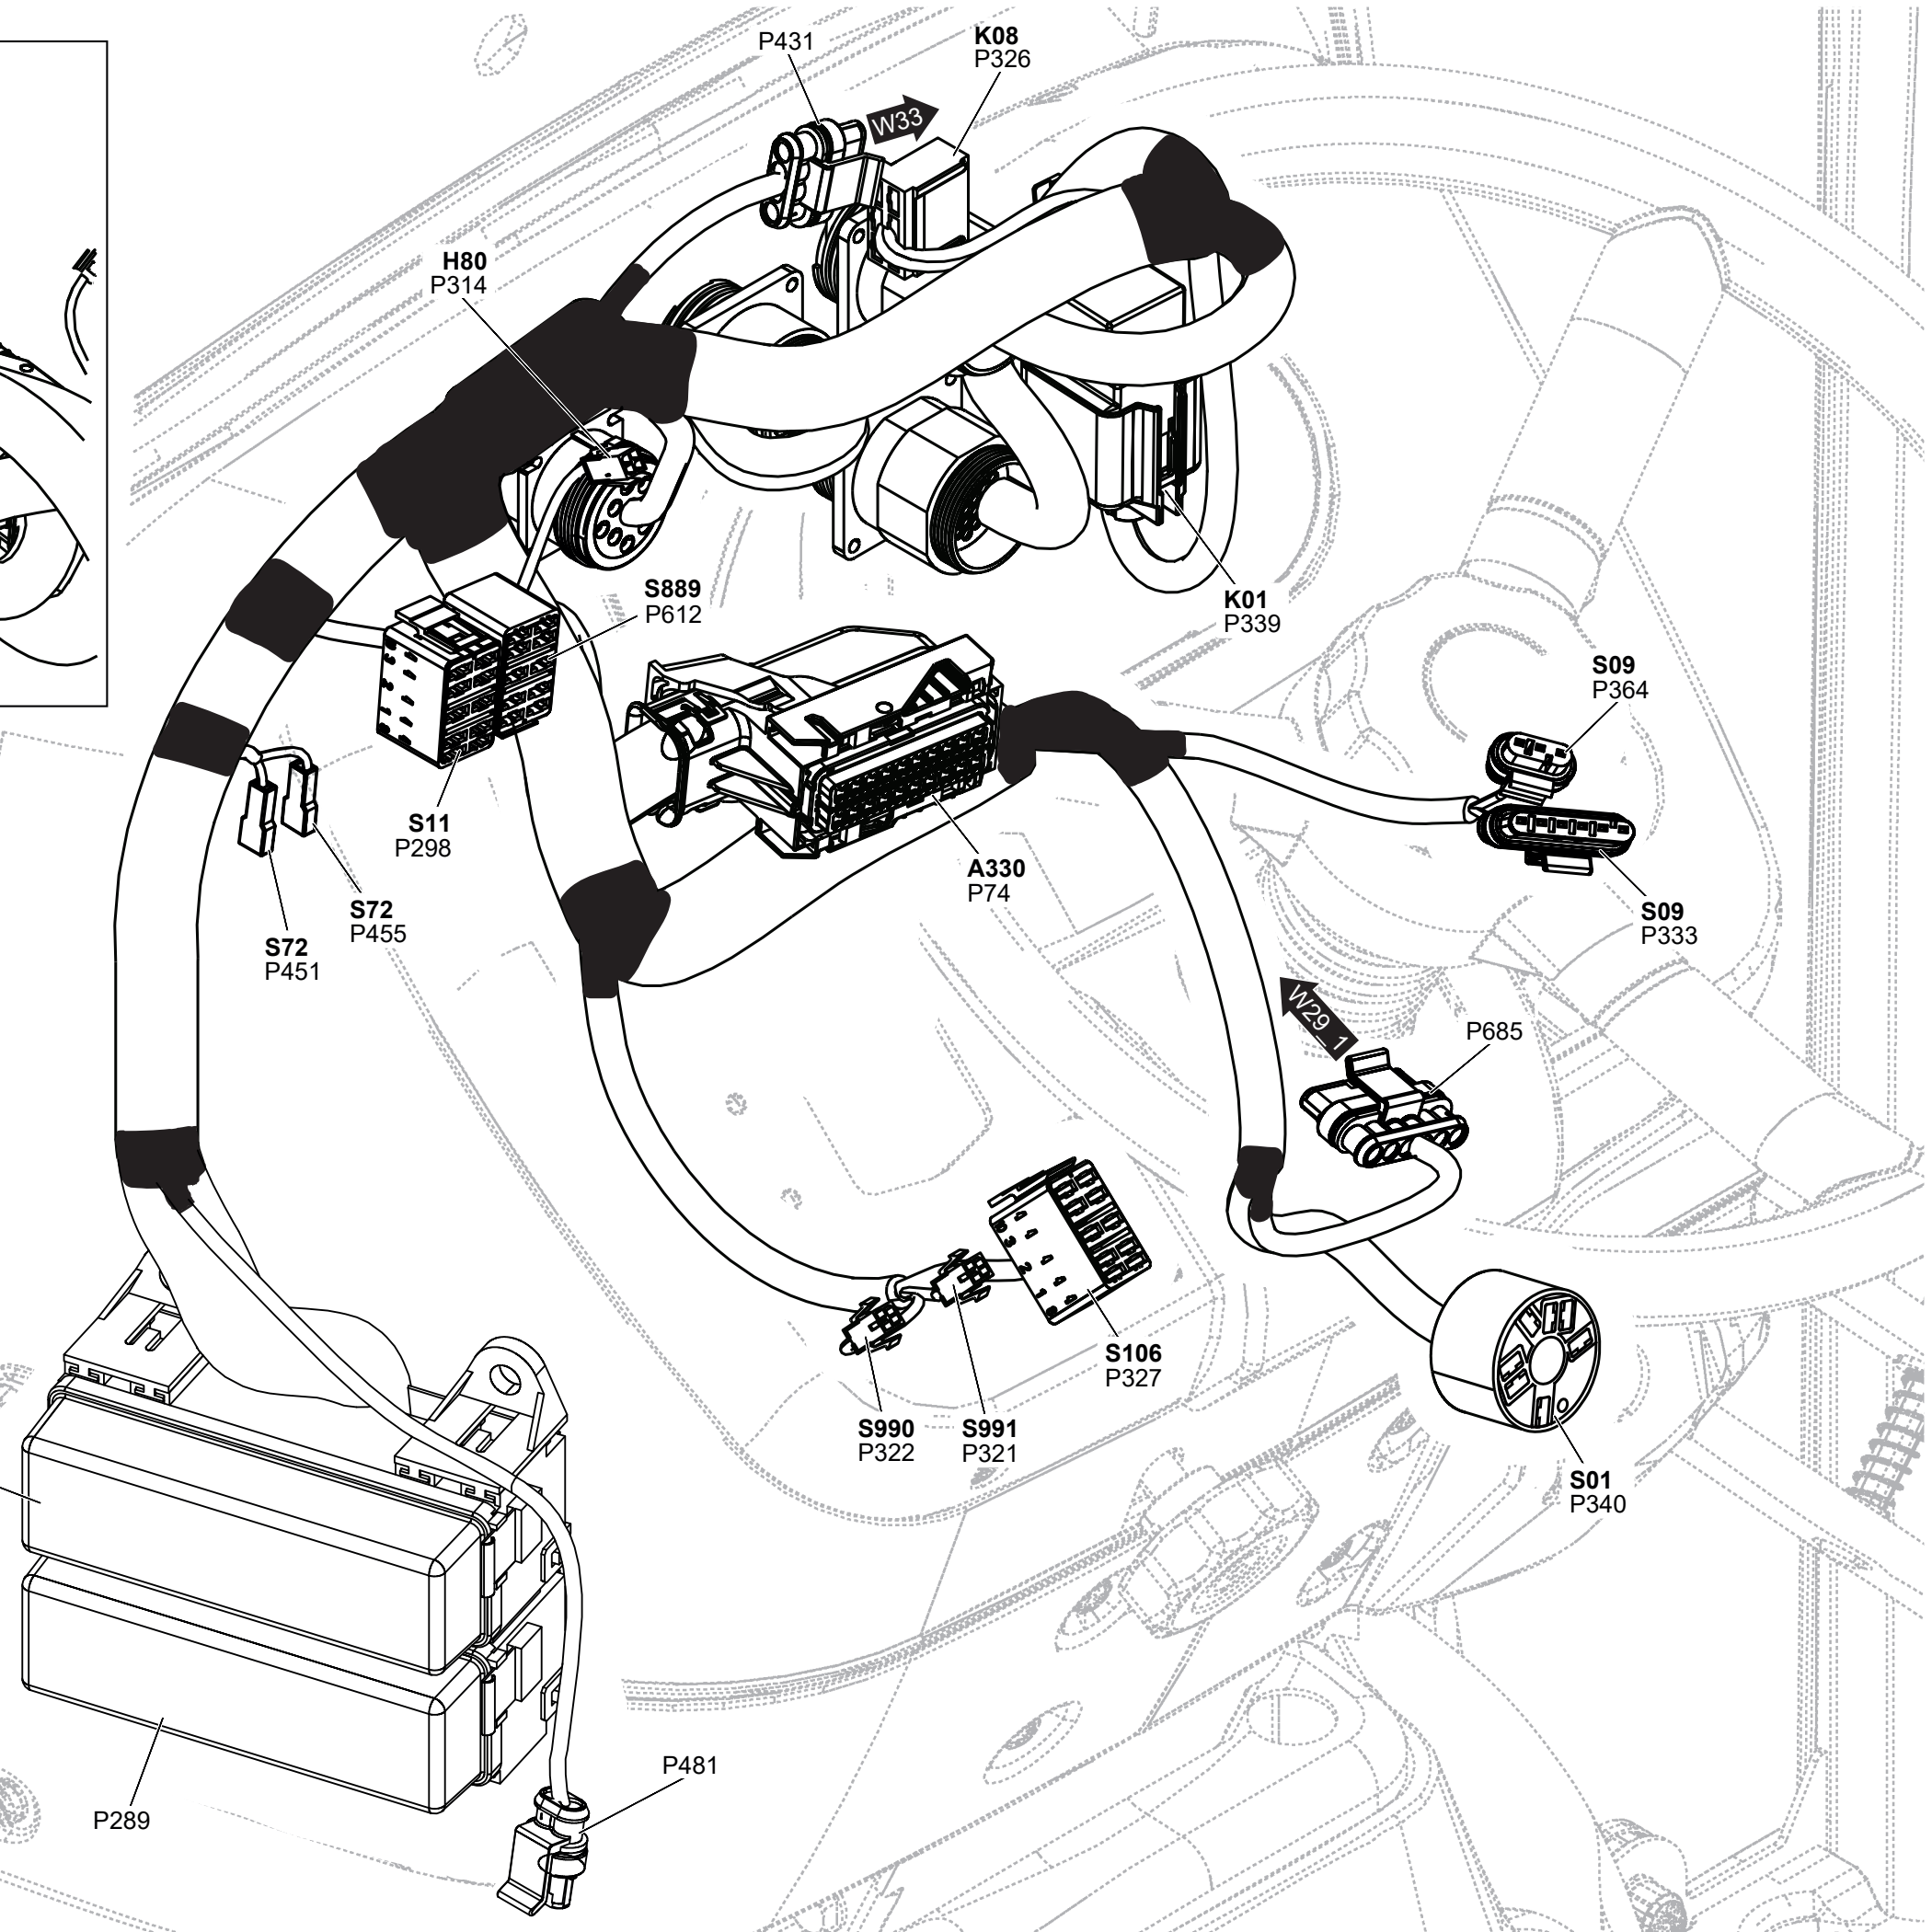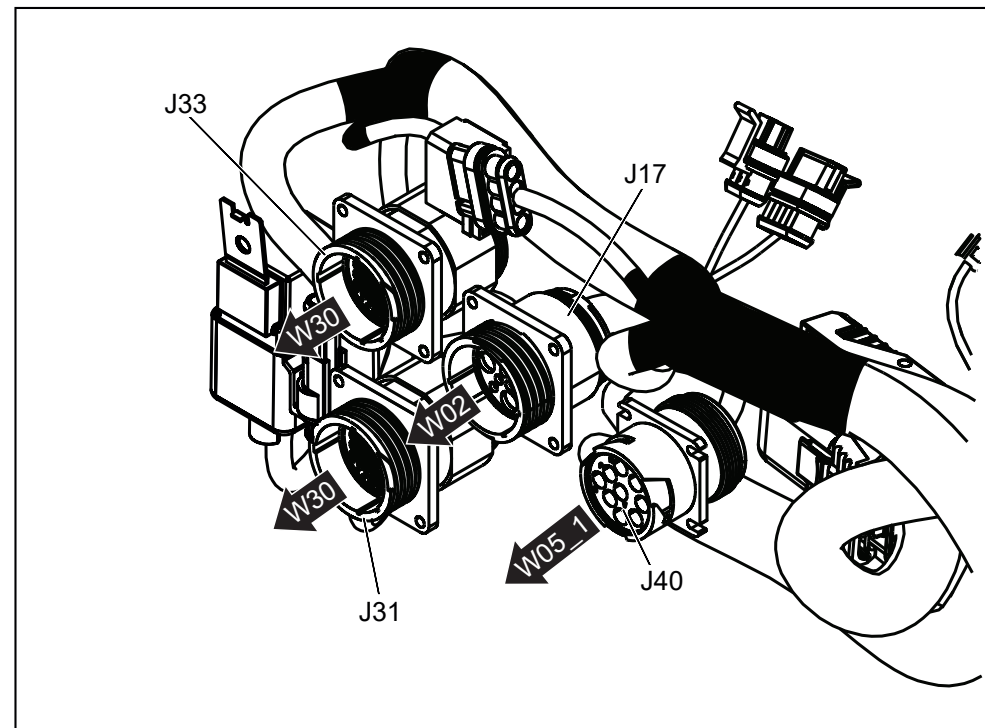 


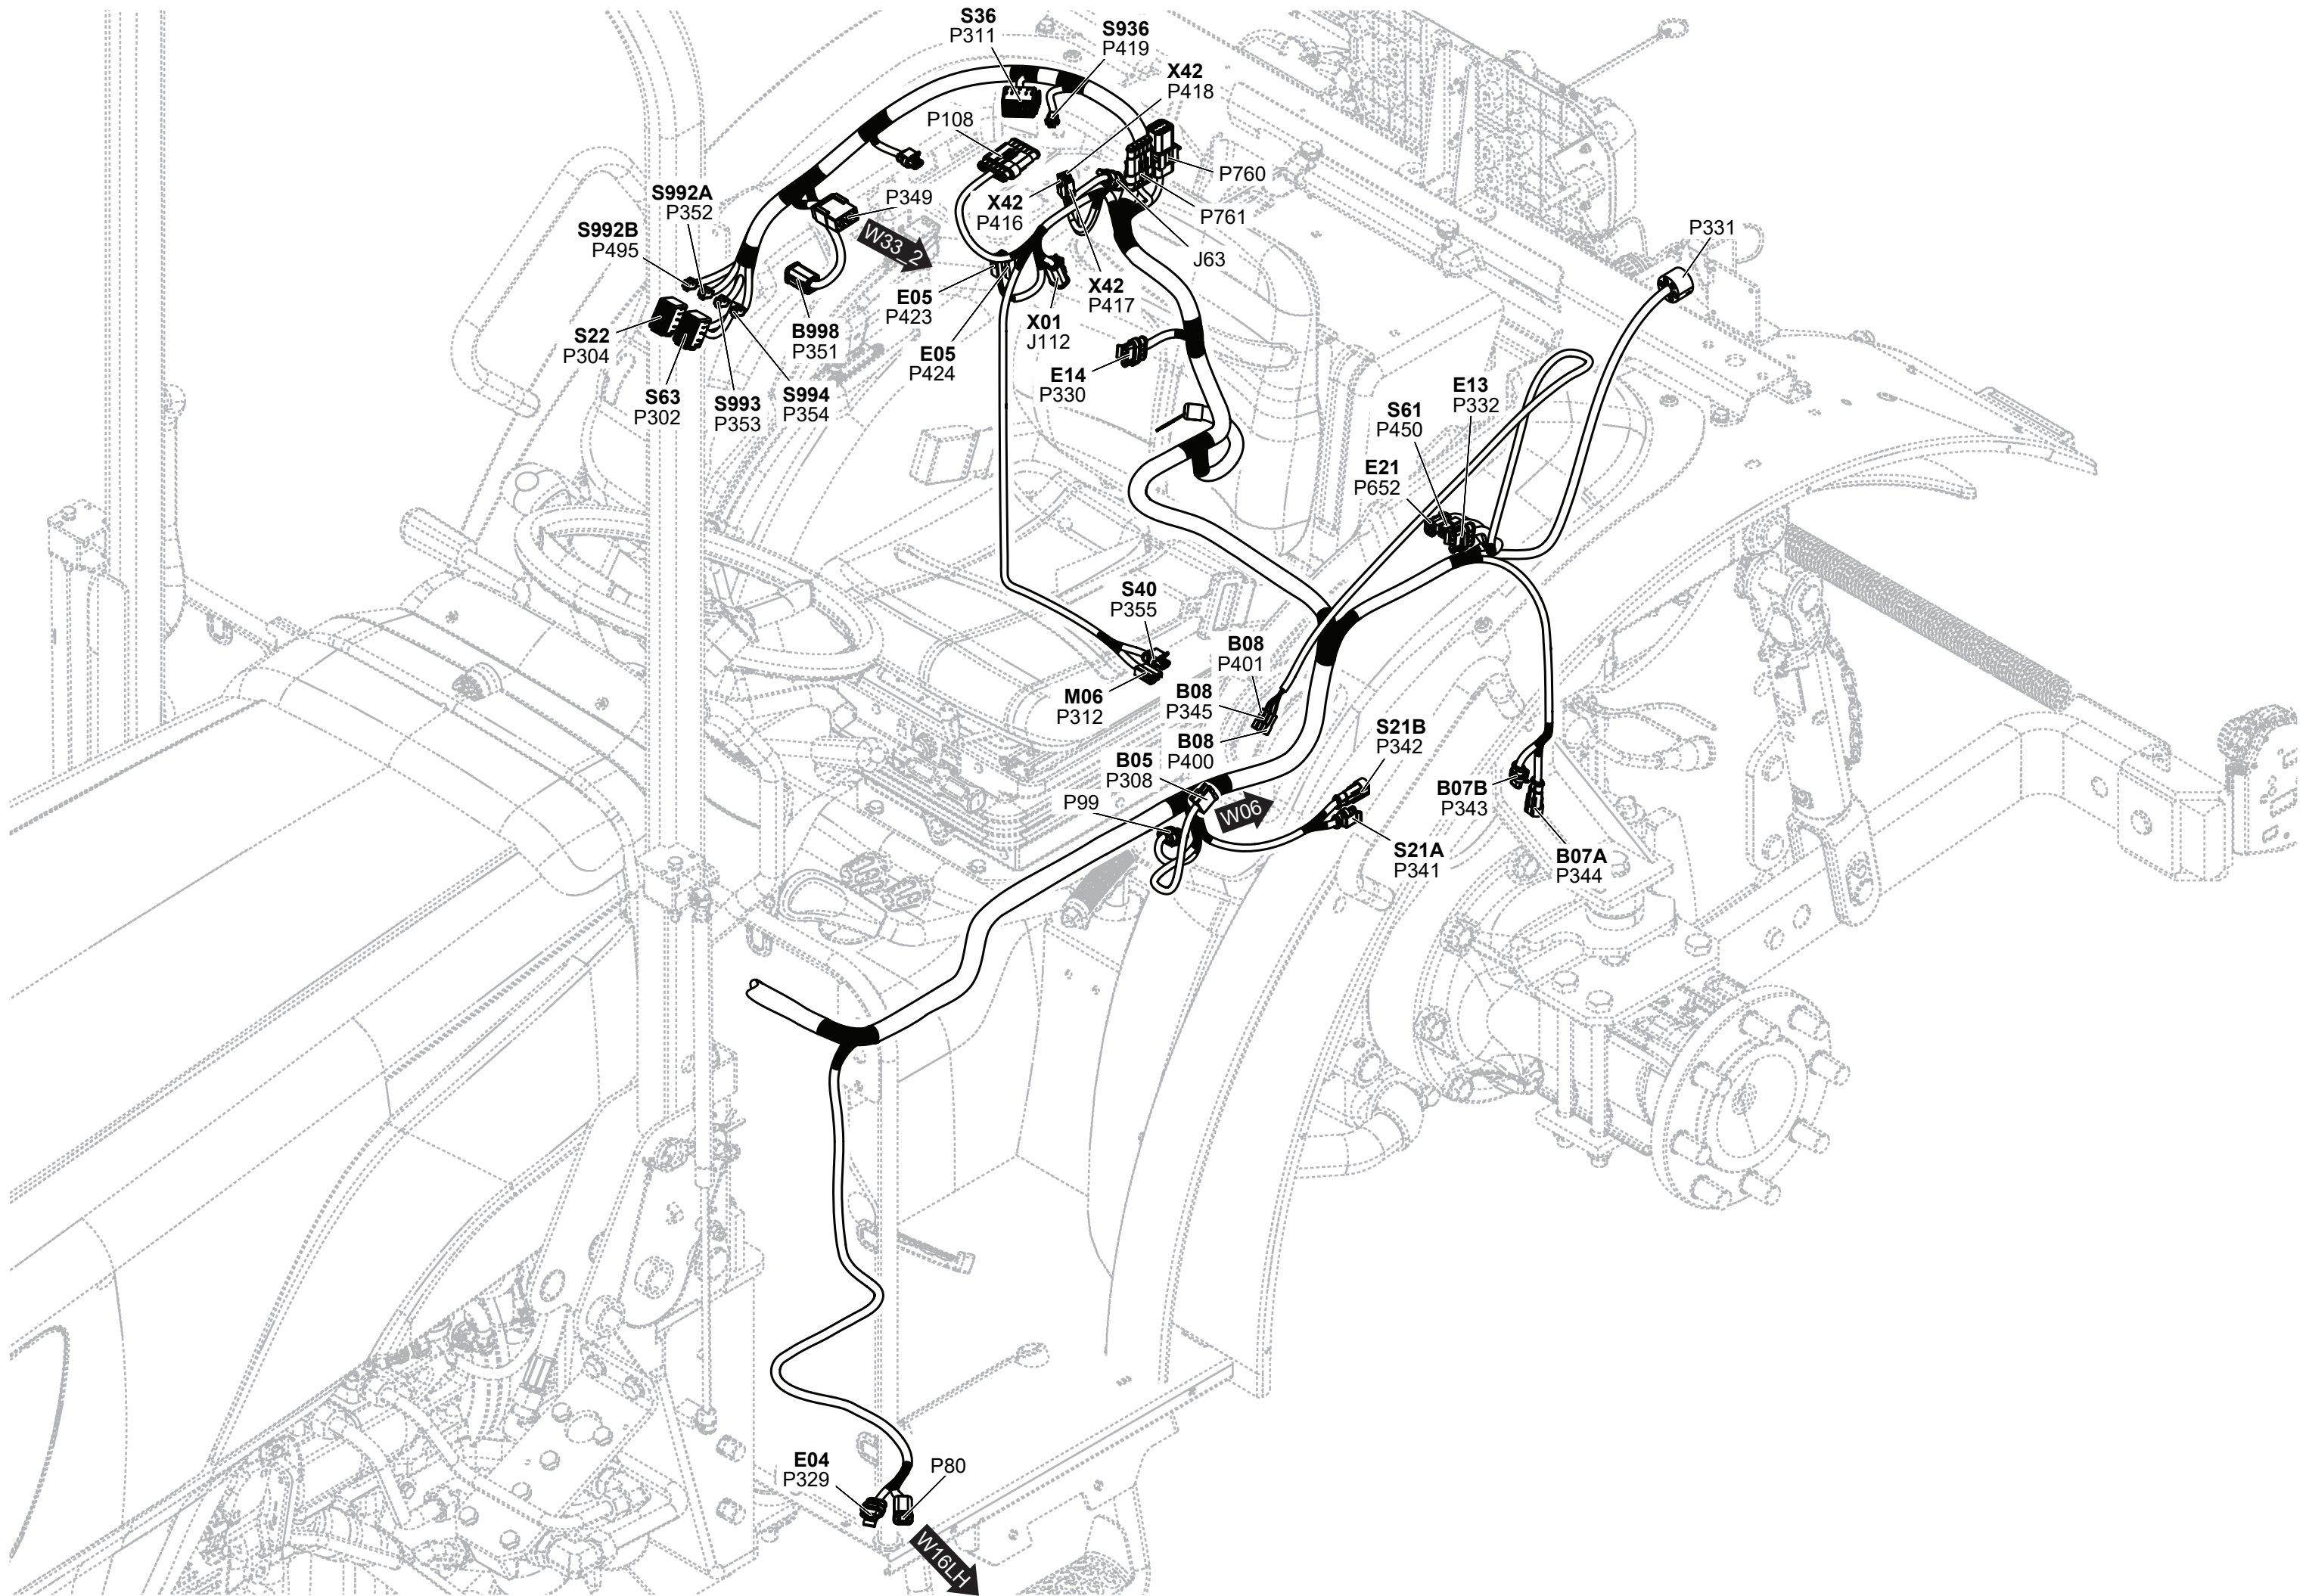 


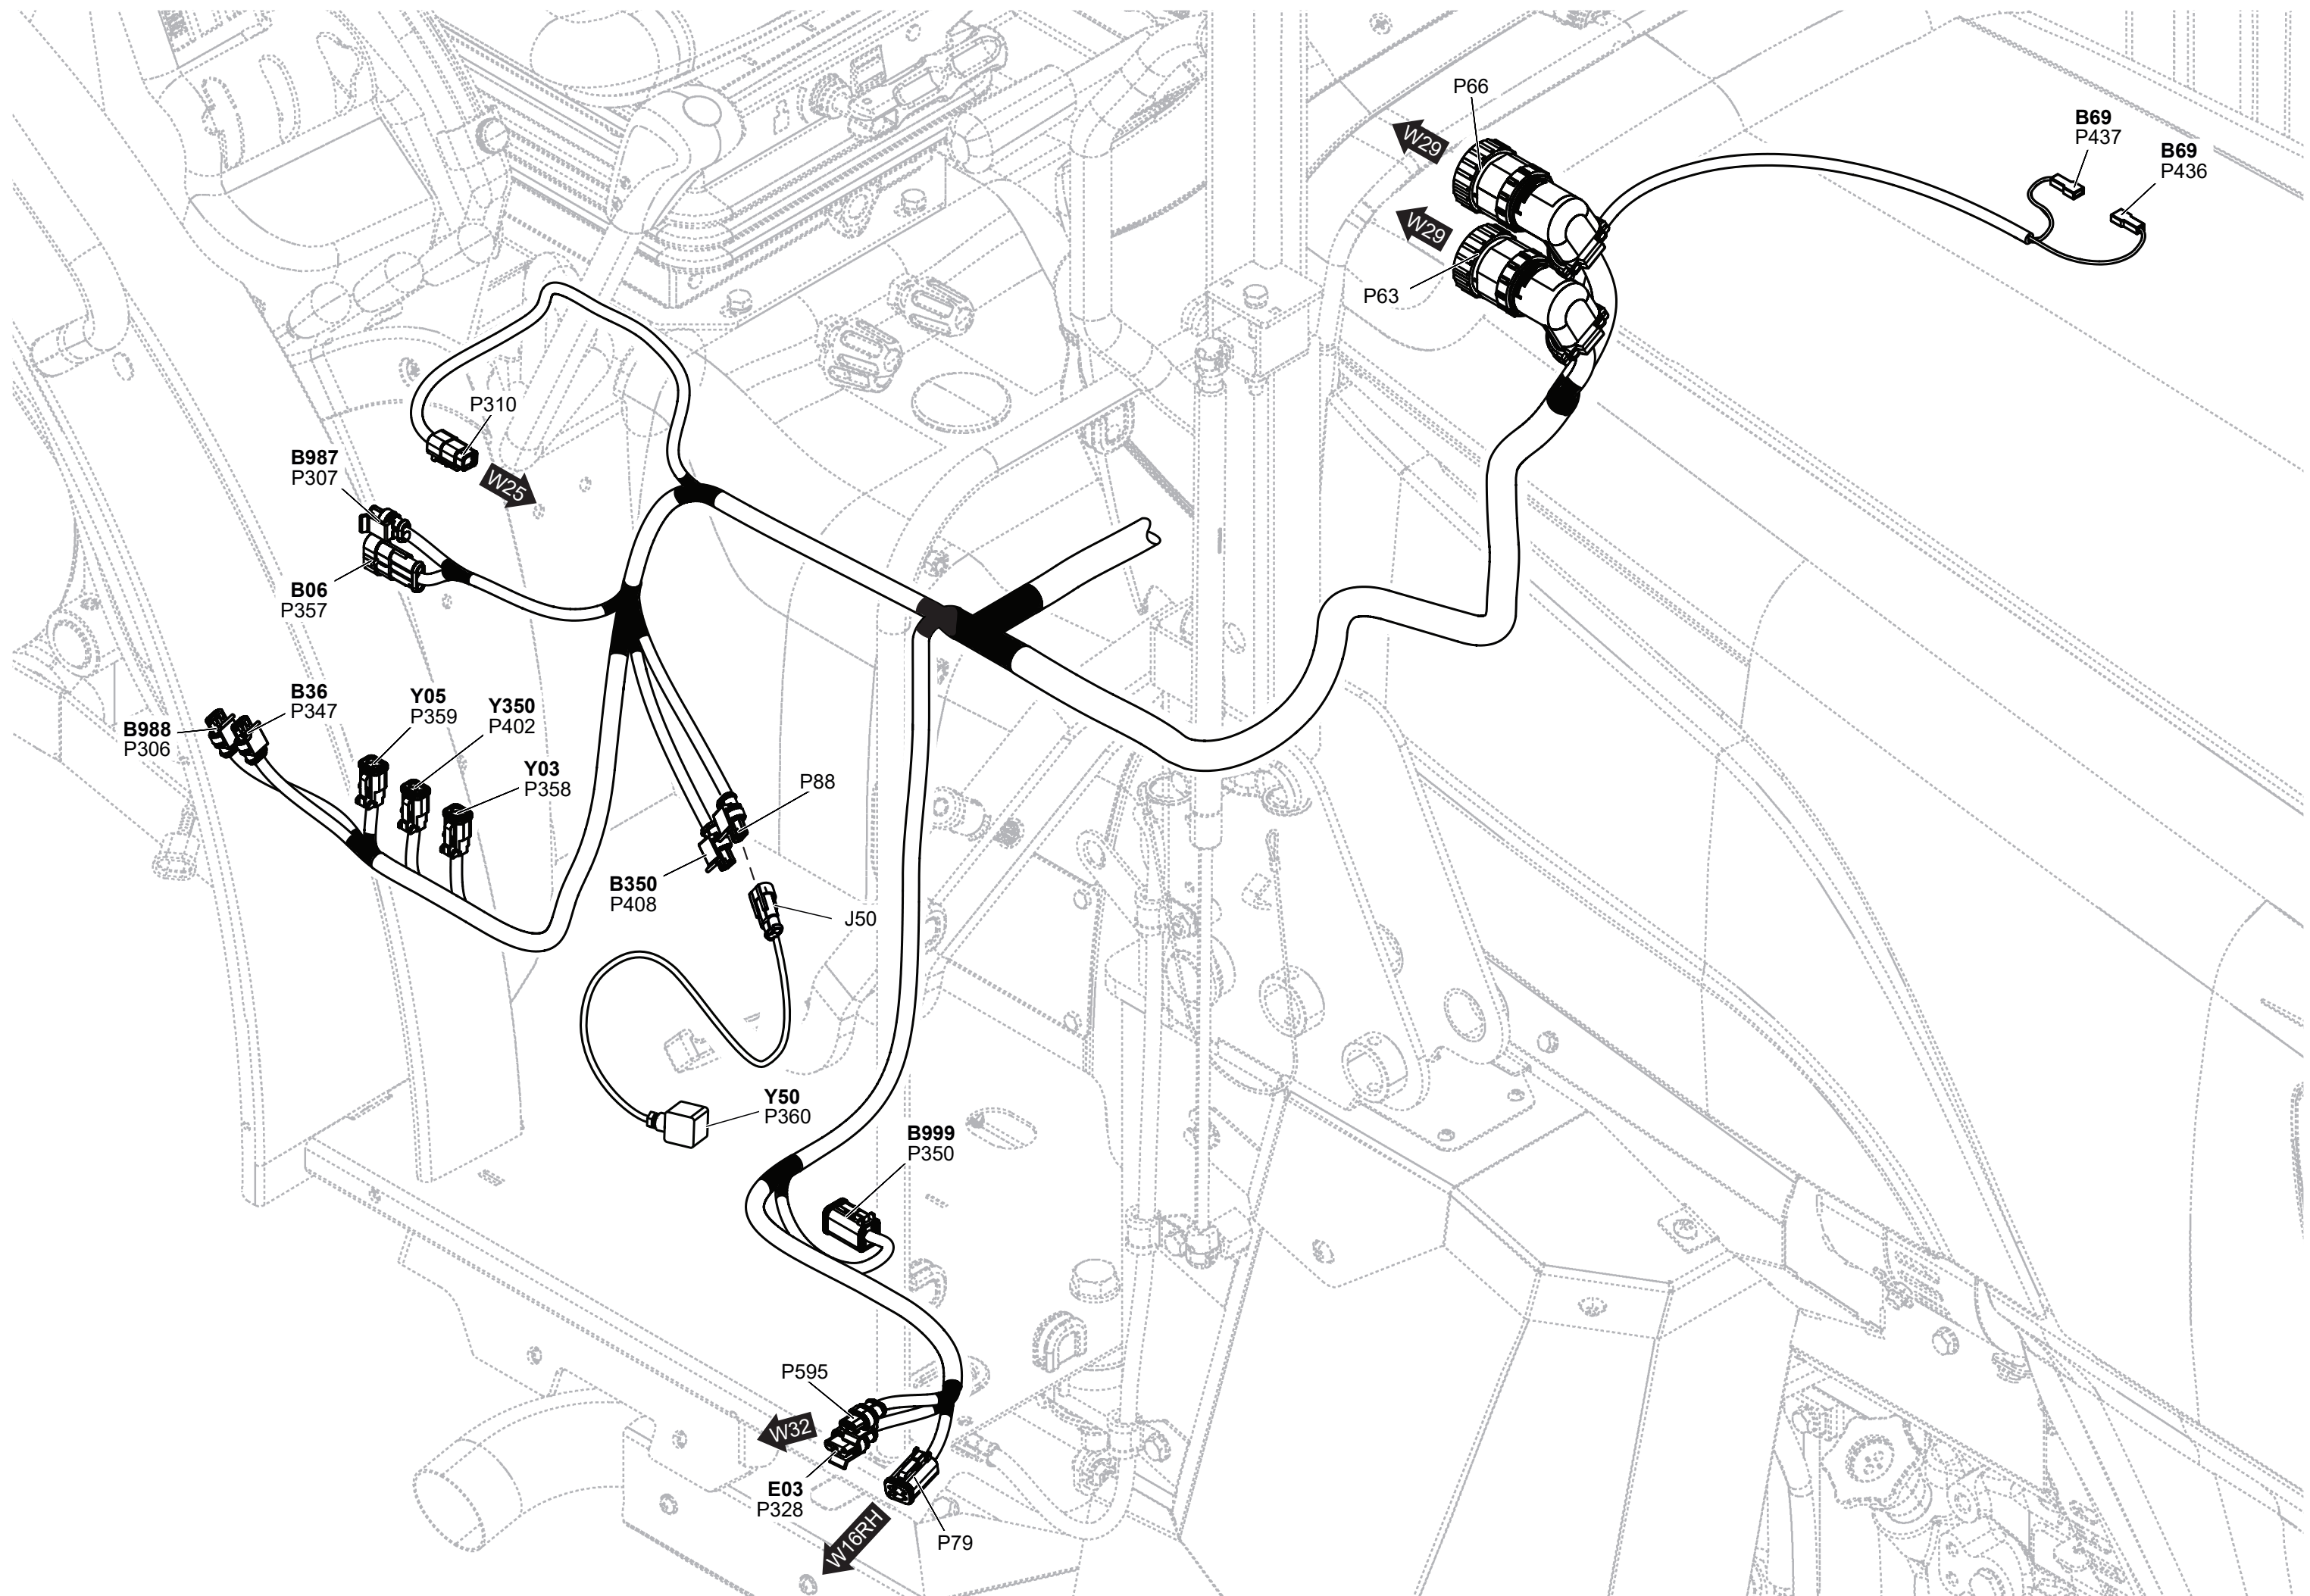 


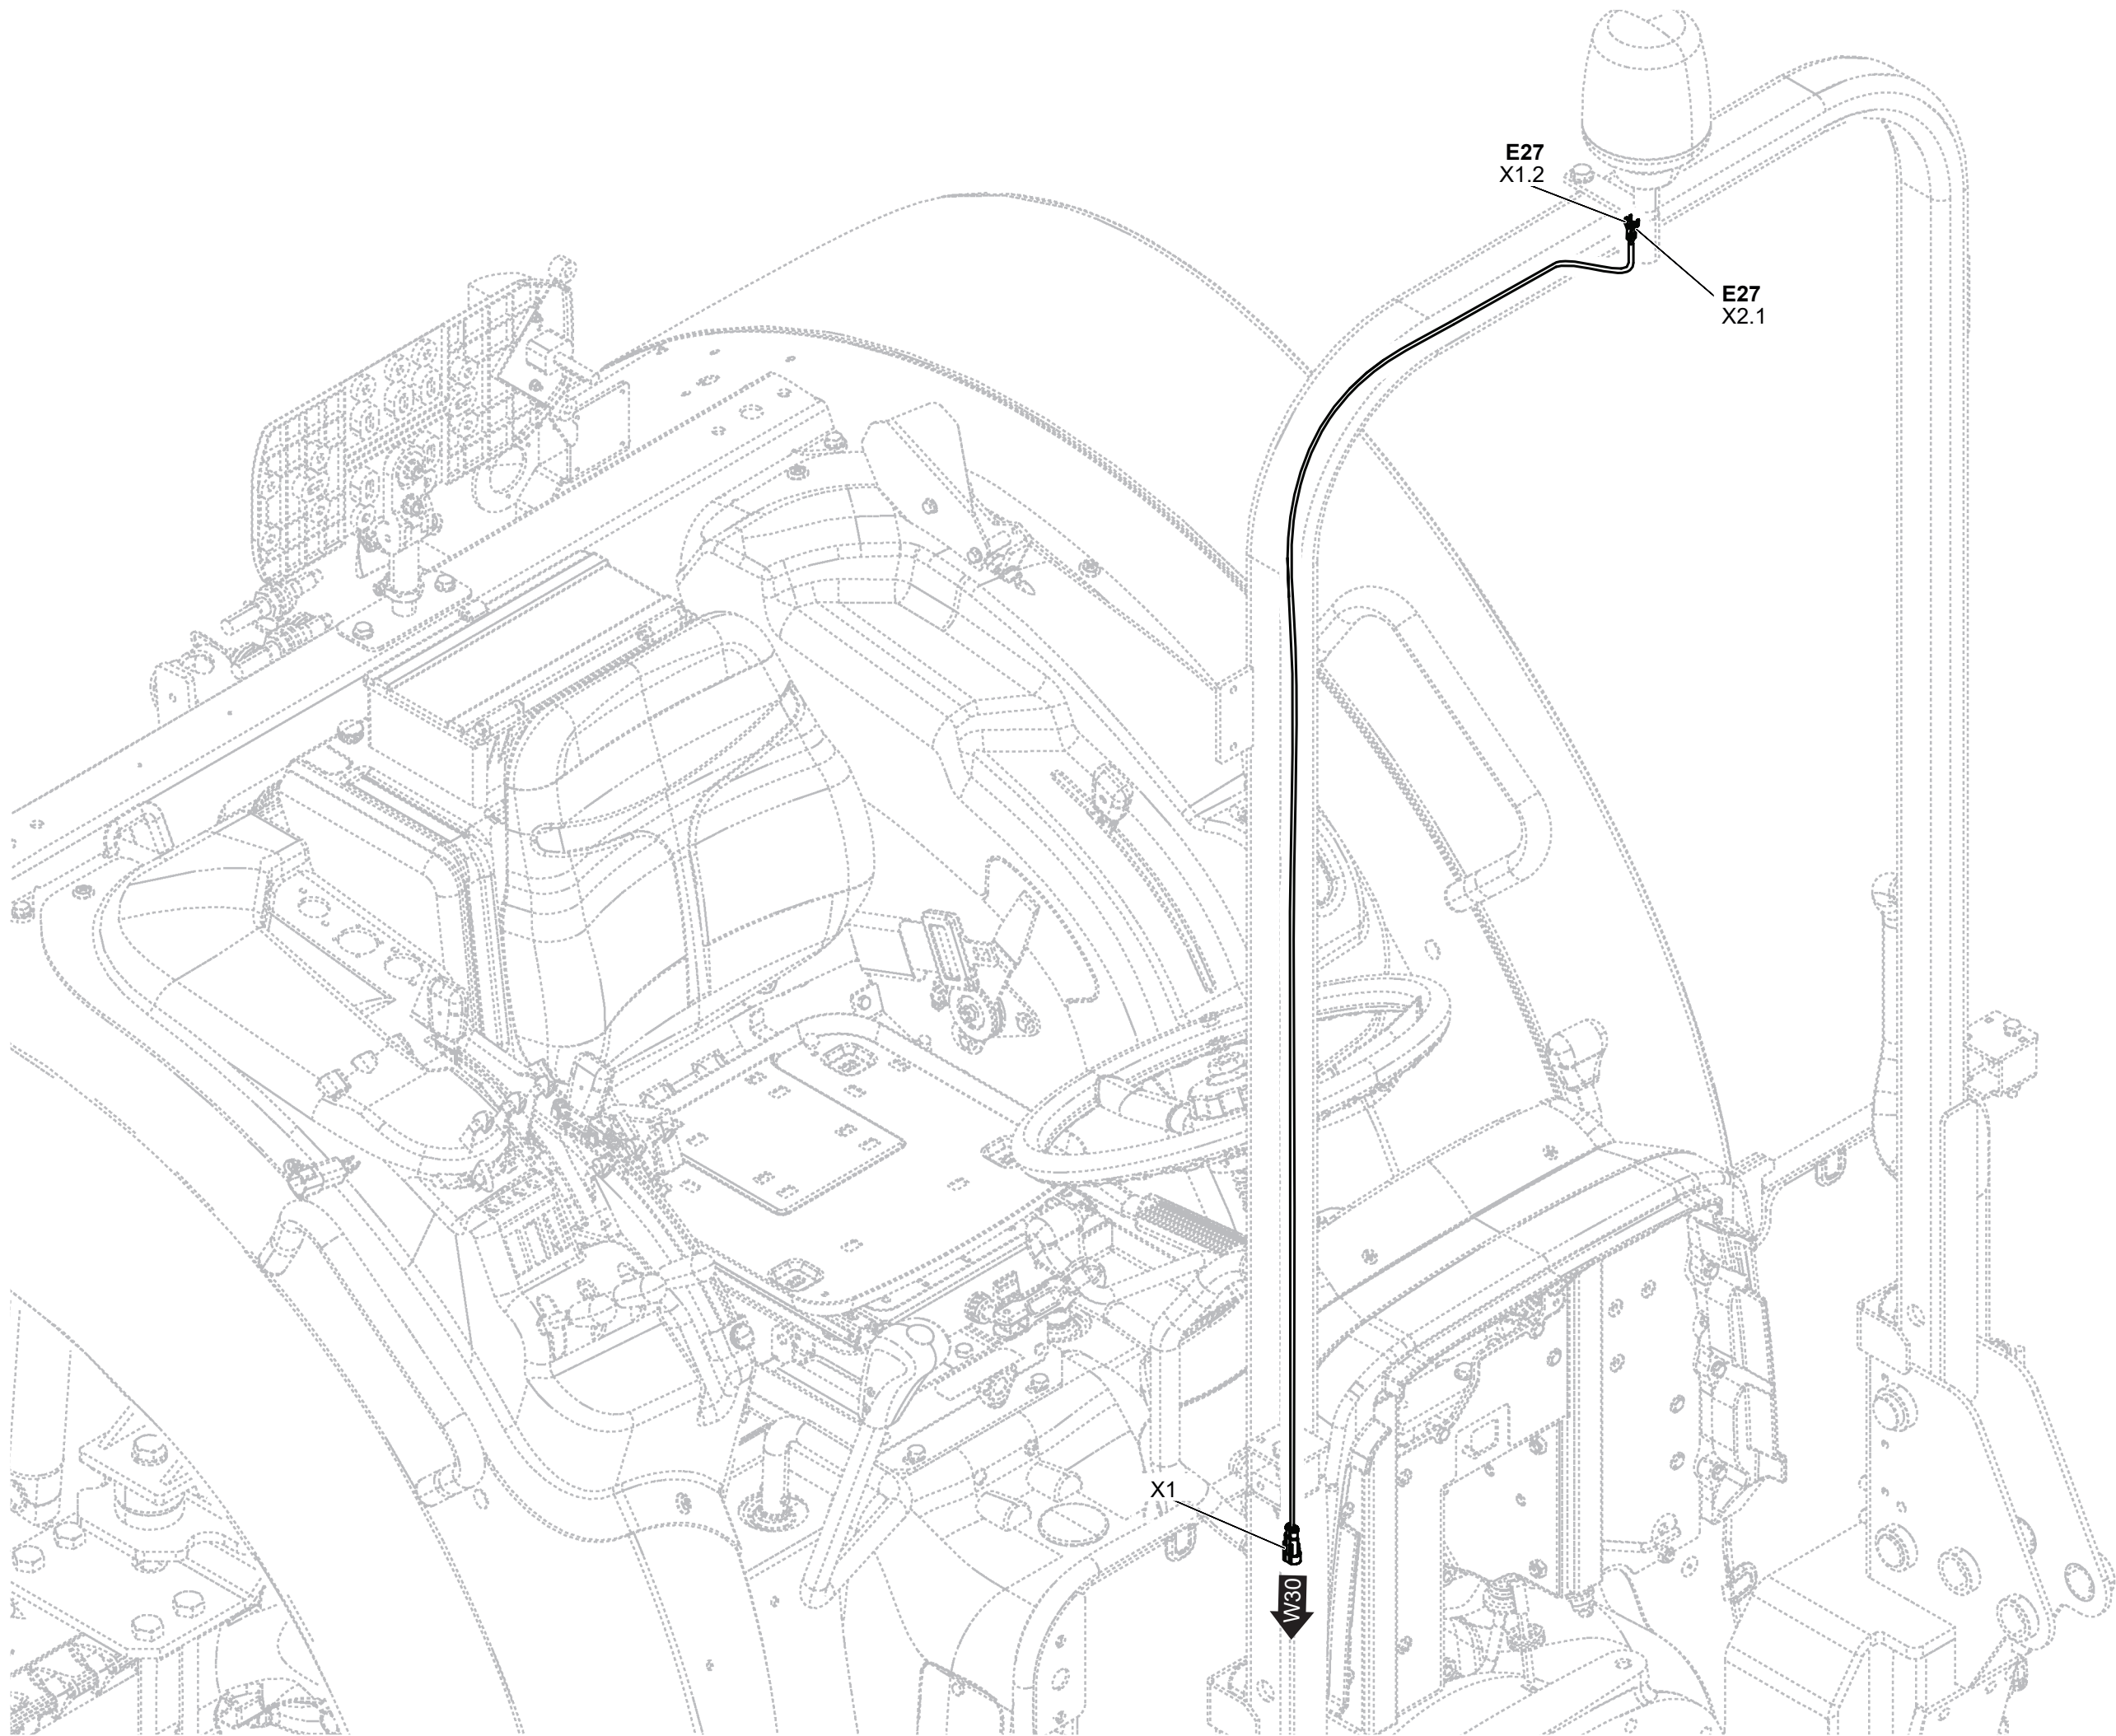 


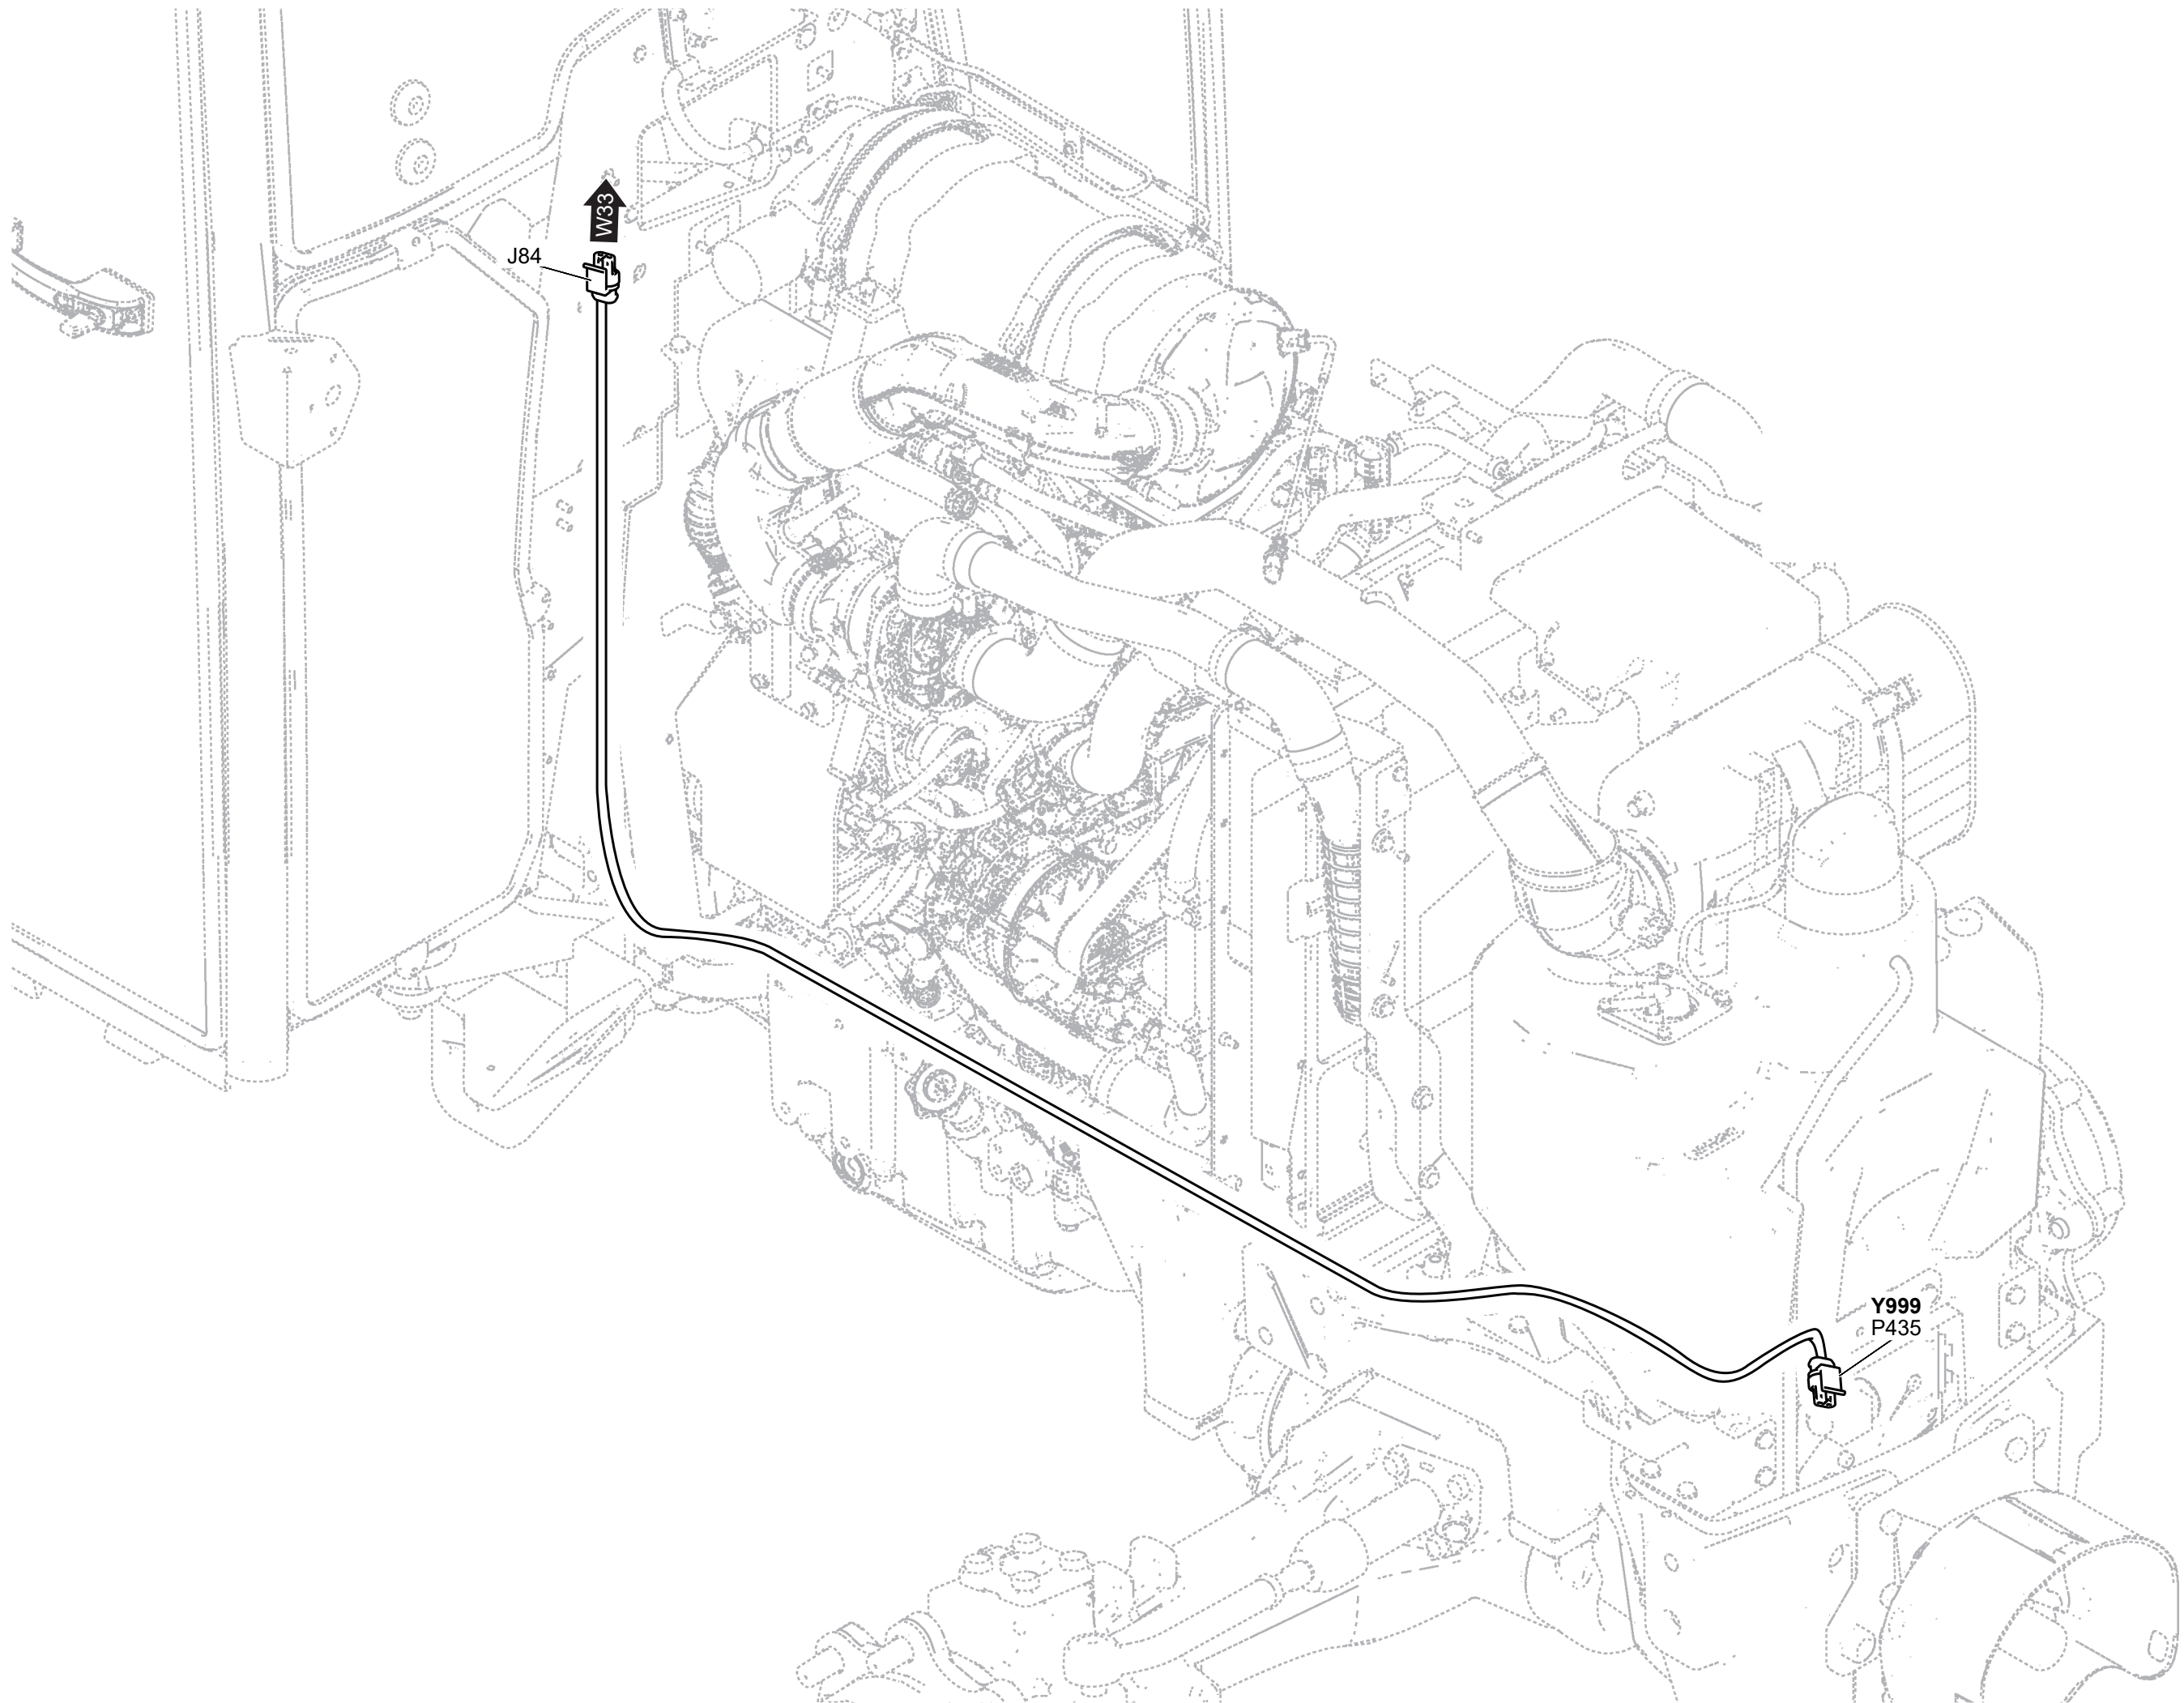 


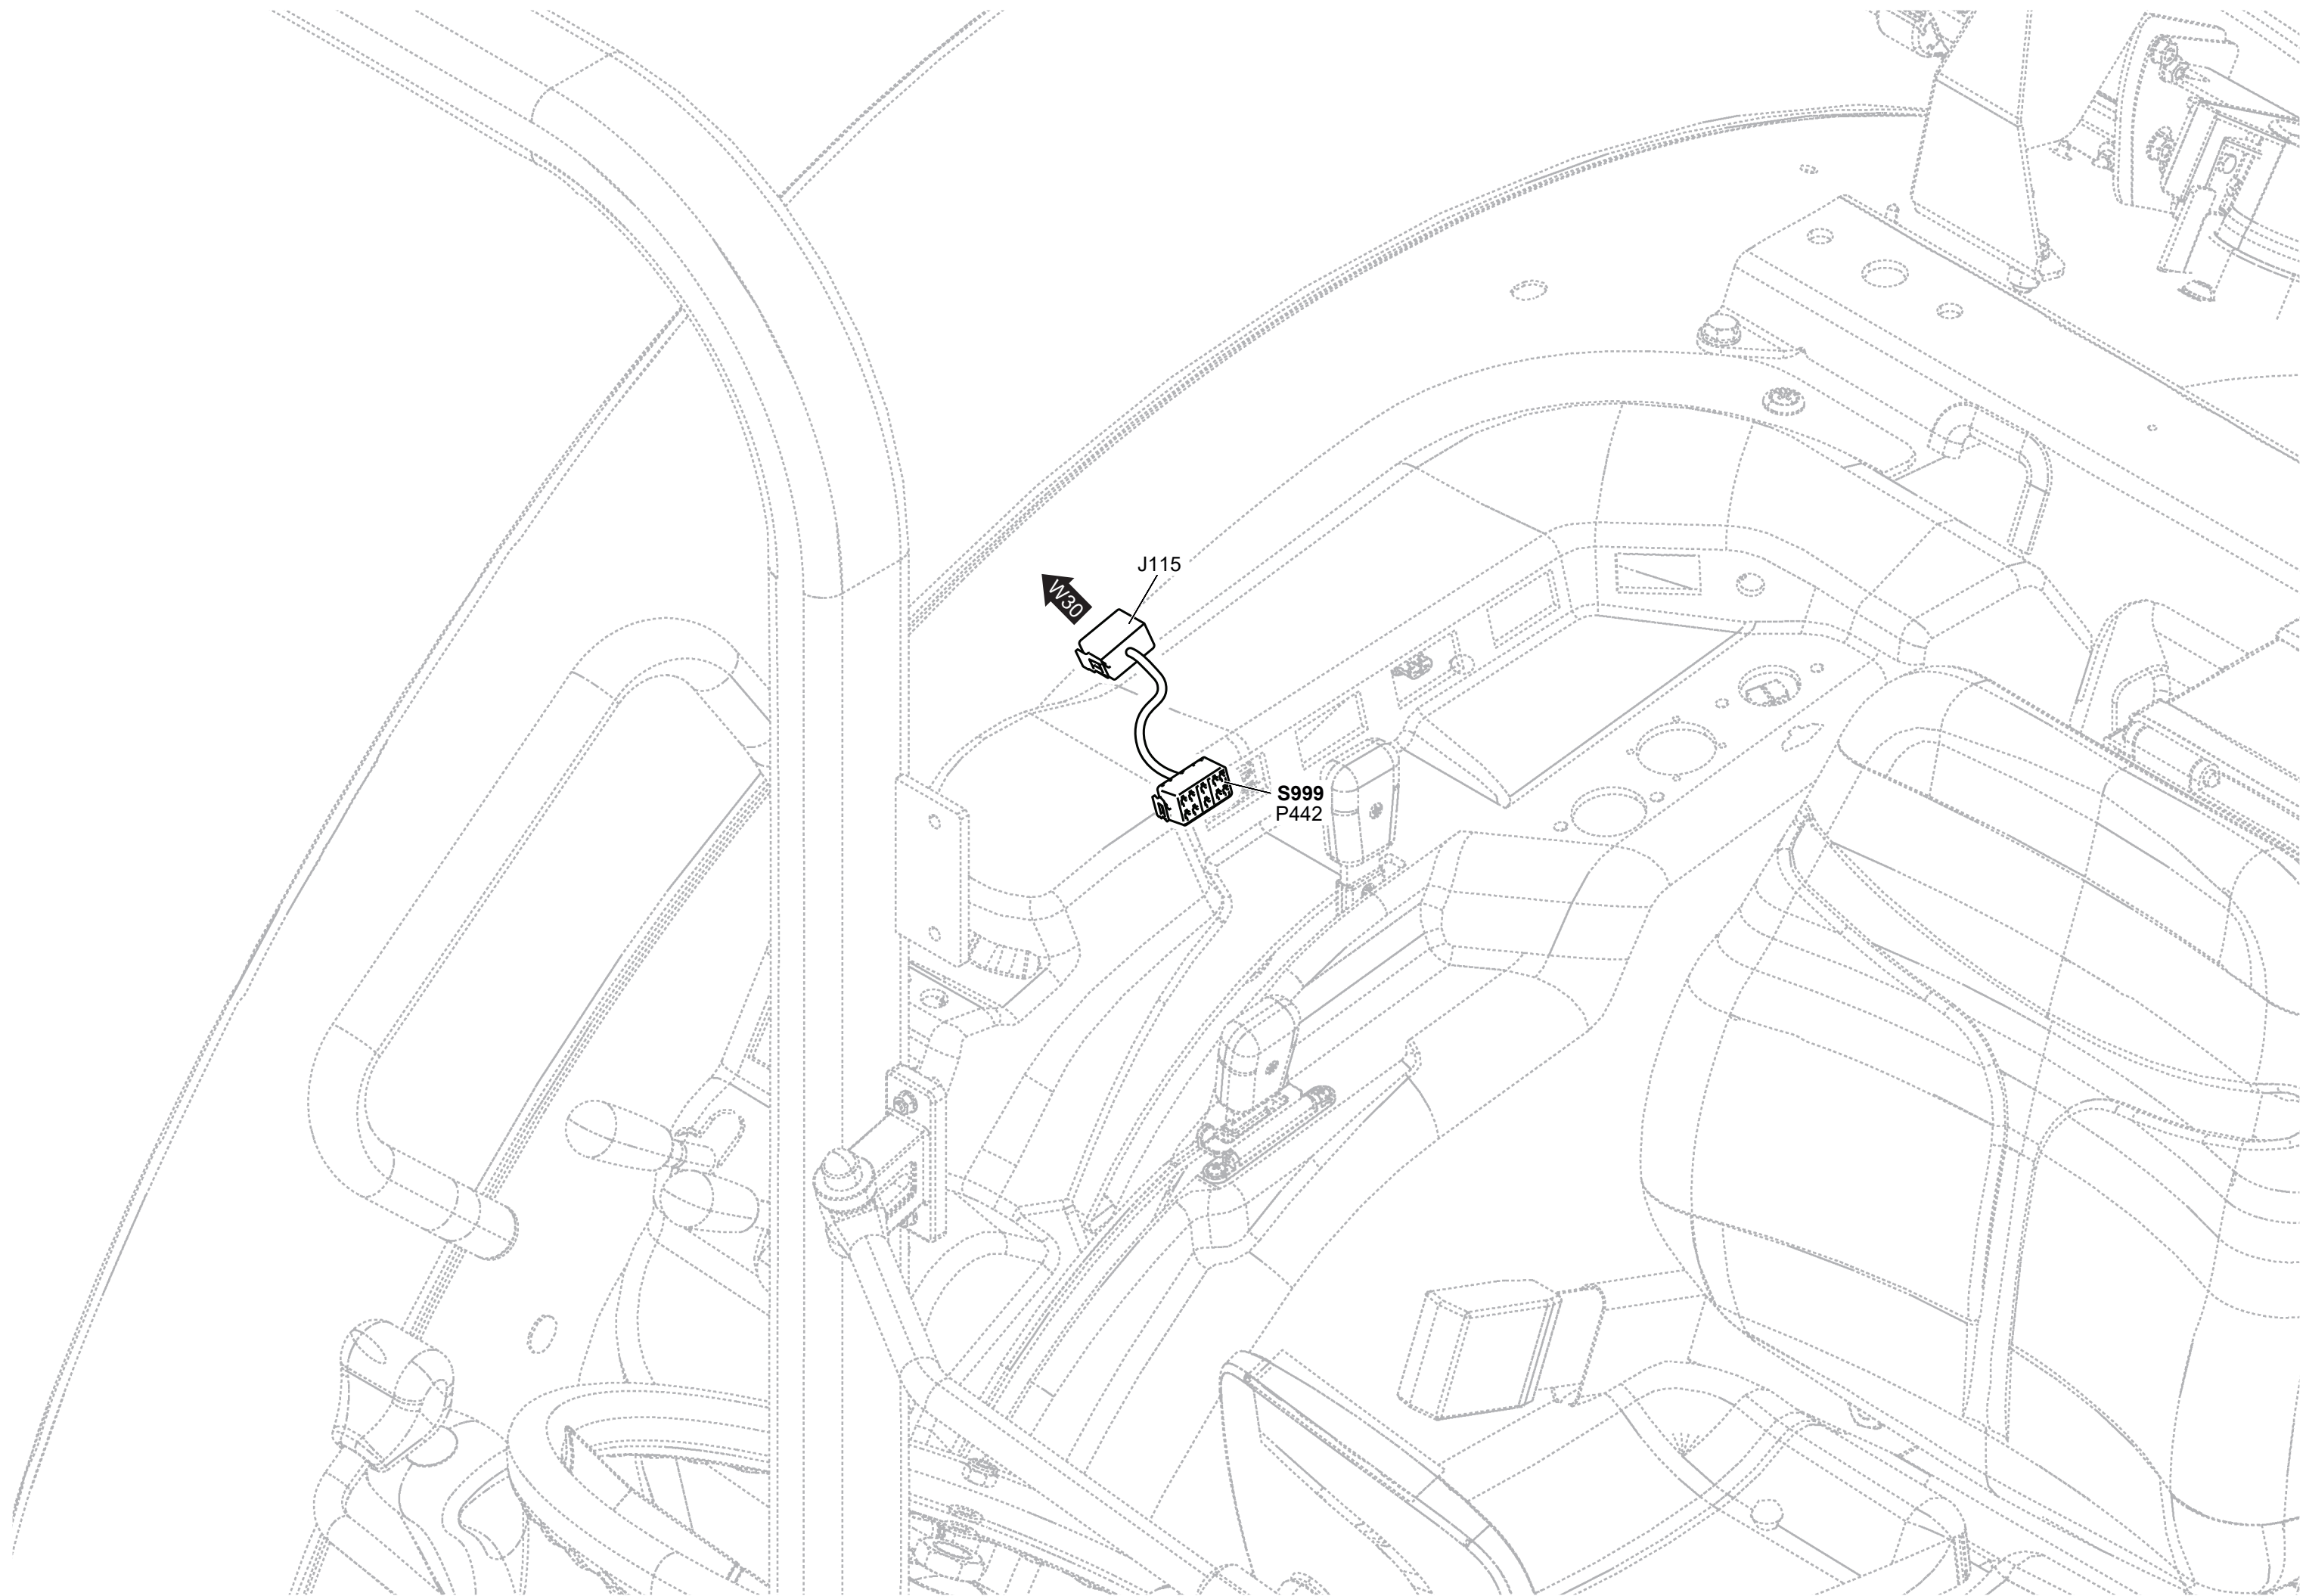

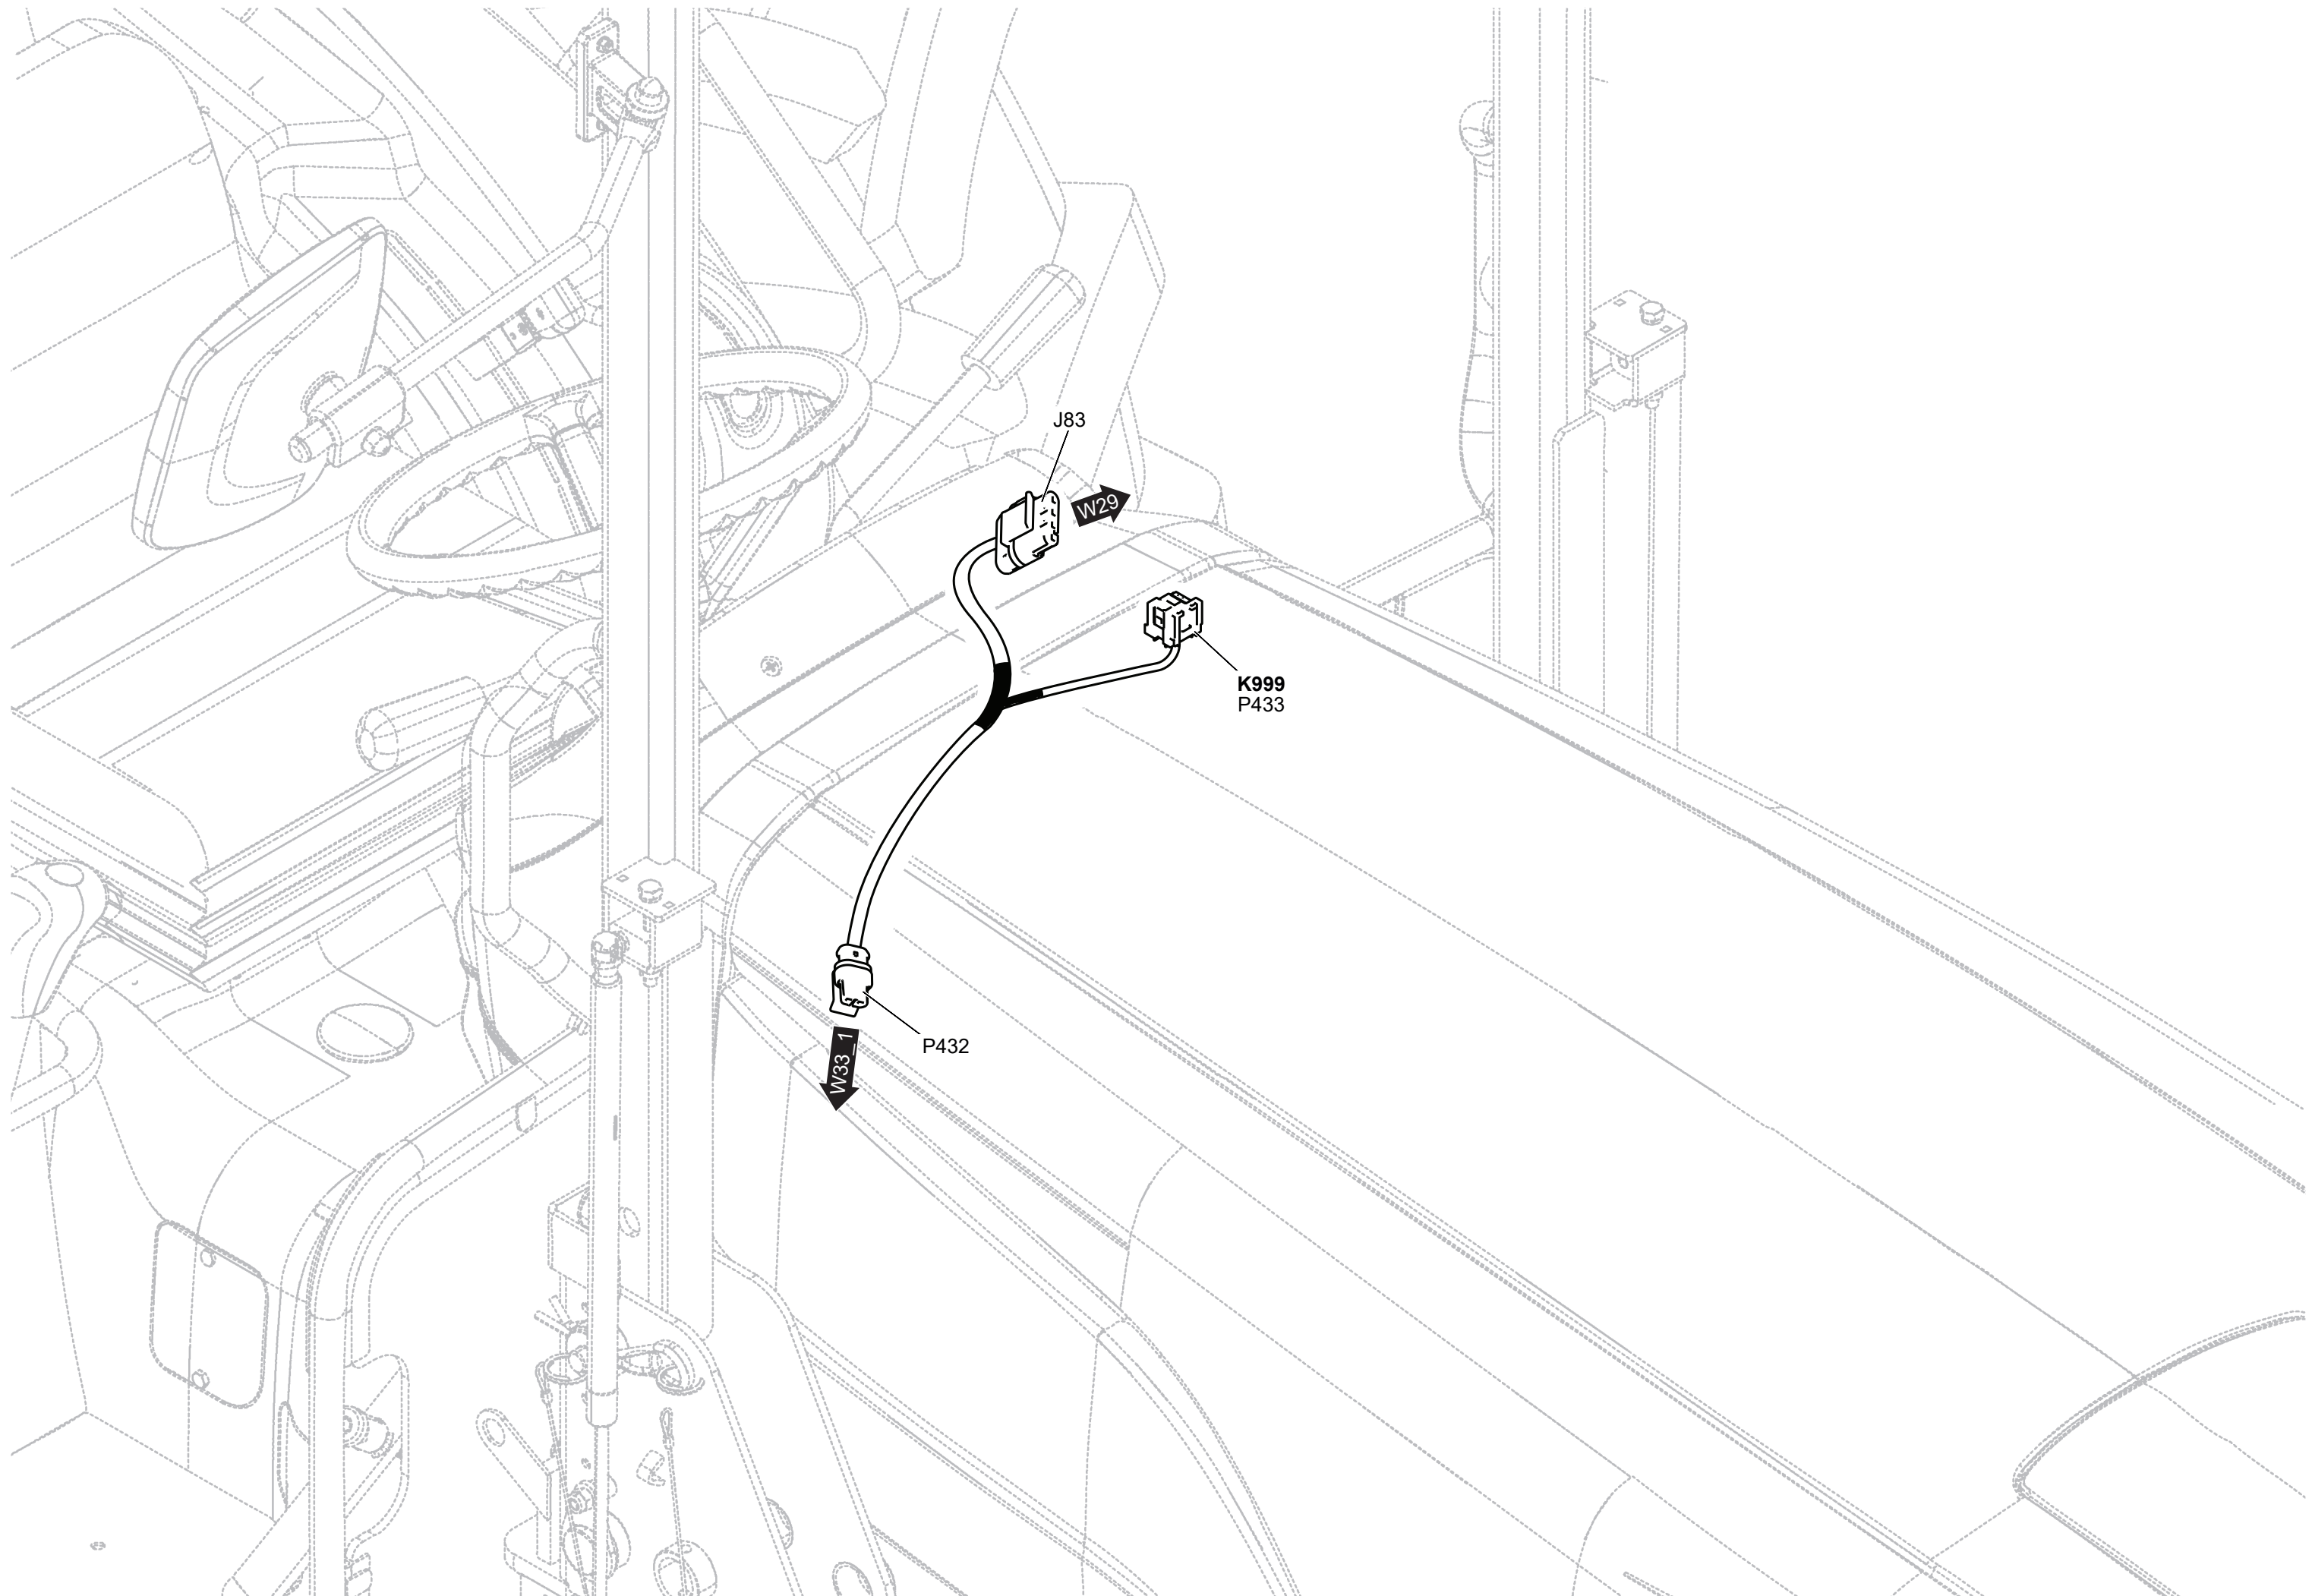


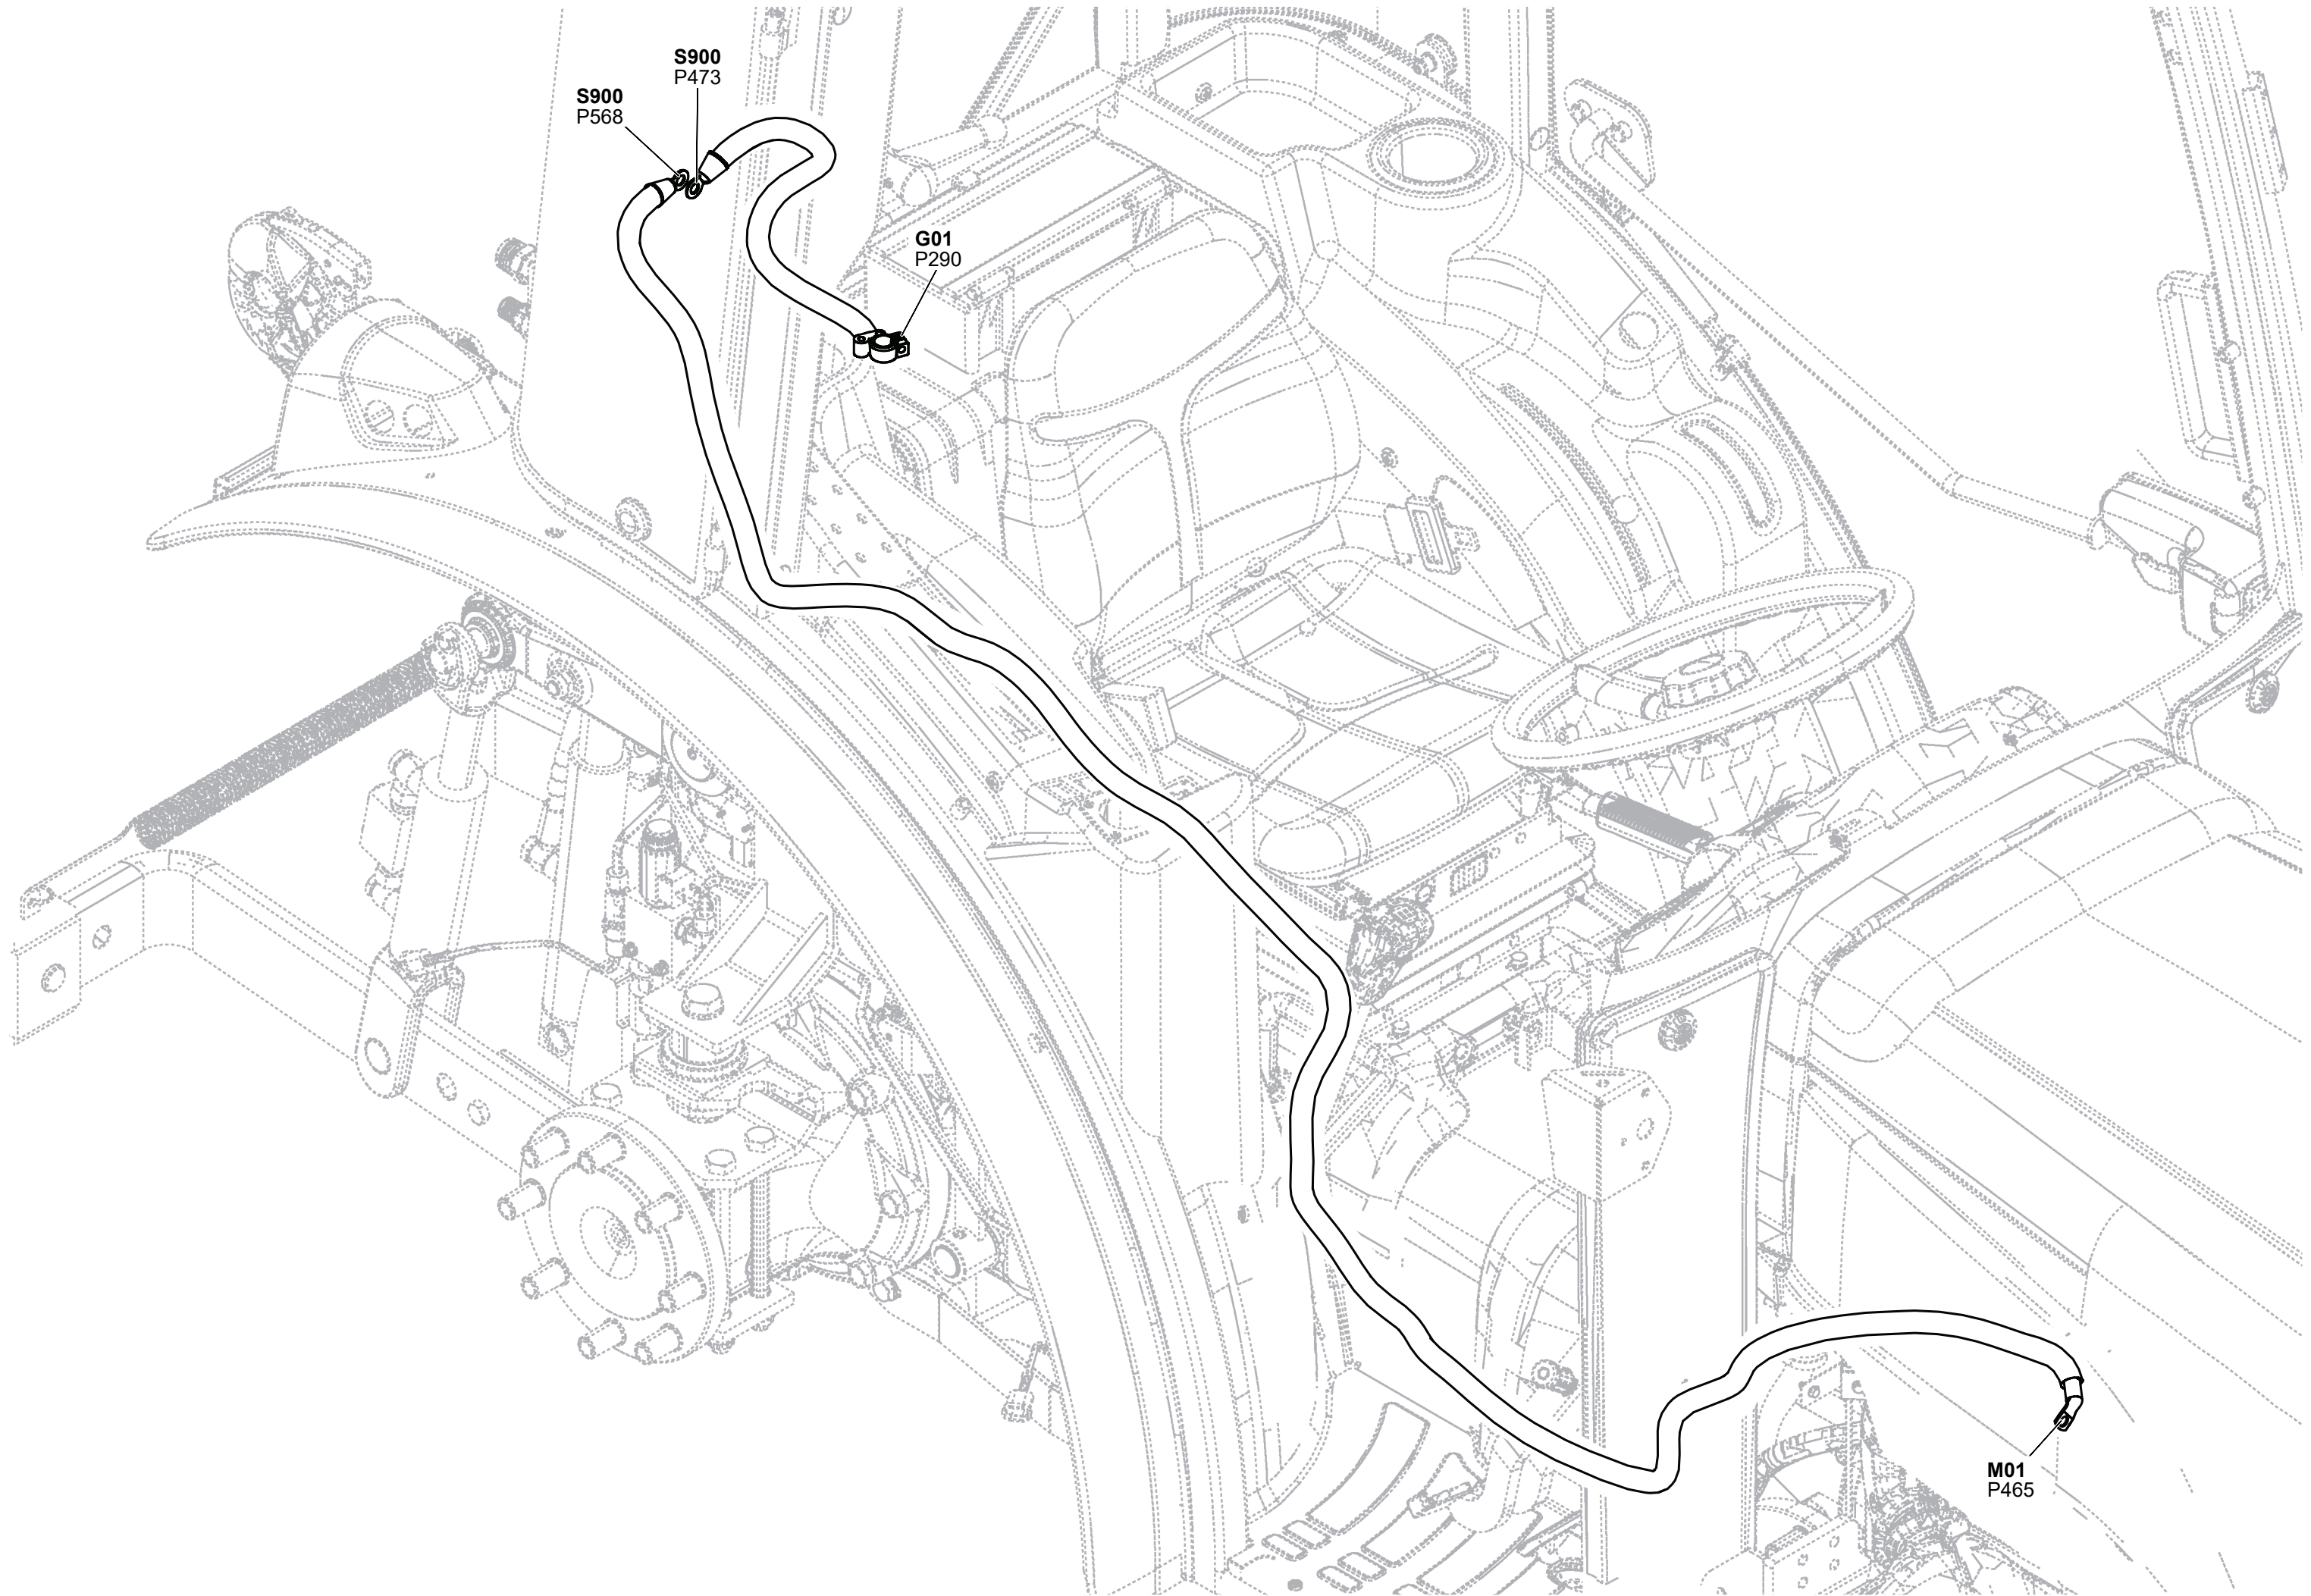

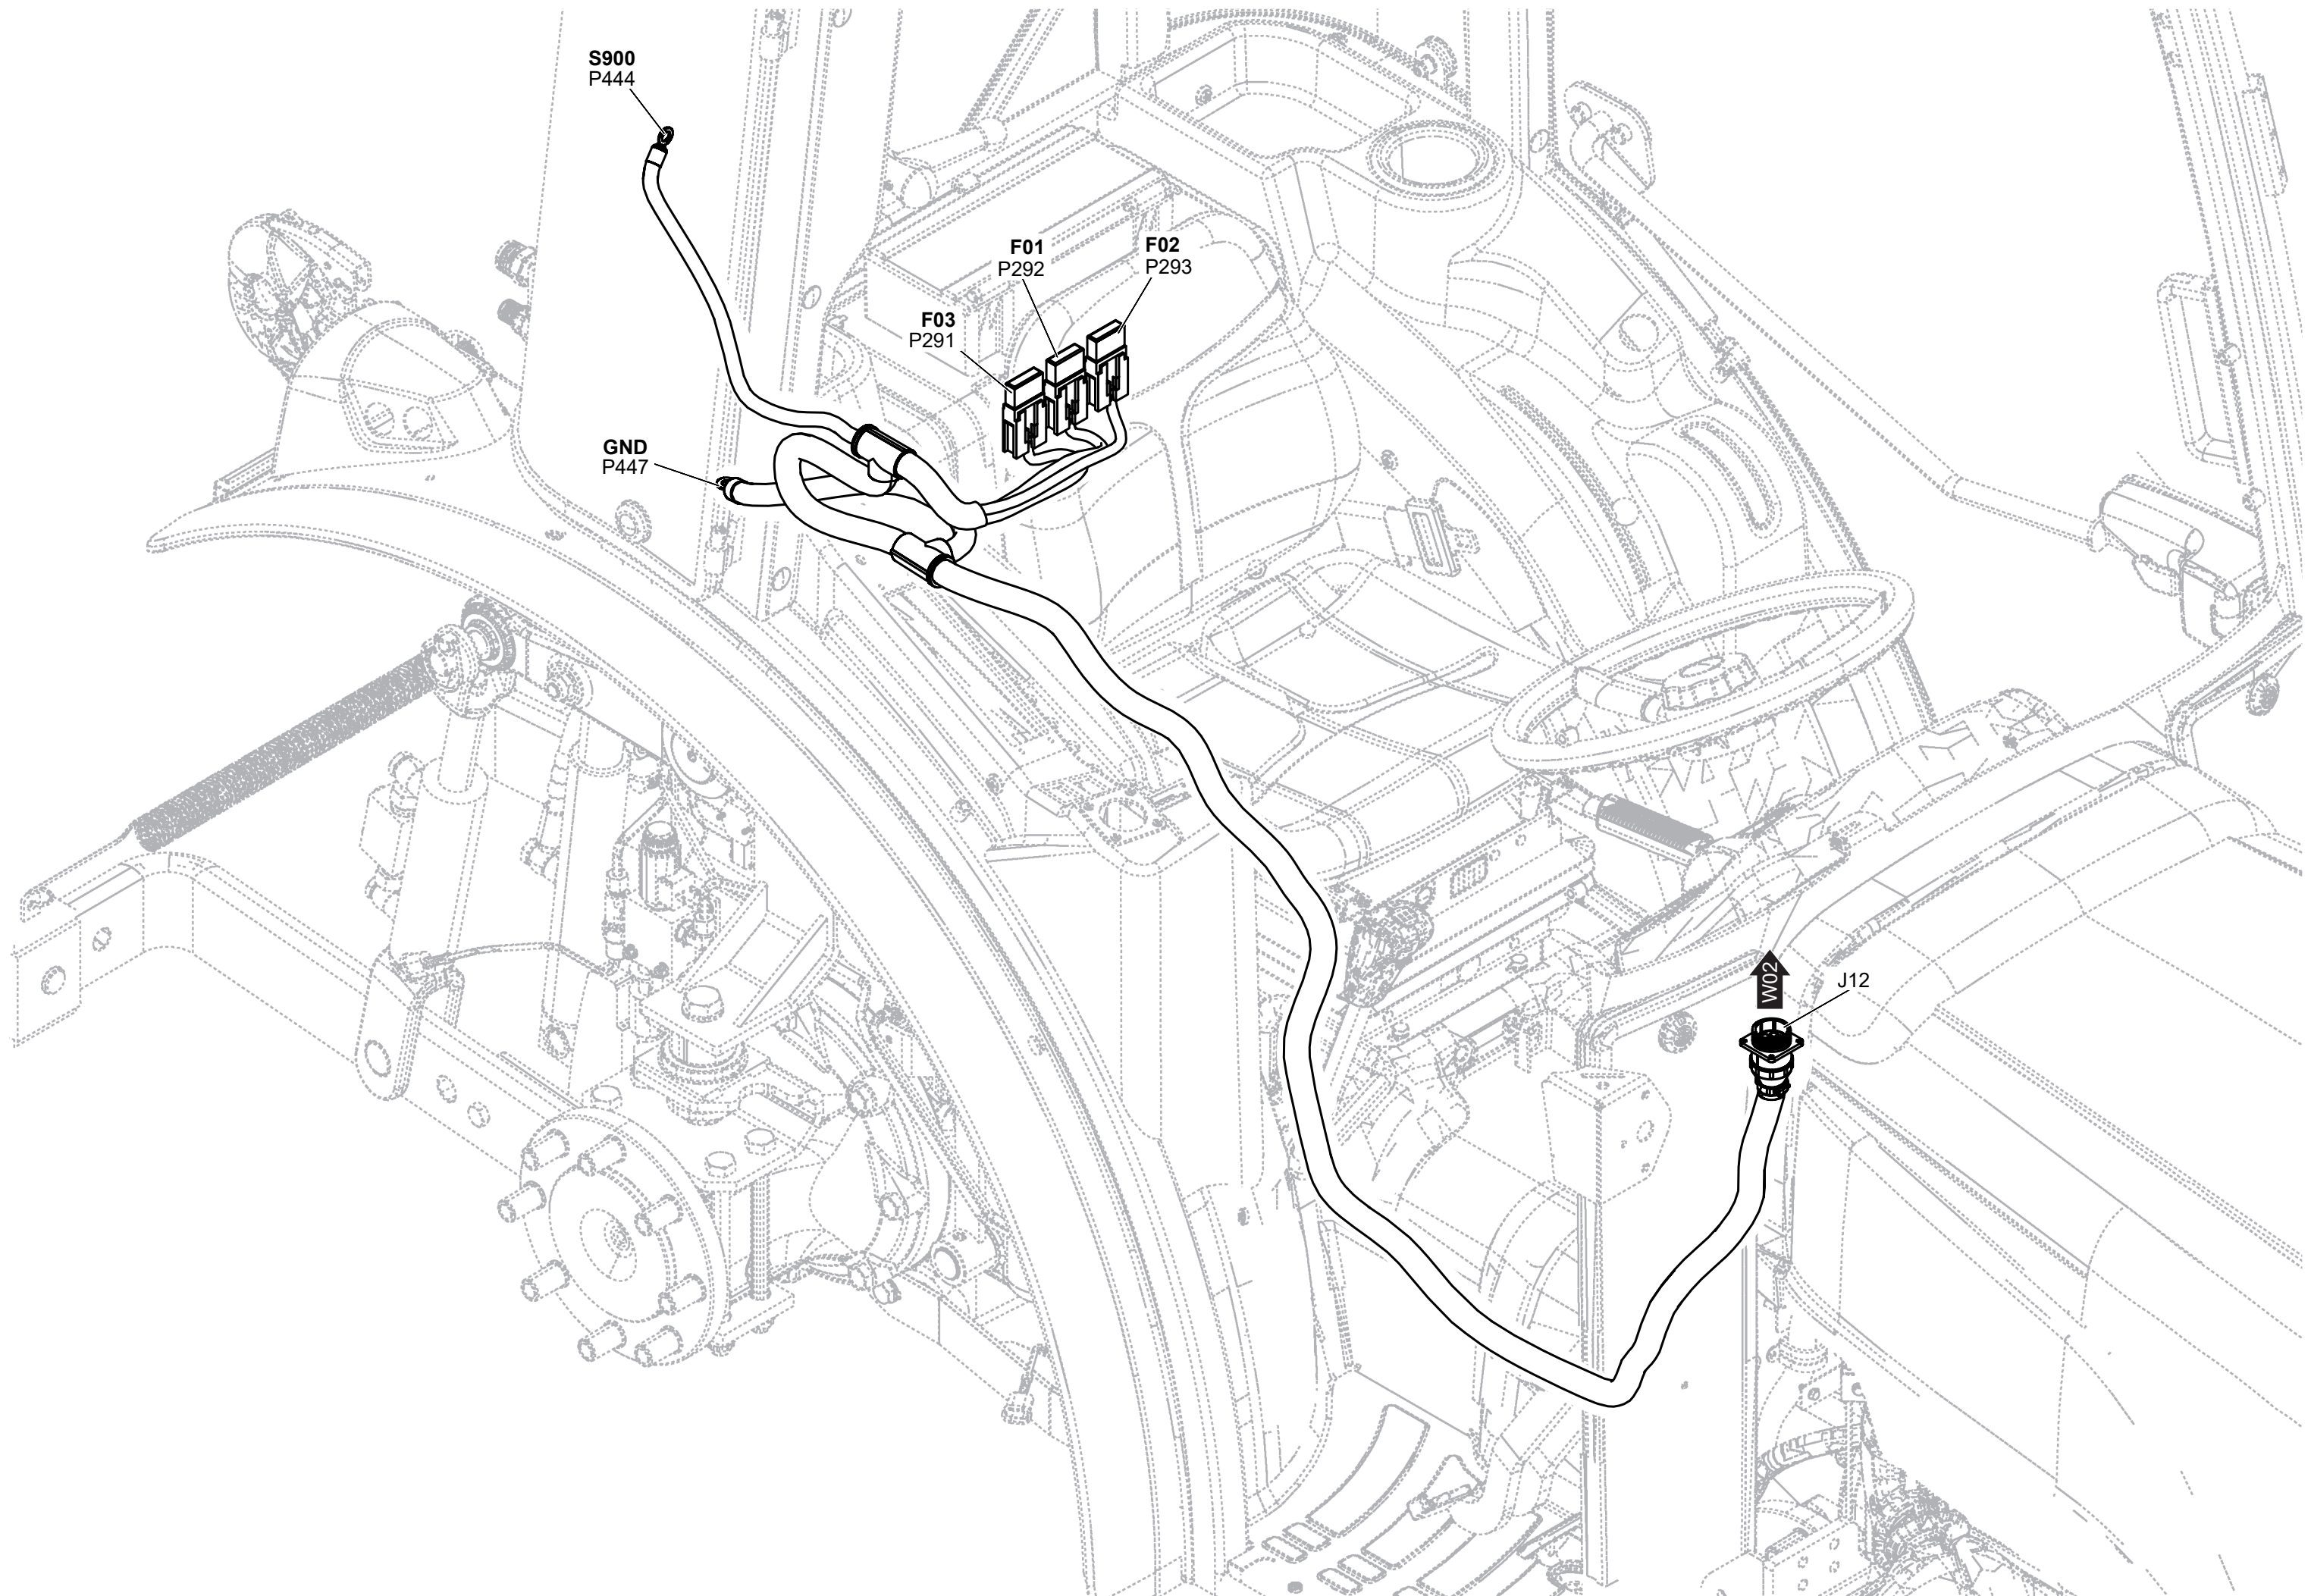


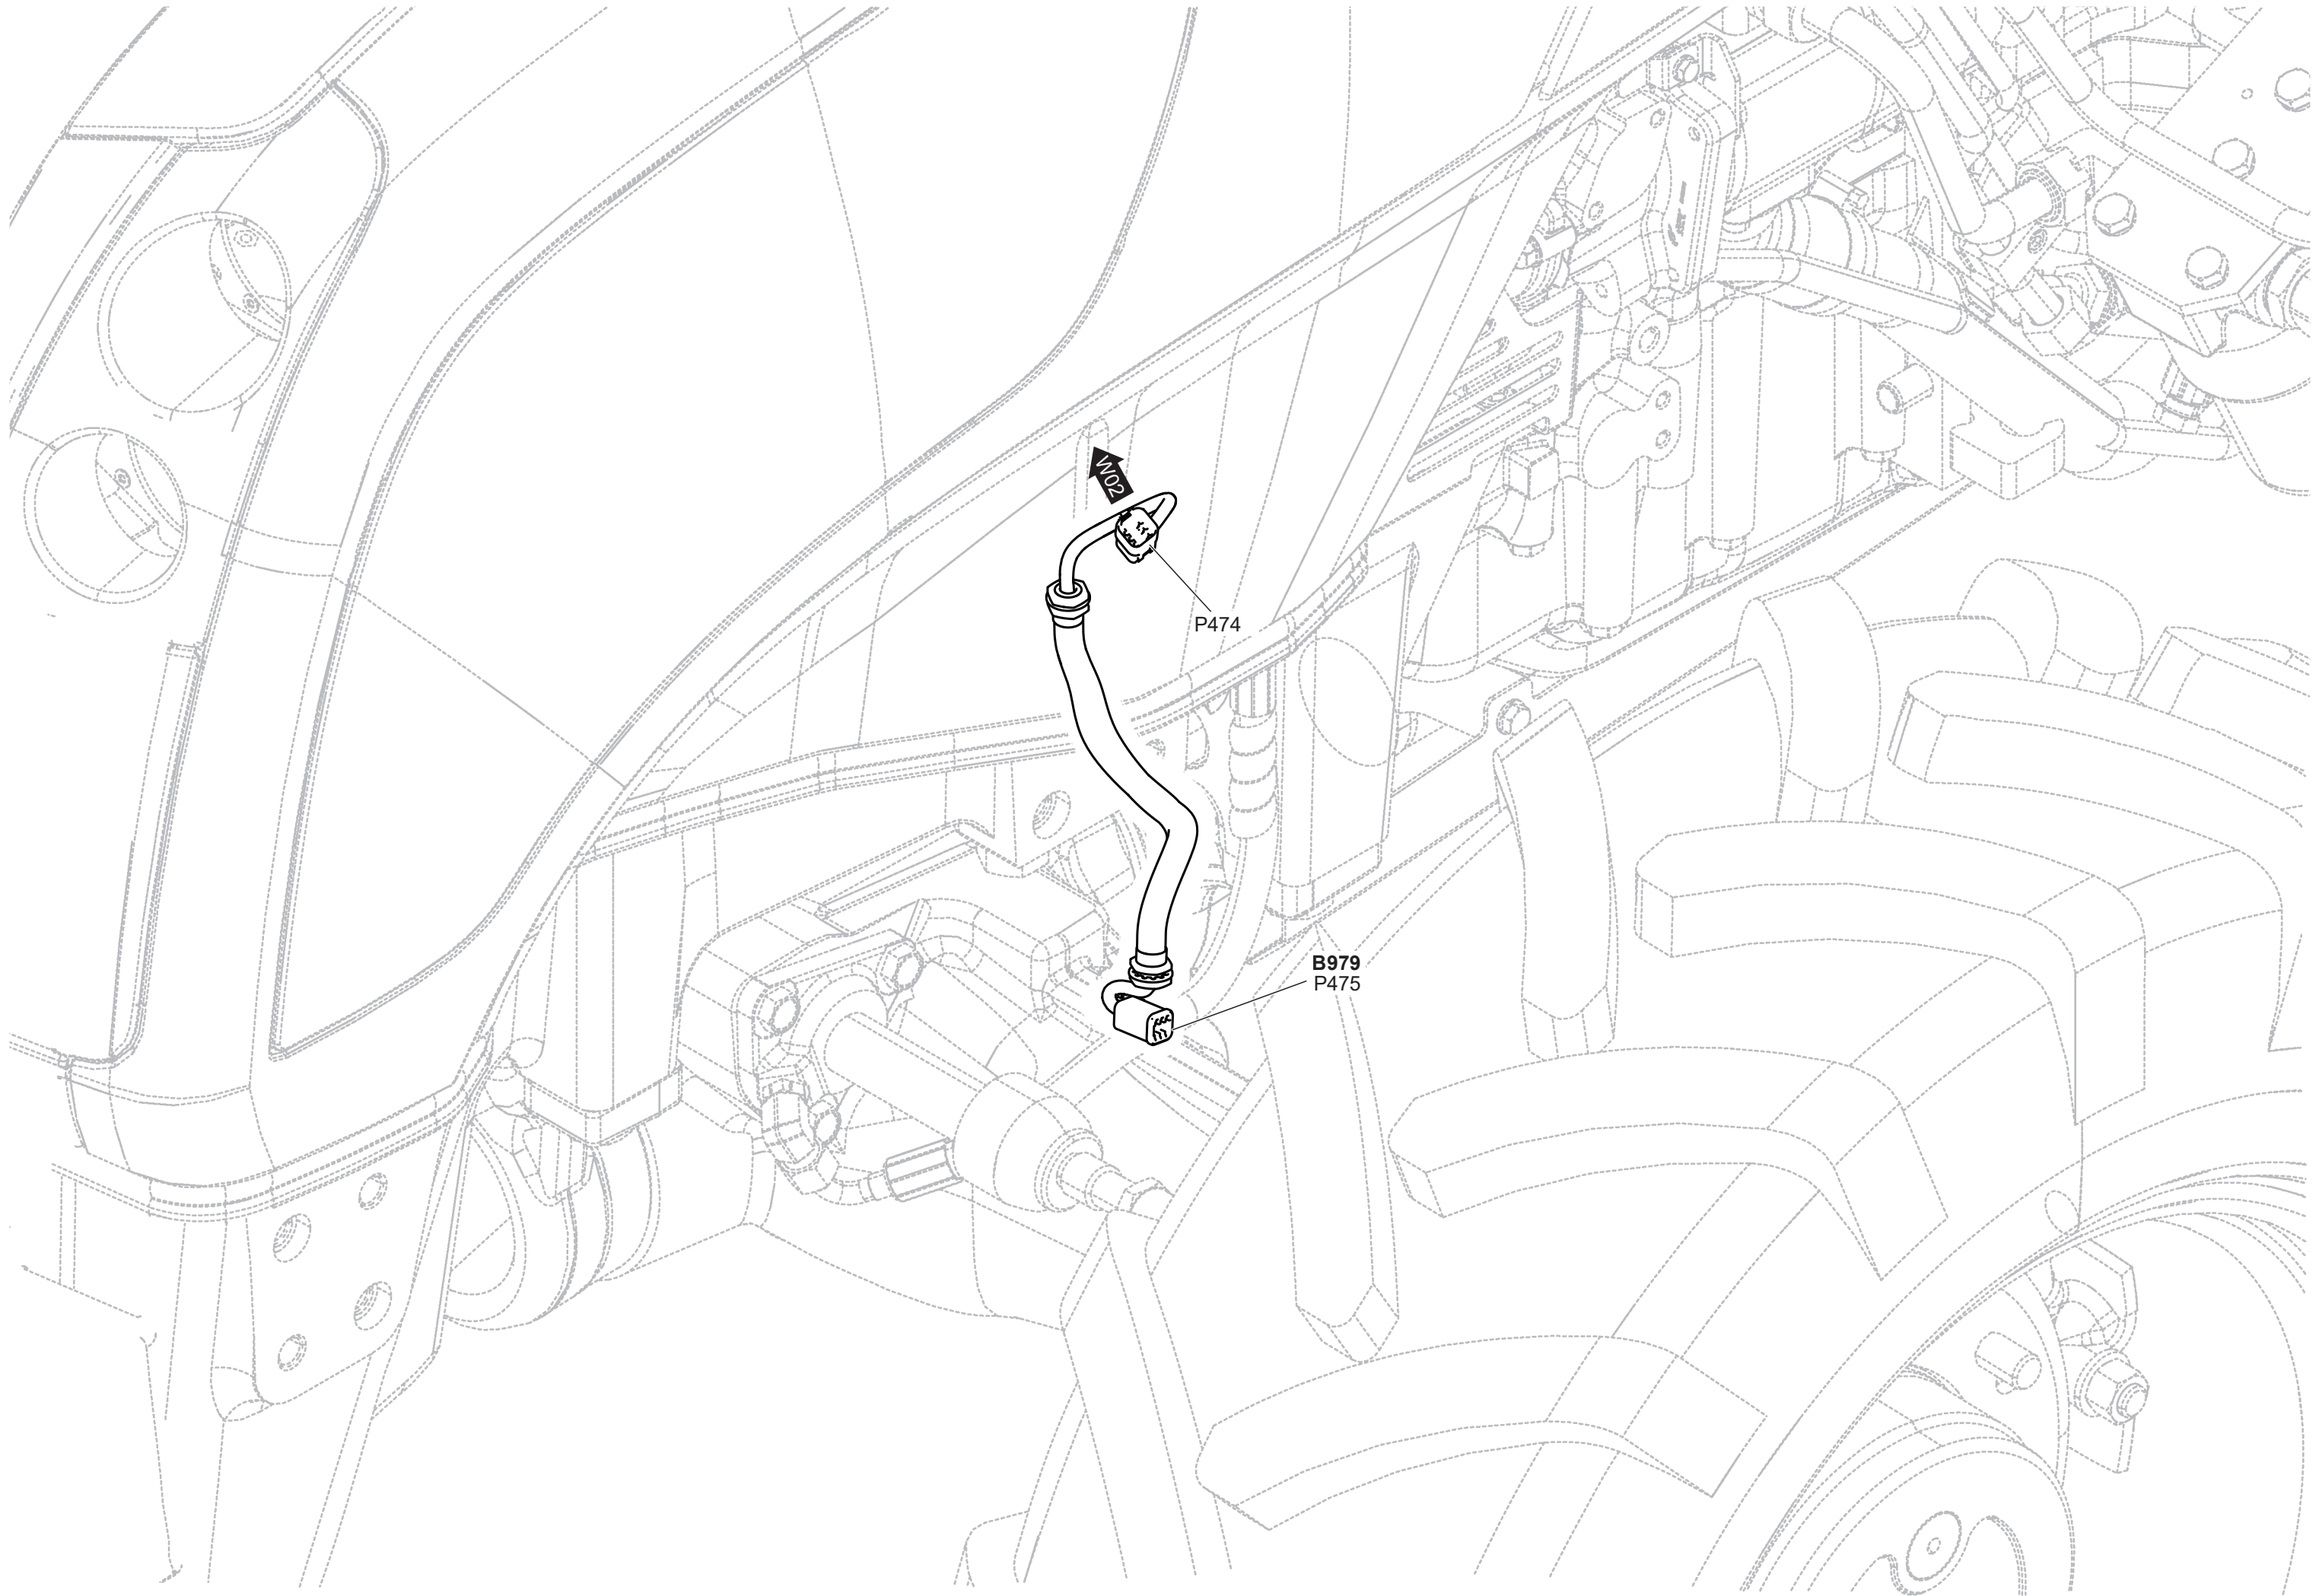


A330 - Instrument panel

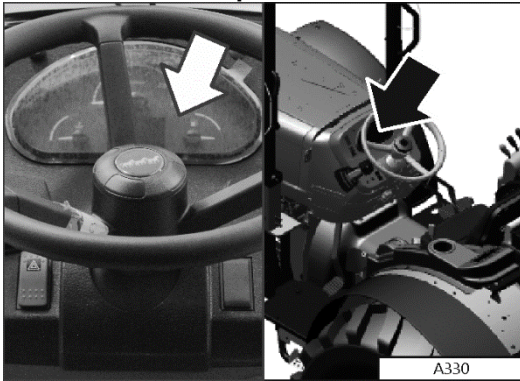 


A500 - Engine control unit

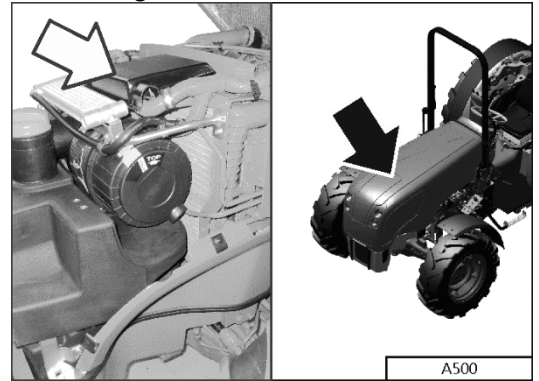 


A510 - Glow plug ECU

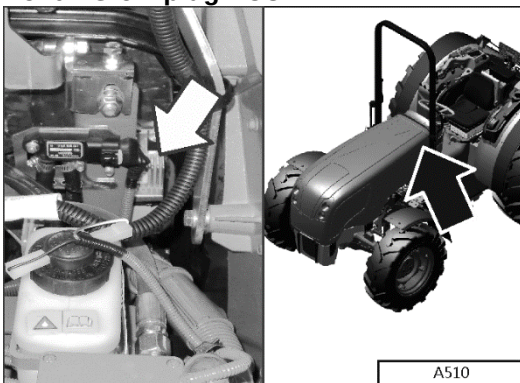 


B02 - Air filter switch

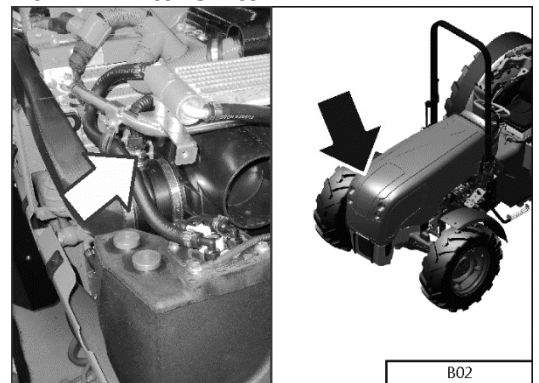 


B03 - Fuel level sensor

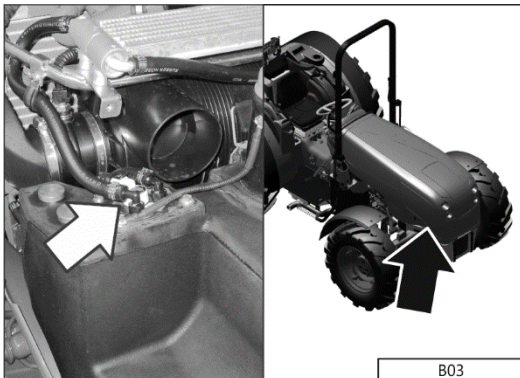 


B05 - Hand brake switch

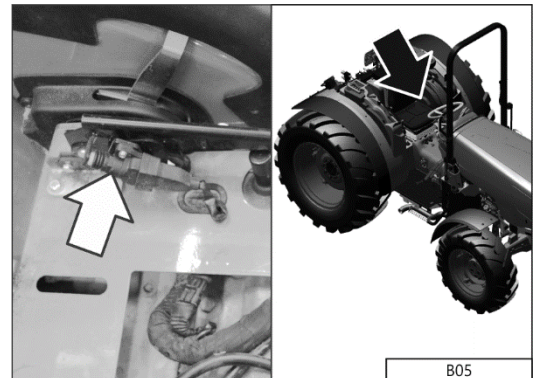 


B06 - Speed Sensor

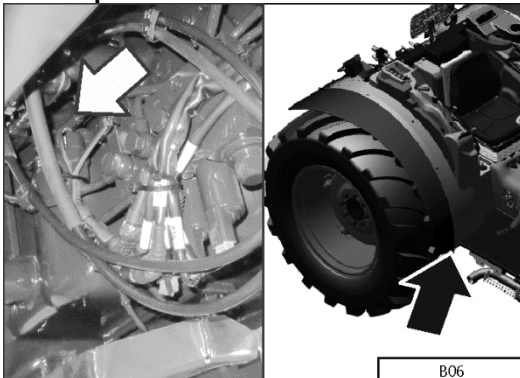 

 
B07A - 540E/1000 PTO speed selector switch

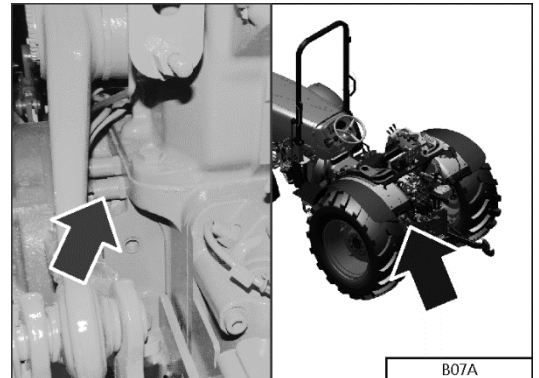


B07B - 540 PTO speed selector switch

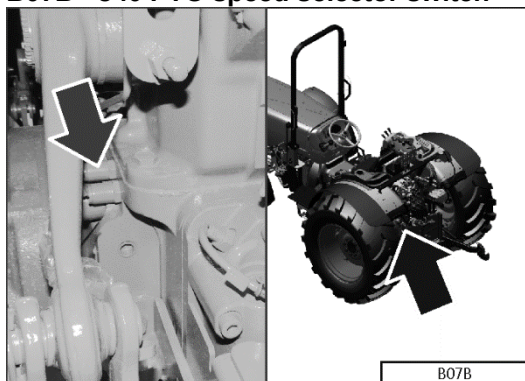 


B08 - Mechanical PTO switch

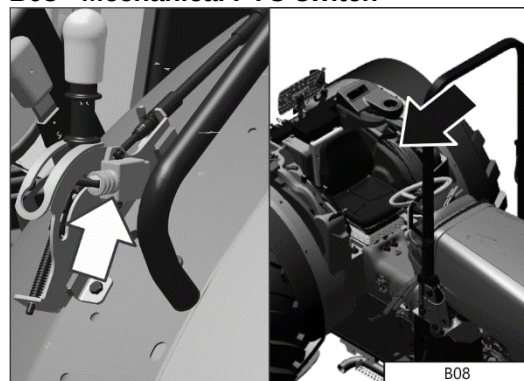 


B31 - Trailer brake pressure sensor

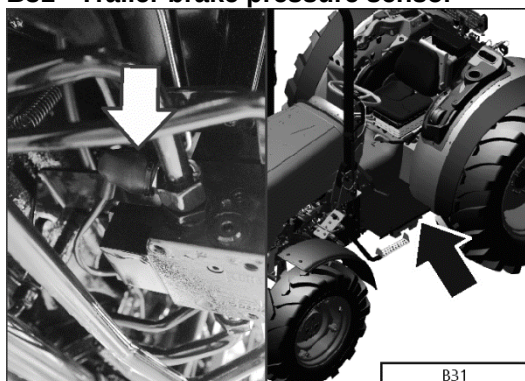 


B36 - Neutral start switch

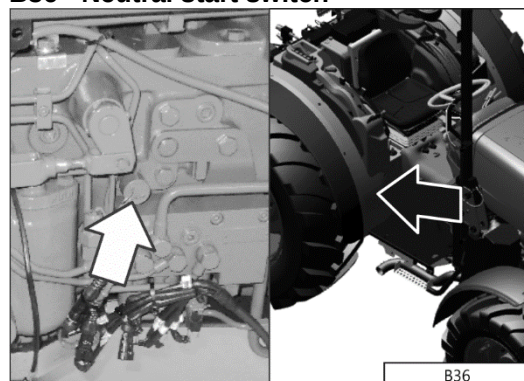 


B69 - Brakes oil level switch

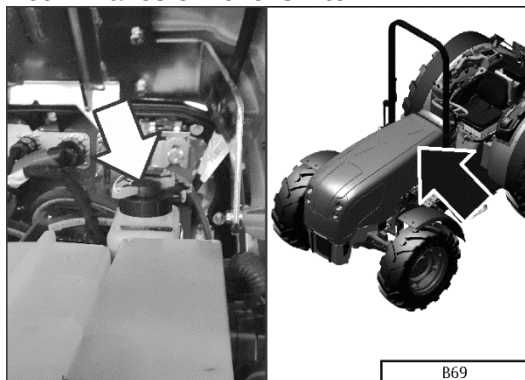 


B501 - Lambda sond

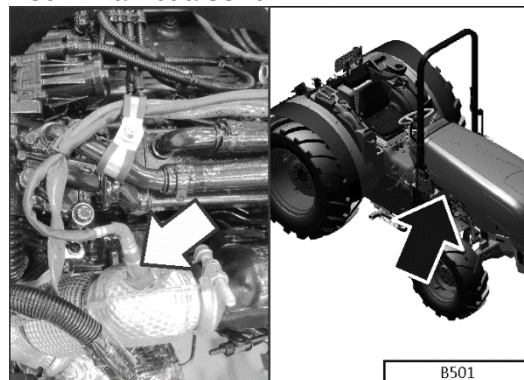 


B509 - Air temperature sensor

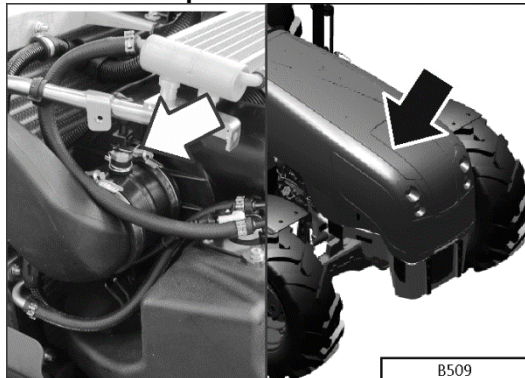 


B510 - Water in fuel switch

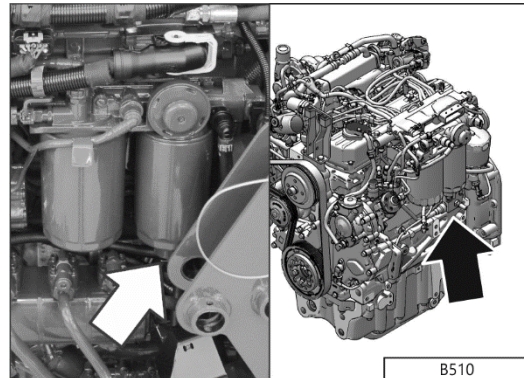 


B511 - Delta pressure sensor

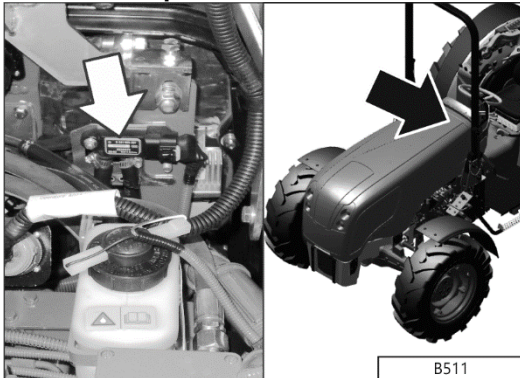 


B512 - Exhaust gas temperature sensor 1

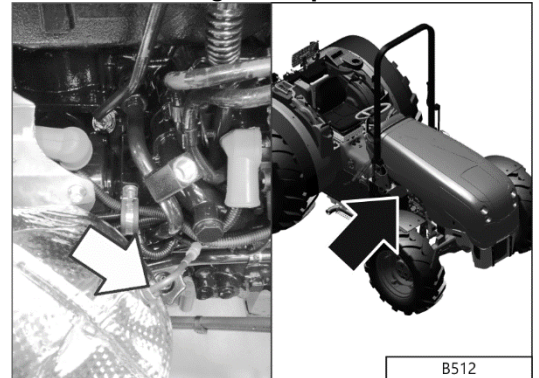 


B513 - Exhaust gas temperature sensor 2

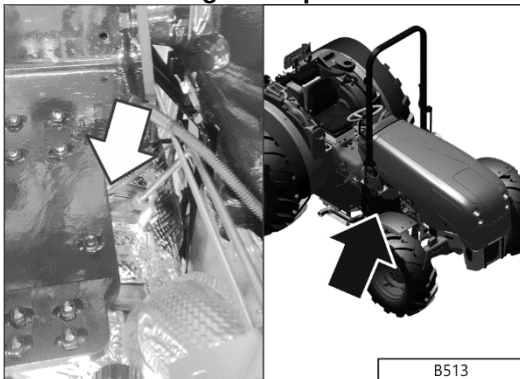 


B979 - Steering angle sensor

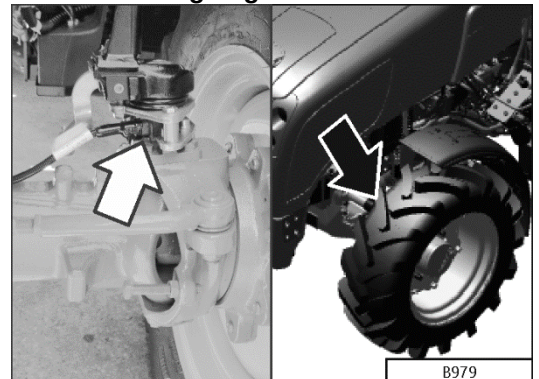 


B987 - Diff-lock pressure switch

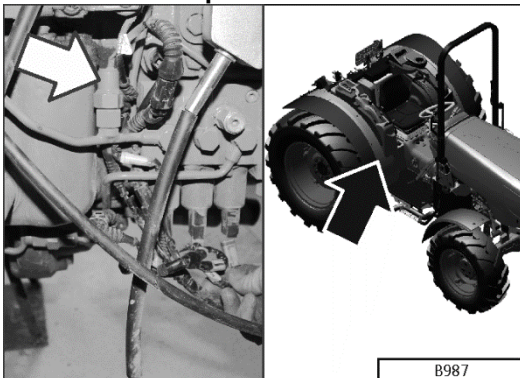 


B988 - 4WD pressure switch

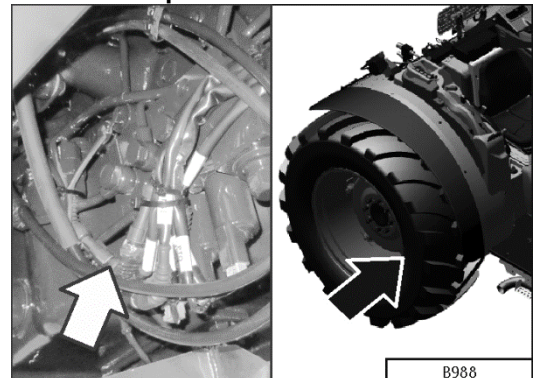 


B990 - PTO signal 1

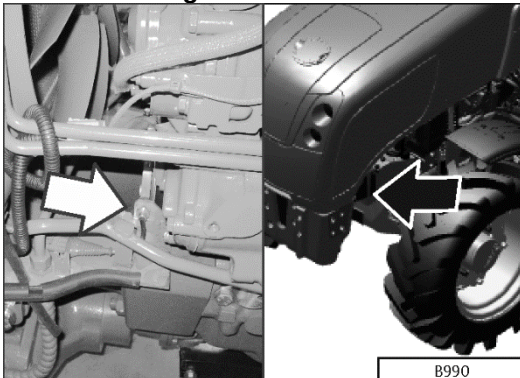 


B998 - Hand throttle sensor

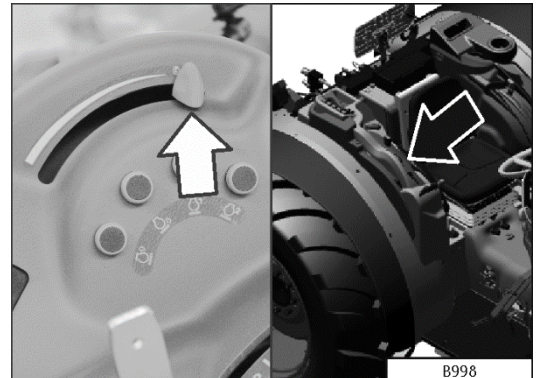 


B999 - Foot throttle sensor

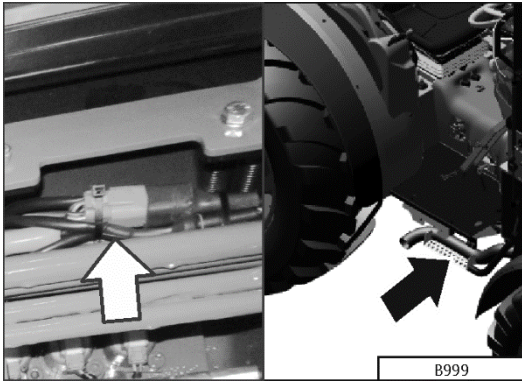 


E01A - RHS Low beam

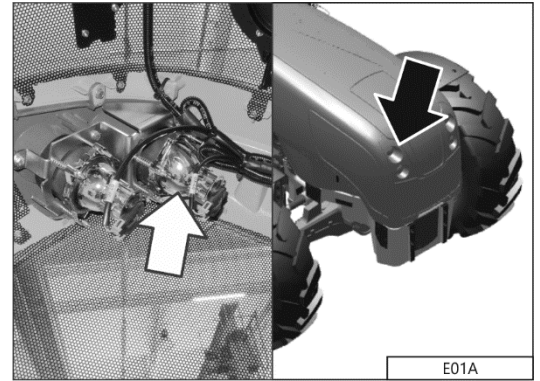 


E01B - RHS High beam

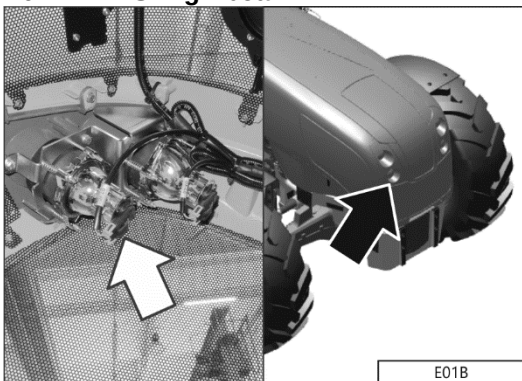 


E02A - LHS Low beam

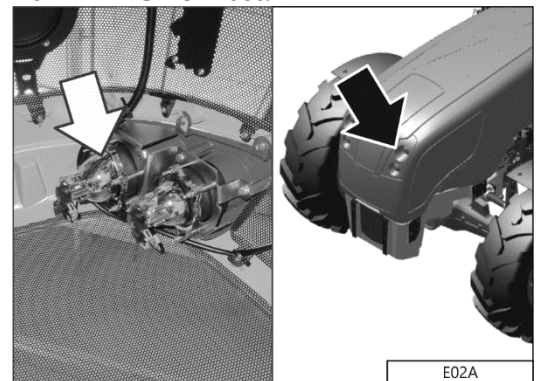 


E02B - LHS High beam

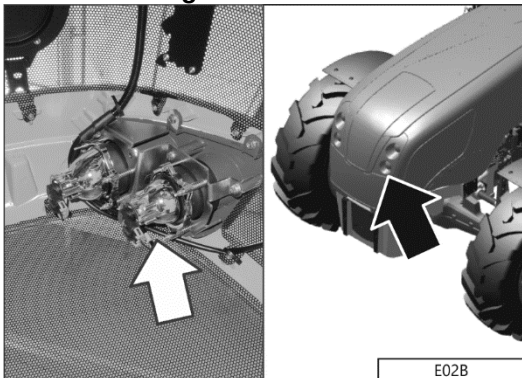 


E03 - RH grabrail light

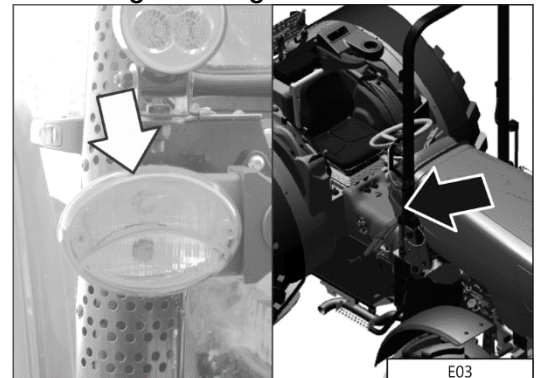 


E04 - LH grabrail light

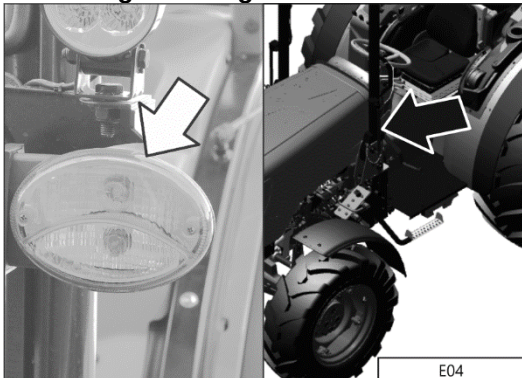 


E05 - Cigarette lighter

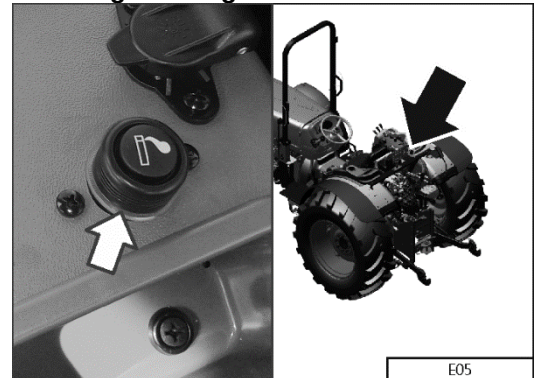 


E07 - LH Front H4 light

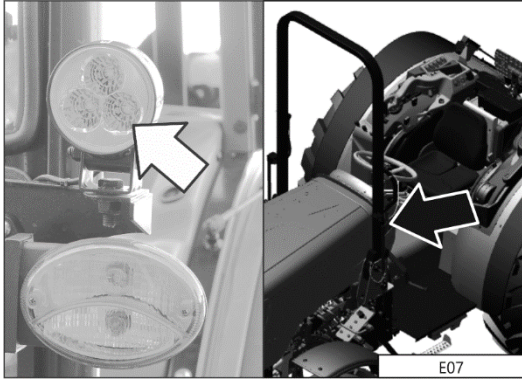 


E08 - RH Front H4 light

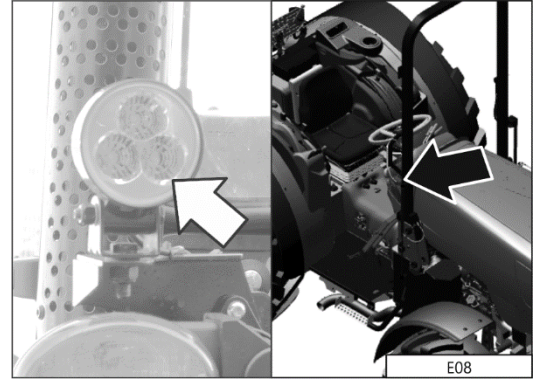 


E13 - LH Rear road light

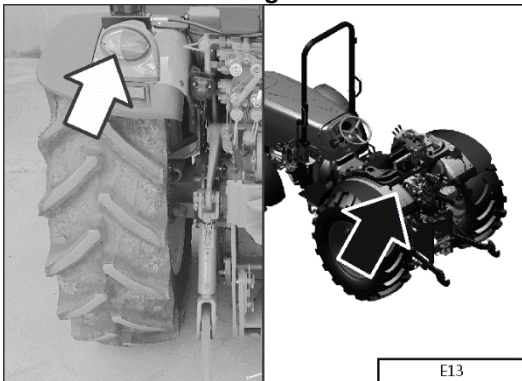 


E14 - RH Rear road light

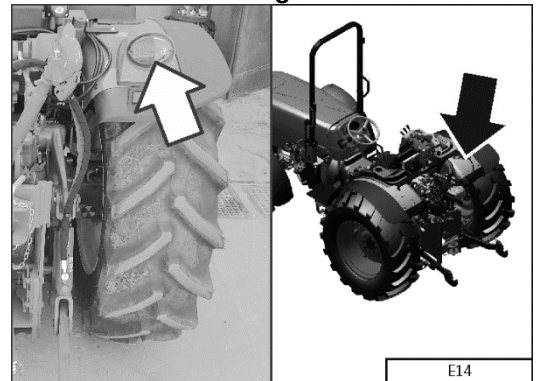 


E21 - Licence plate light

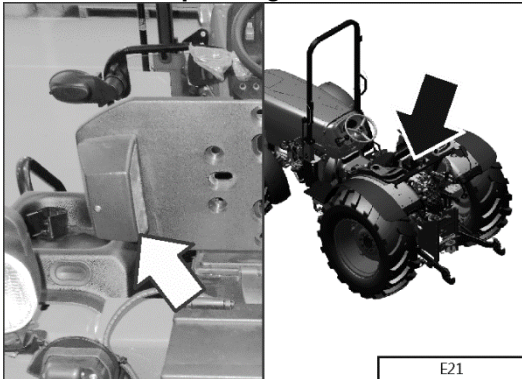 


E27 - Beacon light

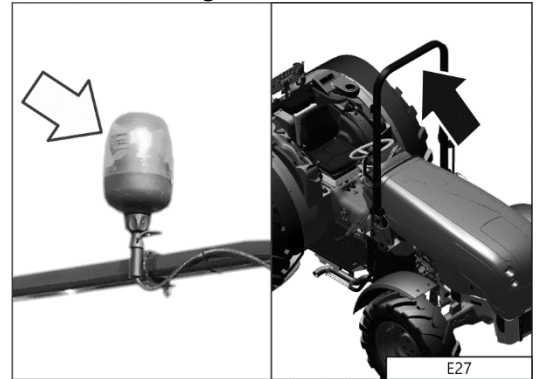 


E997 - LH Front H3 light

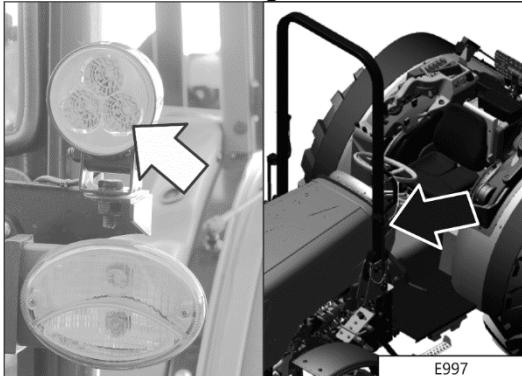 


E998 - RH Front H3 light

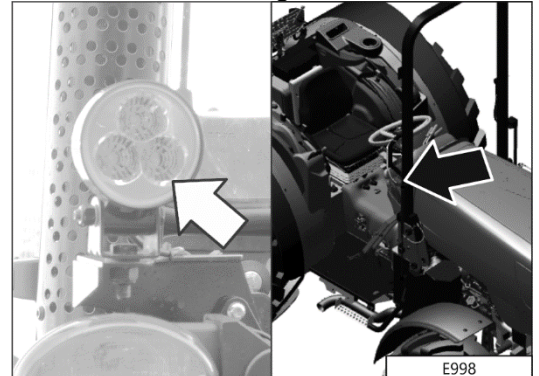 


F01 - Glow plug fuse

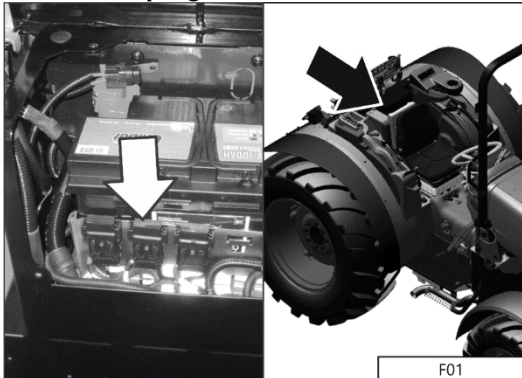 


F02 - Engine ECU fuse

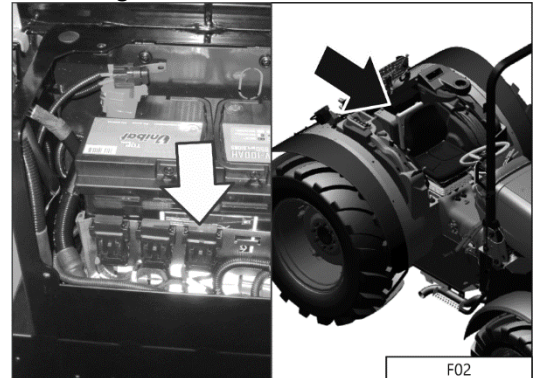 


F03 - Main fuse

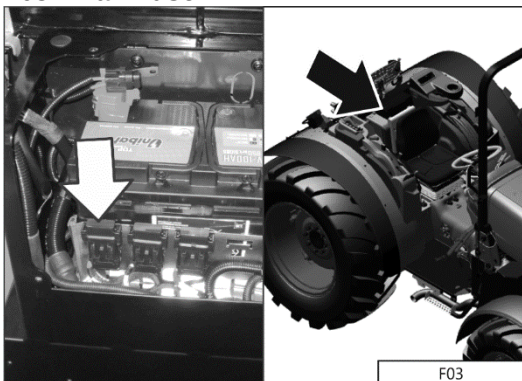 


G01 - Battery

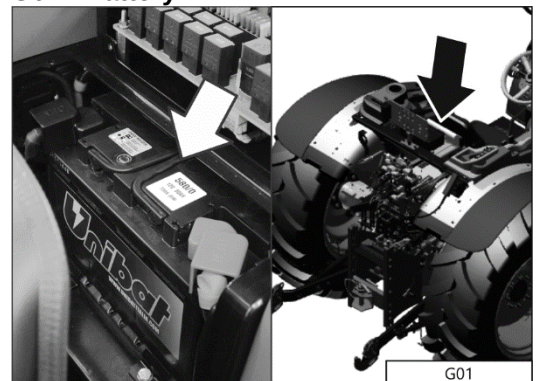 


G02 - Alternator

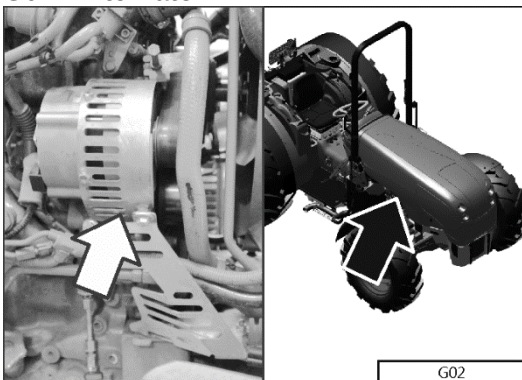 


H01 - Claxon

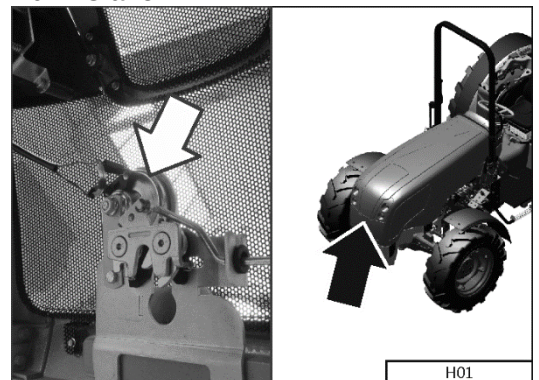 


H80 - Trailer brake switch

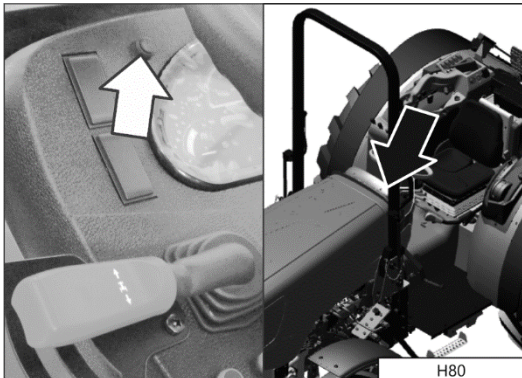 


K01 - Starter relay

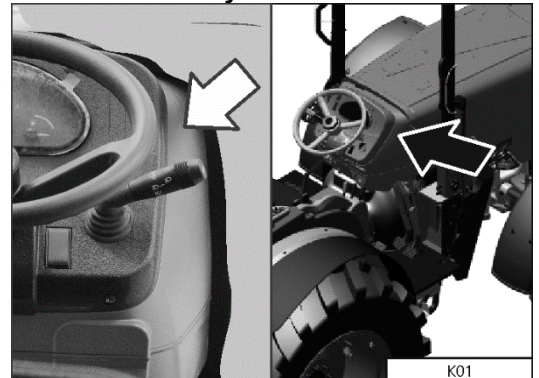 


K08 - Flasher unit

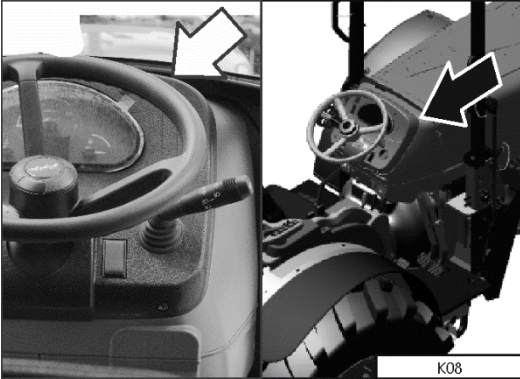 


M01 - Starter motor

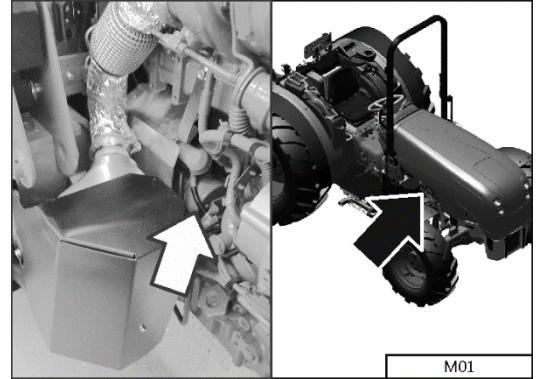 


M06 - Air seat

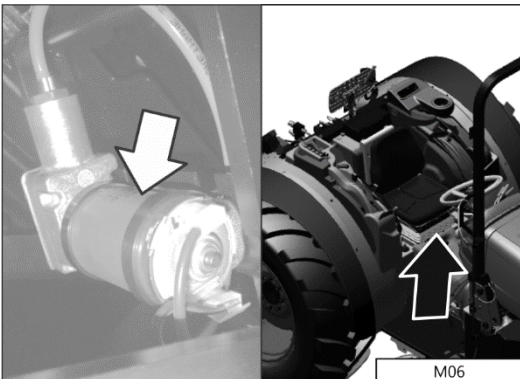 


PCB

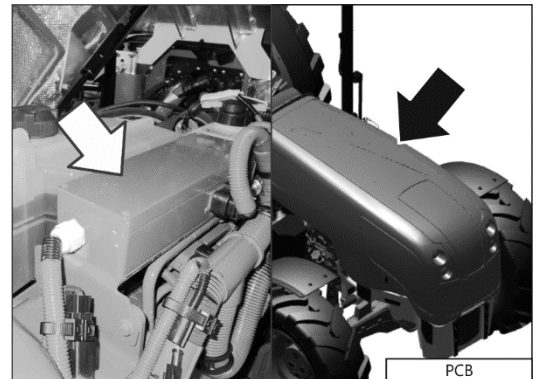 


R505 - Fuel filter heating

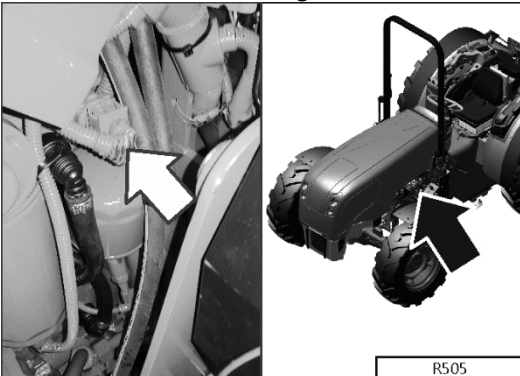 


S01 - Ignition switch

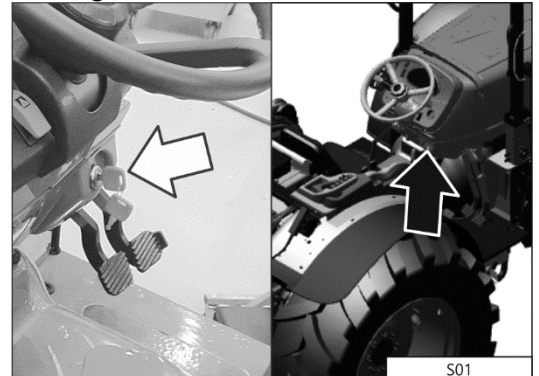 


S09 - Blinker lever

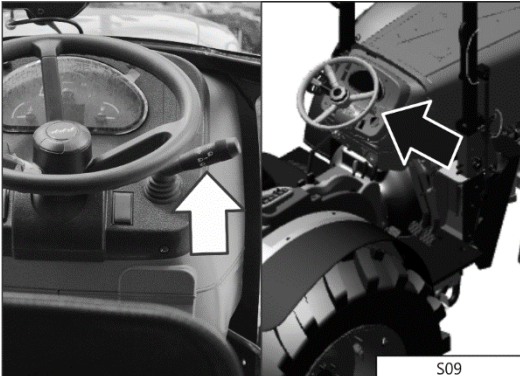 


S11 - H4 lights switch

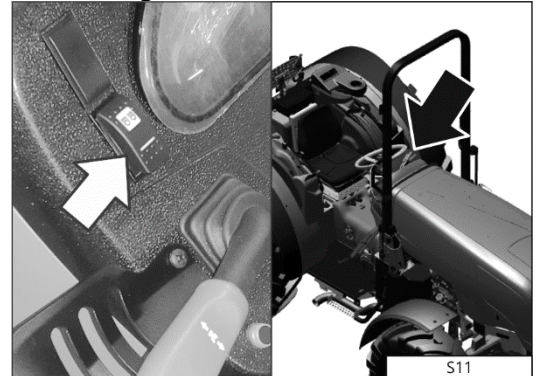 


S21A - GD PTO selector switch

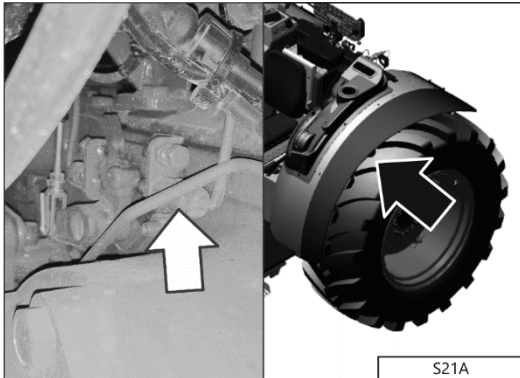 


S21B - DIR PTO selector switch

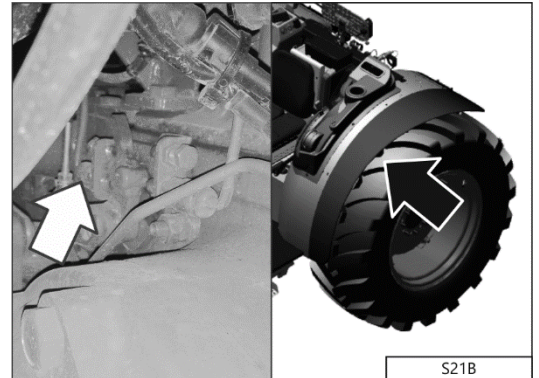 


S22 - Diff-lock switch

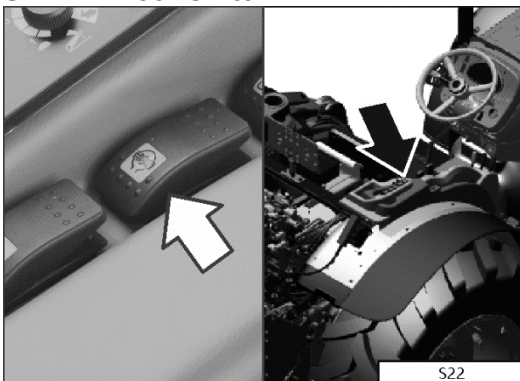 


S36 - Beacon switch

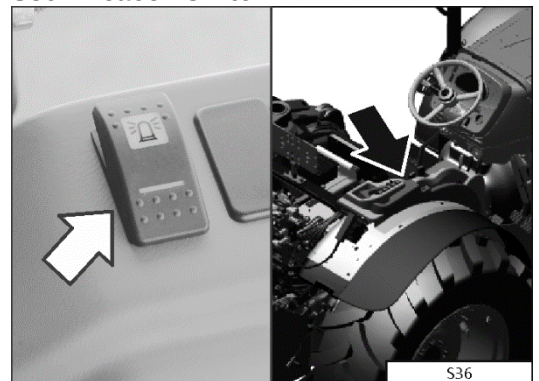 


S63 - 4WD switch

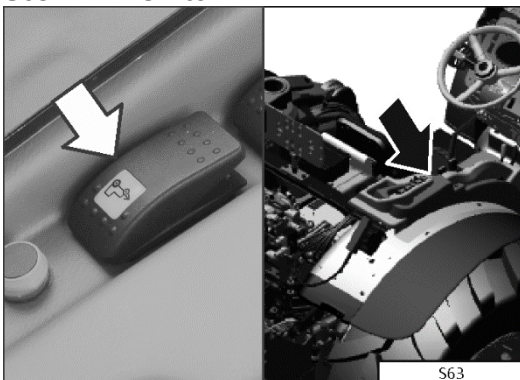 


S72 - Clutch pedal end stroke switch

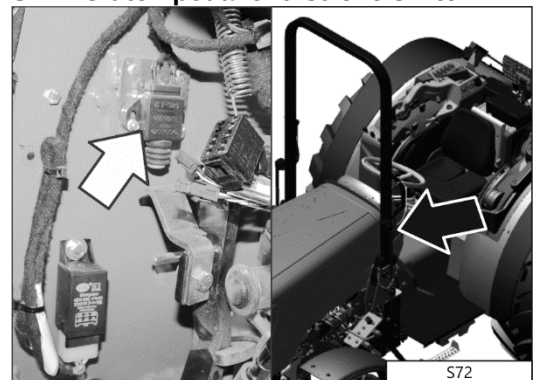 


S300 - HI-LO switch

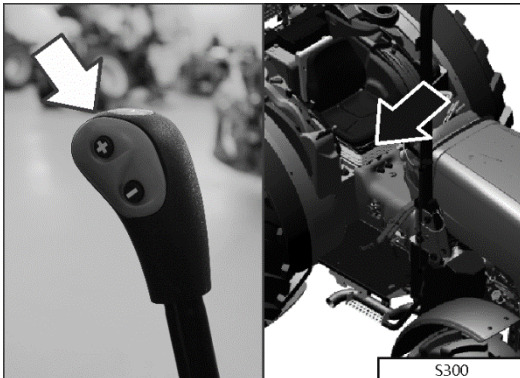 


S900 - Battery cutt-off switch

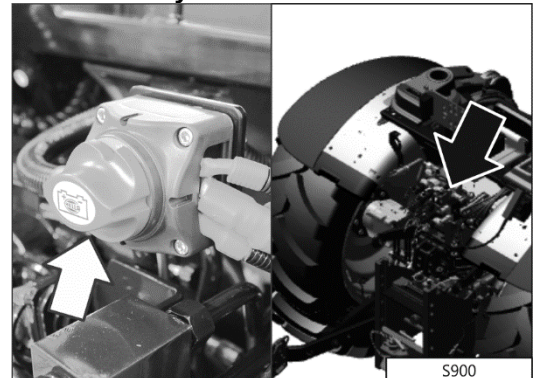 


S987 - RIGID-FLOTT switch

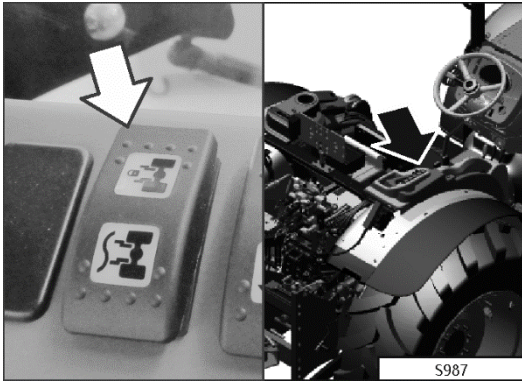 


S988 - LEFT-RIGHT switch

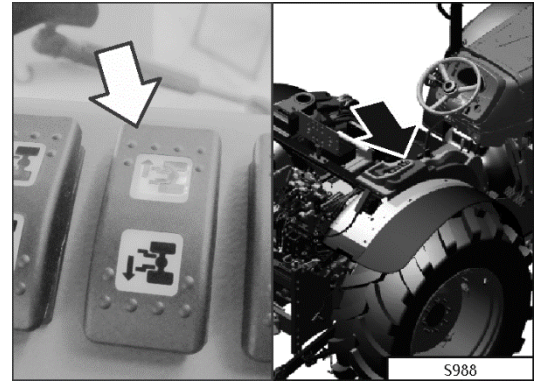 


S989 - UP-DOWN switch

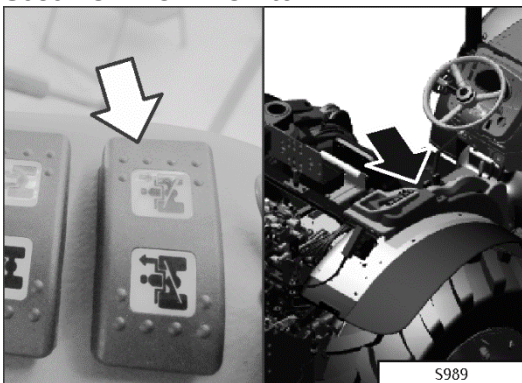 


S990 - Button menu

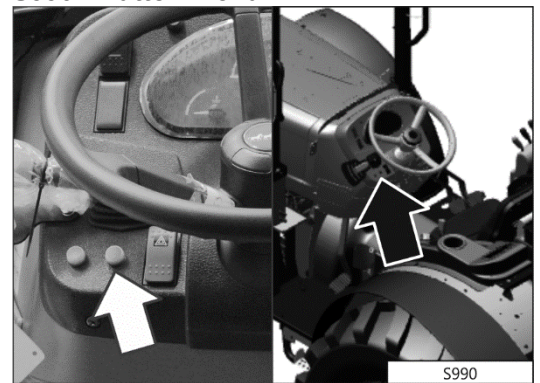 


S991 - Button set

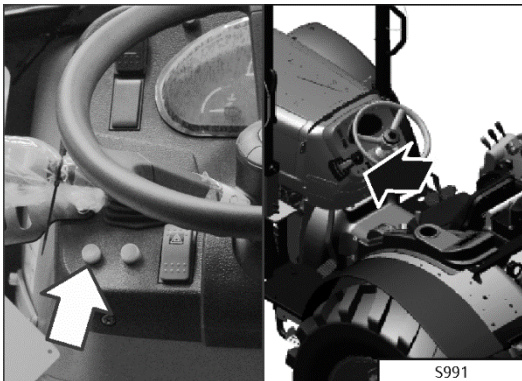 


S992A - Cruise control MEM1

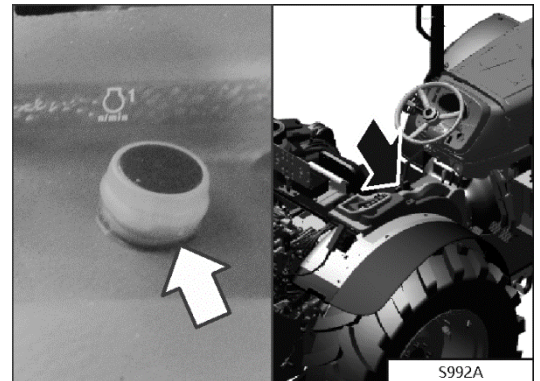 


S992B - Cruise control MEM2

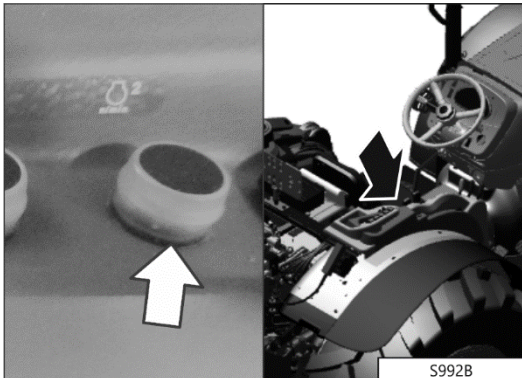 


S993 - Cruise control DW

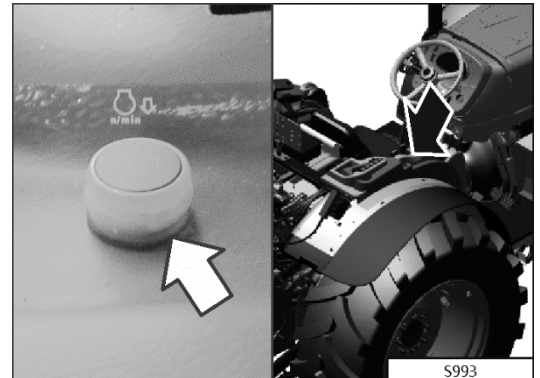 


S994 - Cruise control UP

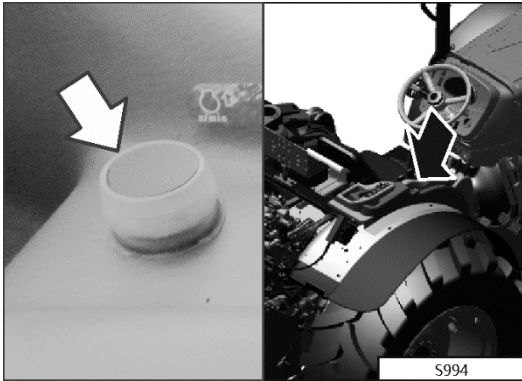 


S999 - Front PTO switch

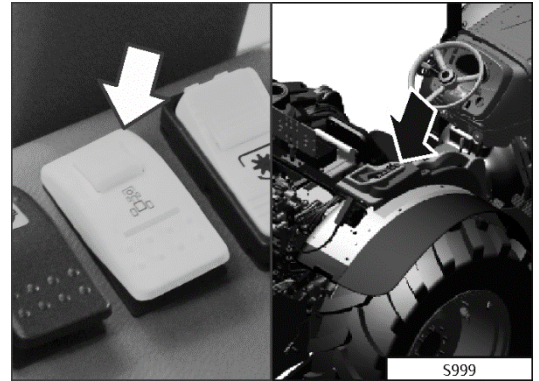 


X42 - 3 Pole socket

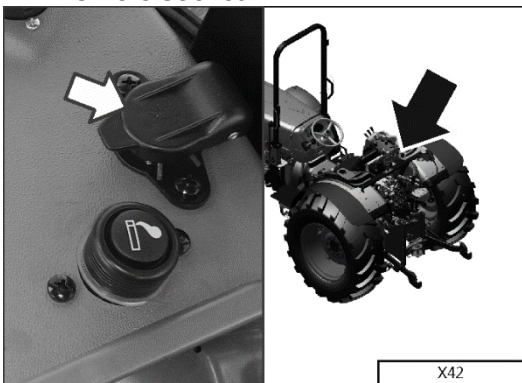 


Y03 - 4WD solenoid valve

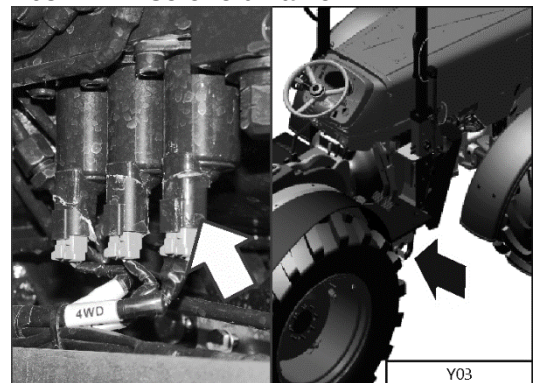 


Y05 - Diff-lock solenoid valve

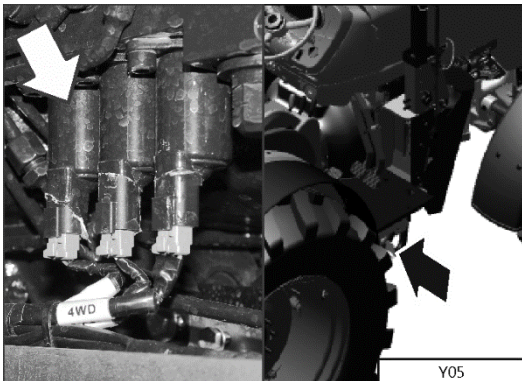 


Y31 - Trailer brake solenoid valve

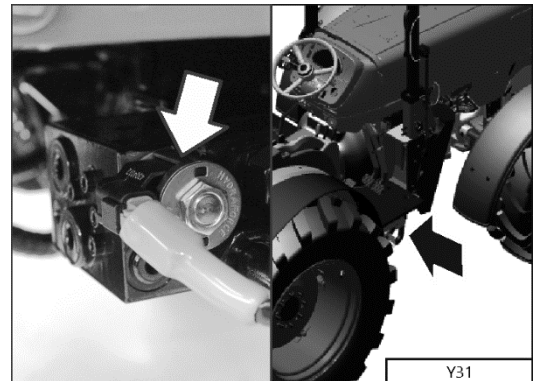 


Y350 - PTO safety solenoid valve

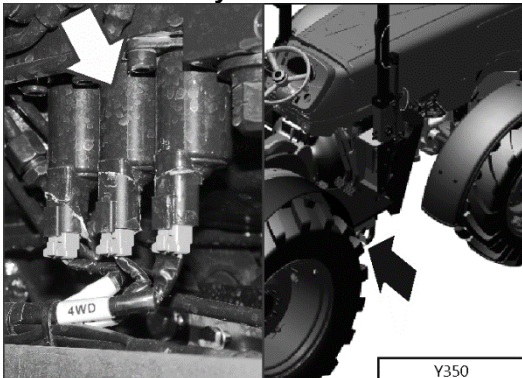 


Y986 - Deport solenoid valve 7

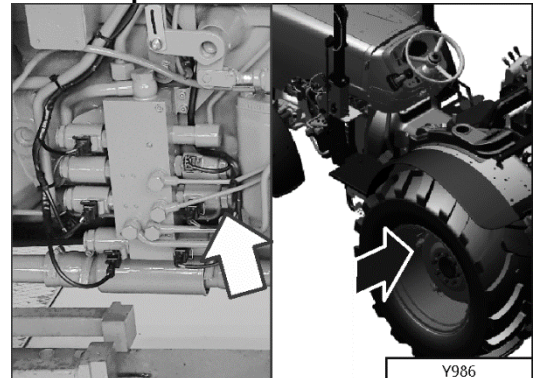 


Y987 - Deport solenoid valve 6

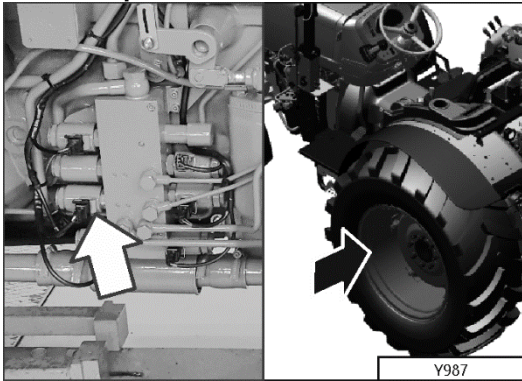 


Y988 - Deport solenoid valve 5

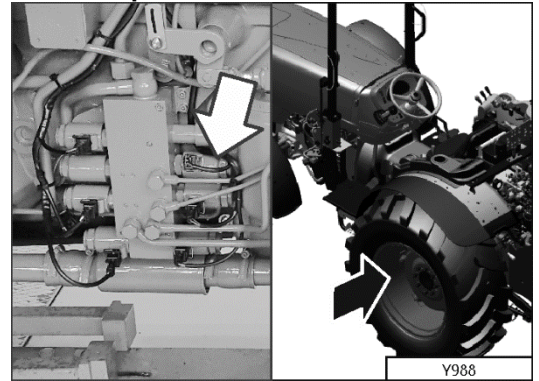 


Y989 - Deport solenoid valve 4

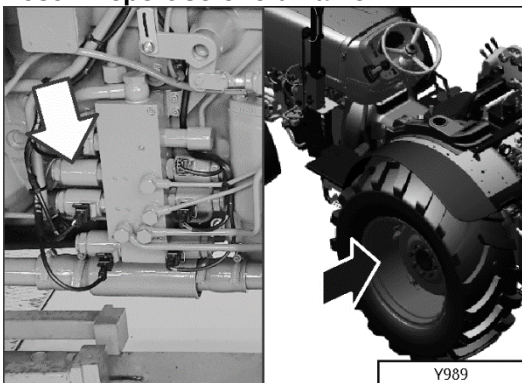 


Y990 - Deport solenoid valve 3

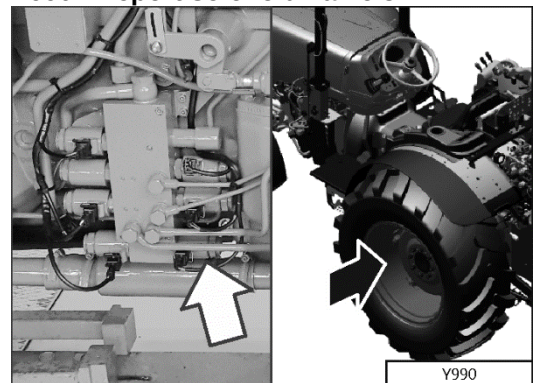 

Y991 - Deport solenoid valve 2

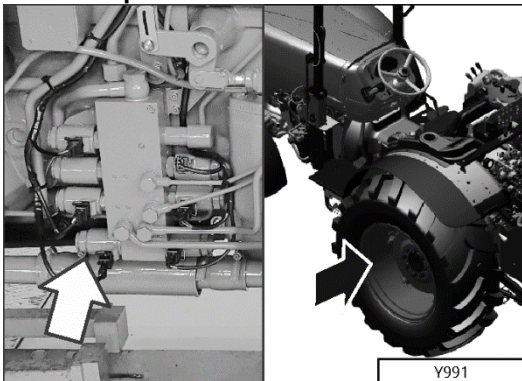 

Y992 - Deport solenoid valve 1

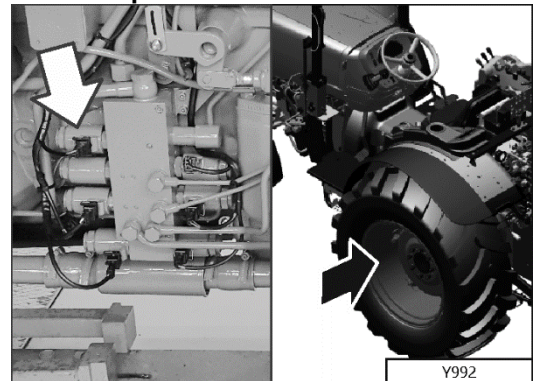 

Y999 - Front PTO solenoid valve

