






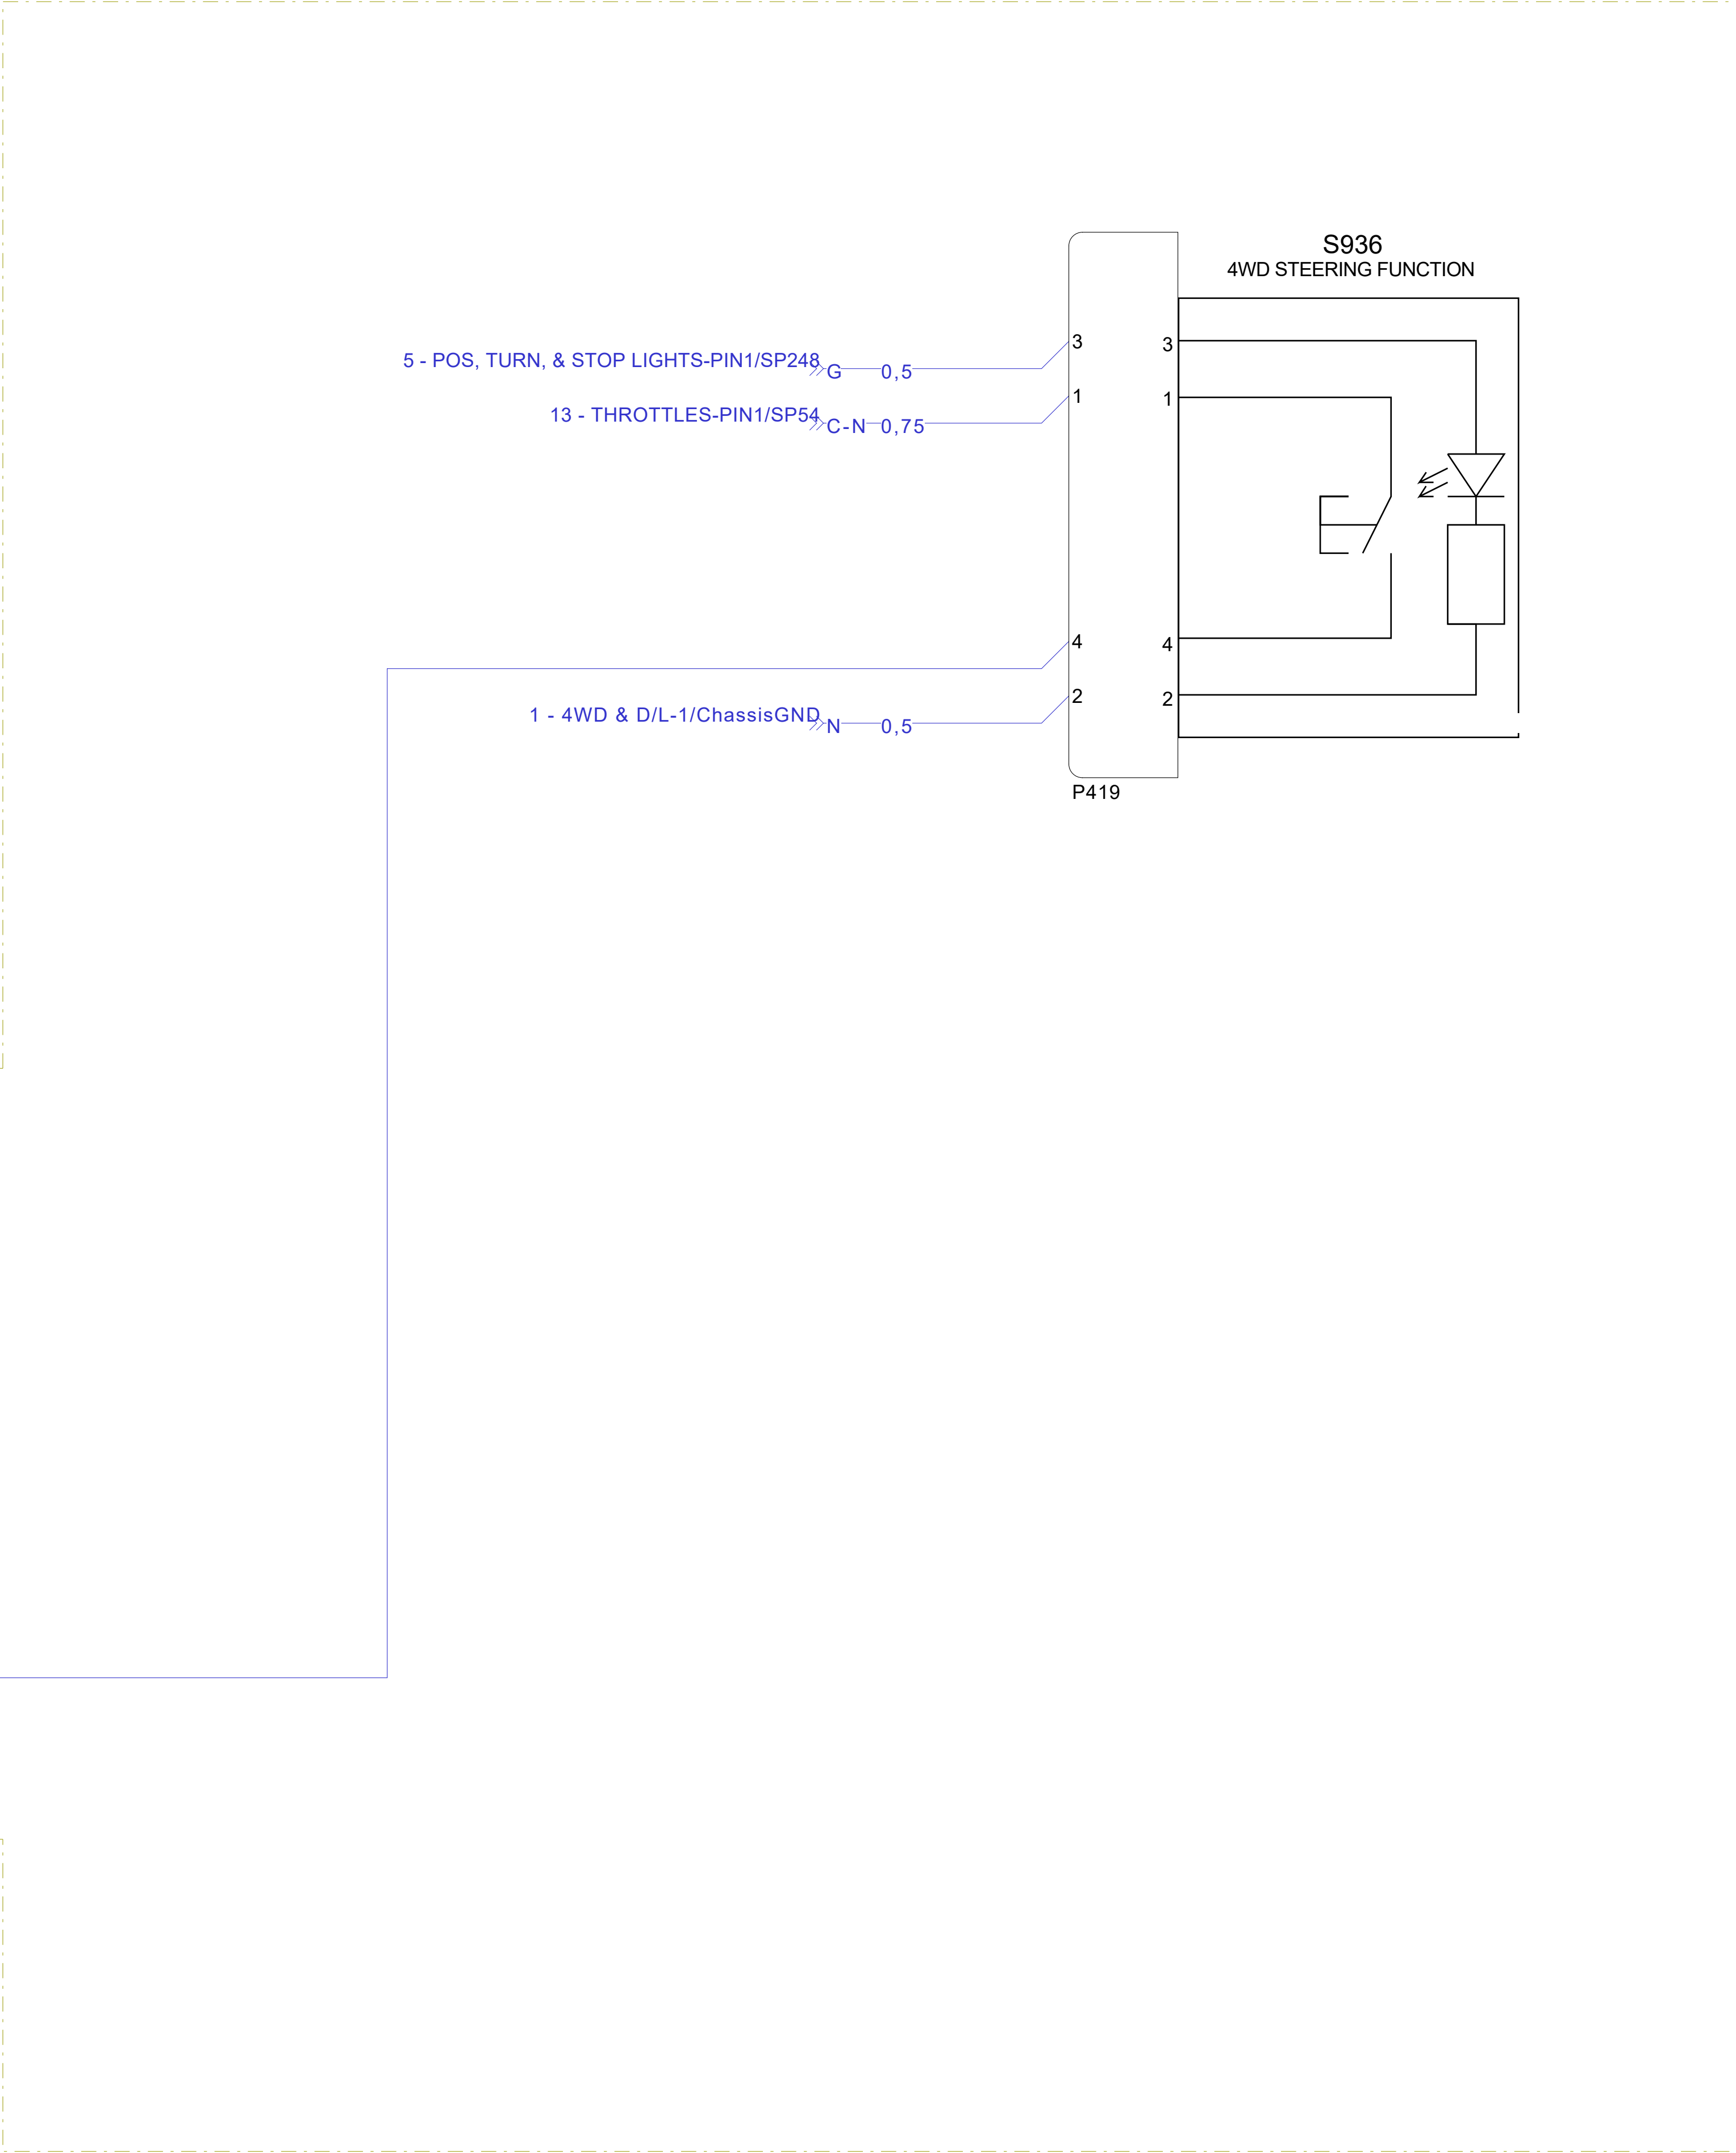


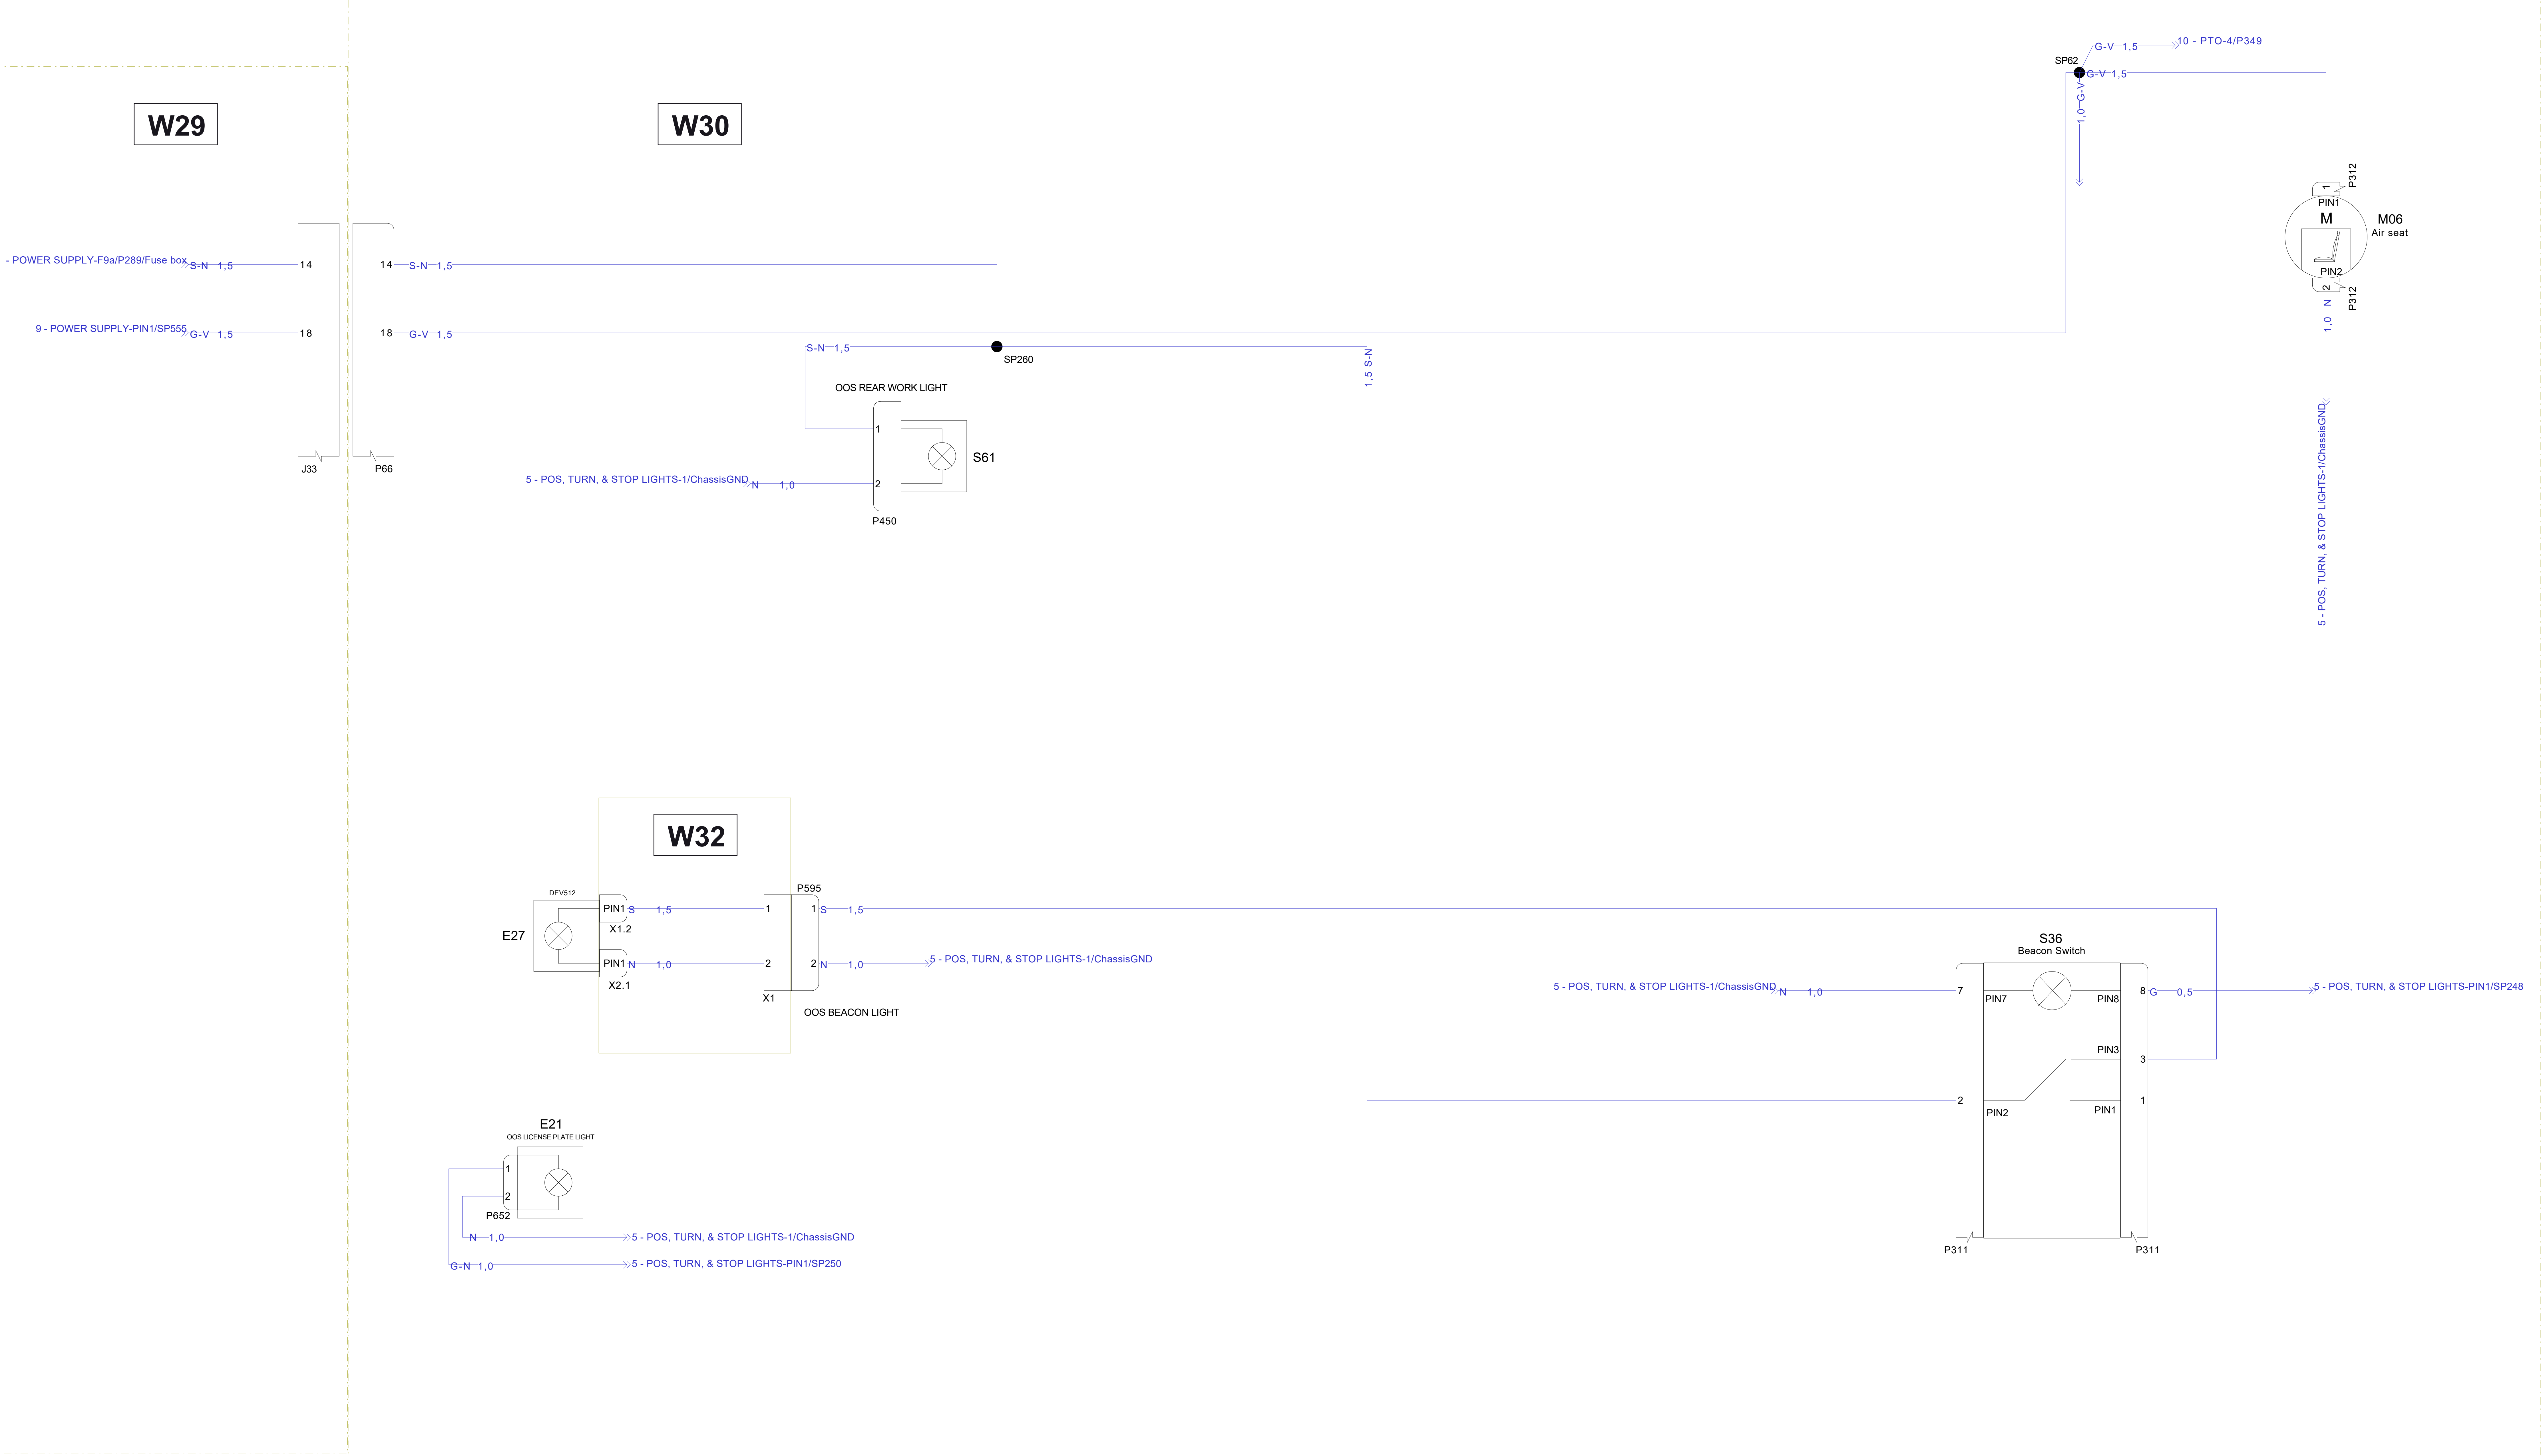

J33 - Connection to P66
P311 - Connection to Beacon switch S36
P312 - Connection to Air seat M06
P450 - Connection to Rear work light S61
P652 - Connection to Licence plate light E21
P66 - Connection to J33
X1 - Connection to P595
X1.2 - Connection to Beacon light E27
X2.1 - Connection to Beacon light E27

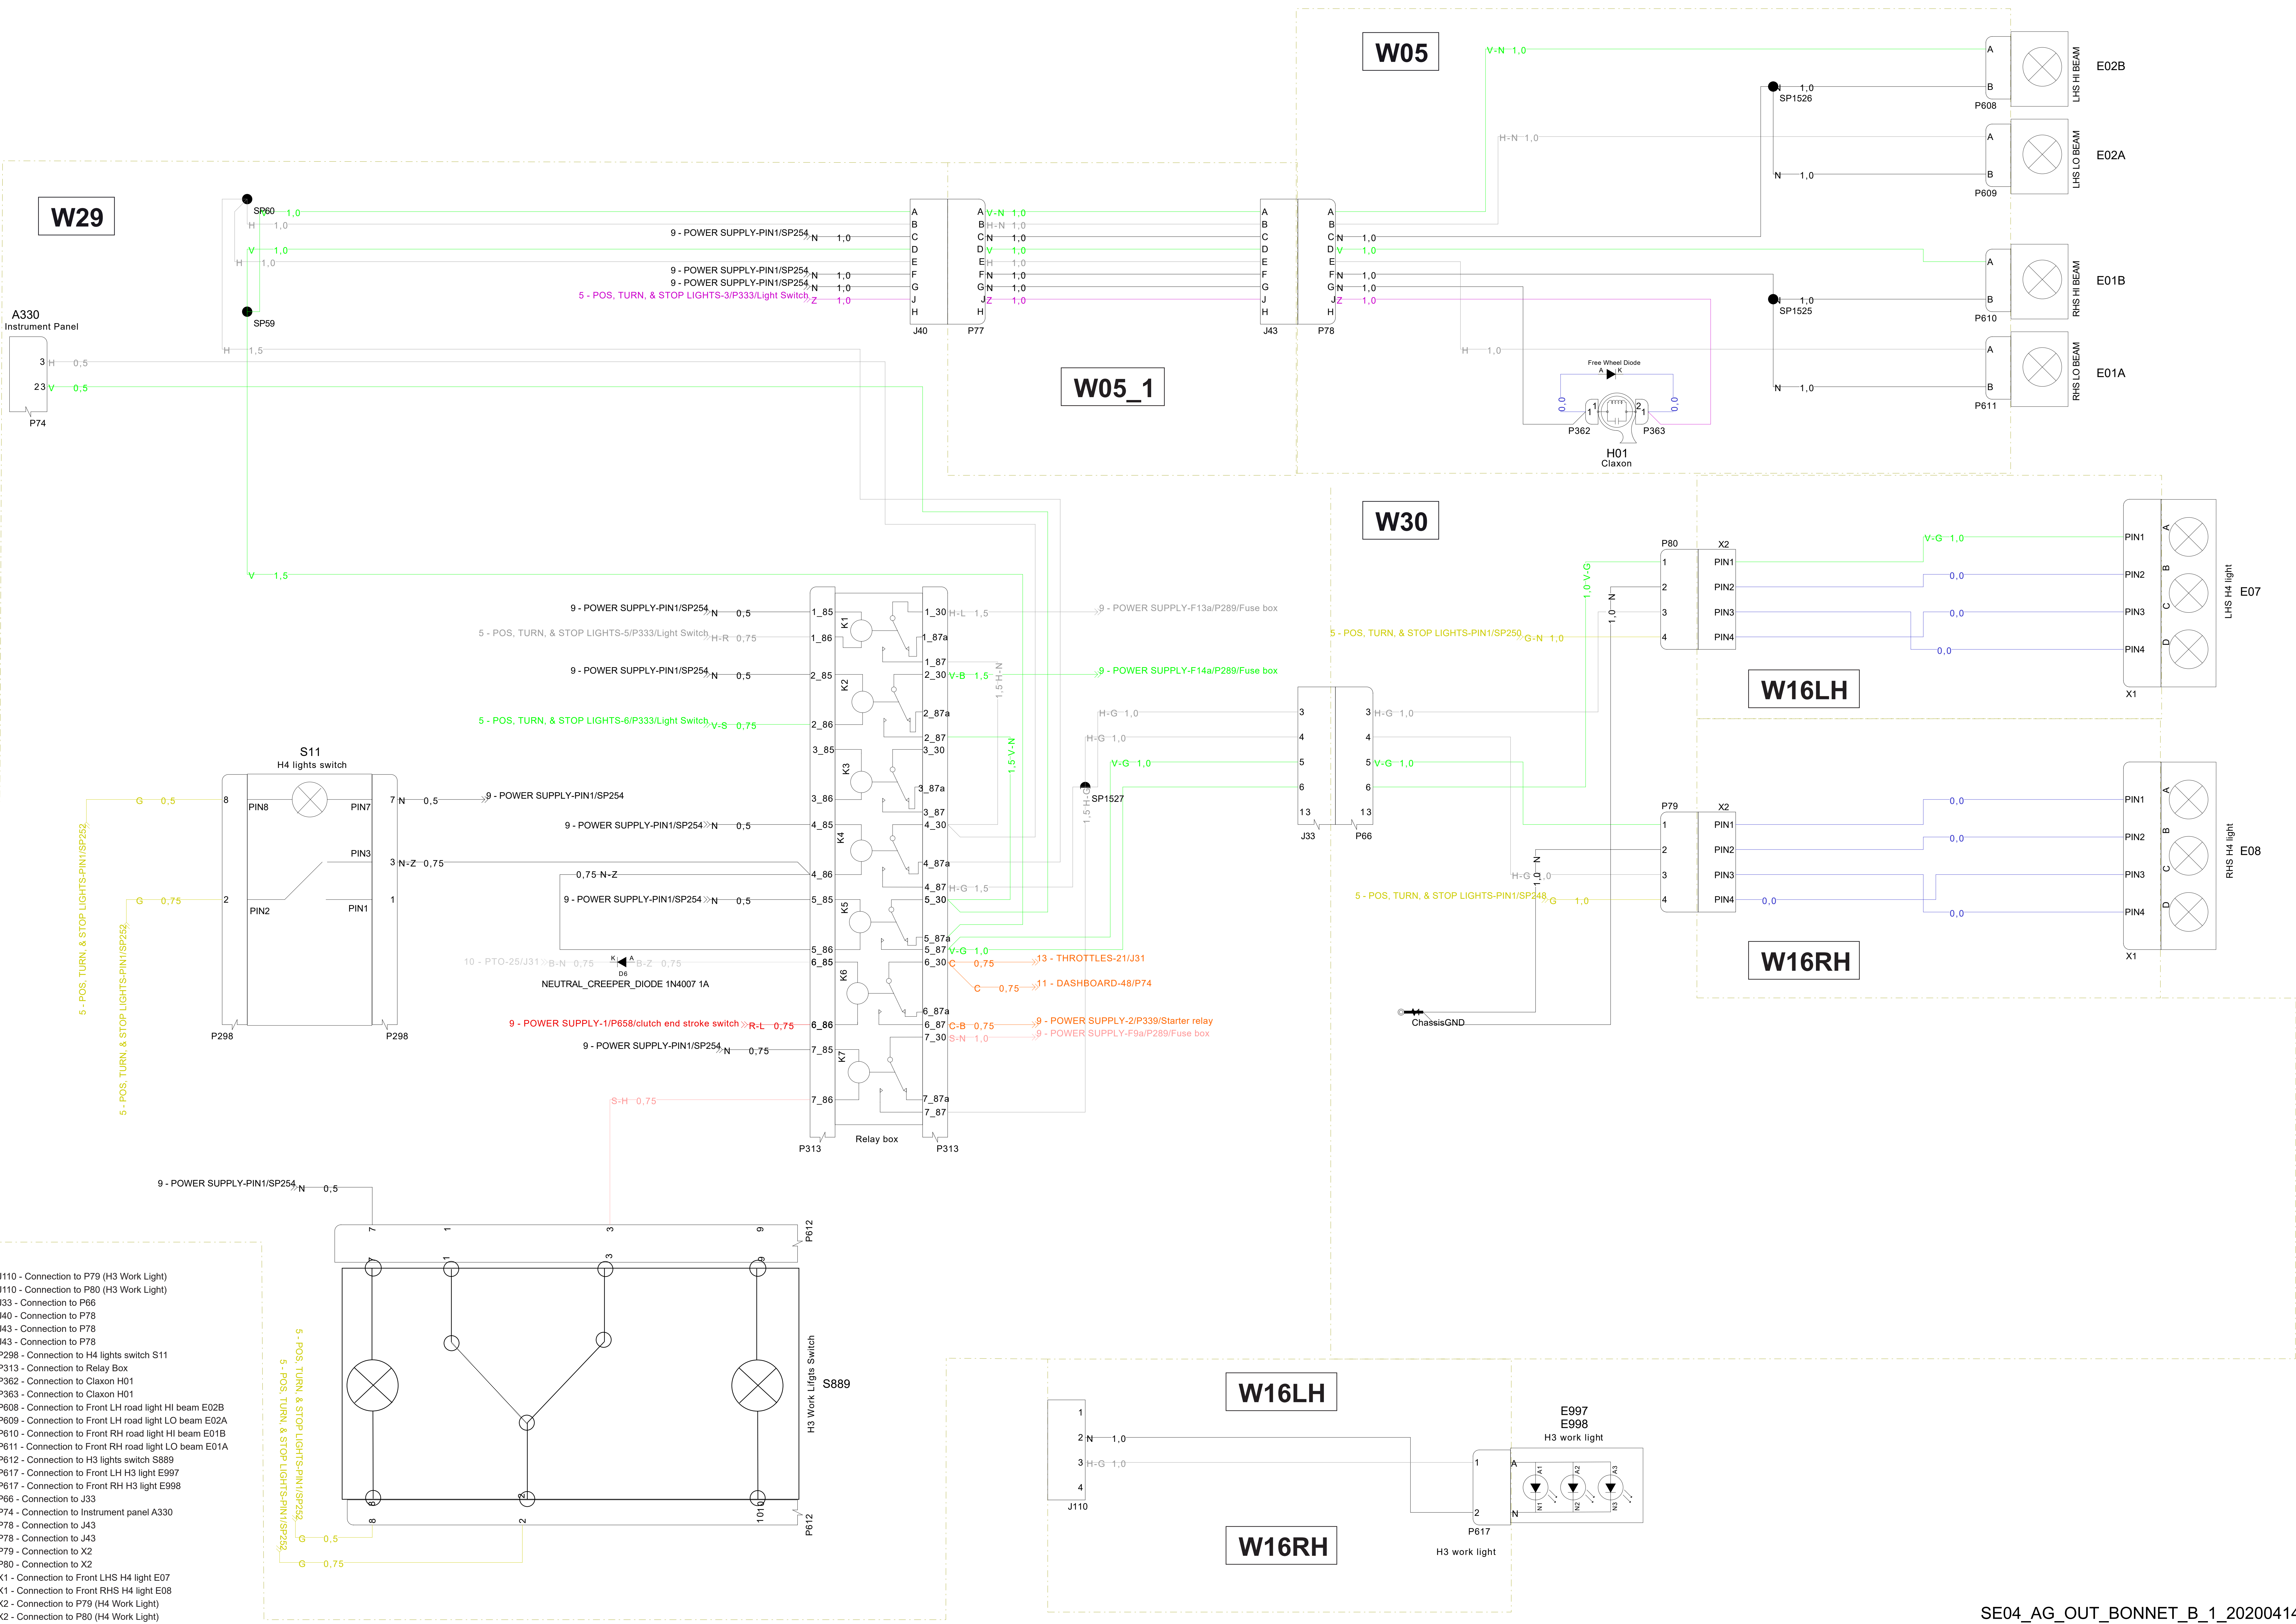


W29

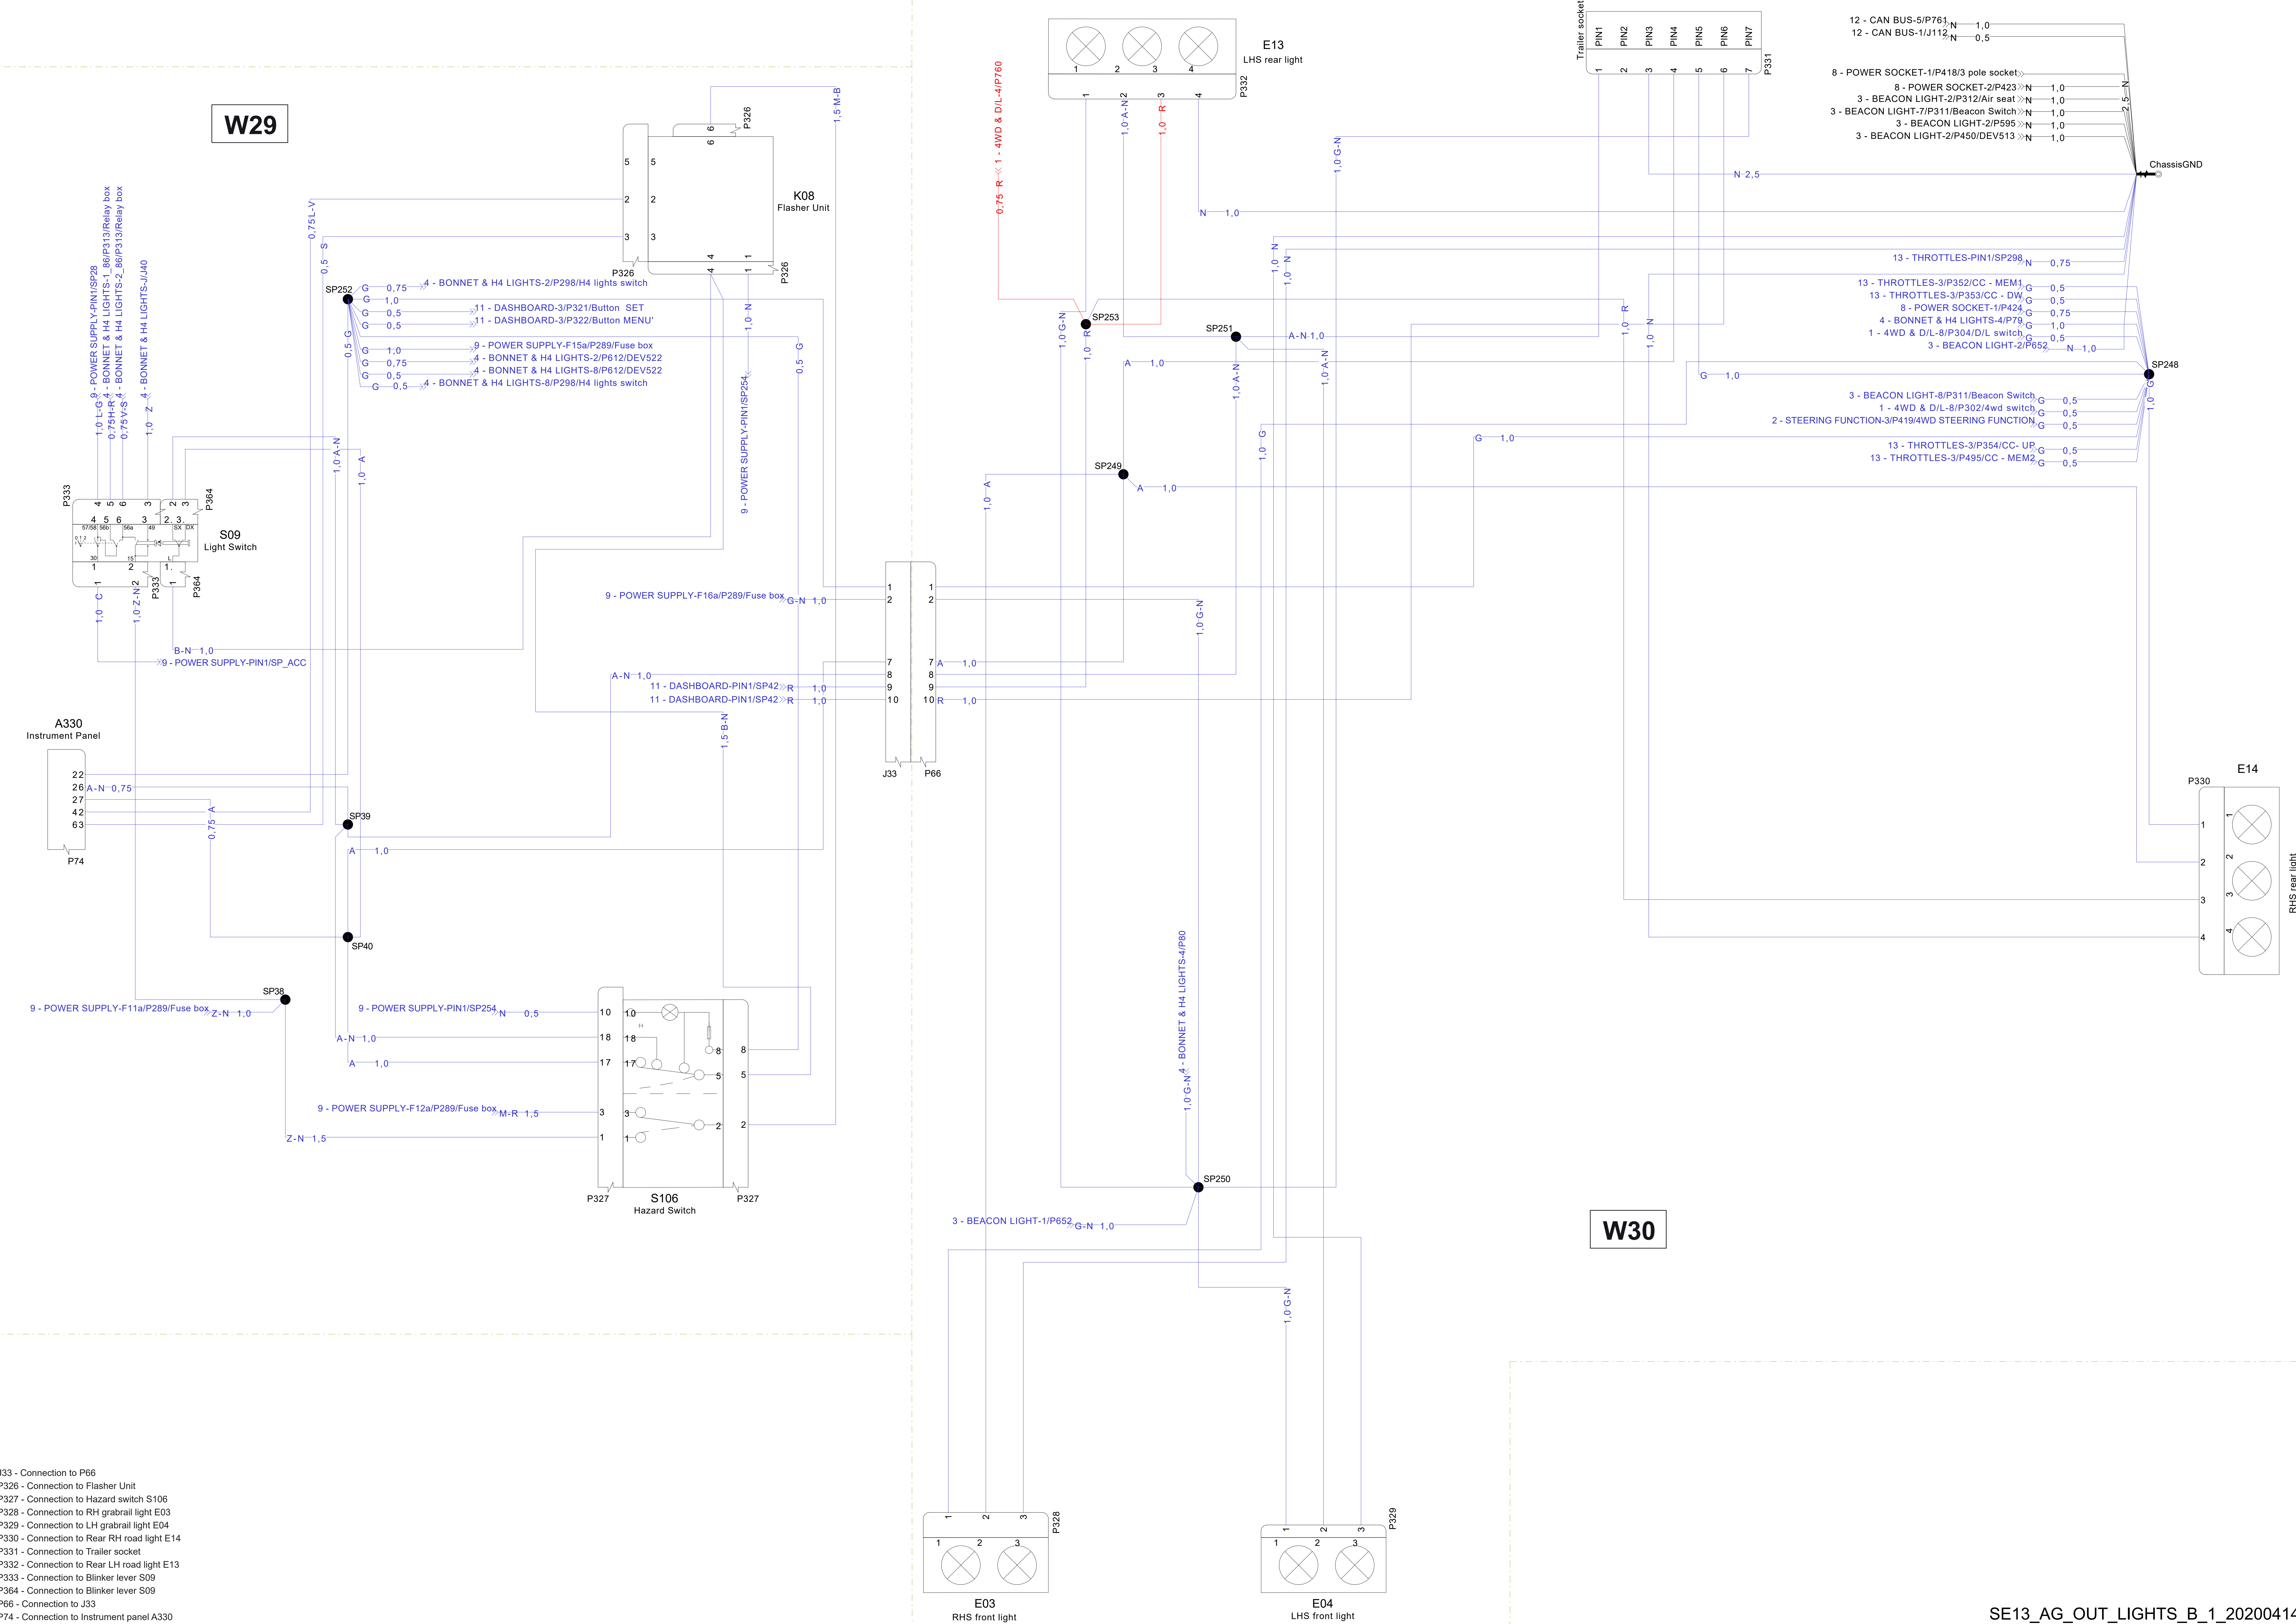


J33 - Connection to P66
P326 - Connection to Flasher Unit
P327 - Connection to Hazard switch S106
P328 - Connection to RH grabrail light E03
P329 - Connection to LH grabrail light E04
P330 - Connection to Rear RH road light E14
P331 - Connection to Trailer socket
P332 - Connection to Rear LH road light E13
P333 - Connection to Blinker lever S09
P364 - Connection to Blinker lever S09
P66 - Connection to J33
P74 - Connection to Instrument panel A330



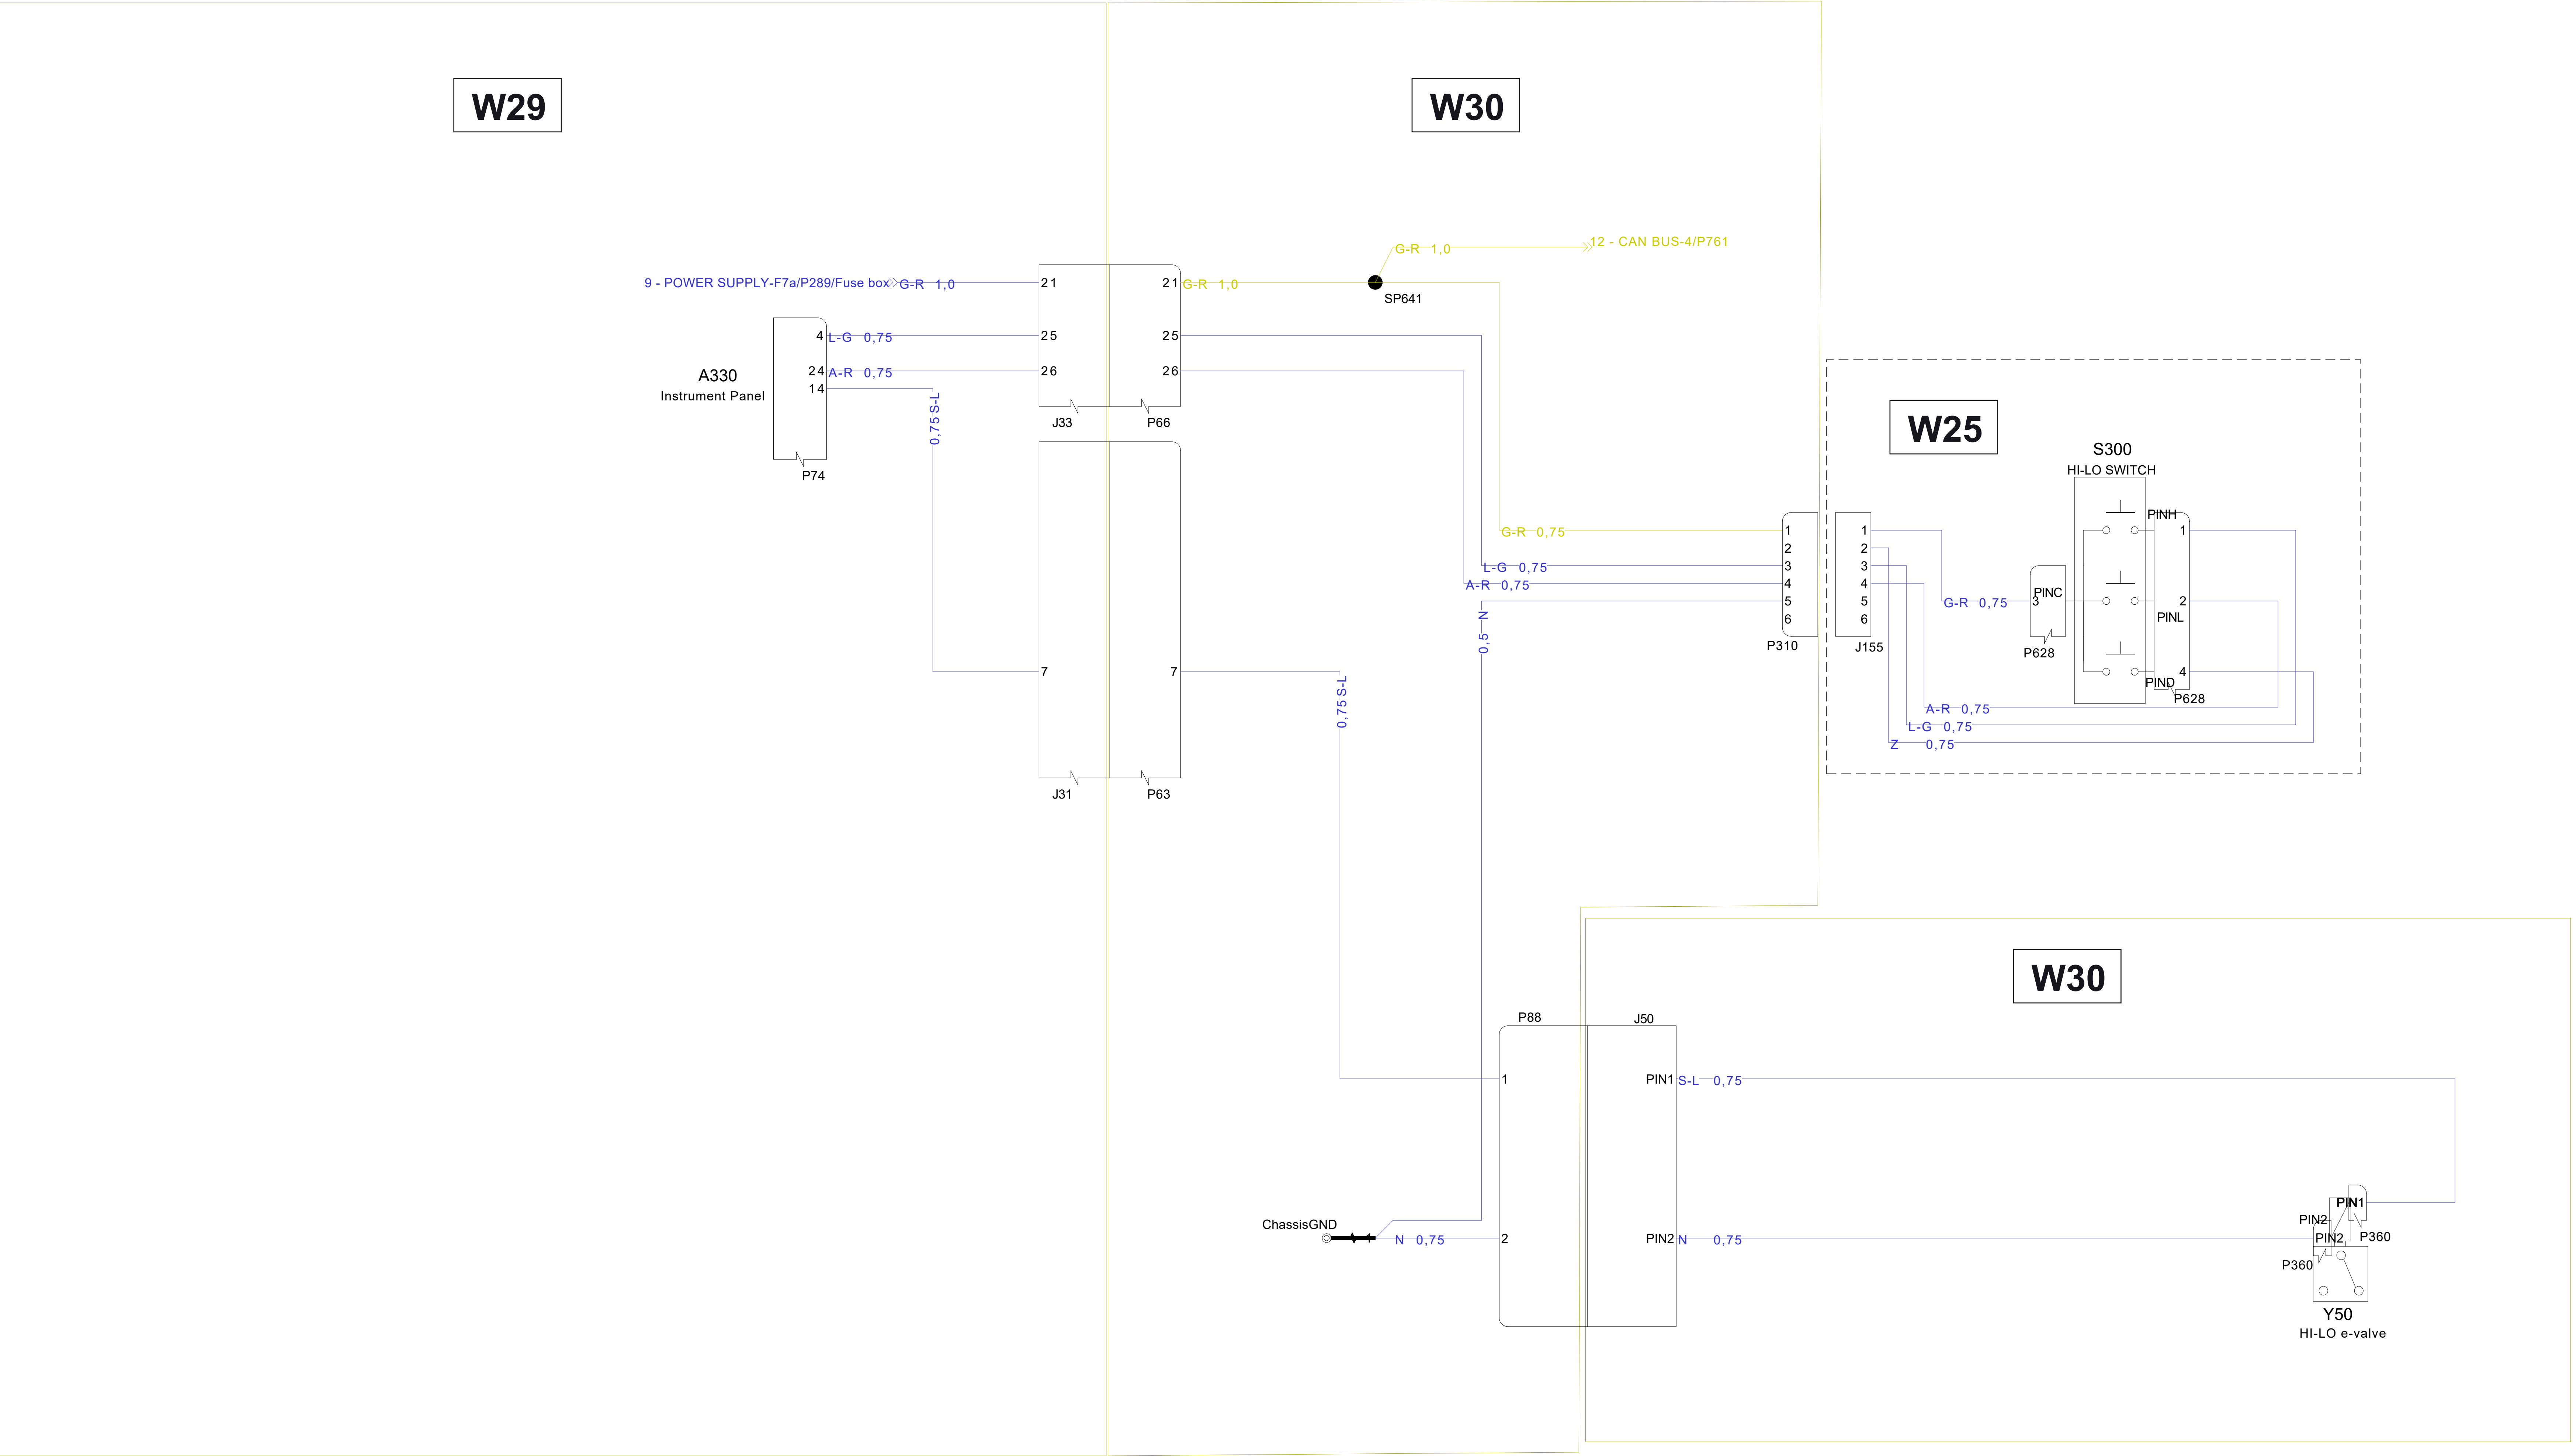

P66 - Connection to J33
J31 - Connection to P63
J33 - Connection to P66
P360 - Connection to HI-Lo solenoid valve Y50
P63 - Connection to J31
P628 - Connection to HI-Lo switch S300
P74 - Connection to Instrument panel A330
J50 - Connection to P88
P310 - Connection to J155
J155 - Connection to P310
P88 - Connection to J50

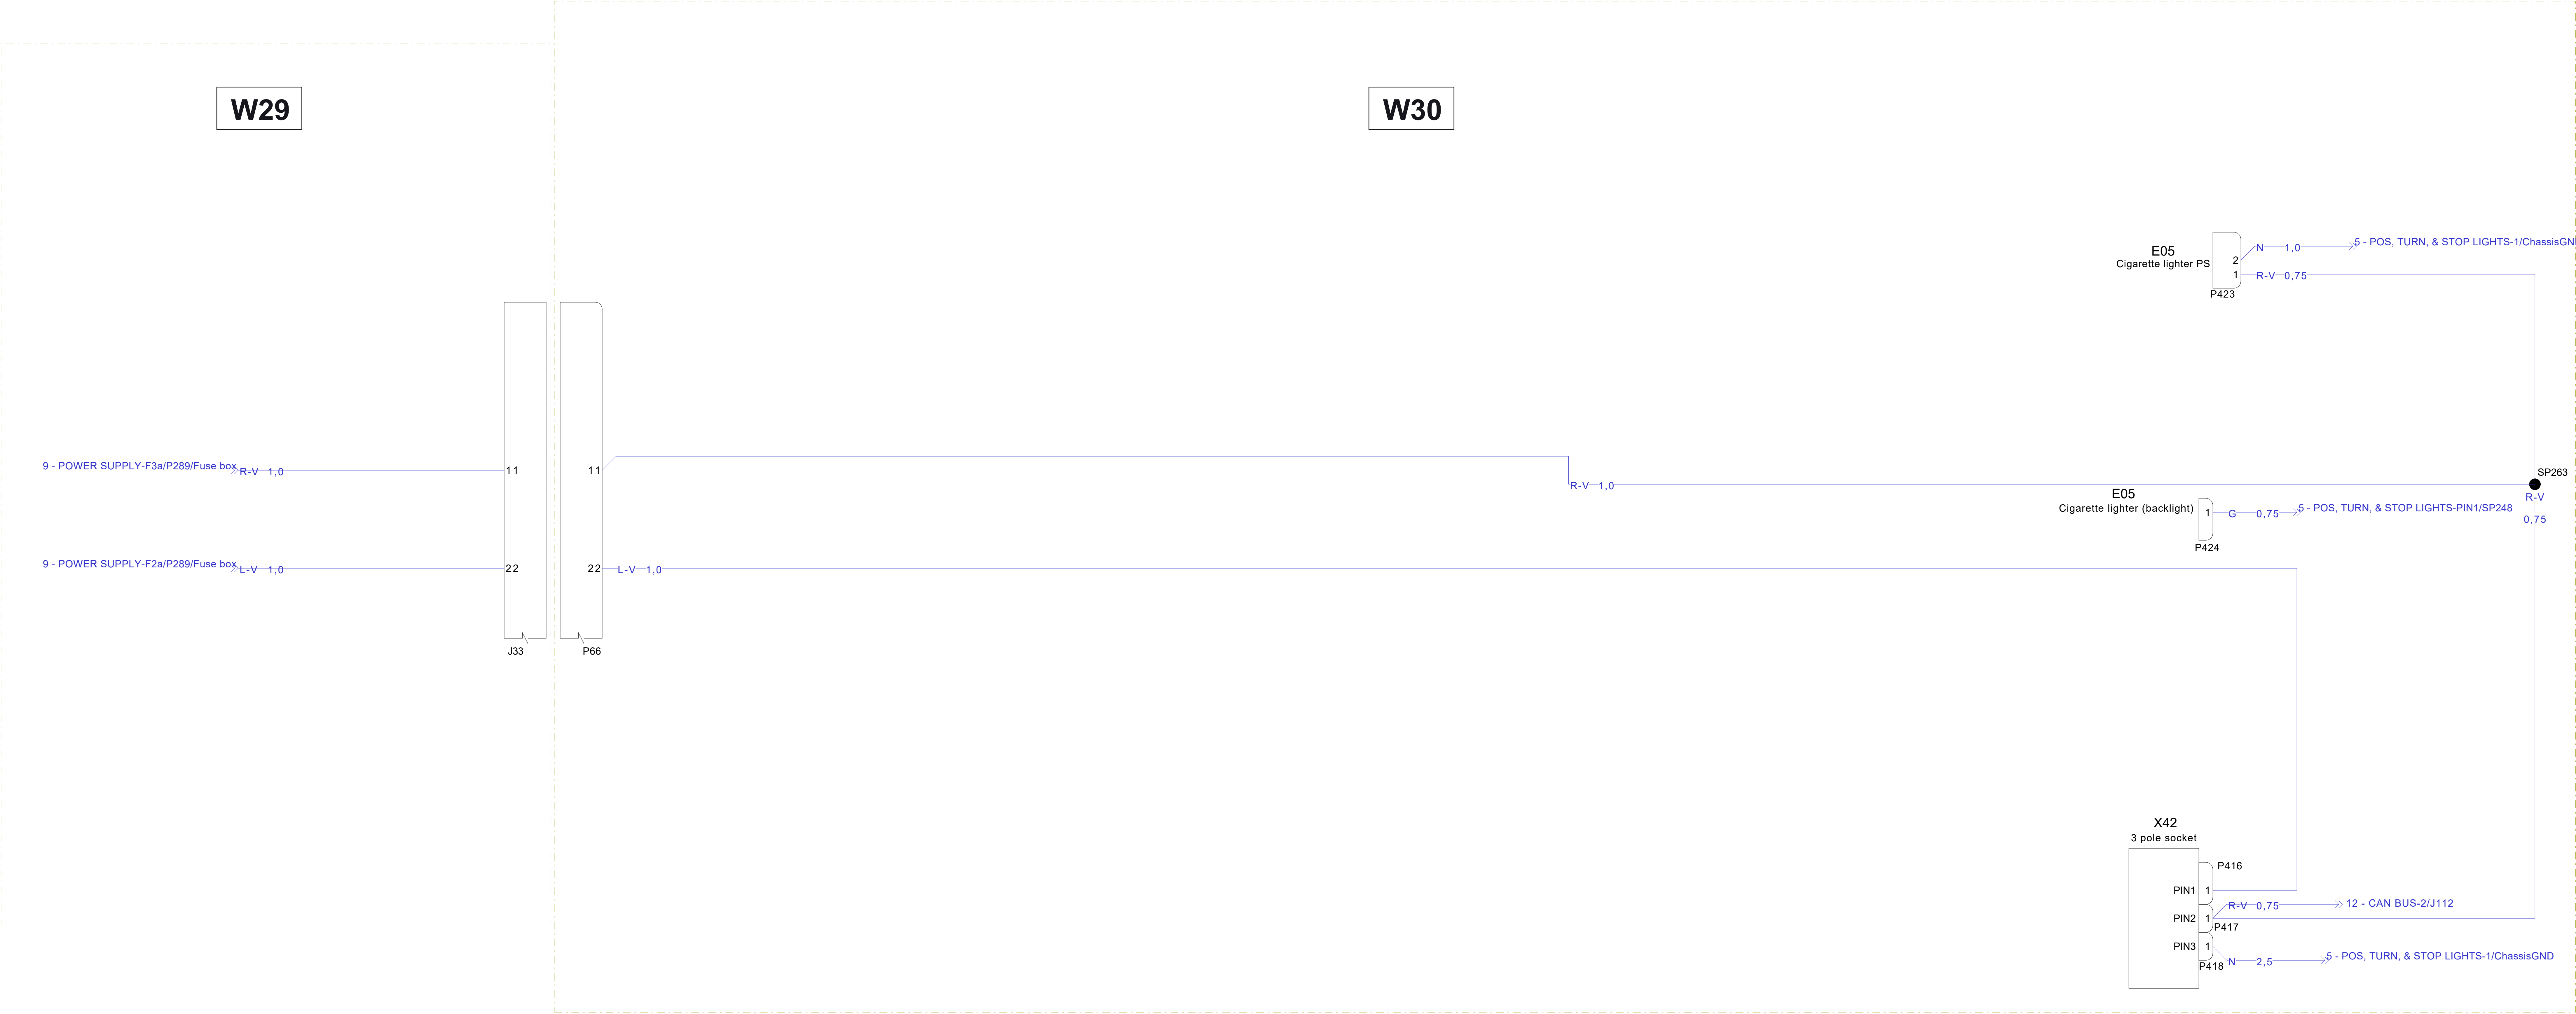

J33 - Connection to P66
P416 - Connection to 3 pole socket X42
P417 - Connection to 3 pole socket X42
P418 - Connection to 3 pole socket X42
P423 - Connection to Cigarette lighter PS E05
P424 - Connection to Cigarette lighter (Backlight) E05
P66 - Connection to J33


W45



W29

W02


W22

W45_1

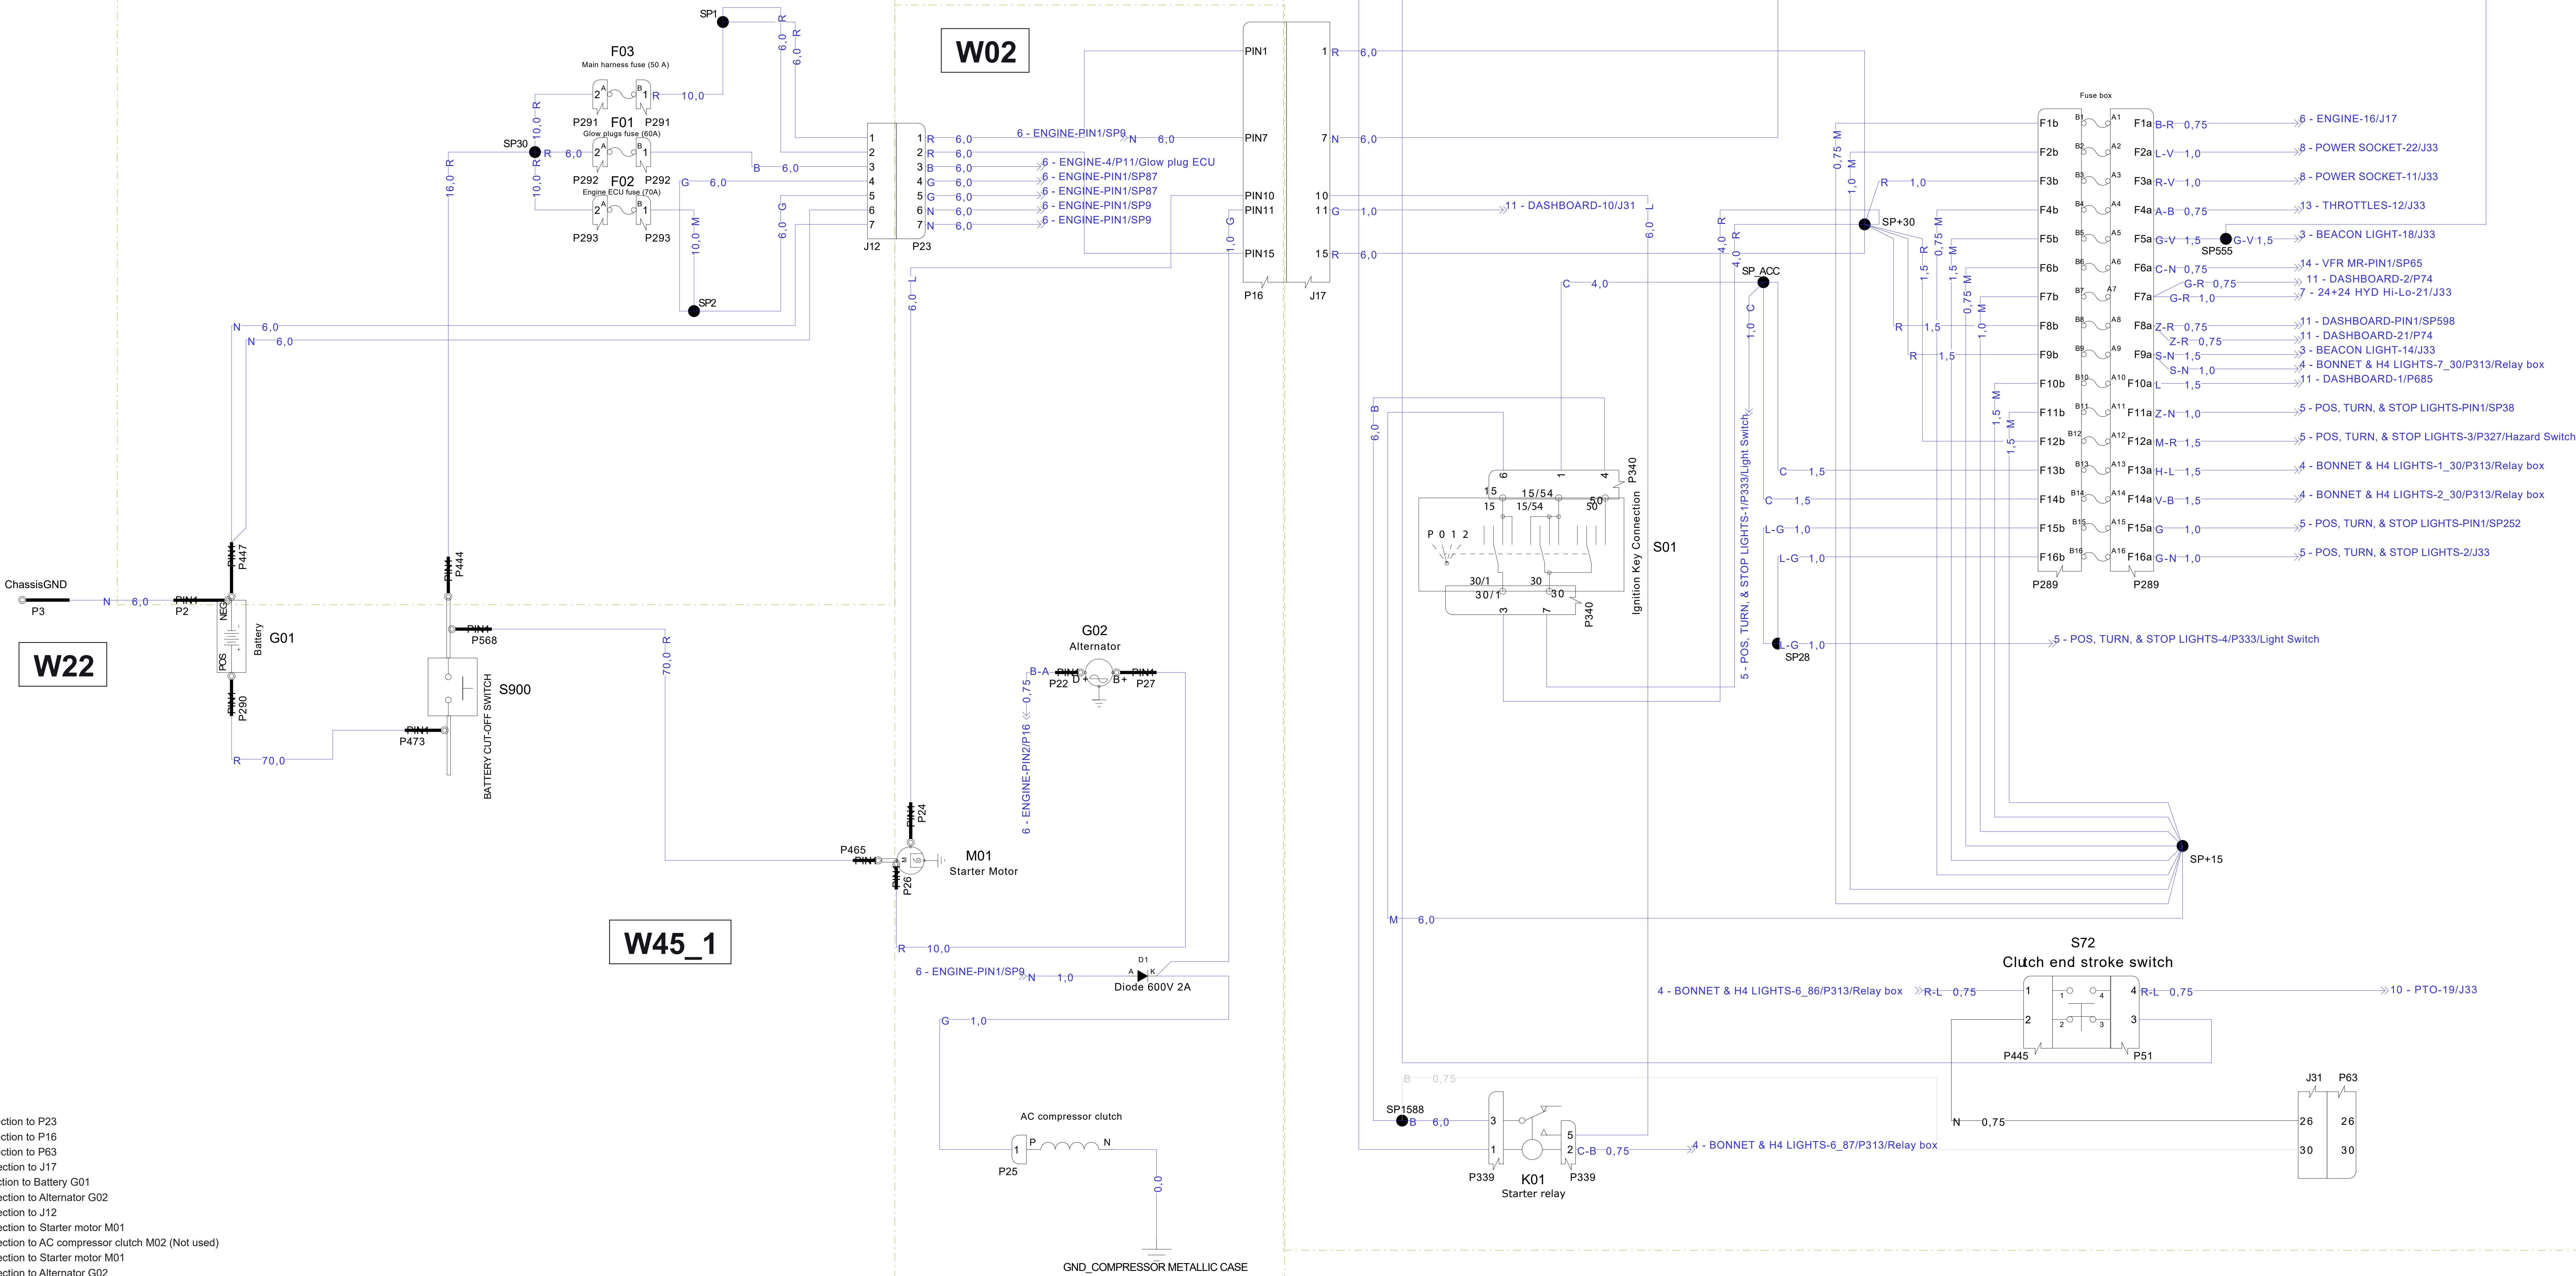


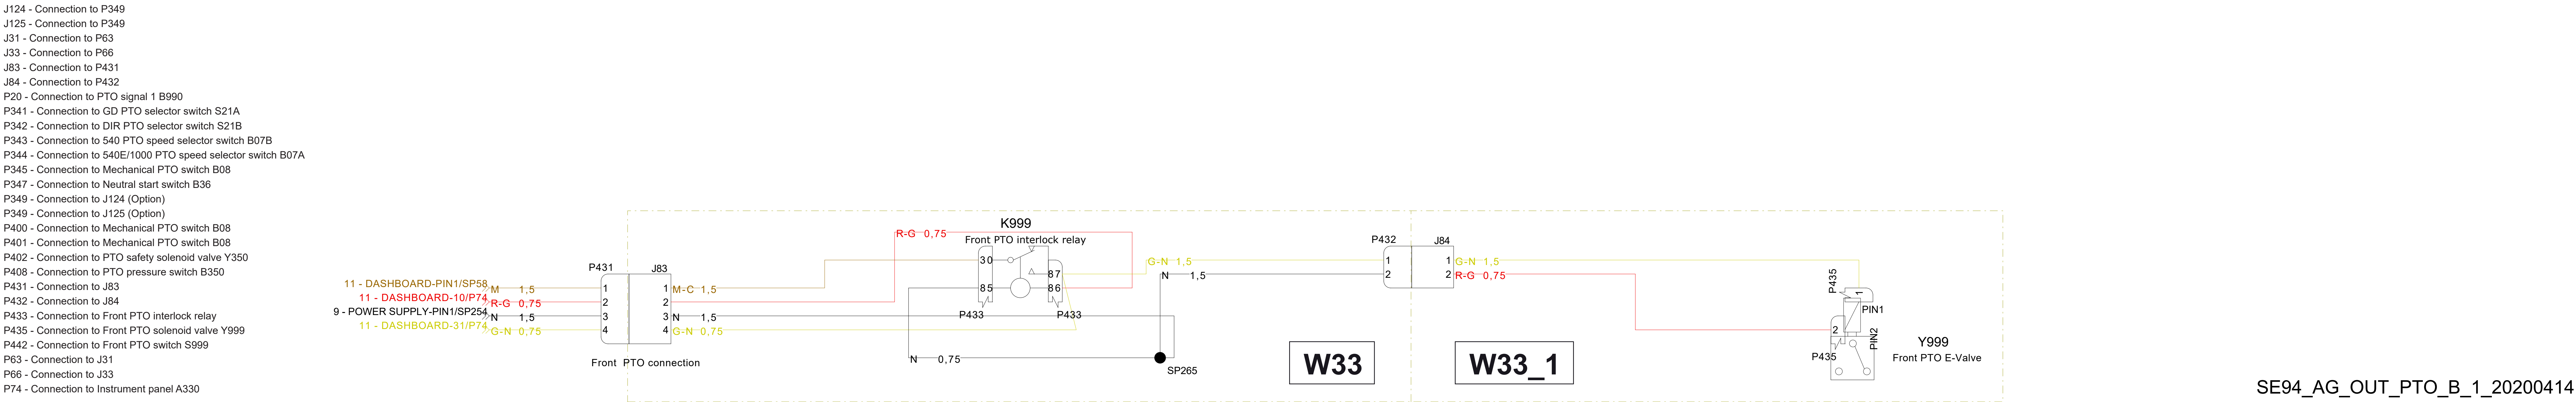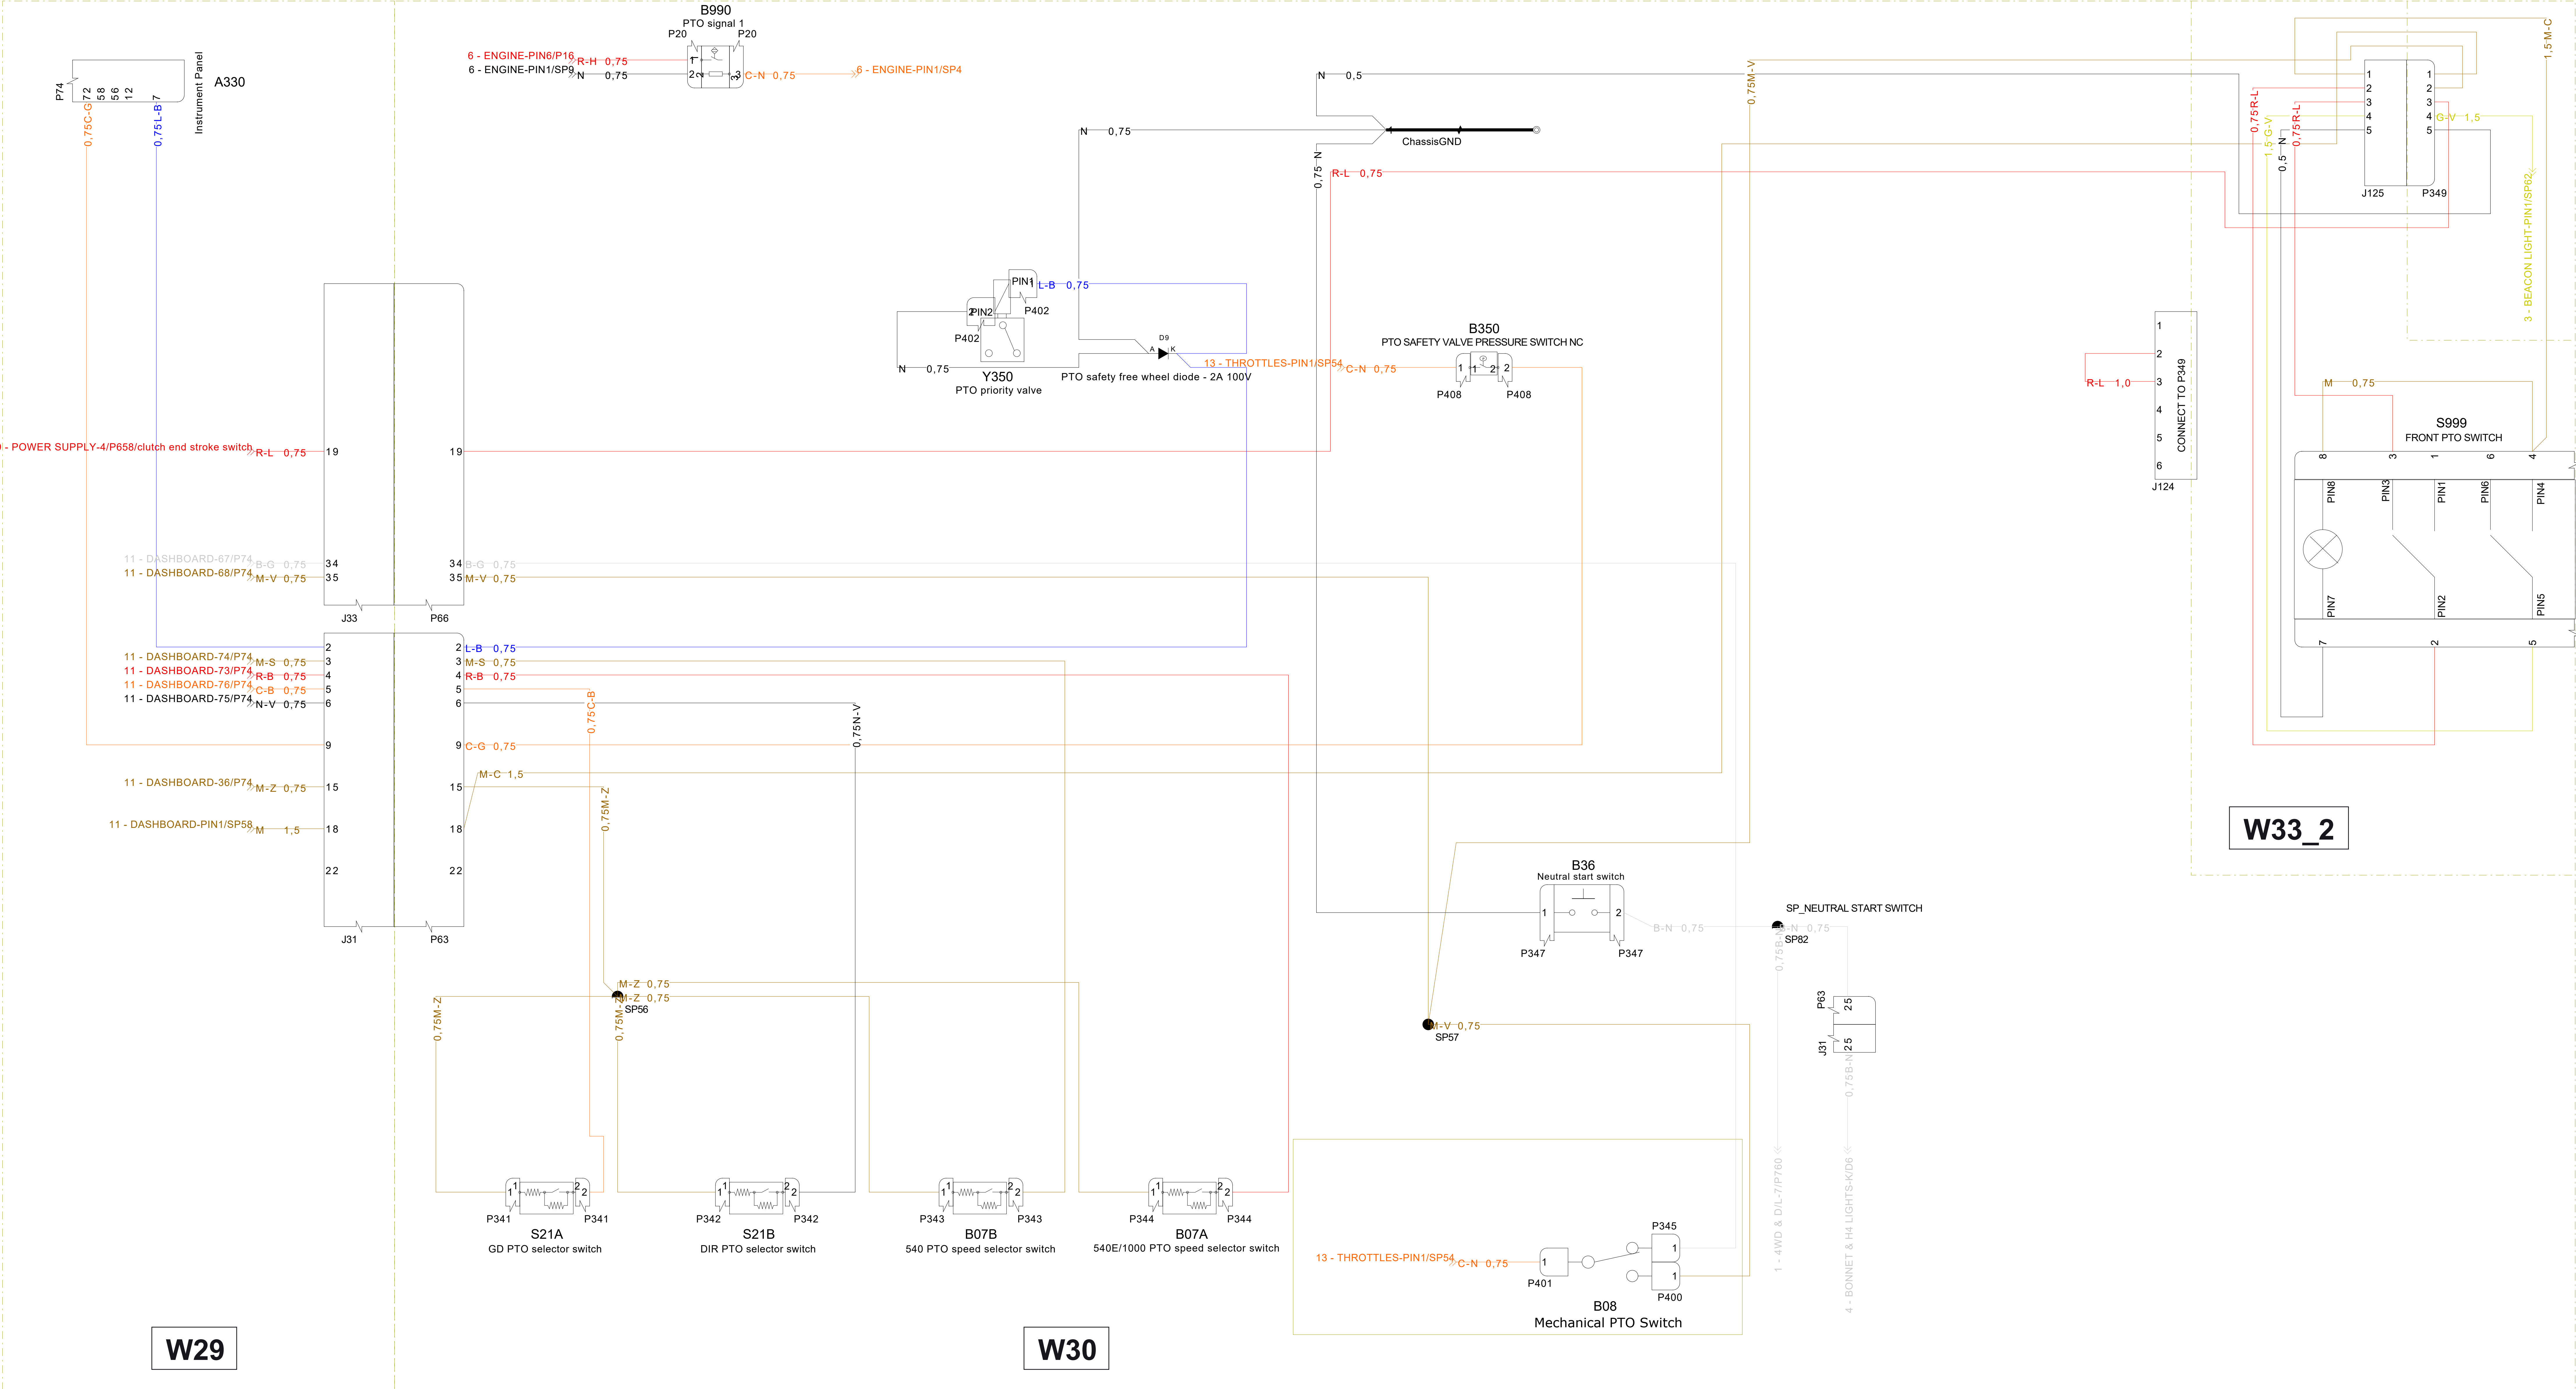


J124 - Connection to P349
J125 - Connection to P349
J31 - Connection to P63
J33 - Connection to P66
J83 - Connection to P431
J84 - Connection to P432
P20 - Connection to PTO signal 1 B990
P341 - Connection to GD PTO selector switch S21A
P342 - Connection to DIR PTO selector switch S21B
P343 - Connection to 540 PTO speed selector switch B07B
P344 - Connection to 540E/1000 PTO speed selector switch B07A
P345 - Connection to Mechanical PTO switch B08
P347 - Connection to Neutral start switch B36
P349 - Connection to J124 (Option)
P349 - Connection to J125 (Option)
P400 - Connection to Mechanical PTO switch B08
P401 - Connection to Mechanical PTO switch B08
P402 - Connection to PTO safety solenoid valve Y350
P408 - Connection to PTO pressure switch B350
P431 - Connection to J83
P432 - Connection to J84
P433 - Connection to Front PTO interlock relay
P435 - Connection to Front PTO solenoid valve Y999
P442 - Connection to Front PTO switch S999
P63 - Connection to J31
P66 - Connection to J33
P74 - Connection to Instrument panel A330

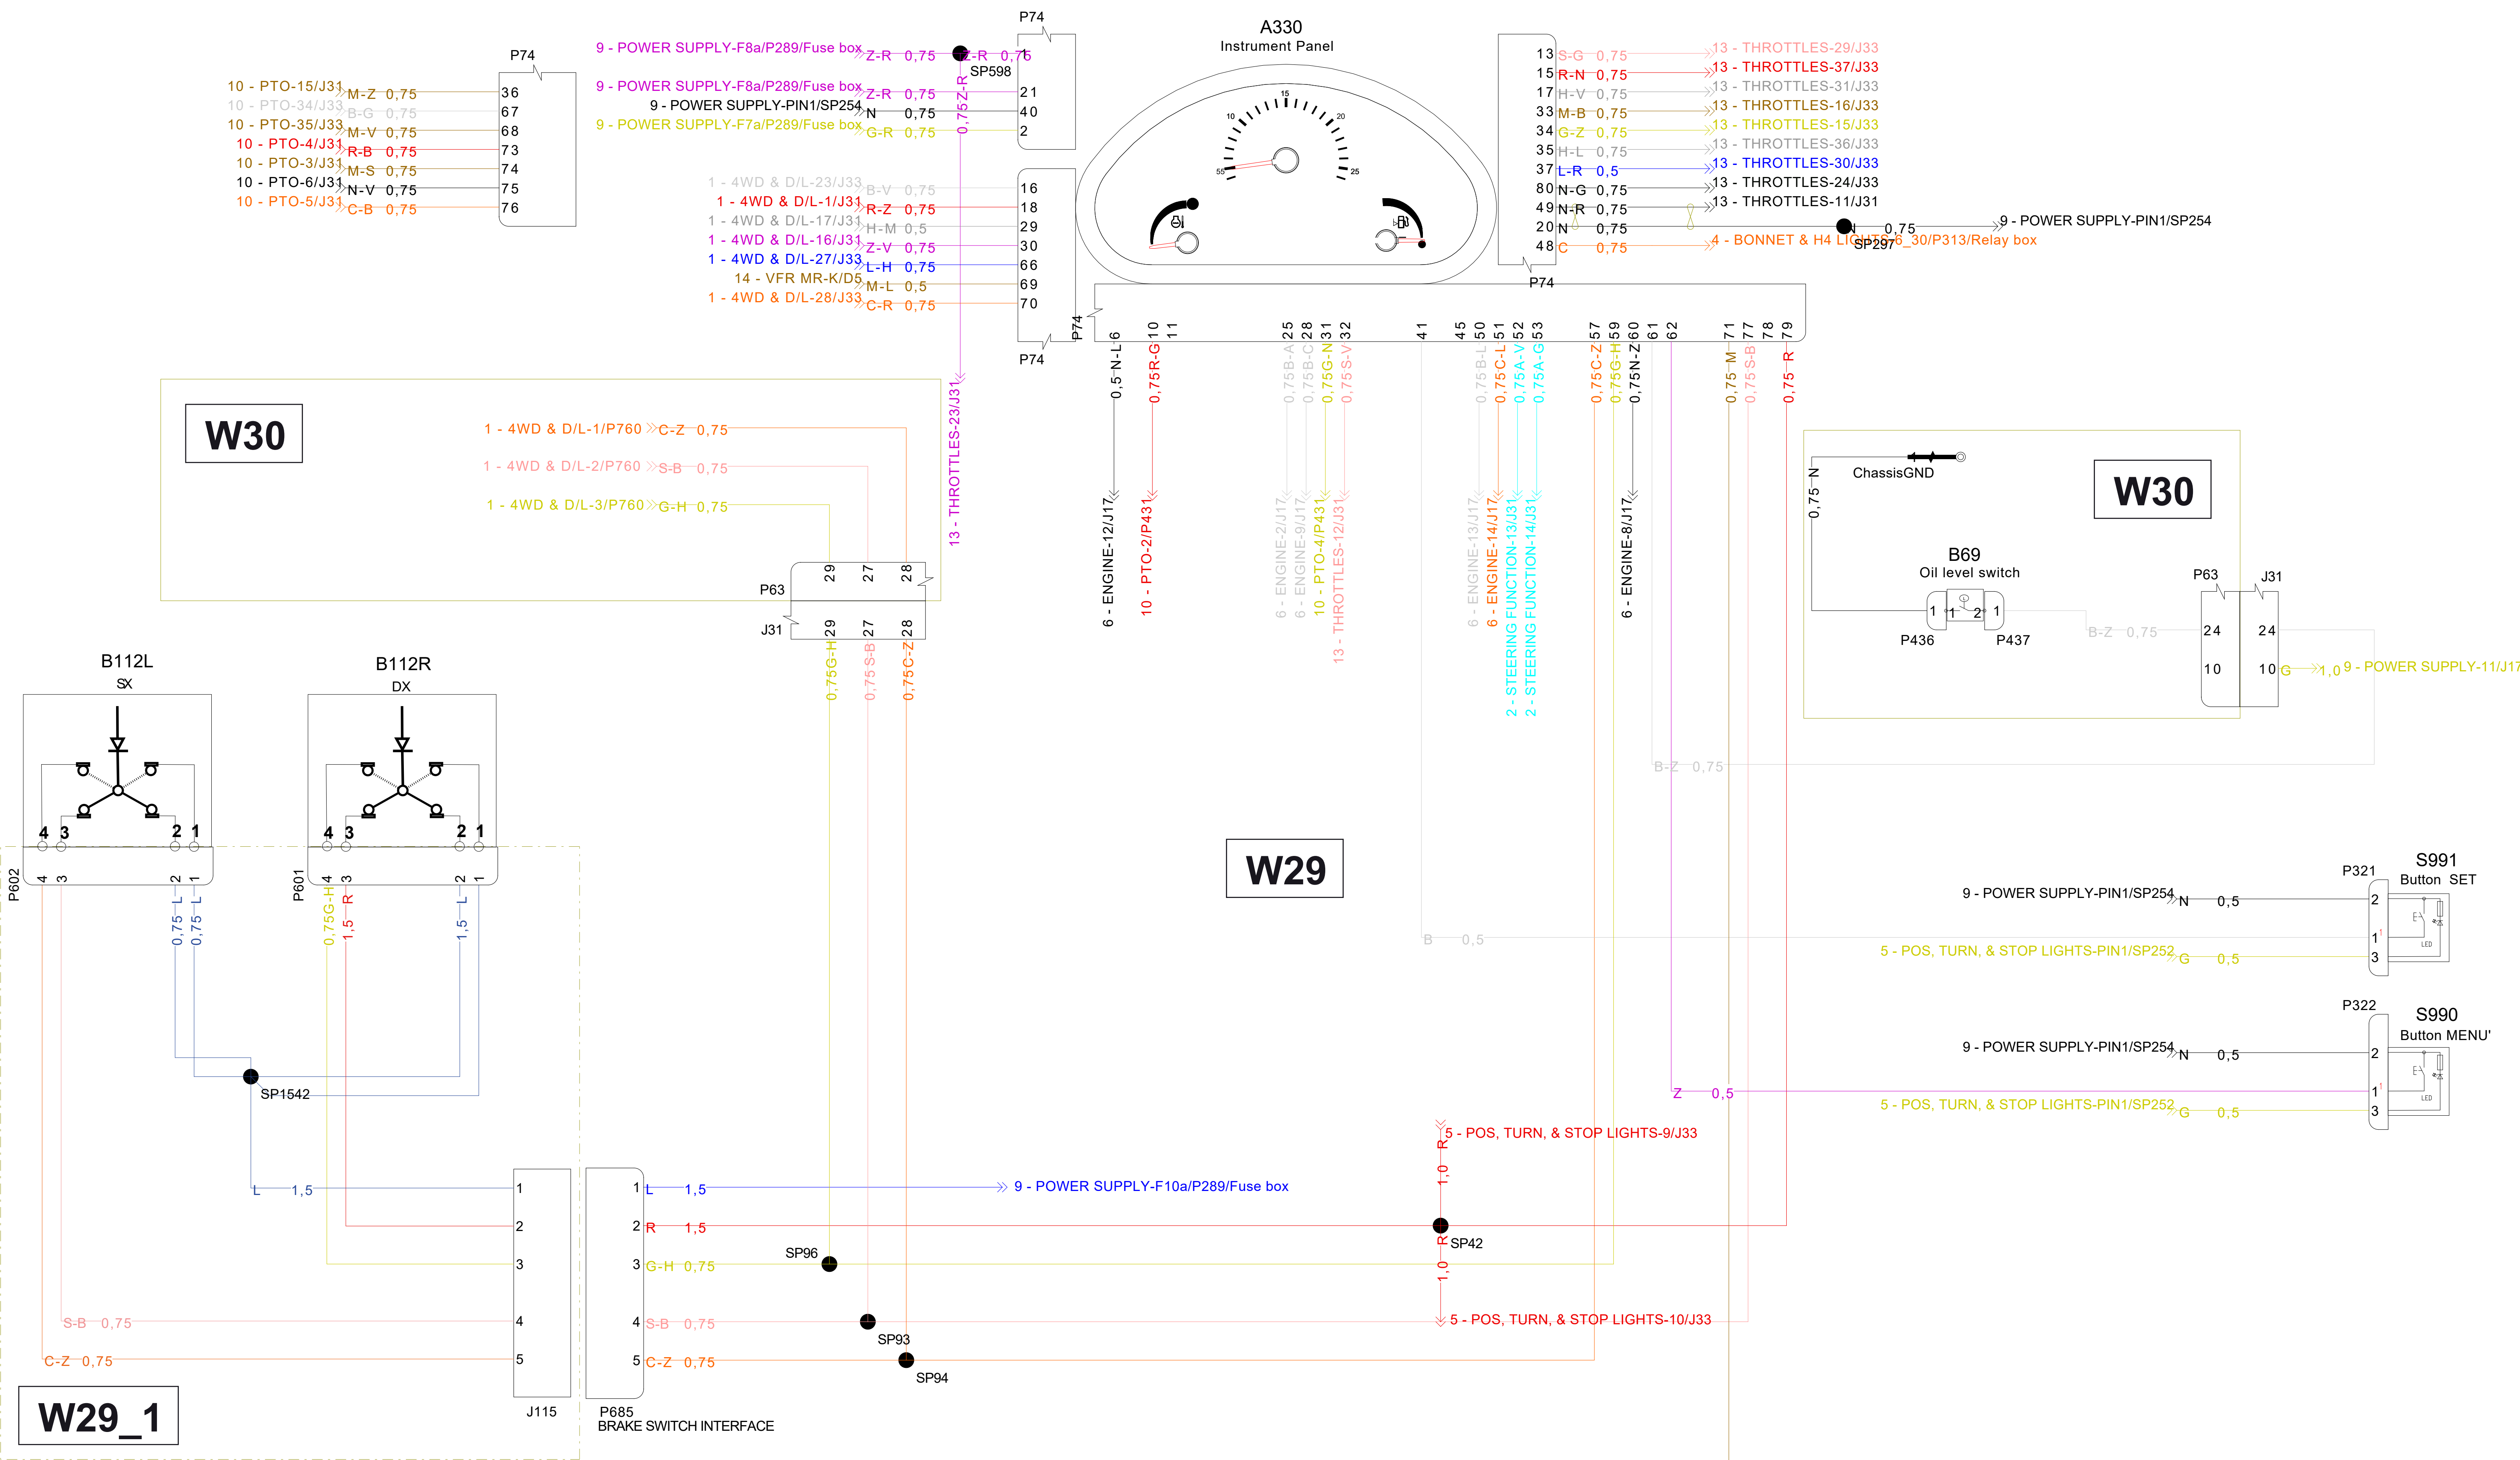


J115 - Connection to P685
J31 - Connection to P63
P321 - Connection to Button set S991
P322 - Connection to Button menu S990
P436 - Connection to Brakes oil level switch B69
P437 - Connection to Brakes oil level switch B69
P63 - Connection to J31
P661 - Connection to RHS brake pedal switch B112R
P662 - Connection to LHS brake pedal switch B112L
P685 - Connection to J115
P74 - Connection to Instrument panel A330

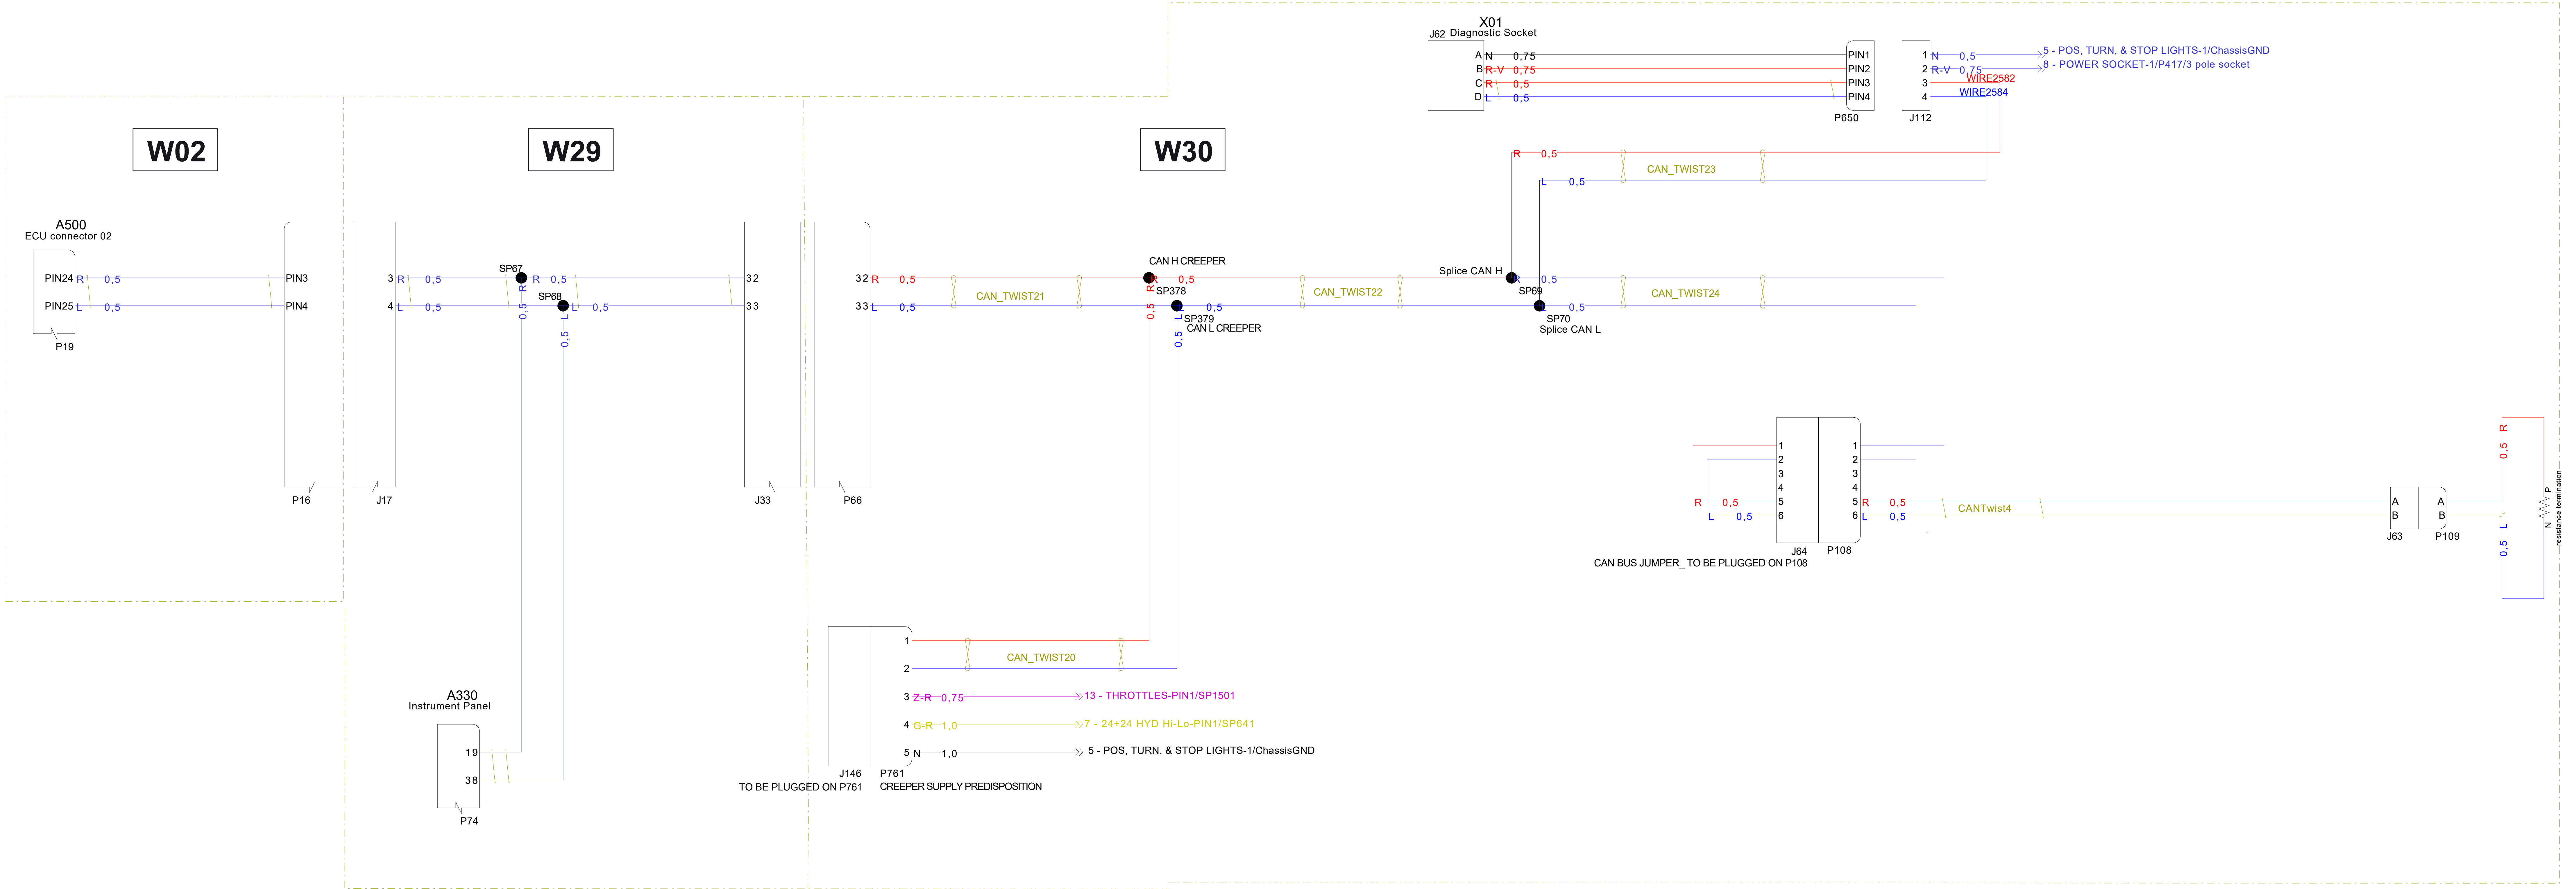


P19 - Connection to Engine control unit A500
P74 - Connection to Instrument panel A330
J112 - Connection to P650
J146 - Connection to P761
J17 - Connection to P16
J33 - Connection to P66
J62 - Connection to Diagnostic Socket
J63 - Connection to P109
P109 - Connection to J63
P16 - Connection to J17
P66 - Connection to J33
P761 - Connection to J146 (CREEPER SUPPLY predisposition)
J64 - Connection to P108
P108 - Connection to Plug J64
P650 - Connection to J112

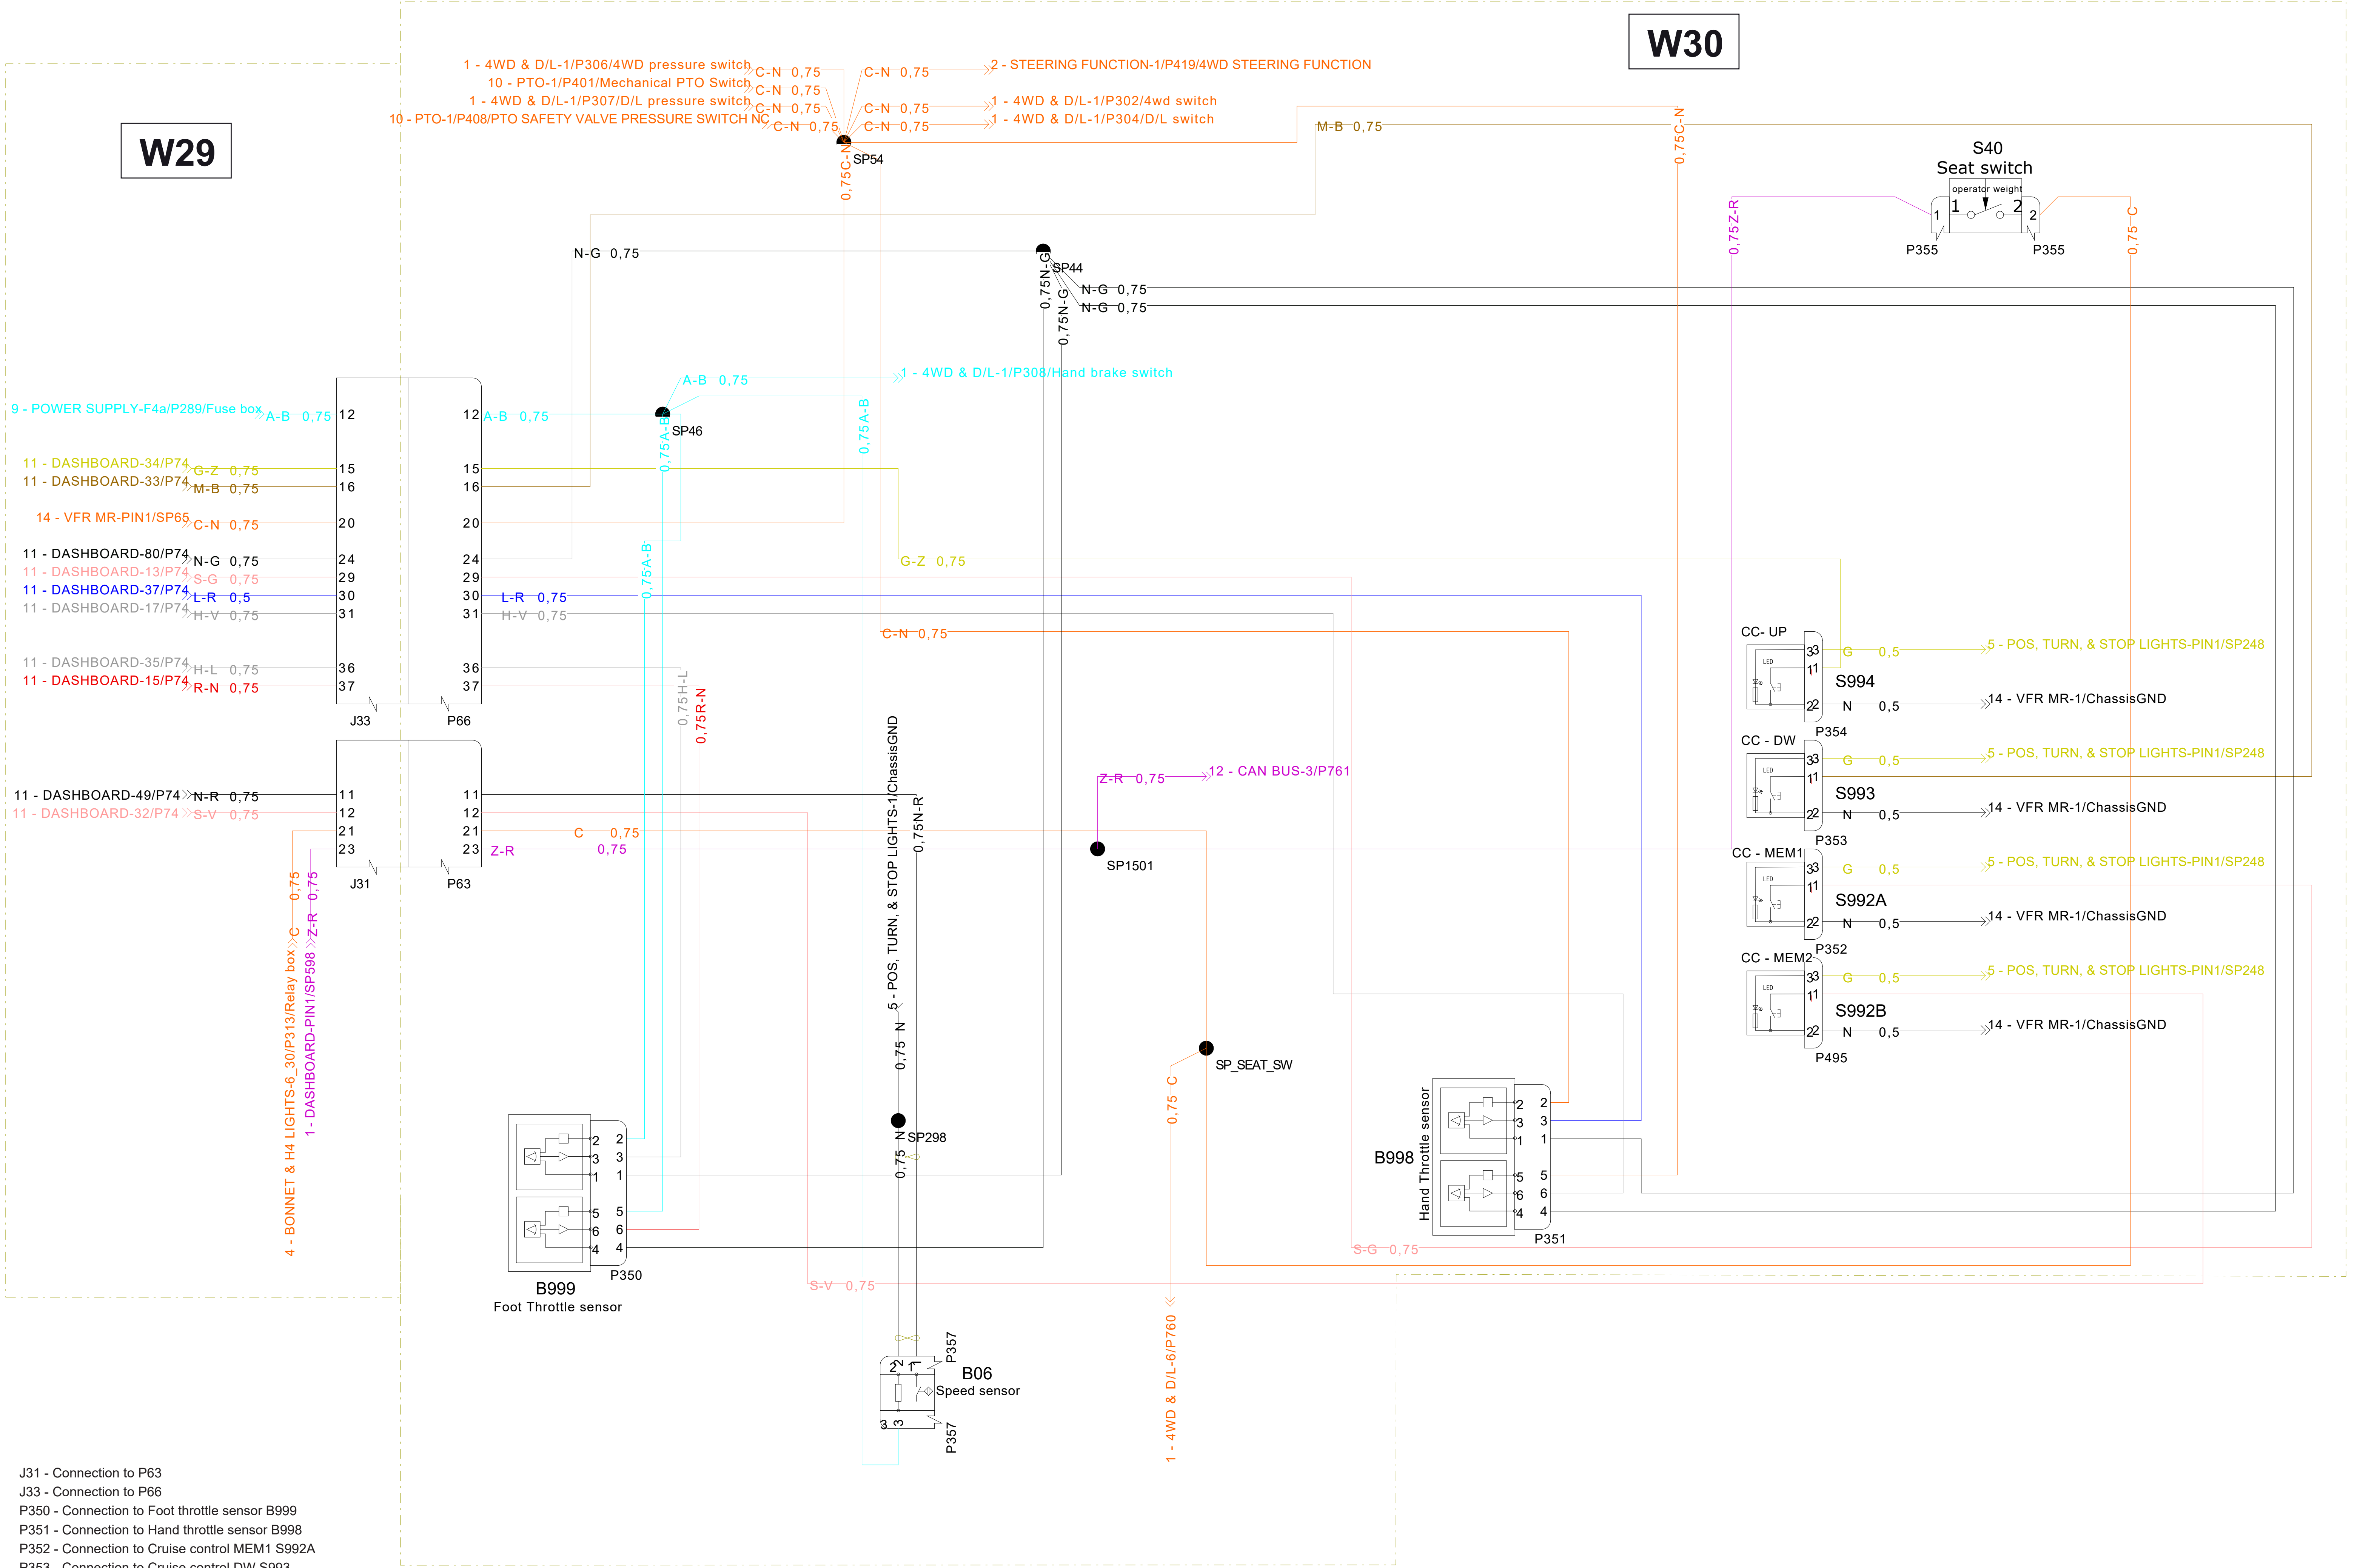


W29

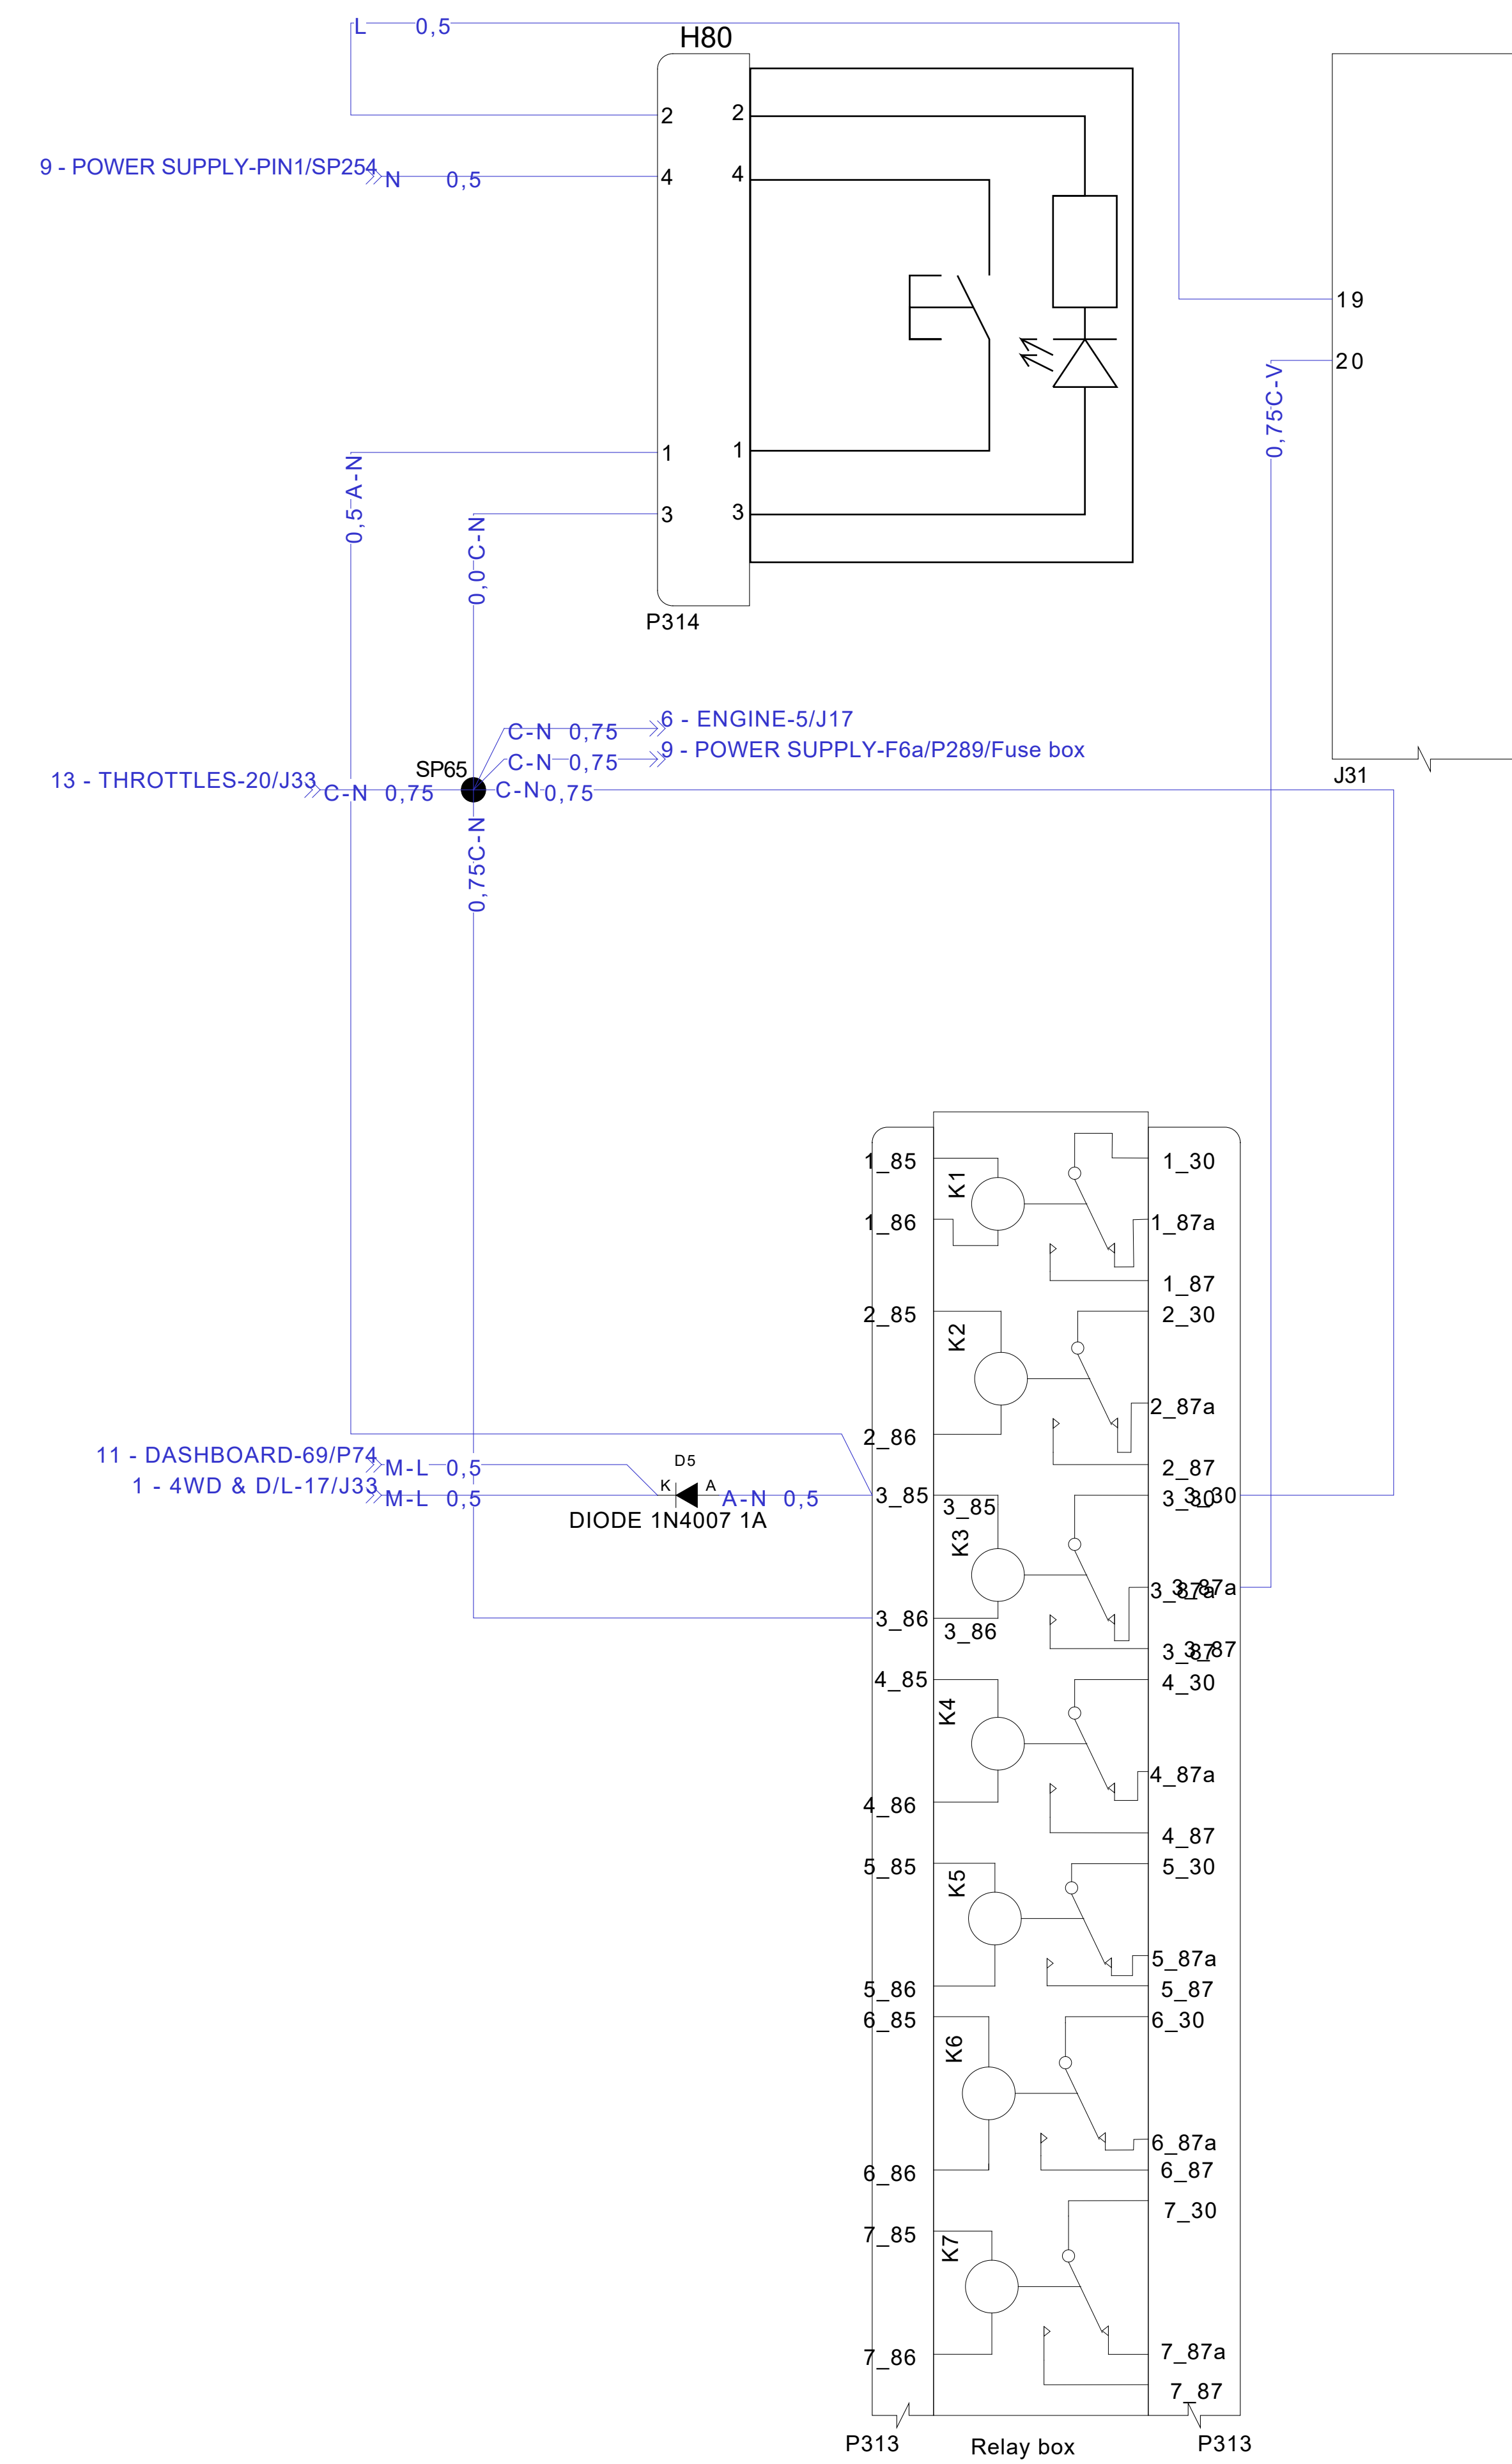


W30

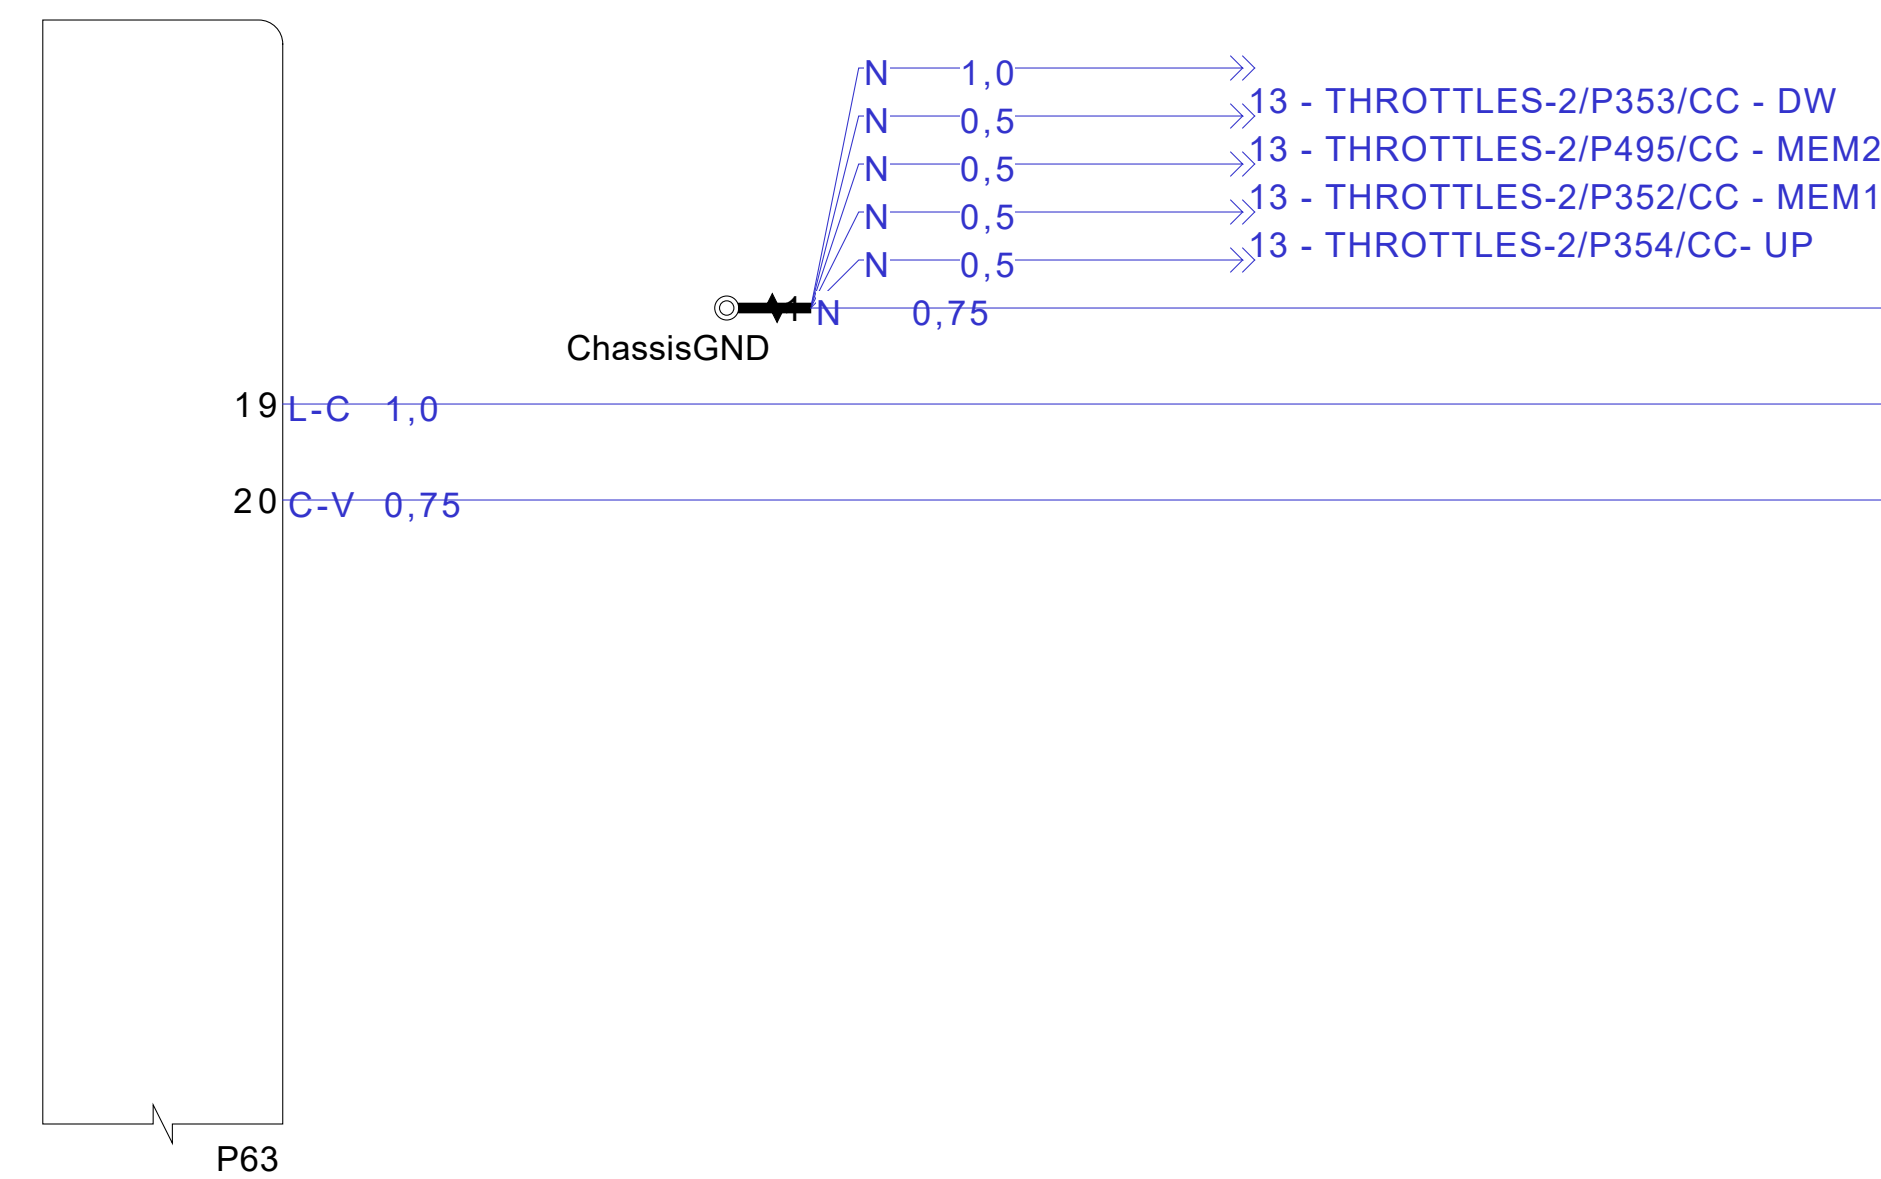



W06

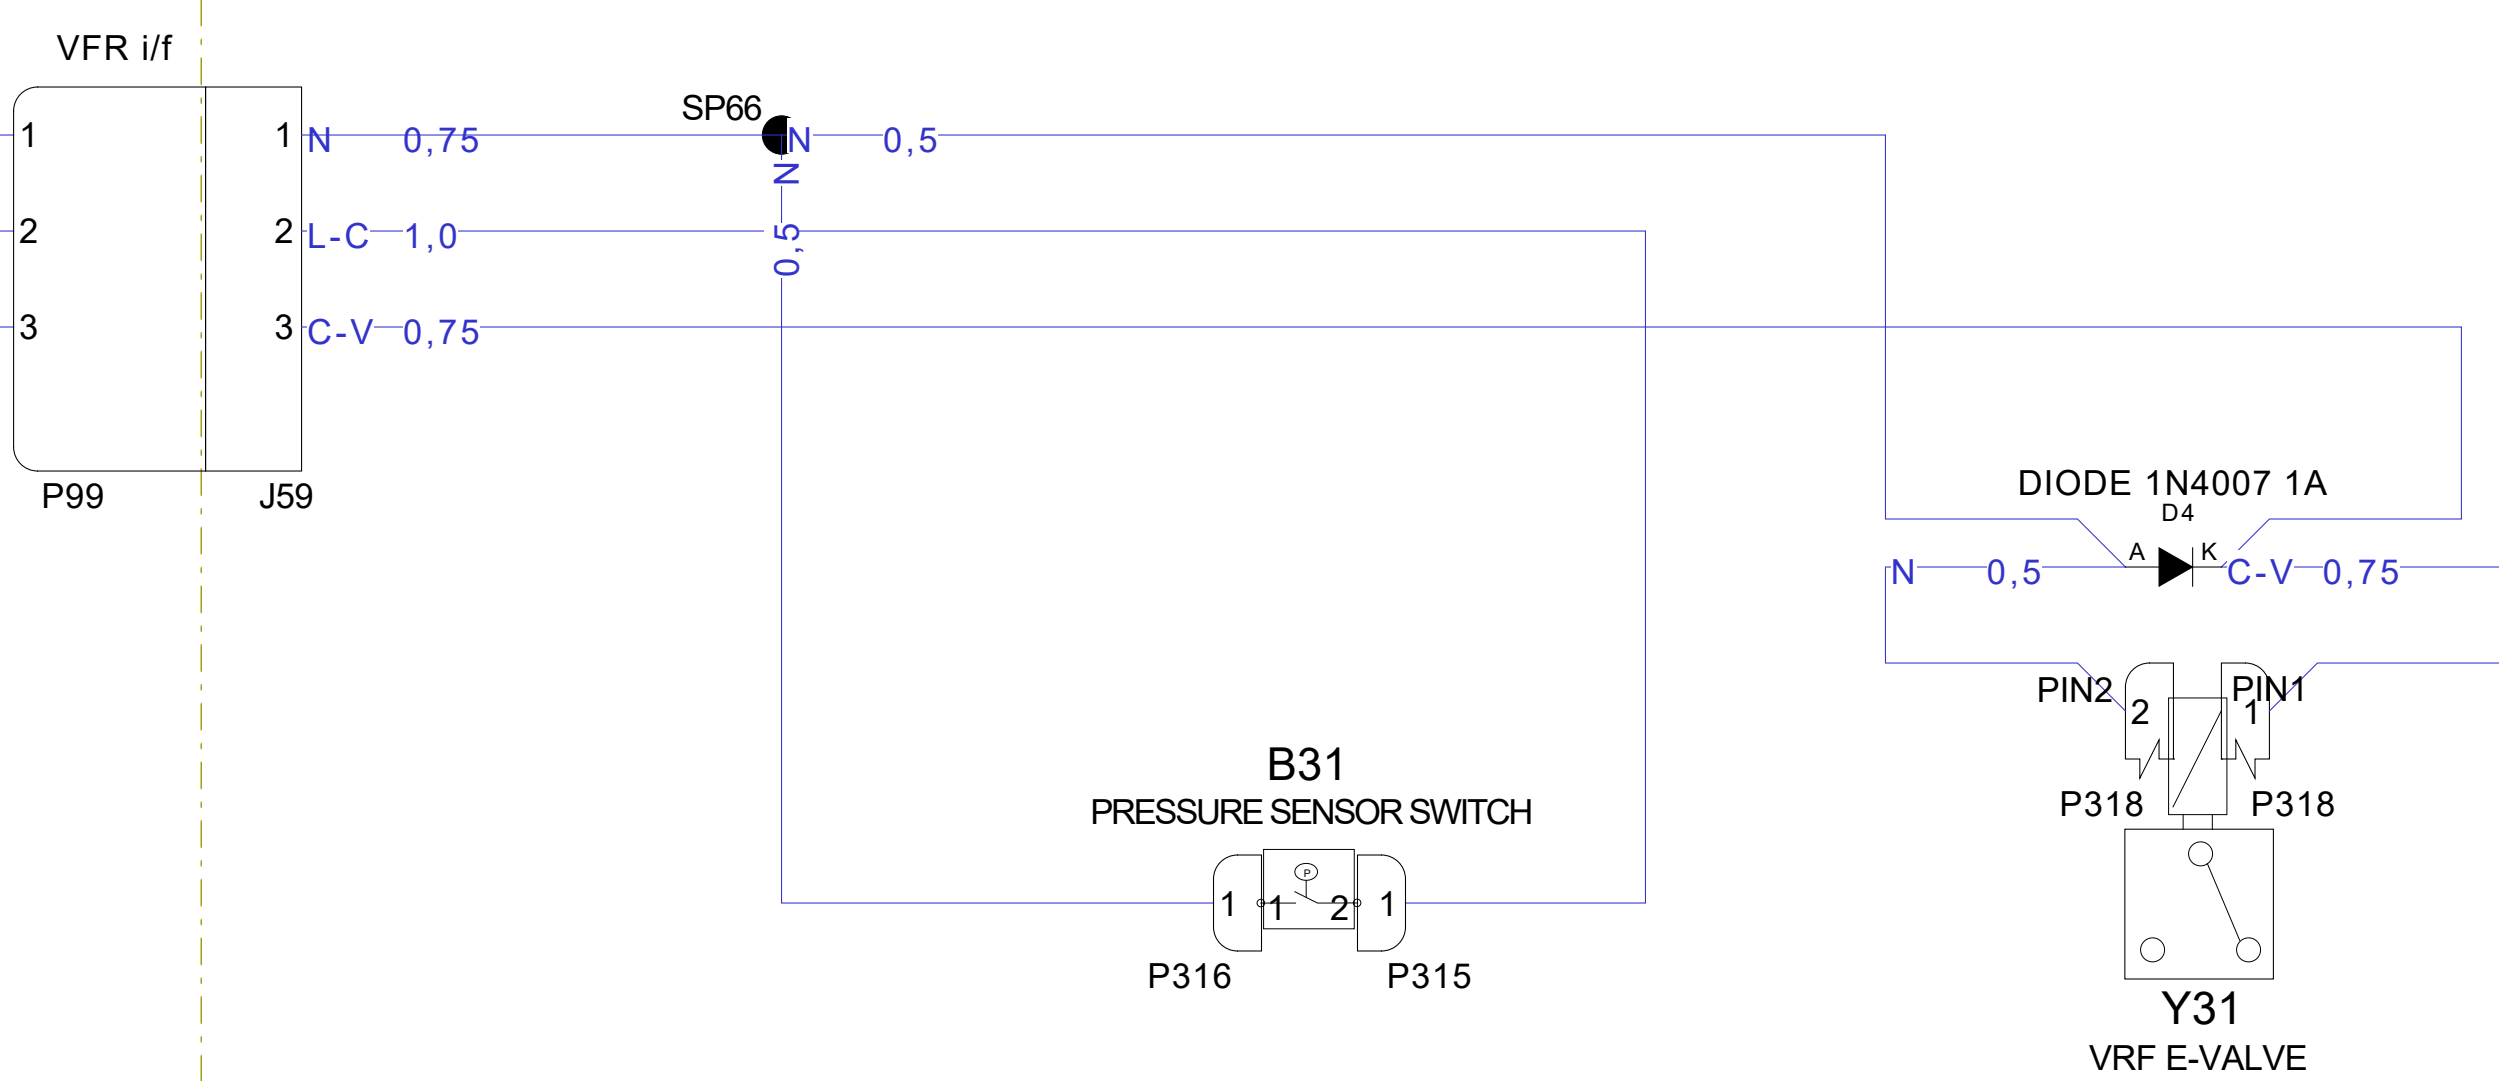



J31 - Connection to P63
J59 - Connection to P99
P313 - Connection to Relay Box
P314 - Connection to Trailer brake warning light H80
P315 - Connection to Trailer brake pressure sensor B31
P316 - Connection to Trailer brake pressure sensor B31
P318 - Connection to Trailer brake solenoid valve Y31
P63 - Connection to J31
P99 - Connection to J59

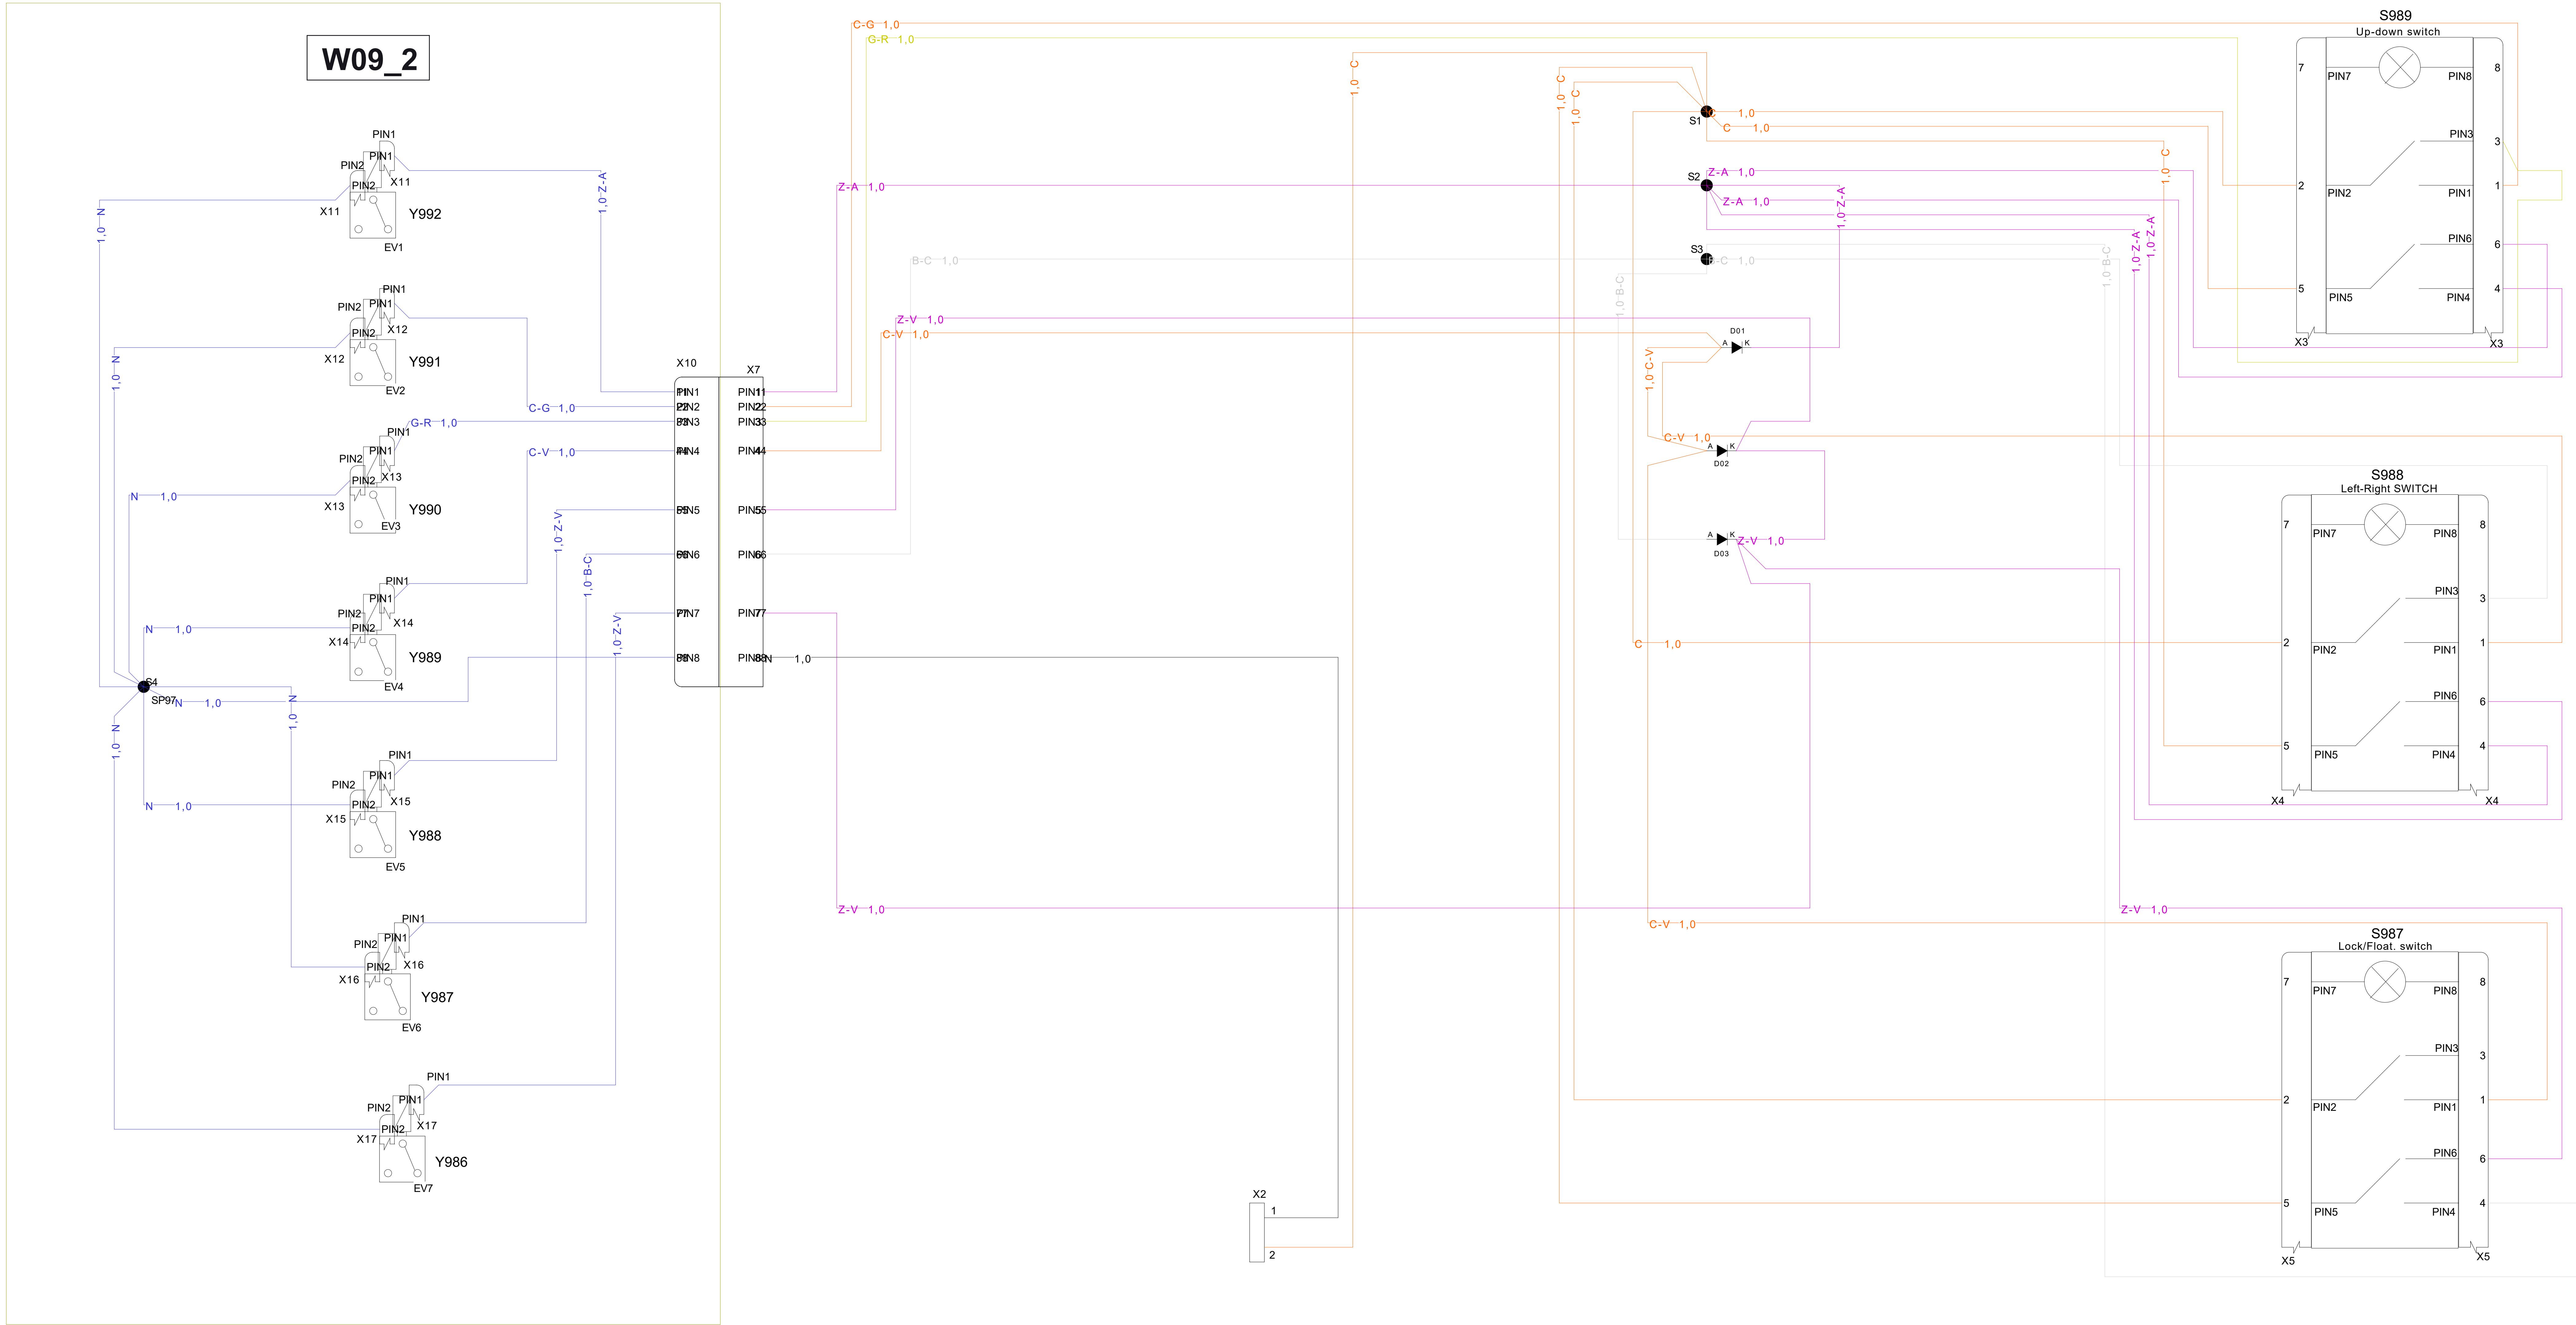


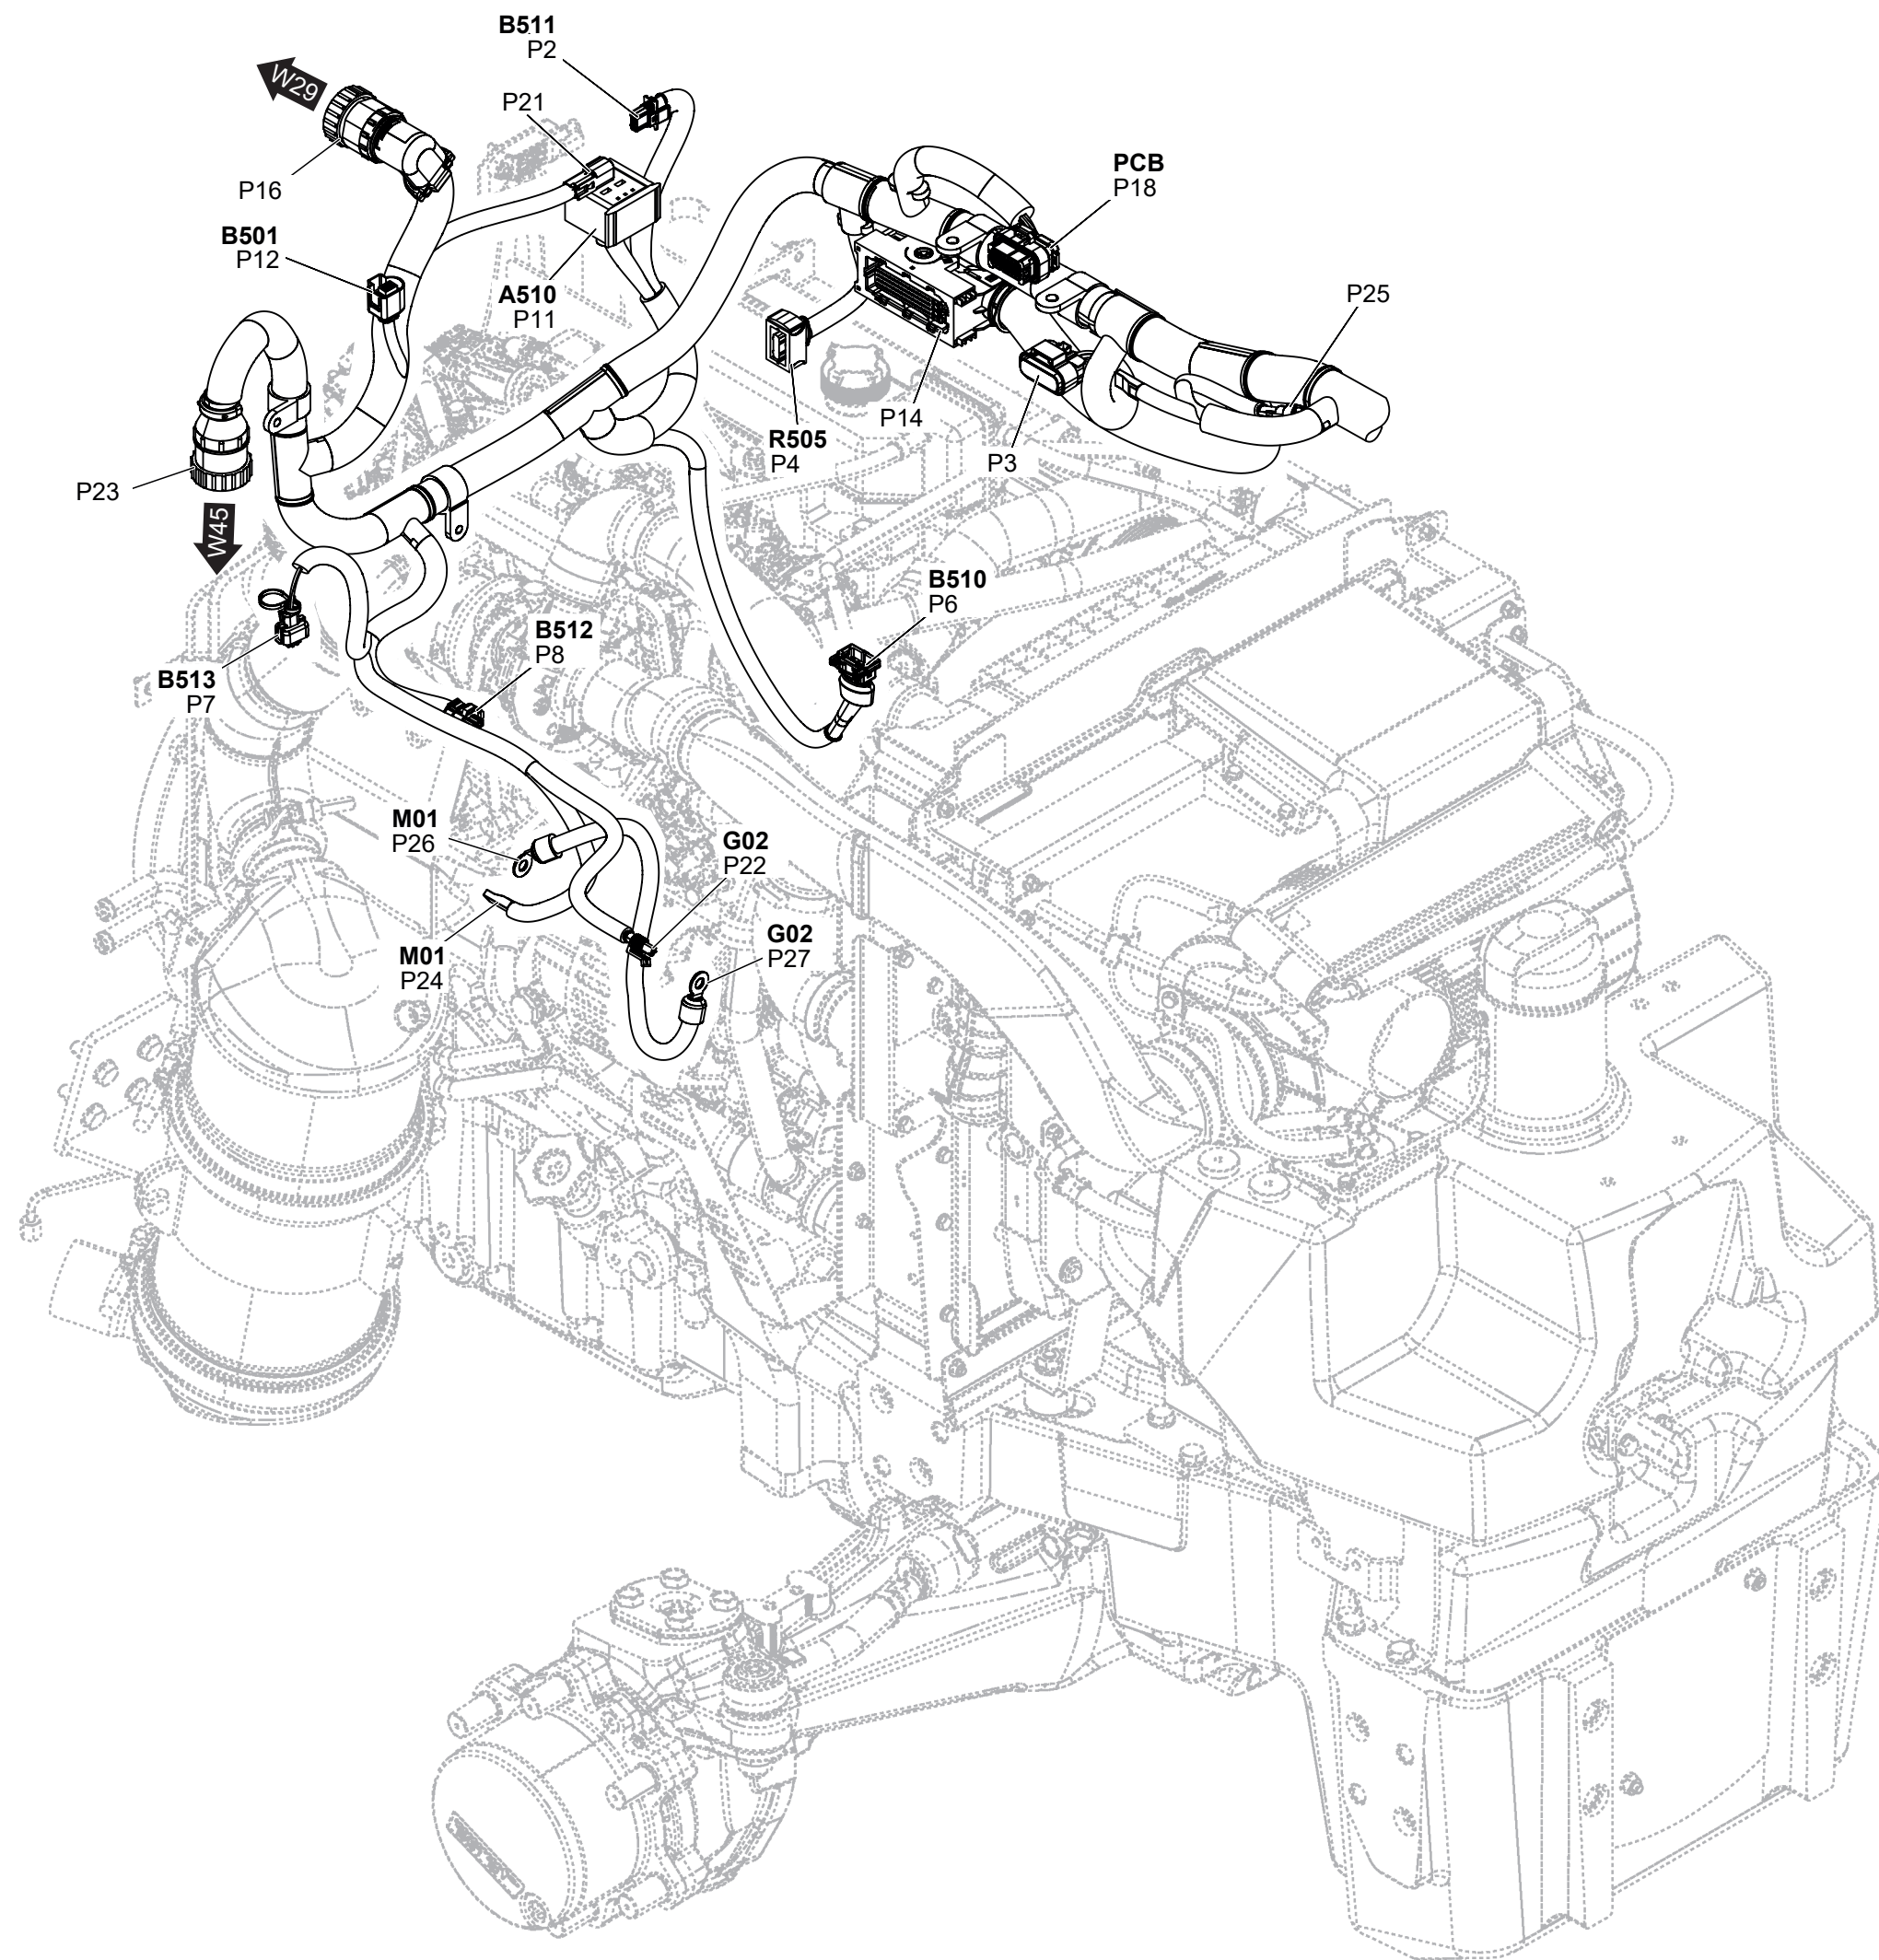


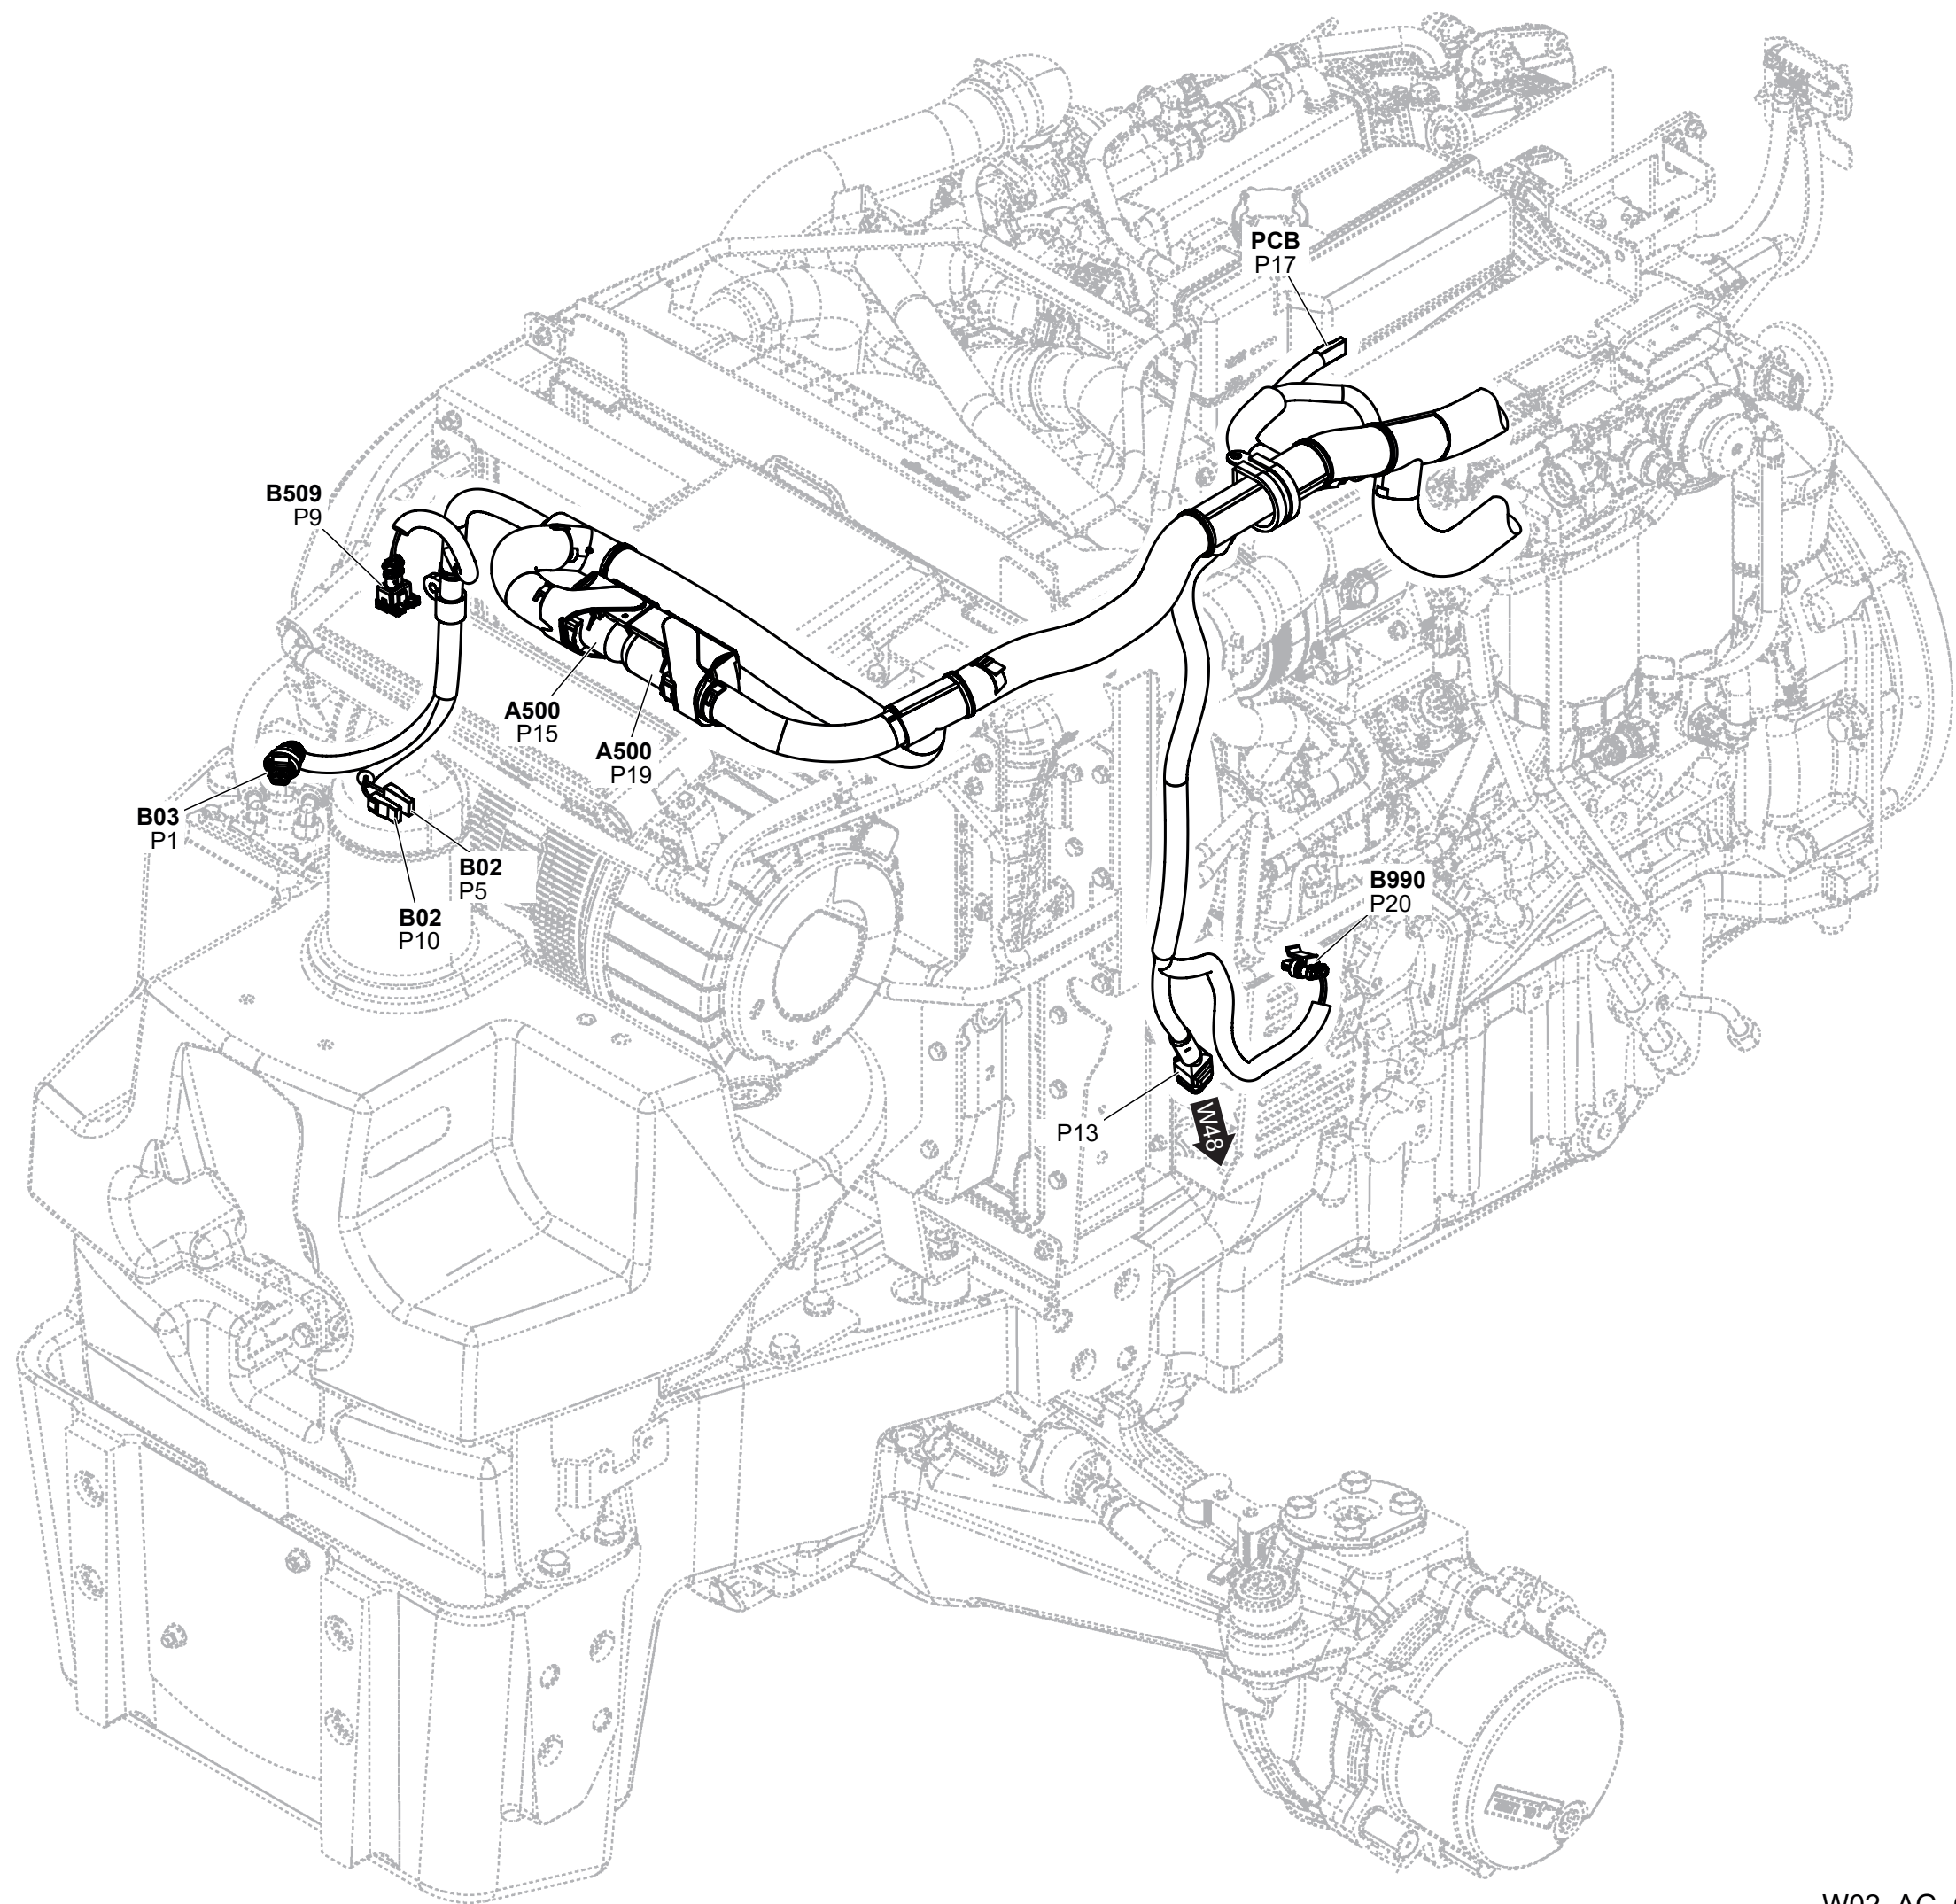


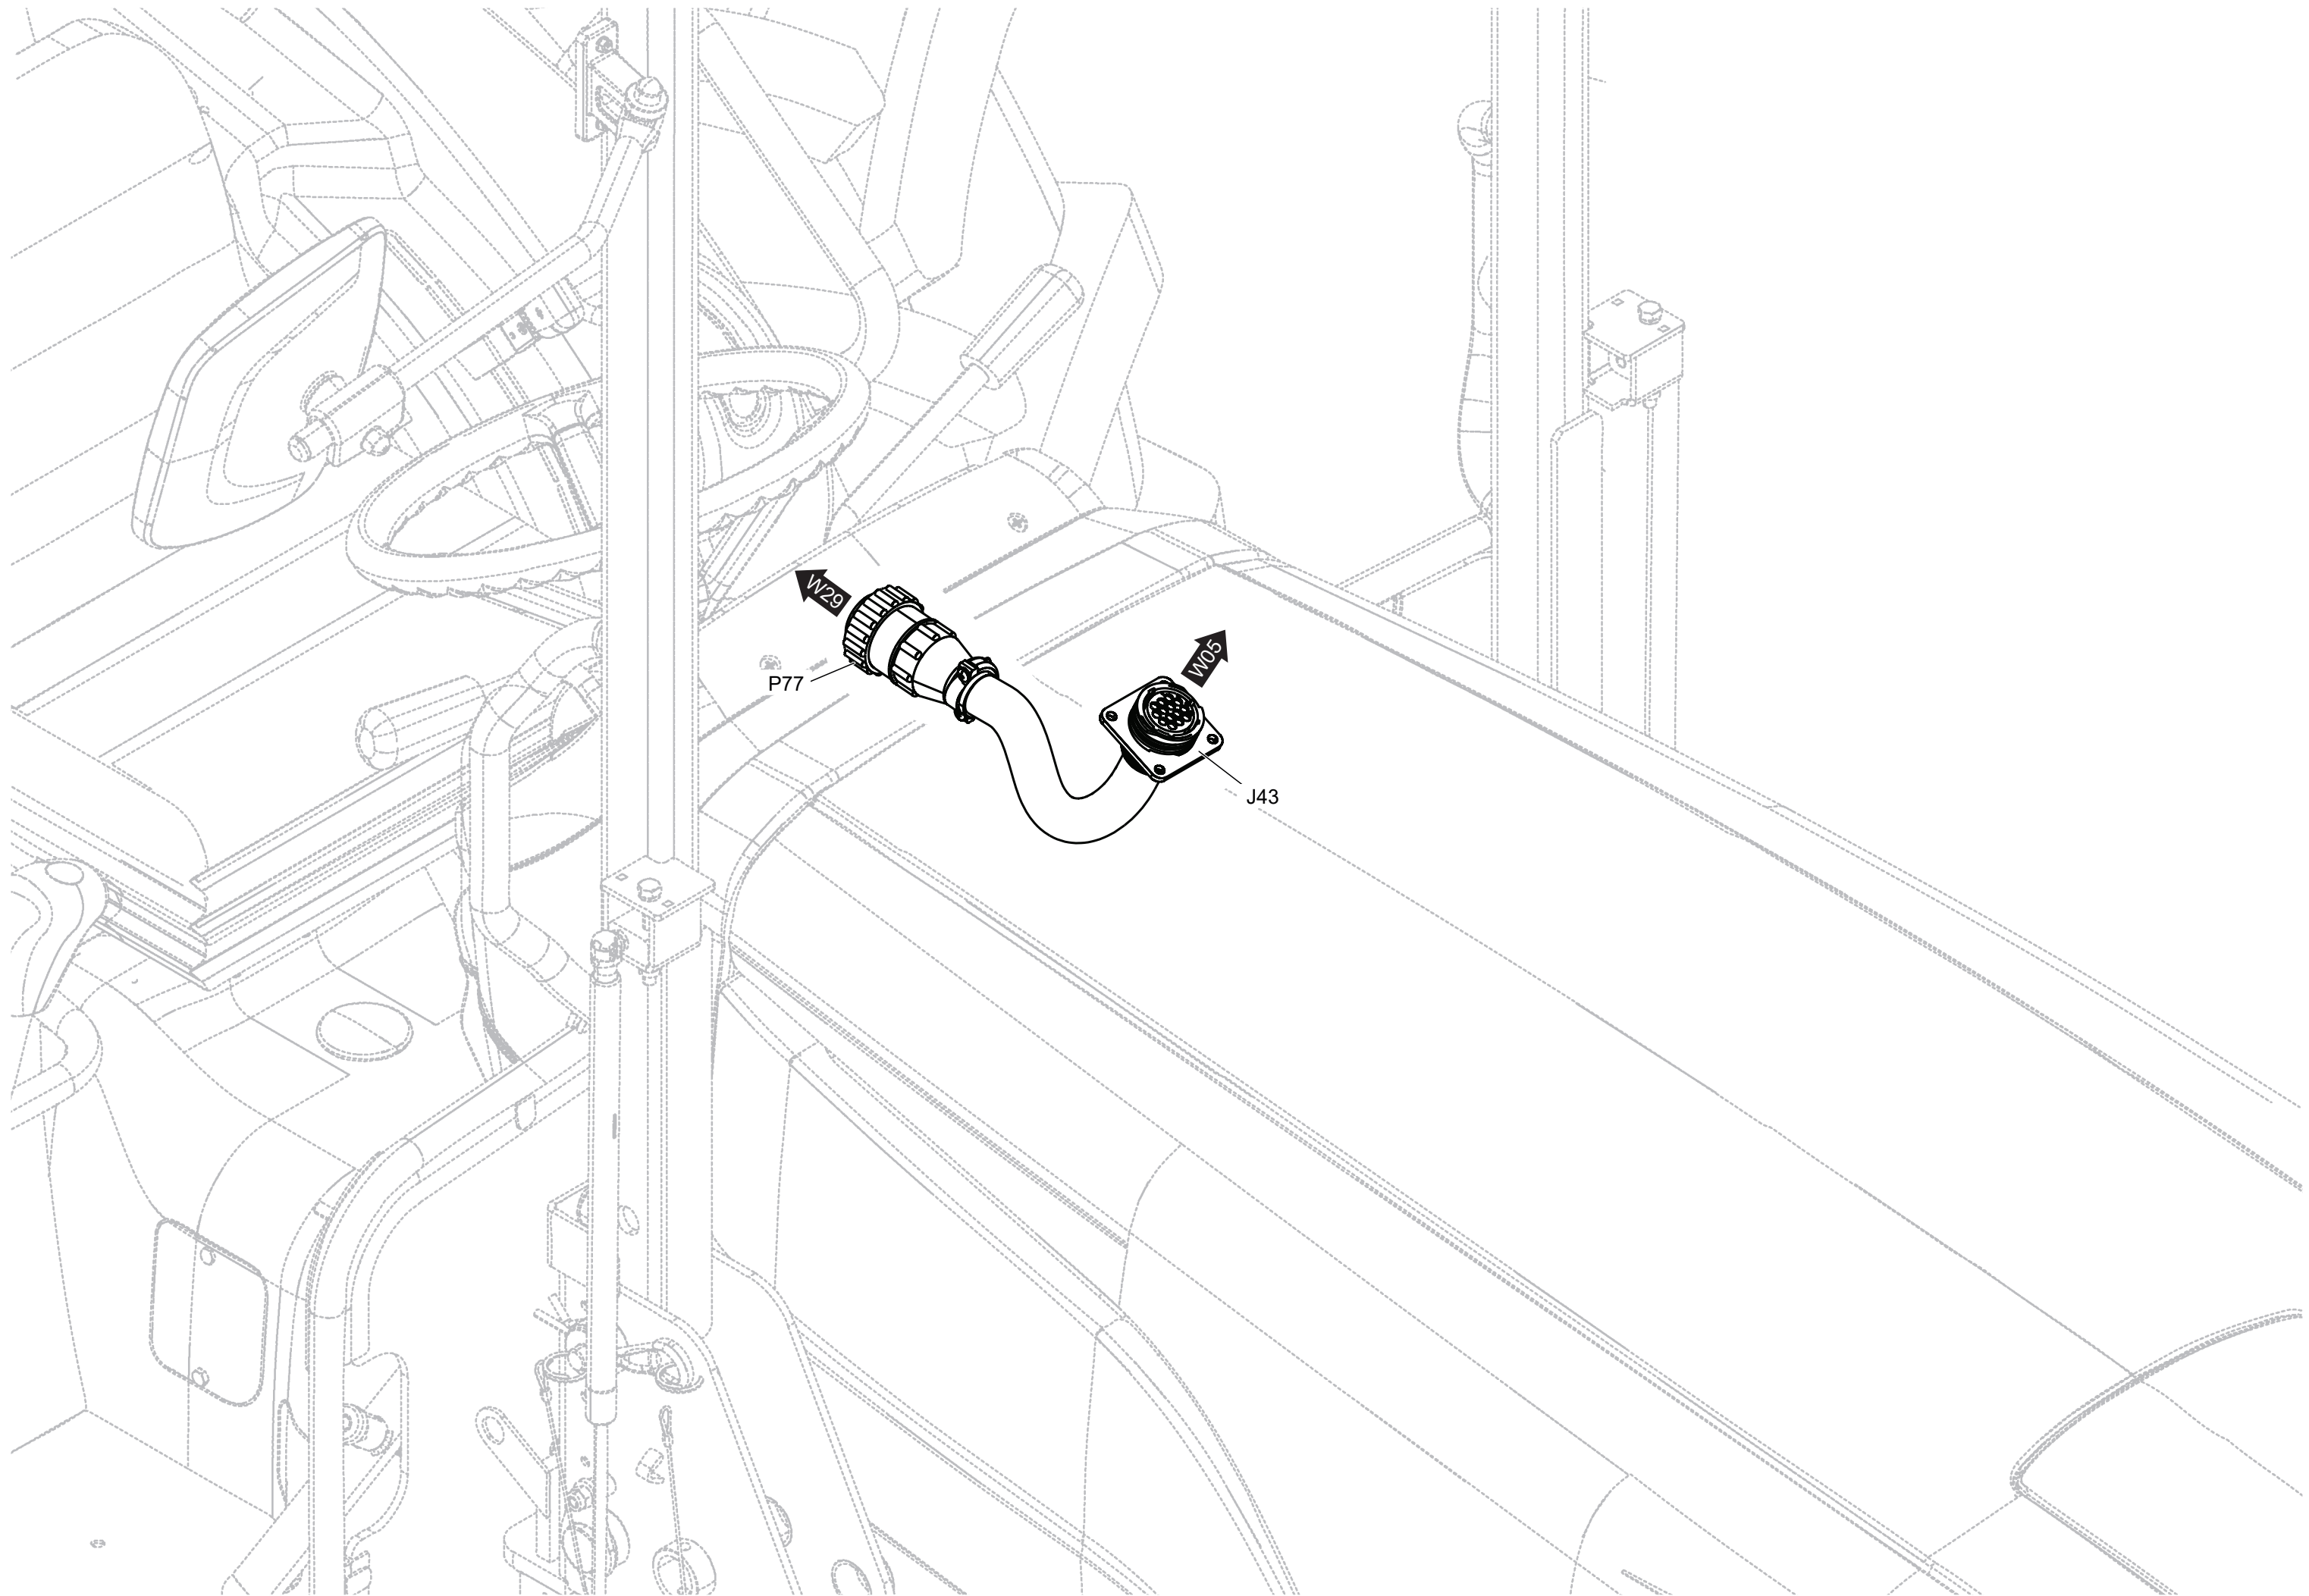


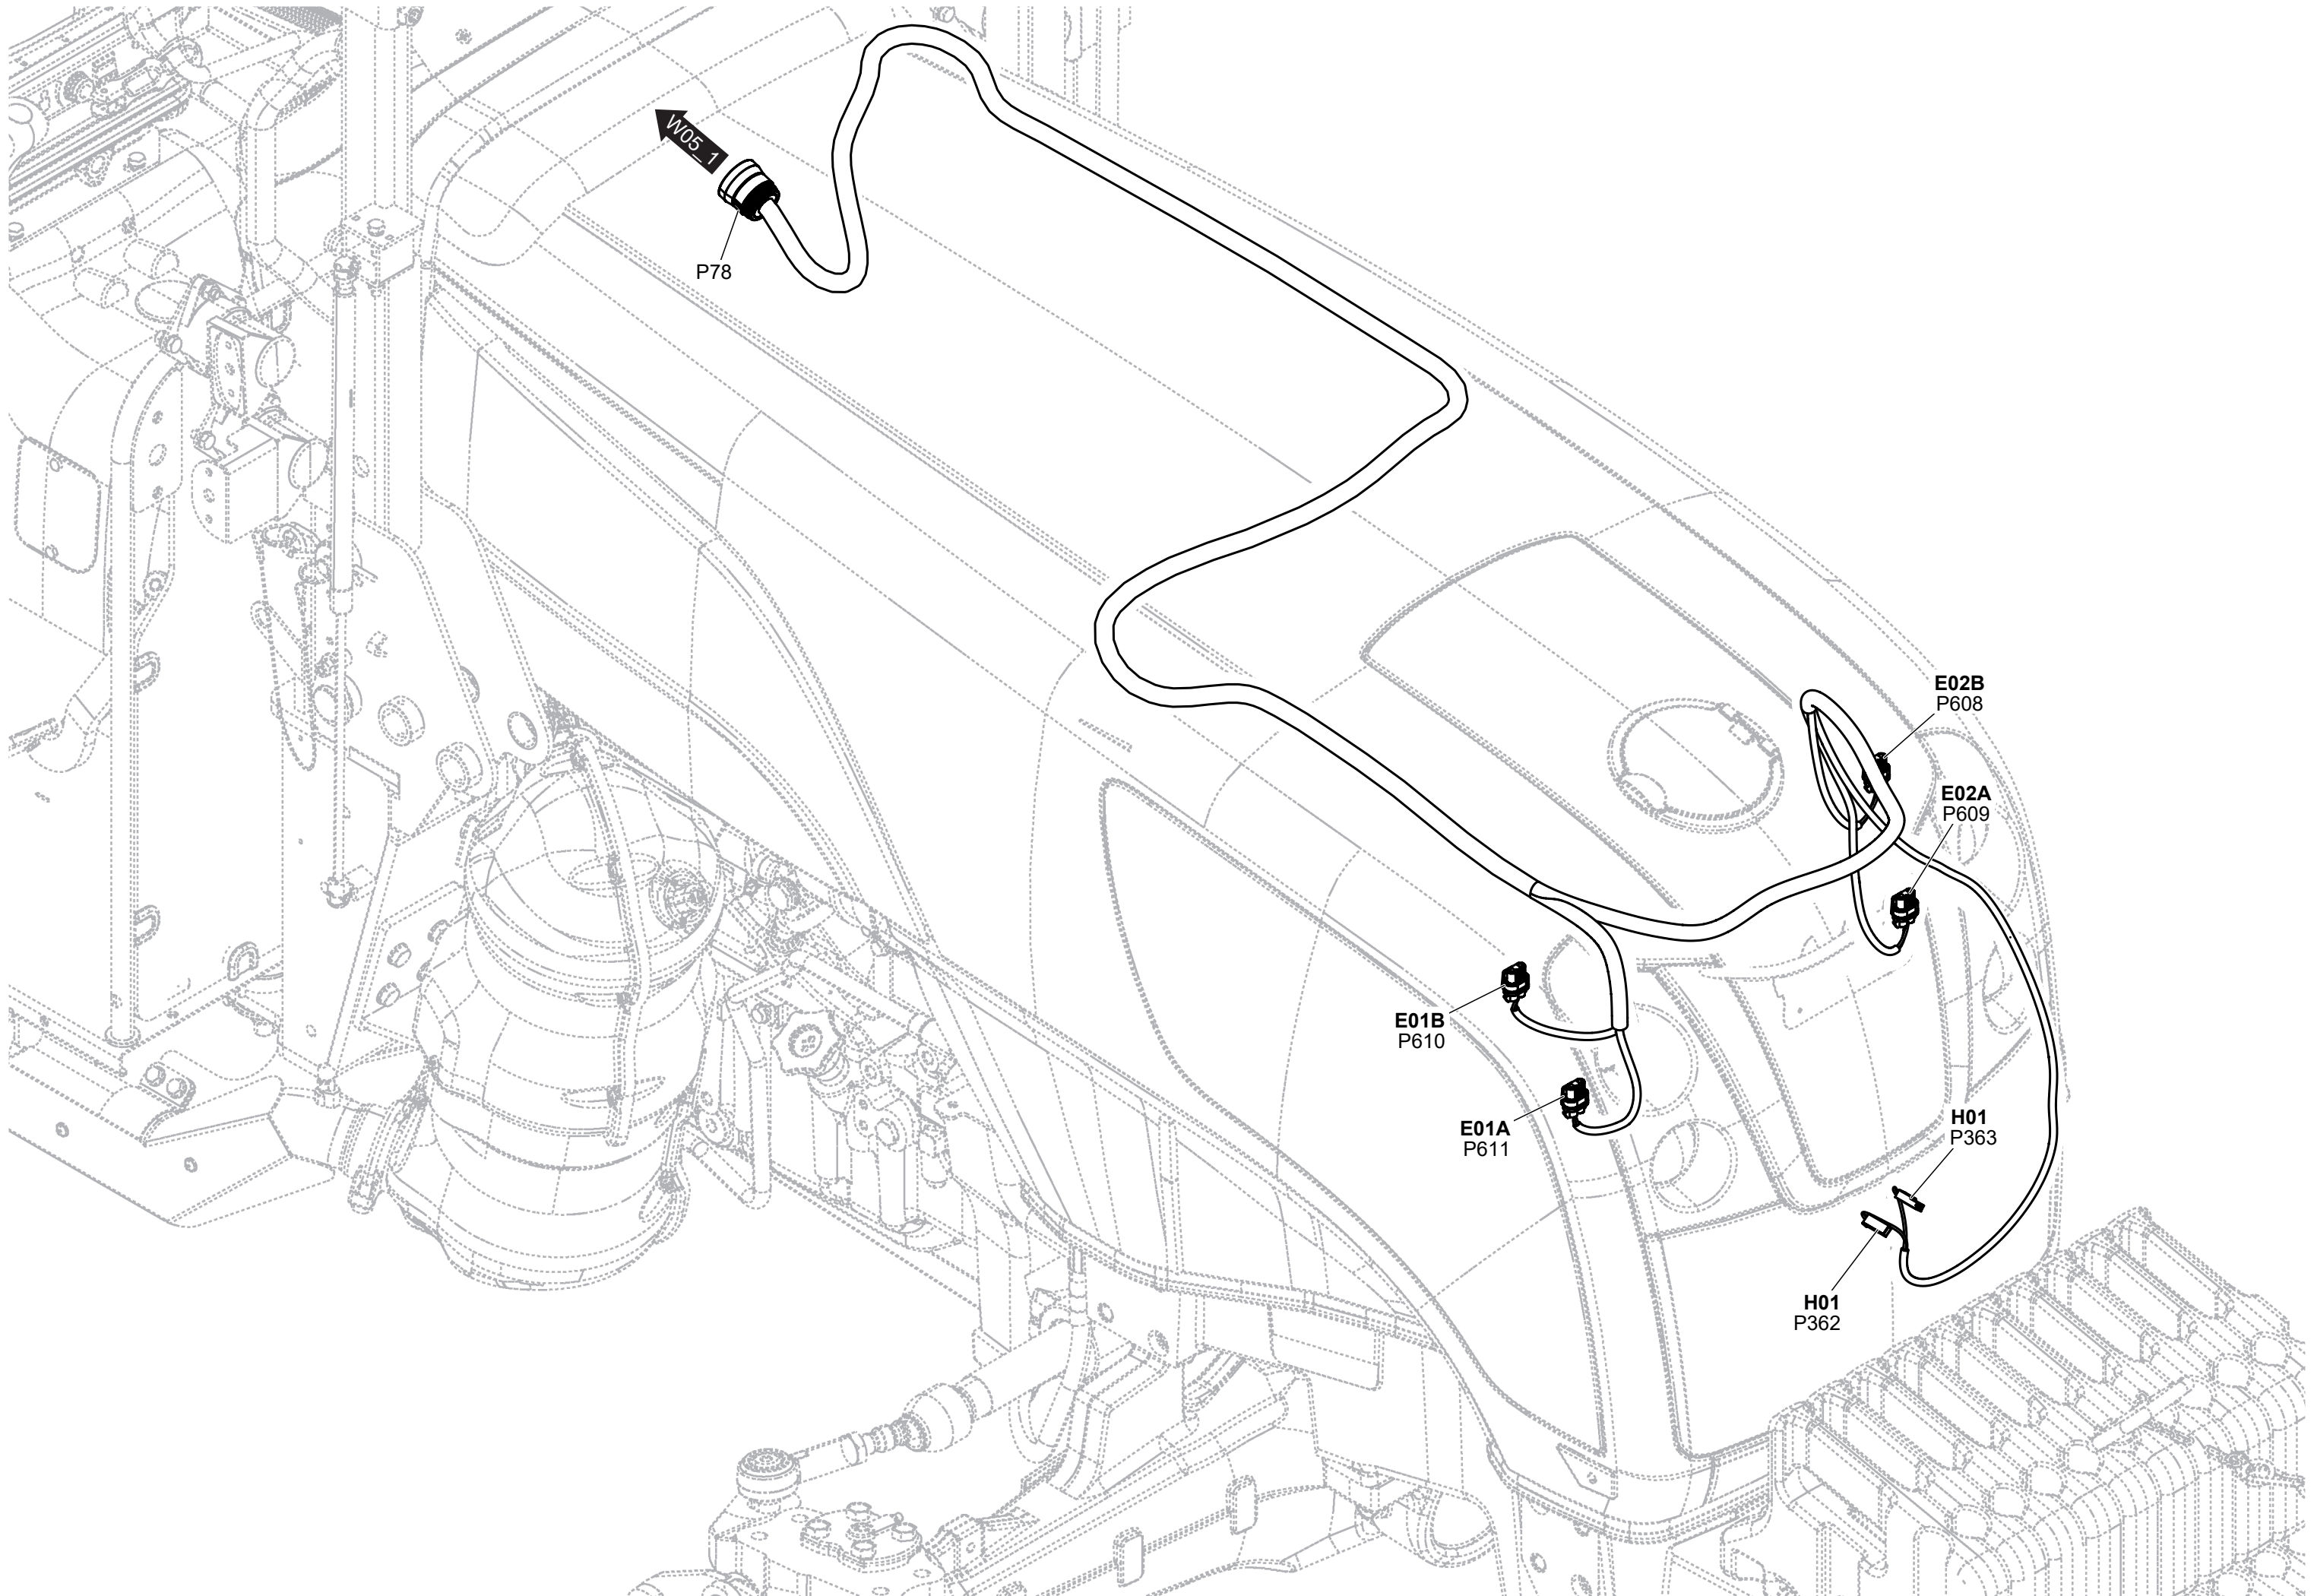


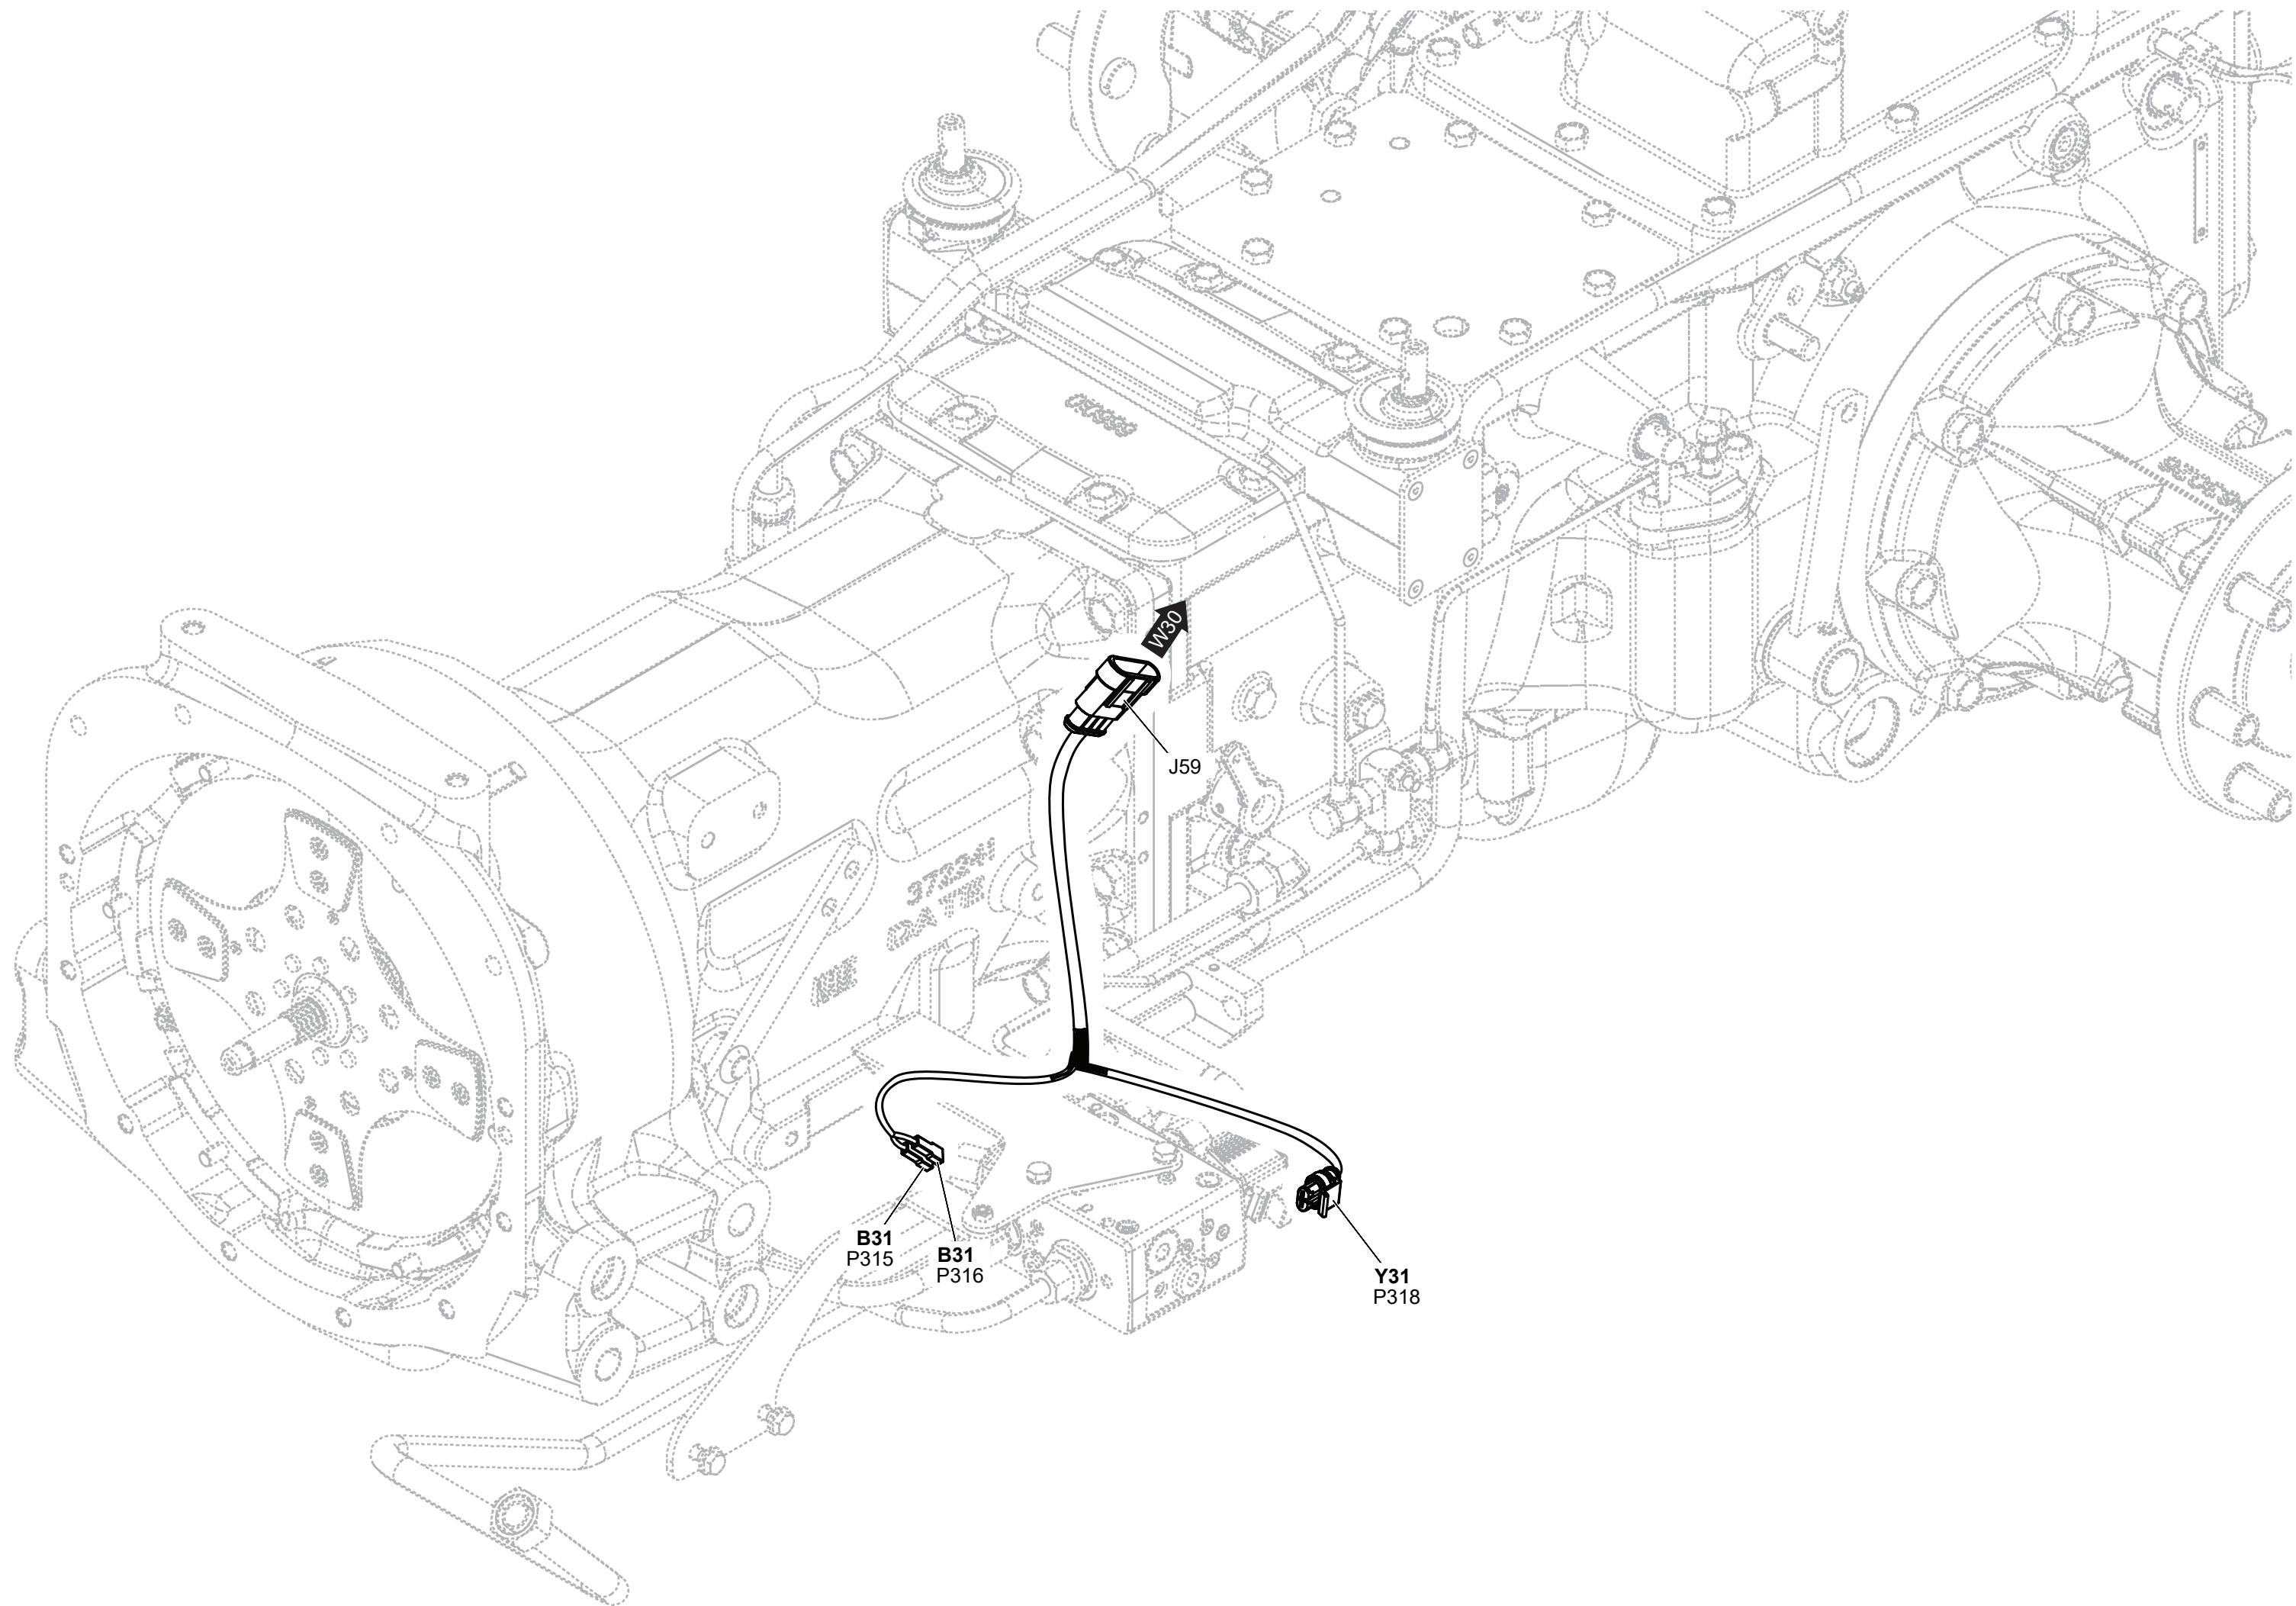


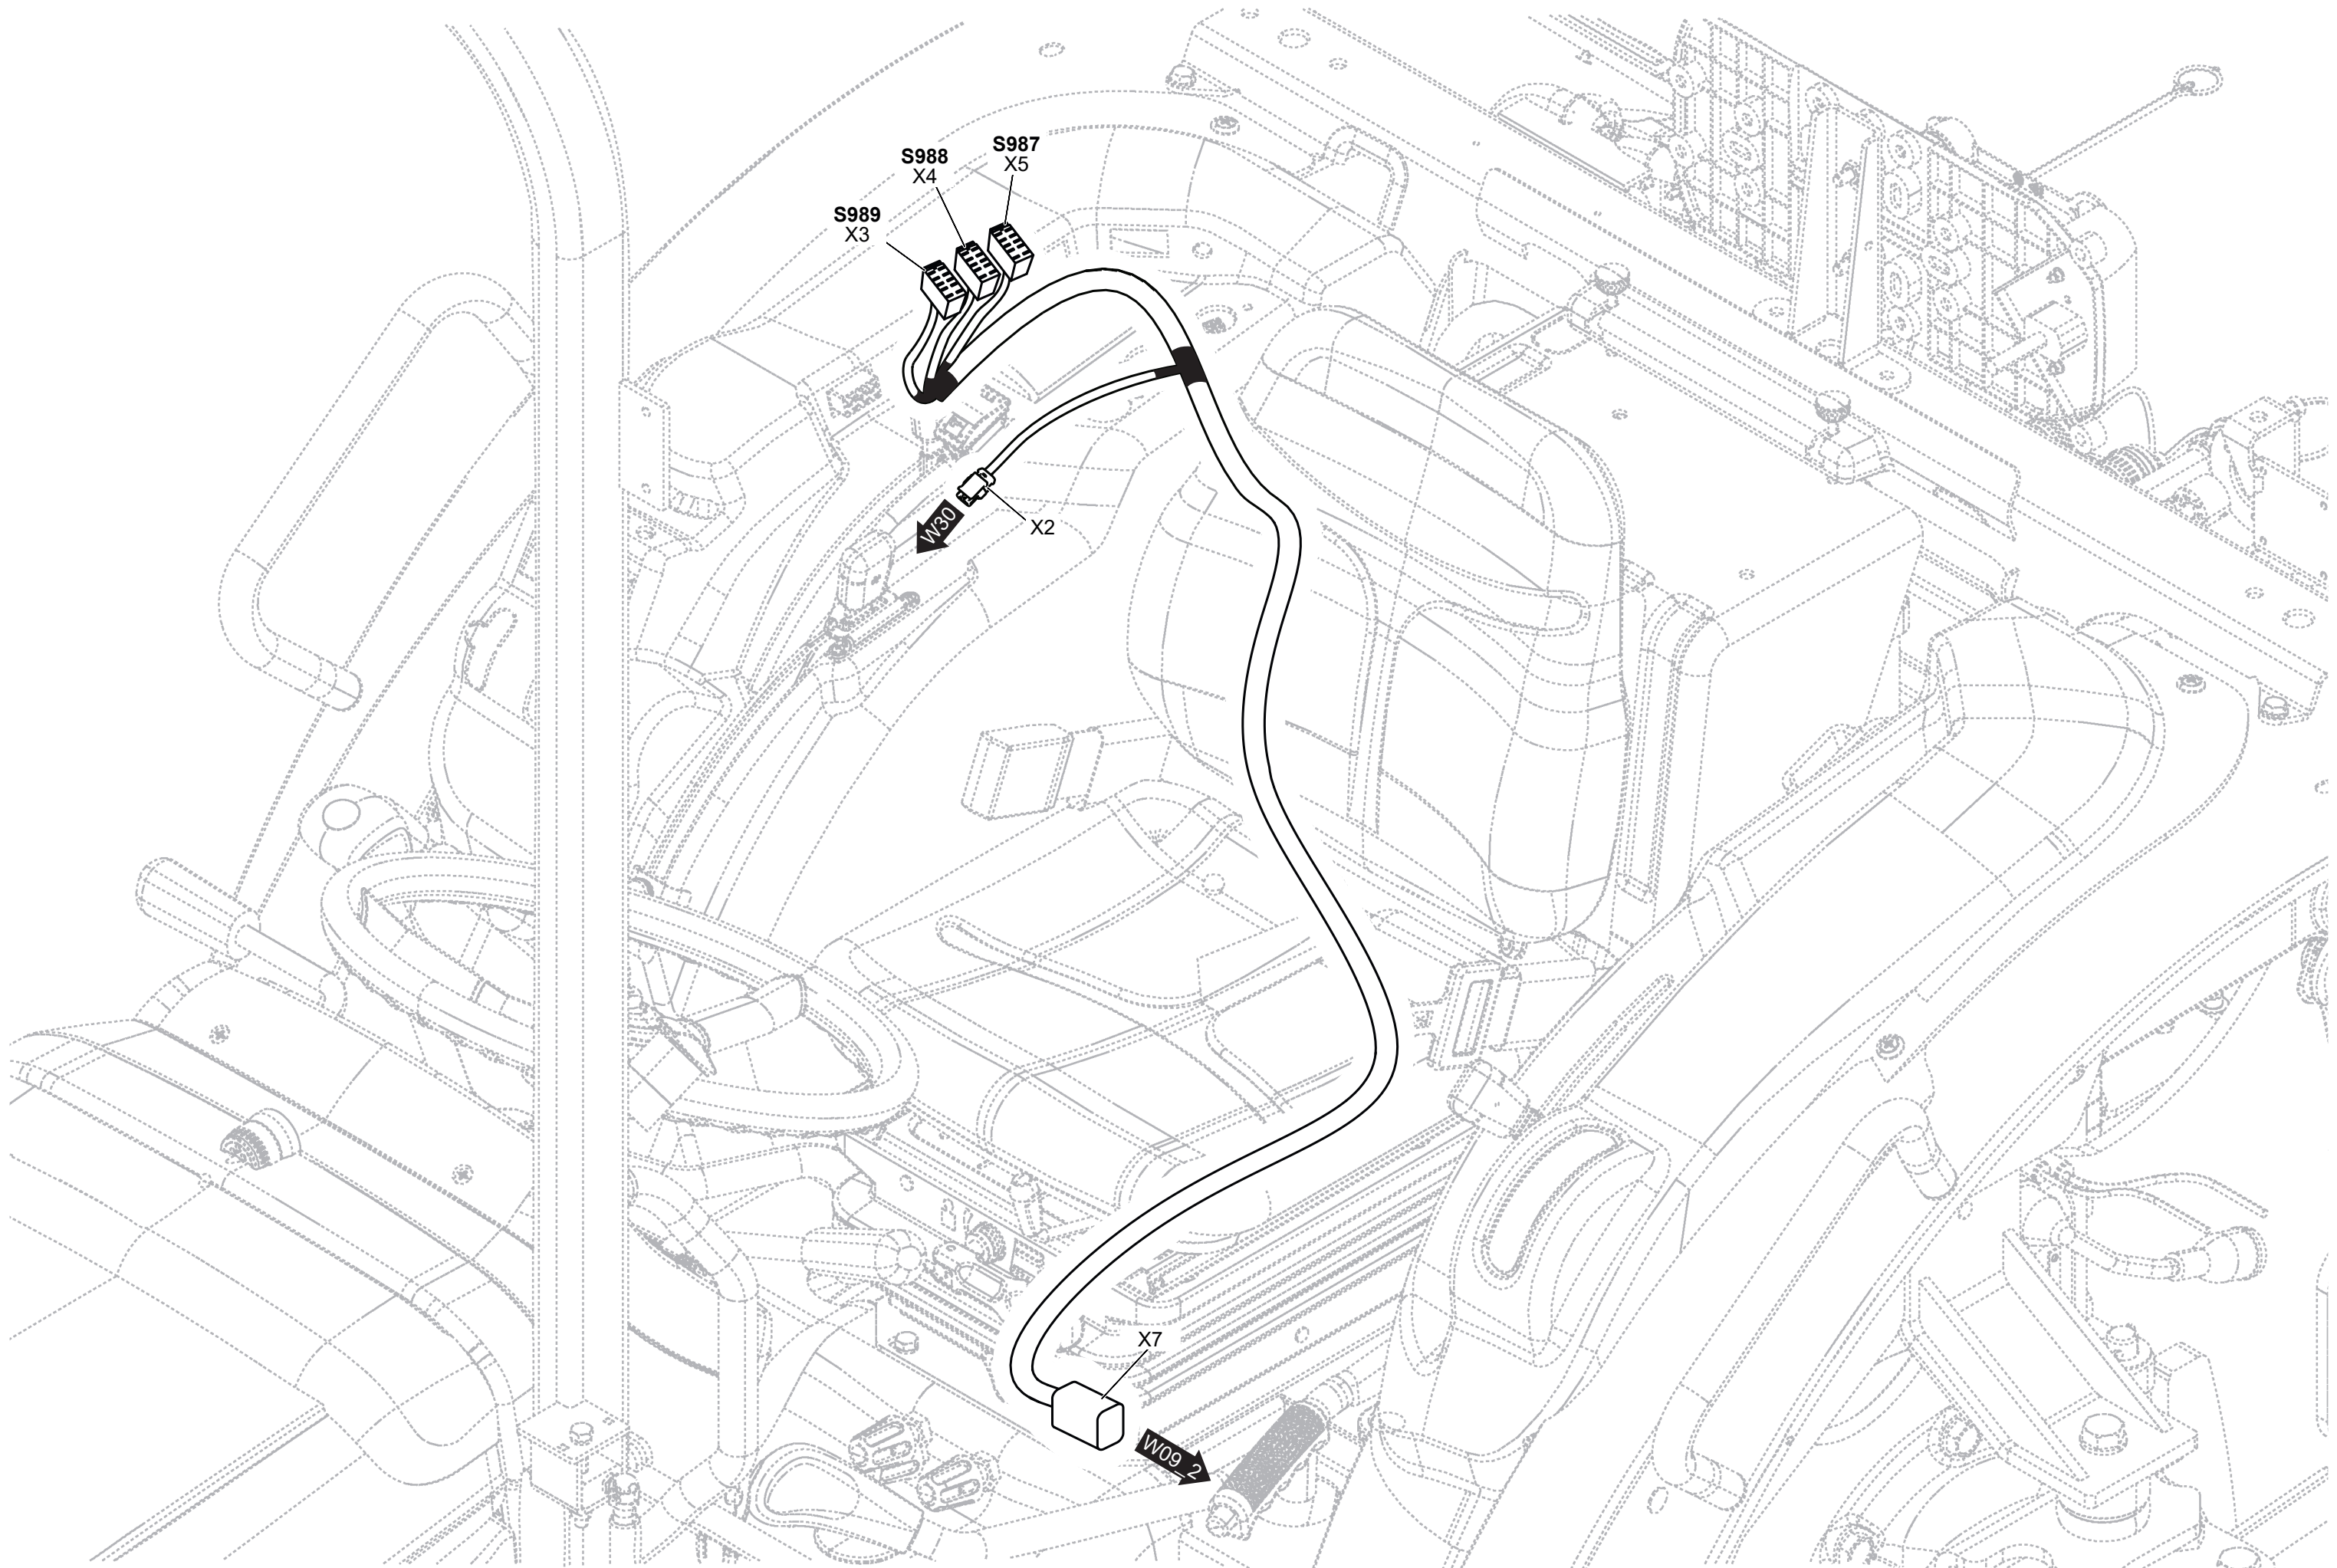


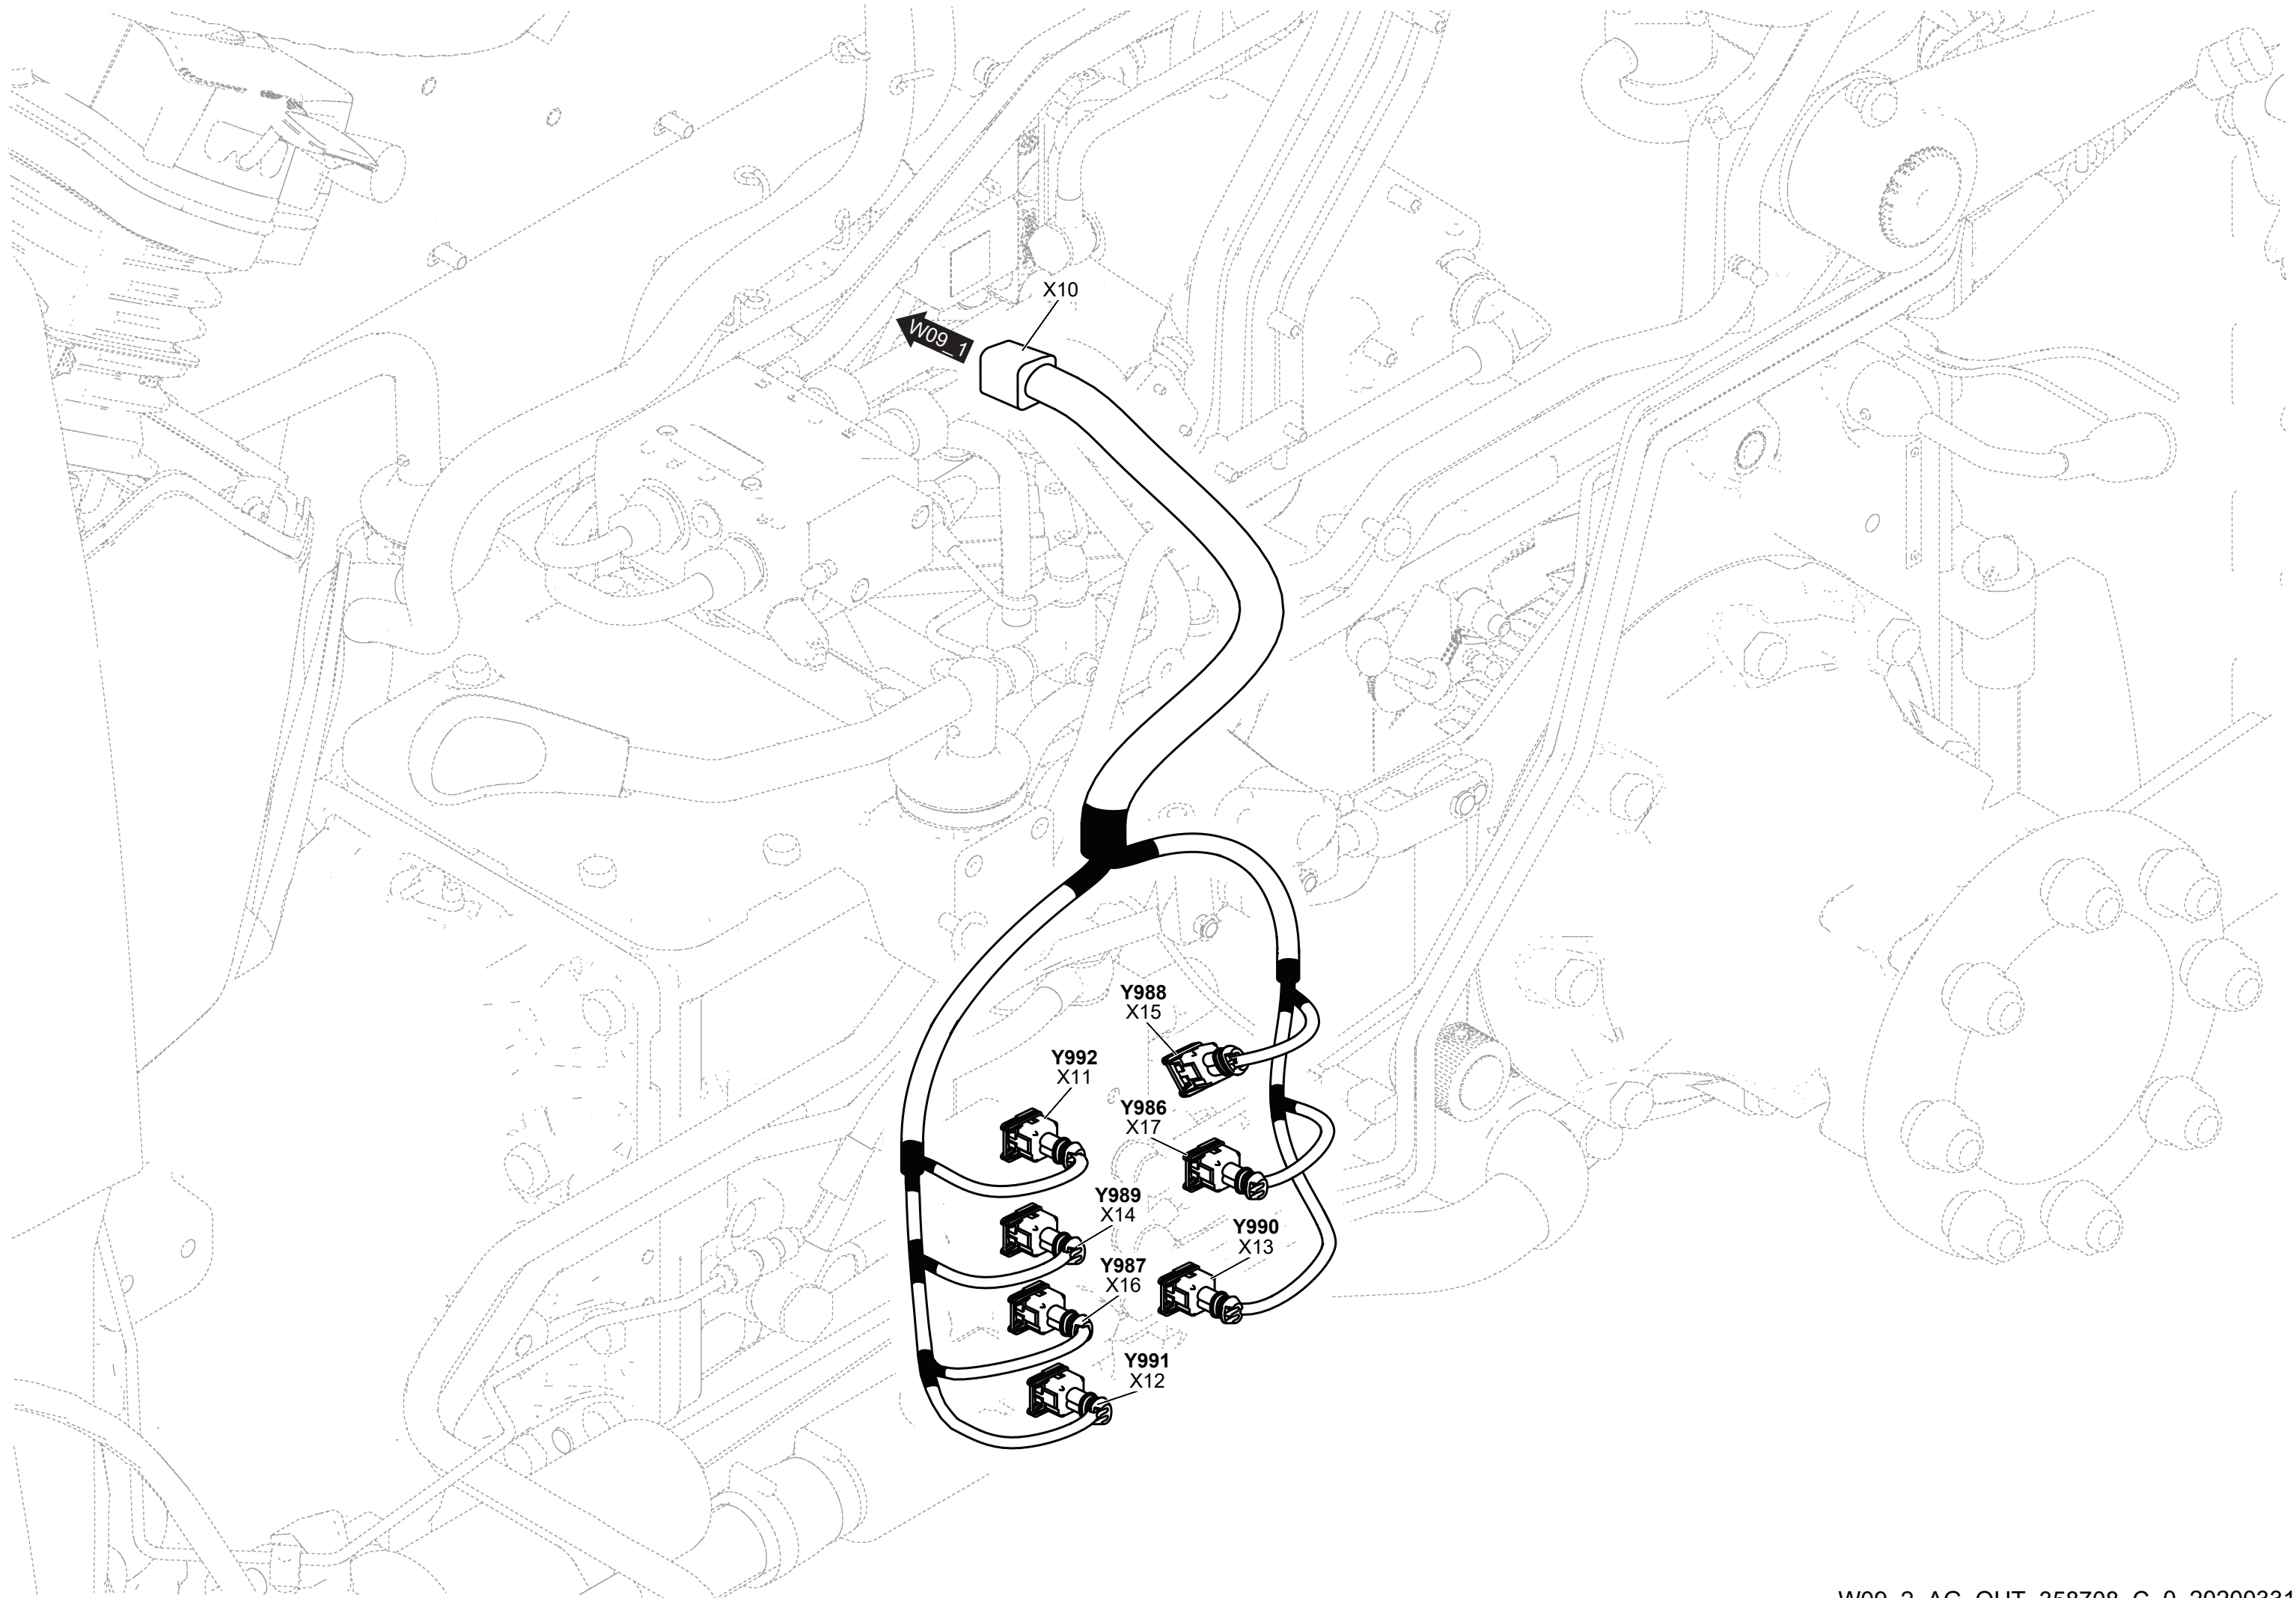


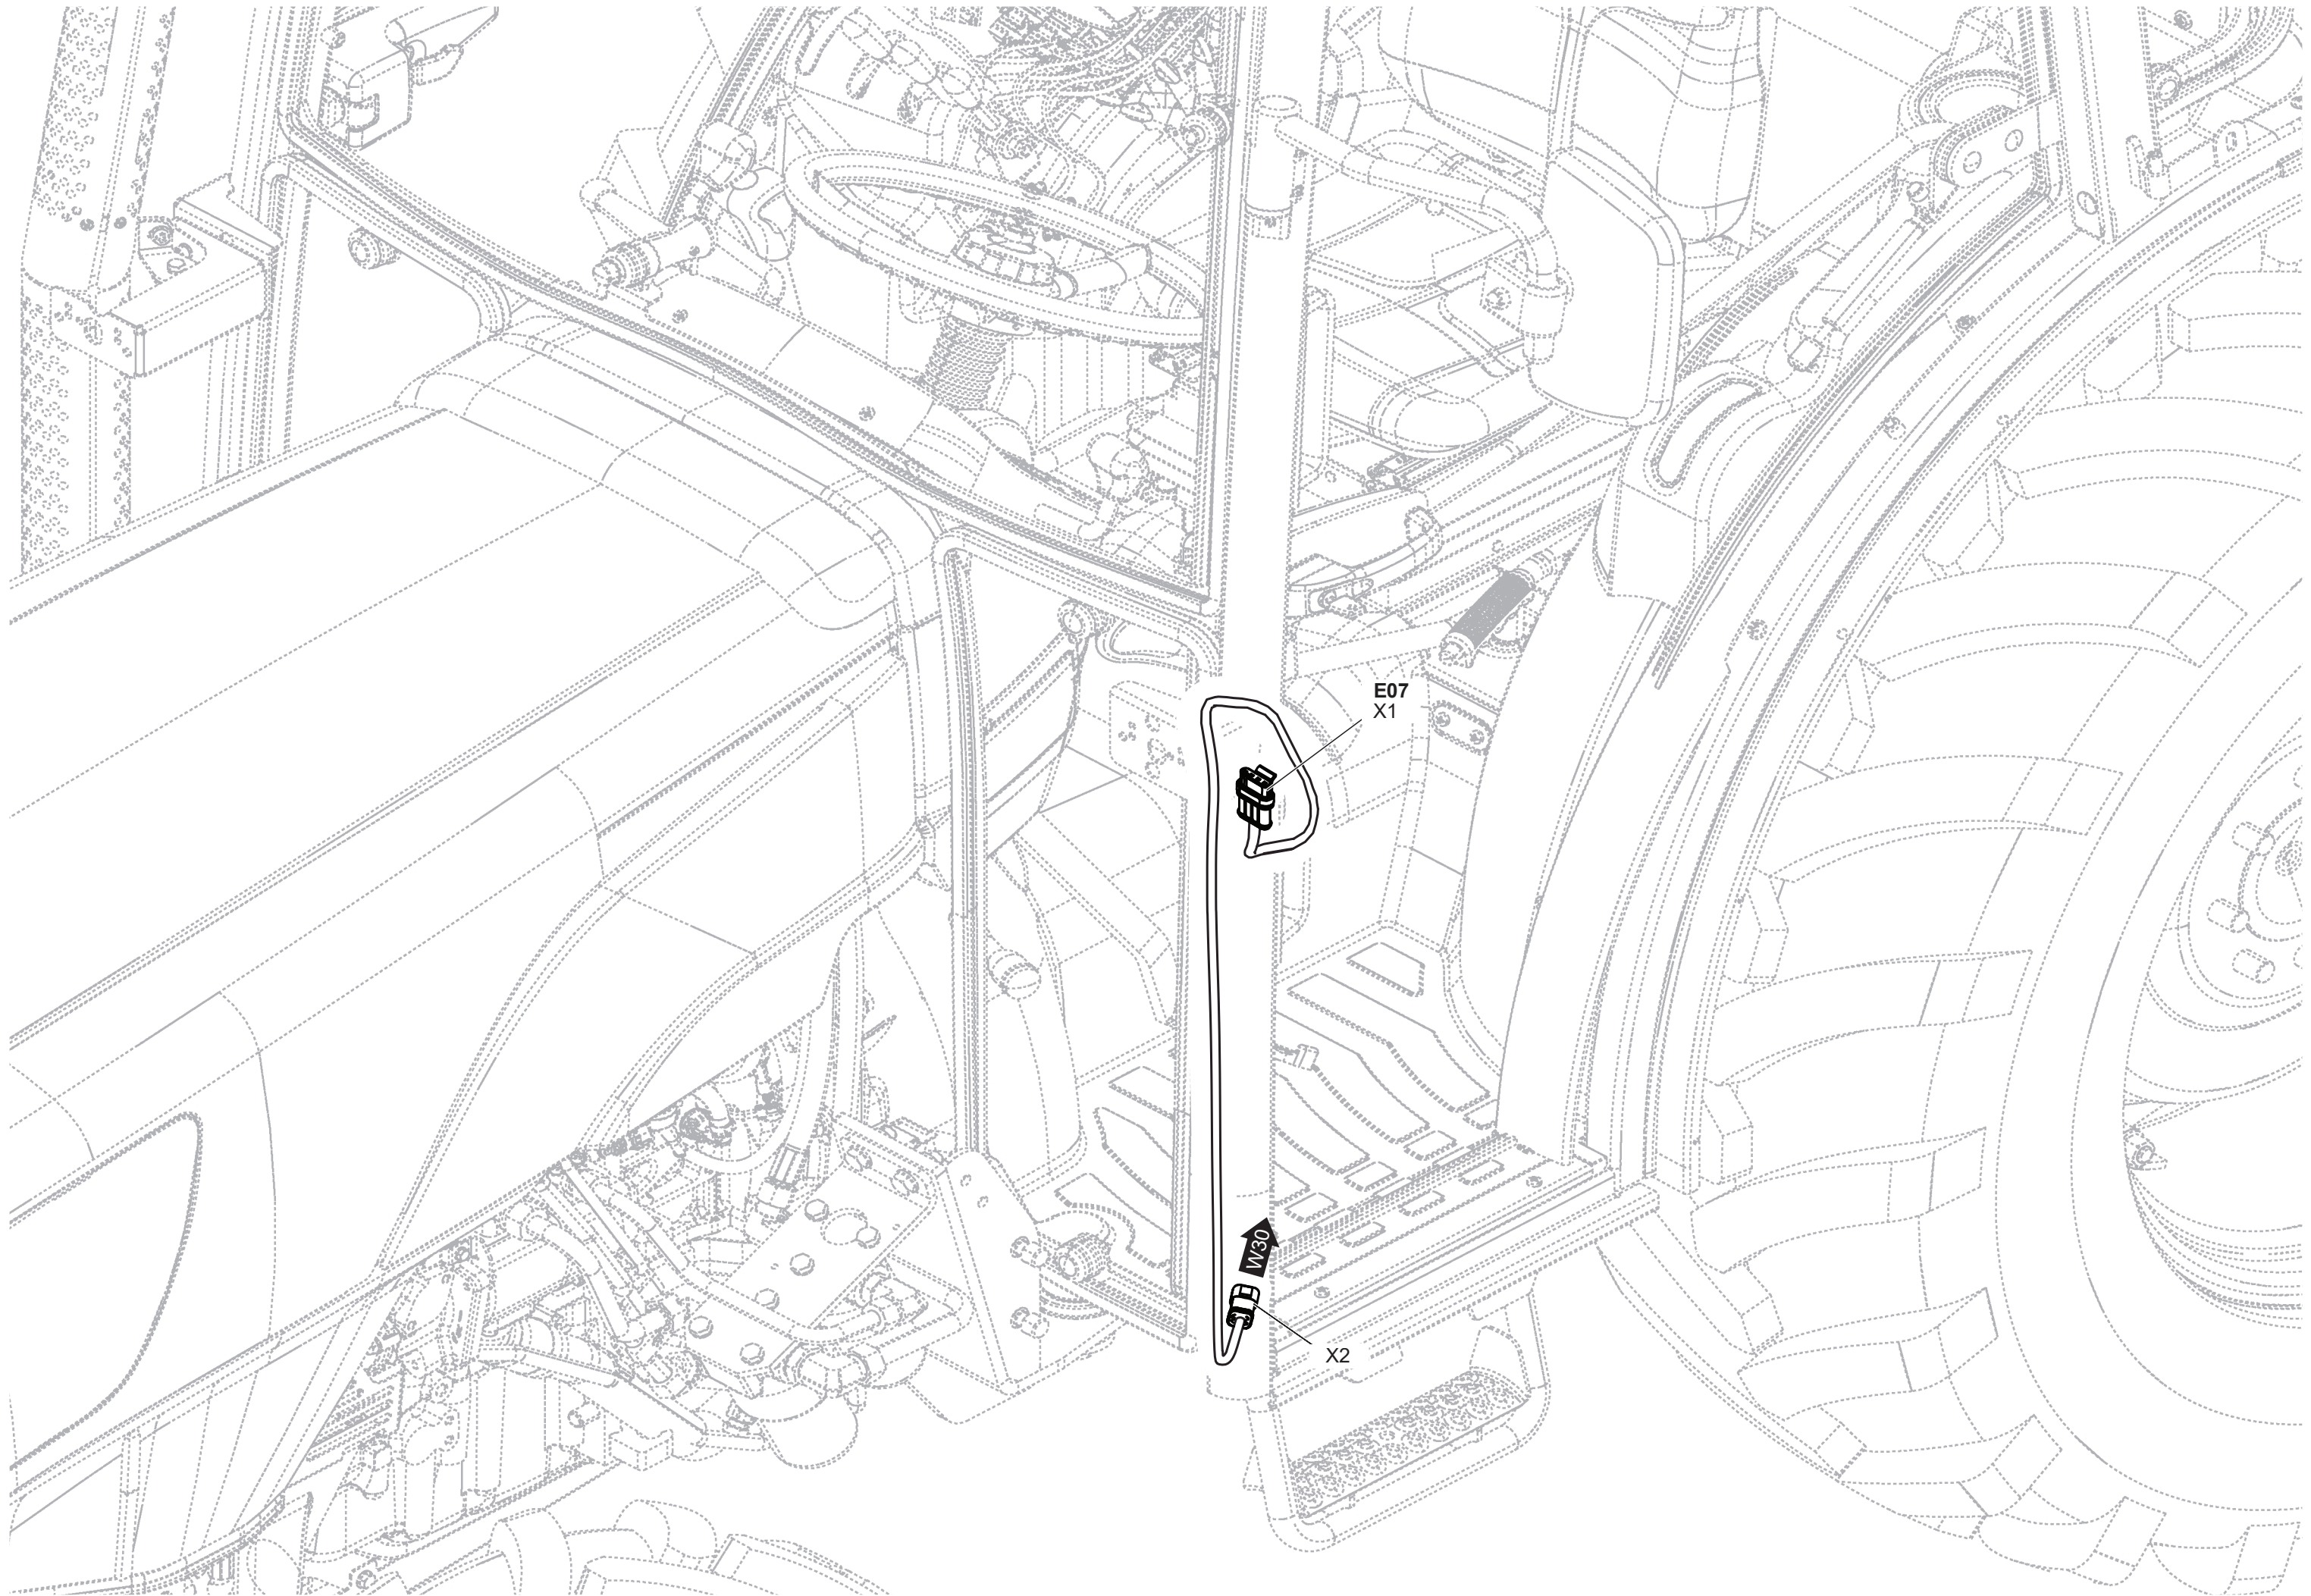


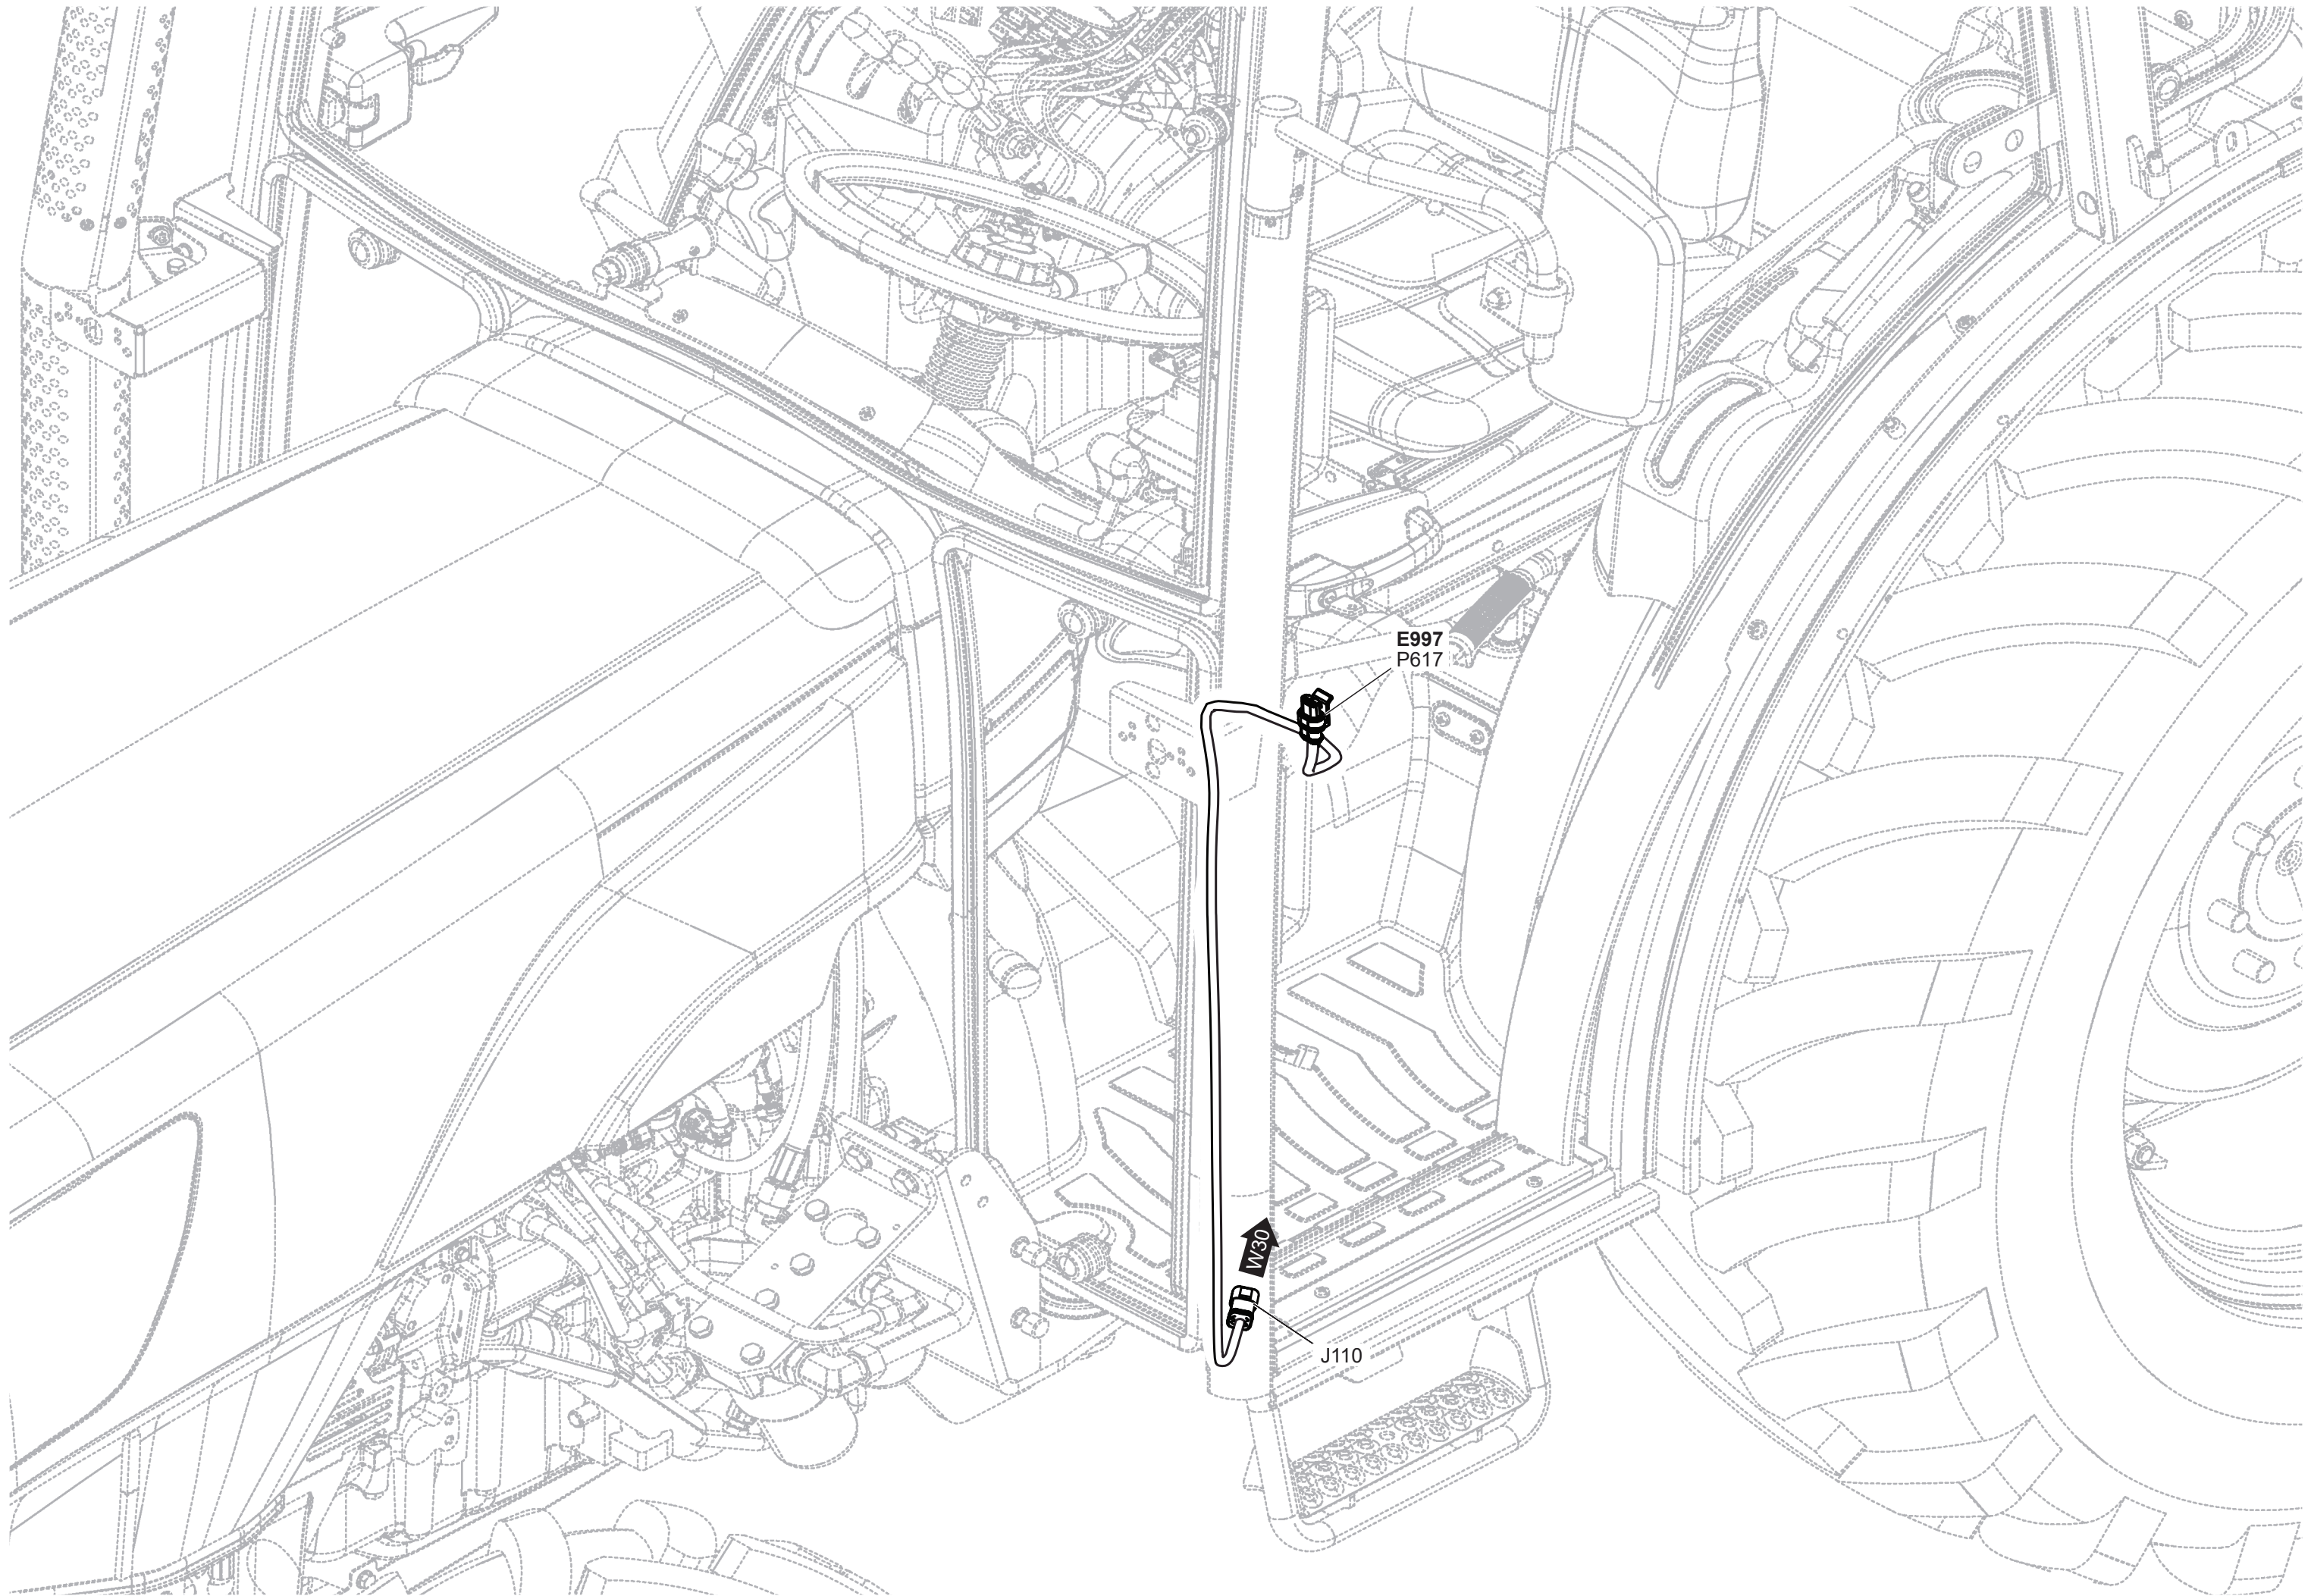



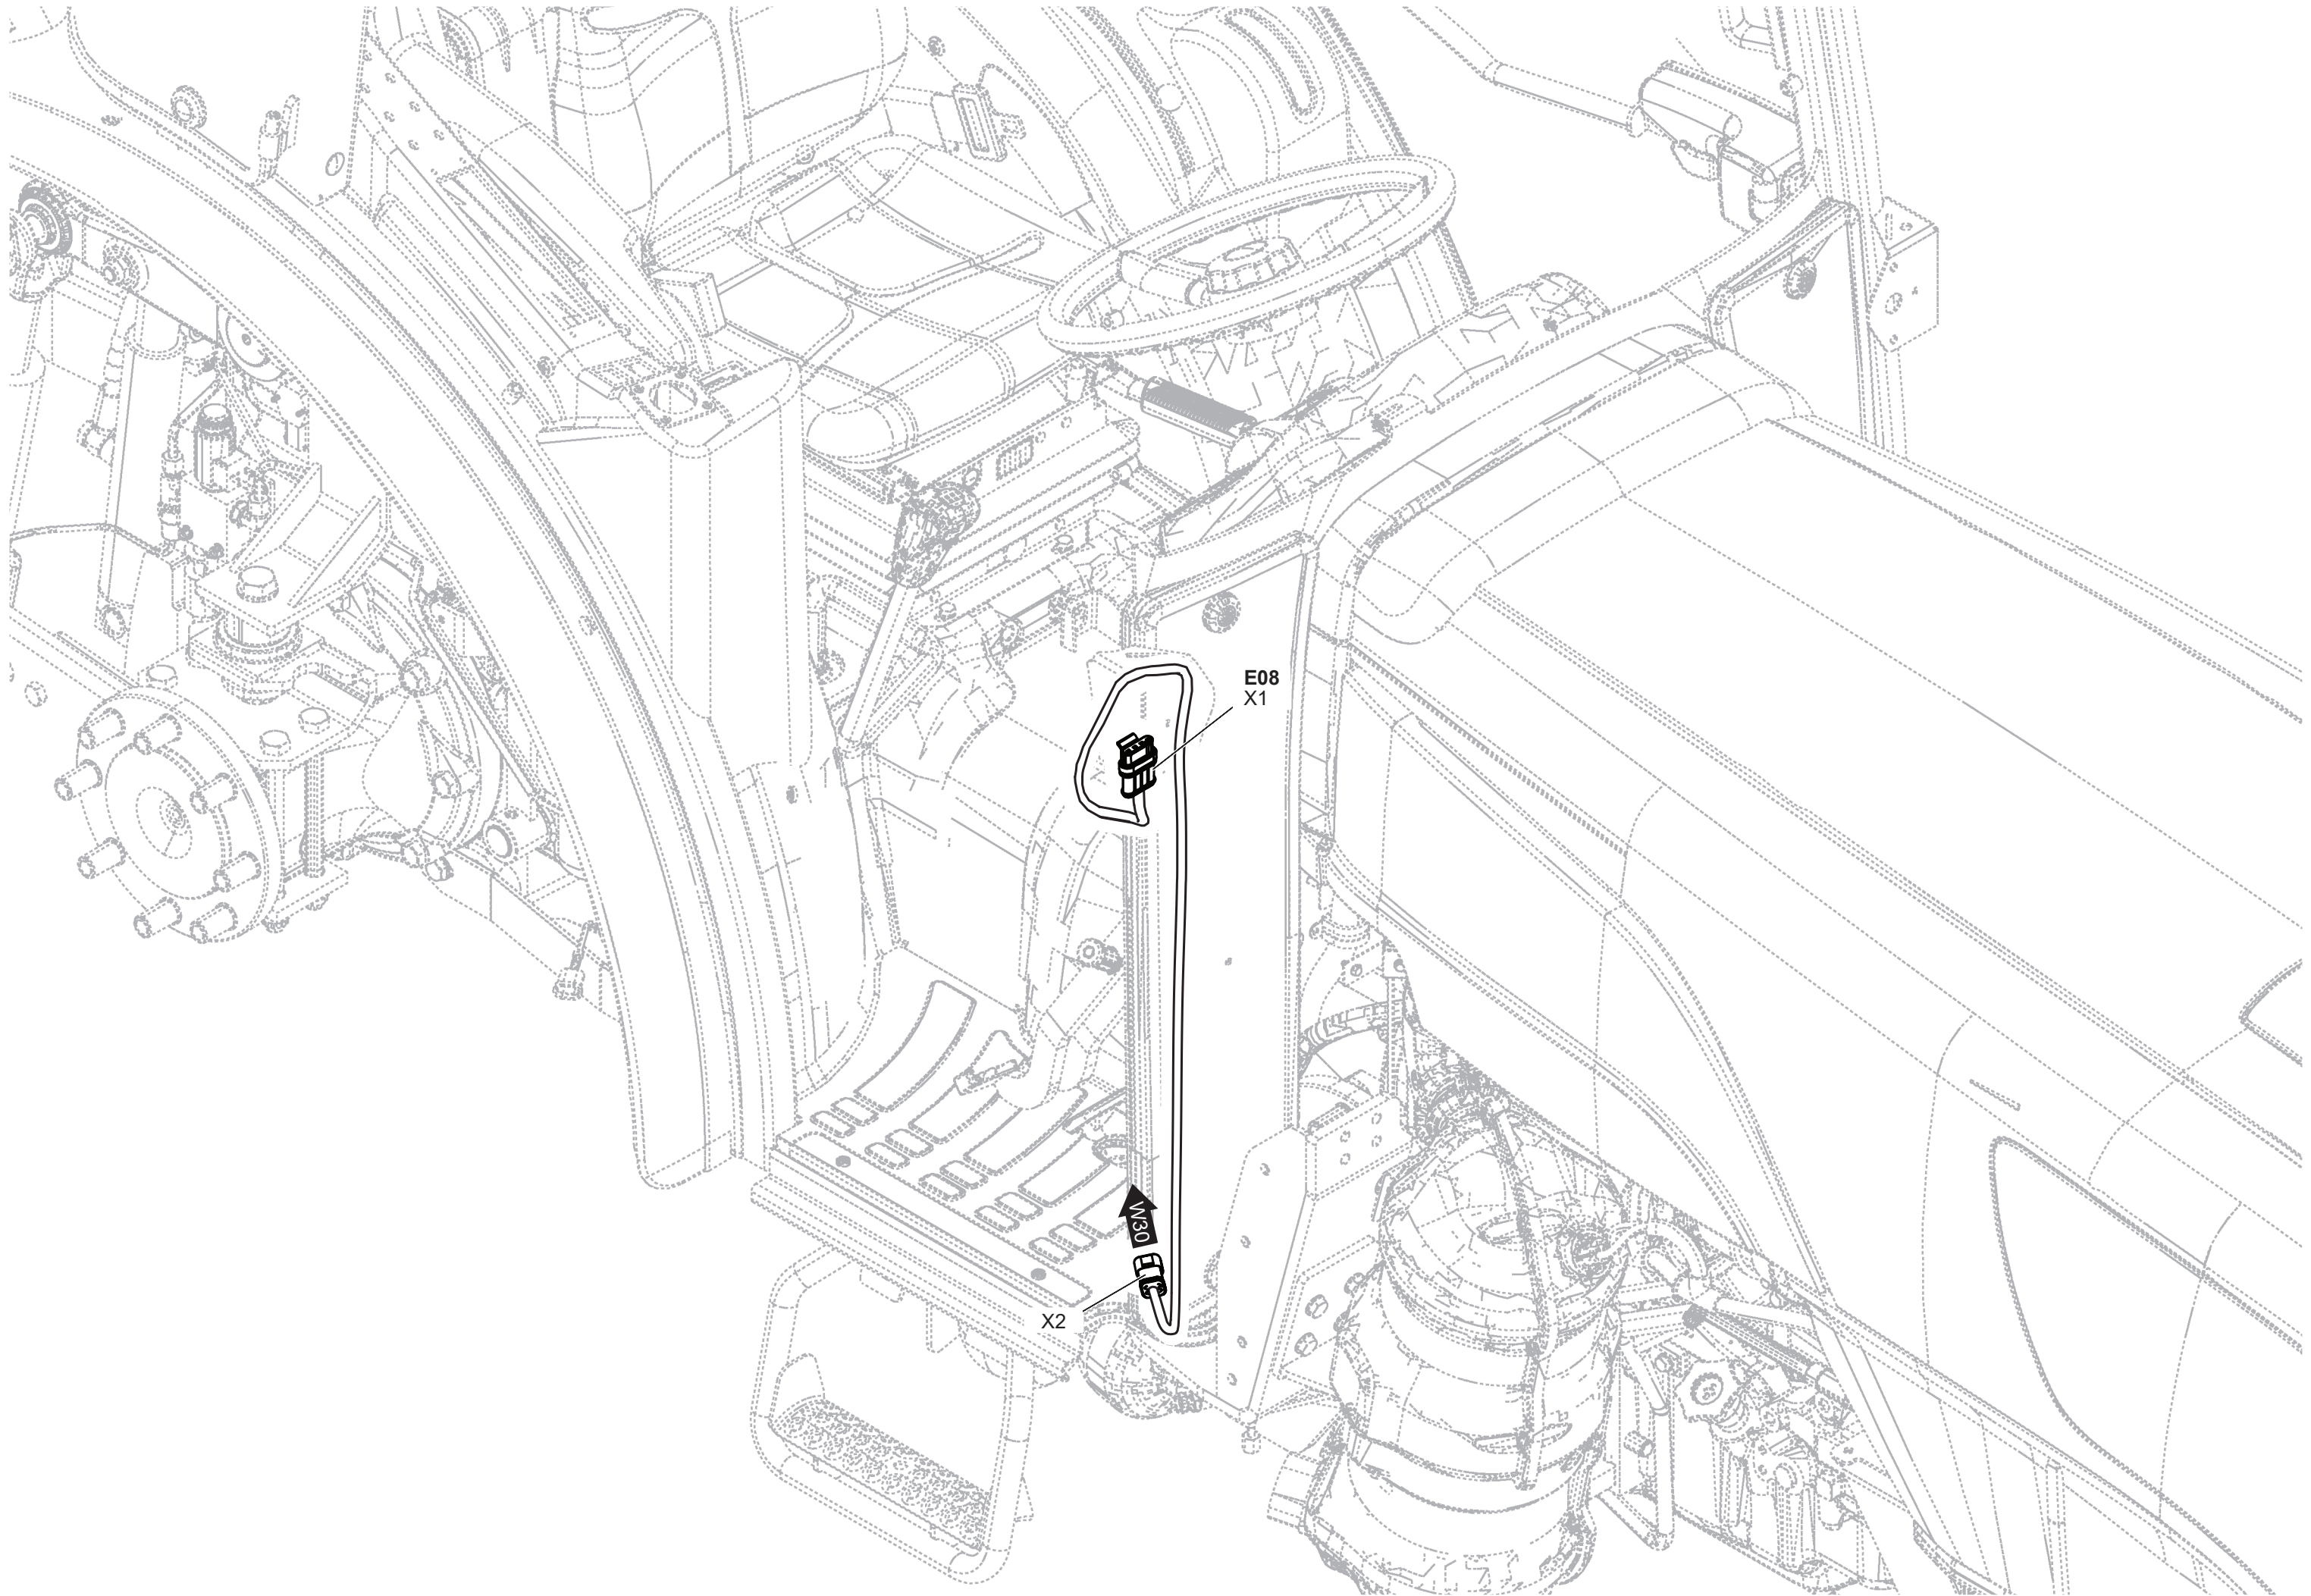


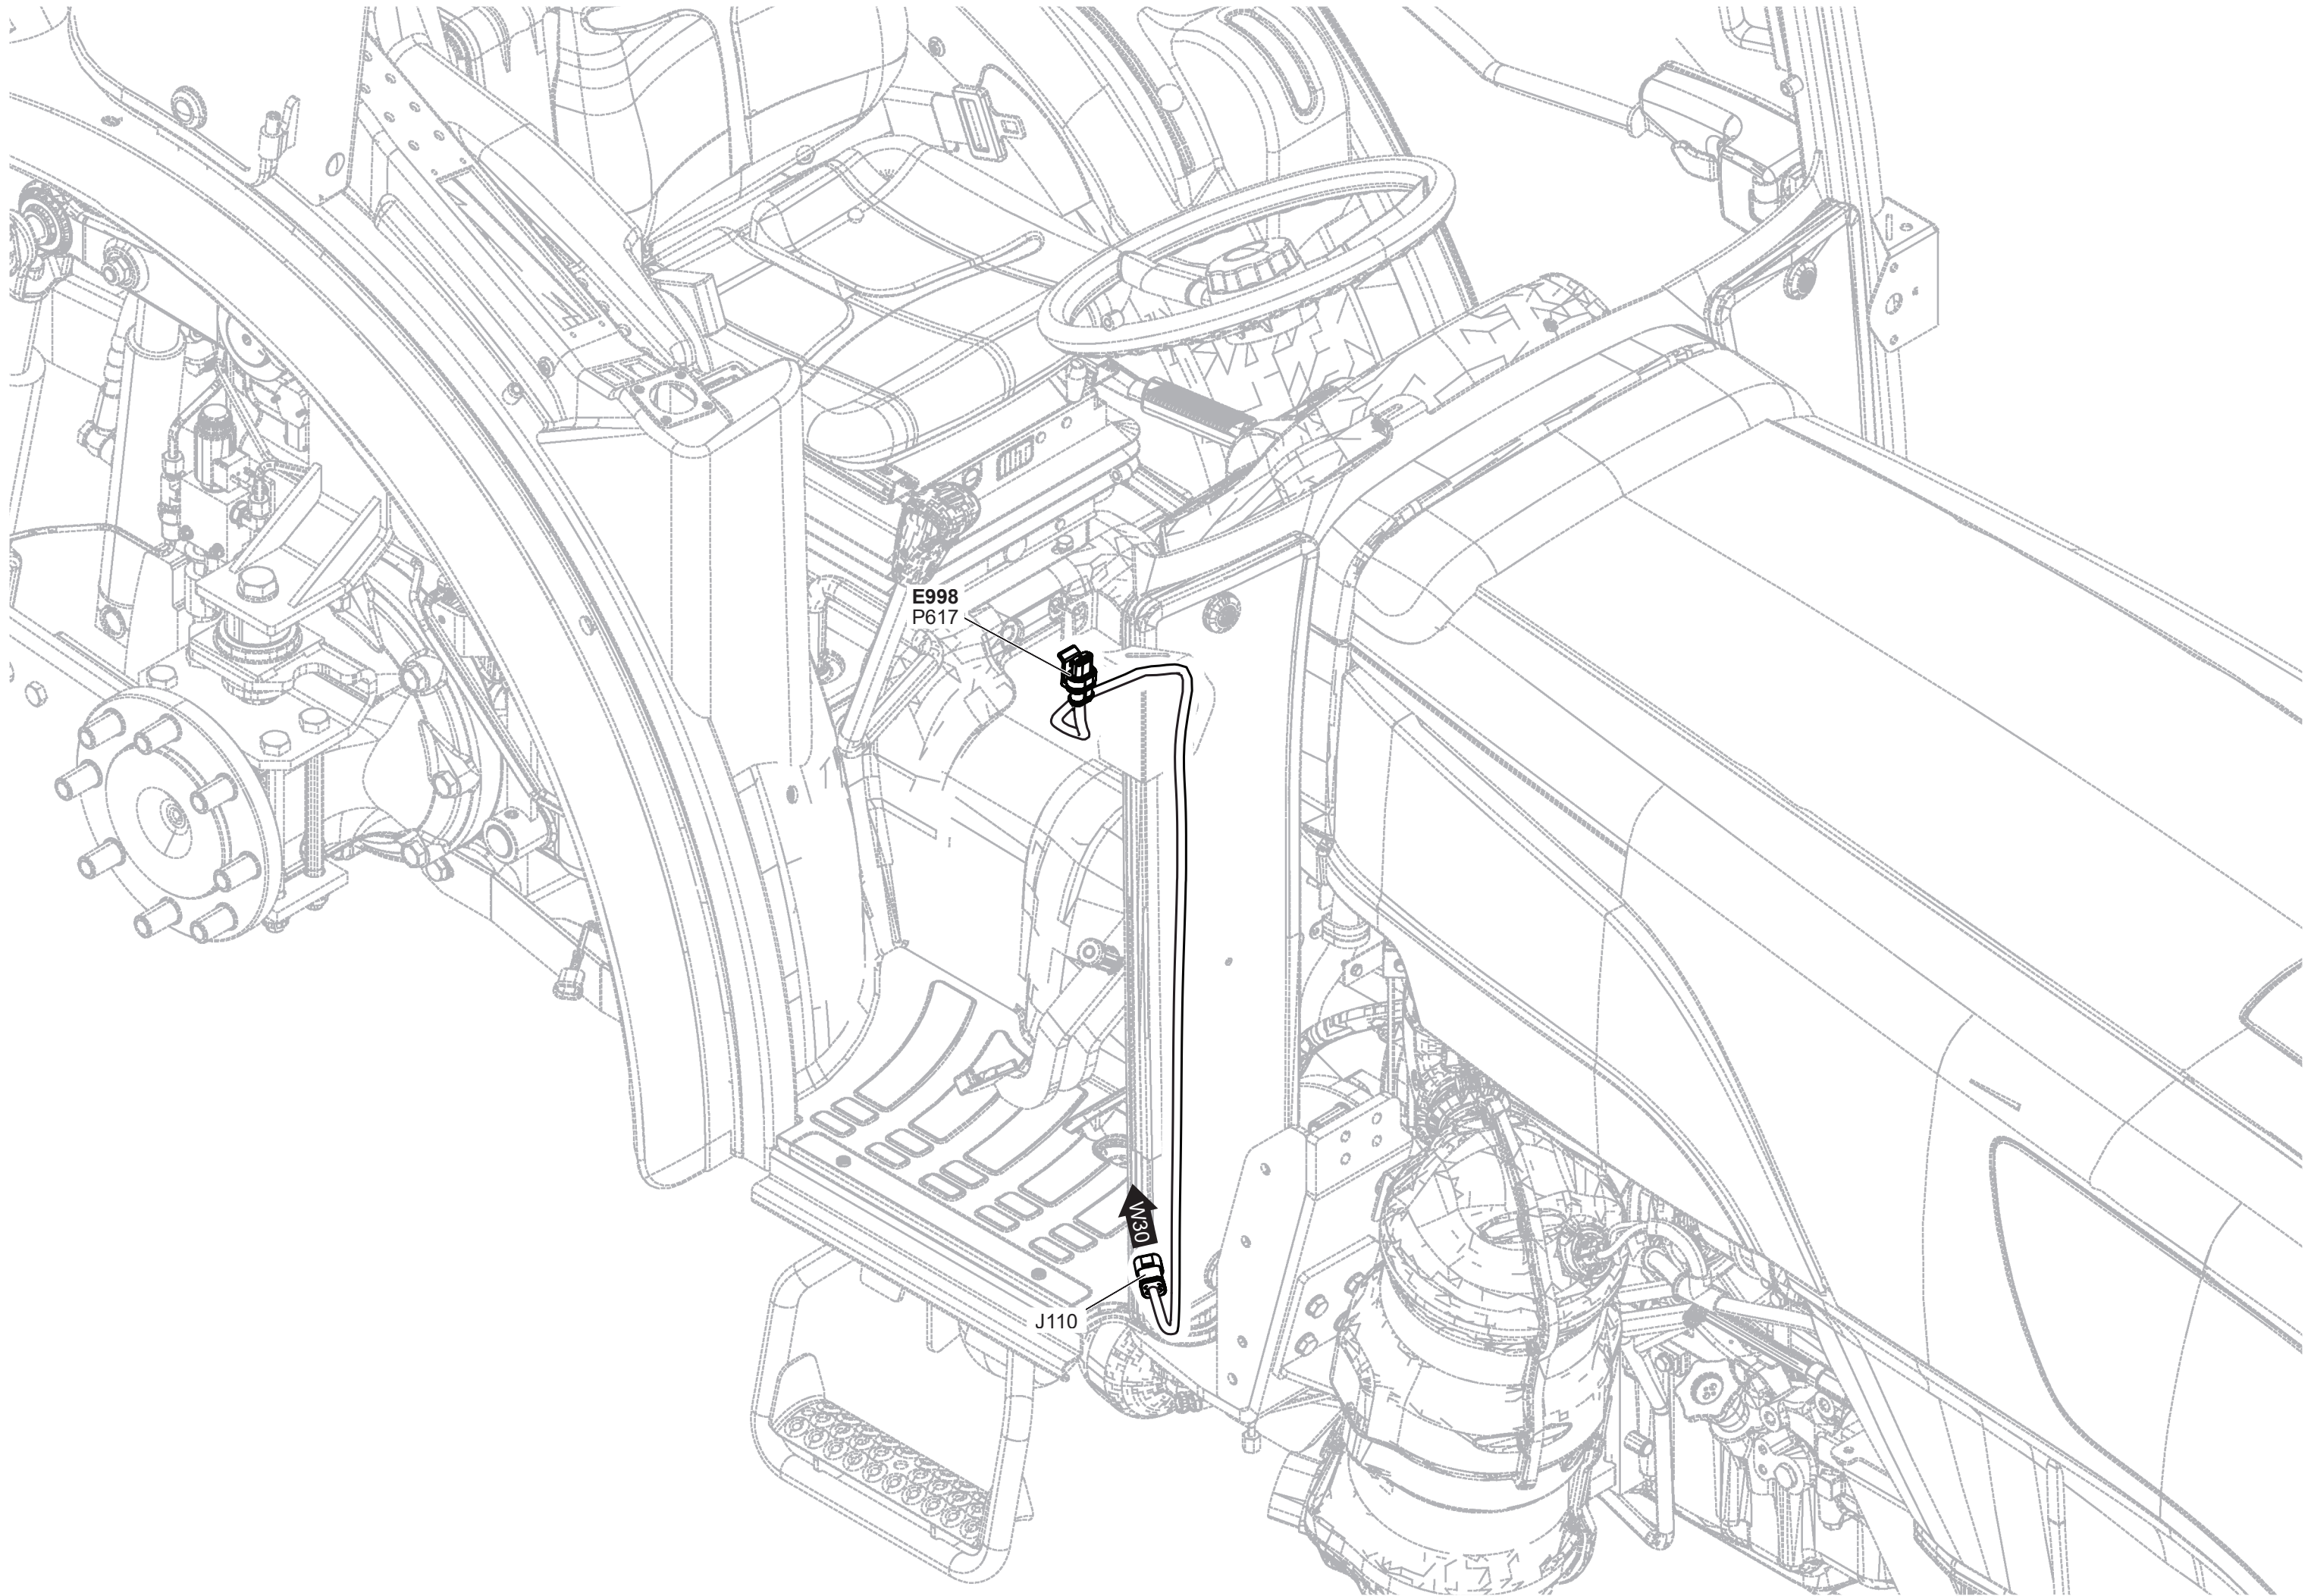


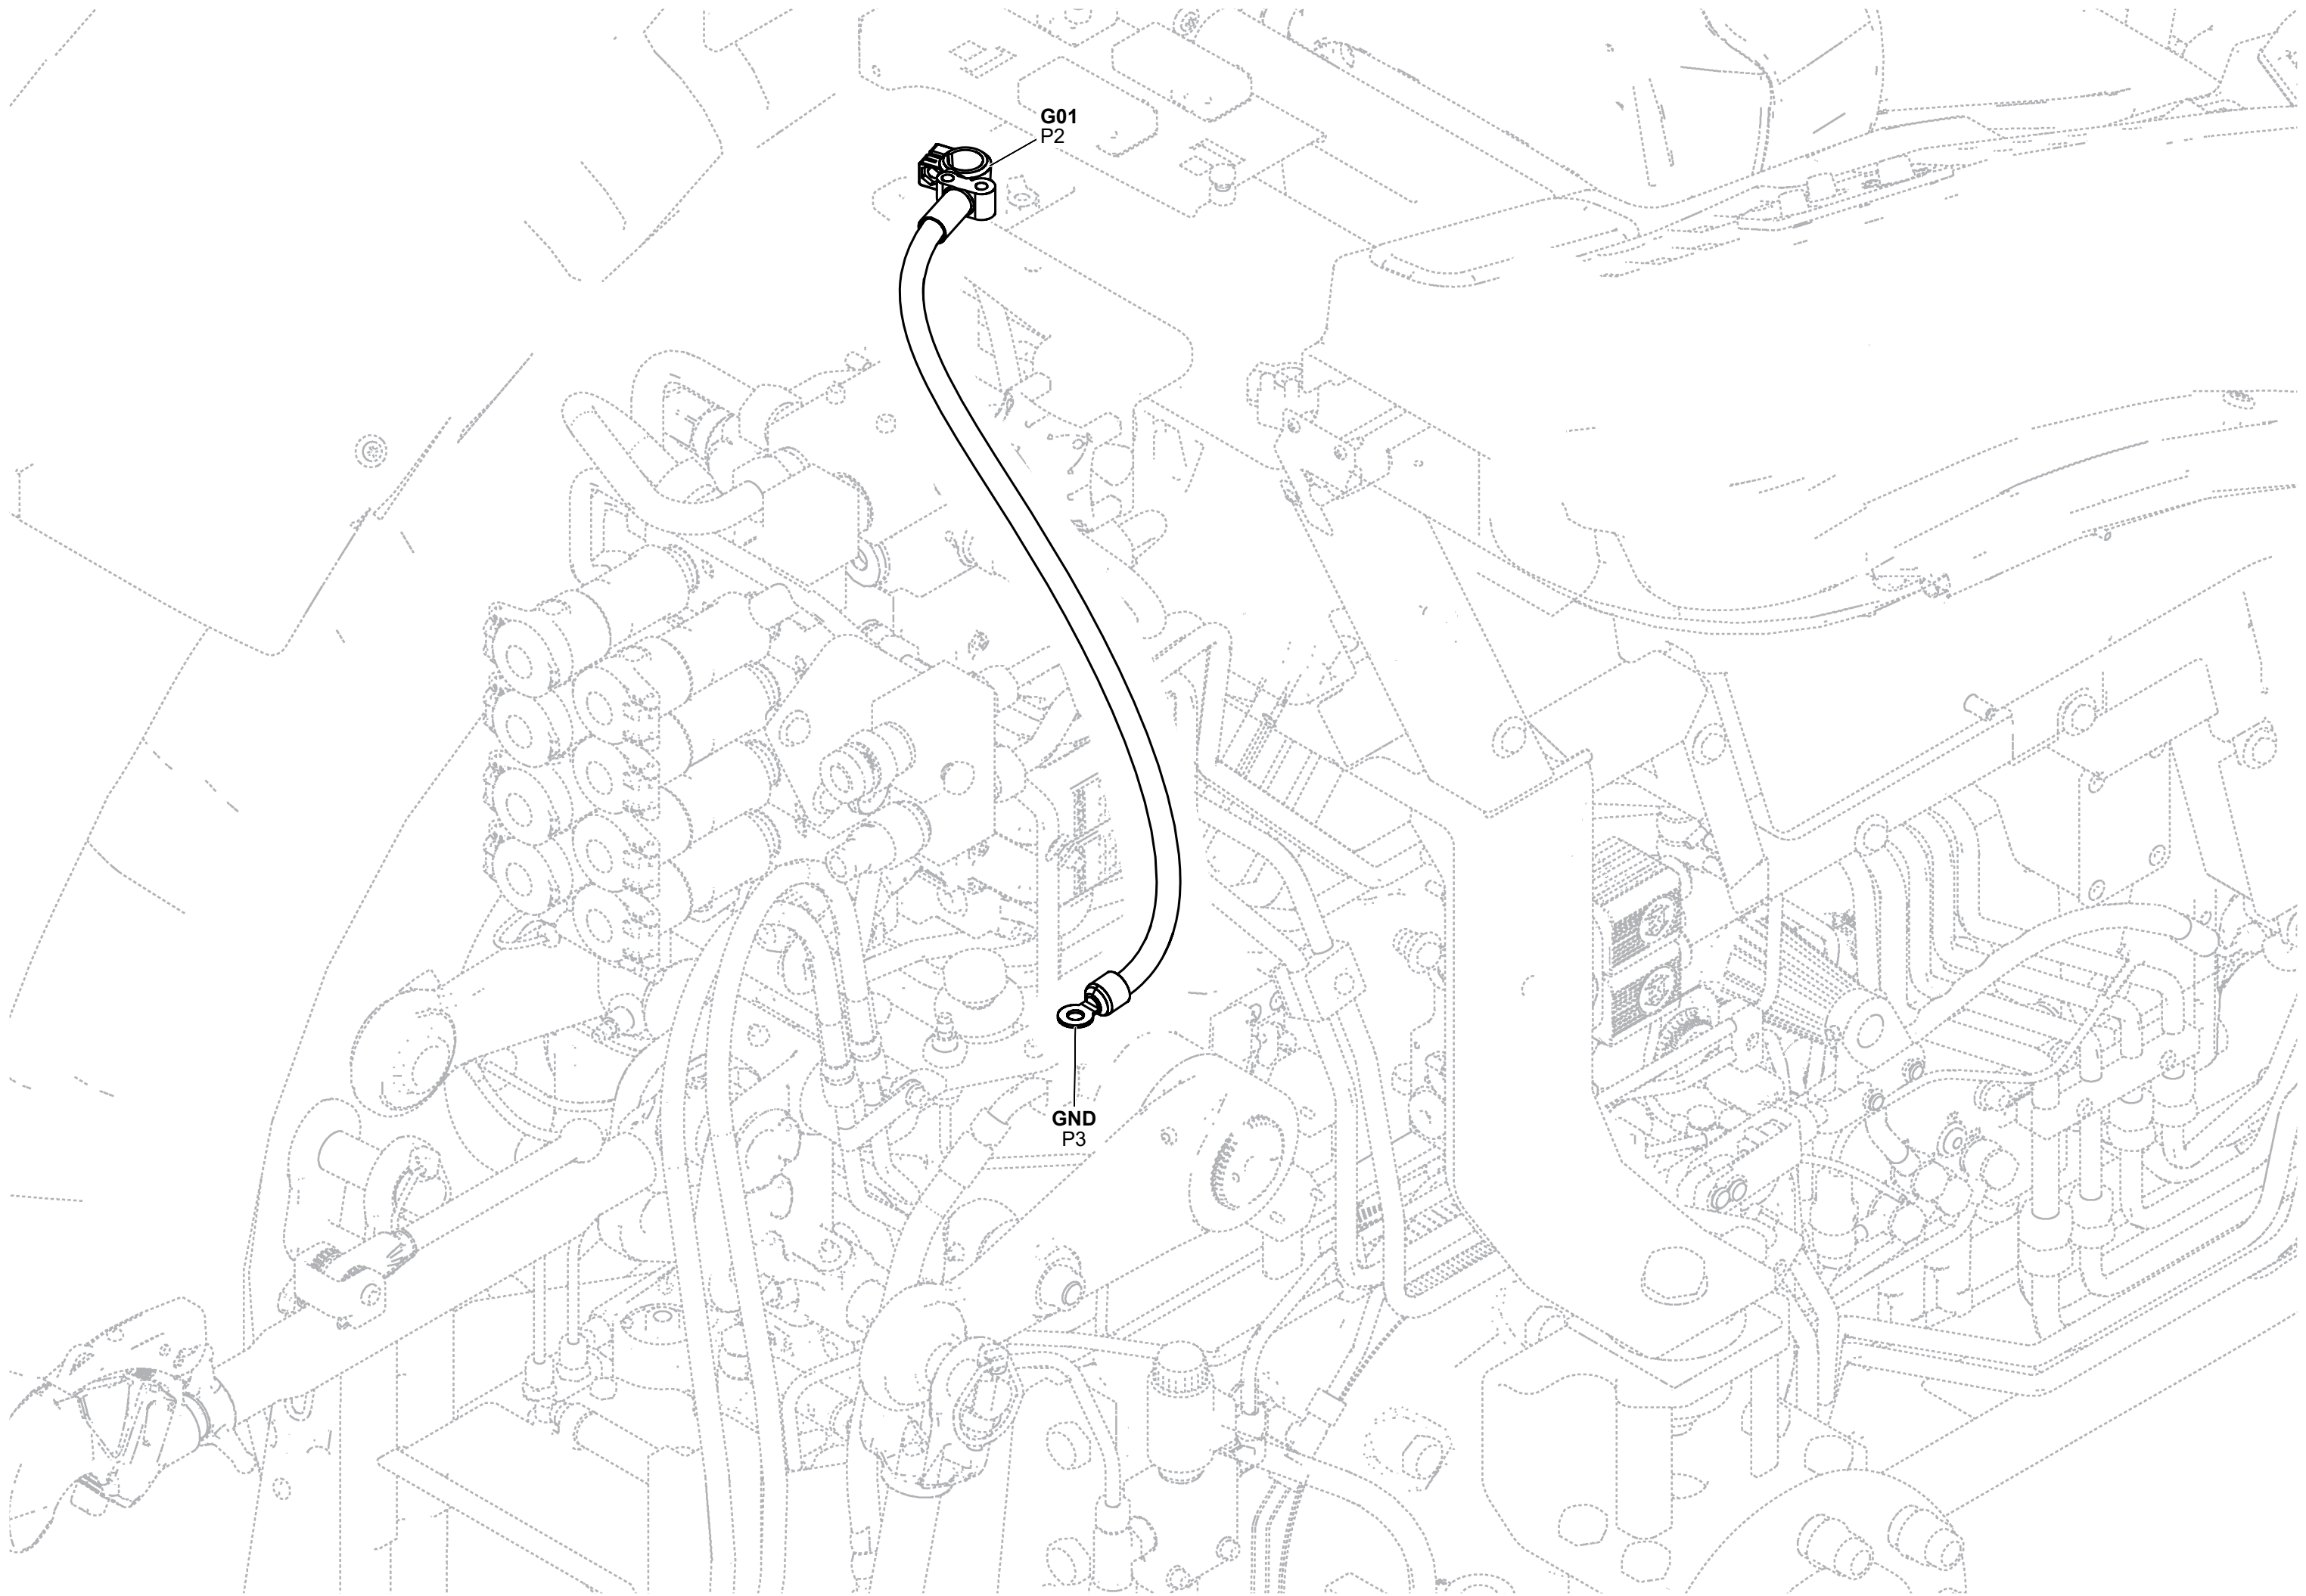


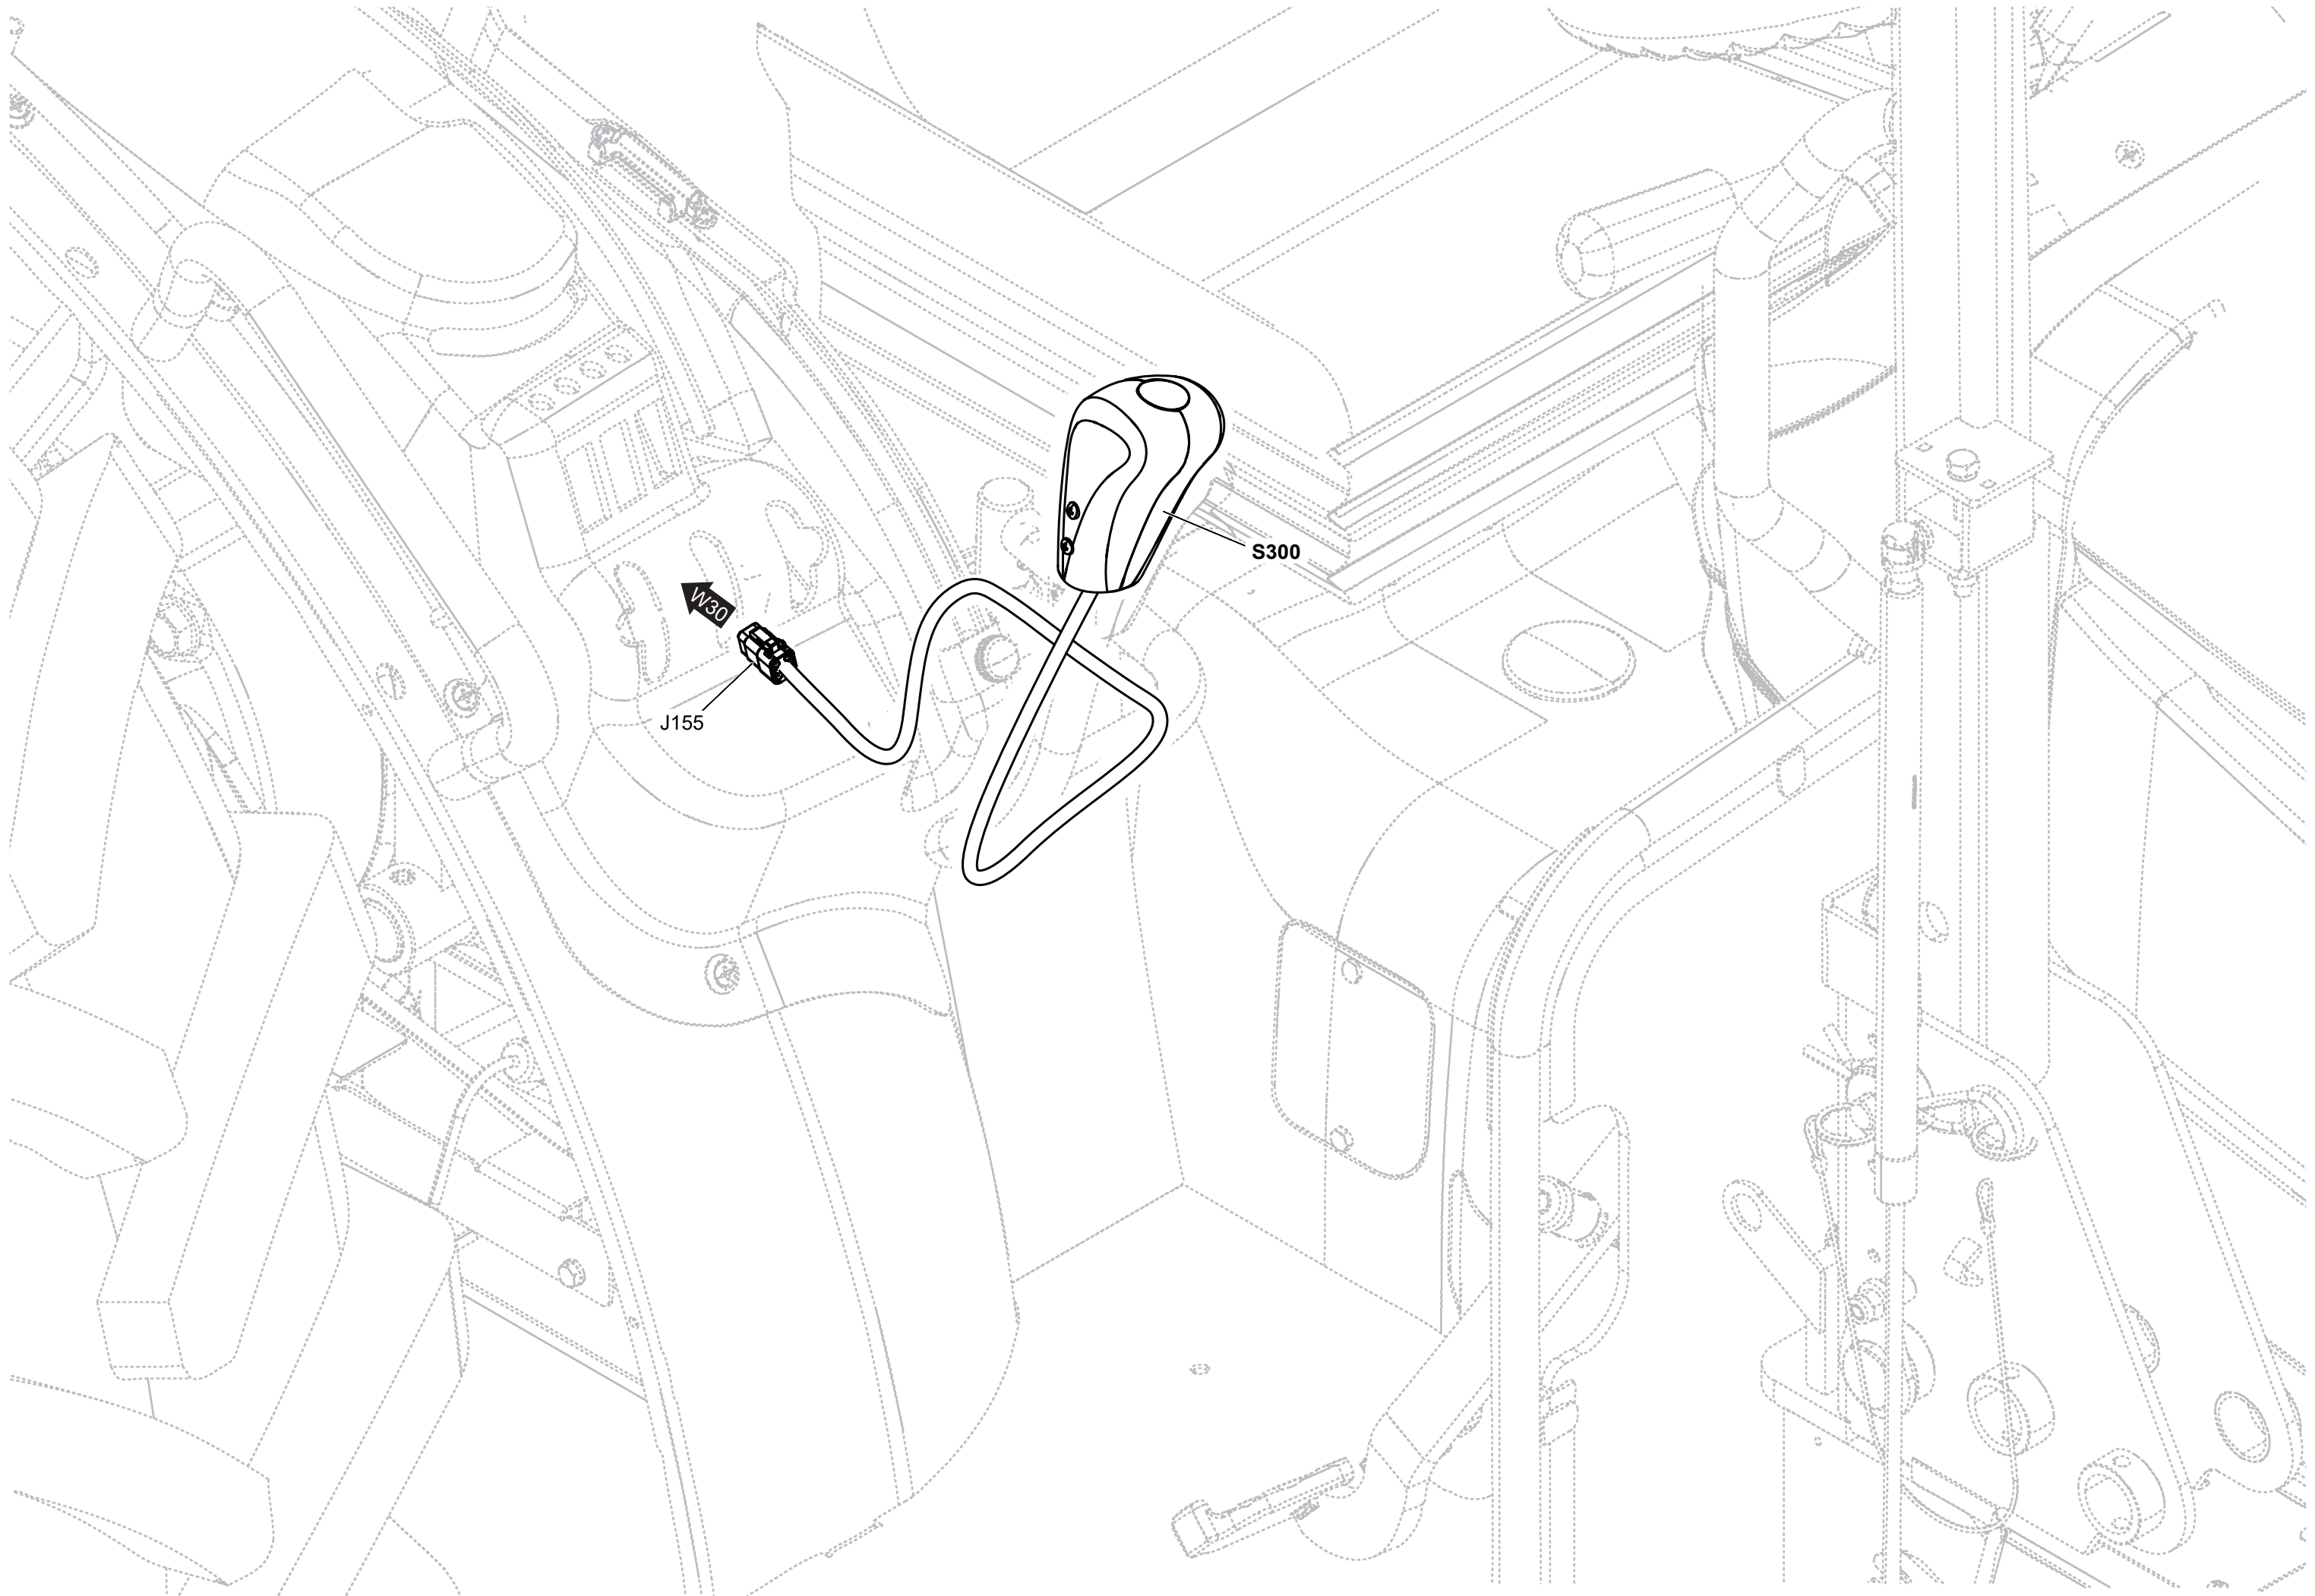


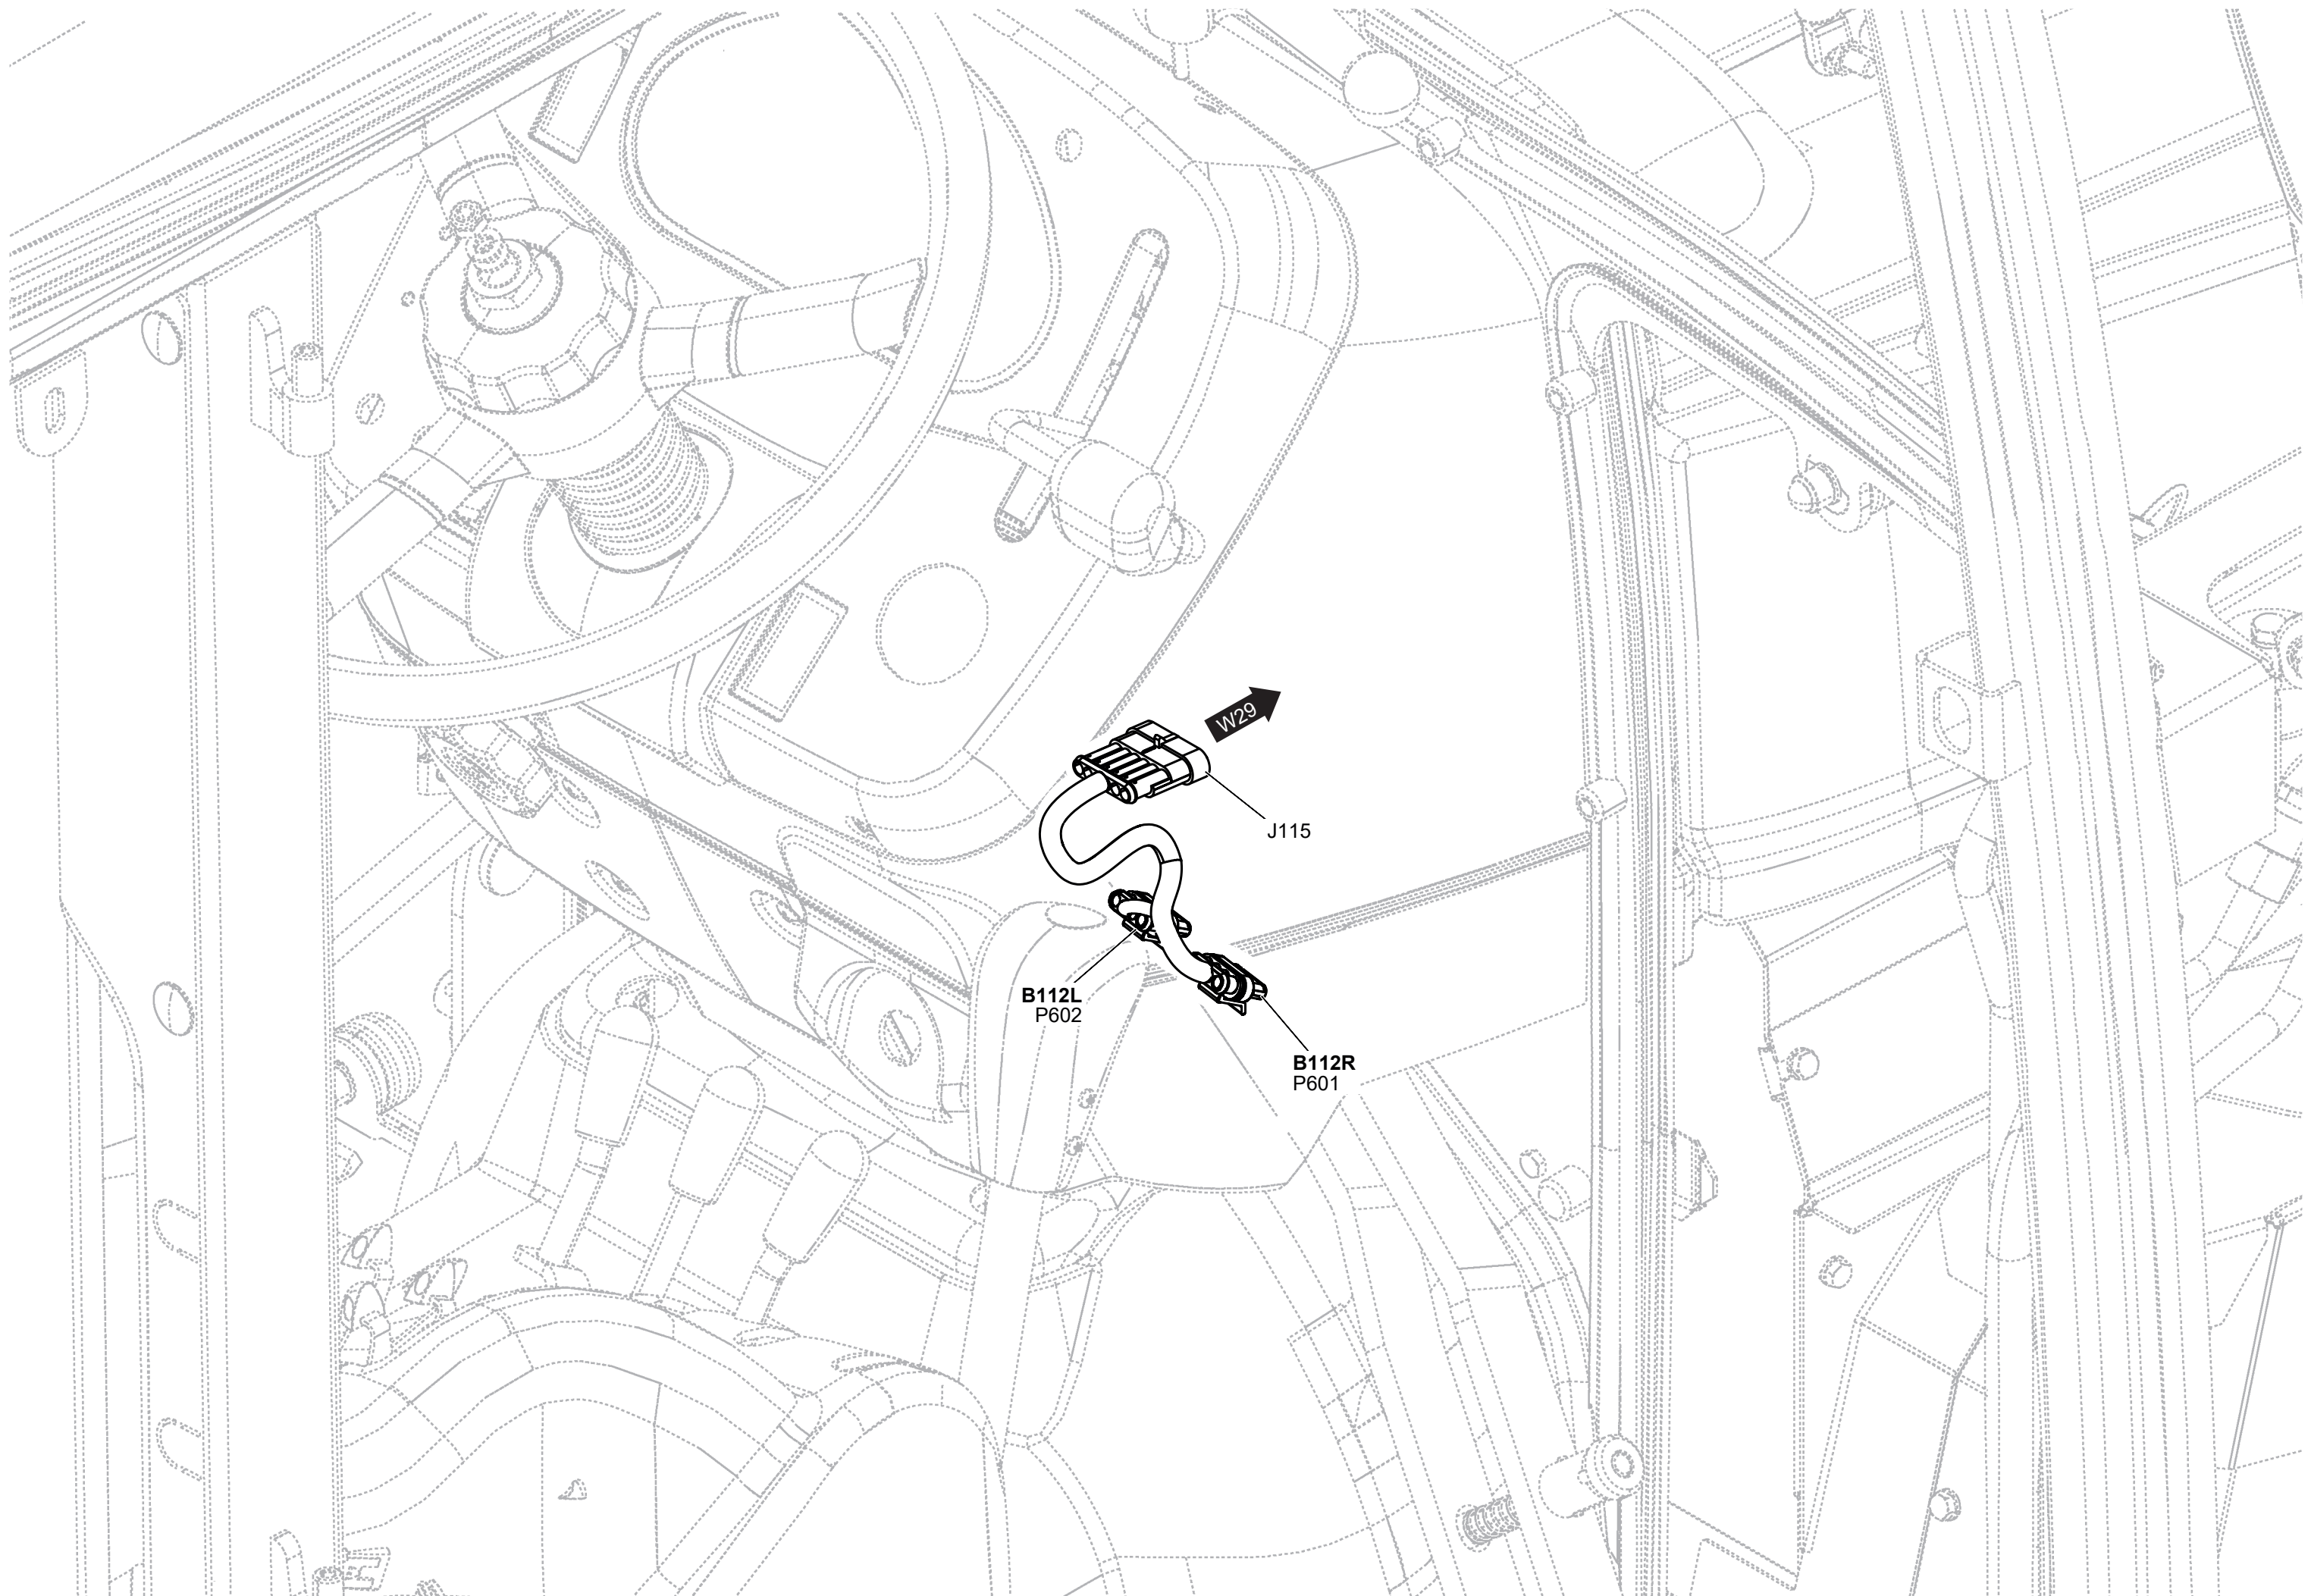

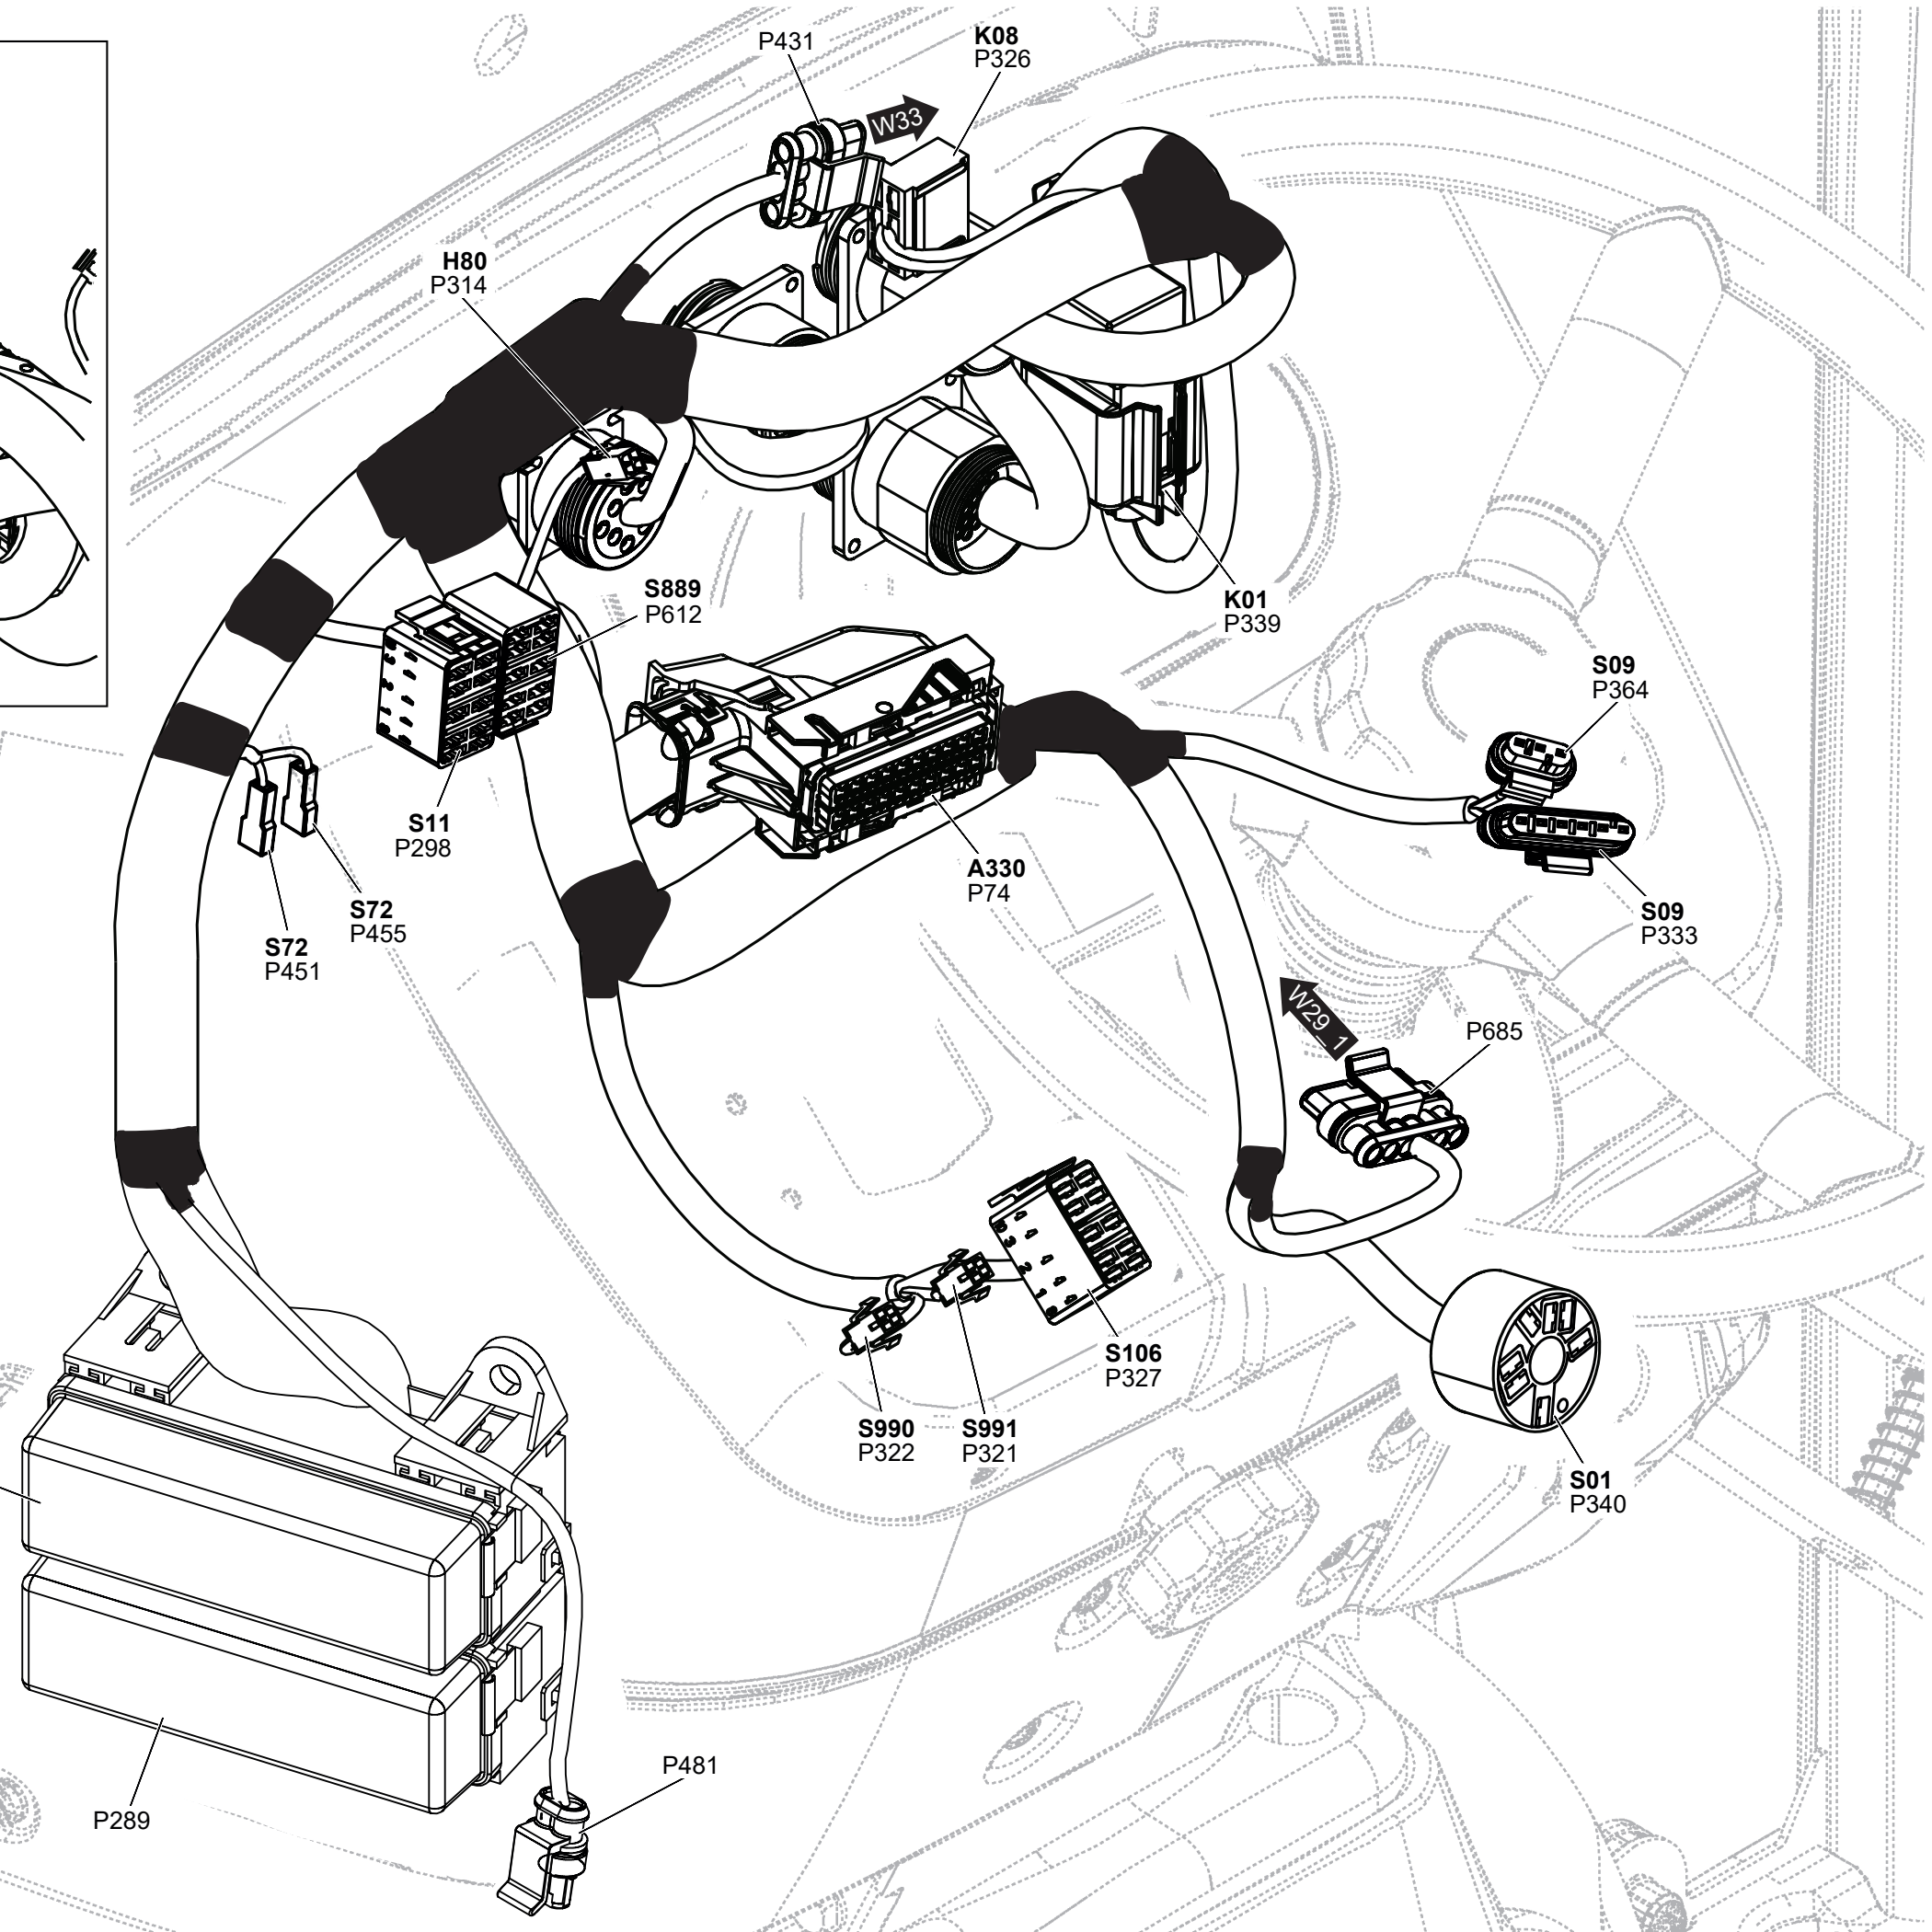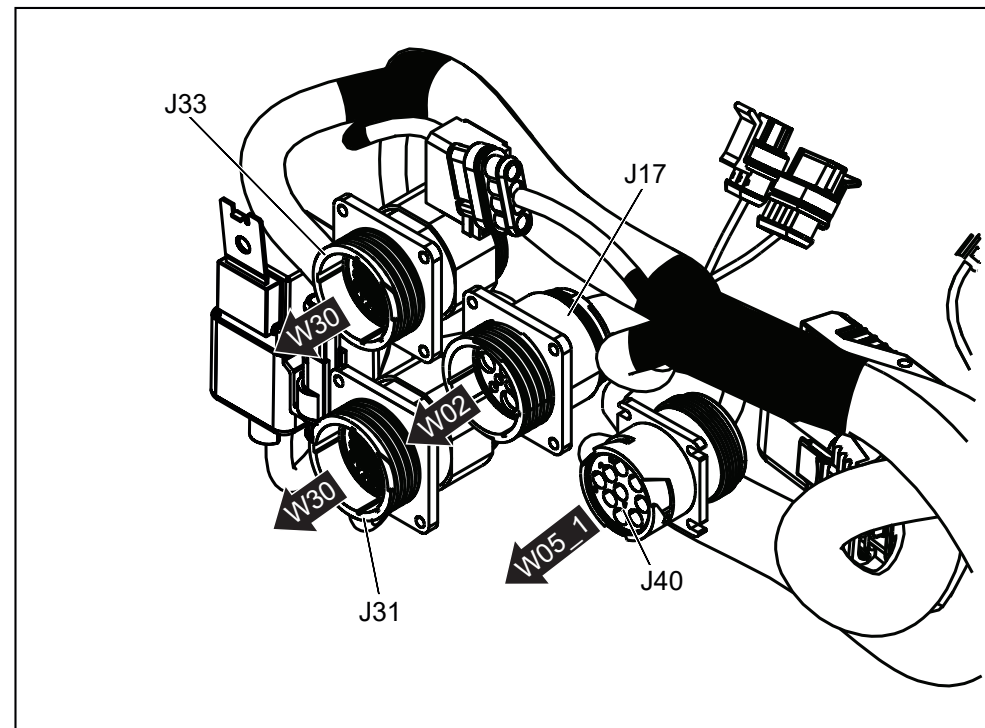

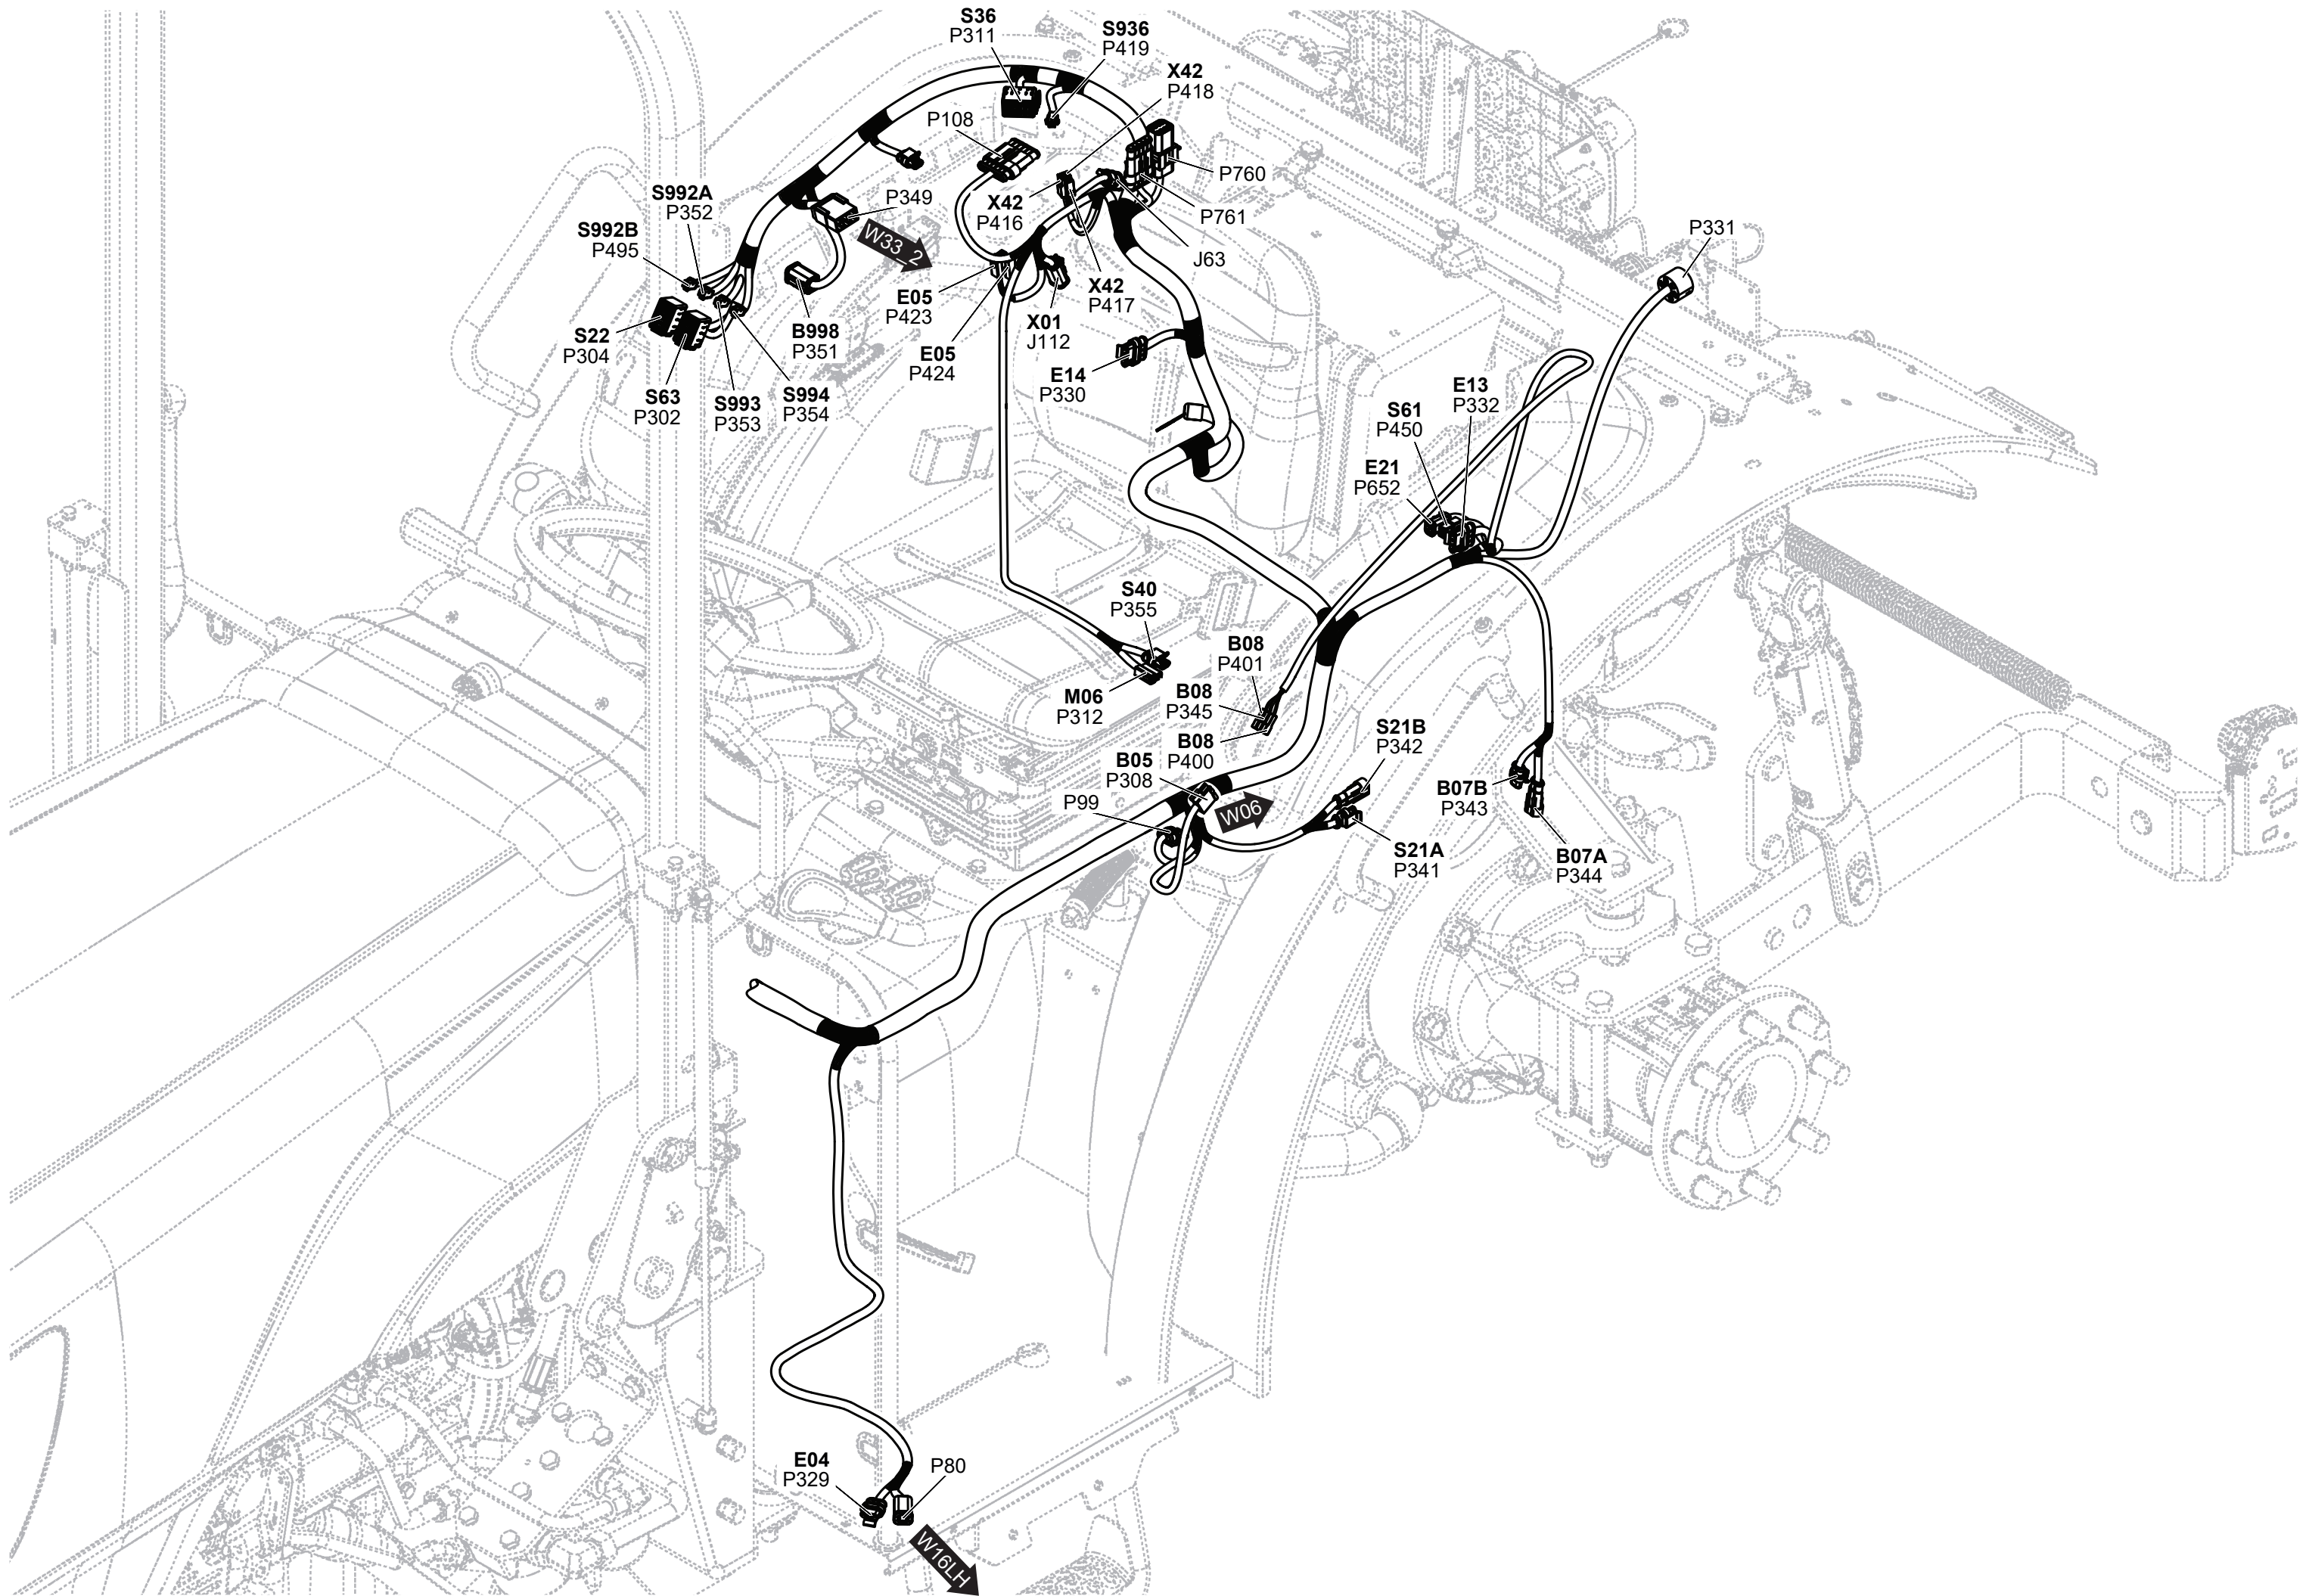

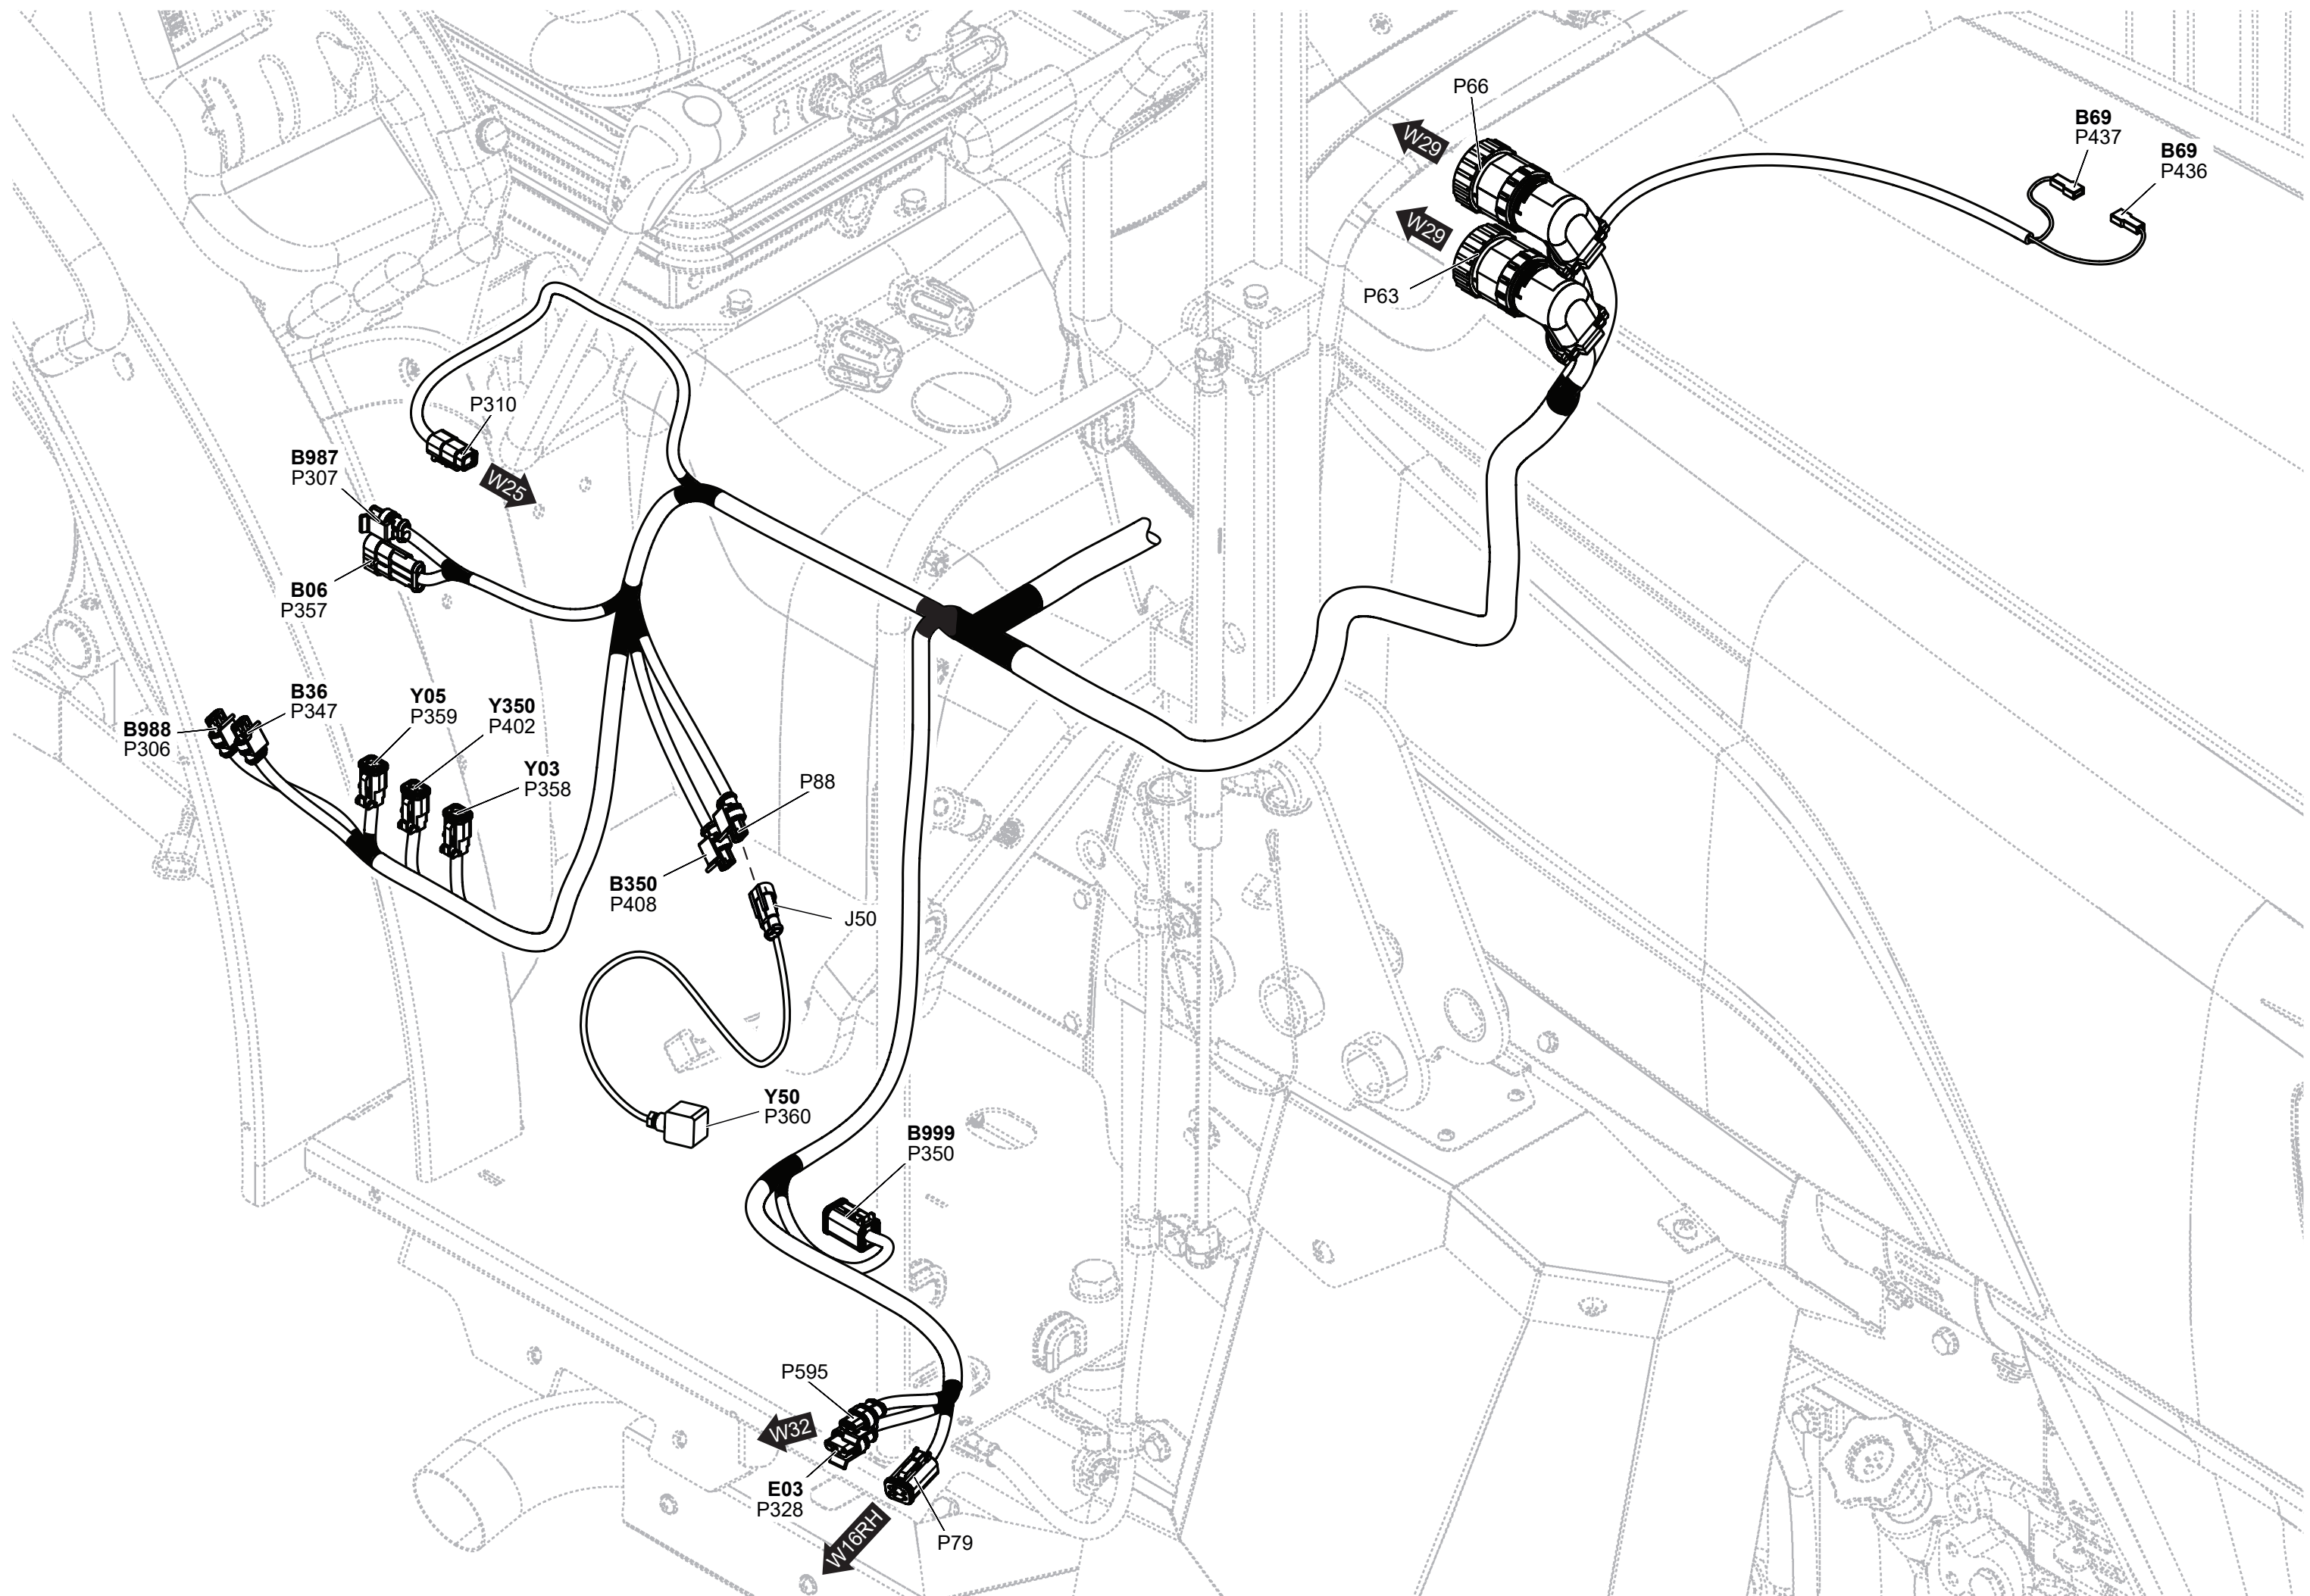

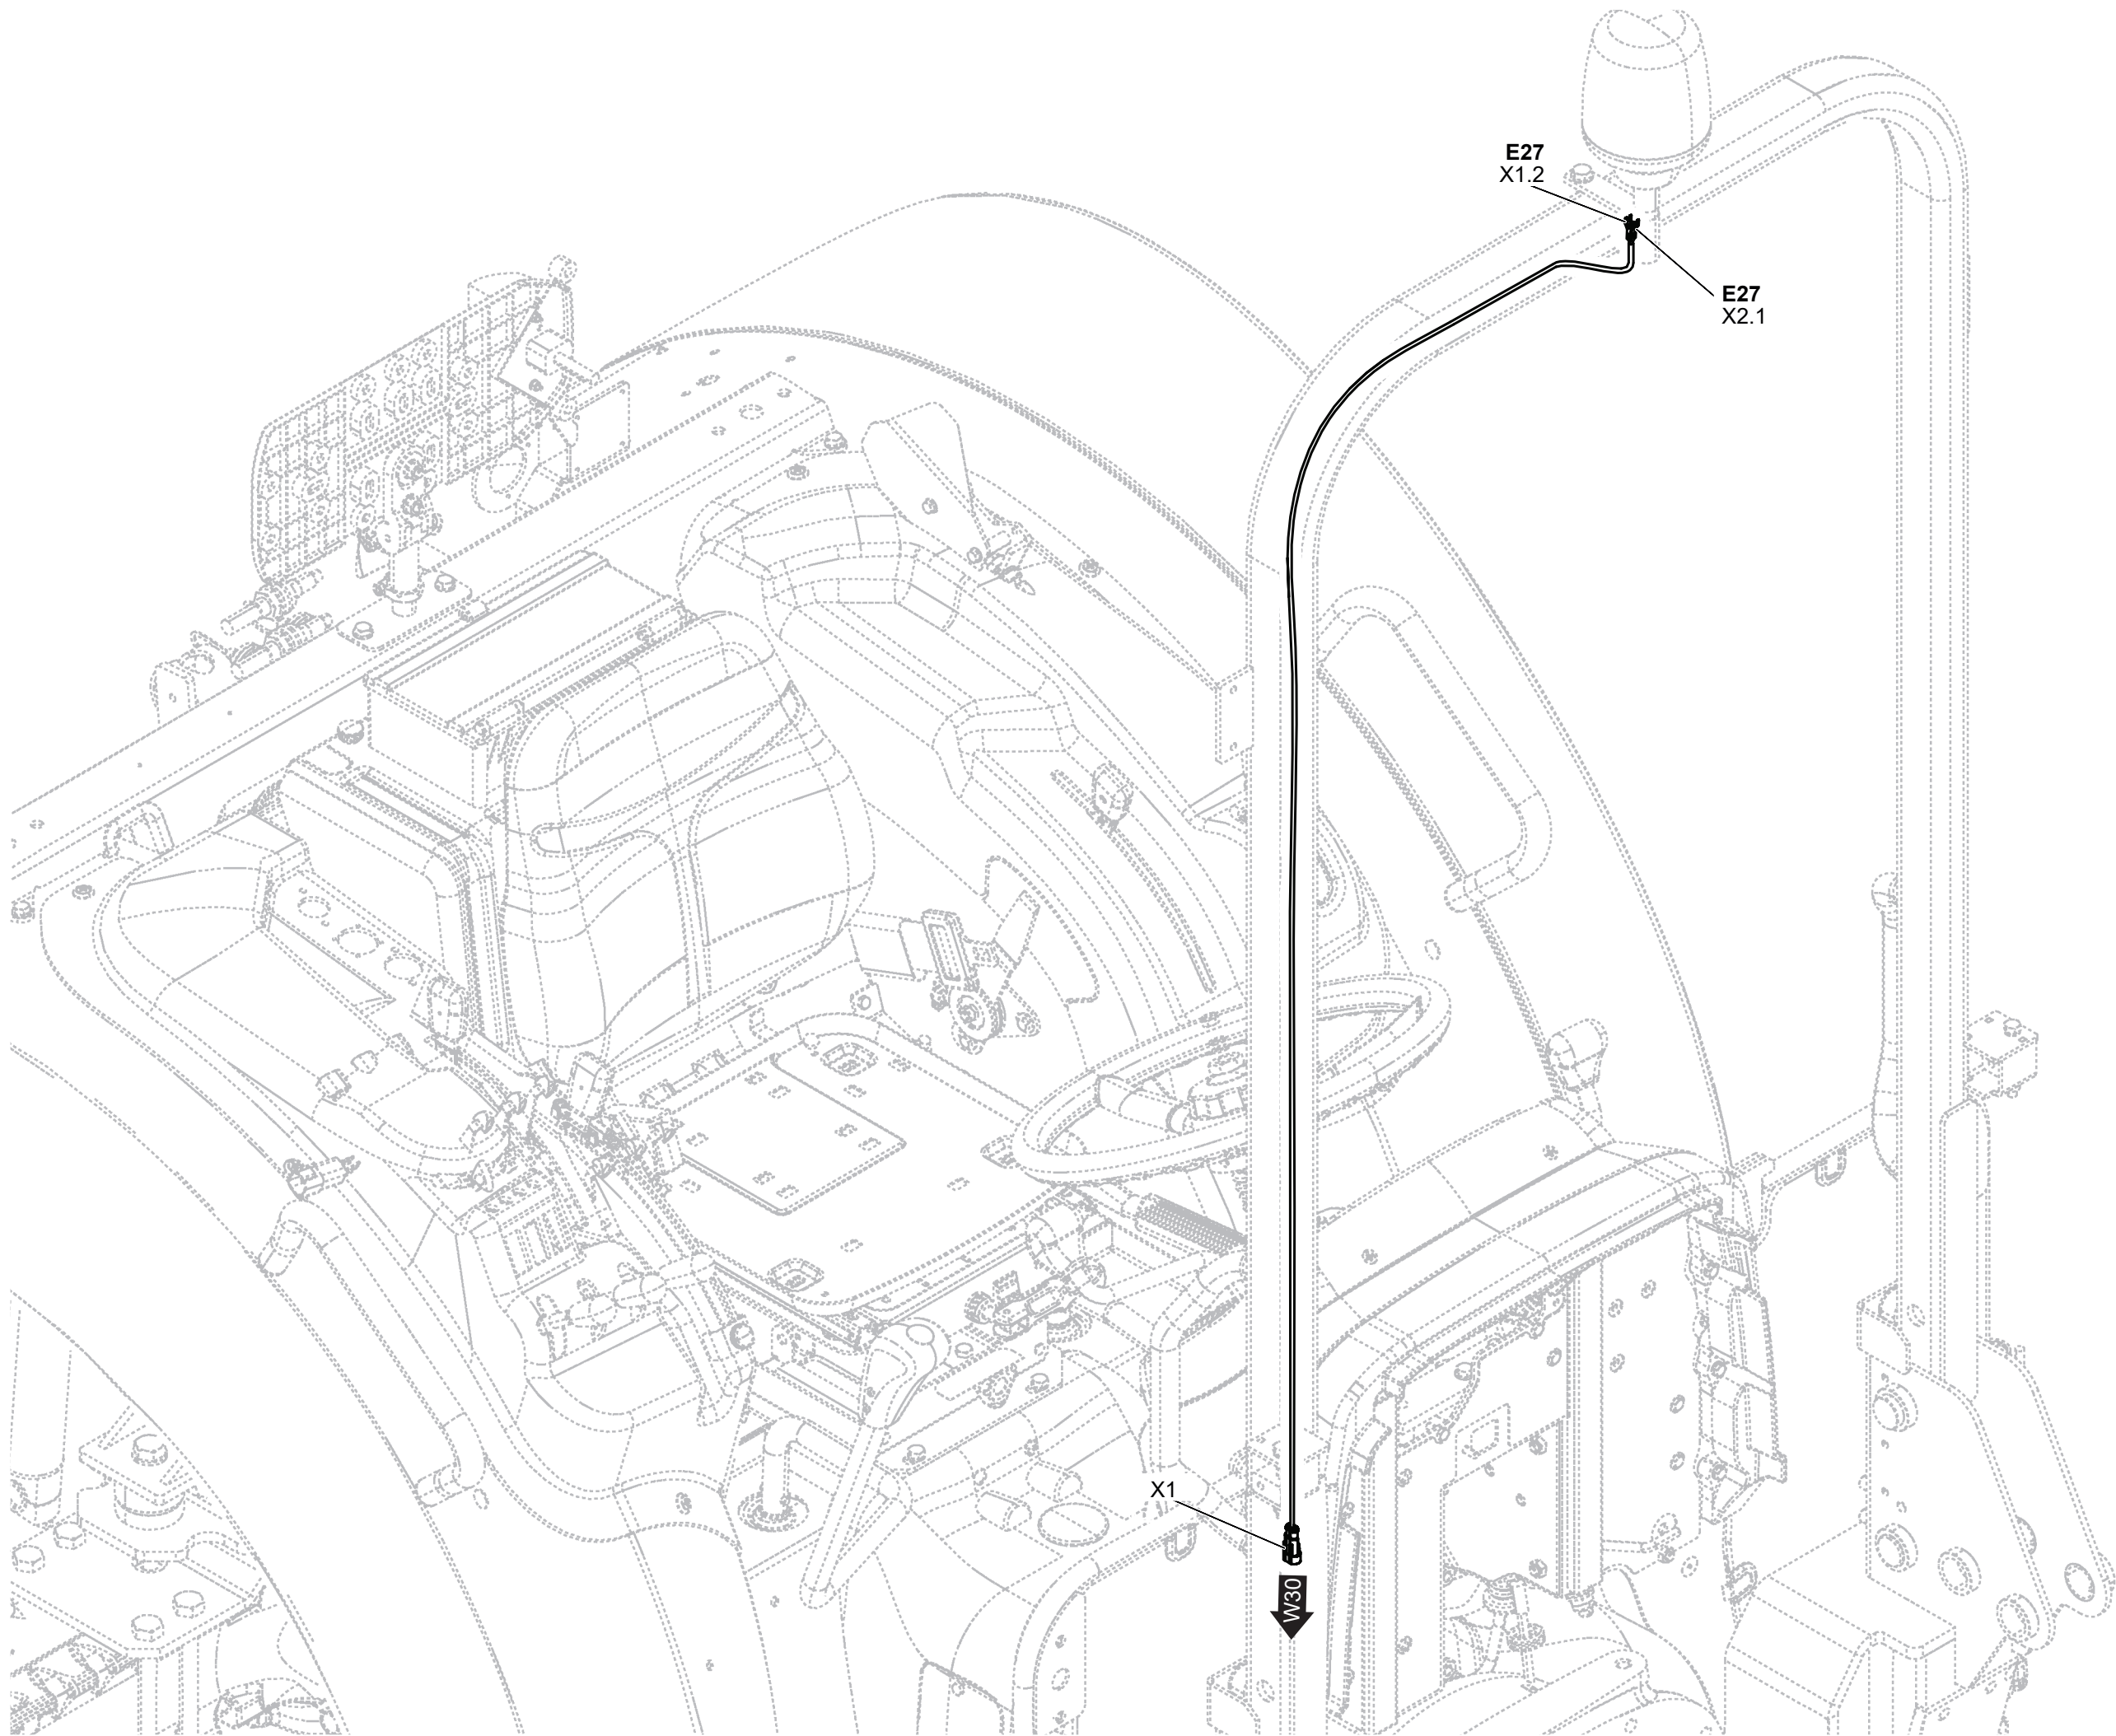



E27
X1.2


E27
X2.1


X1

W30

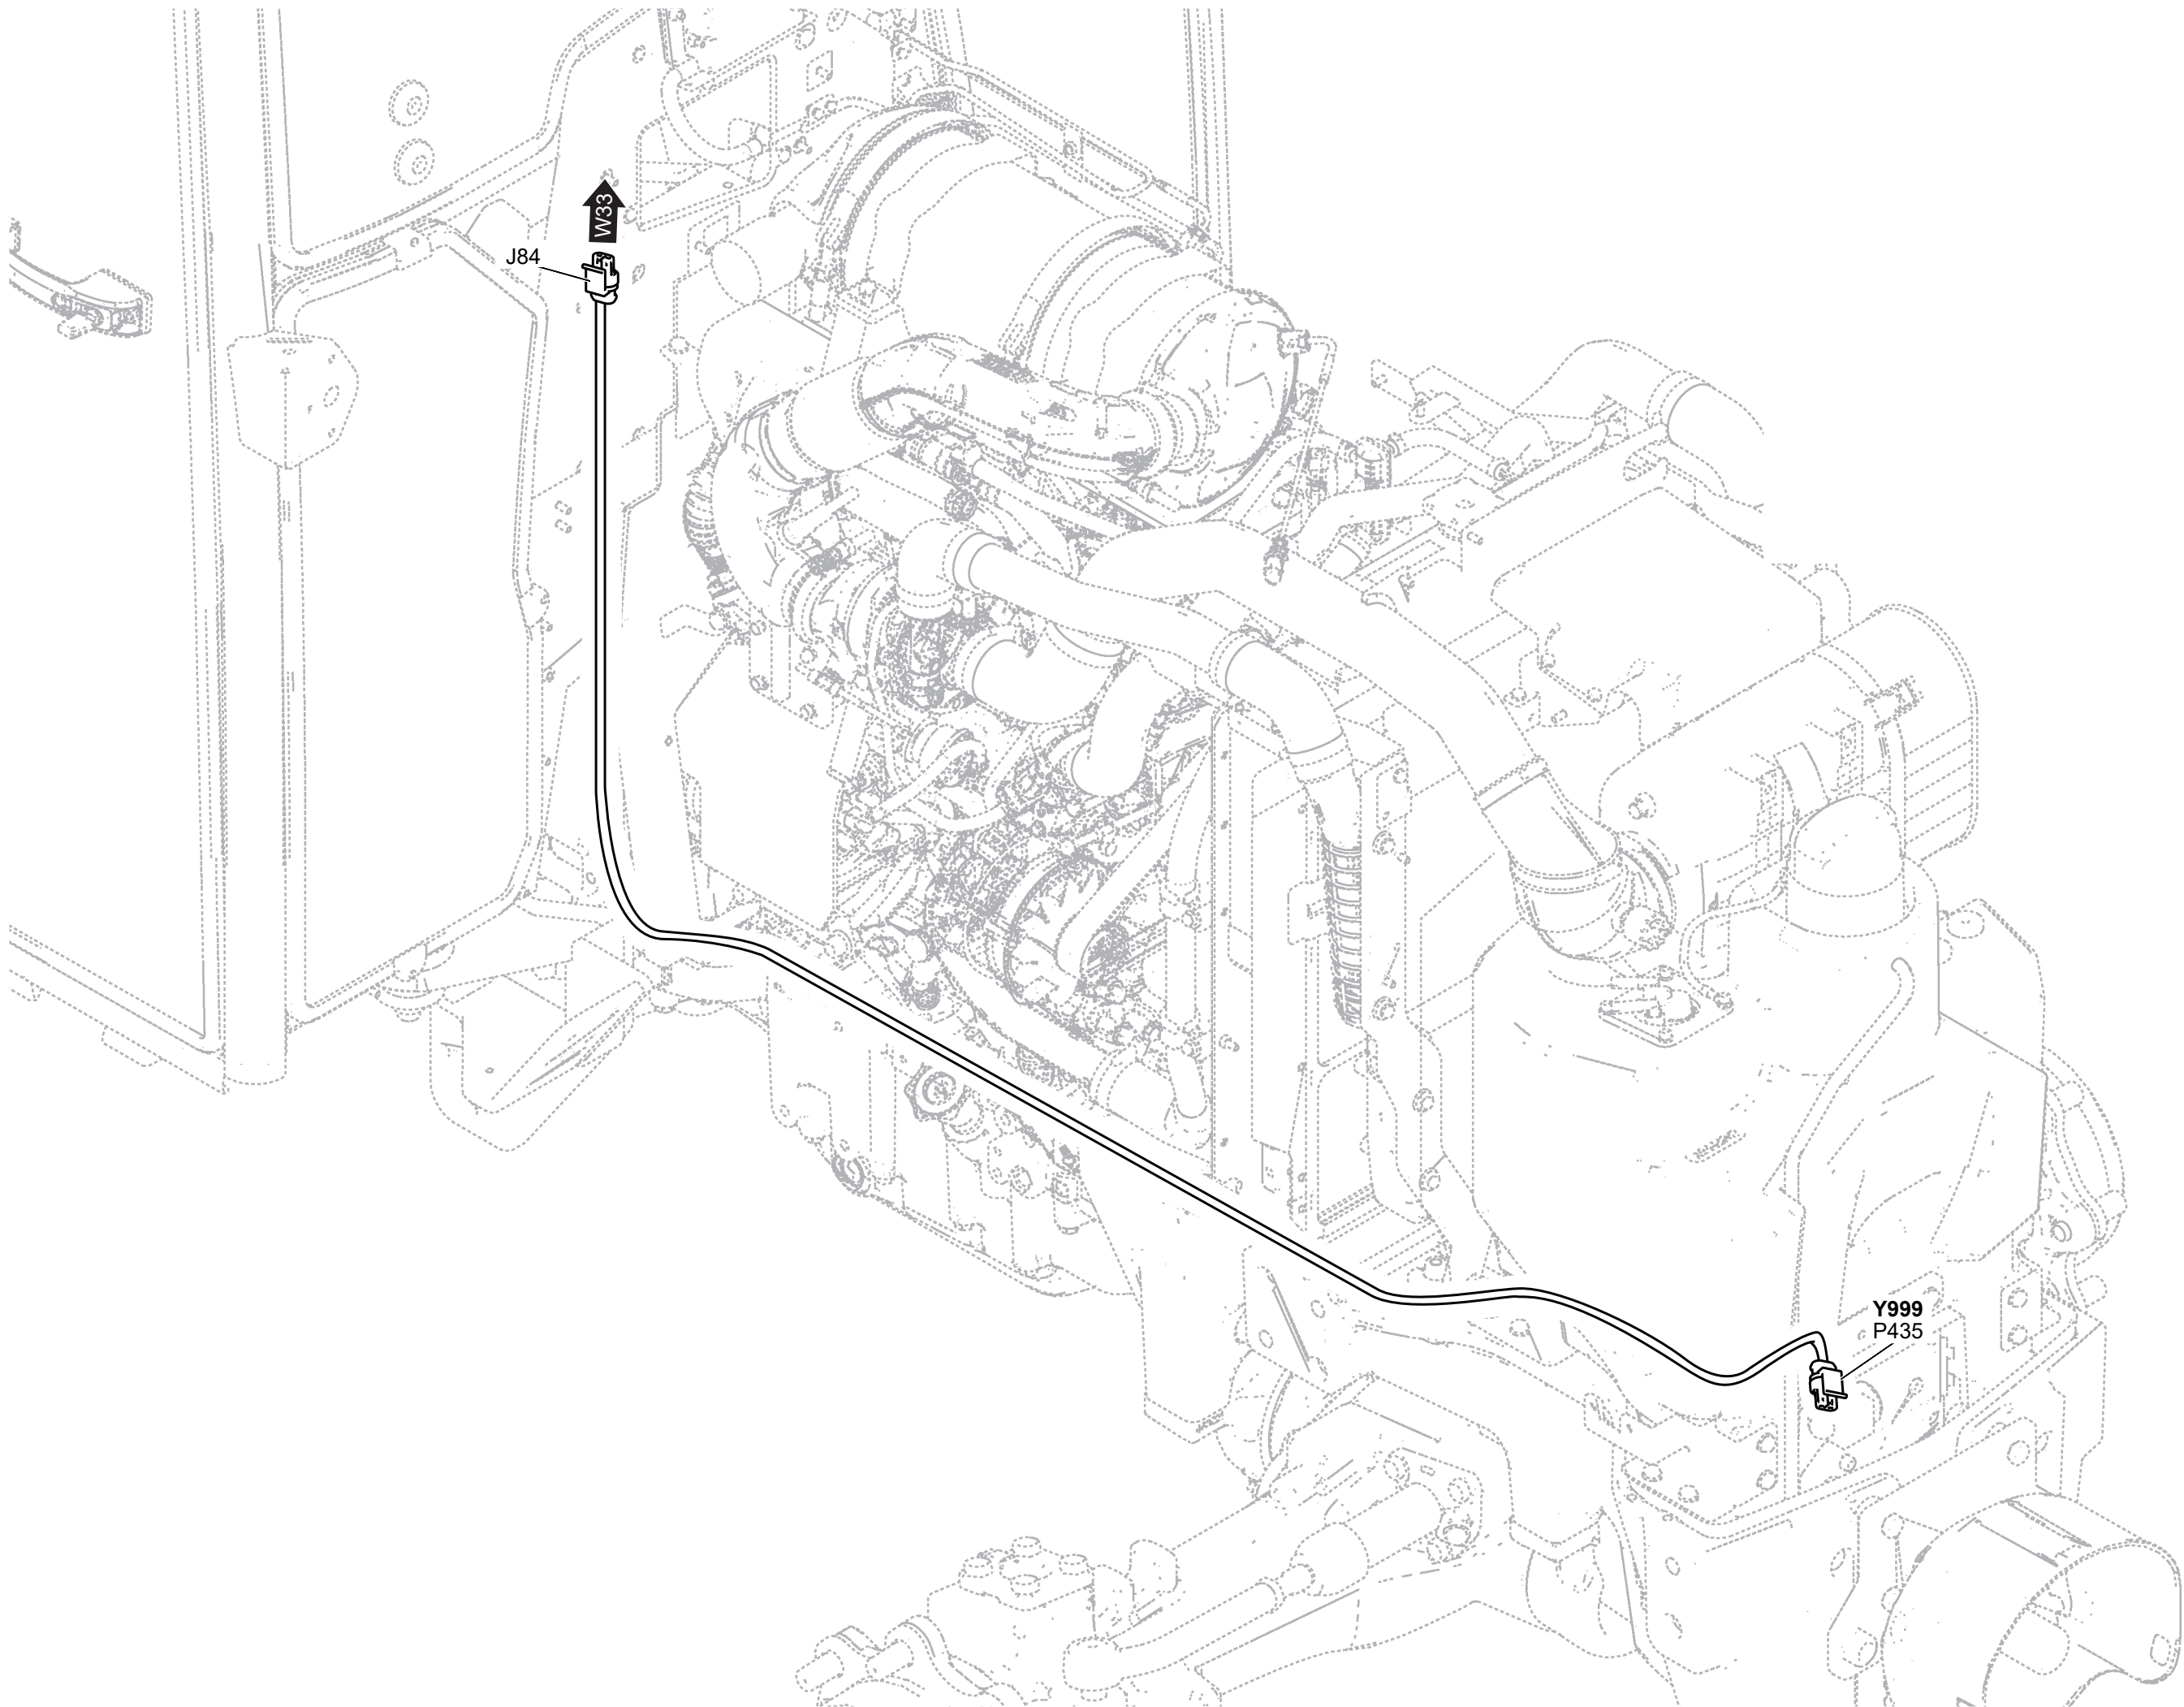

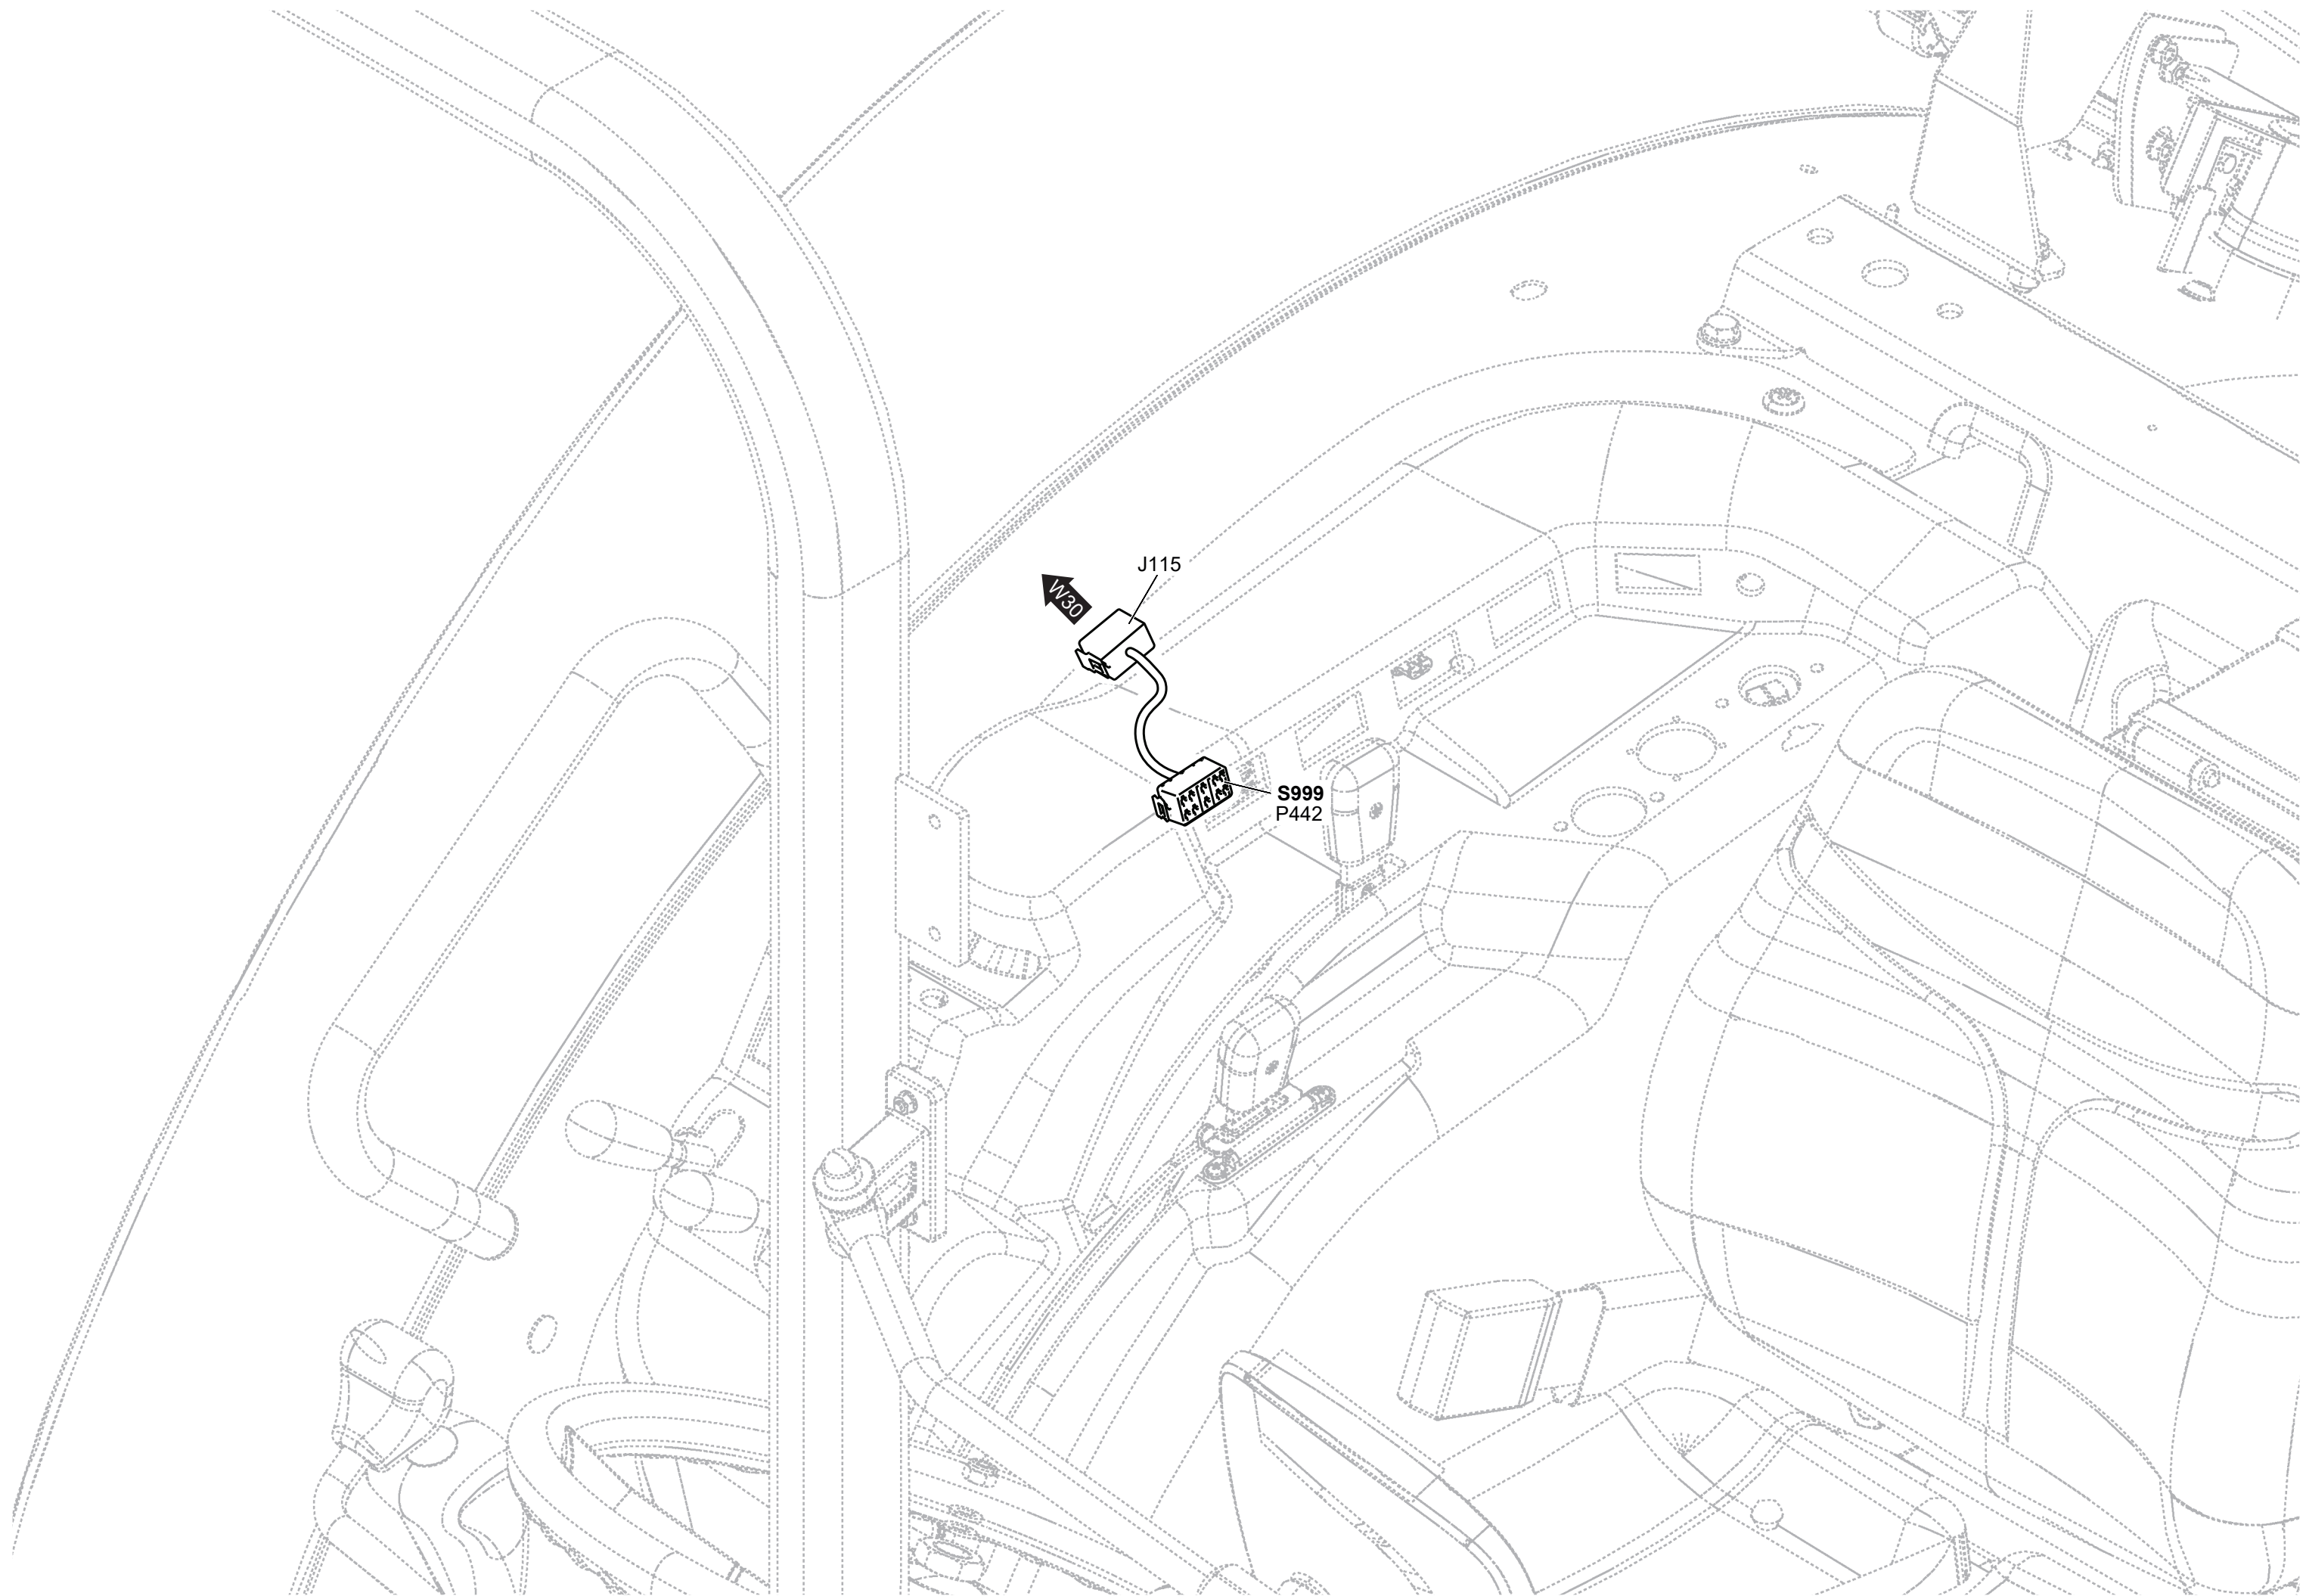

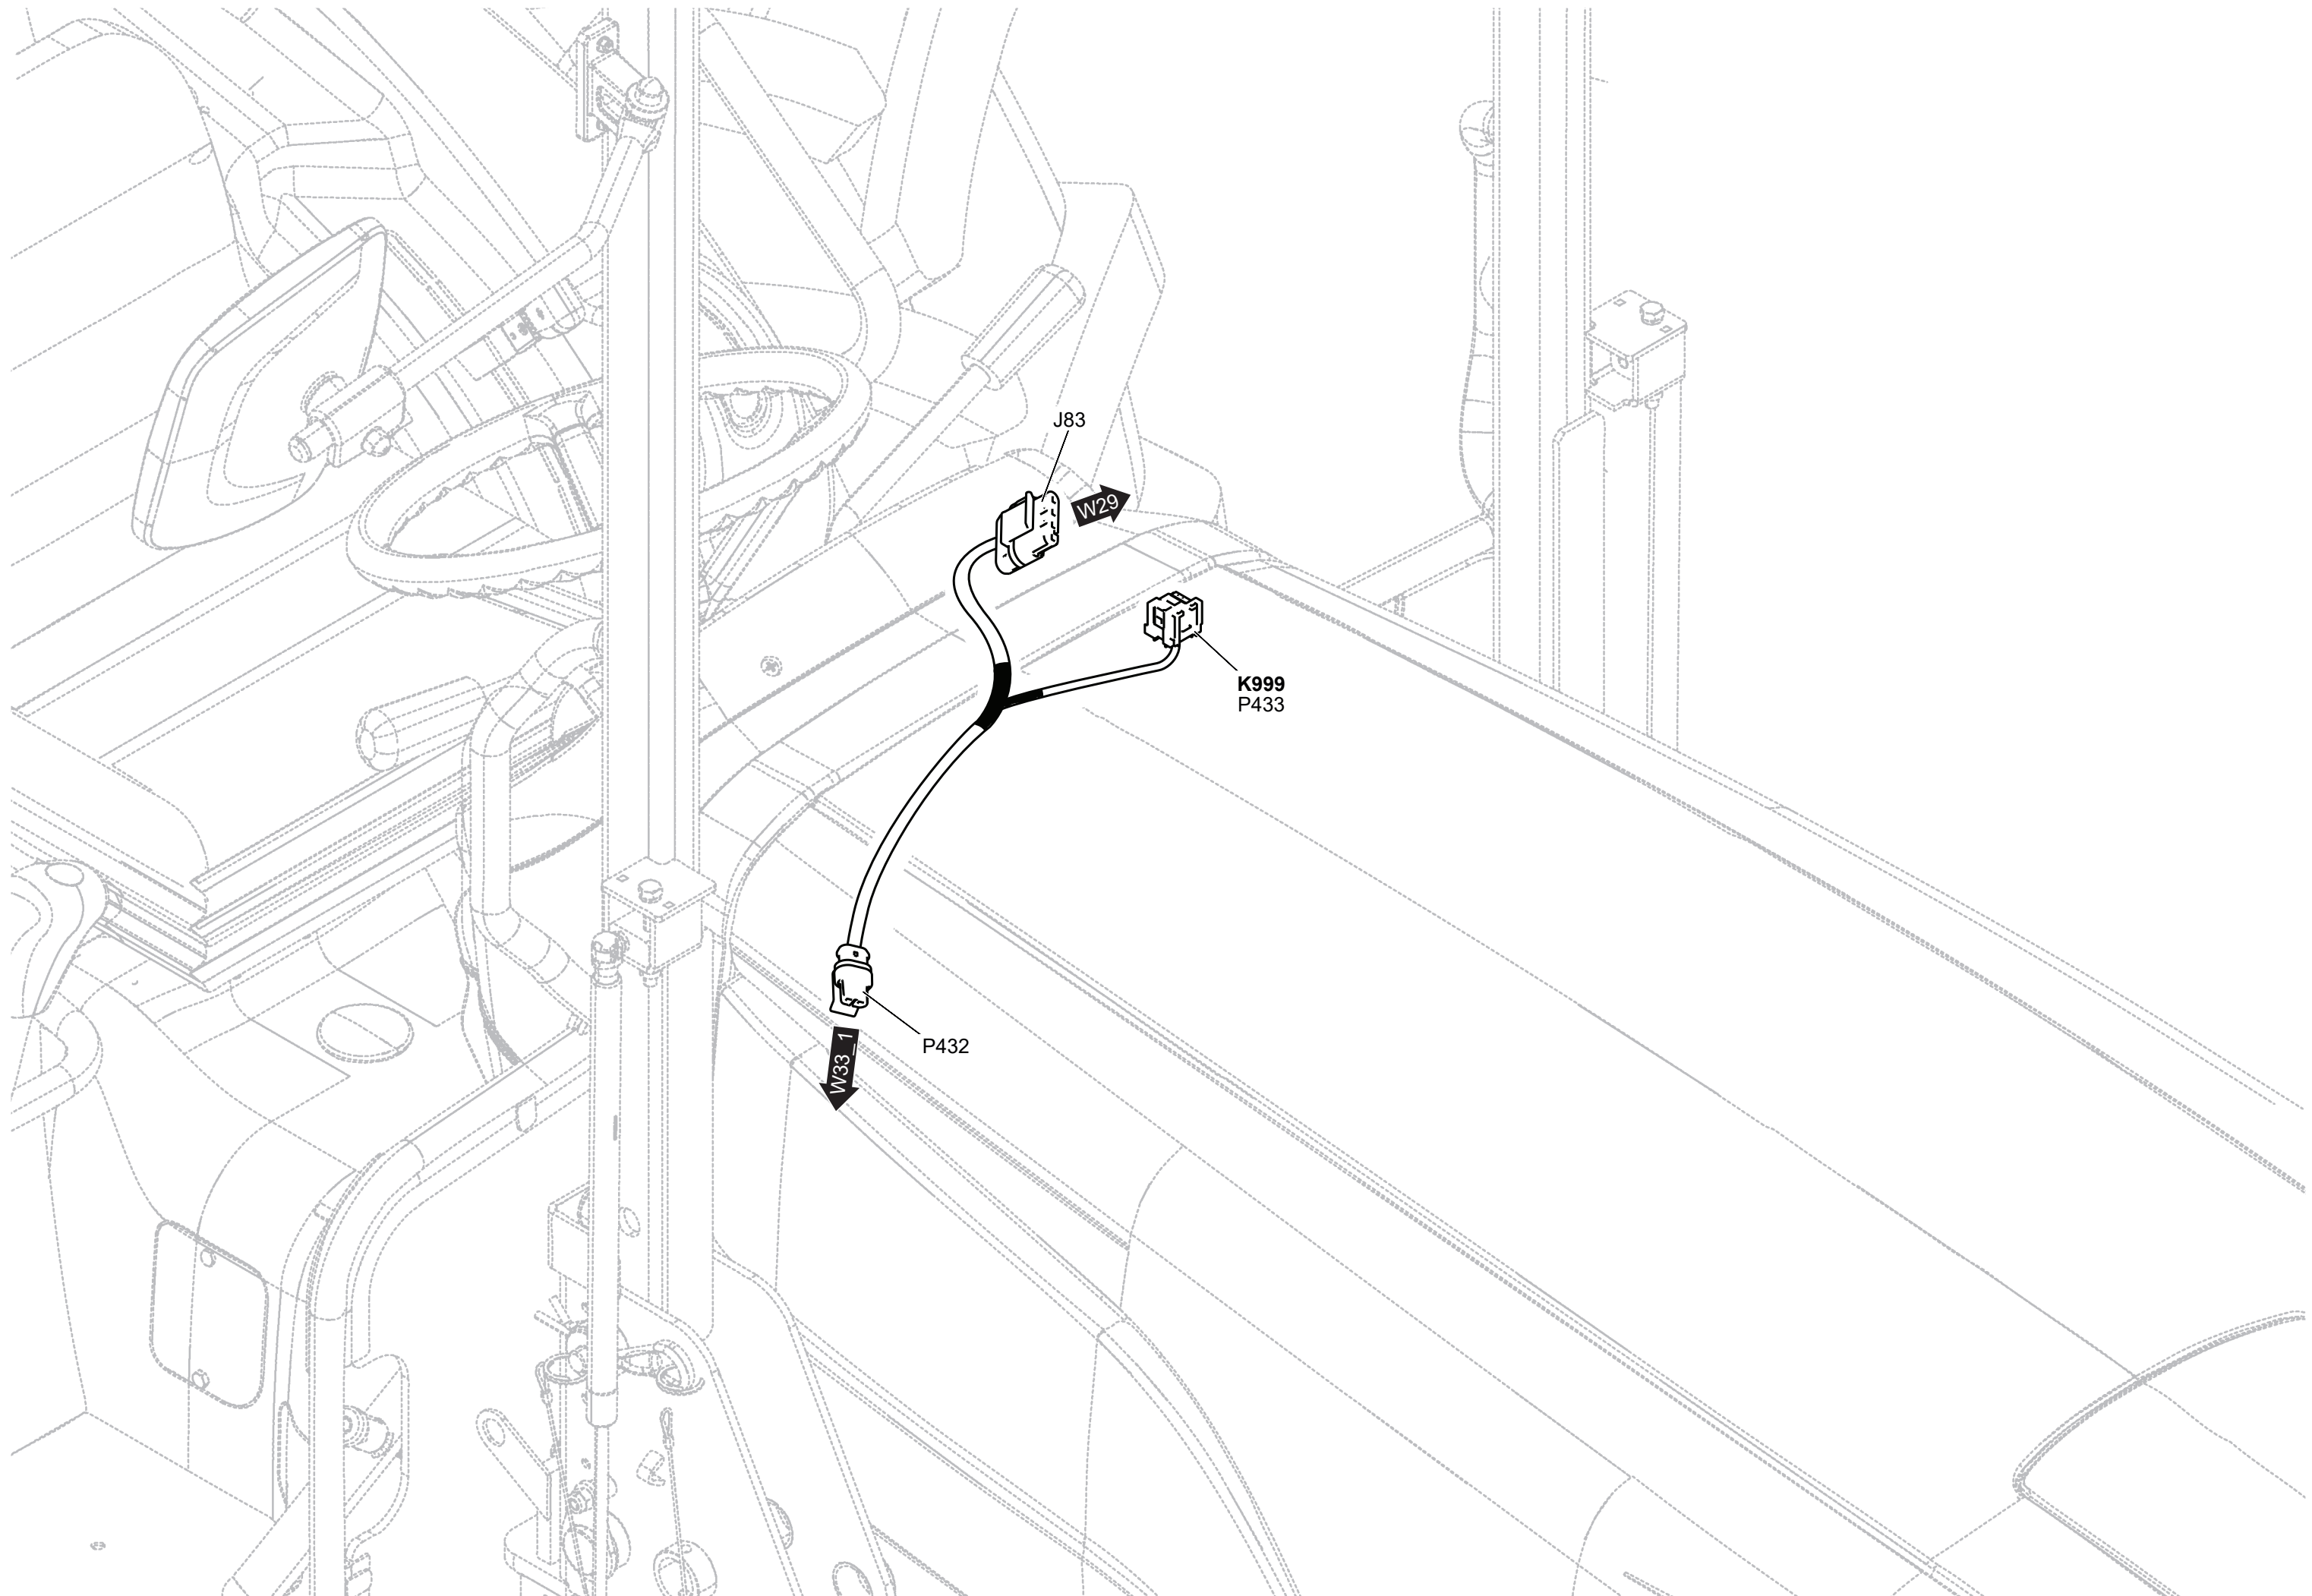

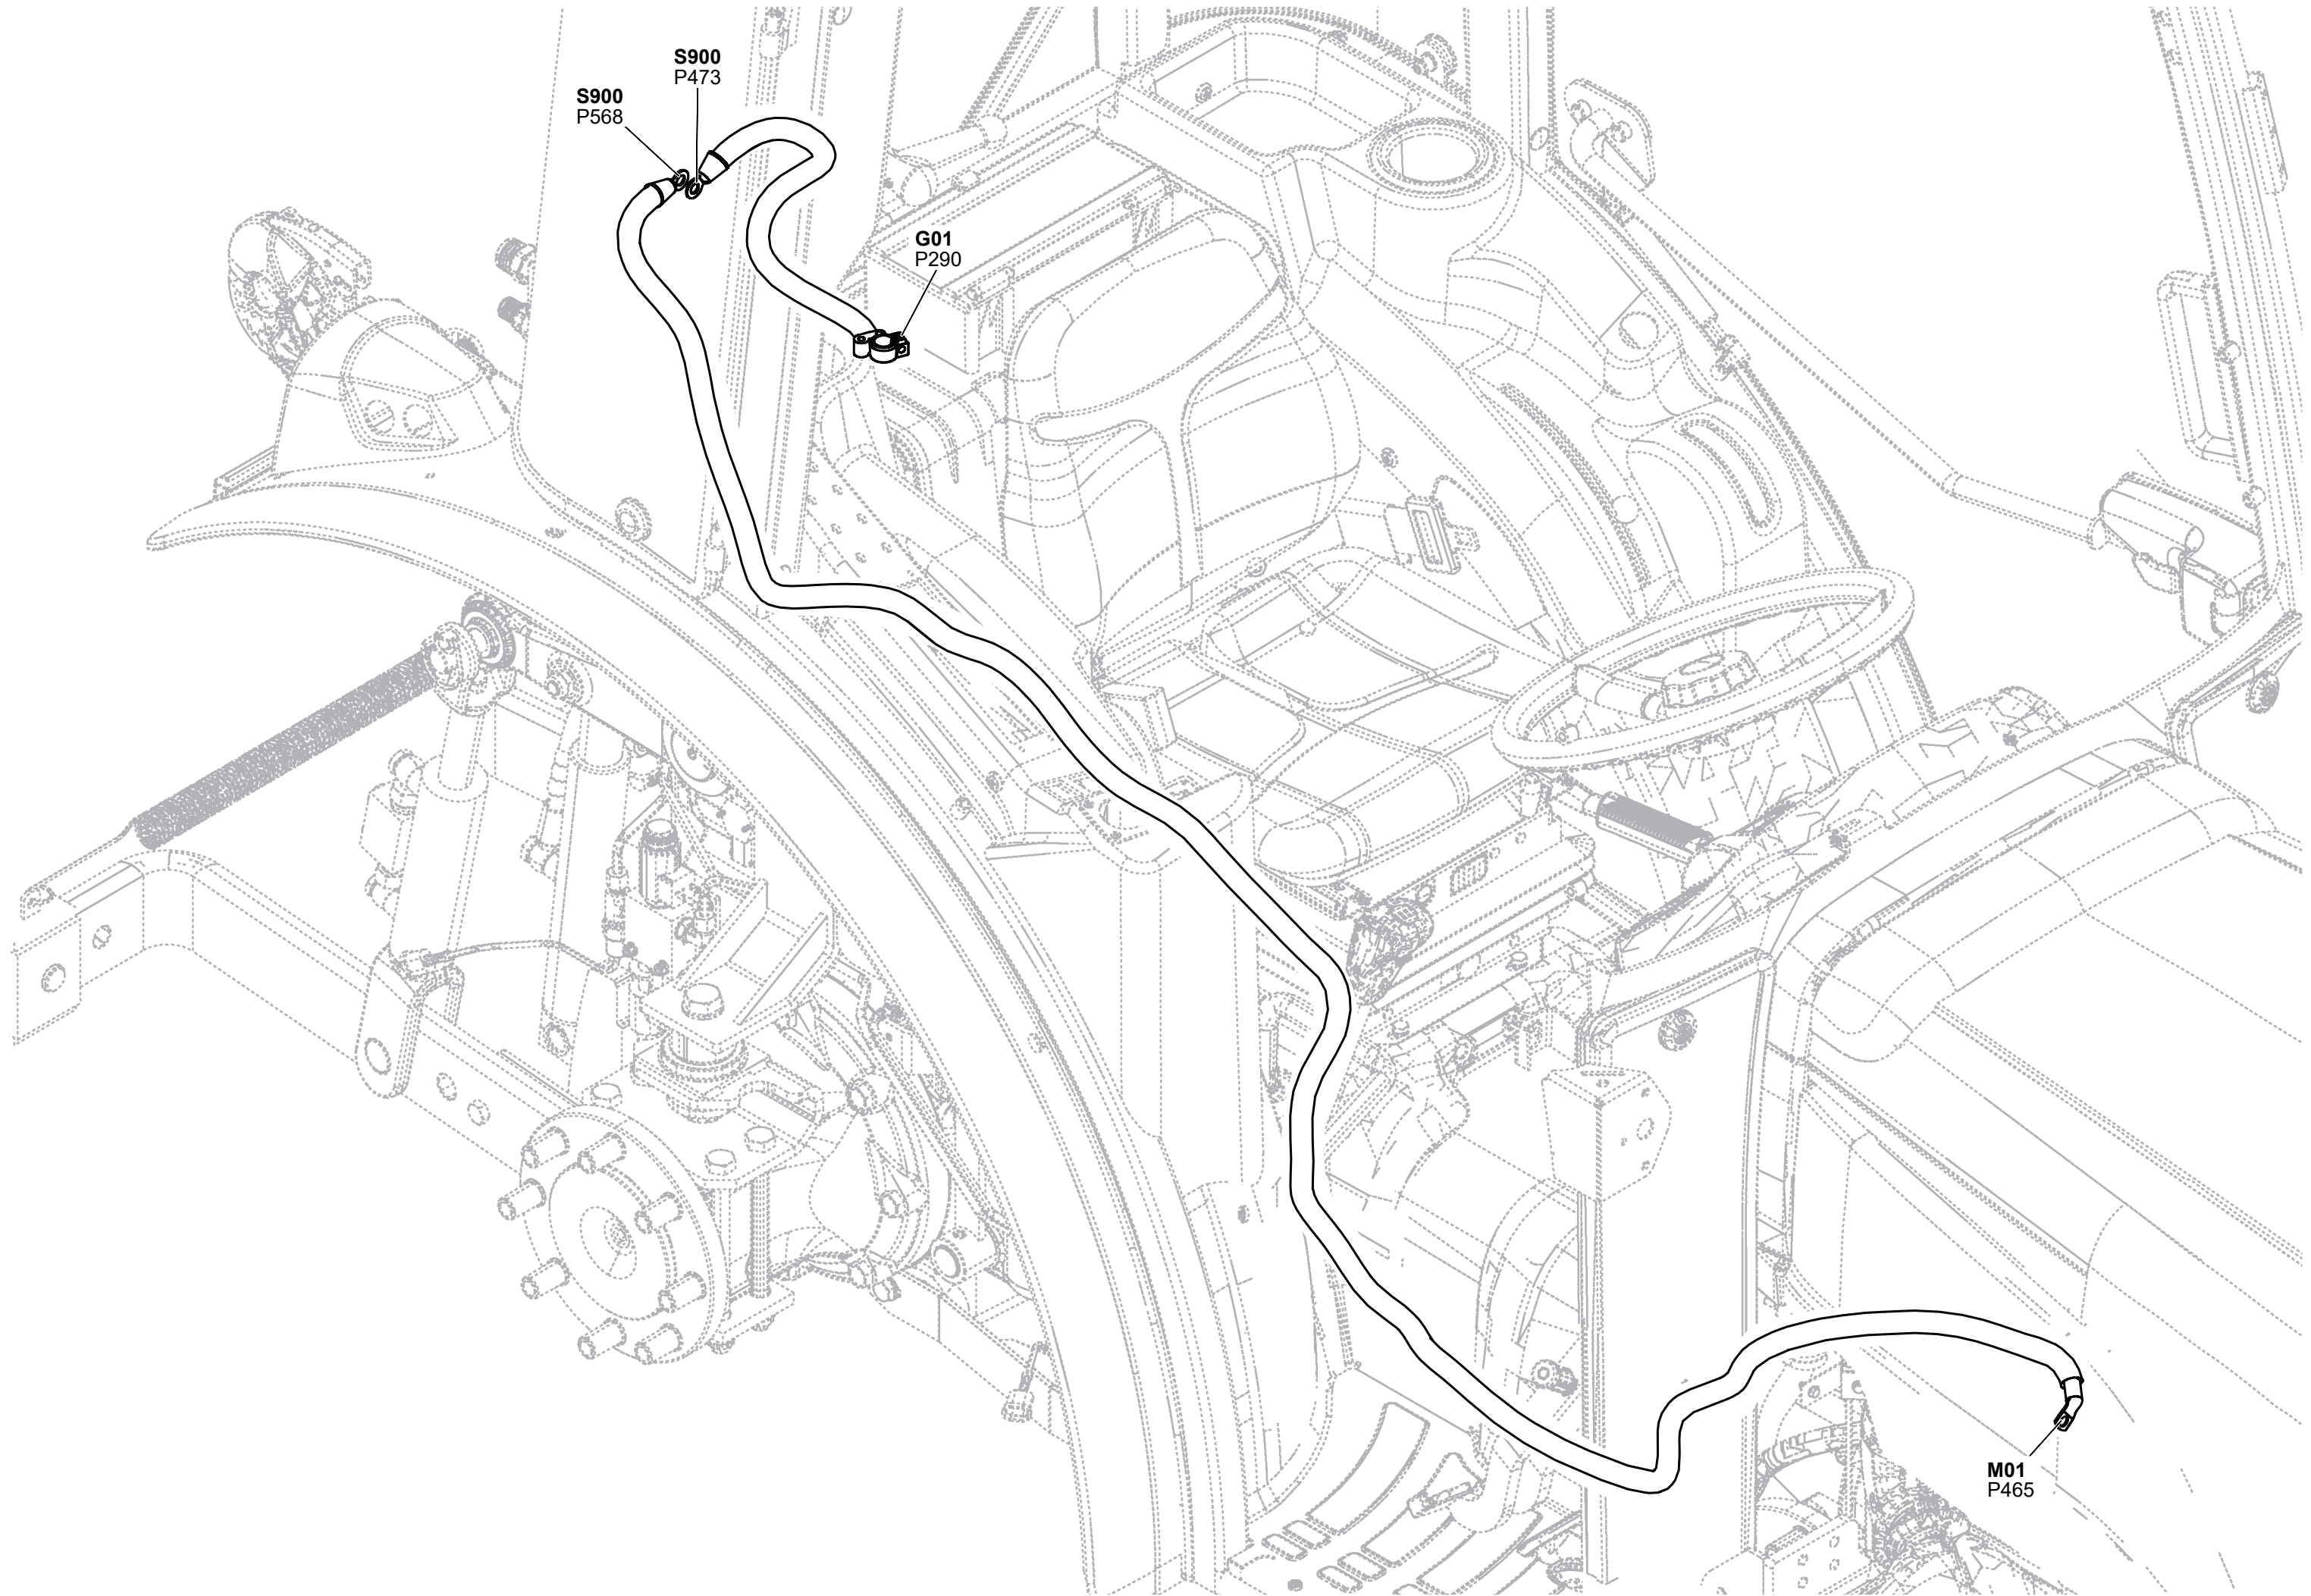



S900
P568

S900
P473


G01
P290

M01
P465

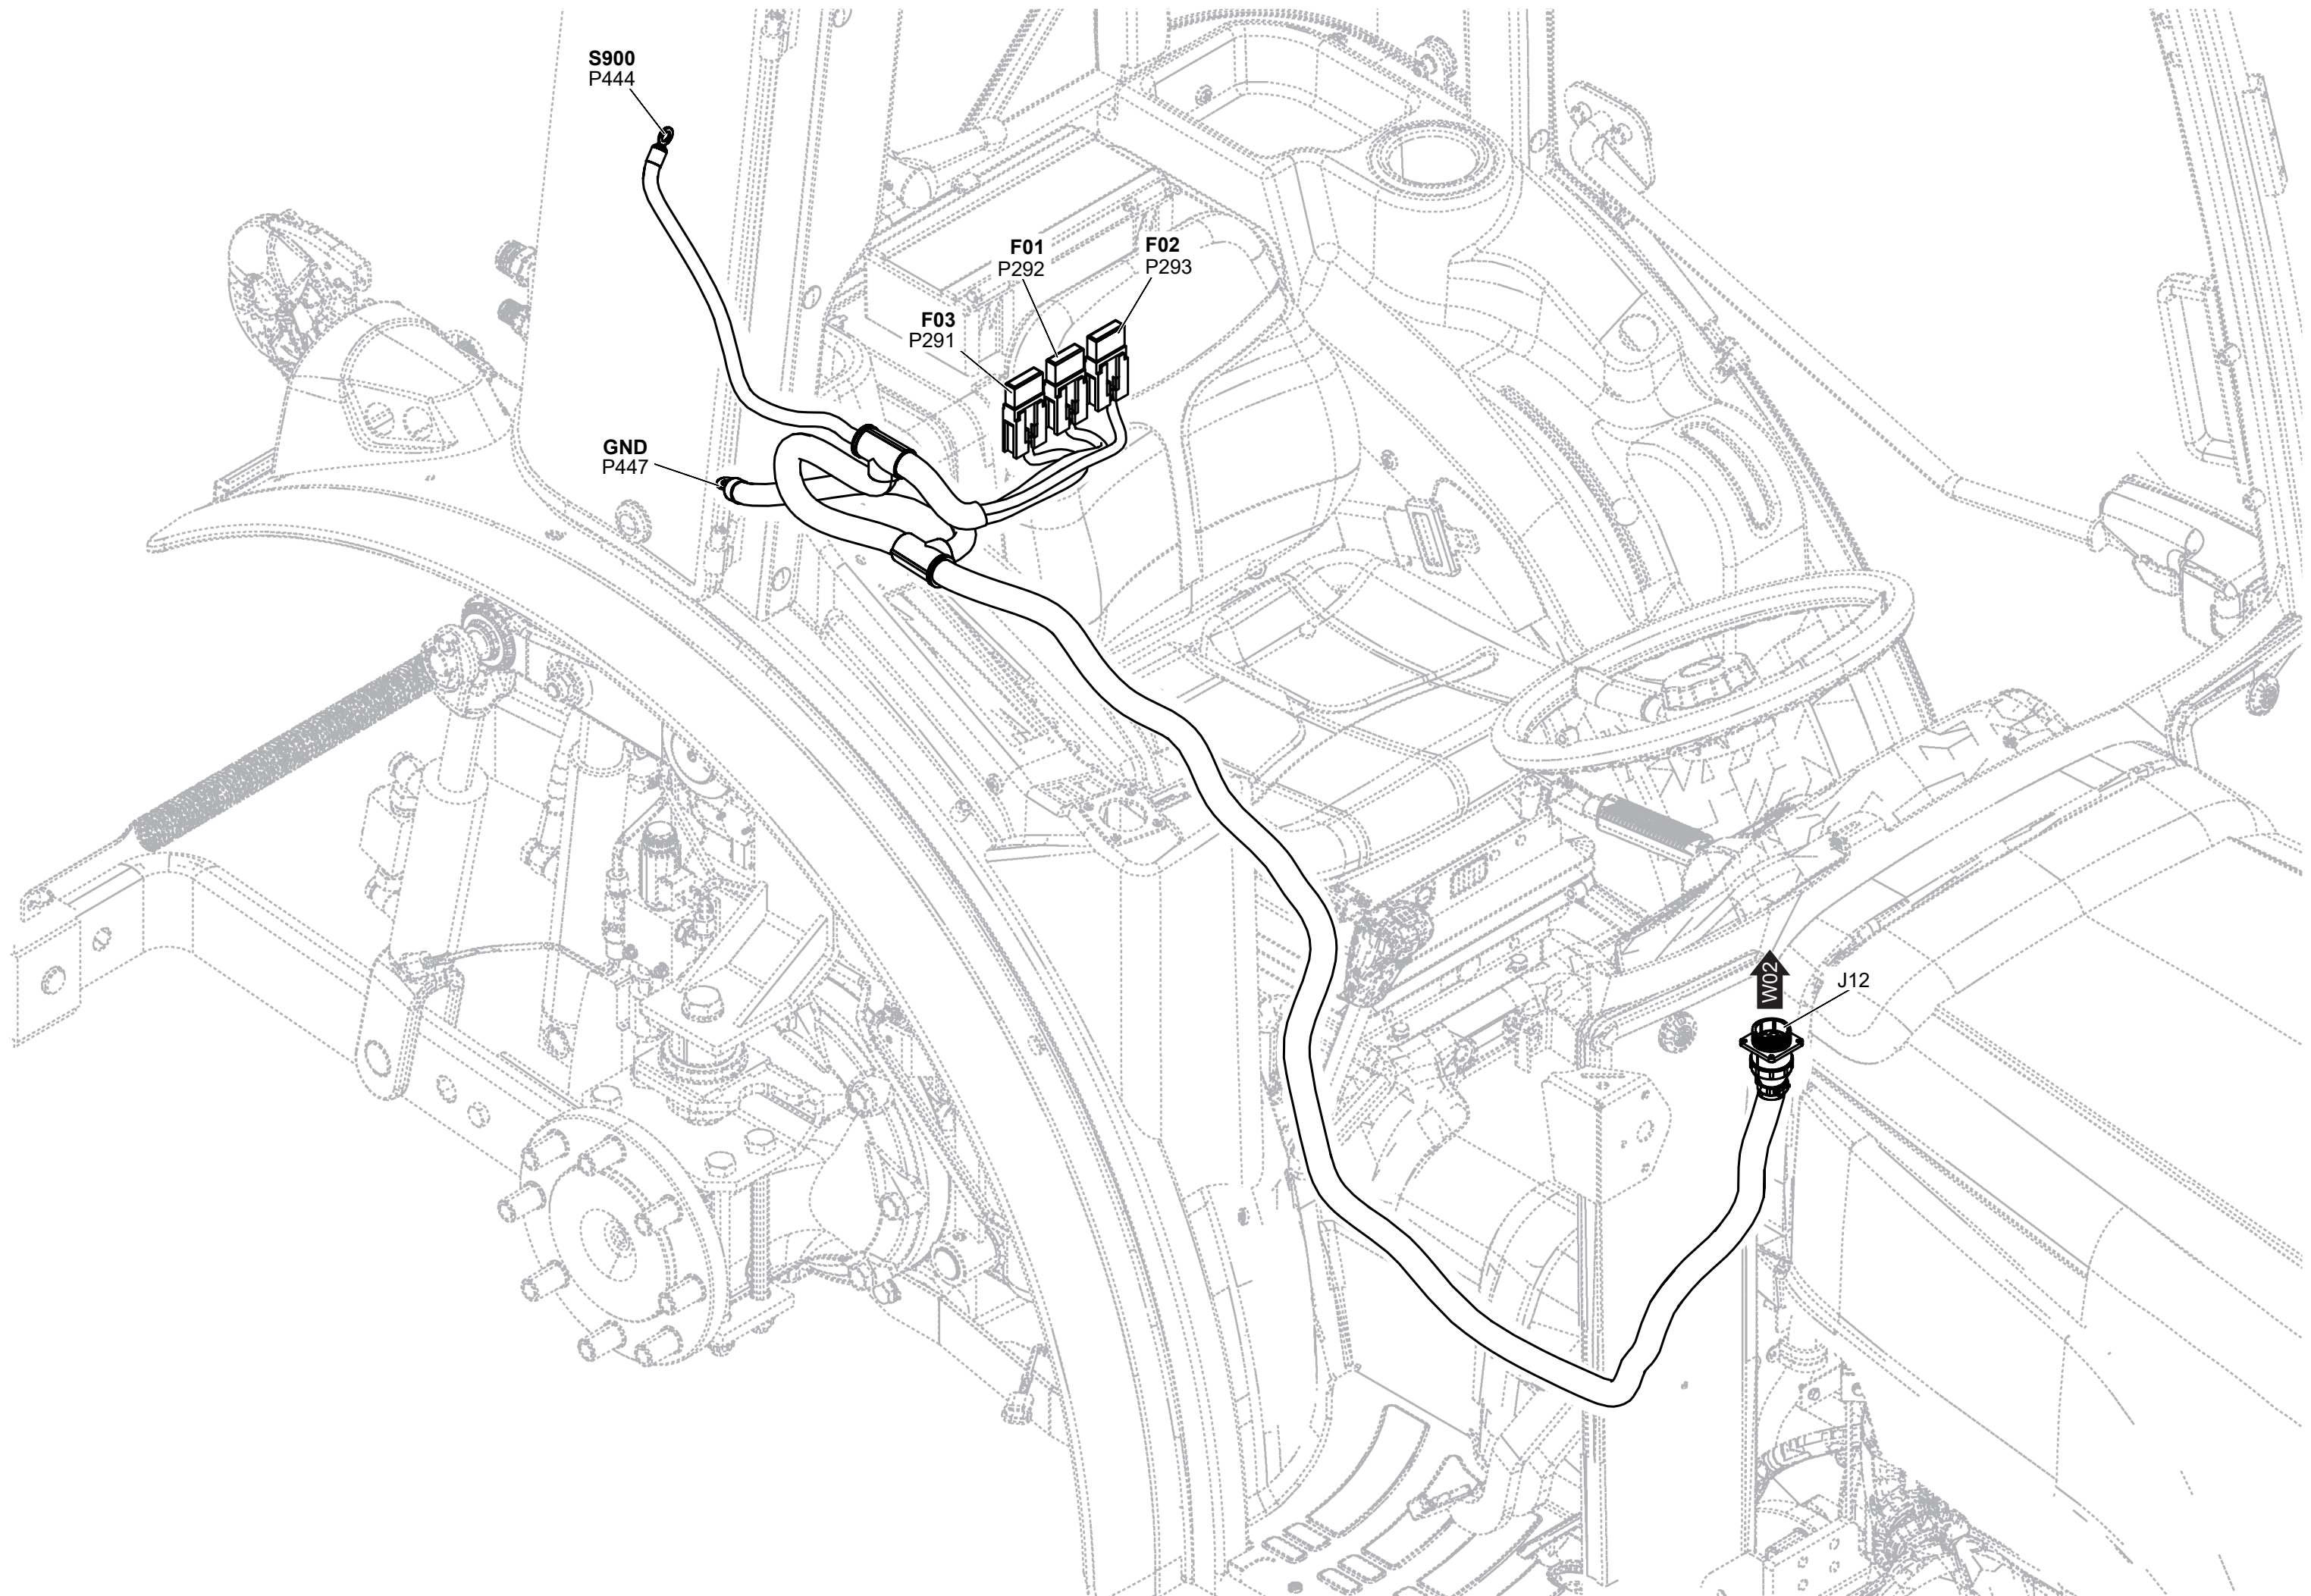


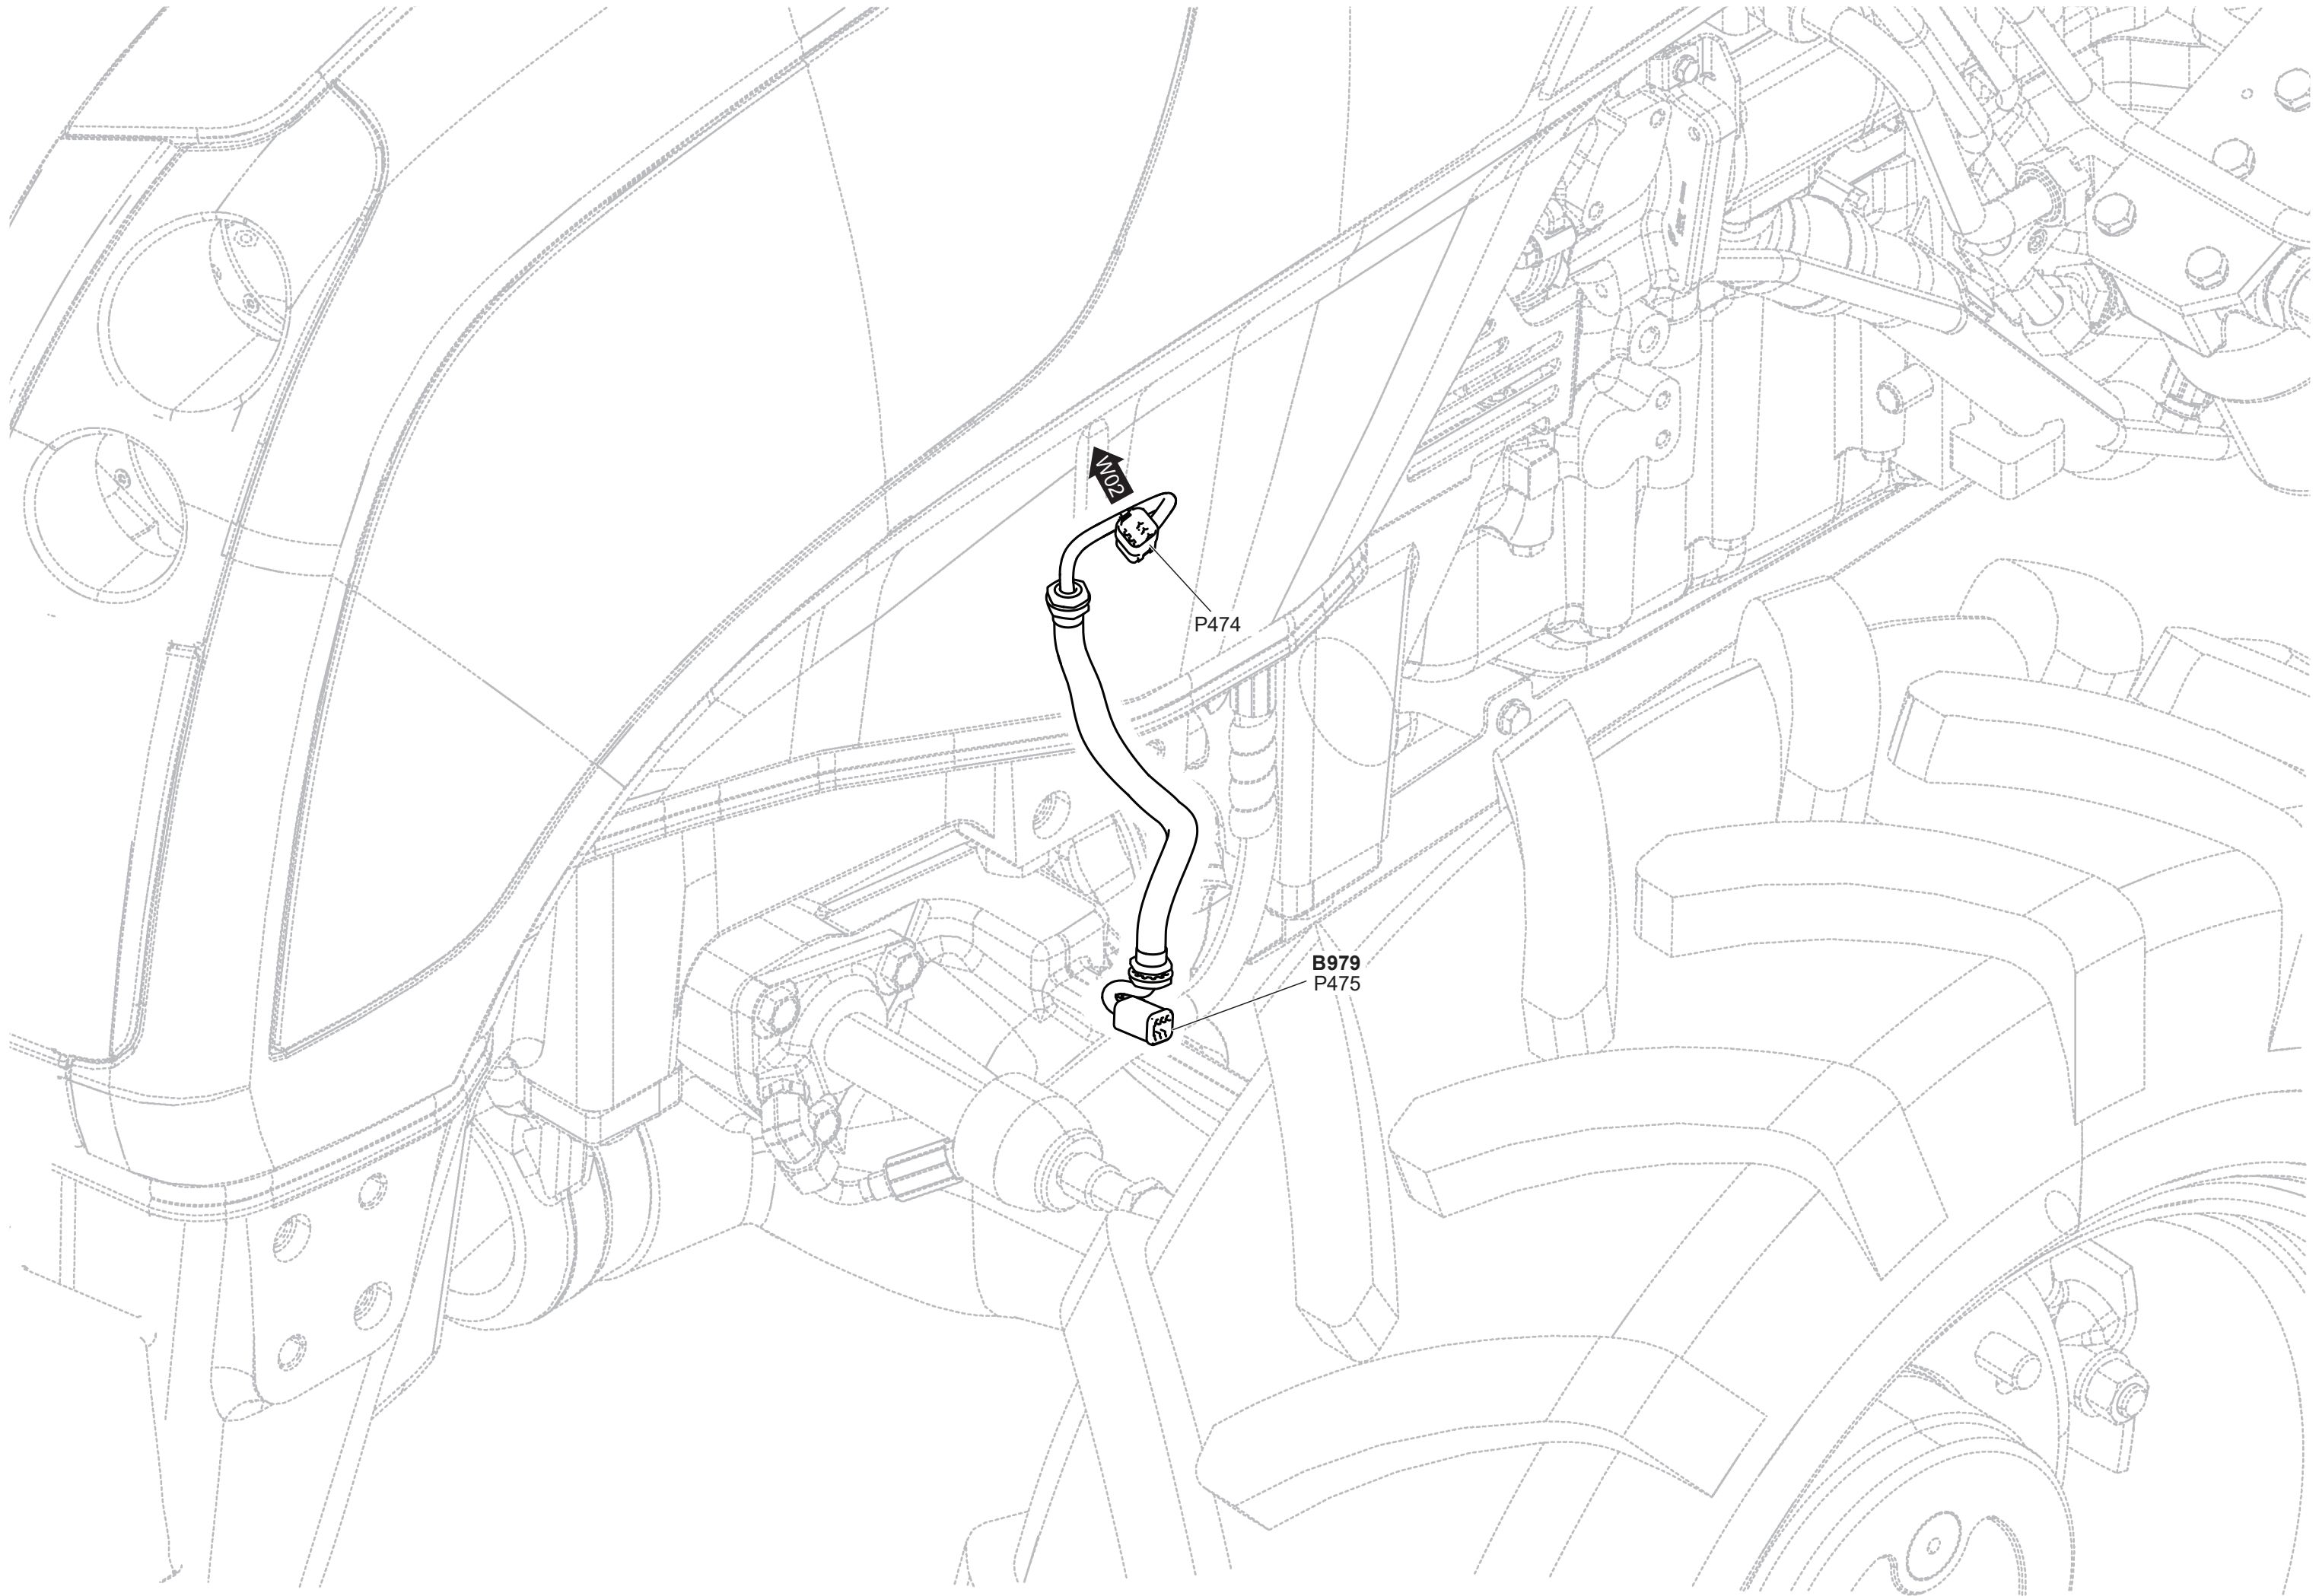


A330 - Quadro strumenti

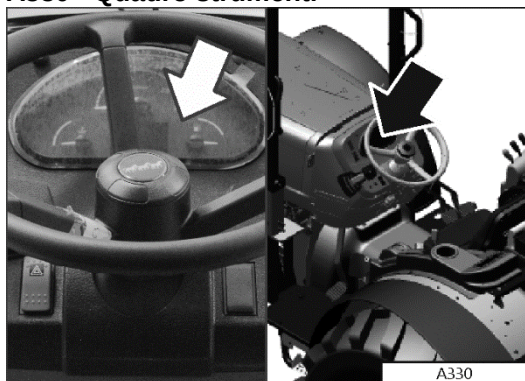


A500 - Centralina motore

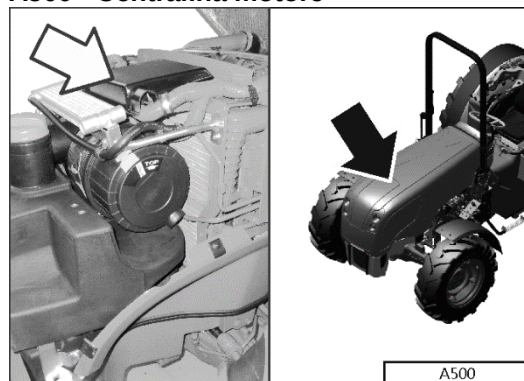


A510 - Centralina candele

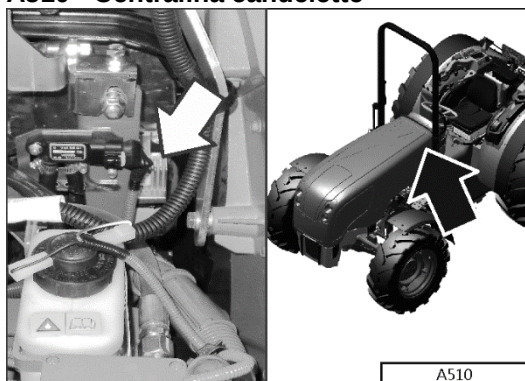


B02 - Pressostato intasamento filtro aria

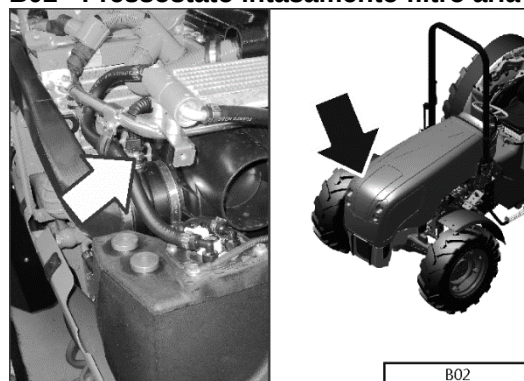


B03 - Sensore livello carburante

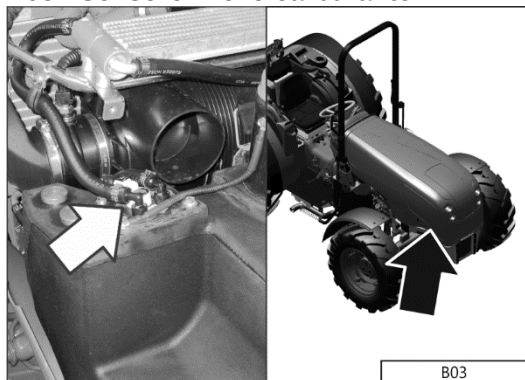


B05 - Interruttore freno a mano

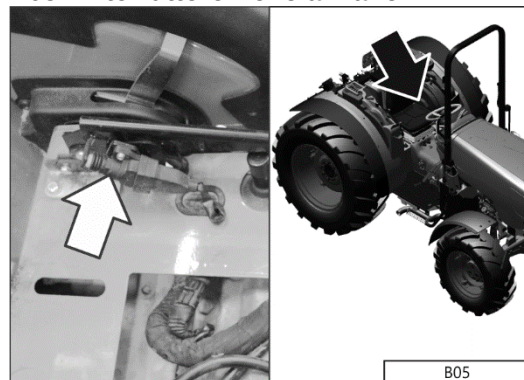


B06 - Sensore velocità veicolo

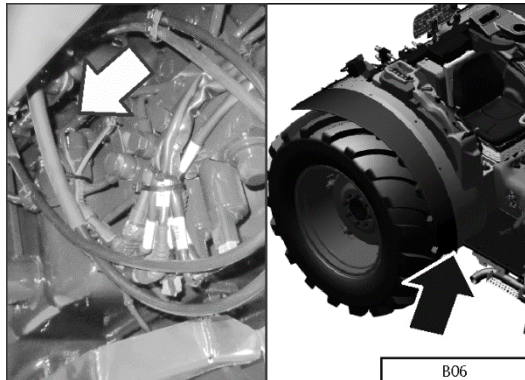


**B07A - Interruttore velocità PTO
540E/1000**

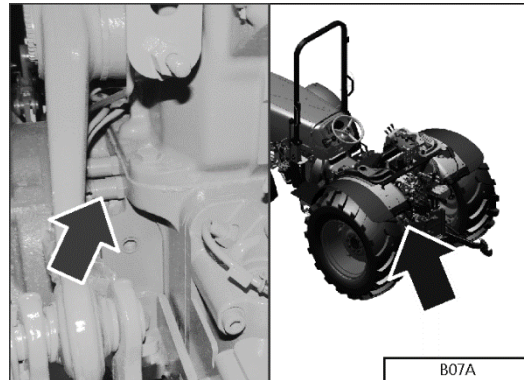


B07B - Interruttore velocità PTO 540

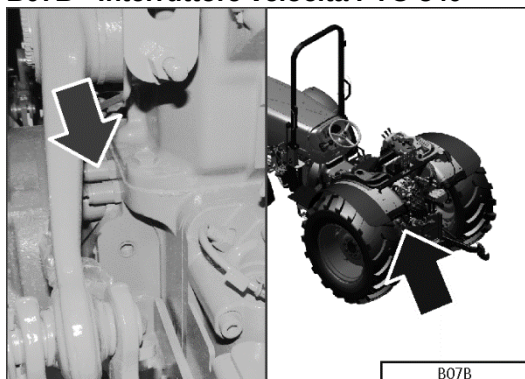


B08 - Interruttore PTO meccanica

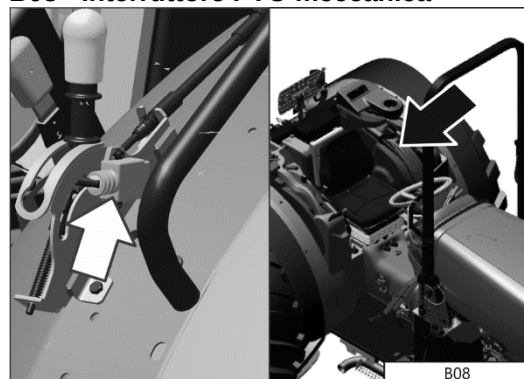


B31 - Pressostato circuito freno rimorchio

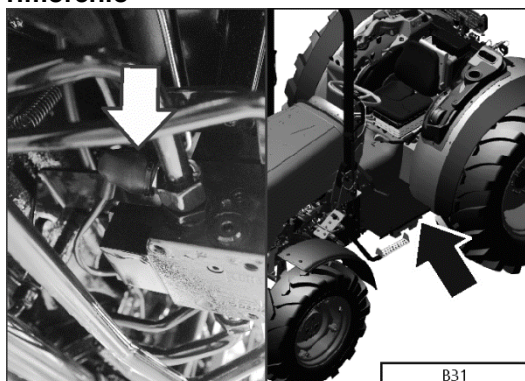


B36 - Interruttore NEUTRO trasmissione

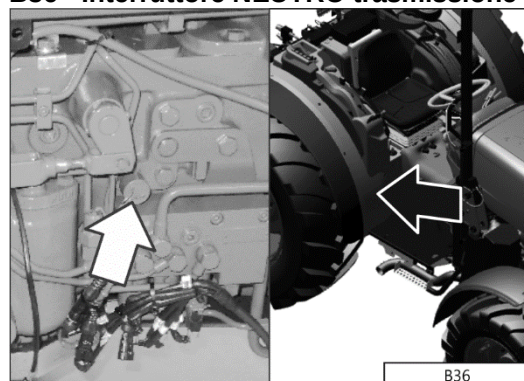


B69 - Interruttore livello olio freni

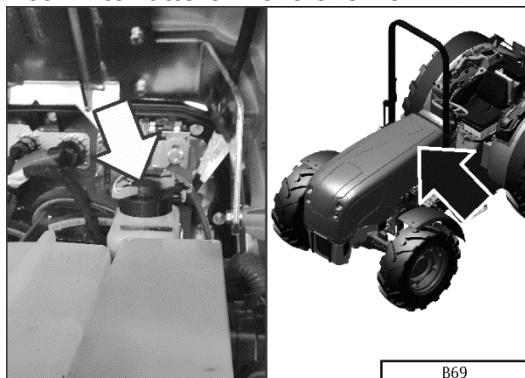


B501 - Sensore quantità di ossigeno (Lambda)

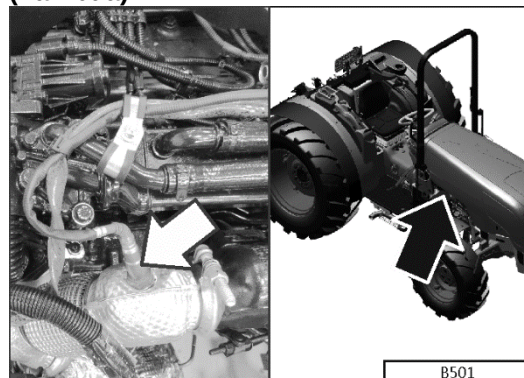


B509 - Sensore temperatura aria

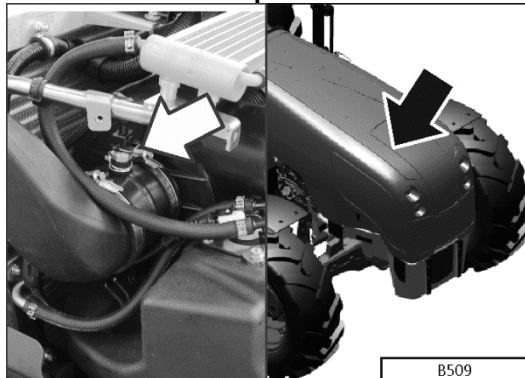


B510 - Sensore presenza acqua nel carburante

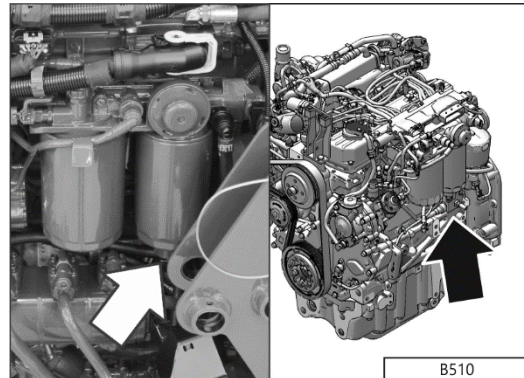


B511 - Sensore differenziale di pressione DPF

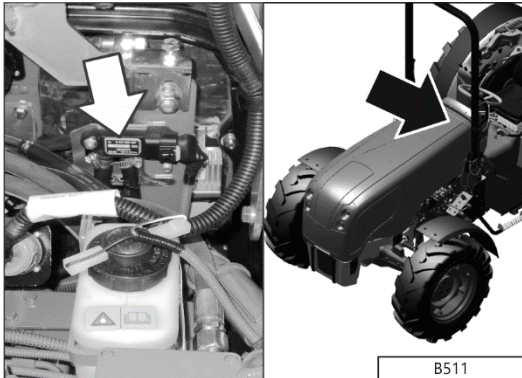


B512 - Sensore 1 temperatura gas di scarico

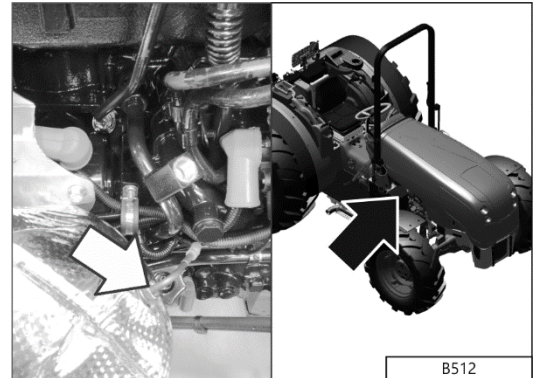


B513 - Sensore 2 temperatura gas di scarico

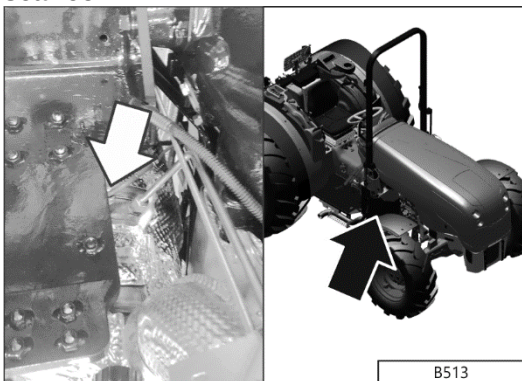


B979 - Sensore angolo di sterzo

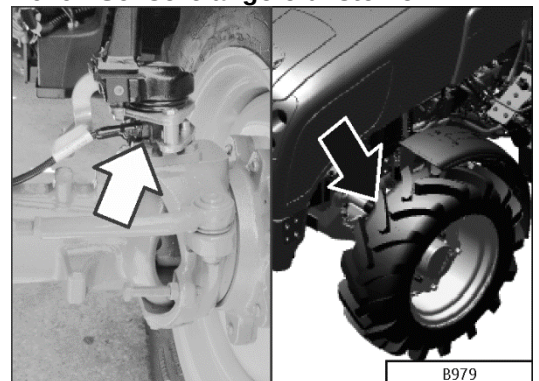


B987 - Pressostato circuito blocco differenziale

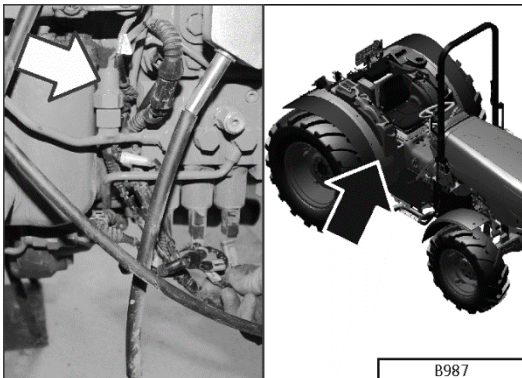


B988 - Pressostato circuito doppia trazione

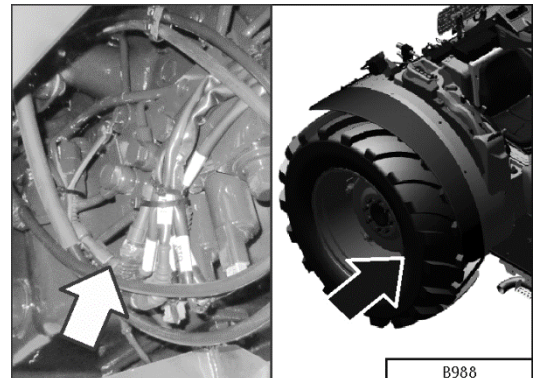


B990 - PTO segnale 1

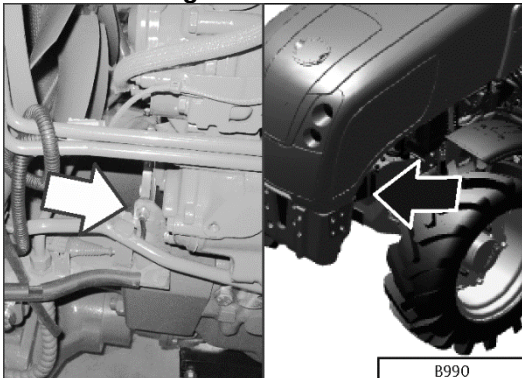


B998 - Acceleratore manuale

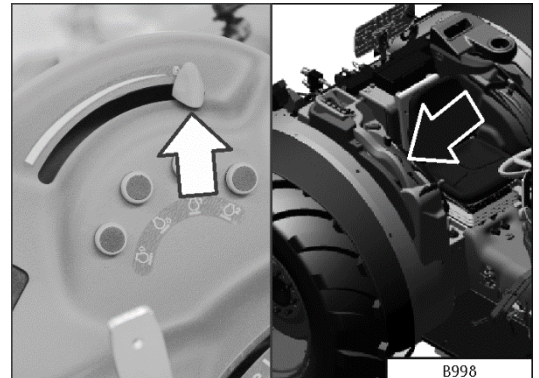


B999 - Pedale acceleratore

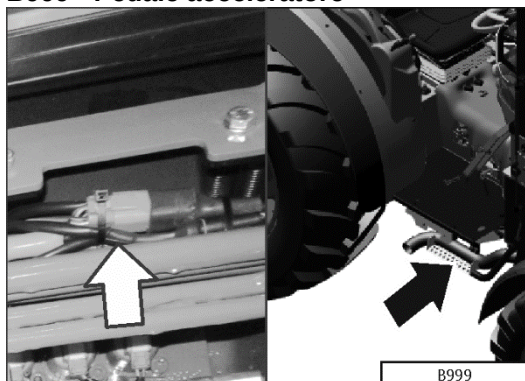


E01A - Anabbagliante destro

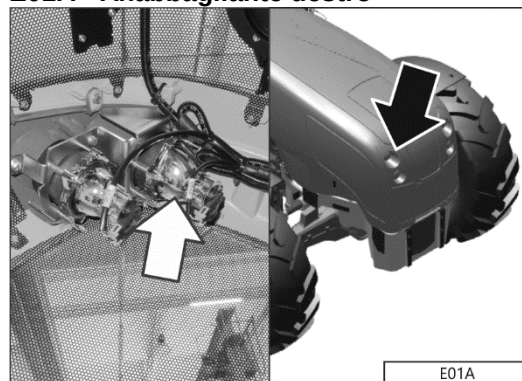


E01B - Abbagliante destro

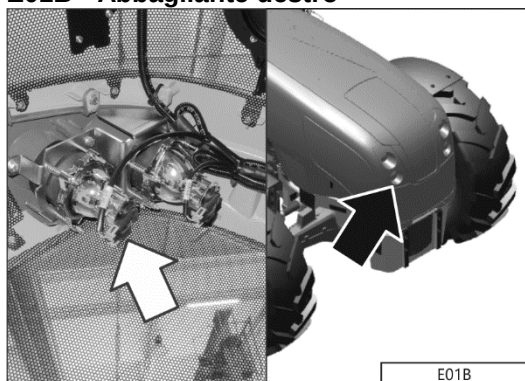


E02A - Anabbagliante destro

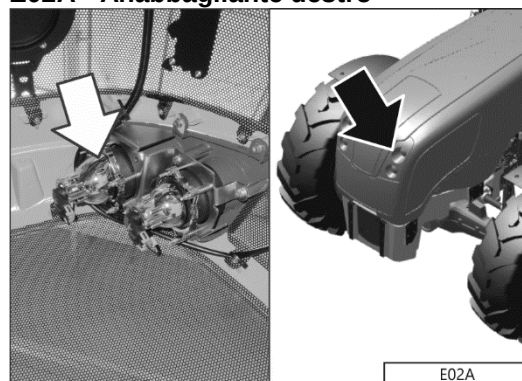


E02B - Abbagliante destro

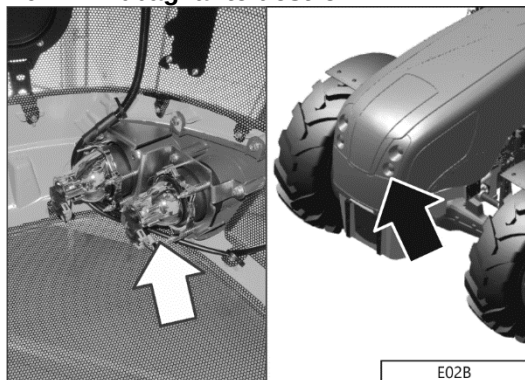


E03 - Luce corrimano destro

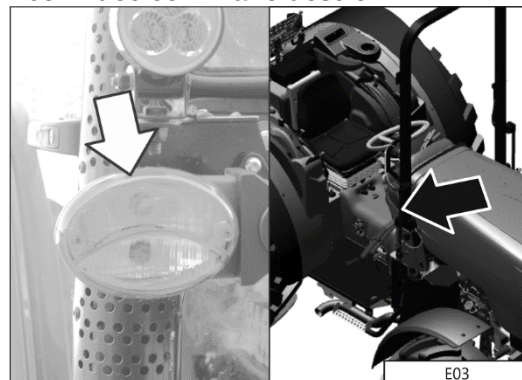


E04 - Luce corrimano sinistro

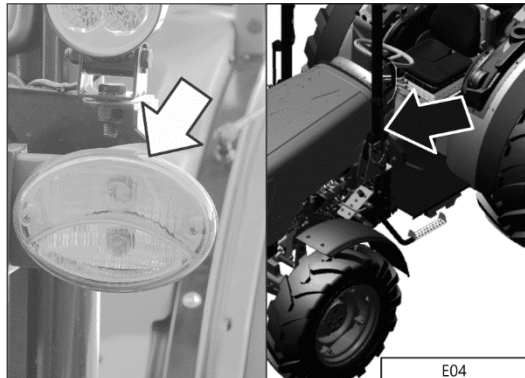


E05 - Accendisigari

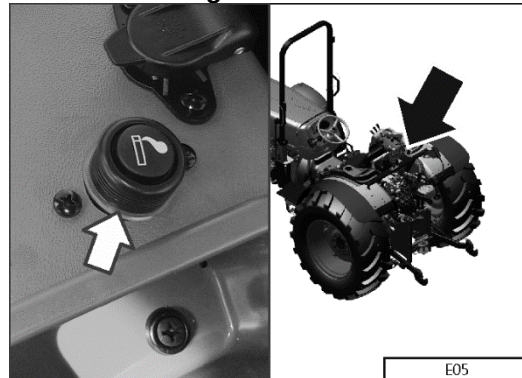


E07 - Fanale anteriore sinistro H4

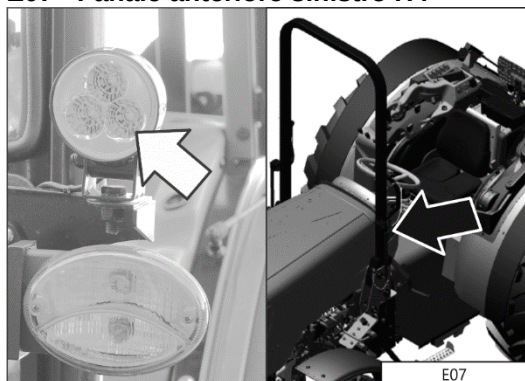


E08 - Fanale anteriore destro H4

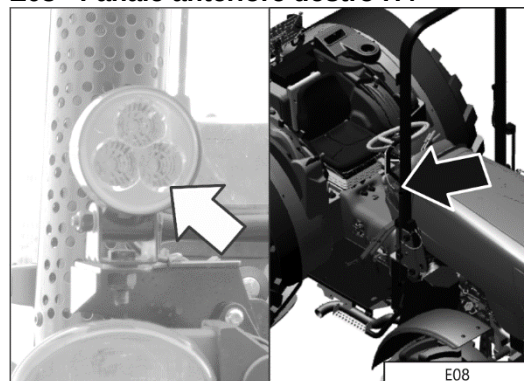


E13 - Fanale posteriore sinistro

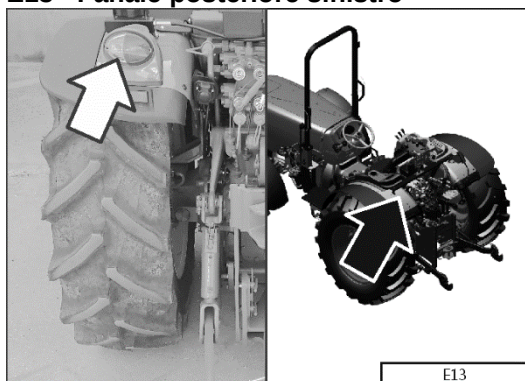


E14 - Fanale posteriore destro

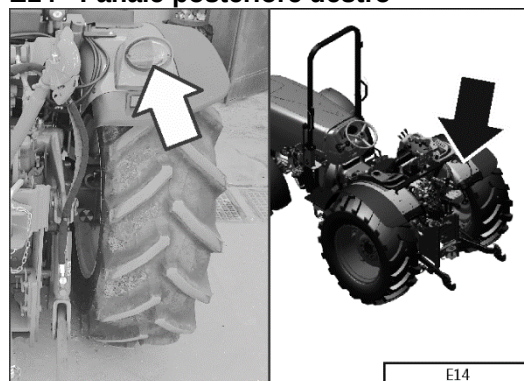


E21 - Luce targa

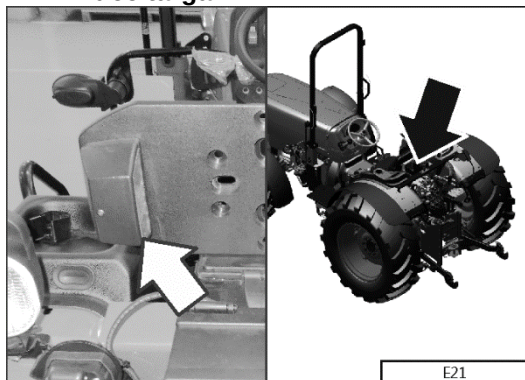


E27 - Girofaro

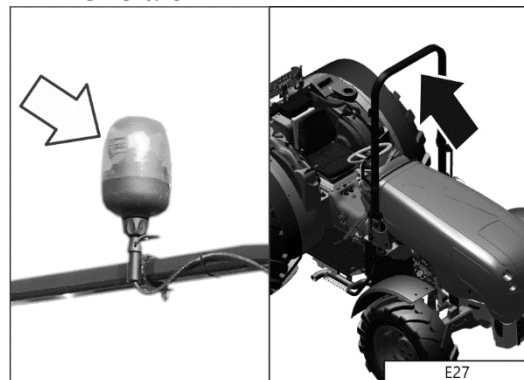


E997 - Fanale anteriore sinistro H3

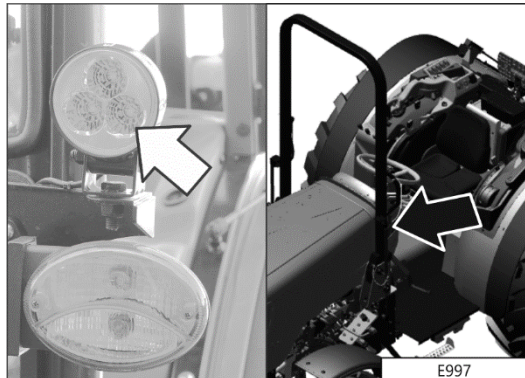


E998 - Fanale anteriore destro H3

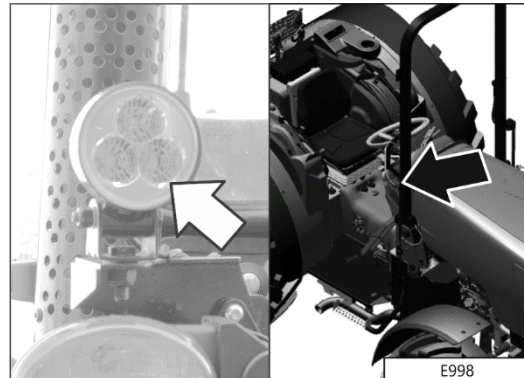


F01 - Maxi fusibile candelette

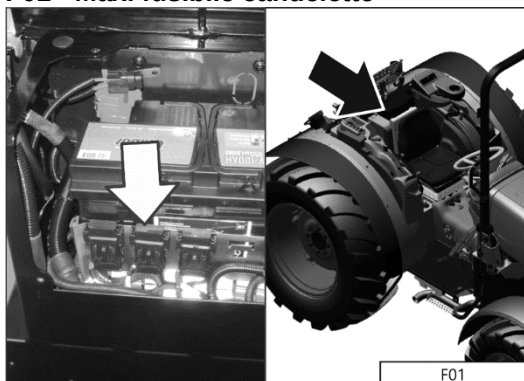


F02 - Fusibile centralina motore

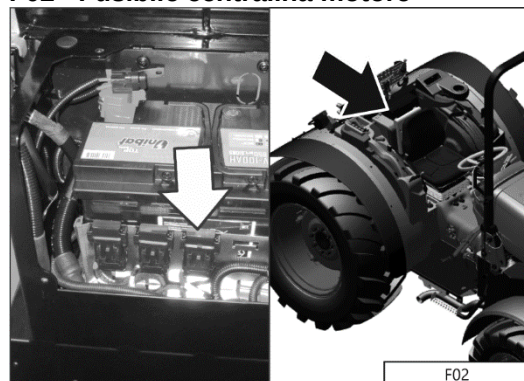


F03 - Fusibile principale

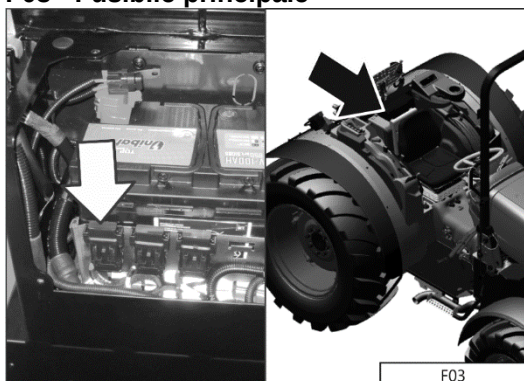


G01 - Batteria

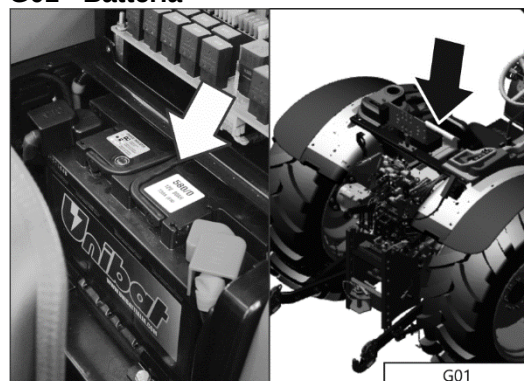


G02 - Alternatore

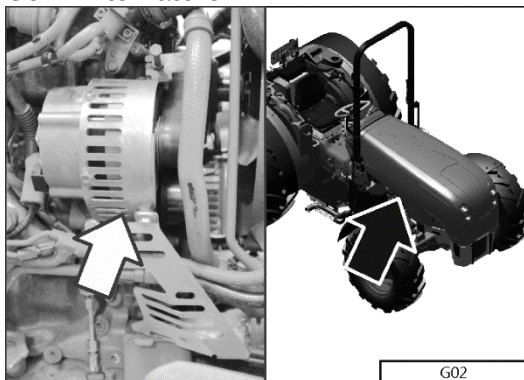


H01 - Claxon

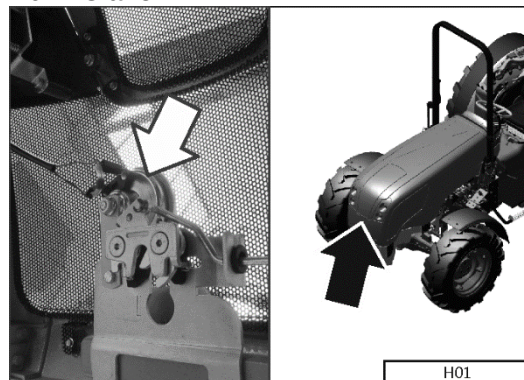

H80 - Interruttore freno rimorchio

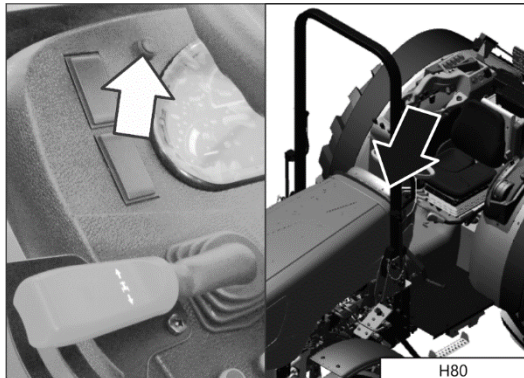


K01 - Relè avviamento

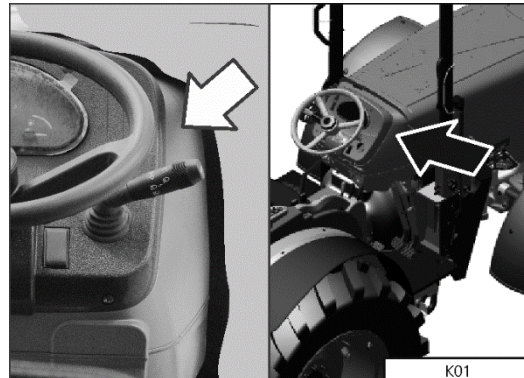


K08 - Temporizzatore indicatori di direzione




M01 - Motorino di avviamento

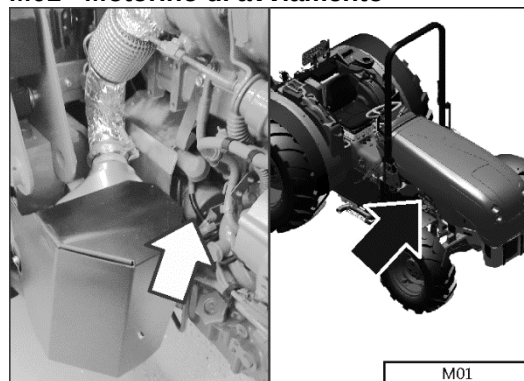


M06 - Sedile pneumatico

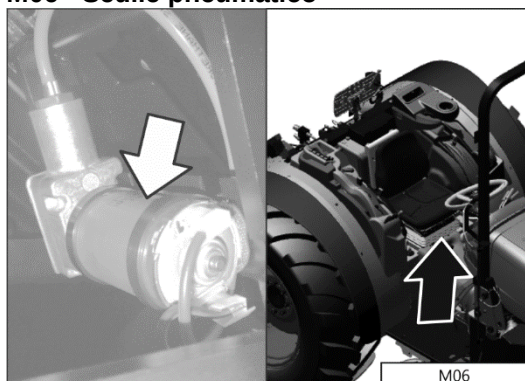


PCB OOS

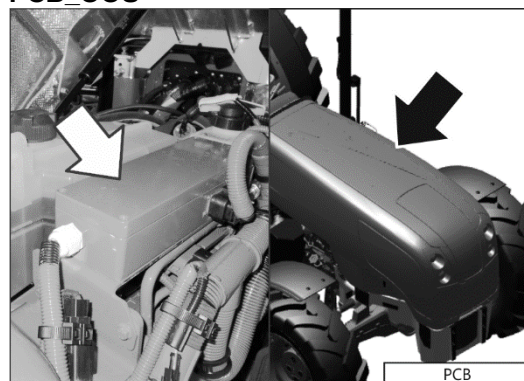


R505 - Riscaldatore filtro carburante

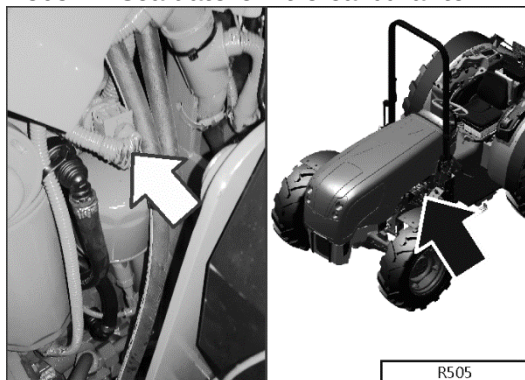


S01 - Interruttore di accensione

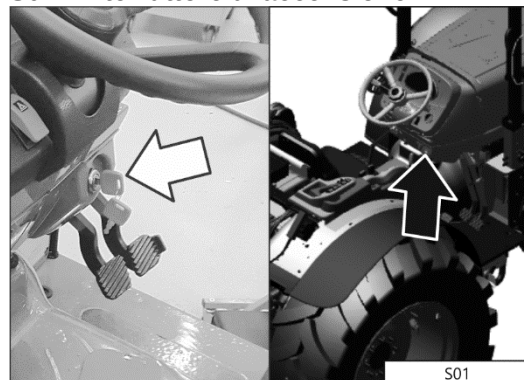


S09 - Leva indicatori di direzione

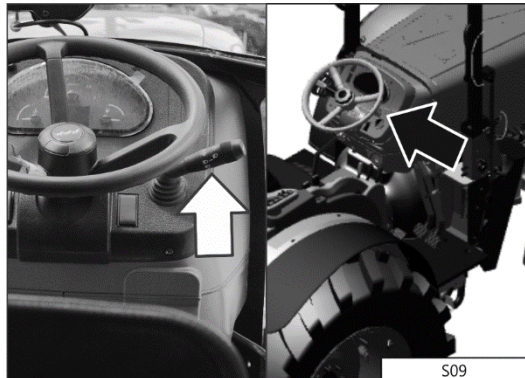


S11 - Interruttore luci H4

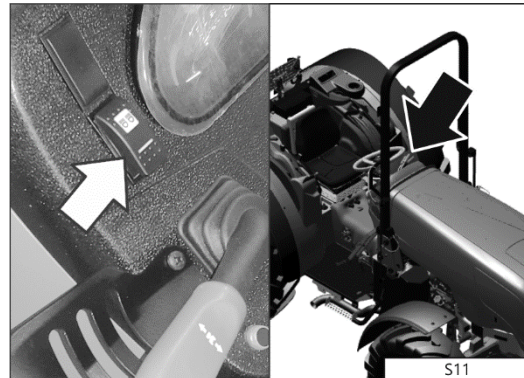


S21A - Interruttore PTO GROUND

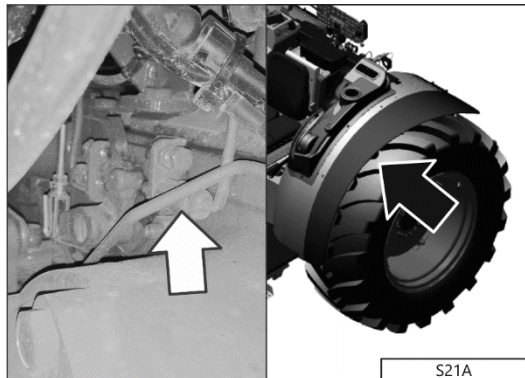


S21B - Interruttore PTO DIRETTA

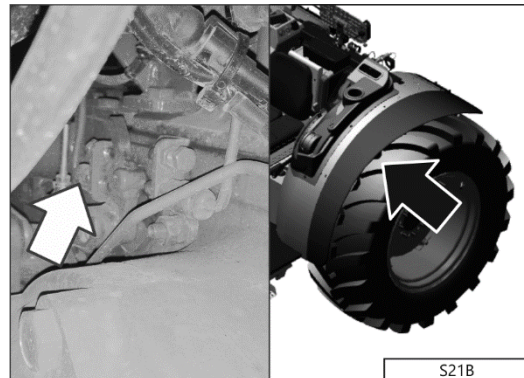


S22 - Interruttore blocco differenziale

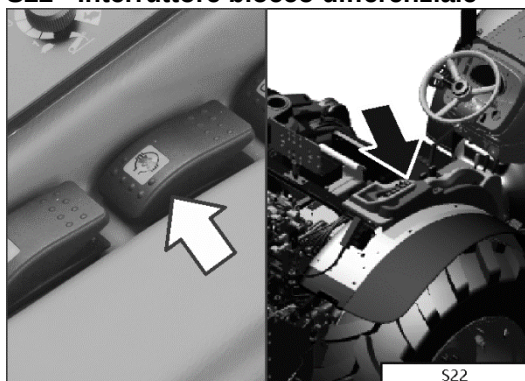


S36 - Interruttore girofaro

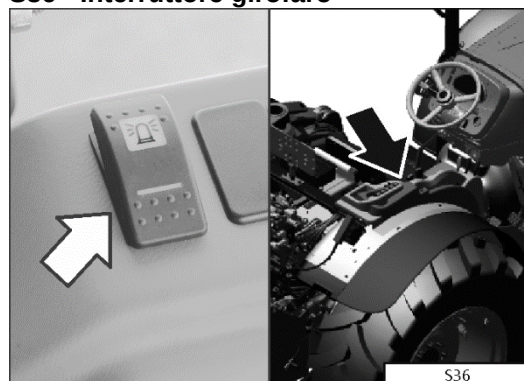


S63 - Interruttore doppia trazione

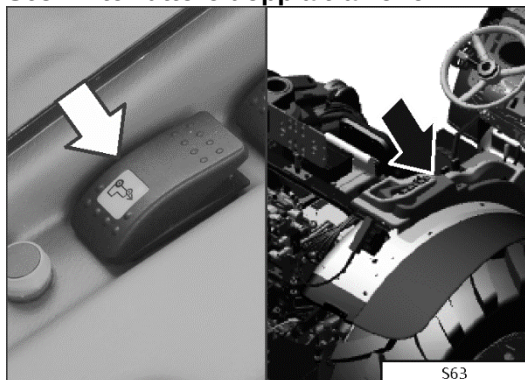


S72 - Interruttore fine corsa pedale frizione

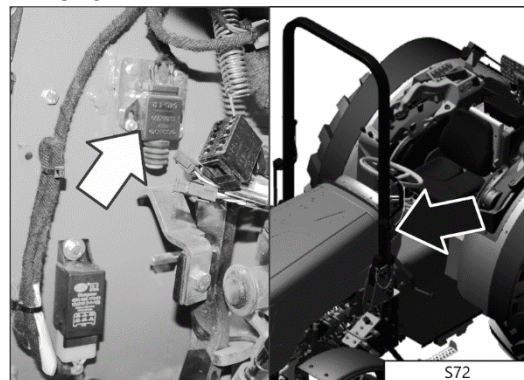


S300 - Interruttore funzione HI-LO

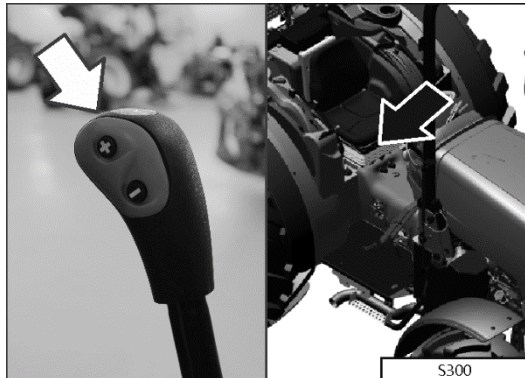


S900 - Interruttore stacca batteria

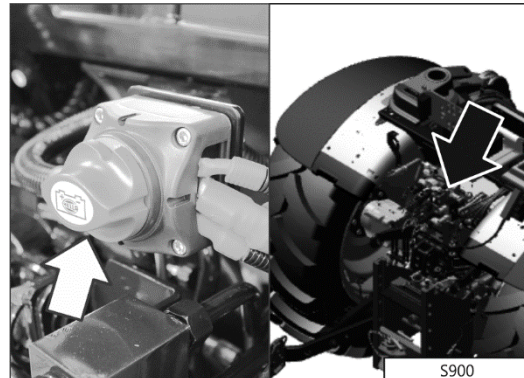


S987 - Interruttore blocco-flottante

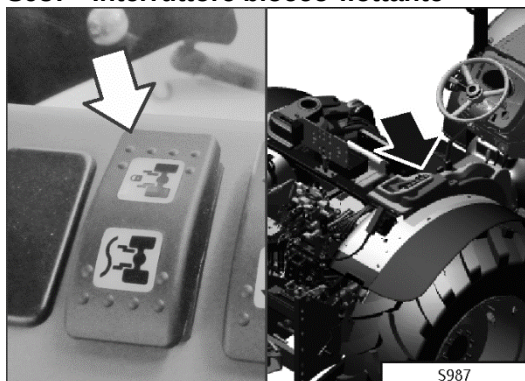


S988 - Interruttore sinistra-destra

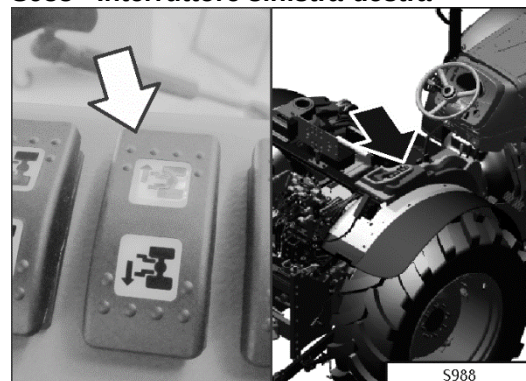


S989 - Interruttore salita-discesa

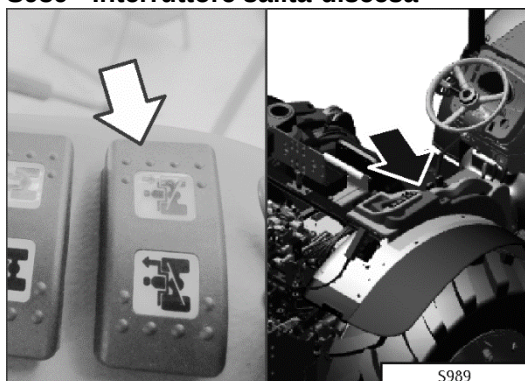


S990 - Pulsante MENU

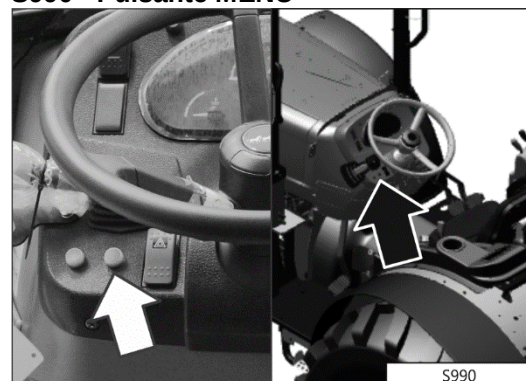


S991 - Pulsante SELEZIONE

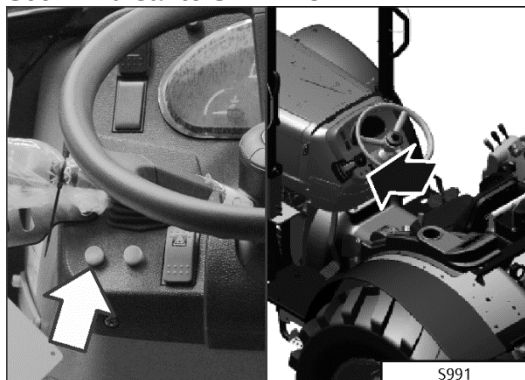


S992A - Pulsante Cruise Control memoria 1

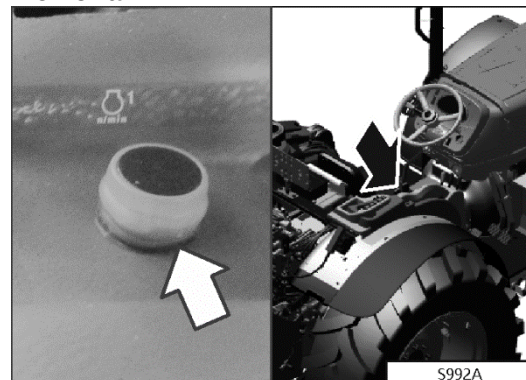


S992B - Pulsante Cruise Control memoria 2

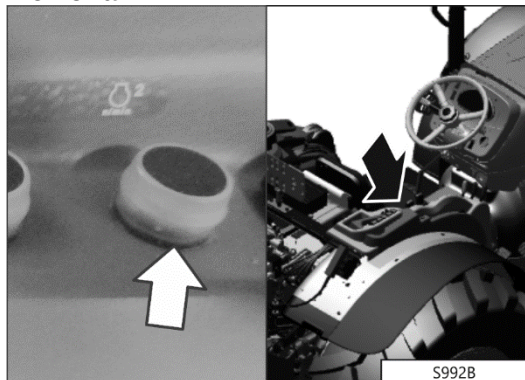


S993 - Pulsante Cruise Control DOWN

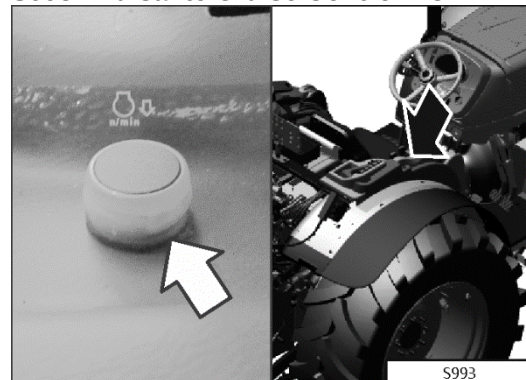


S994 - Pulsante Cruise Control UP

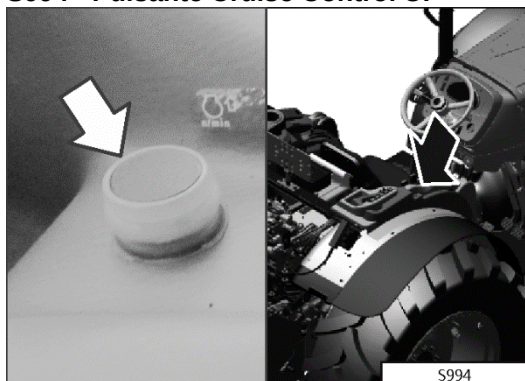


S999 - Interruttore PTO anteriore

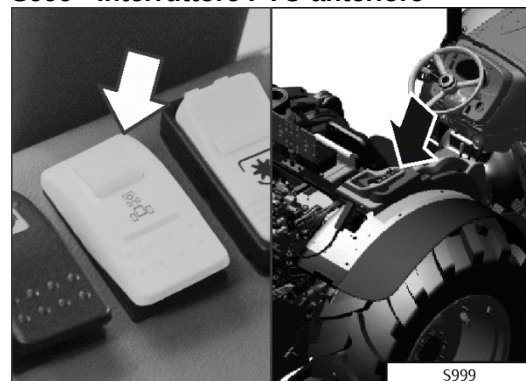


X42 - Presa elettrica 3 poli

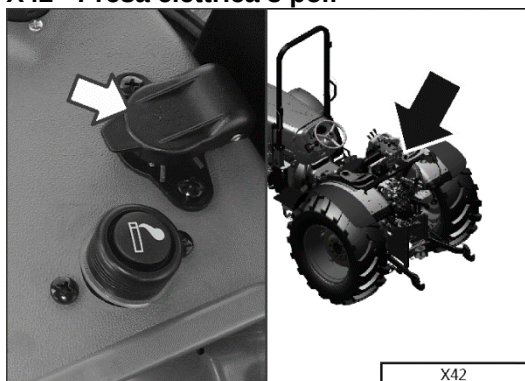


Y03 - Elettrovalvola doppia trazione

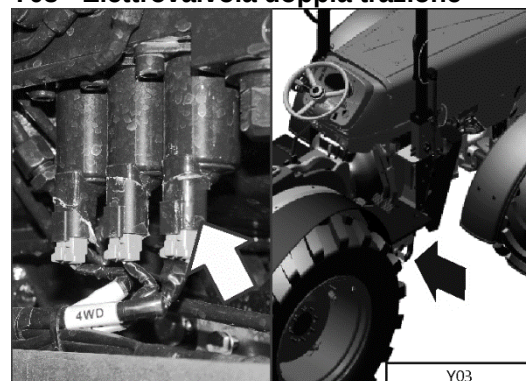


Y05 - Elettrovalvola blocco differenziale

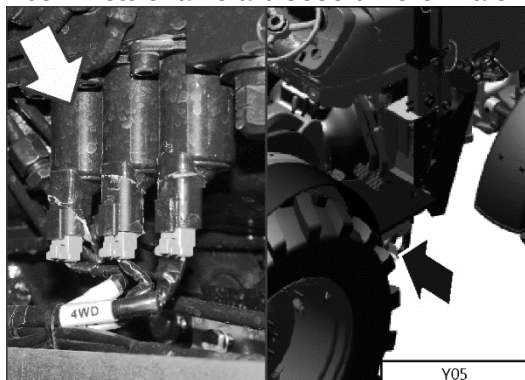


Y31 - Elettrovalvola freno rimorchio

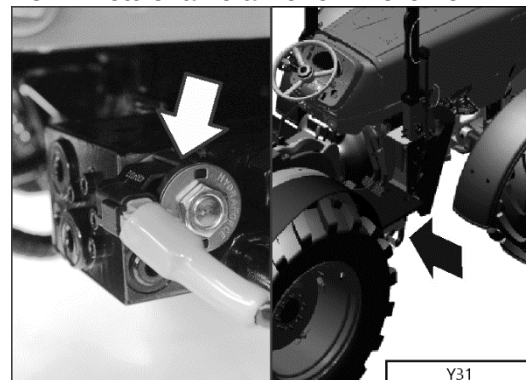


Y350 - Elettrovalvola sicurezza PTO

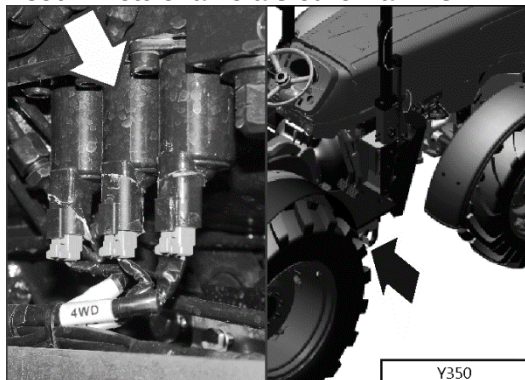


Y986 - Elettrovalvola 7 (DEPORT)

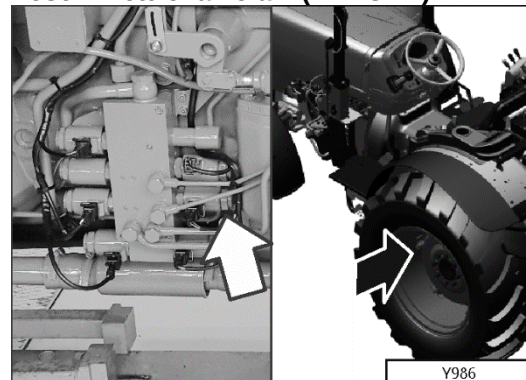


Y987 - Elettrovalvola 6 (DEPORT)

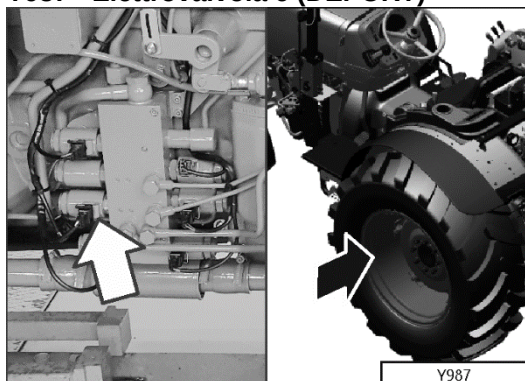


Y988 - Elettrovalvola 5 (DEPORT)

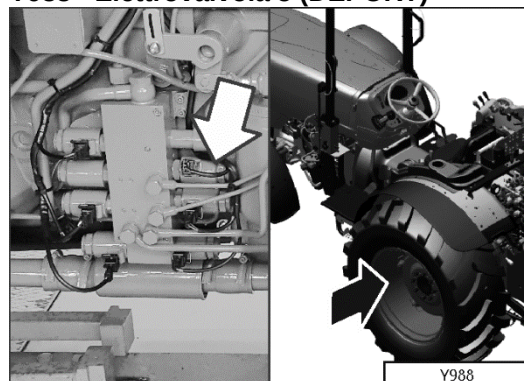


Y989 - Elettrovalvola 4 (DEPORT)

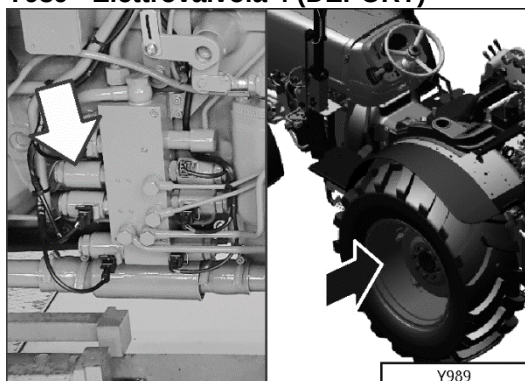


Y990 - Elettrovalvola 3 (DEPORT)

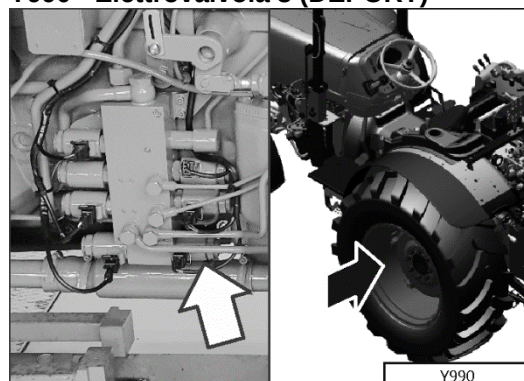

Y991 - Elettrovalvola 2 (DEPORT)

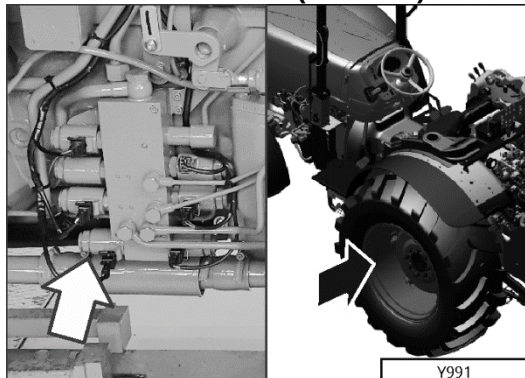

Y992 - Elettrovalvola 1 (DEPORT)

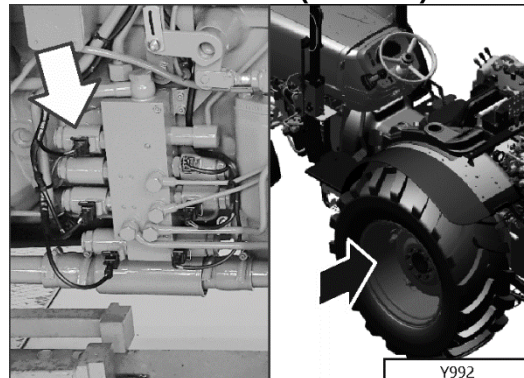

Y999 - Elettrovalvola PTO anteriore

