



W30


W29



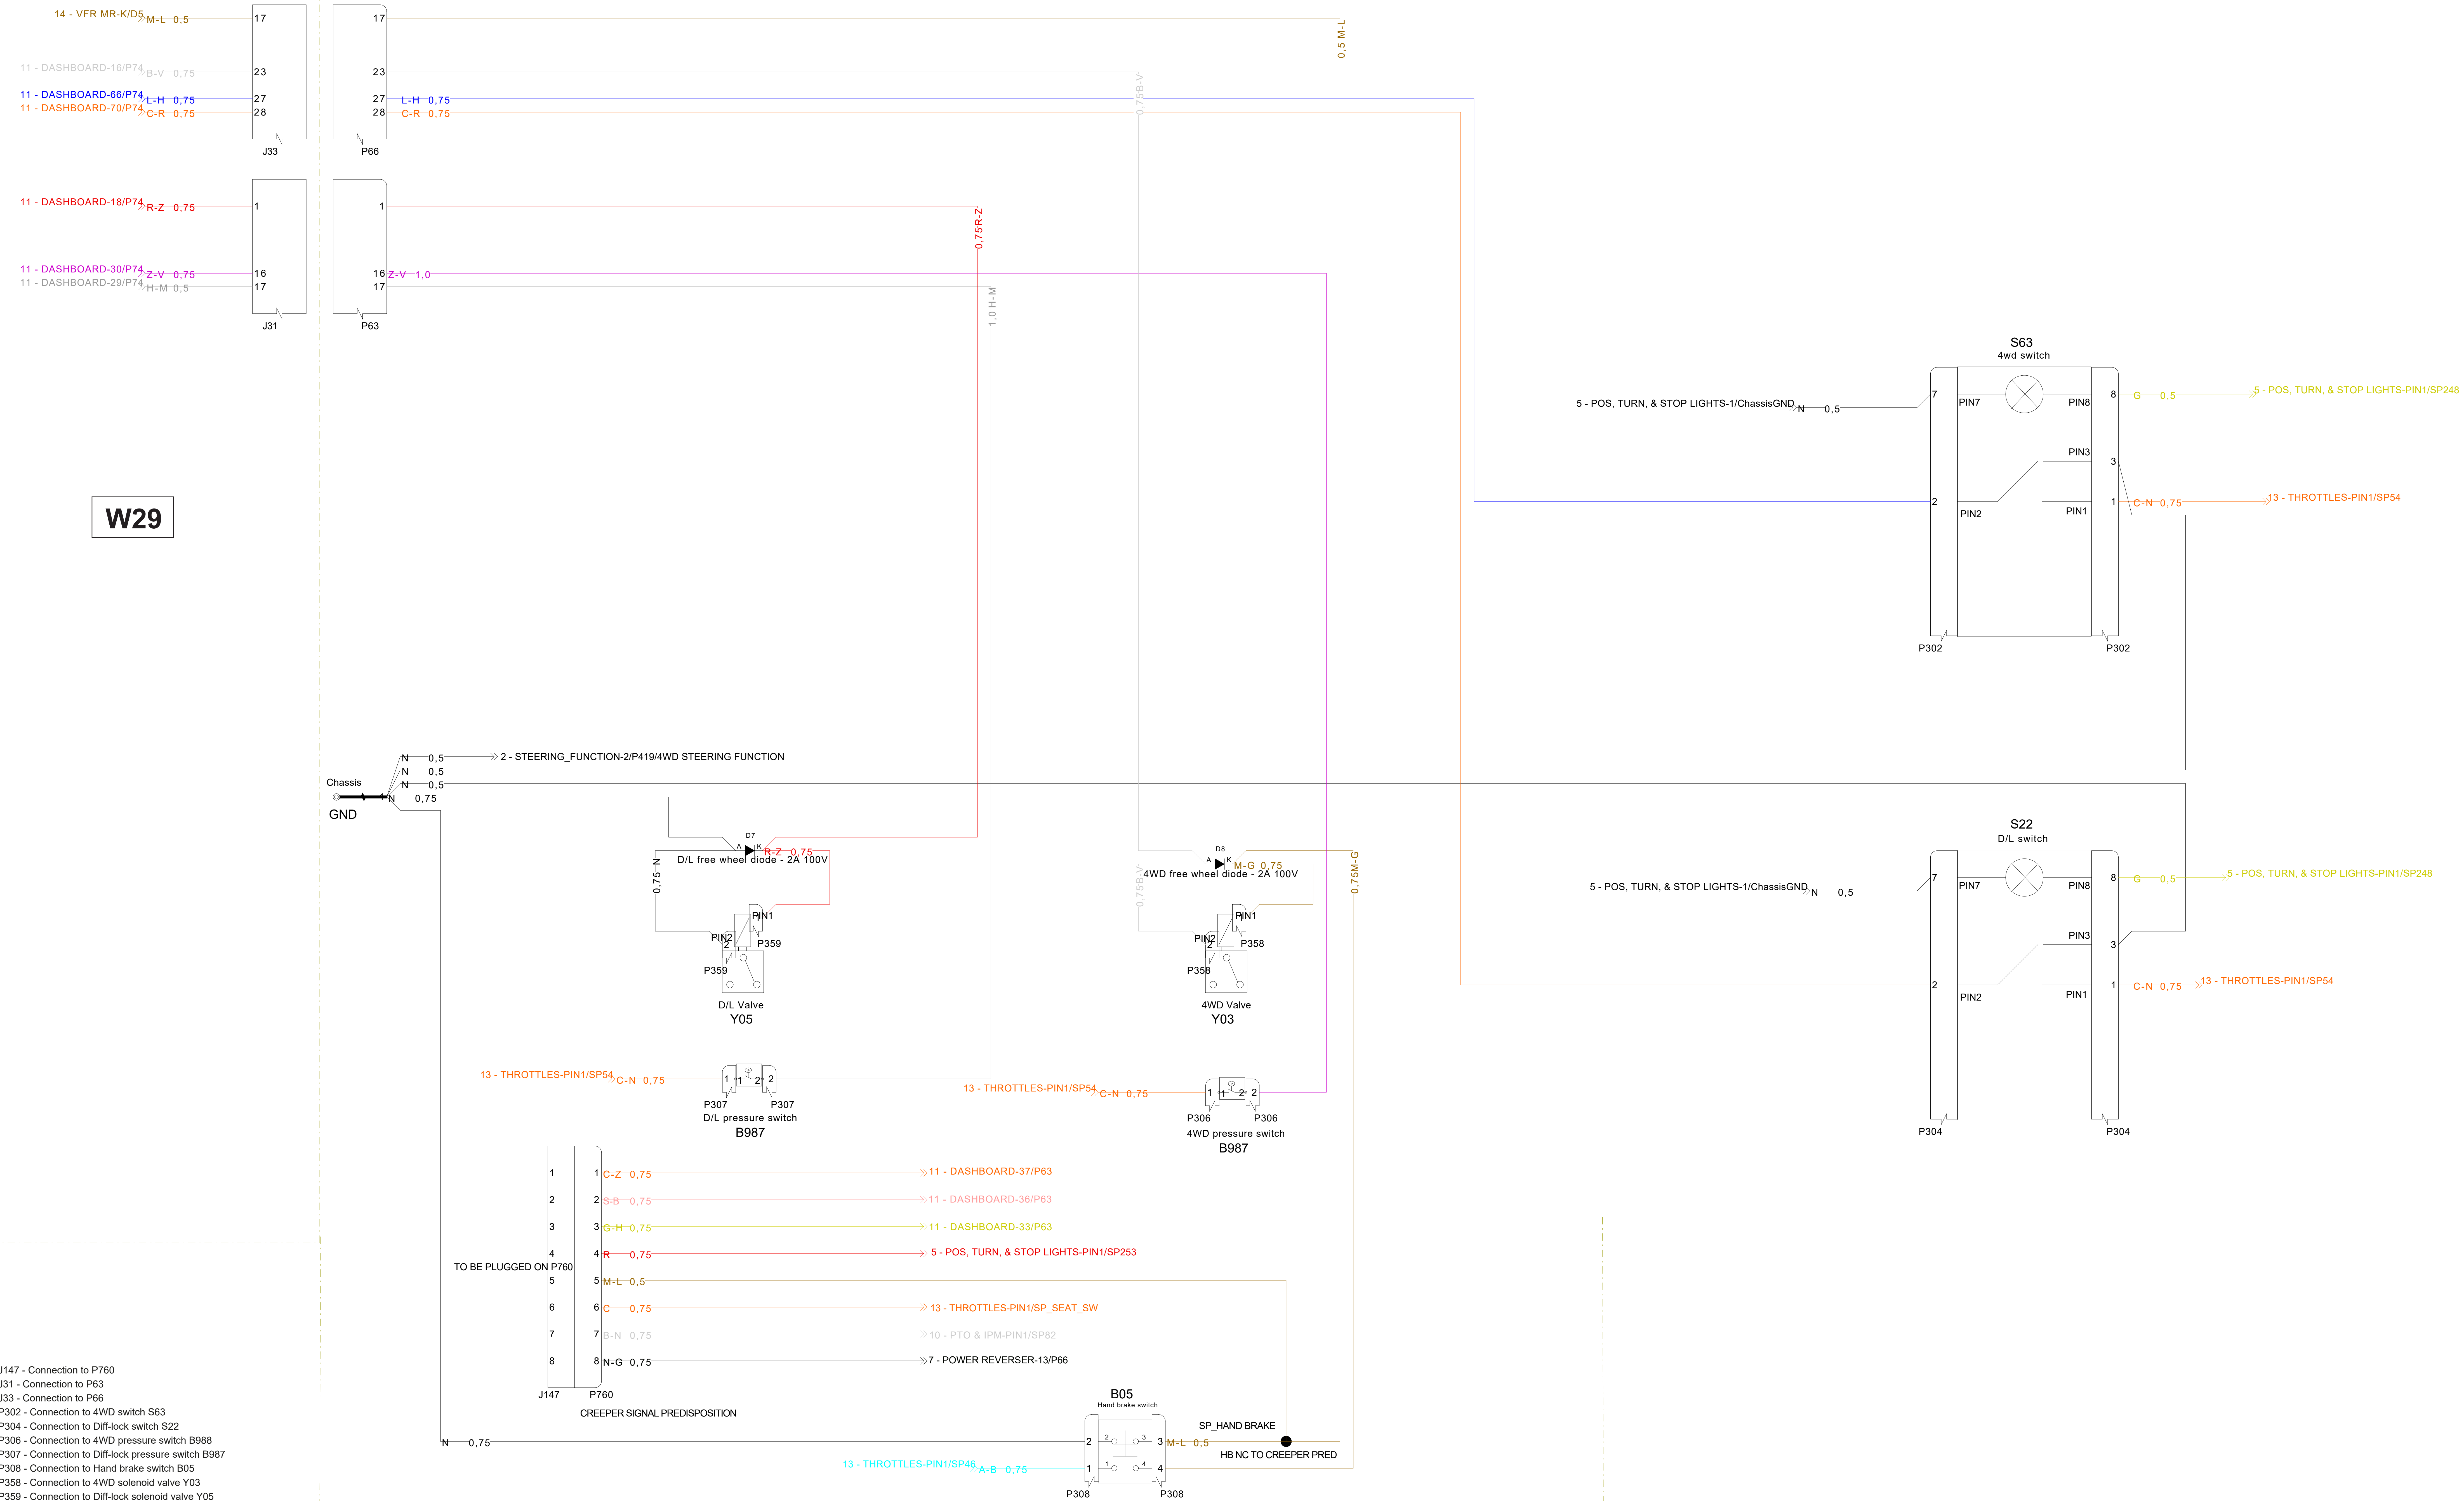

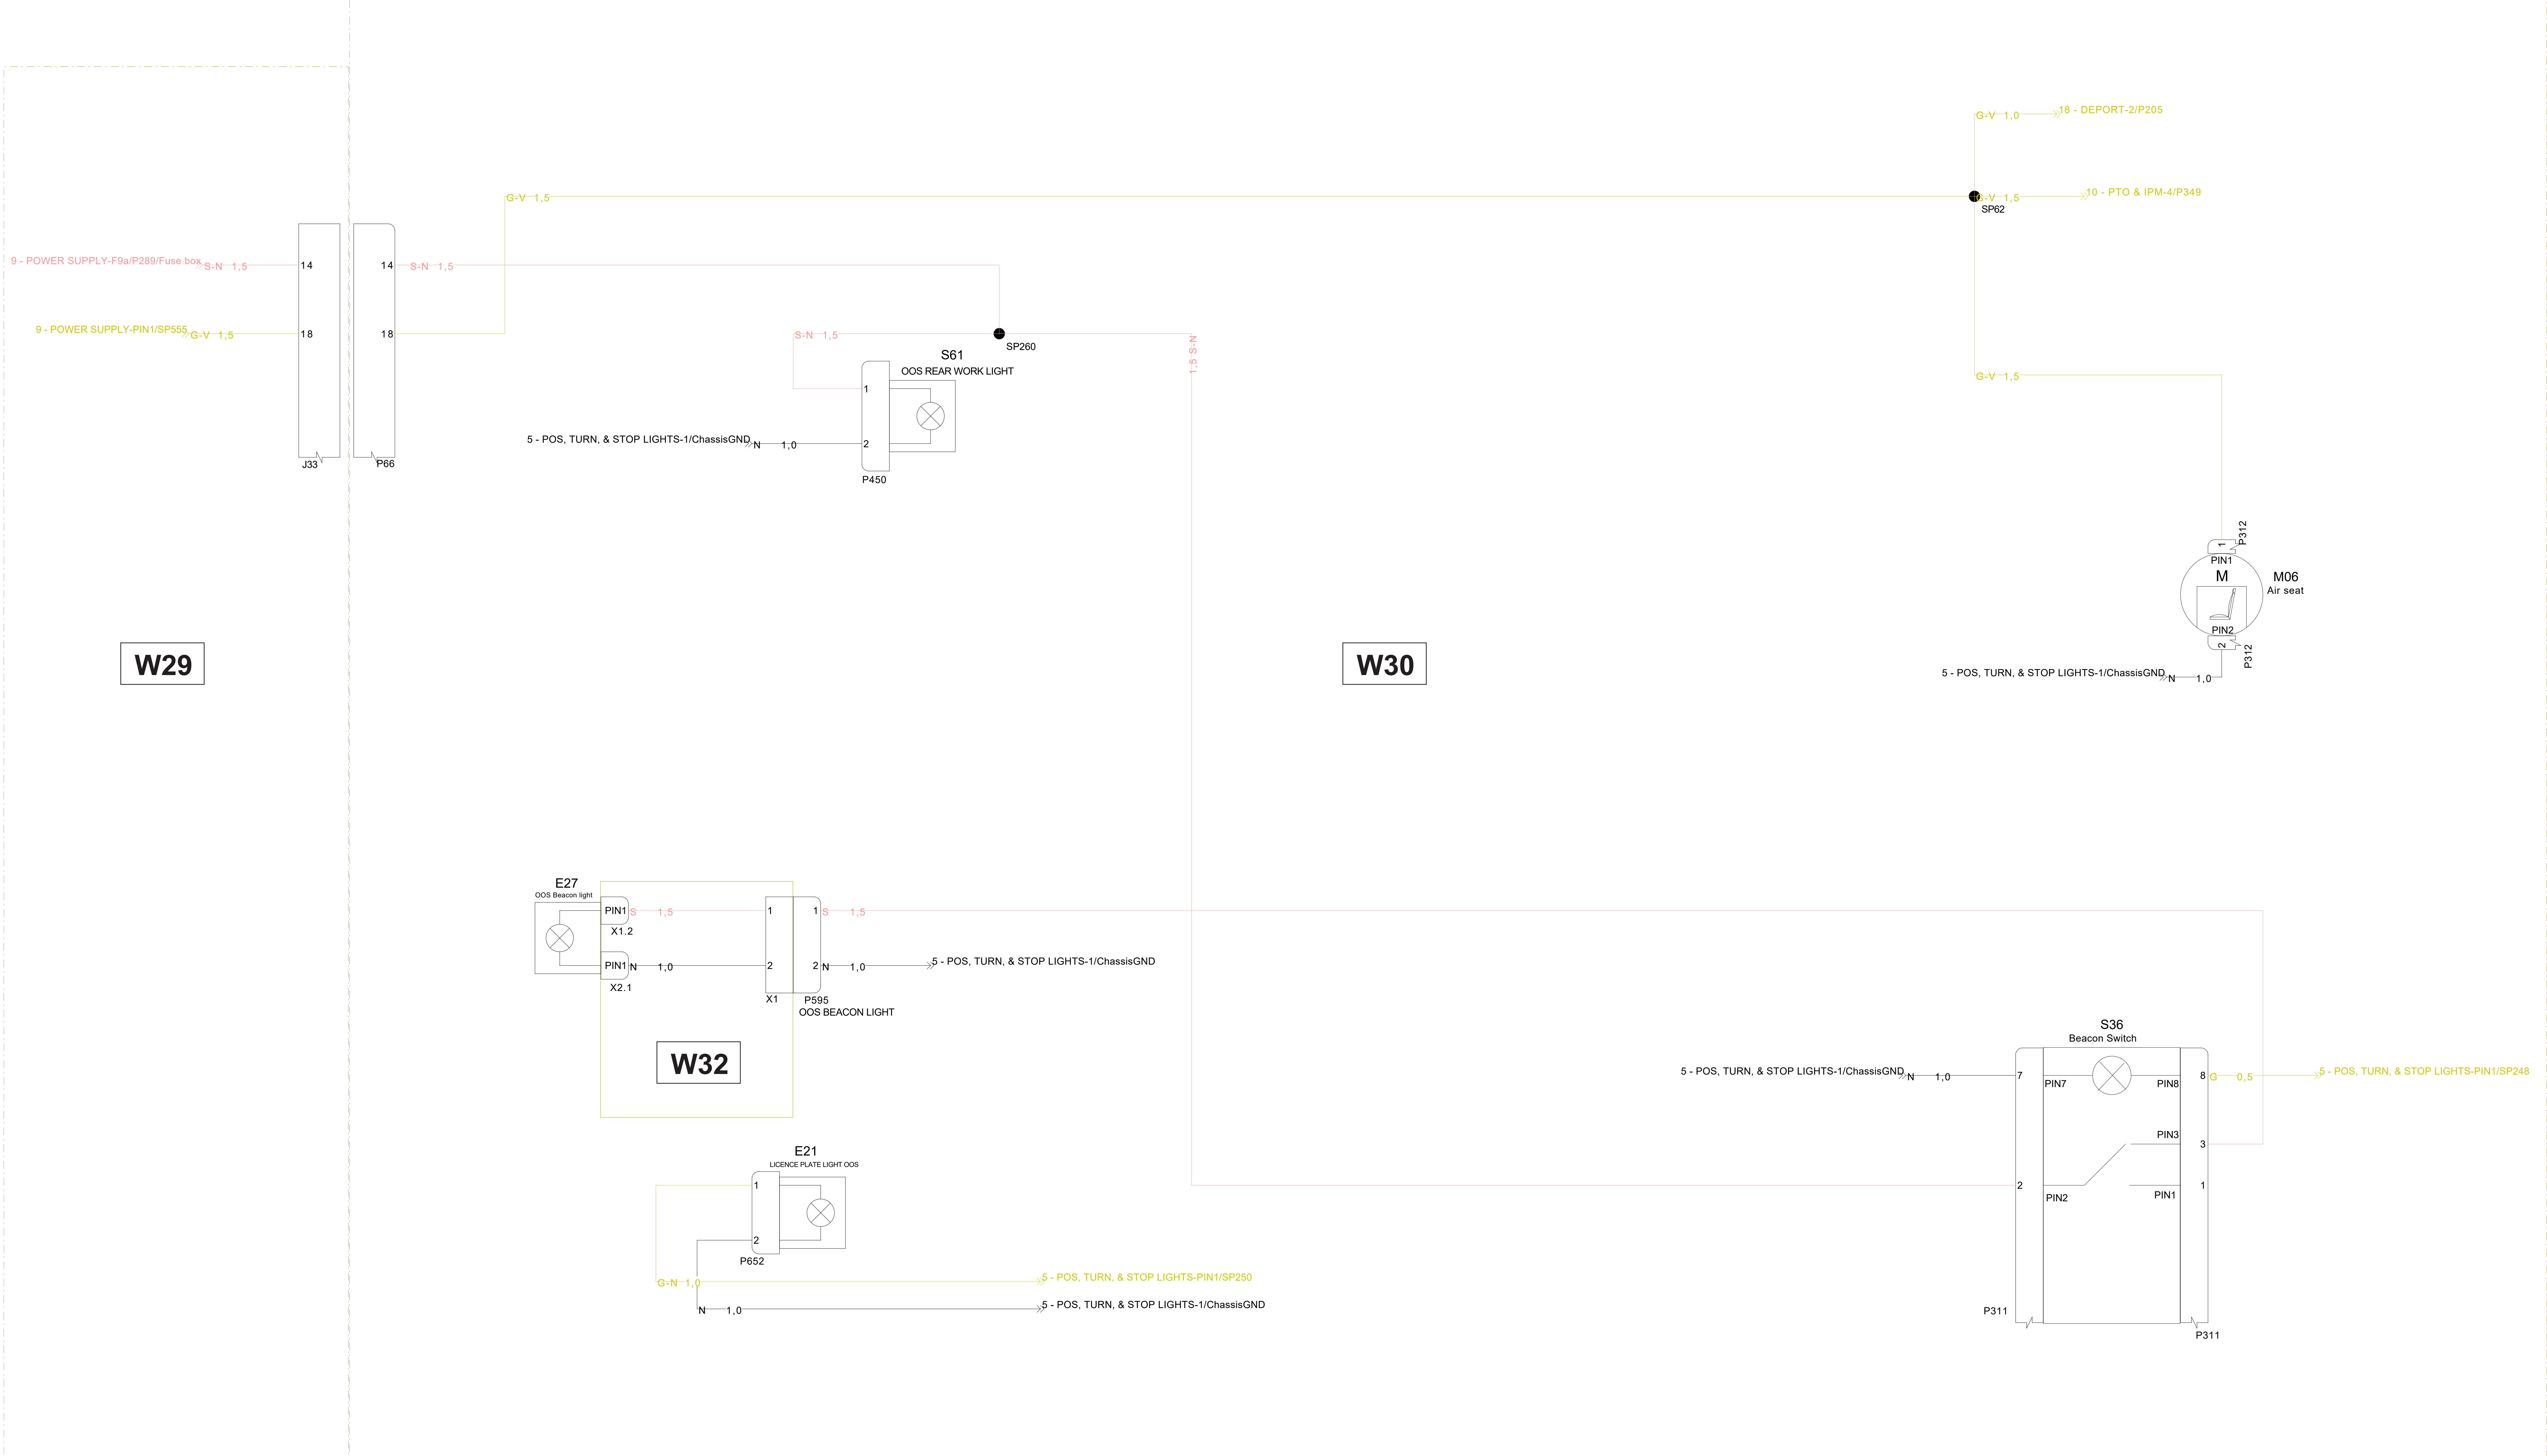



J33 - Connection to P66
P311 - Connection to Beacon switch S36
P312 - Connection to Air seat M06
P450 - Connection to Rear work light S61
P595 - Connection to X1
P652 - Connection to Licence plate light E21
P66 - Connection to J33
X1 - Connection to P595
X1.2 - Connection to Beacon light E27
X2.1 - Connection to Beacon light E27

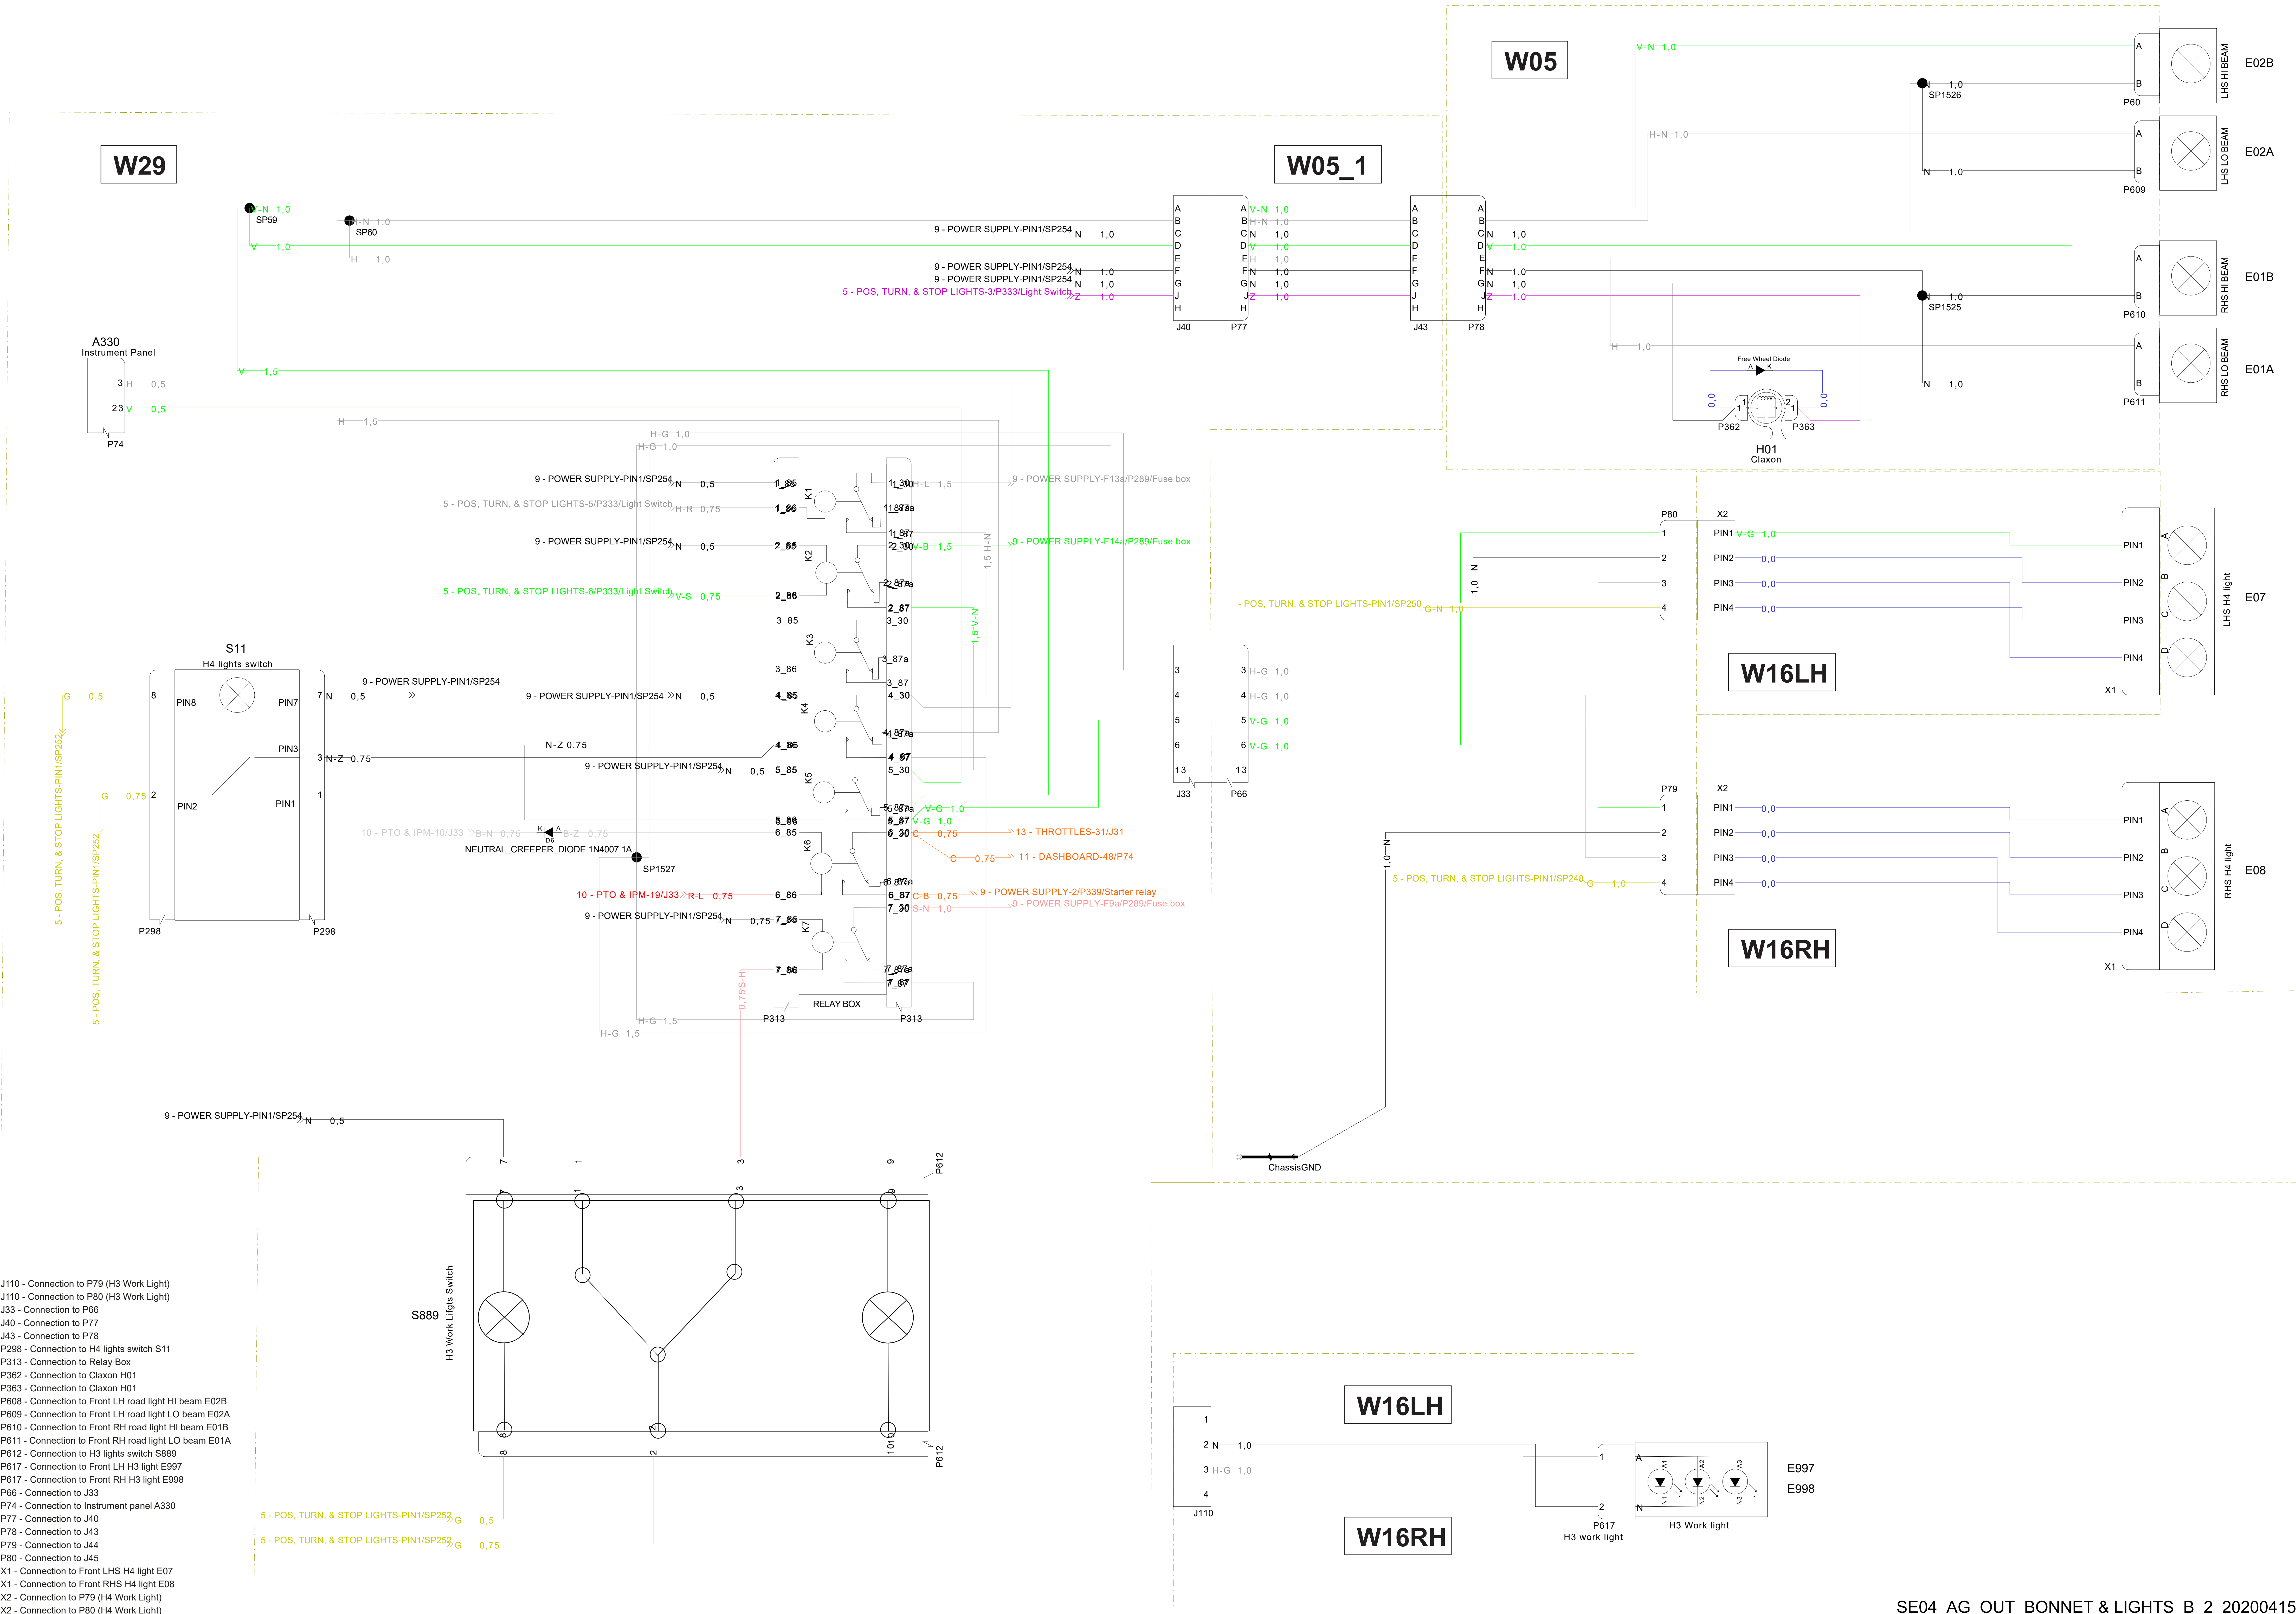




J33 - Connection to P66
P326 - Connection to Flusher Unit
P327 - Connection to Hazard switch S106
P328 - Connection to RH grabrail light E03
P329 - Connection to LH grabrail light E04
P330 - Connection to Rear RH road light E14
P331 - Connection to Trailer socket
P332 - Connection to Rear LH road light E13
P333 - Connection to Blinker lever S09
P364 - Connection to Blinker lever S09
P66 - Connection to J33
P74 - Connection to Instrument panel A330

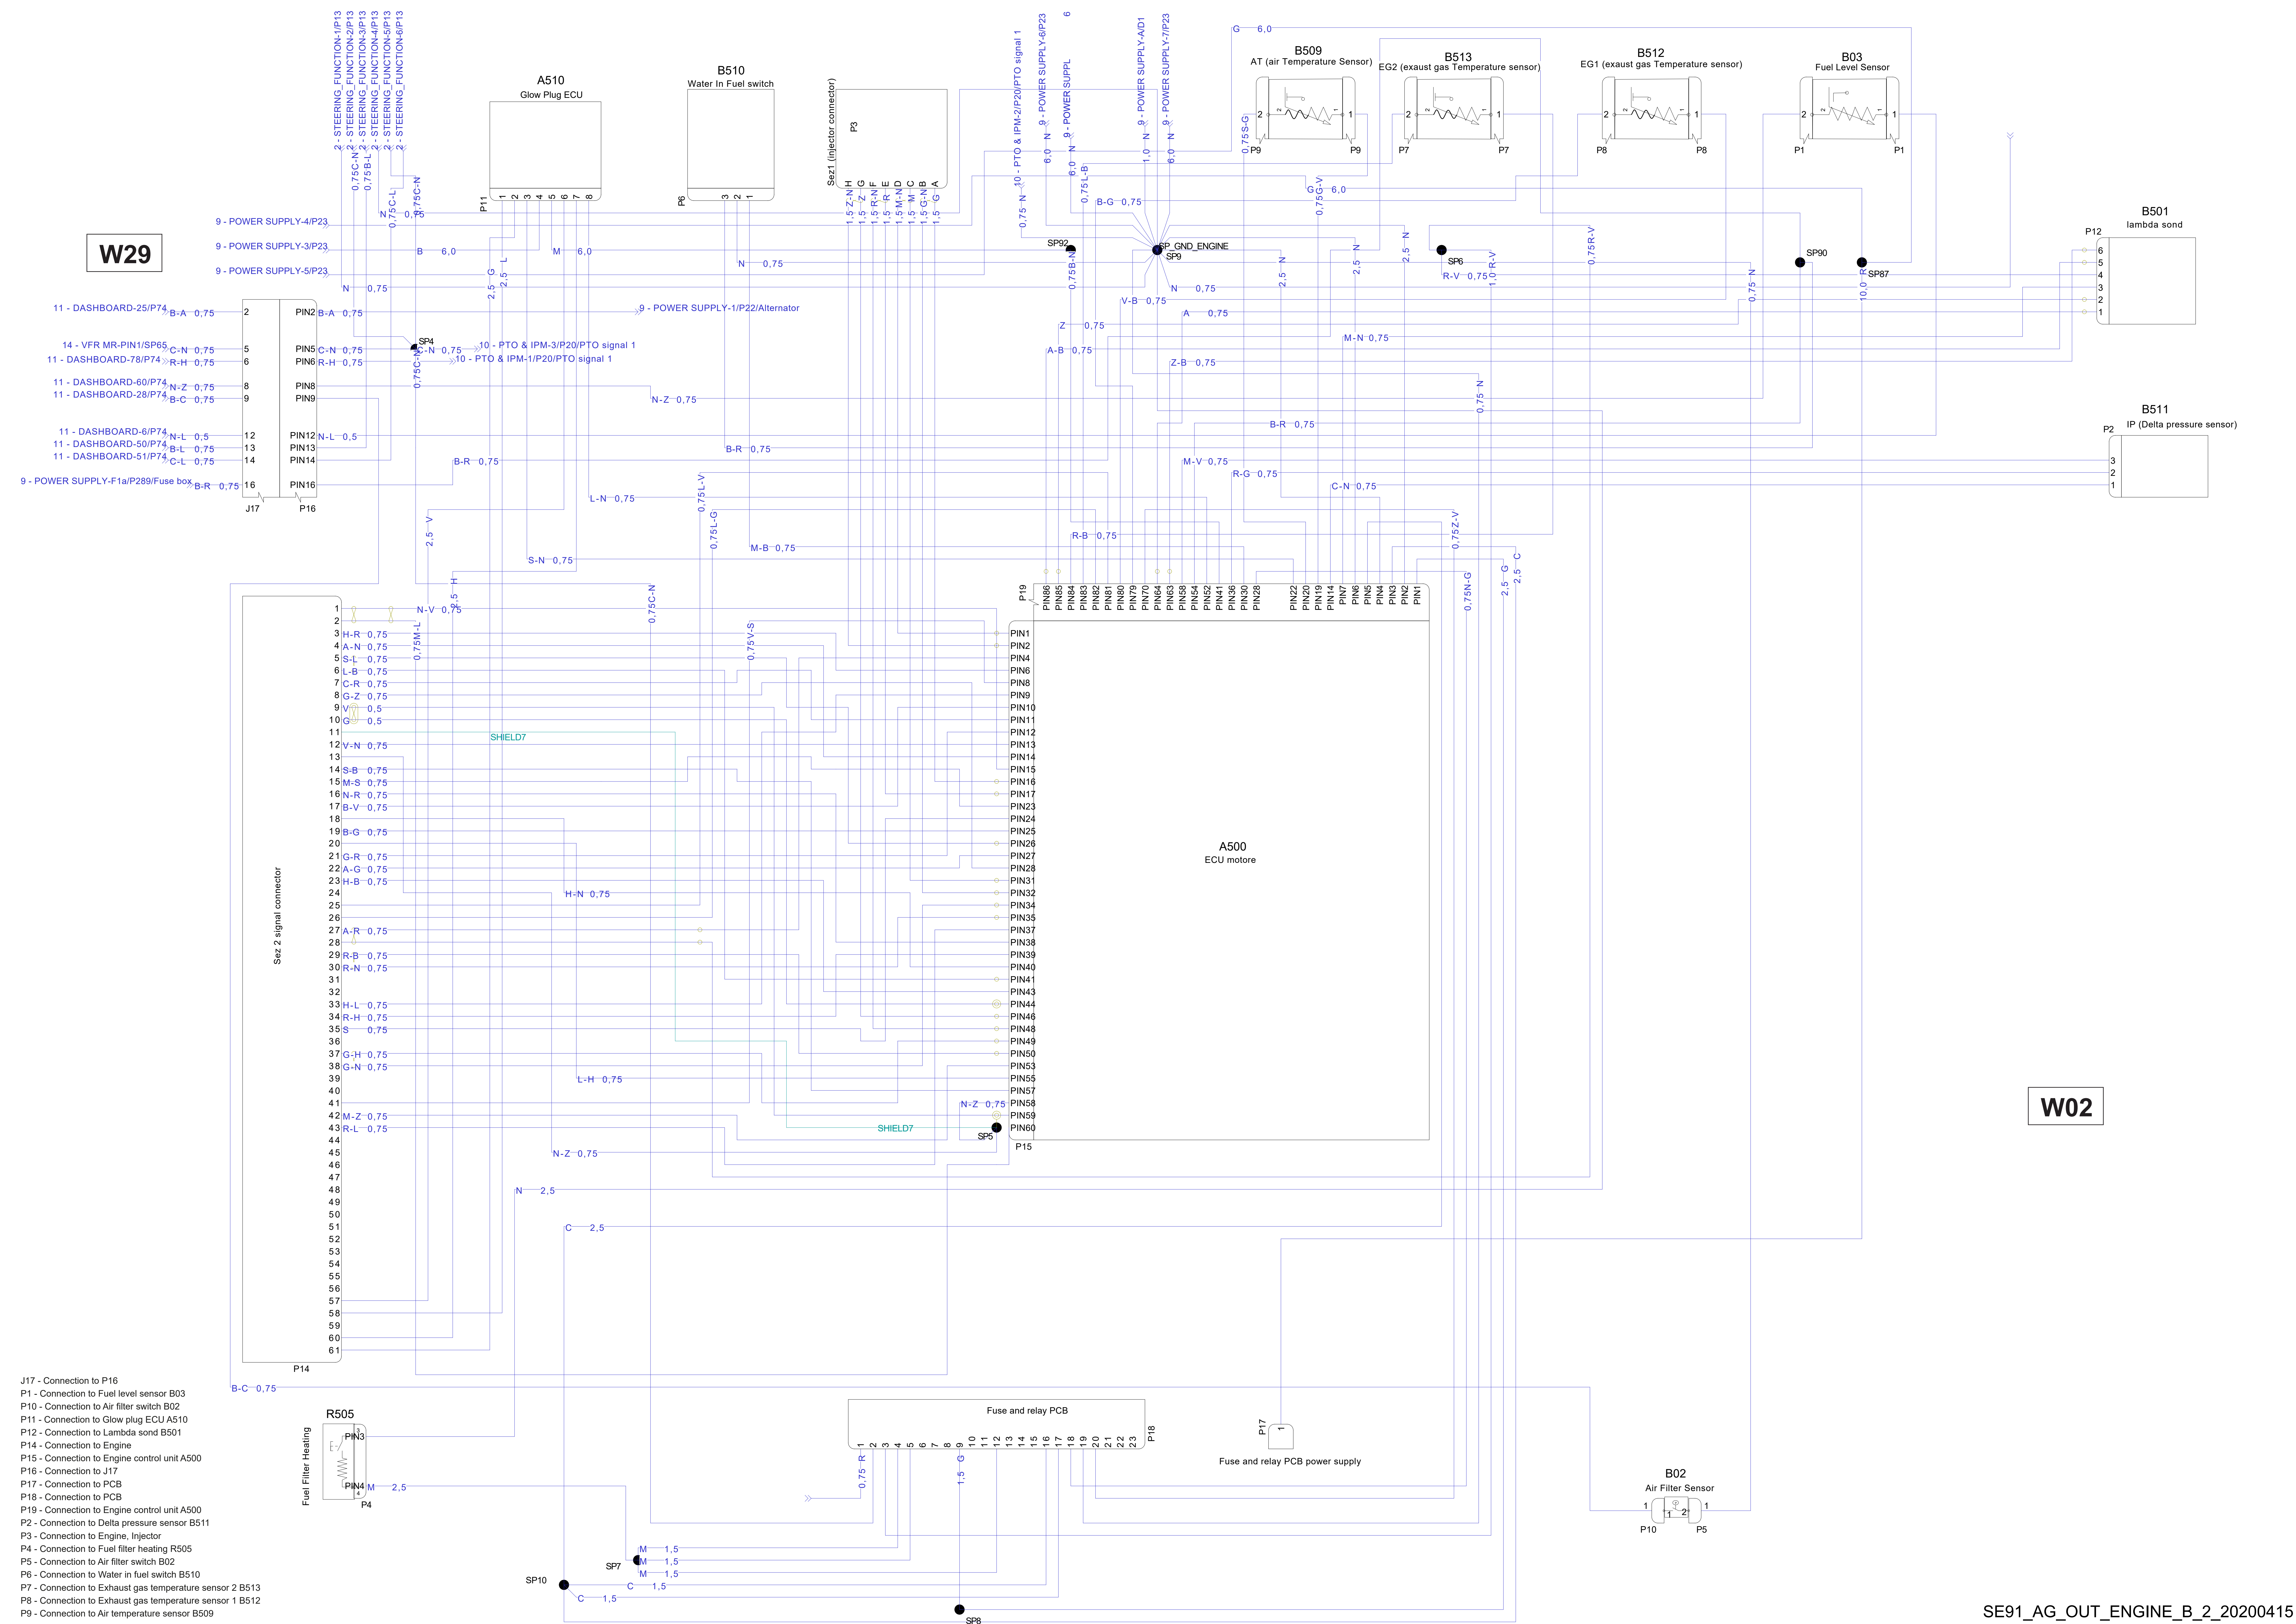


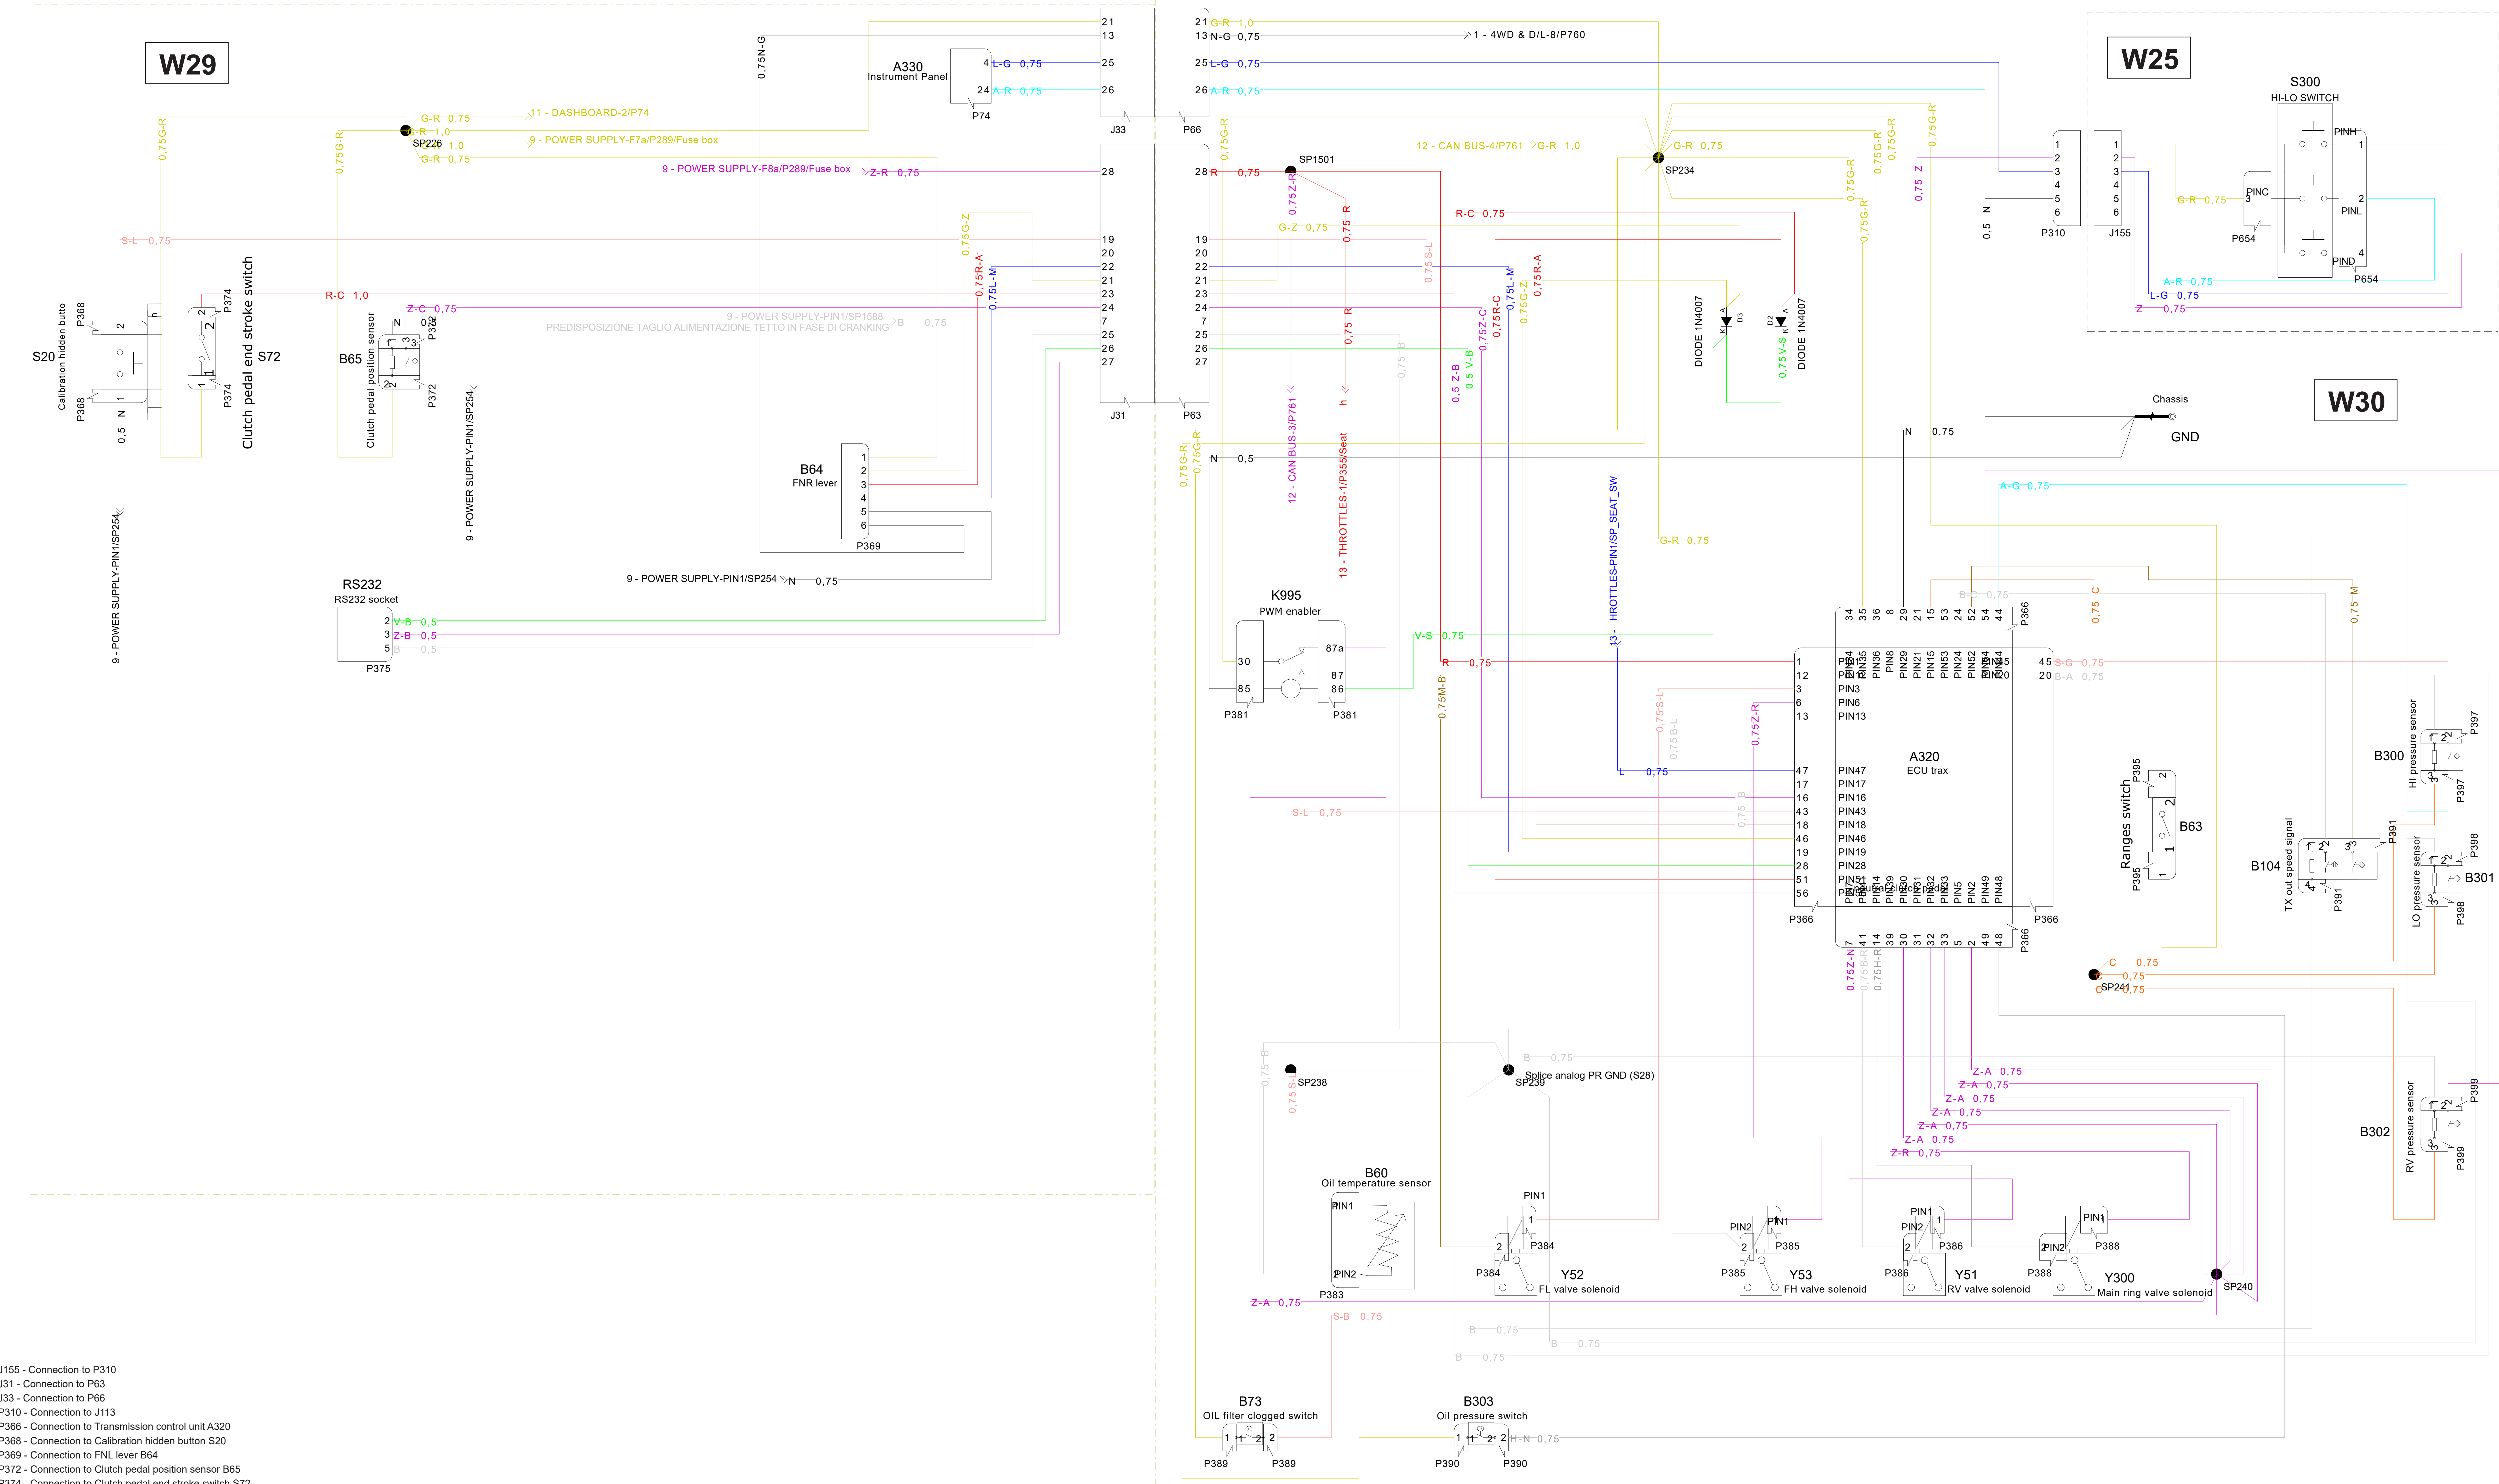


- J155 - Connection to P310
J31 - Connection to P63
J33 - Connection to P66
P310 - Connection to J113
P366 - Connection to Transmission control unit A320
P368 - Connection to Calibration hidden button S20
P369 - Connection to FNL lever B64
P372 - Connection to Clutch pedal position sensor B65
P374 - Connection to Clutch pedal end stroke switch S72
P375 - Connection to Socket RS232
P381 - Connection to PWM enabler K995
P383 - Connection to Transmission oil temperature sensor B60
P384 - Connection to FL solenoid valve Y52
P385 - Connection to FH solenoid valve Y53
P386 - Connection to RV solenoid valve Y51
P388 - Connection to Main ring solenoid valve Y300
P389 - Connection to Transmission oil filter clogged switch B73
P390 - Connection to Transmission oil pressure switch B303
P391 - Connection to Transmission out speed signal B104
P395 - Connection to Ranges switch B63
P397 - Connection to HI pressure sensor B300
P398 - Connection to LO pressure sensor B301
P399 - Connection to RV pressure sensor B302
P63 - Connection to J31
P64 - Connection to HI-LO switch S300
P66 - Connection to J33
P74 - Connection to Instrument panel A330

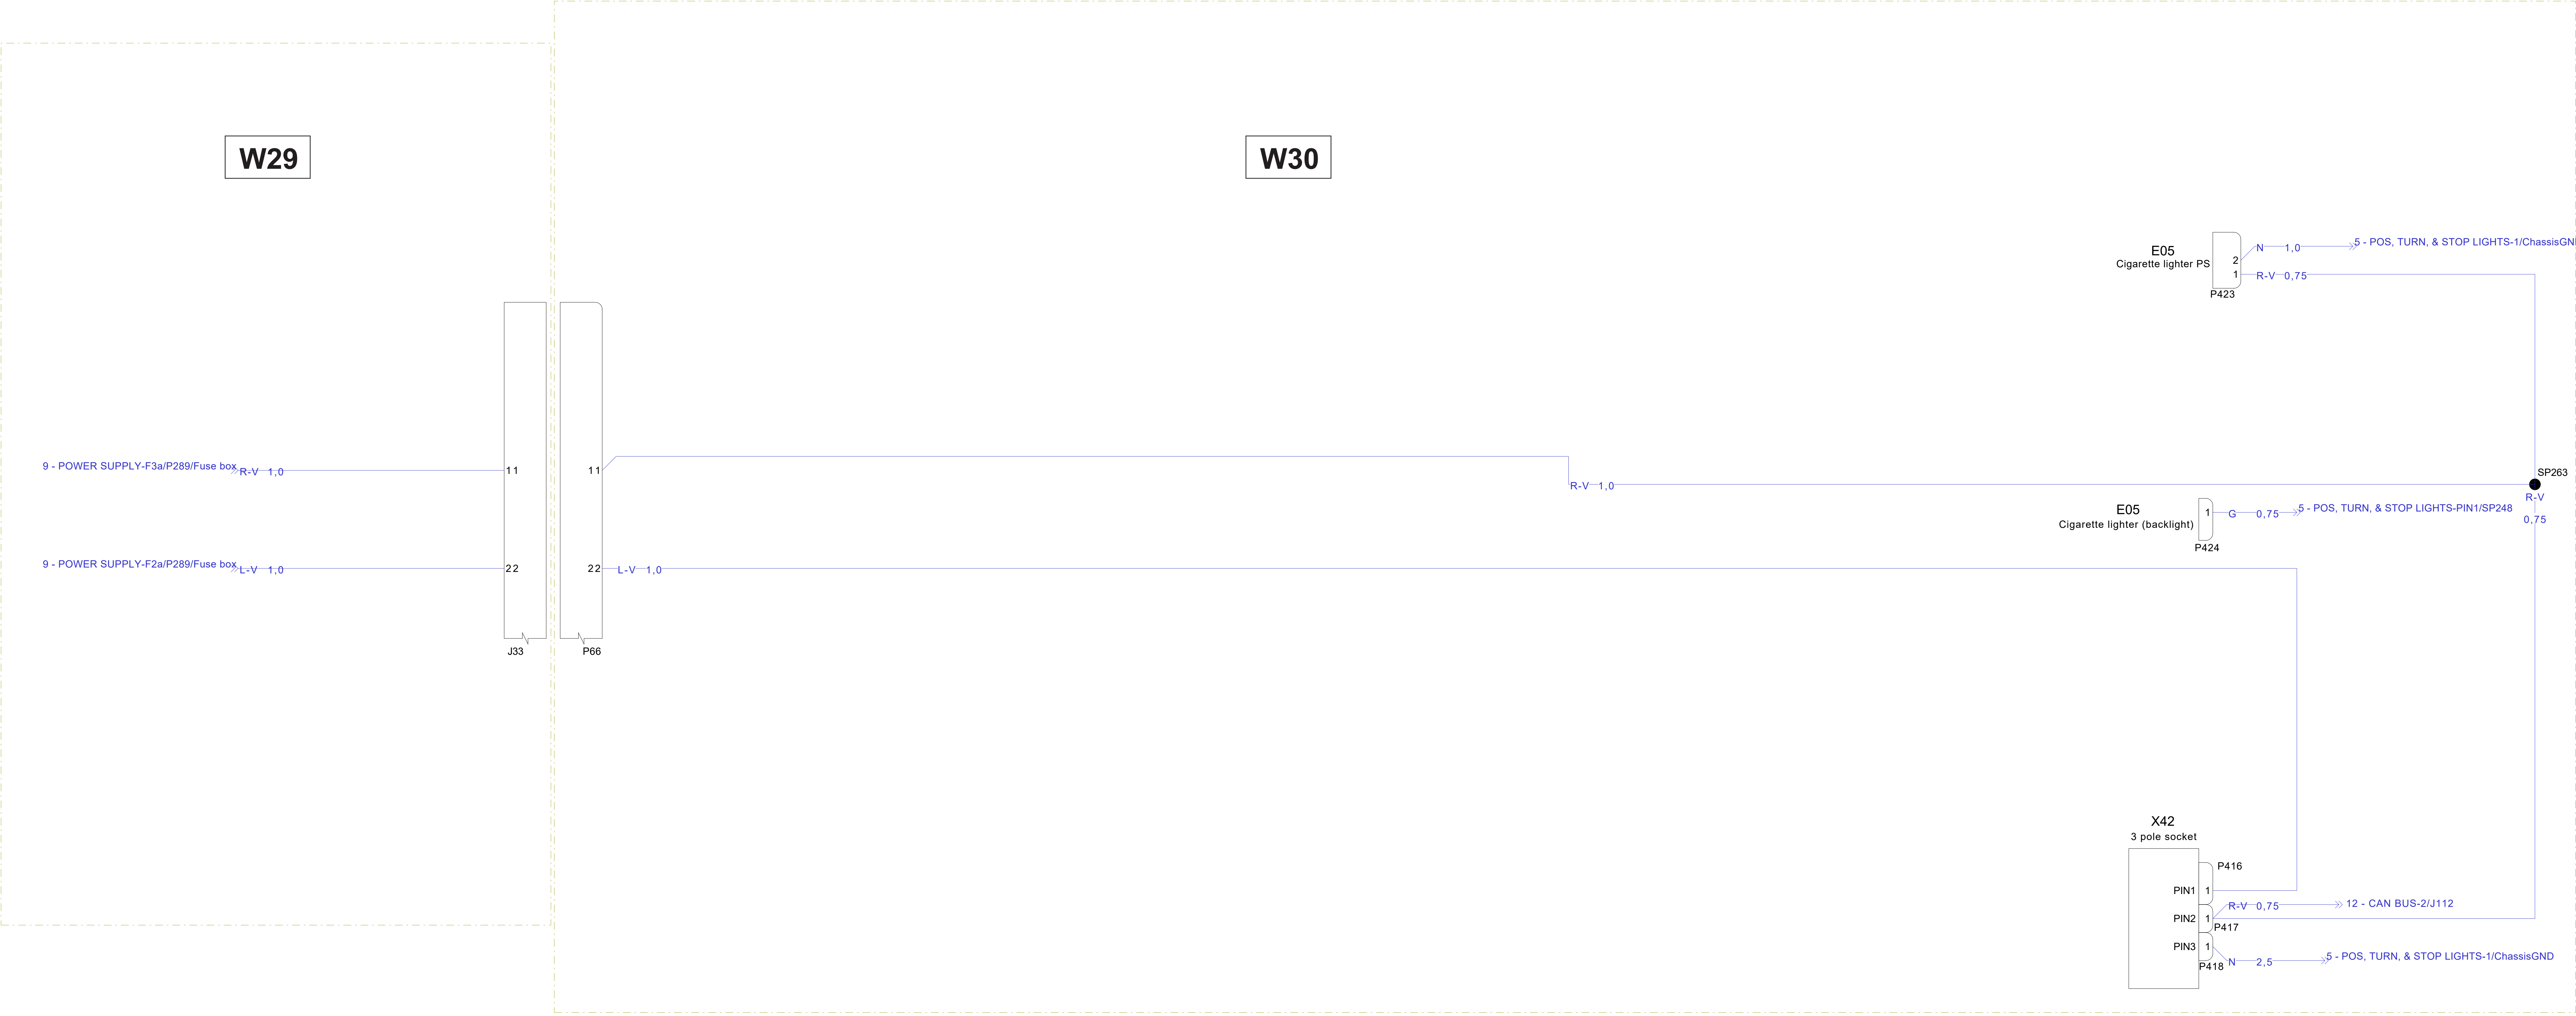




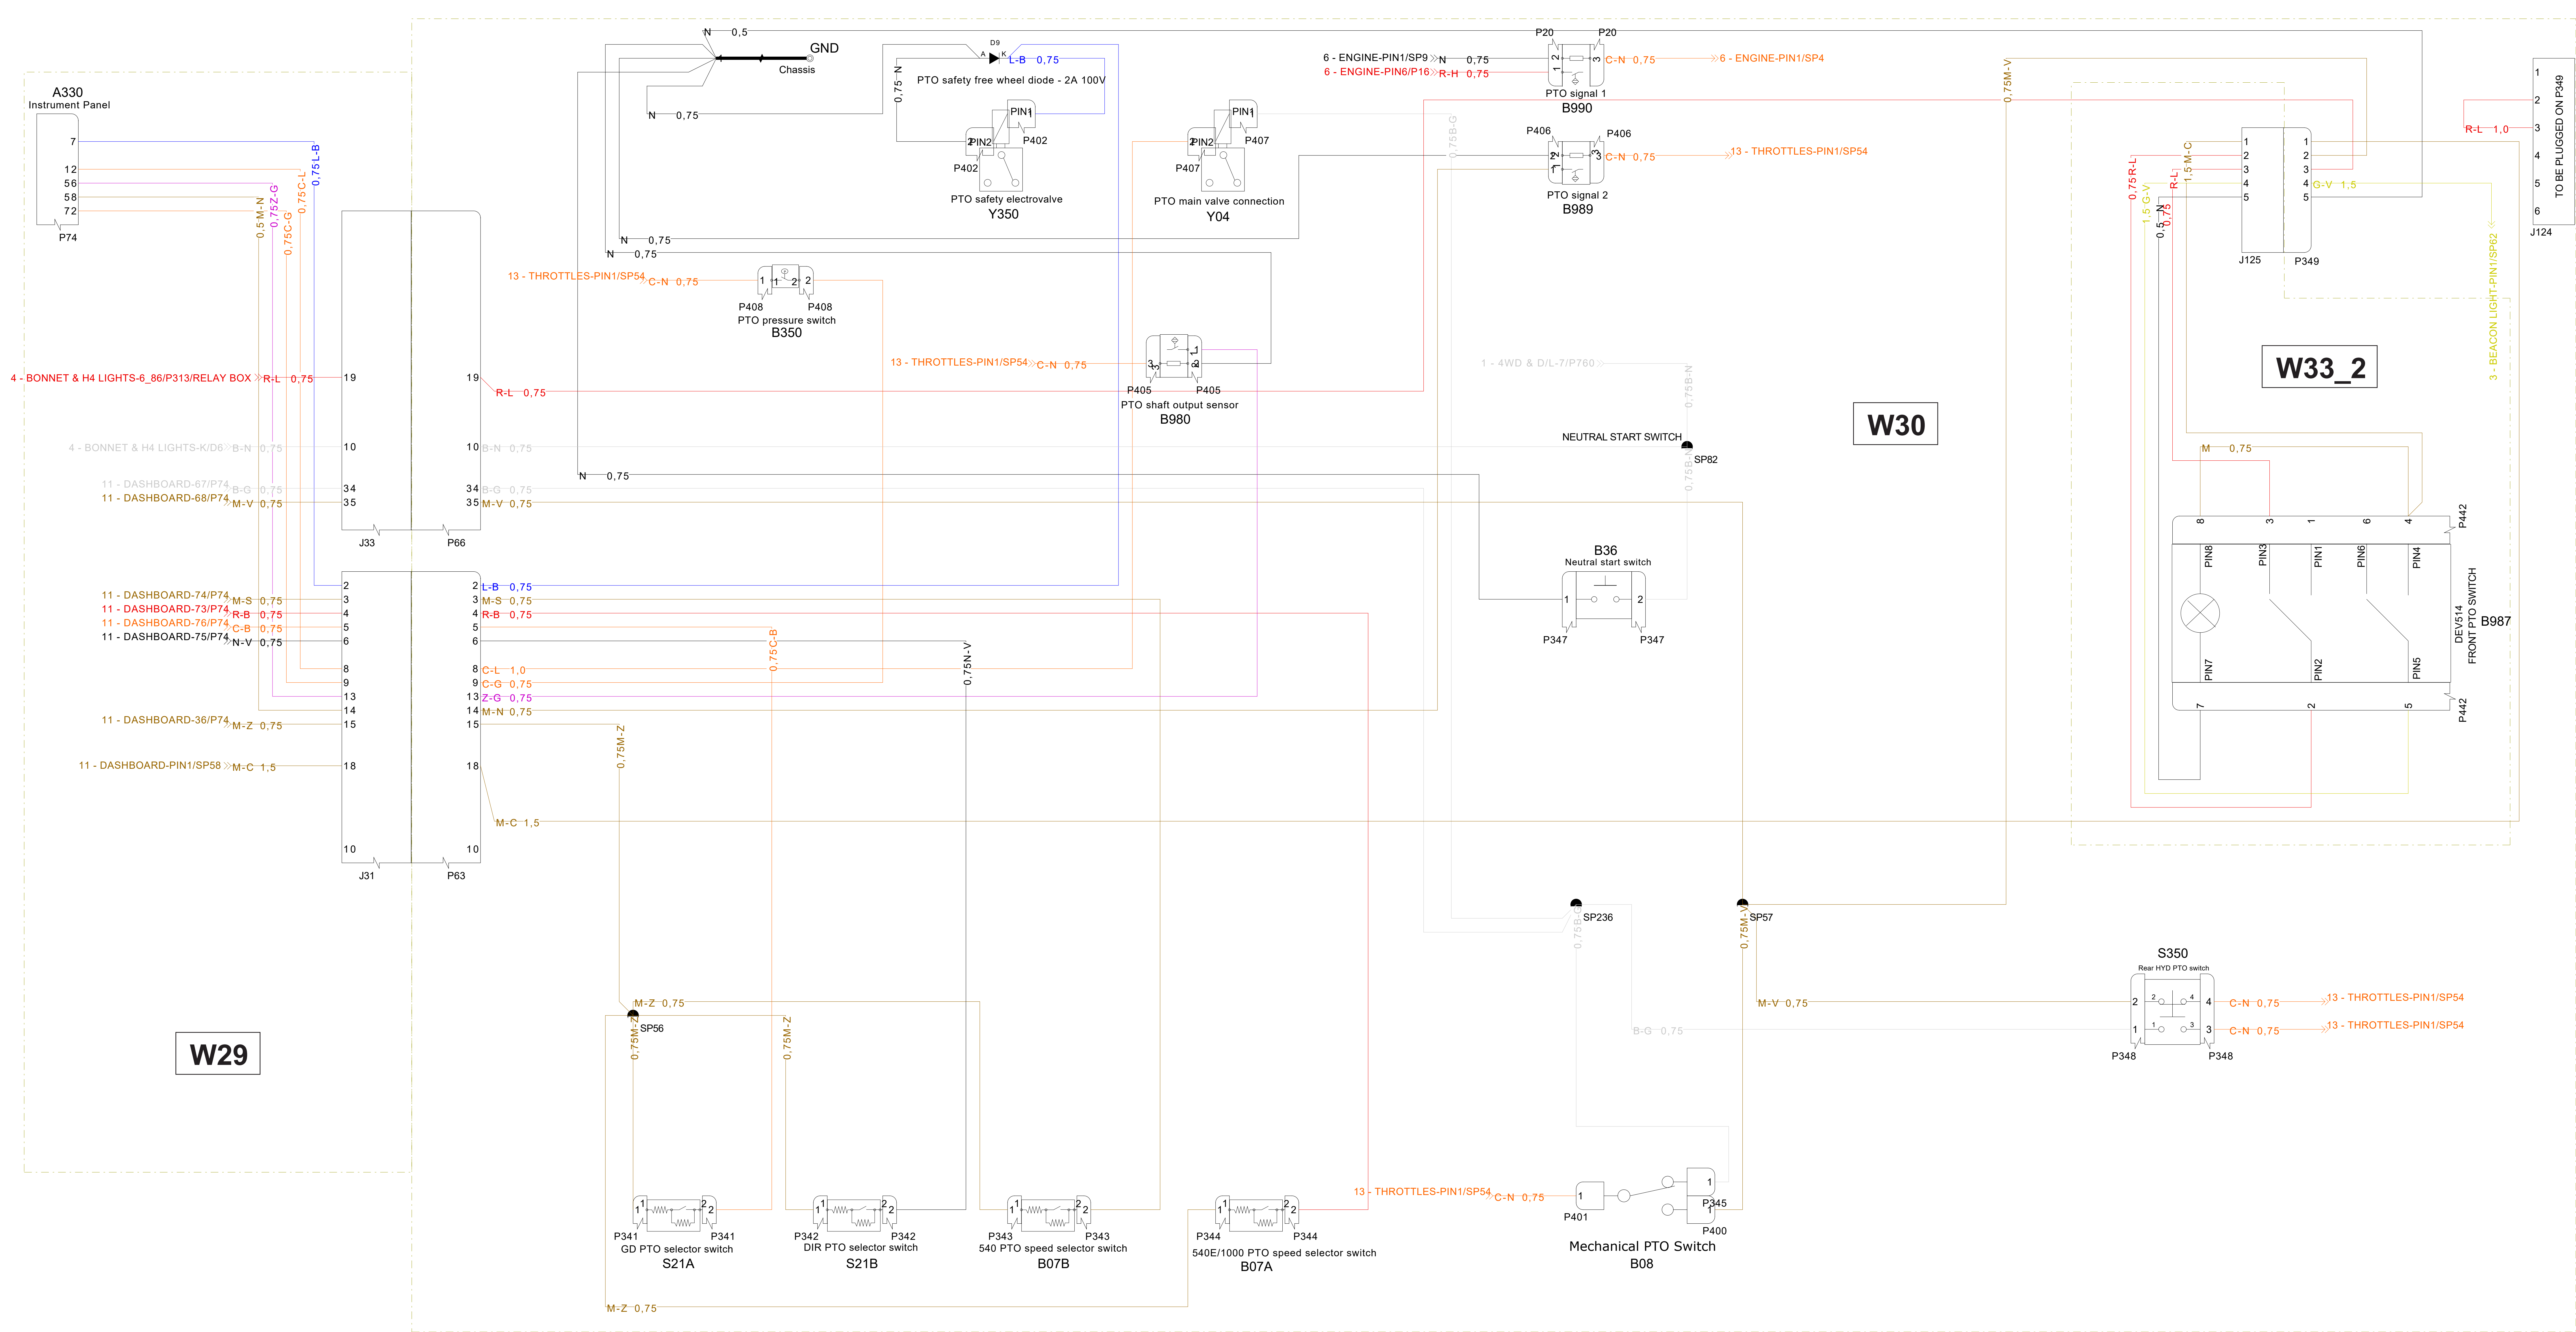


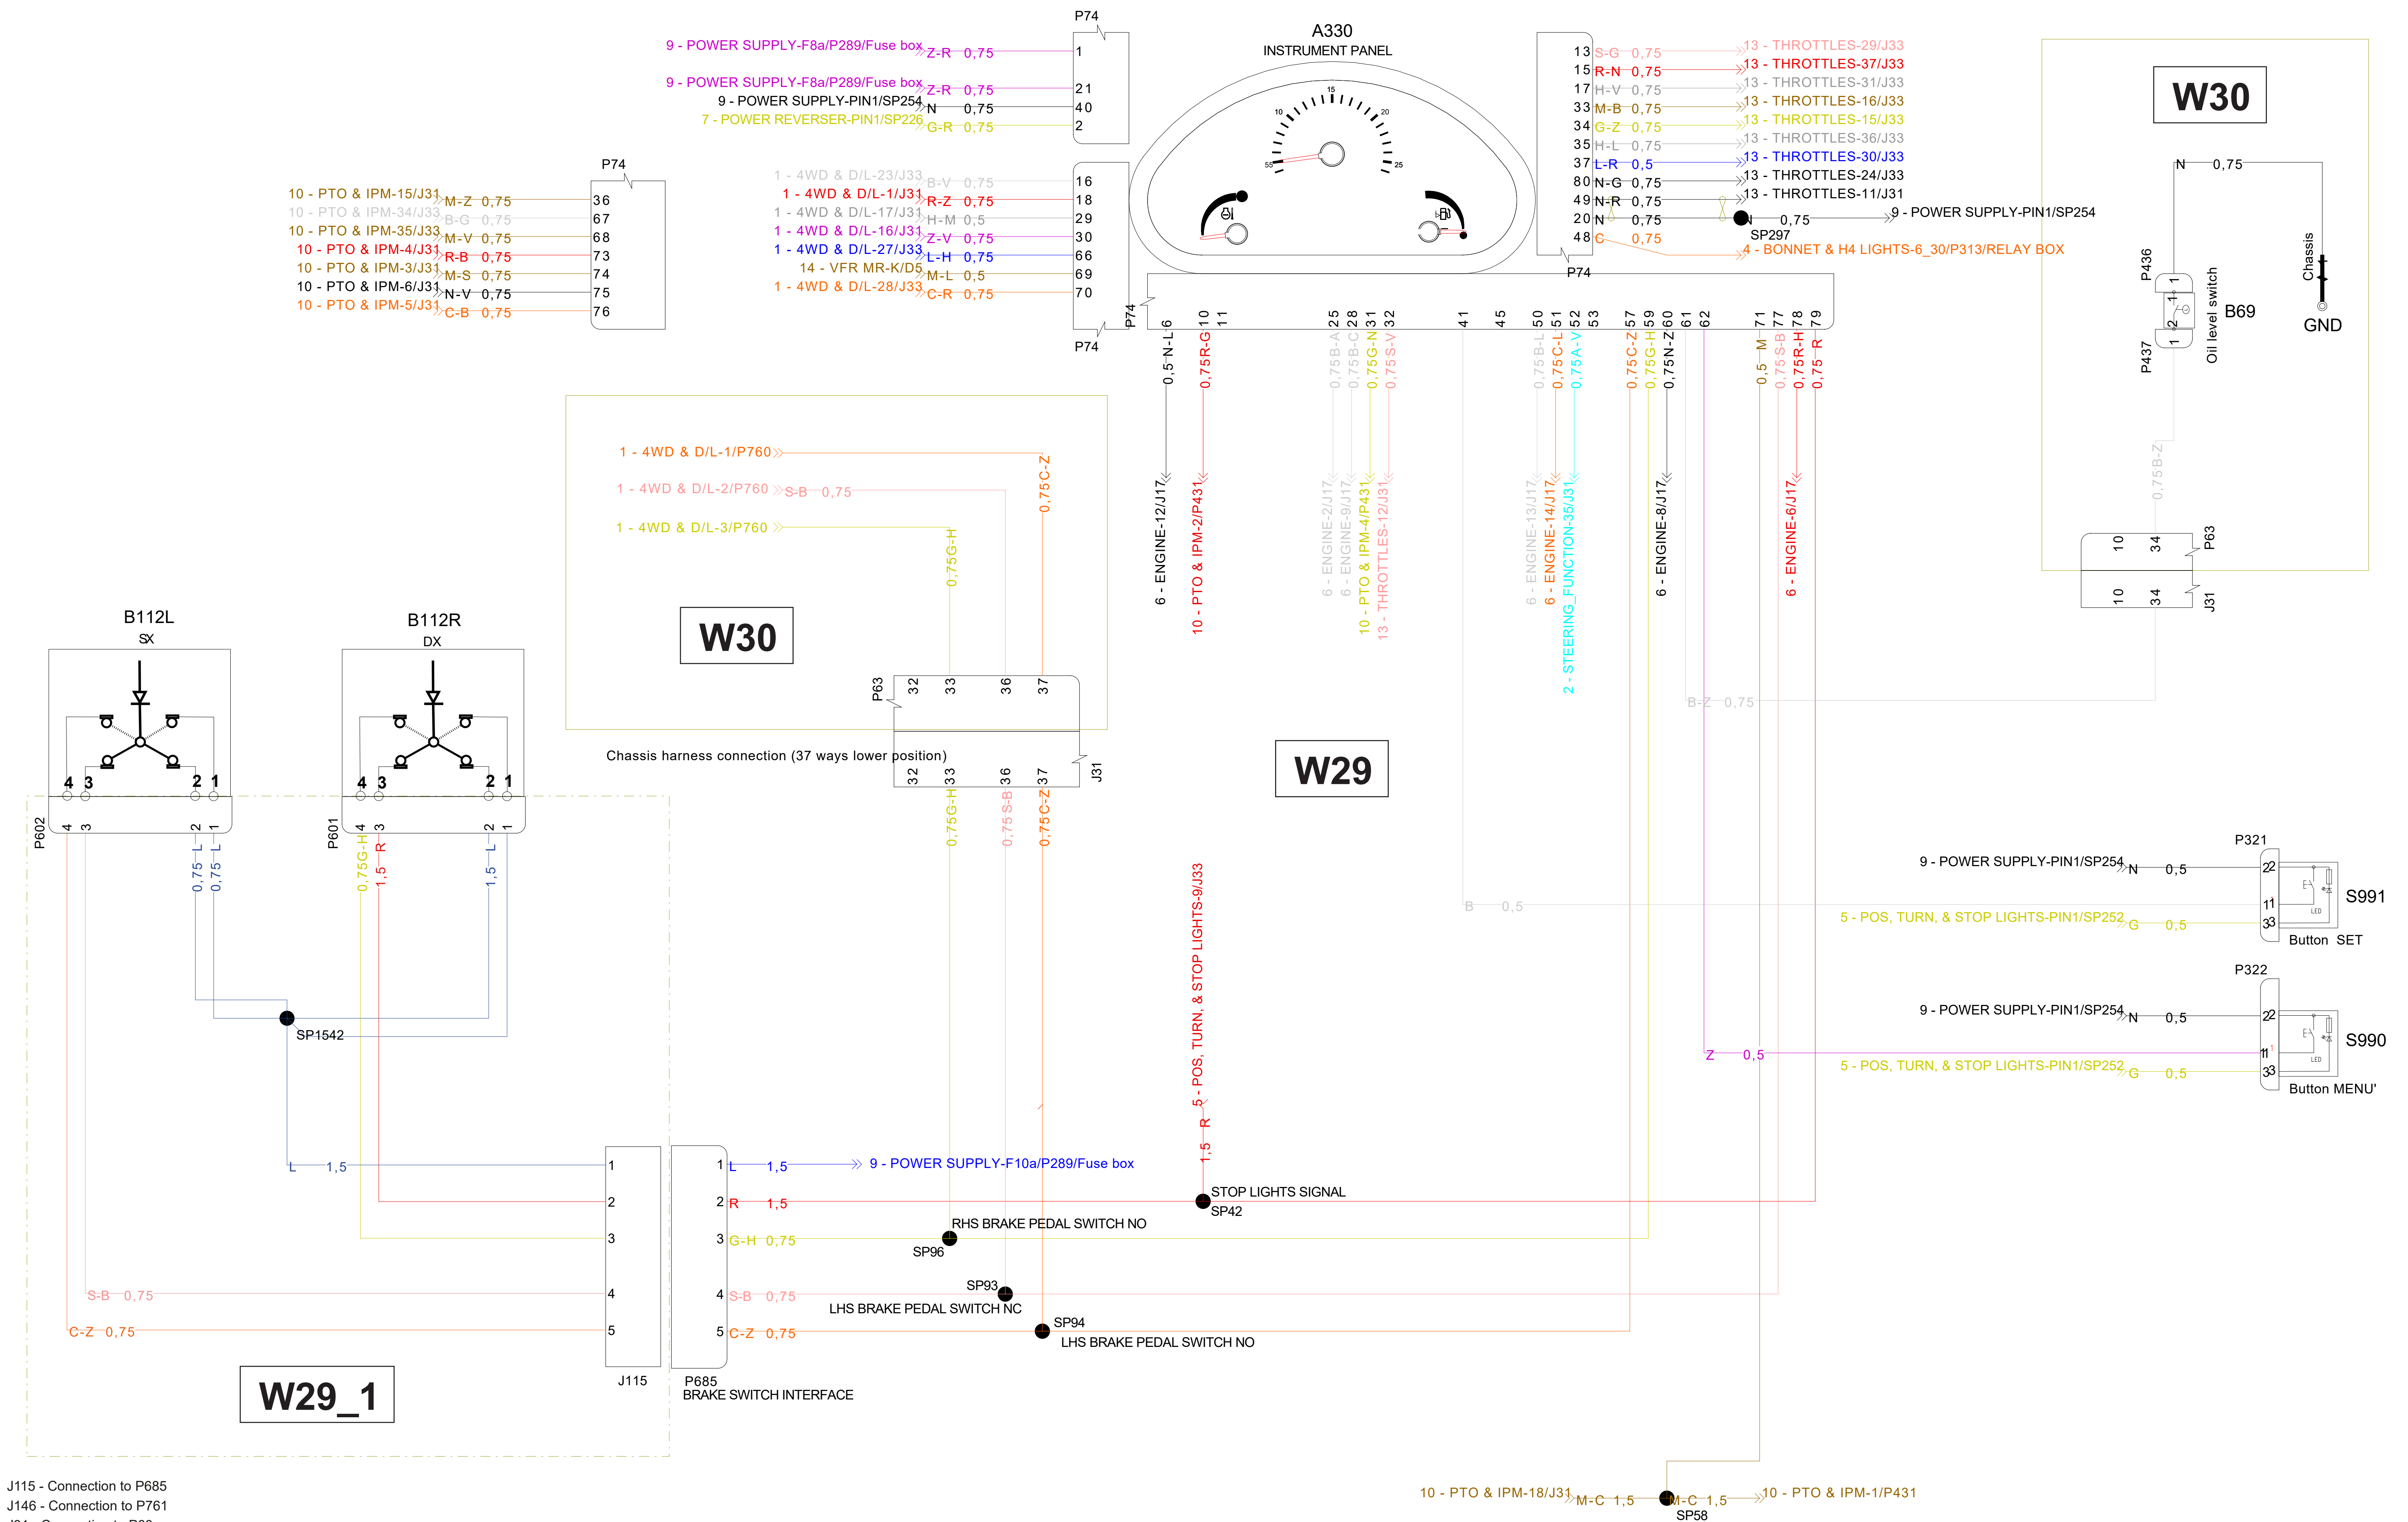


J115 - Connection to P685
J146 - Connection to P761
J31 - Connection to P63
P108 - Connexion to Plug J64
P321 - Connection to Button set S991
P322 - Connection to Button menu S990
P436 - Connection to Brakes oil level switch B69
P437 - Connection to Brakes oil level switch B69
P63 - Connection to J31
P685 - Connection to J115
P74 - Connection to Instrument panel A330
P761 - Connection to J146 (CREEPER SUPPLY predisposition)

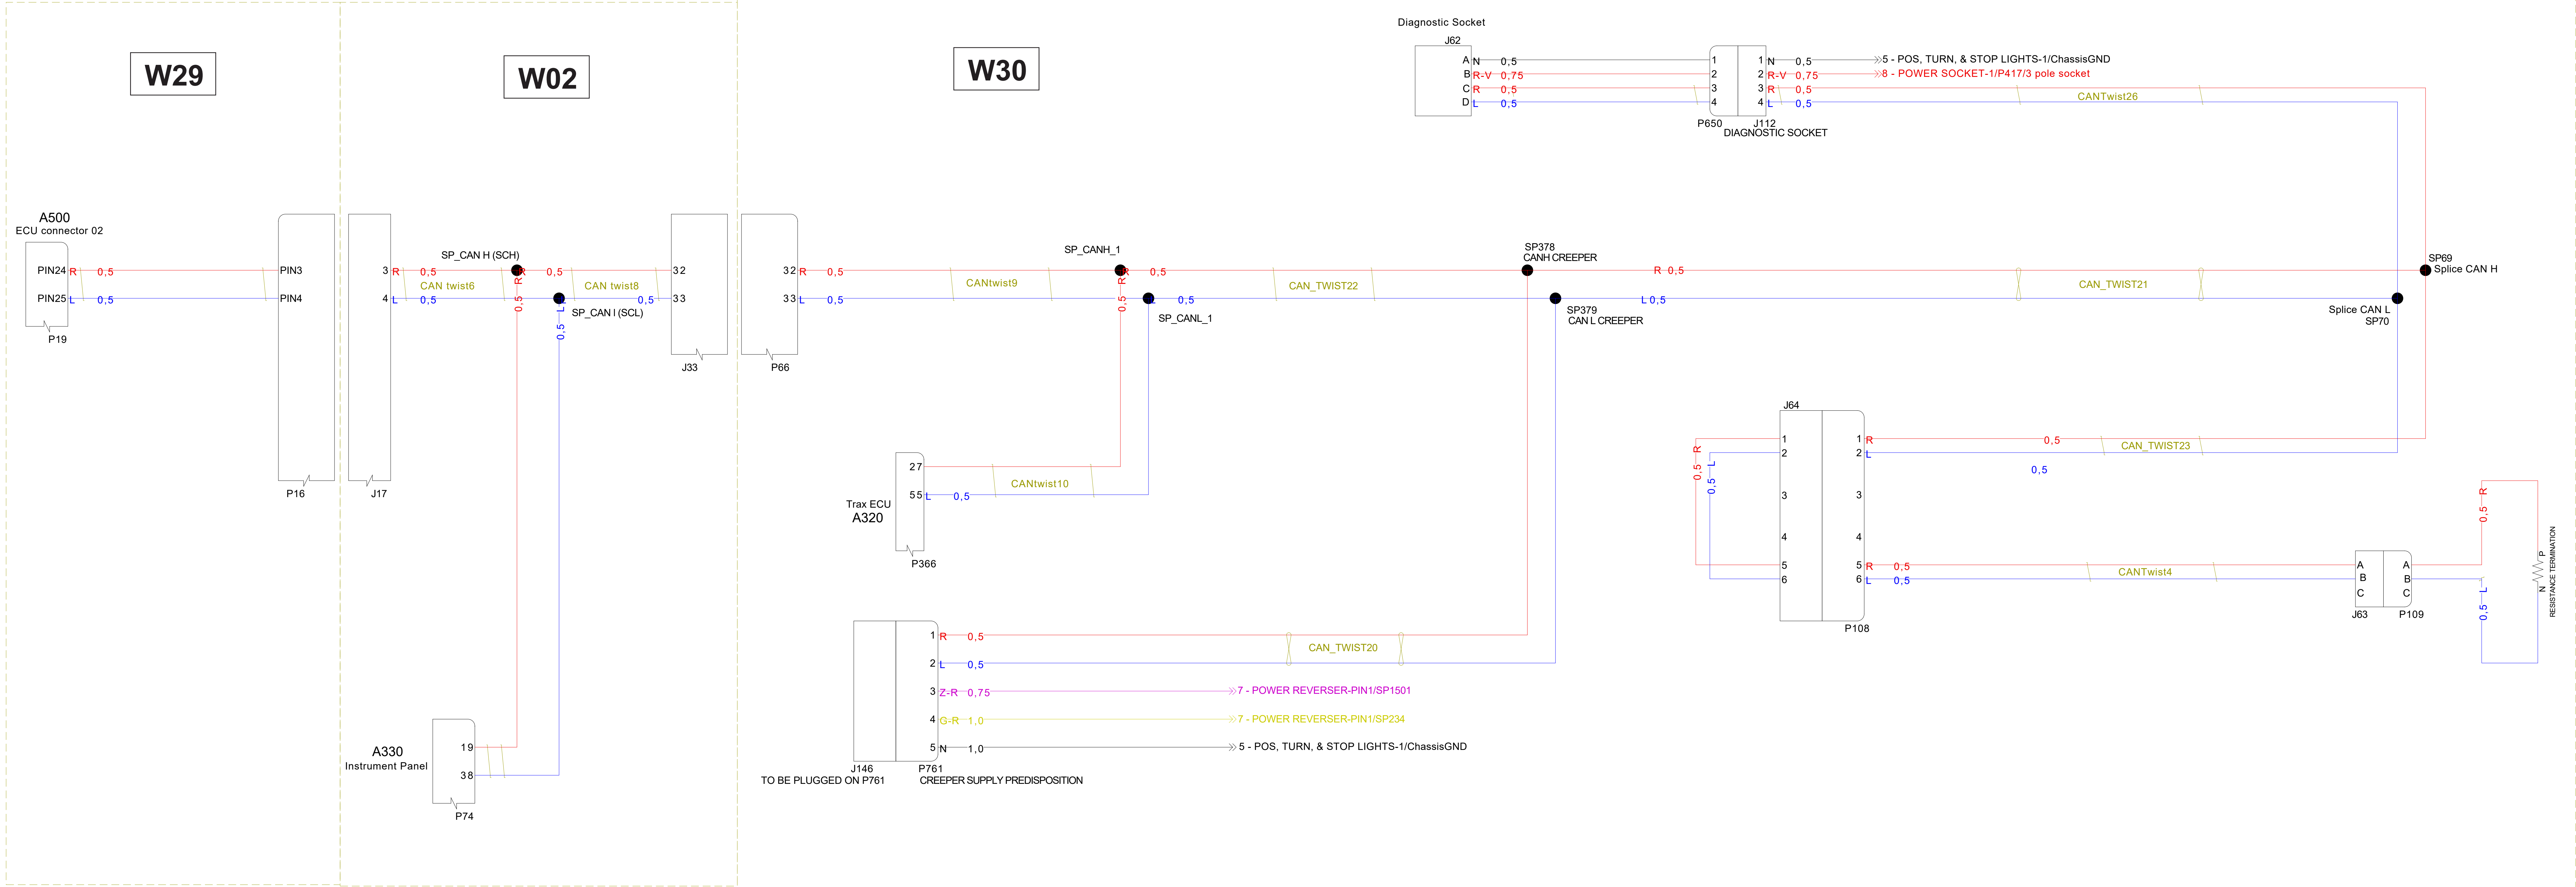



J112 - Connection to P650
J146 - Connection to P761
J17 - Connection to P16
J33 - Connection to P66
J62 - Connection to Diagnostic Socket X01
J63 - Connection to P109
J64 - Connection to P108
P108 - Connection to Plug J64
P109 - Connection to J63
P16 - Connection to J17
P19 - Connection to Engine control unit A500
P366 - Connection to Transmission control unit A320
P650 - Connection to J112
P66 - Connection to J33
P74 - Connection to Instrument panel A330
P761 - Connection to J146 (CREEPER SUPPLY predisposition)

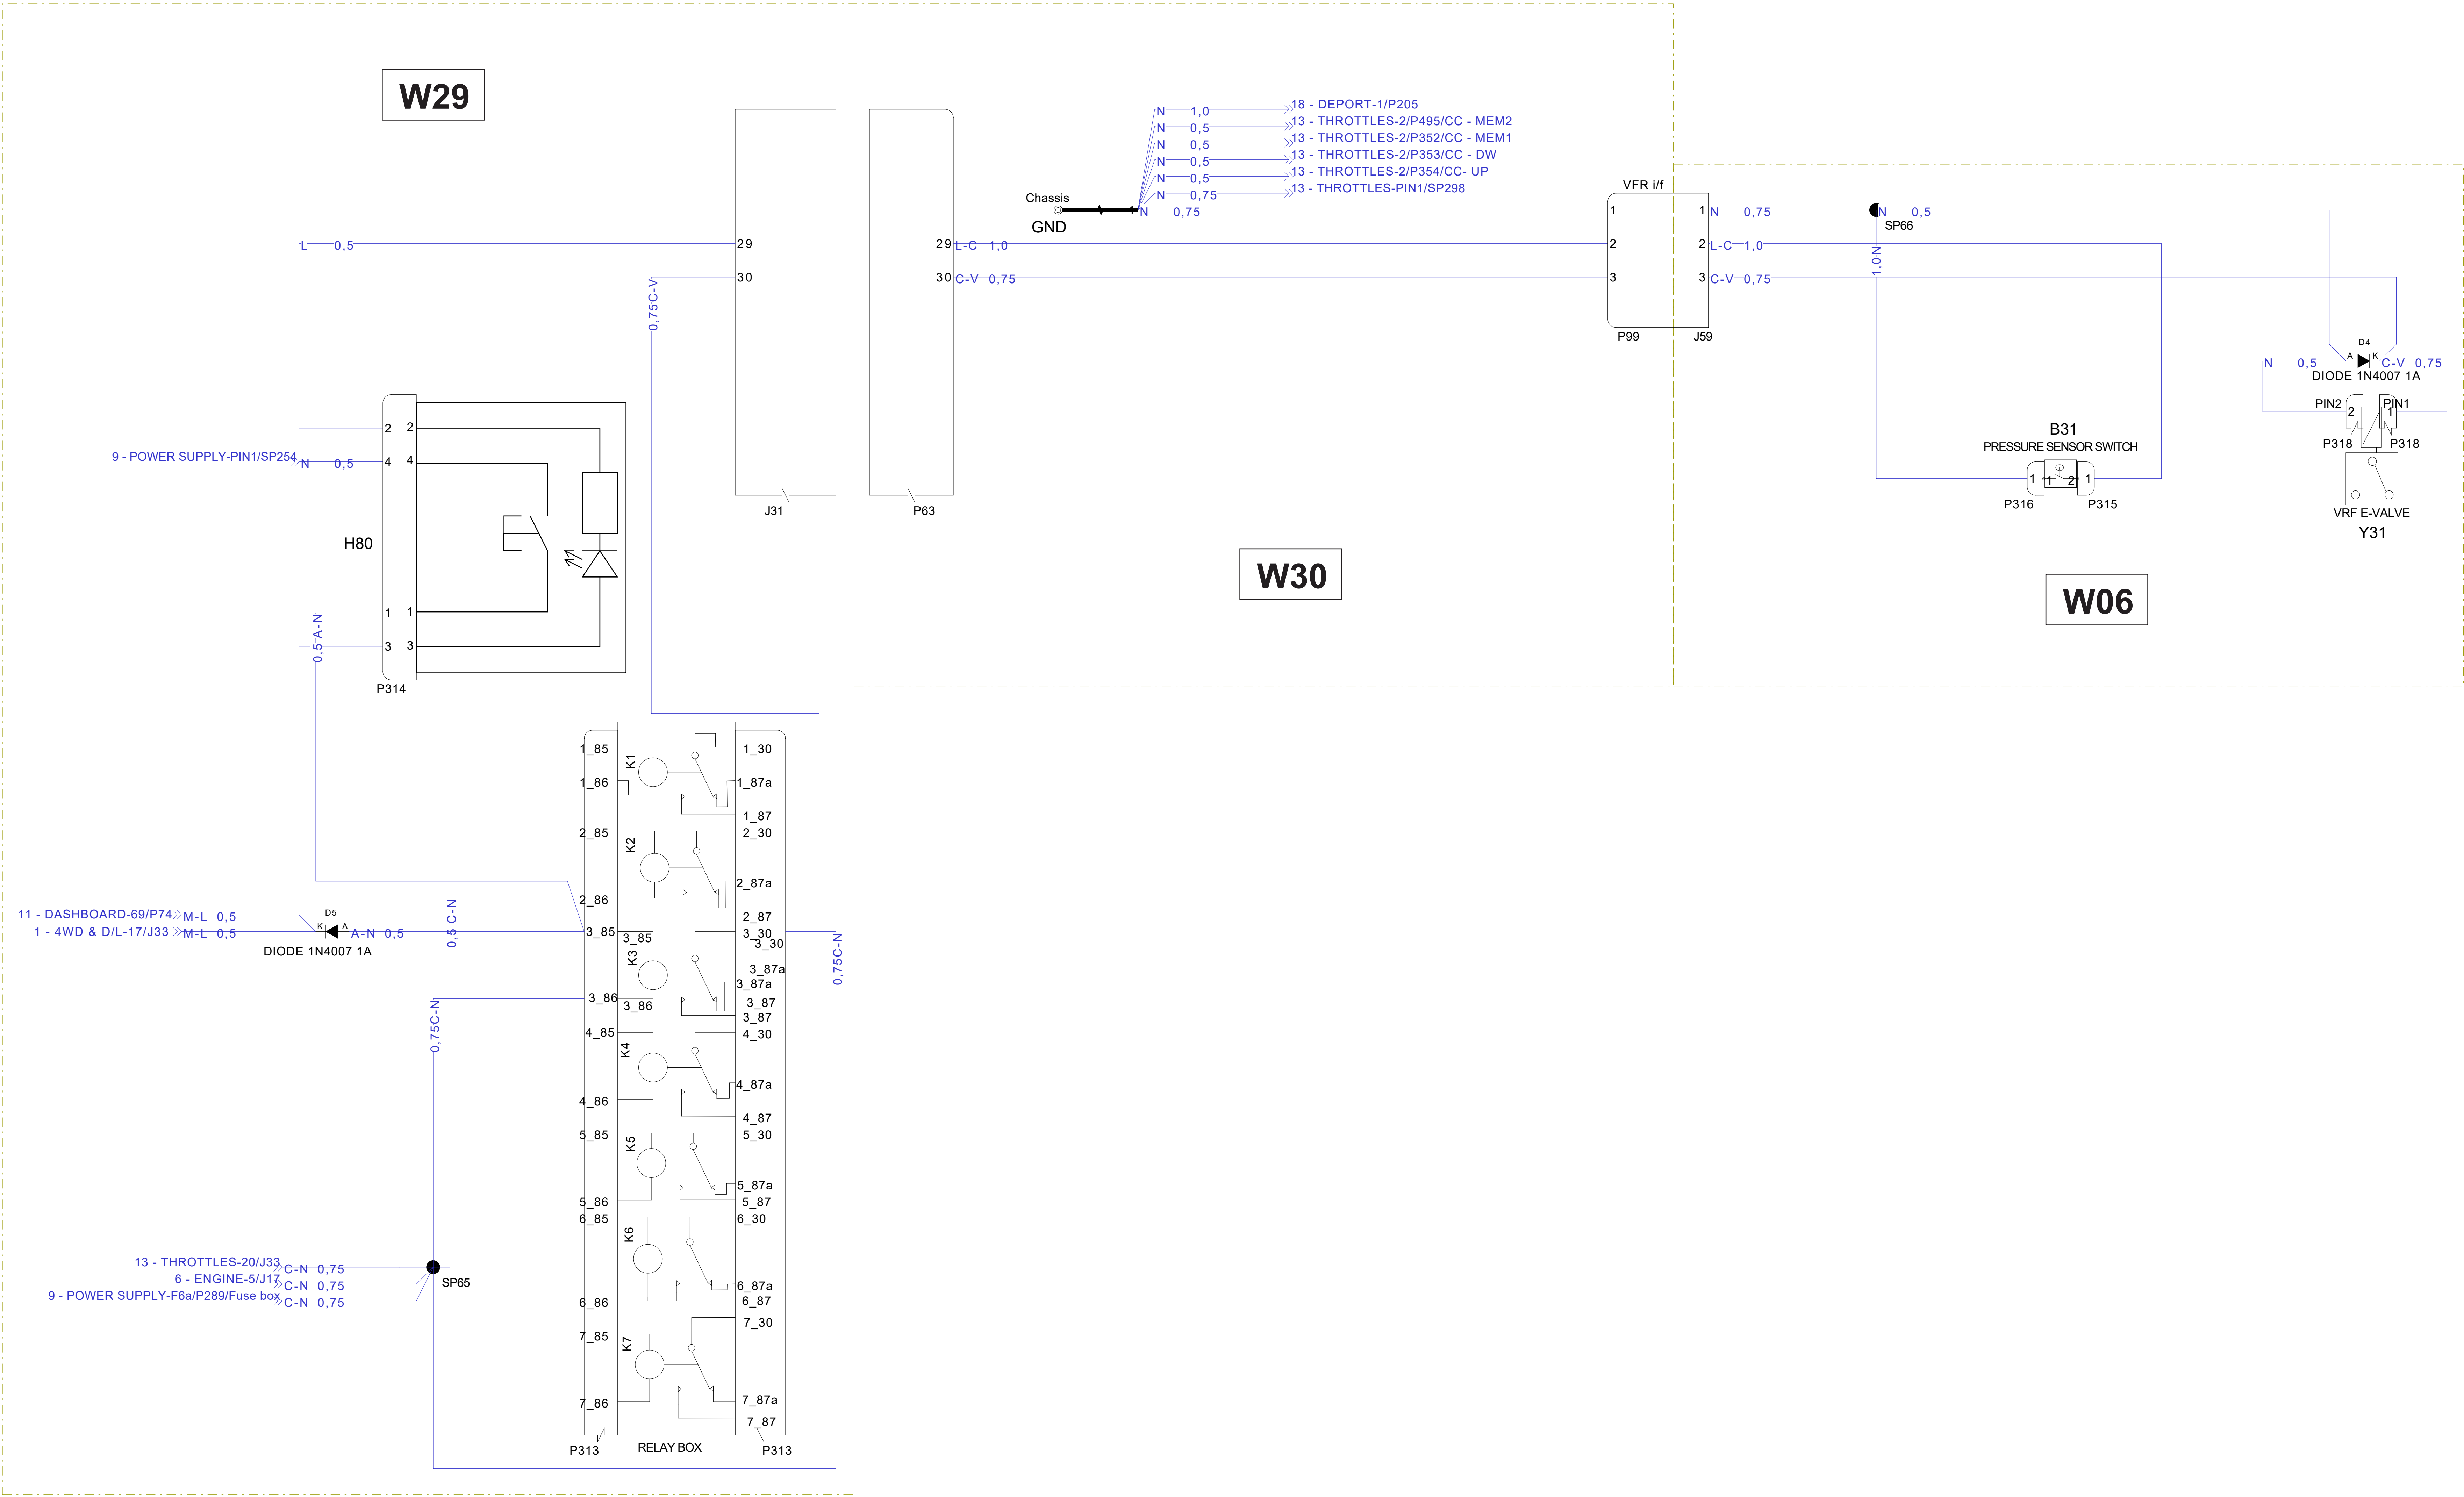



J31 - Connection to P63
J59 - Connection to P99
P313 - Connection to Relay Box
P314 - Connection to Trailer brake warning light H80
P315 - Connection to Trailer brake pressure sensor B31
P316 - Connection to Trailer brake pressure sensor B31
P318 - Connection to Trailer brake solenoid valve Y31
P63 - Connection to J31
P99 - Connection to J59

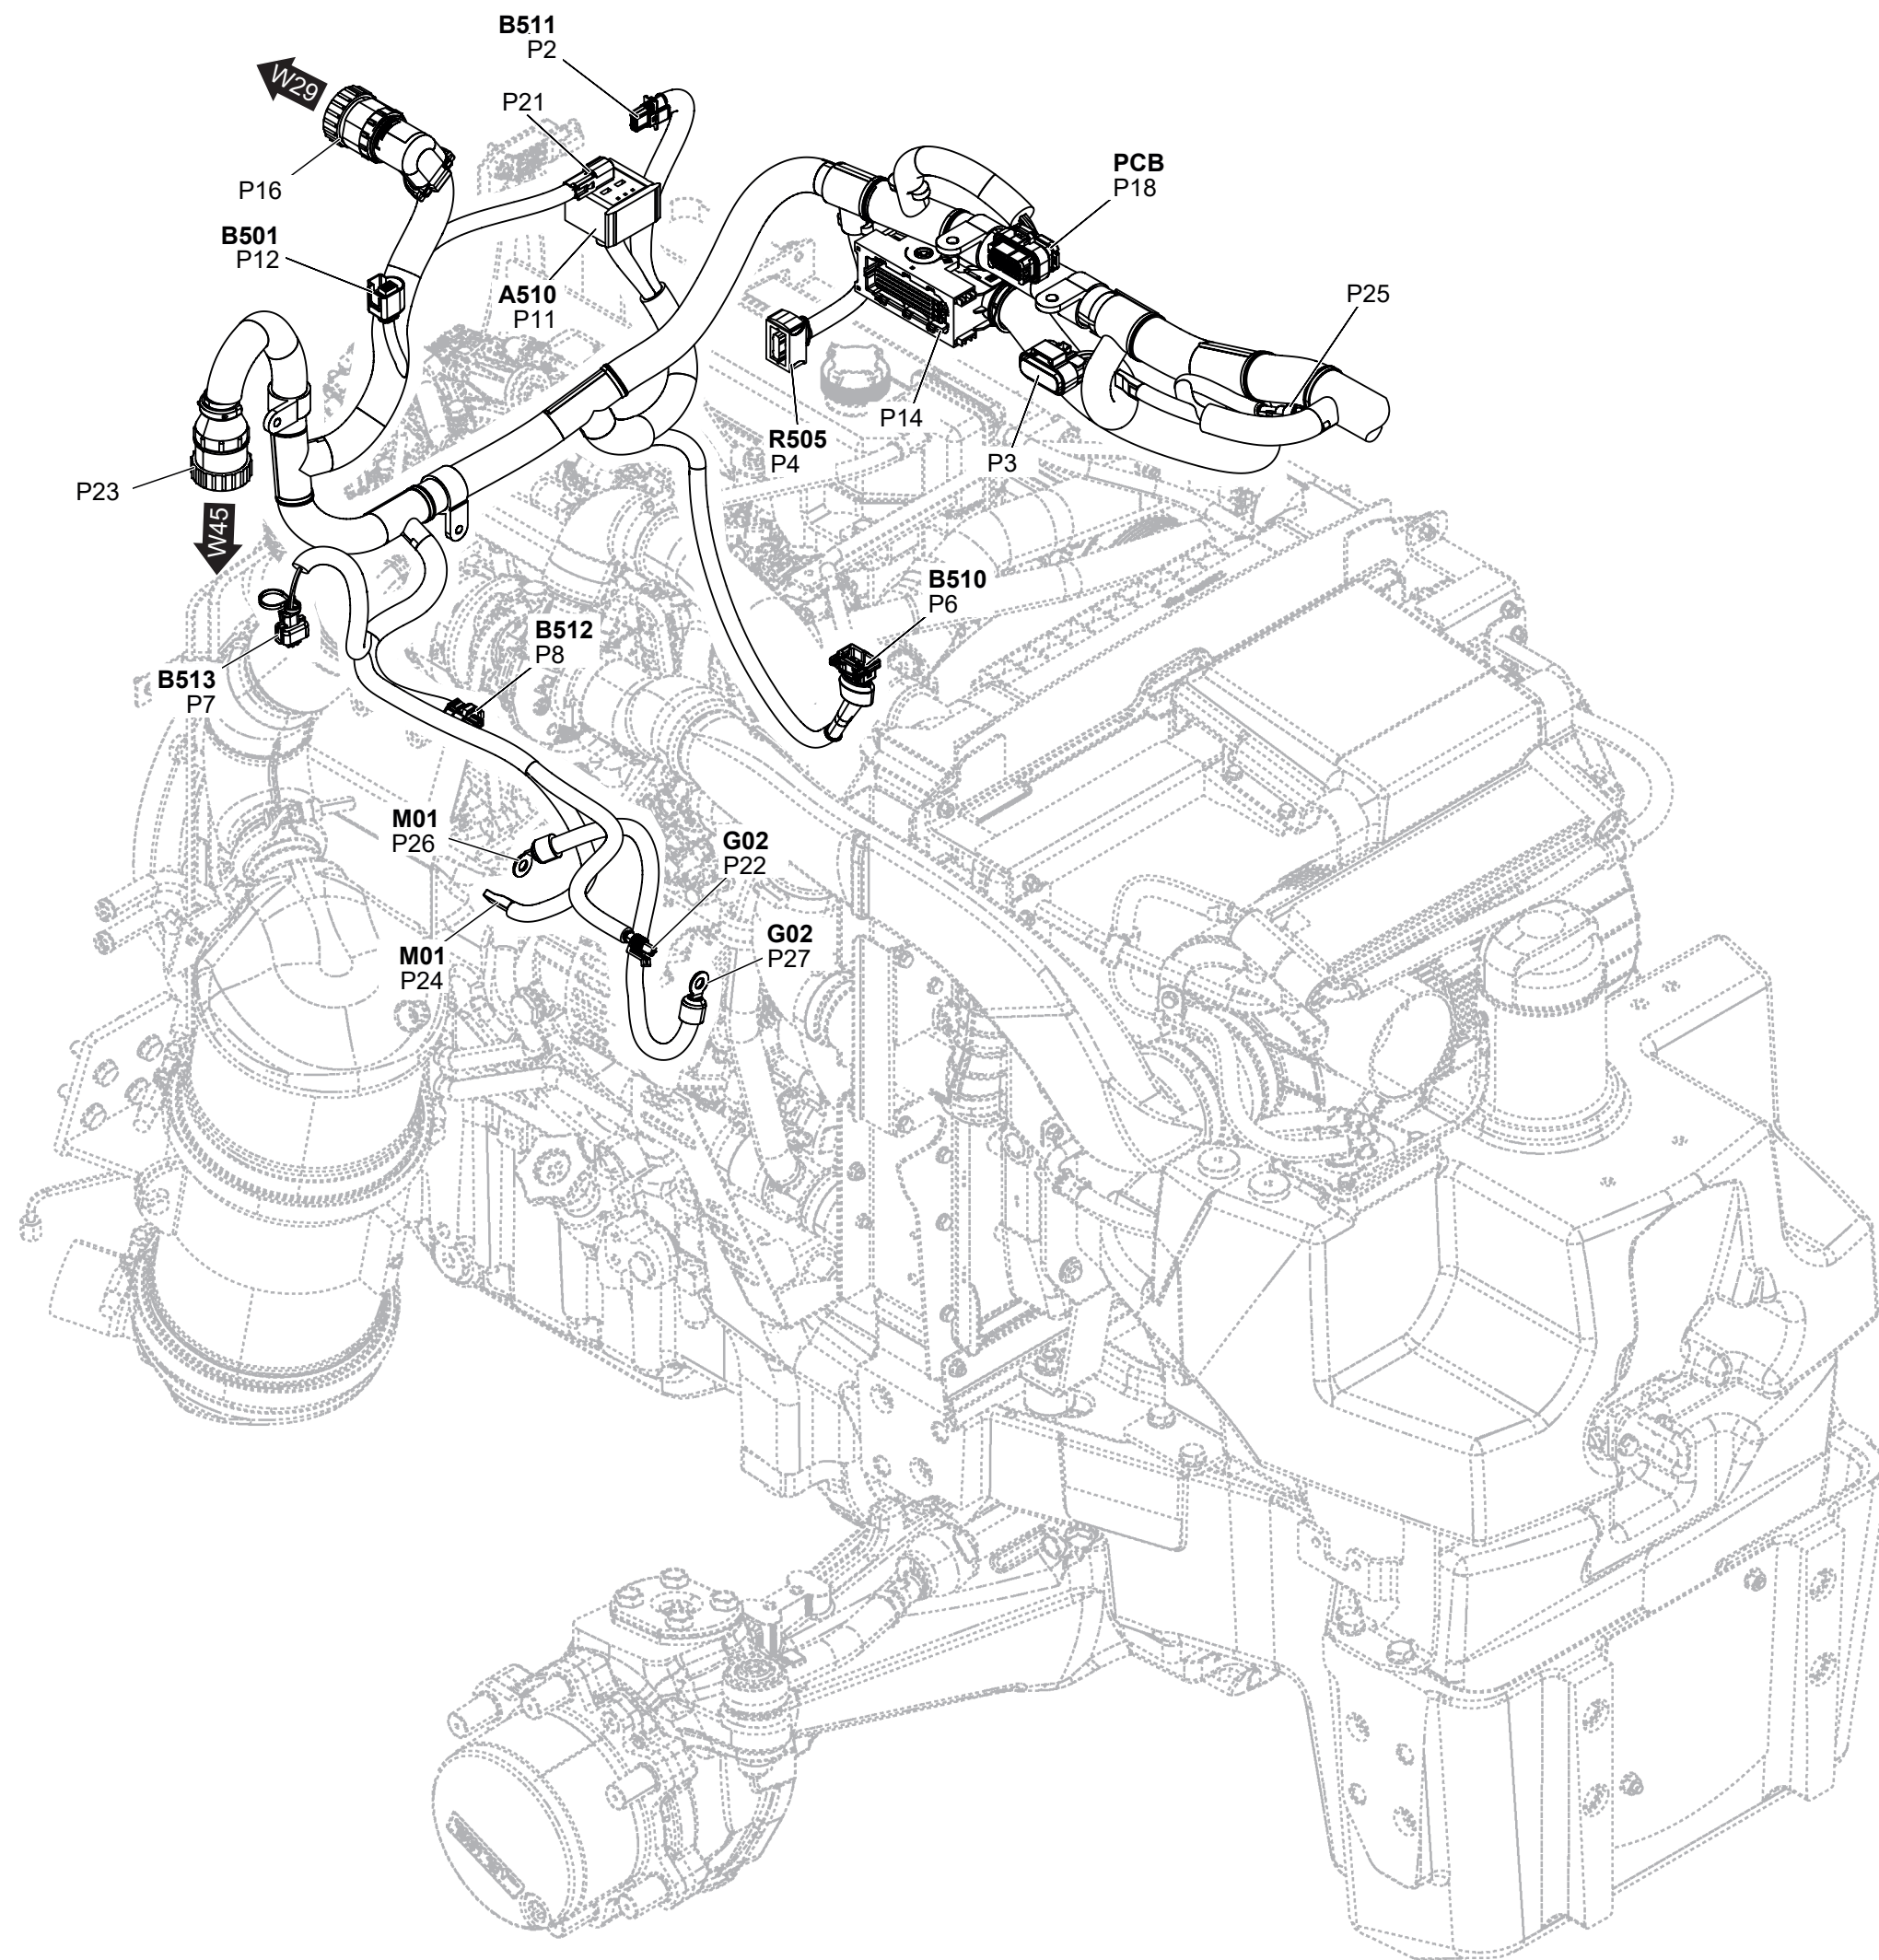


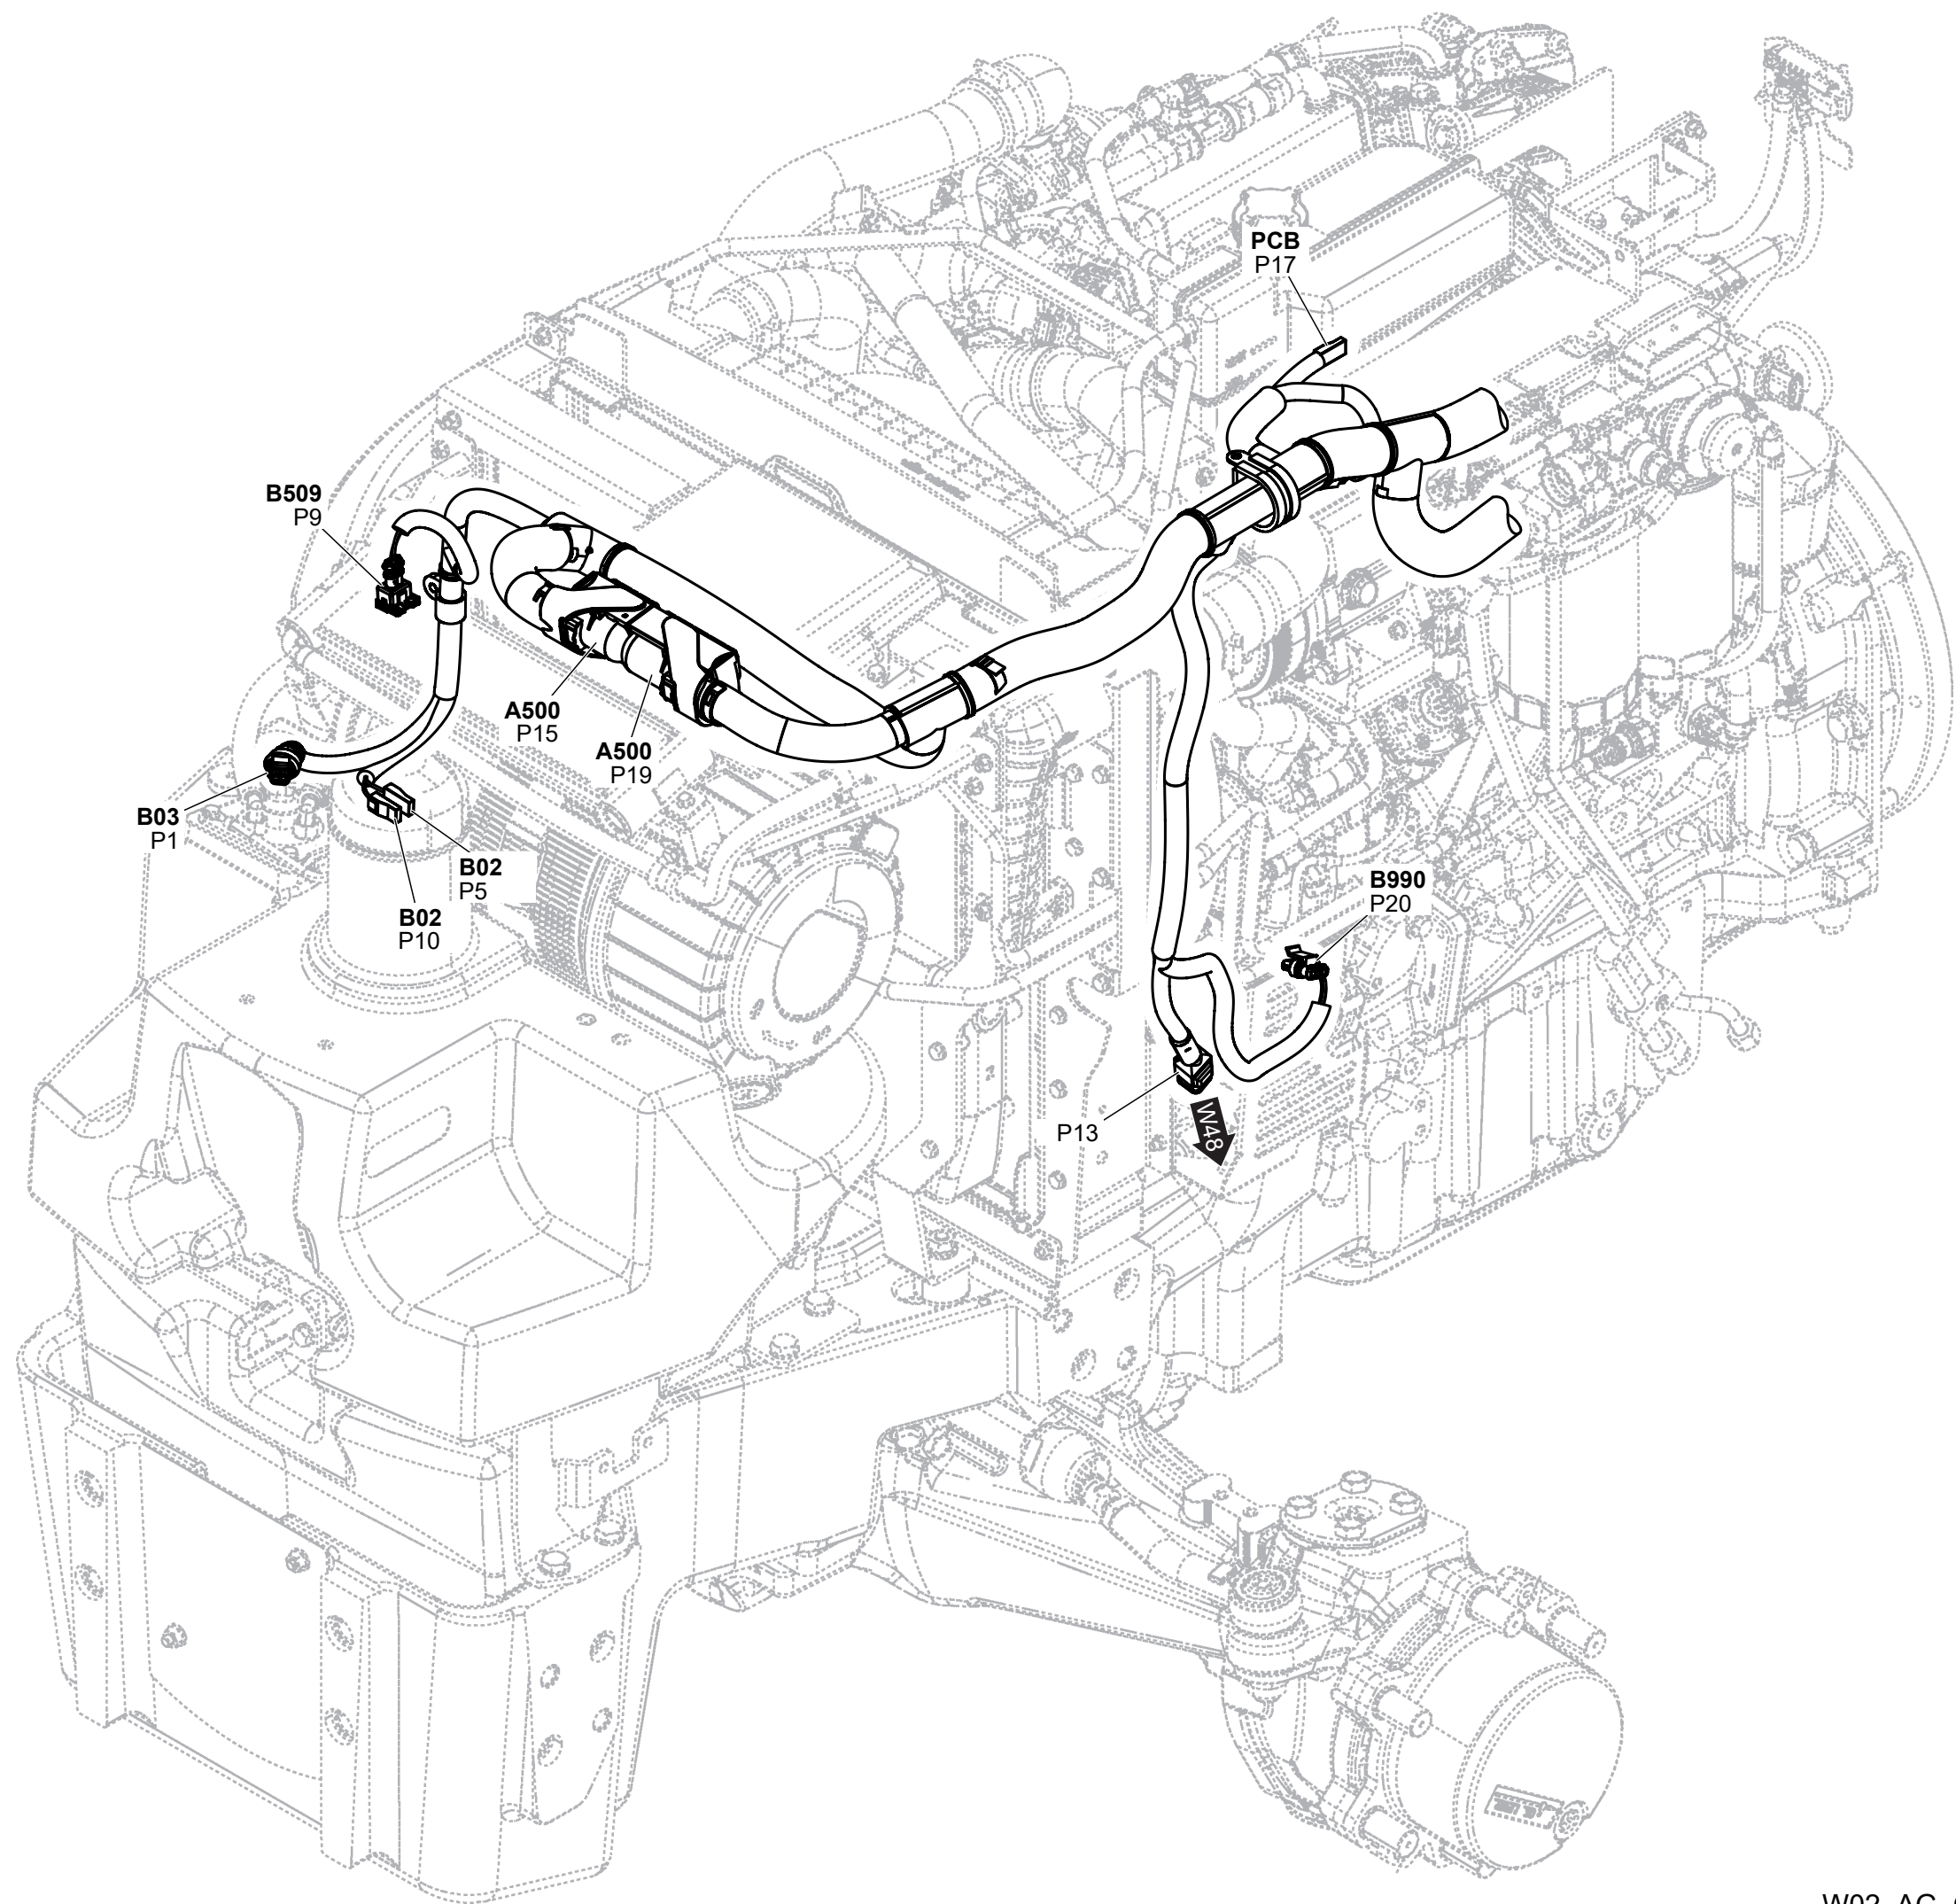


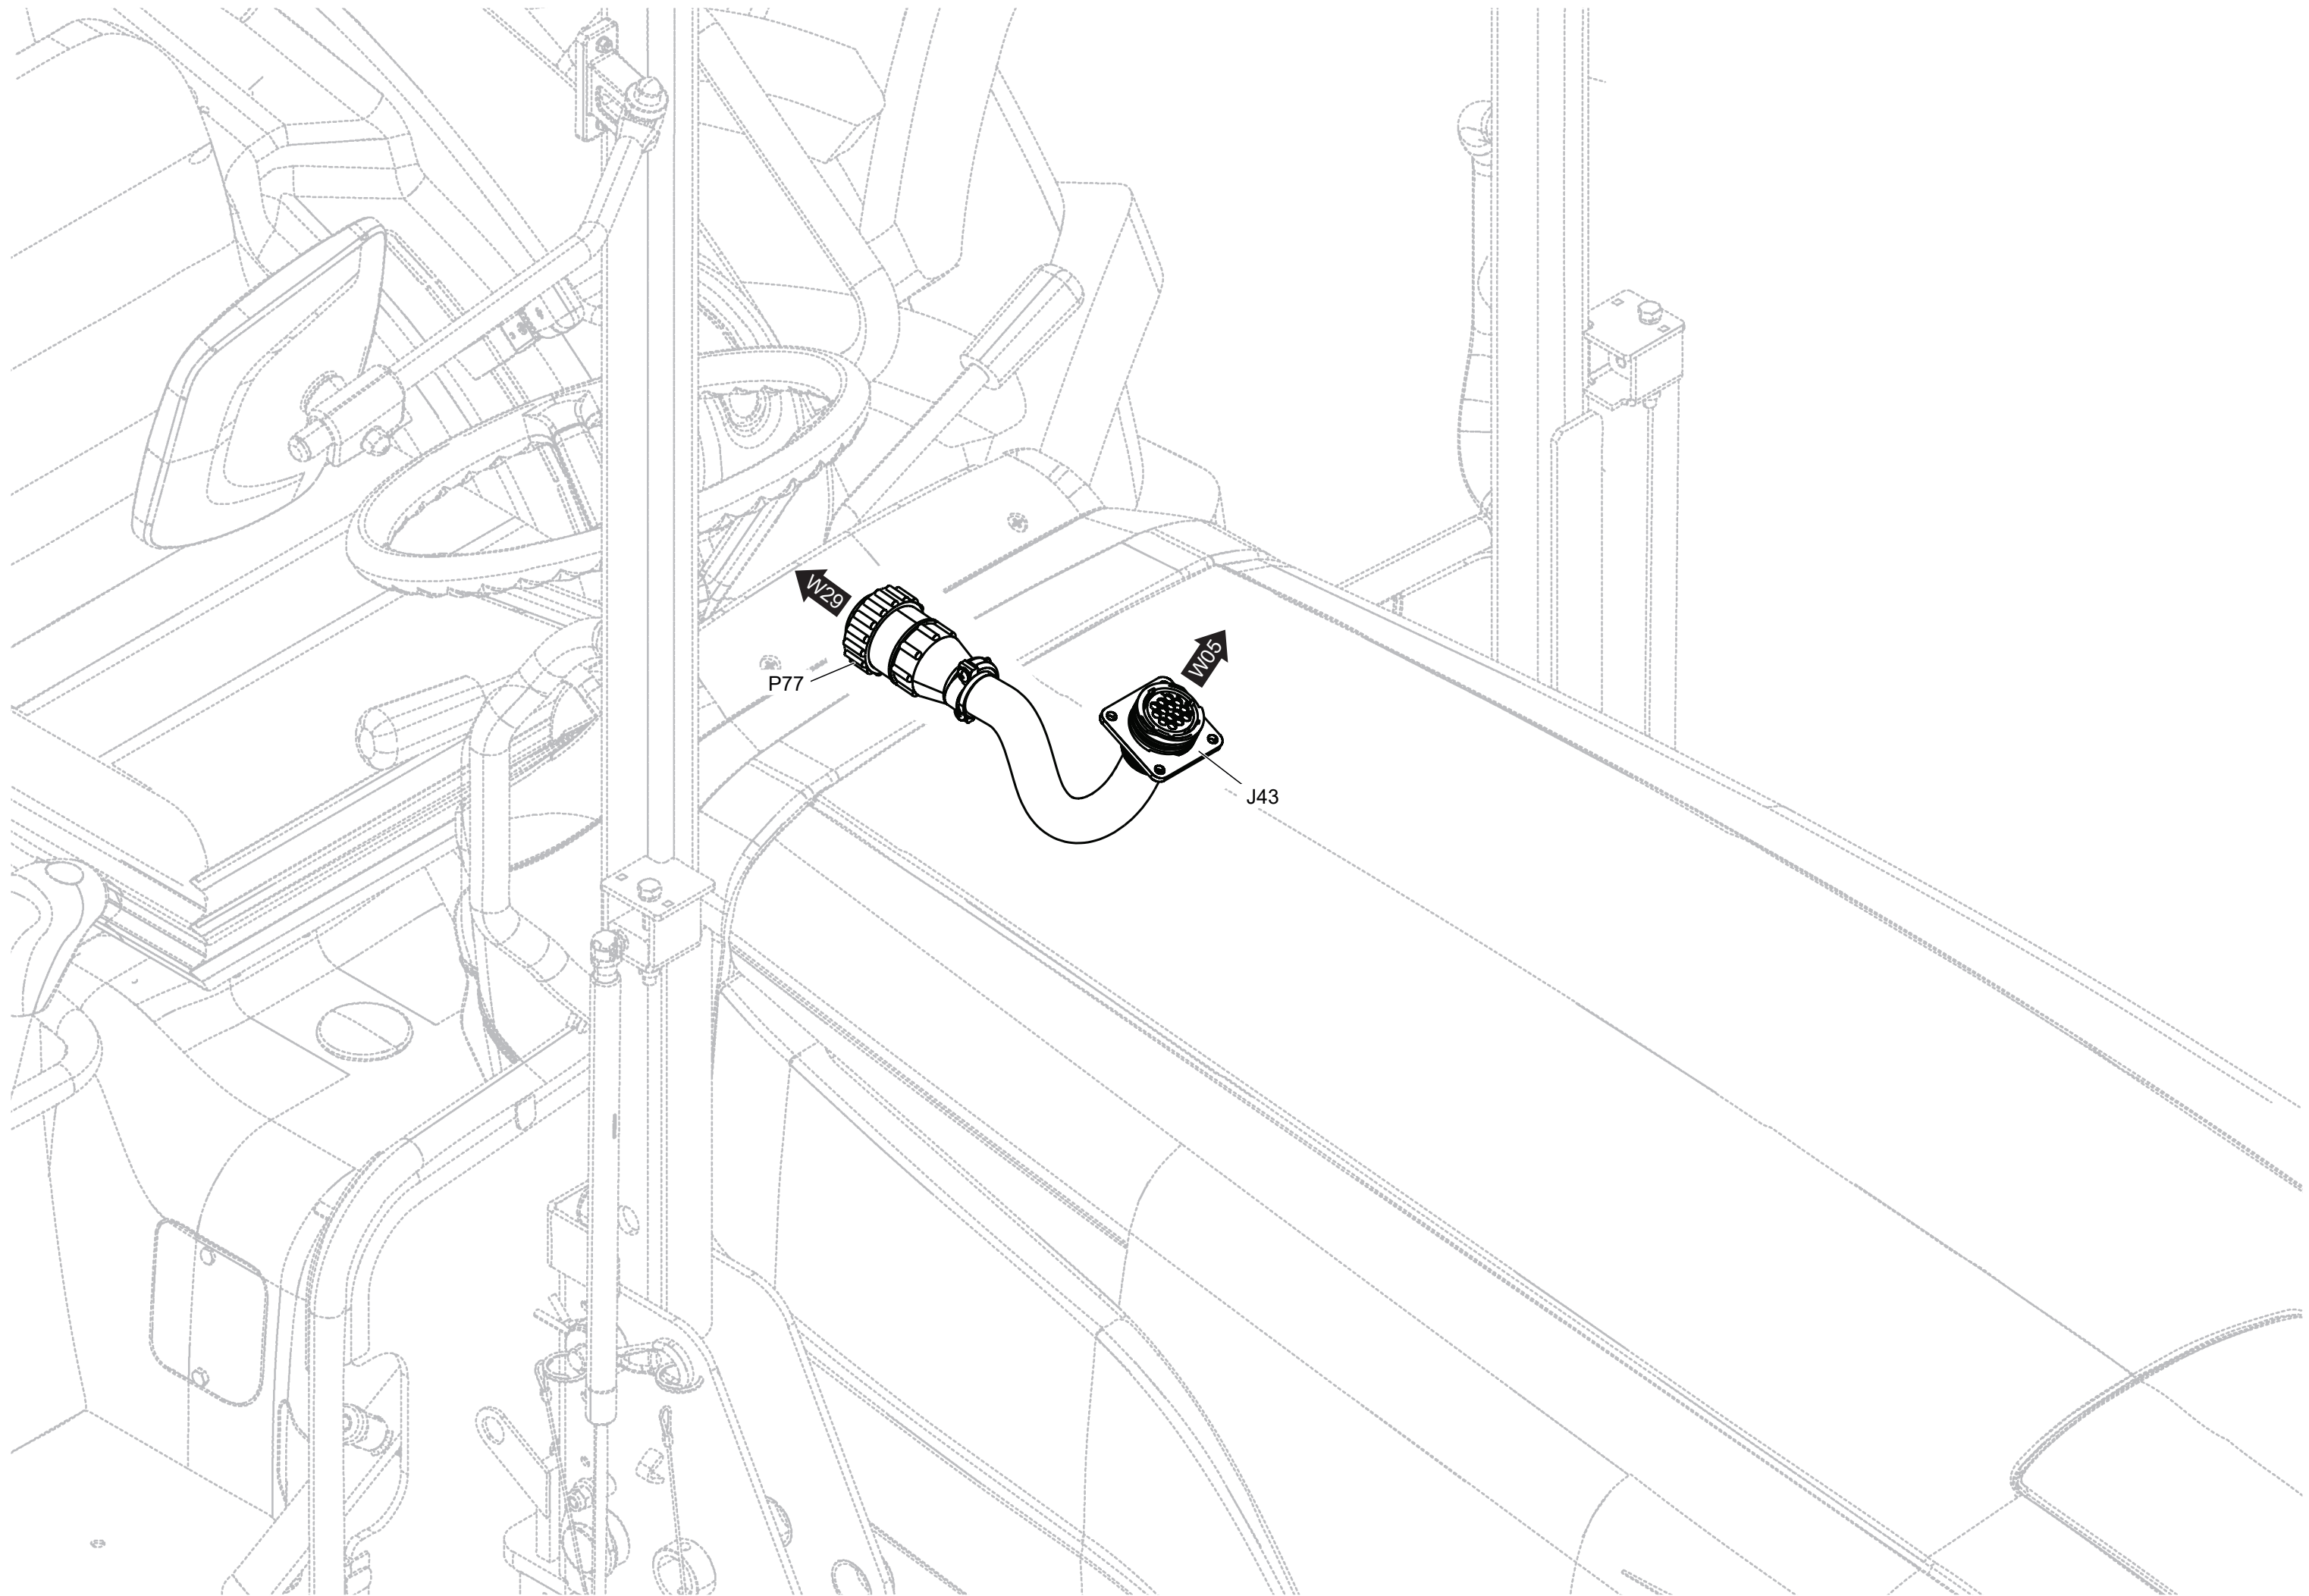


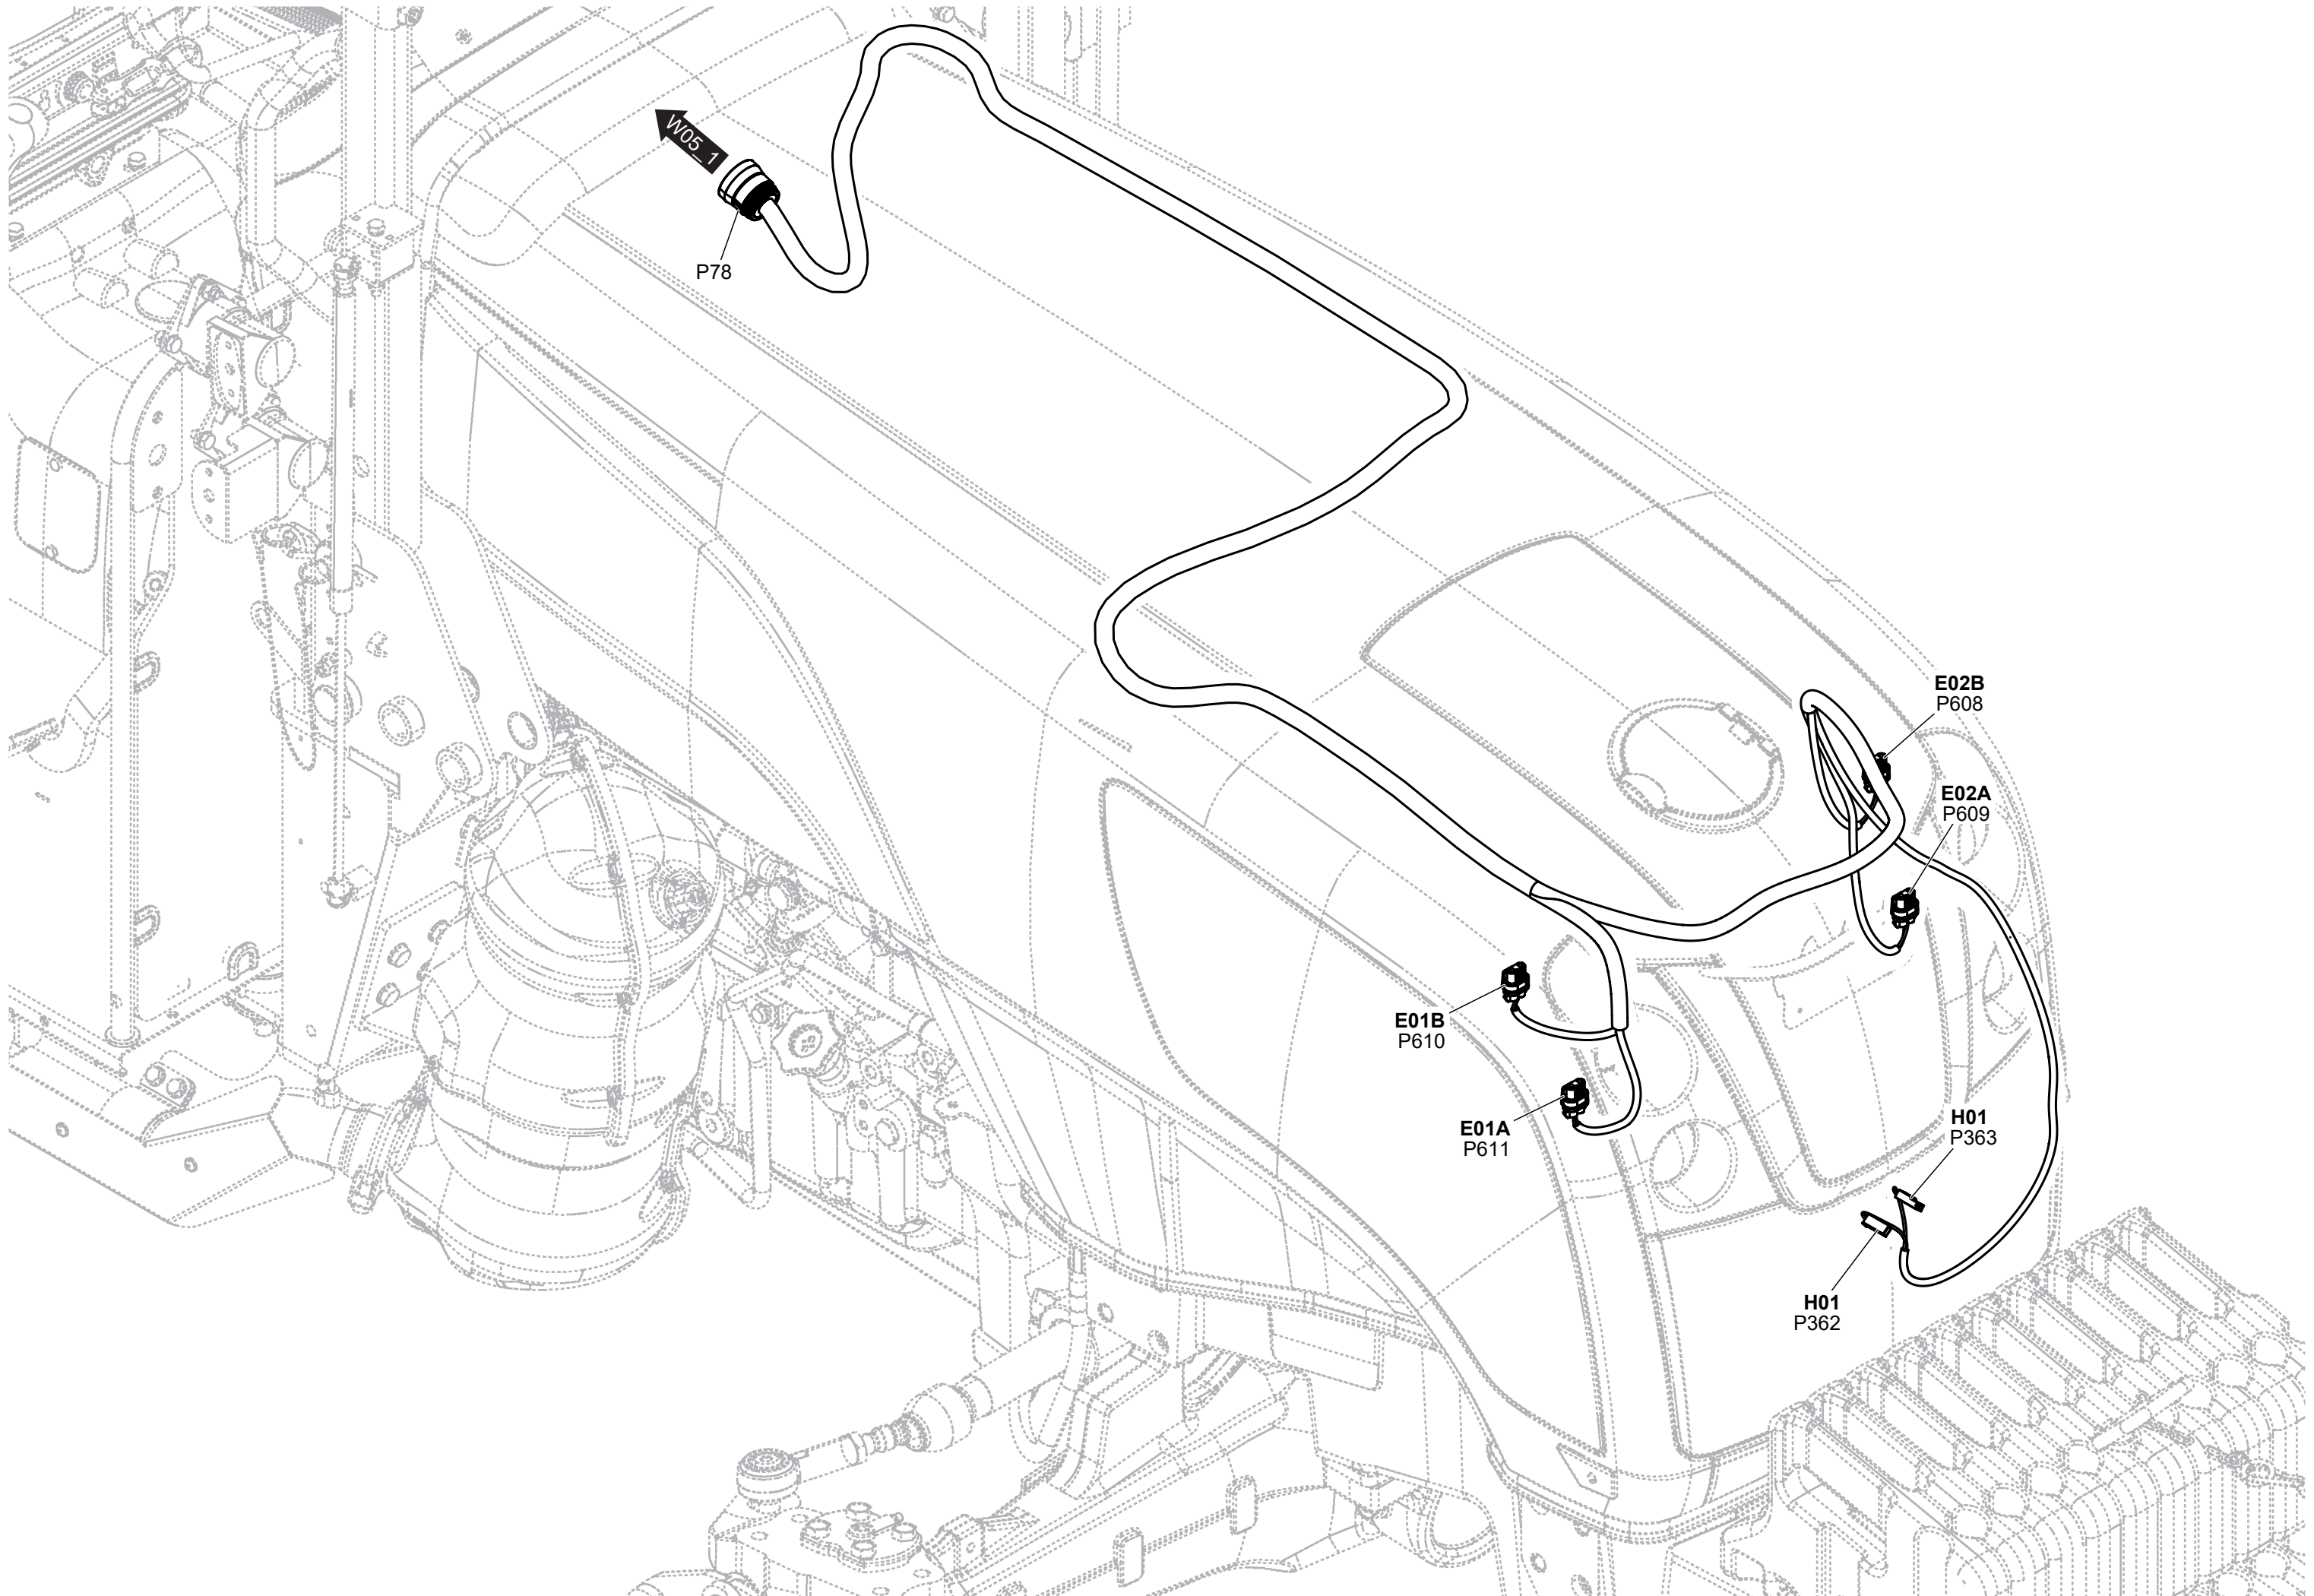

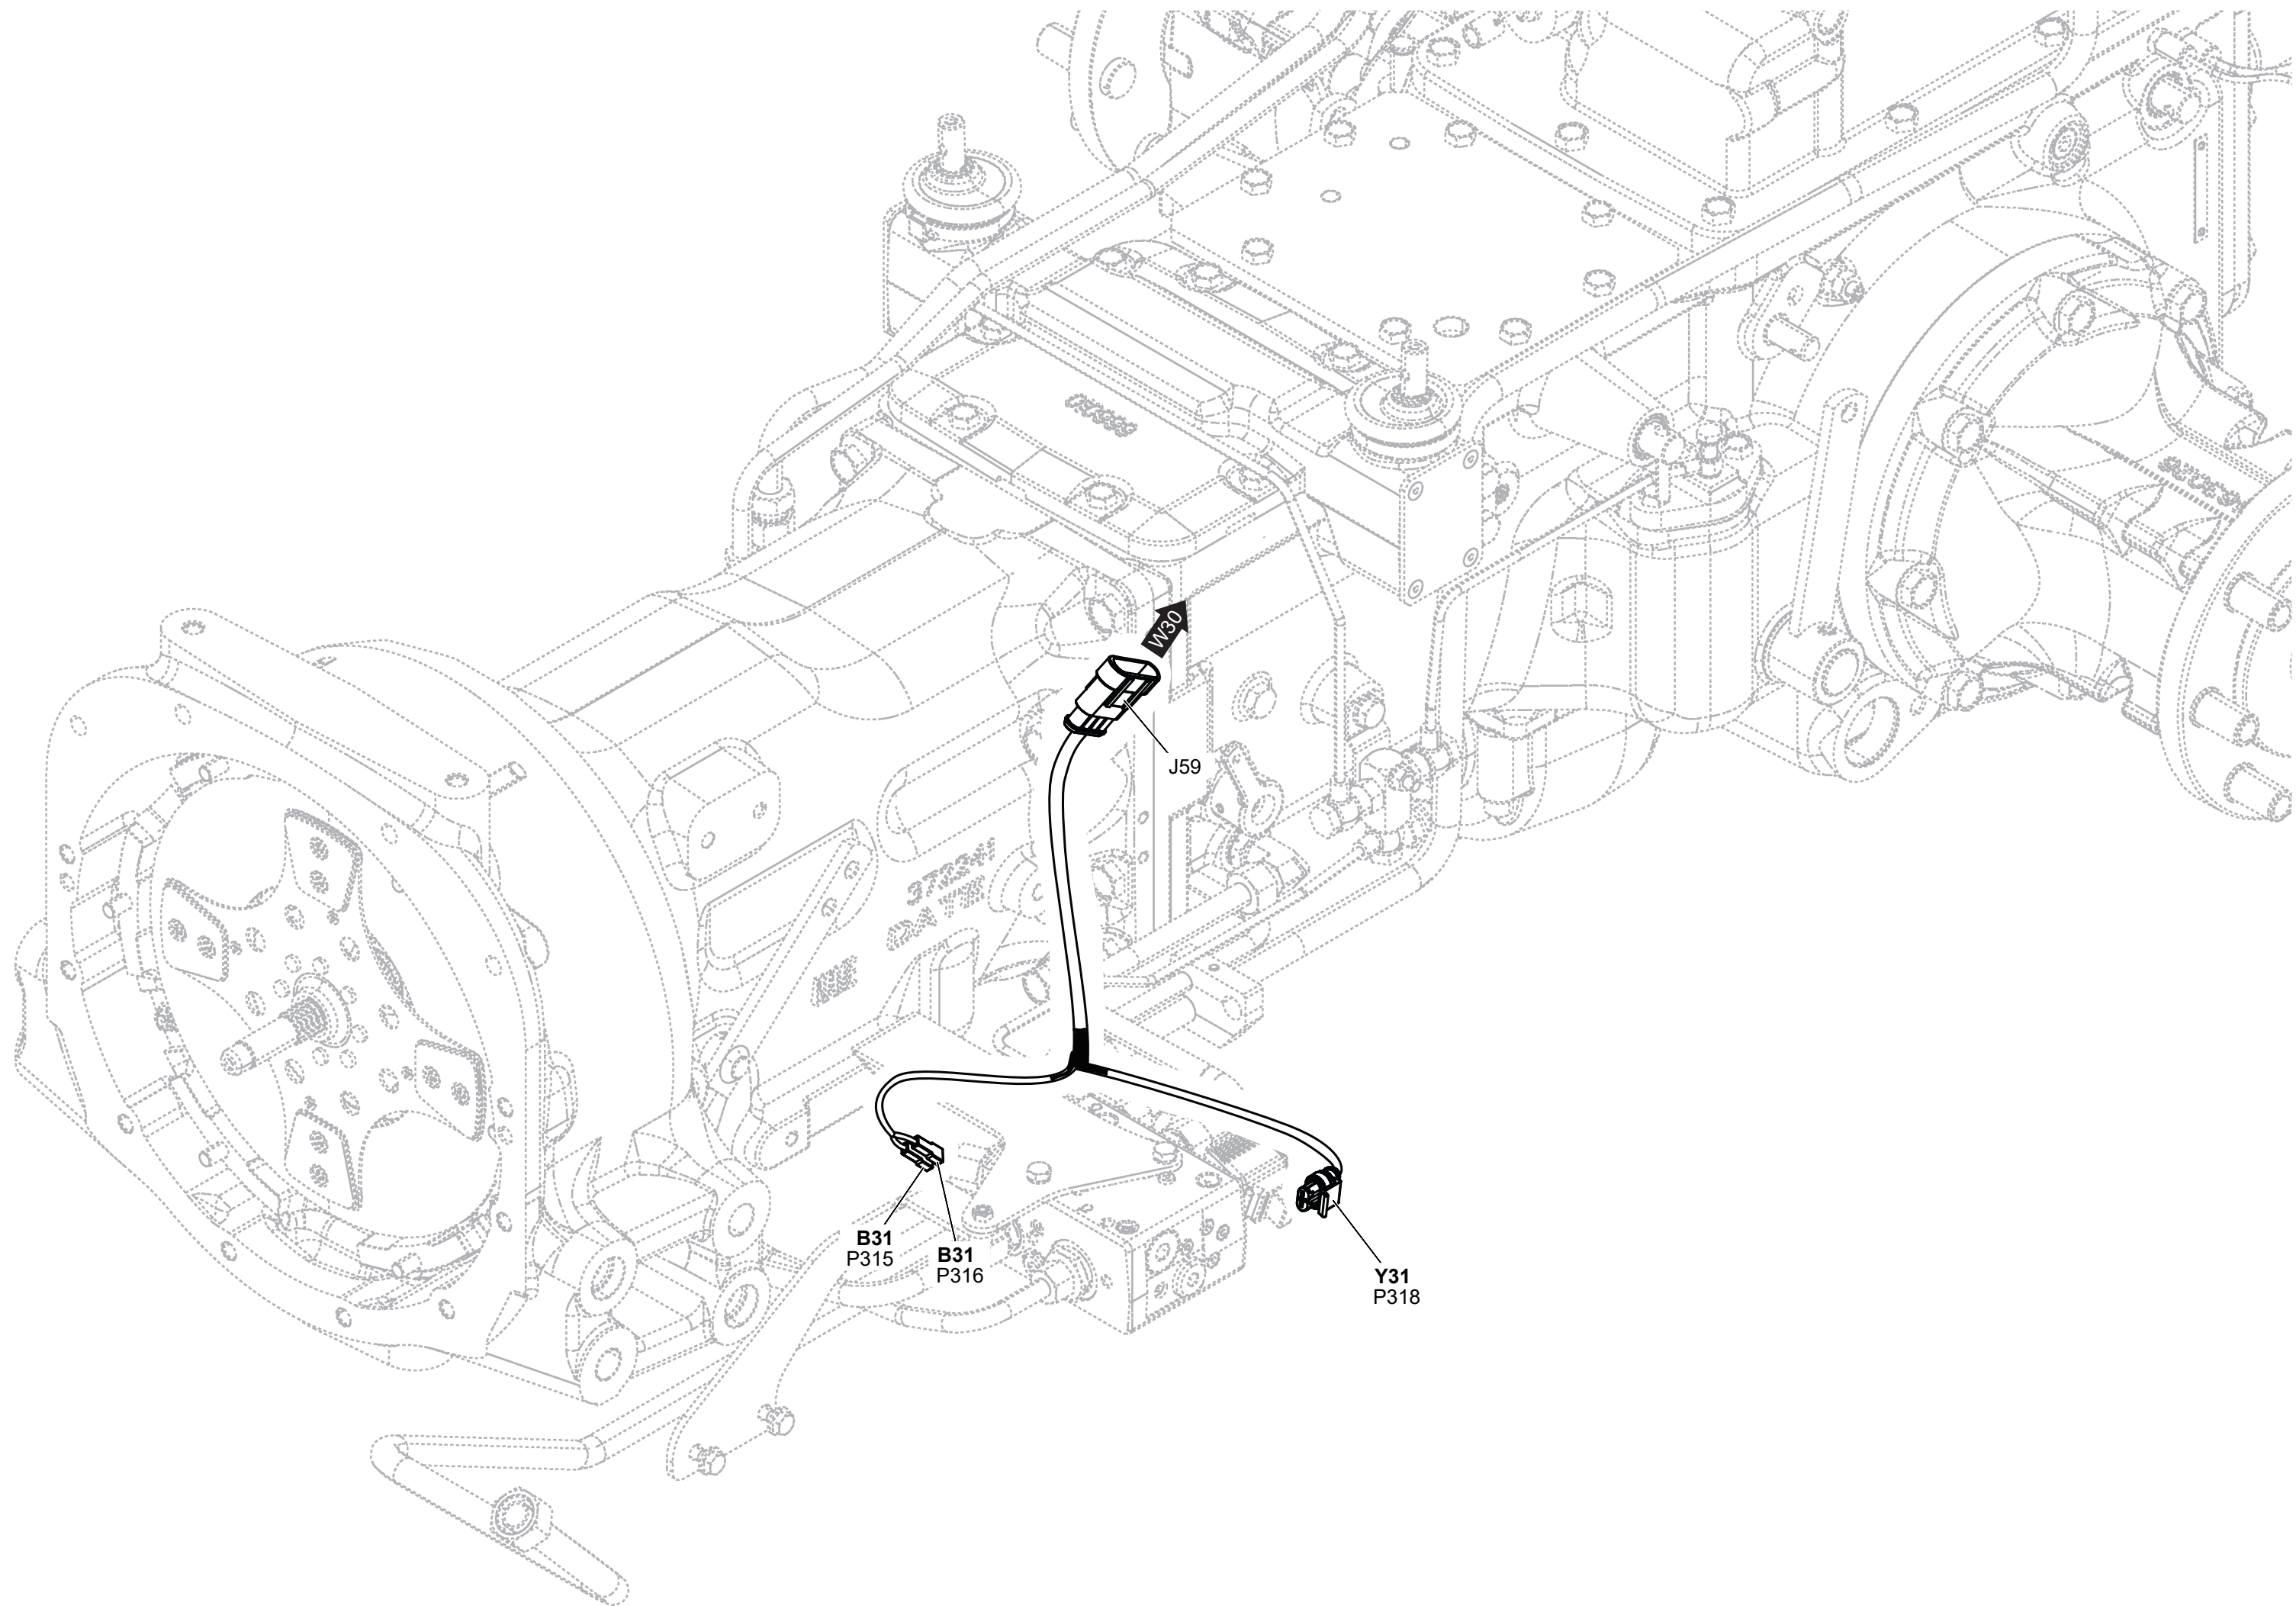

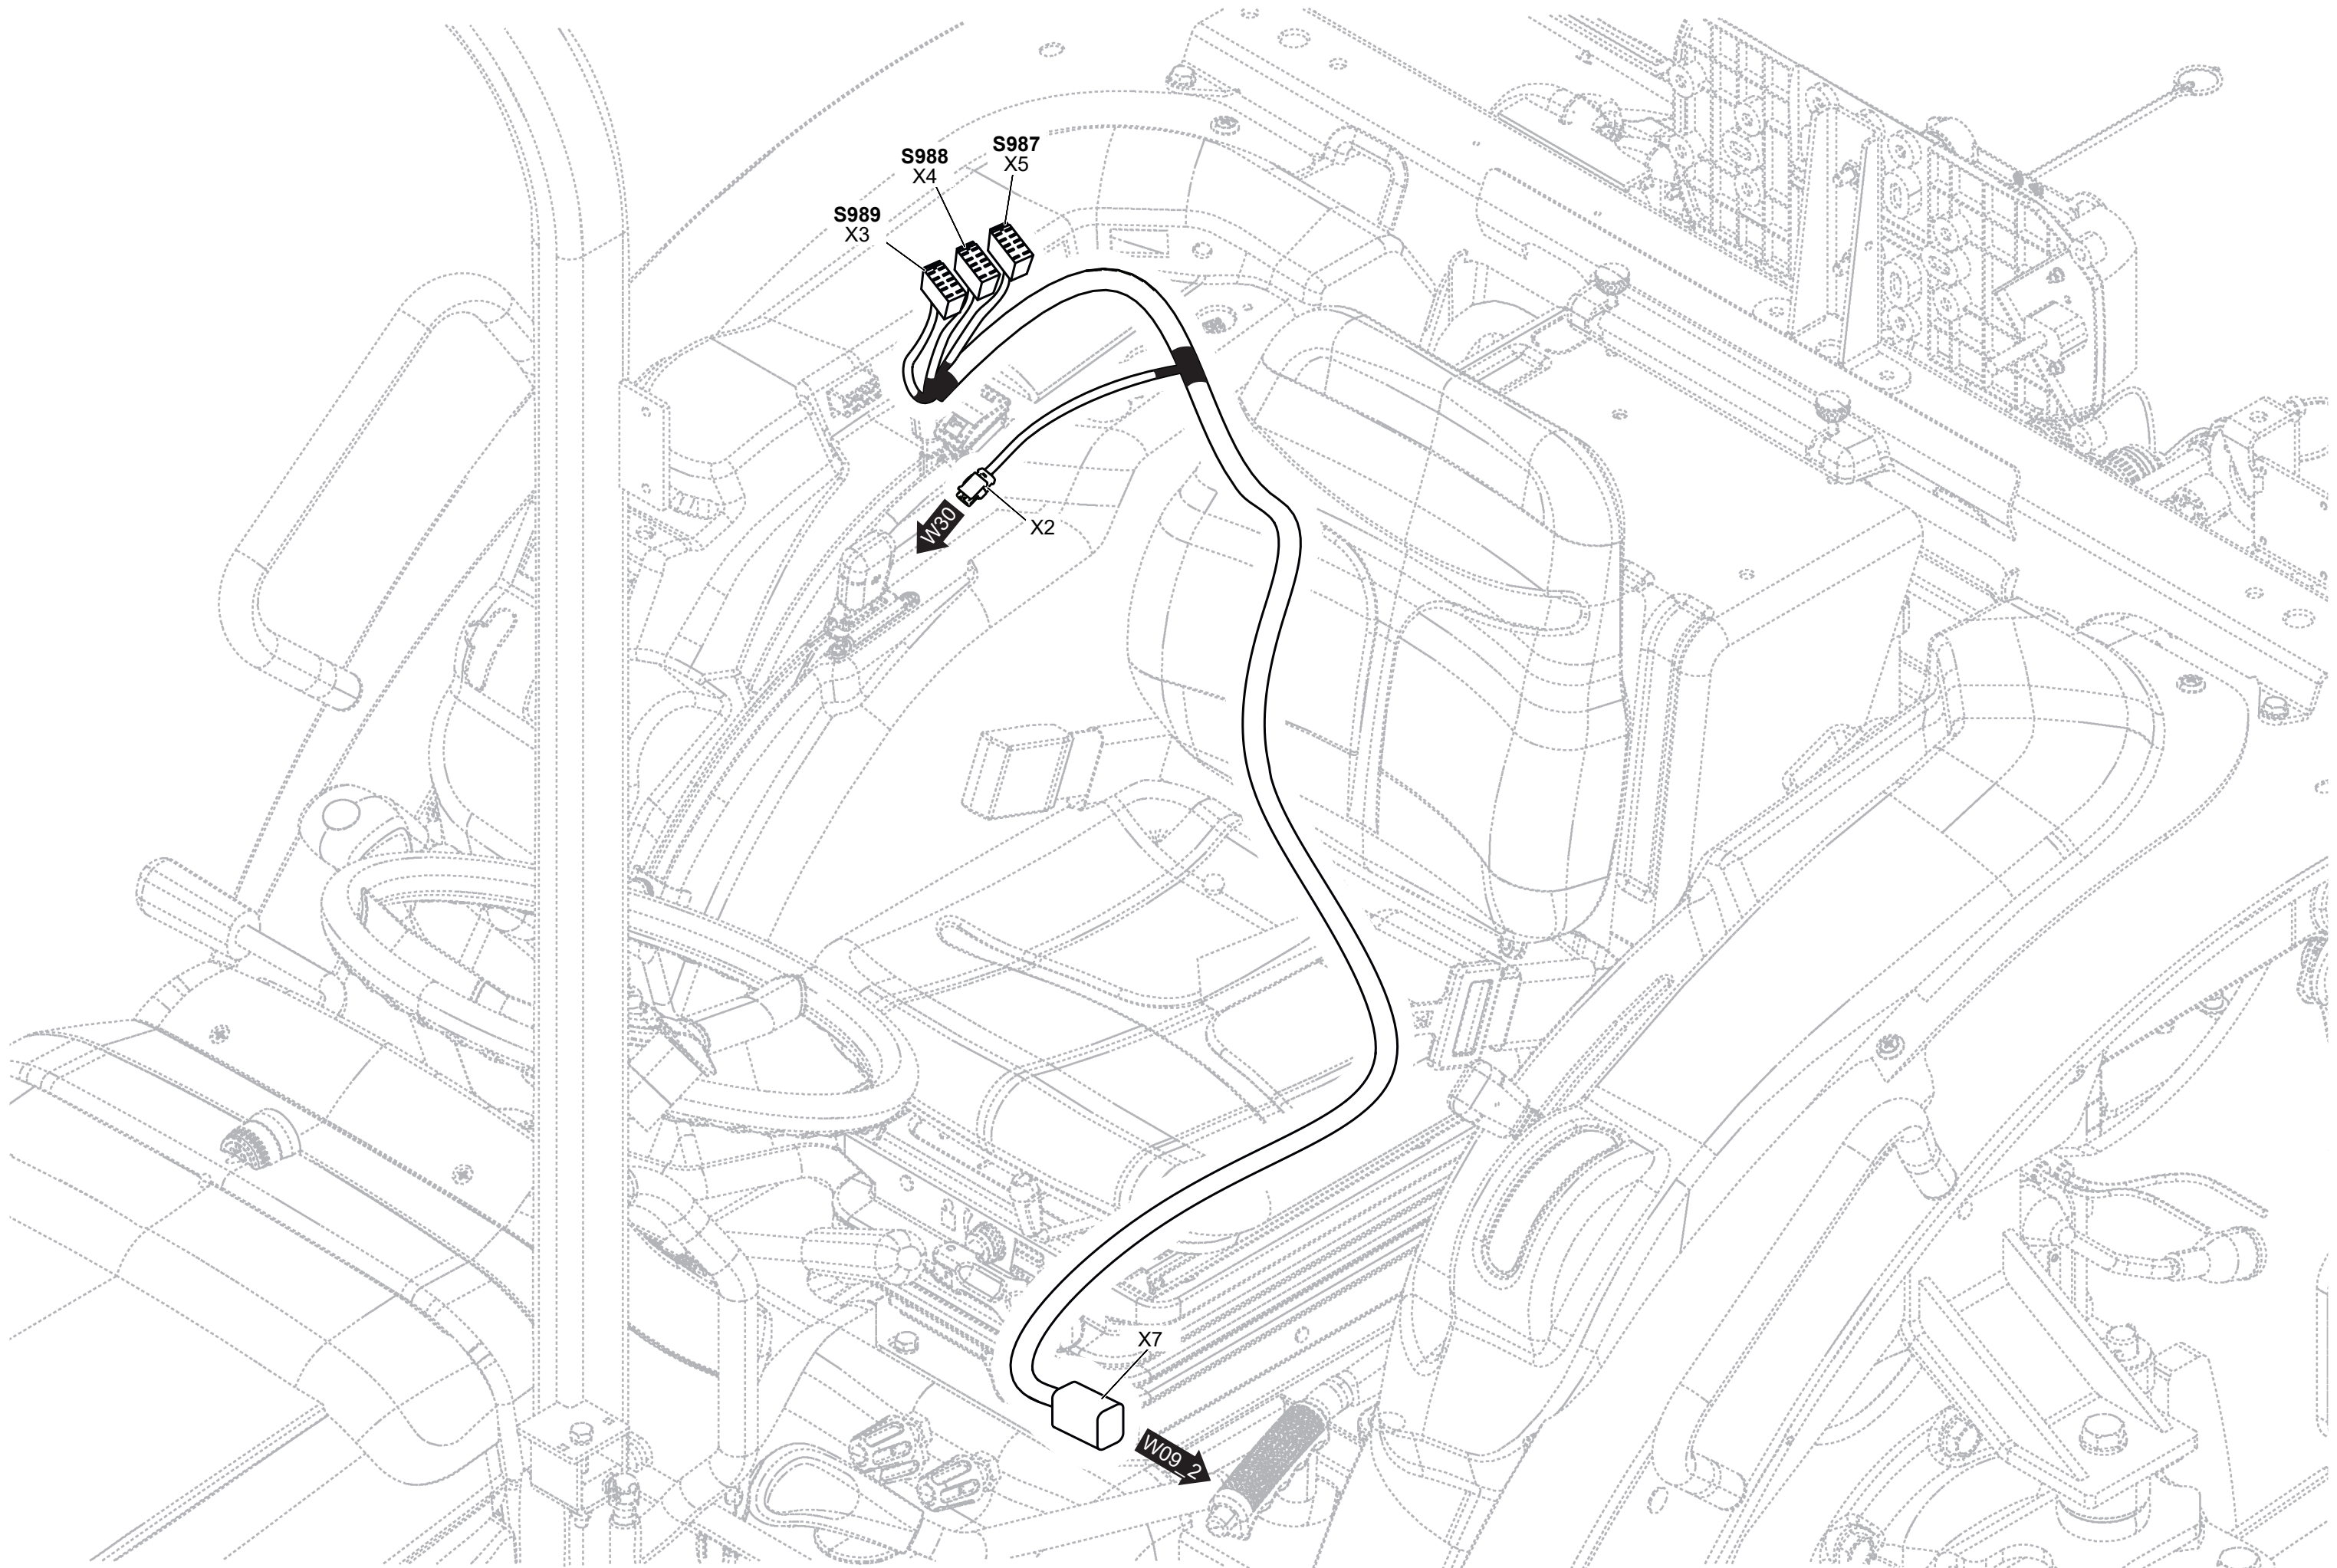


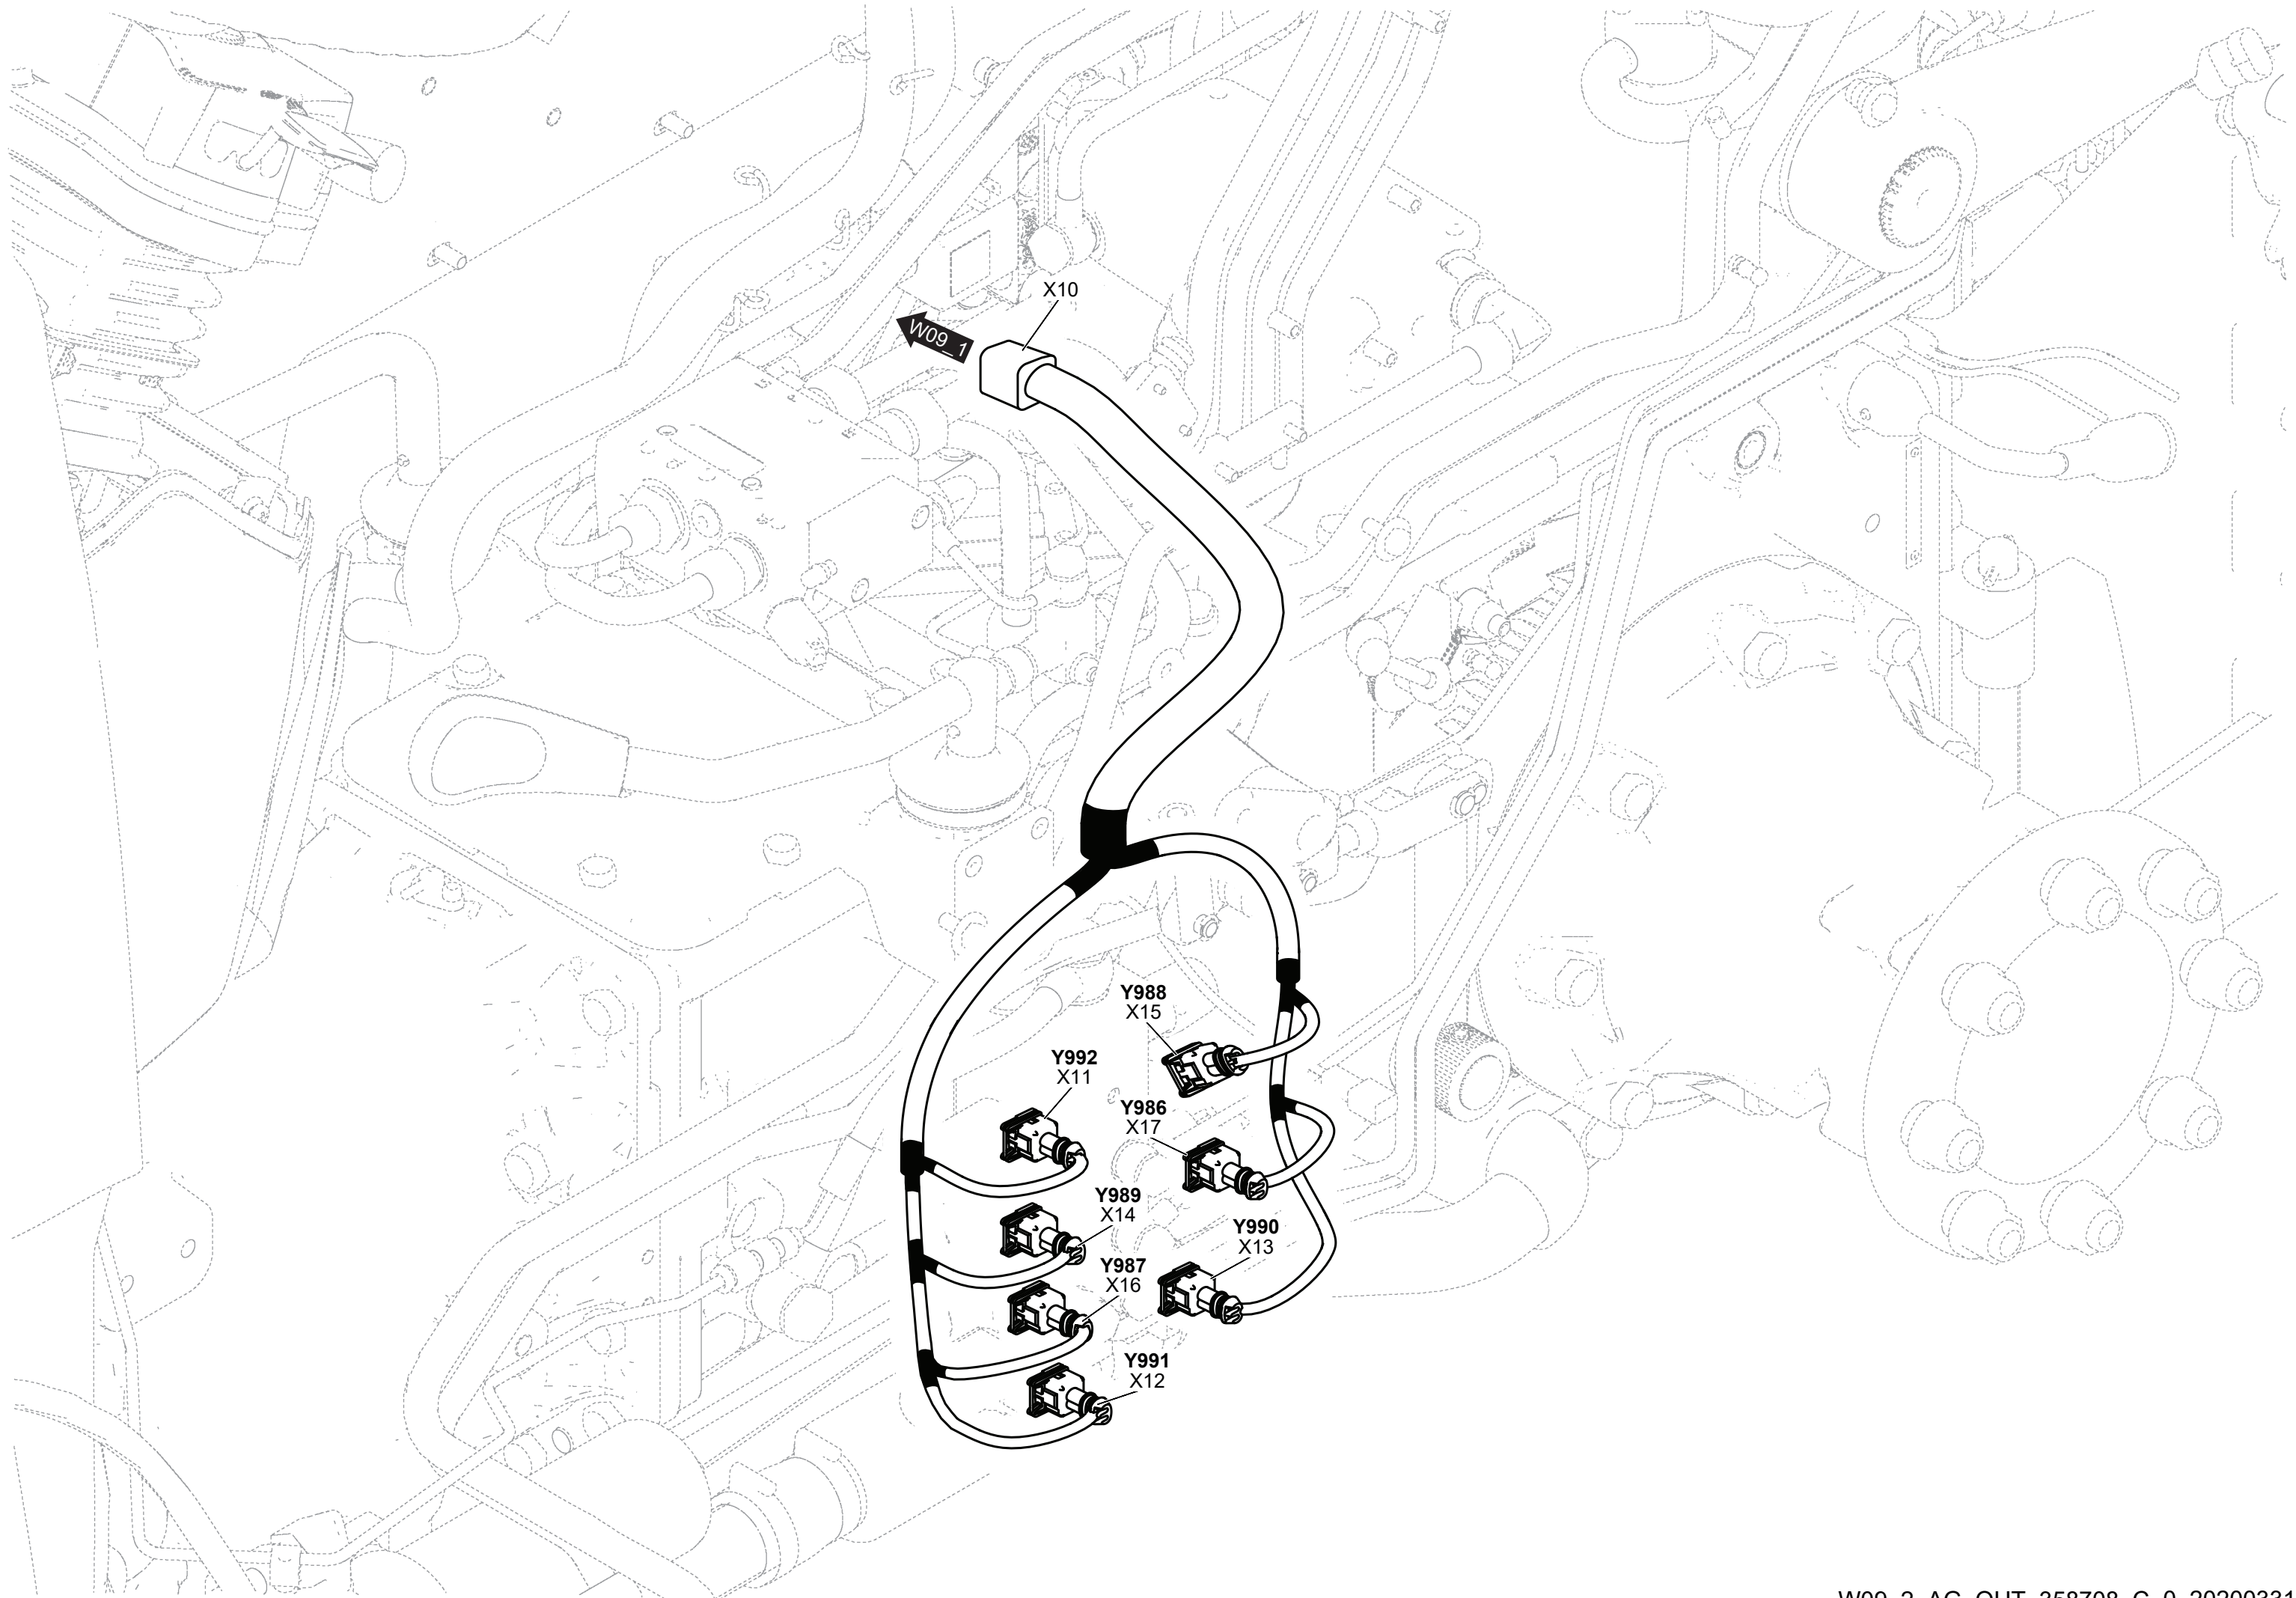


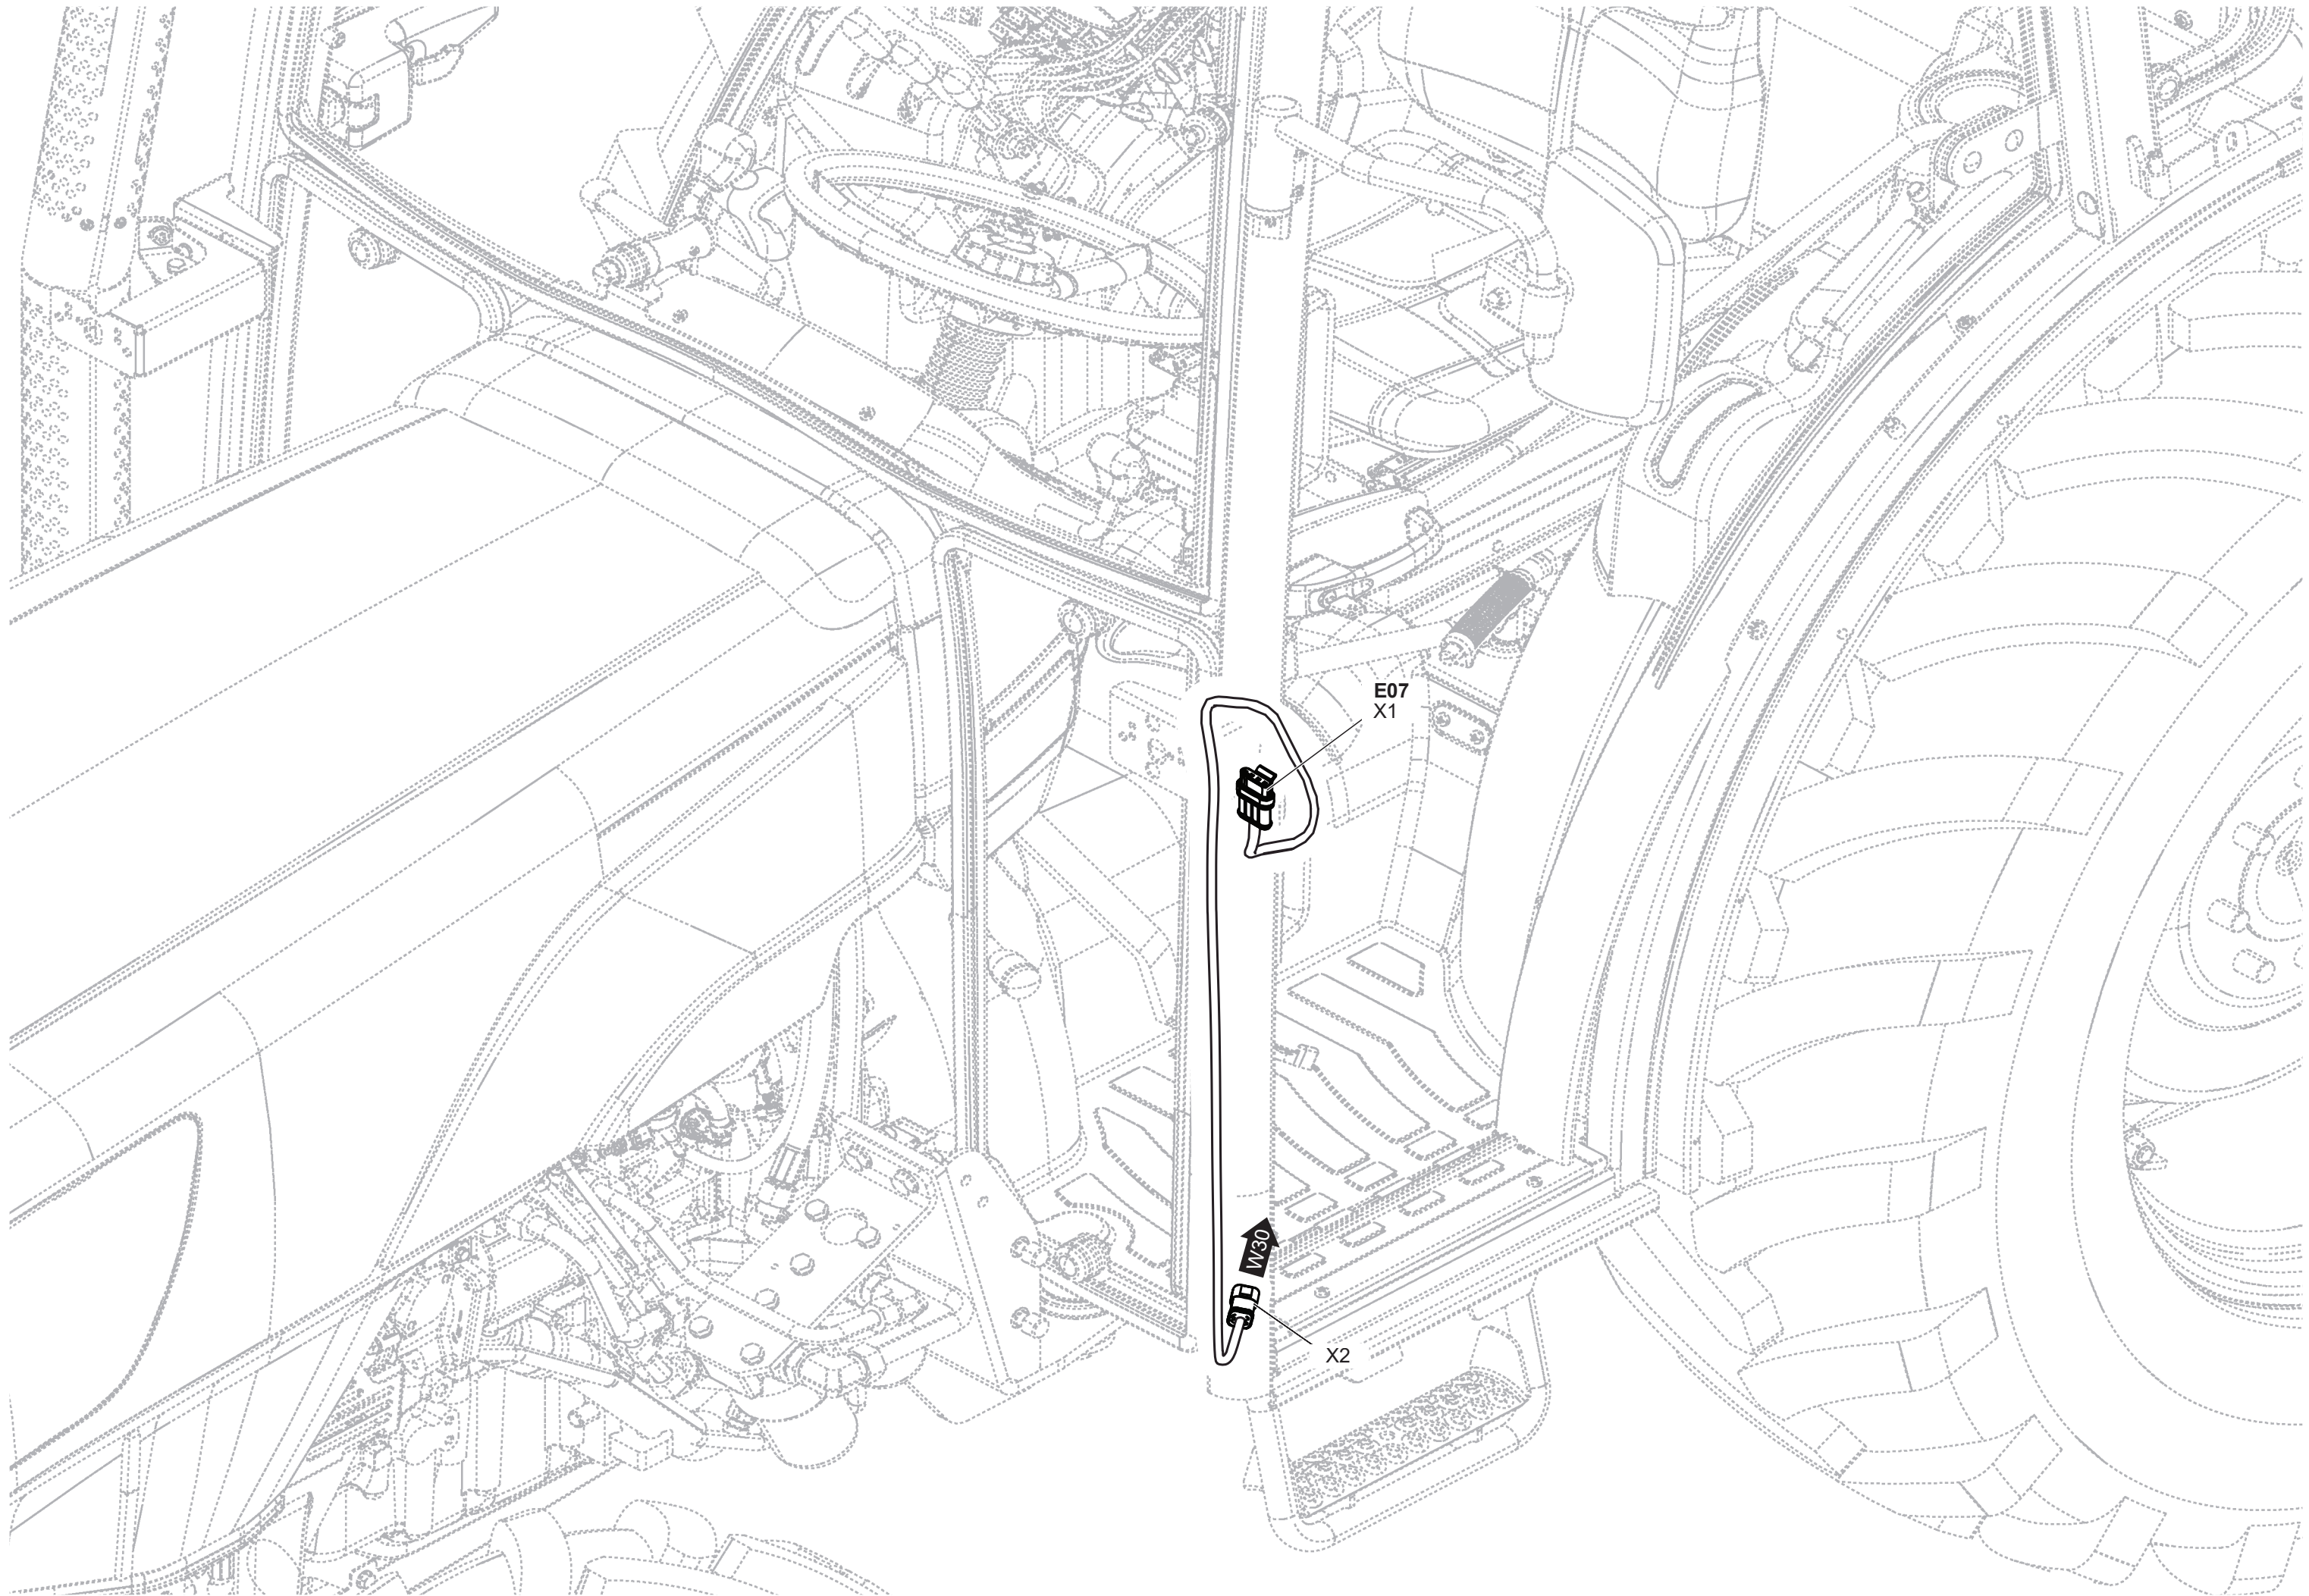



E07
X1


X2

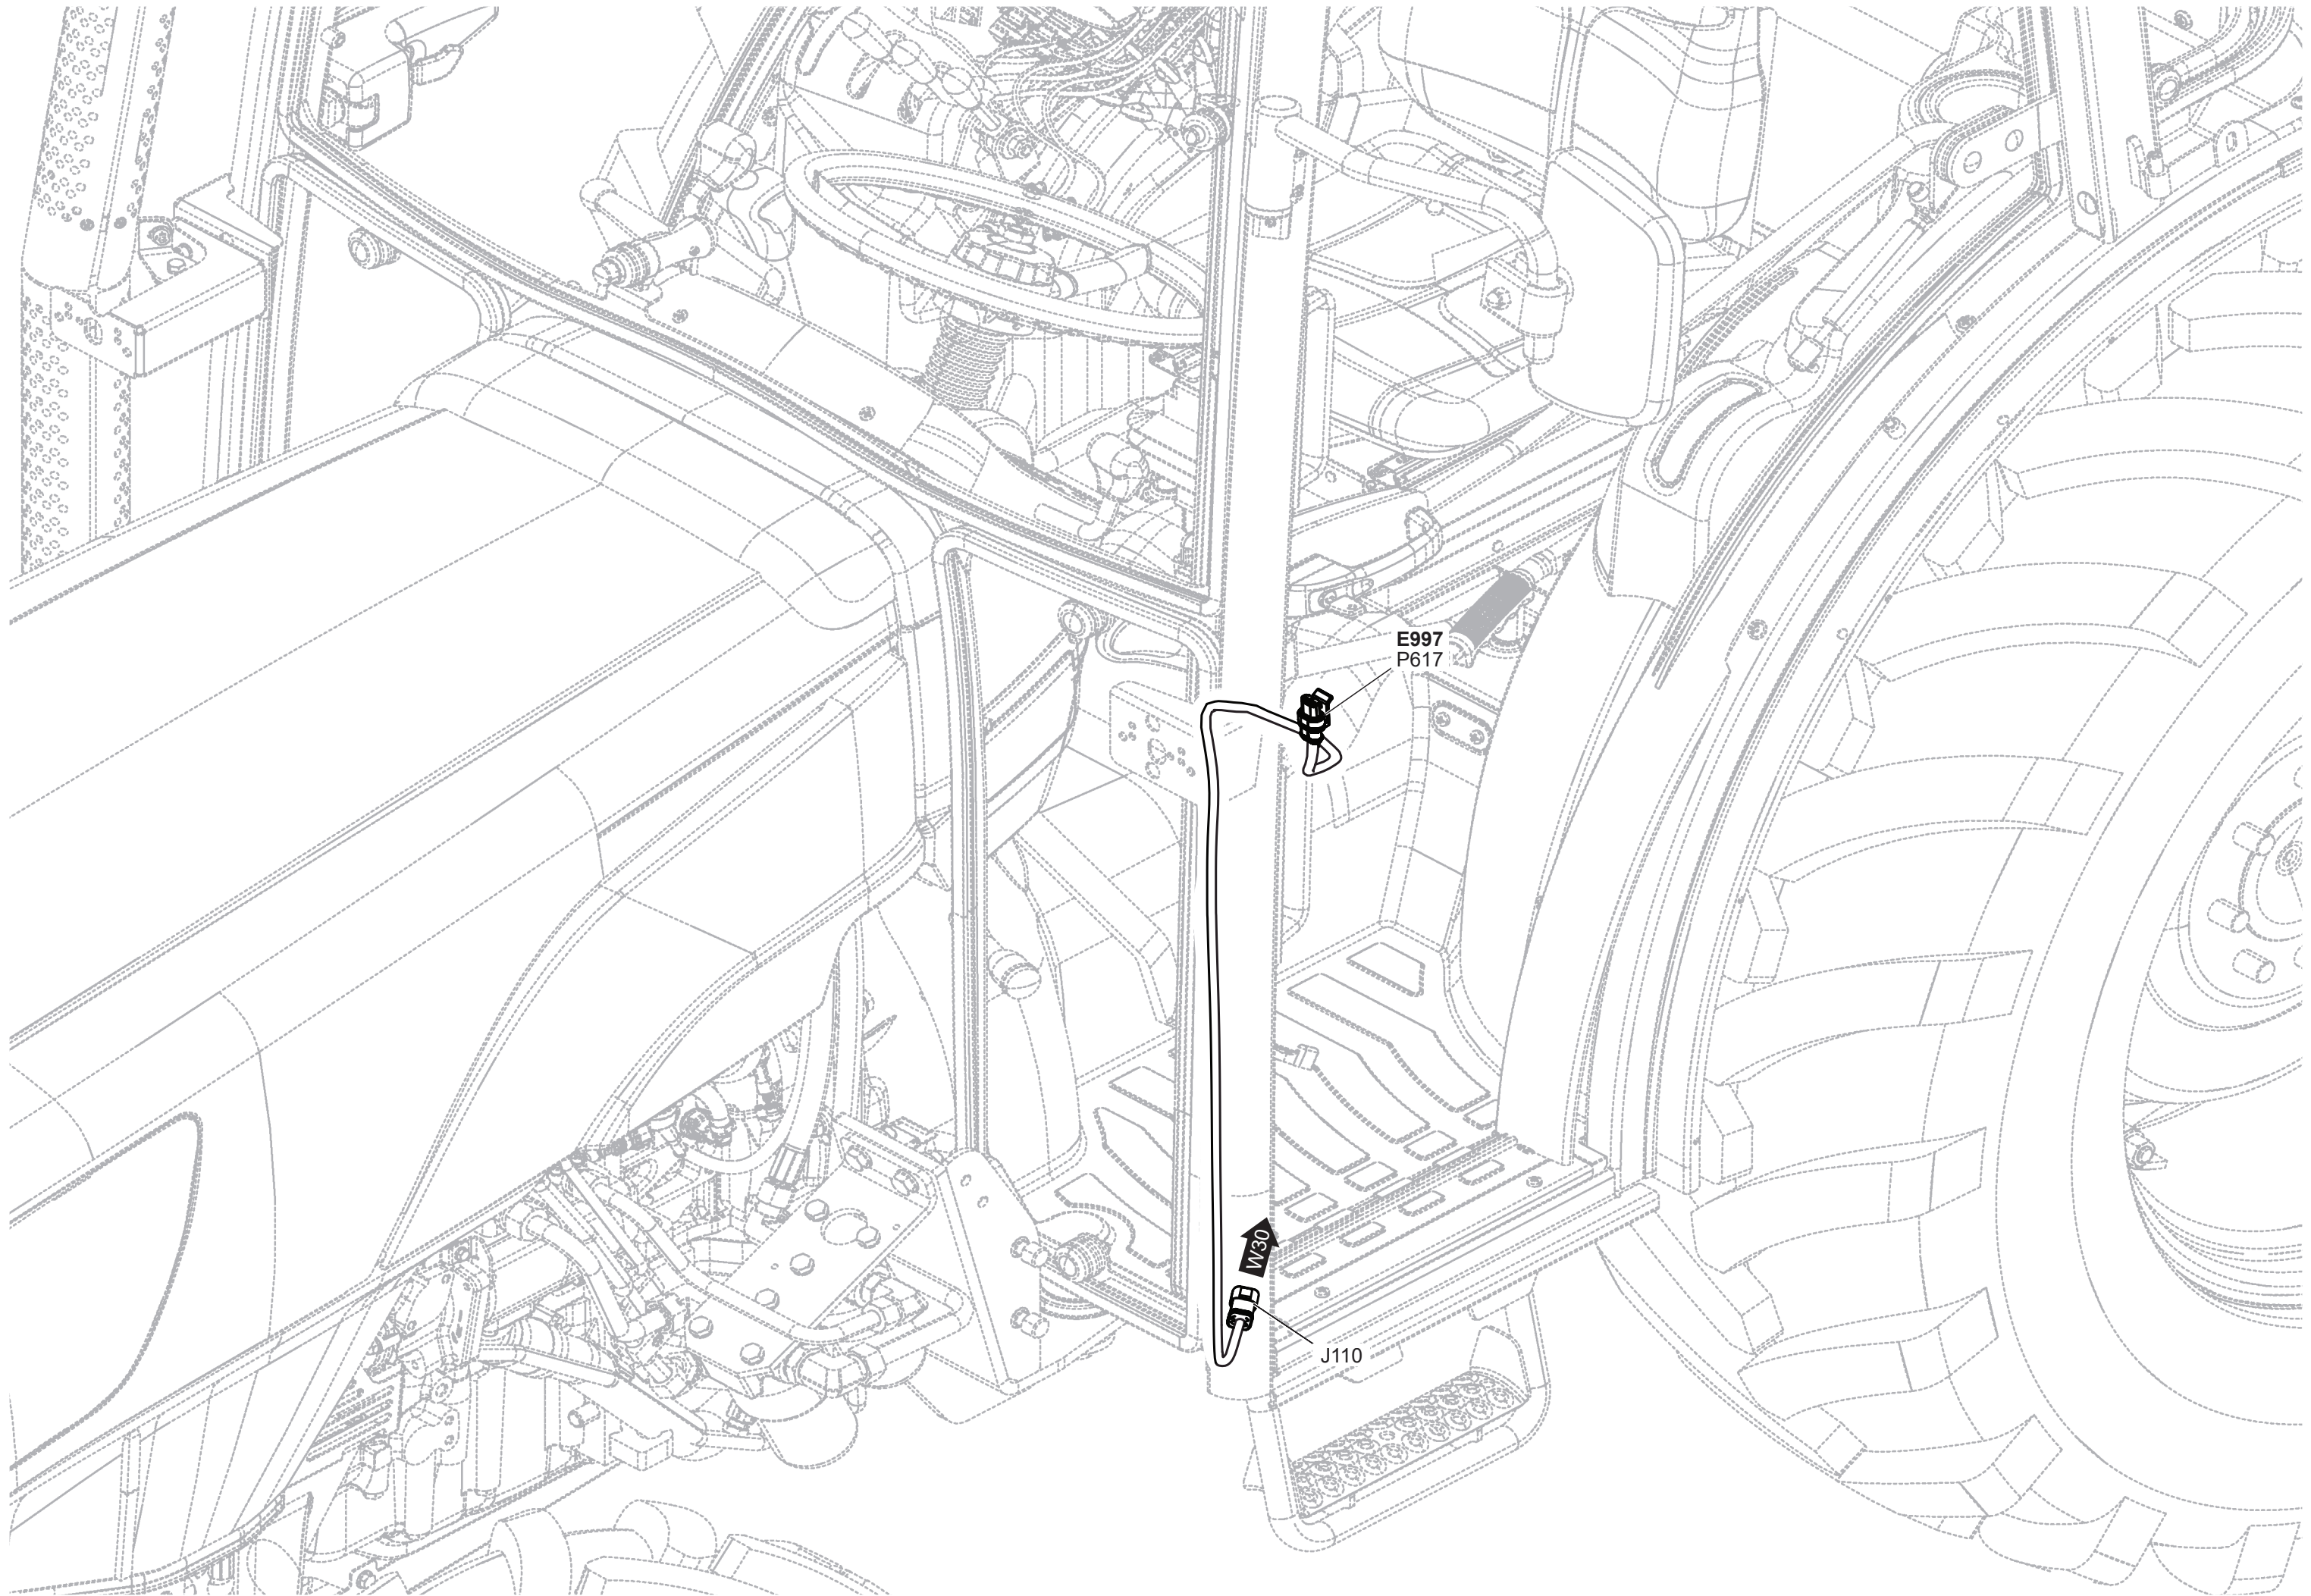



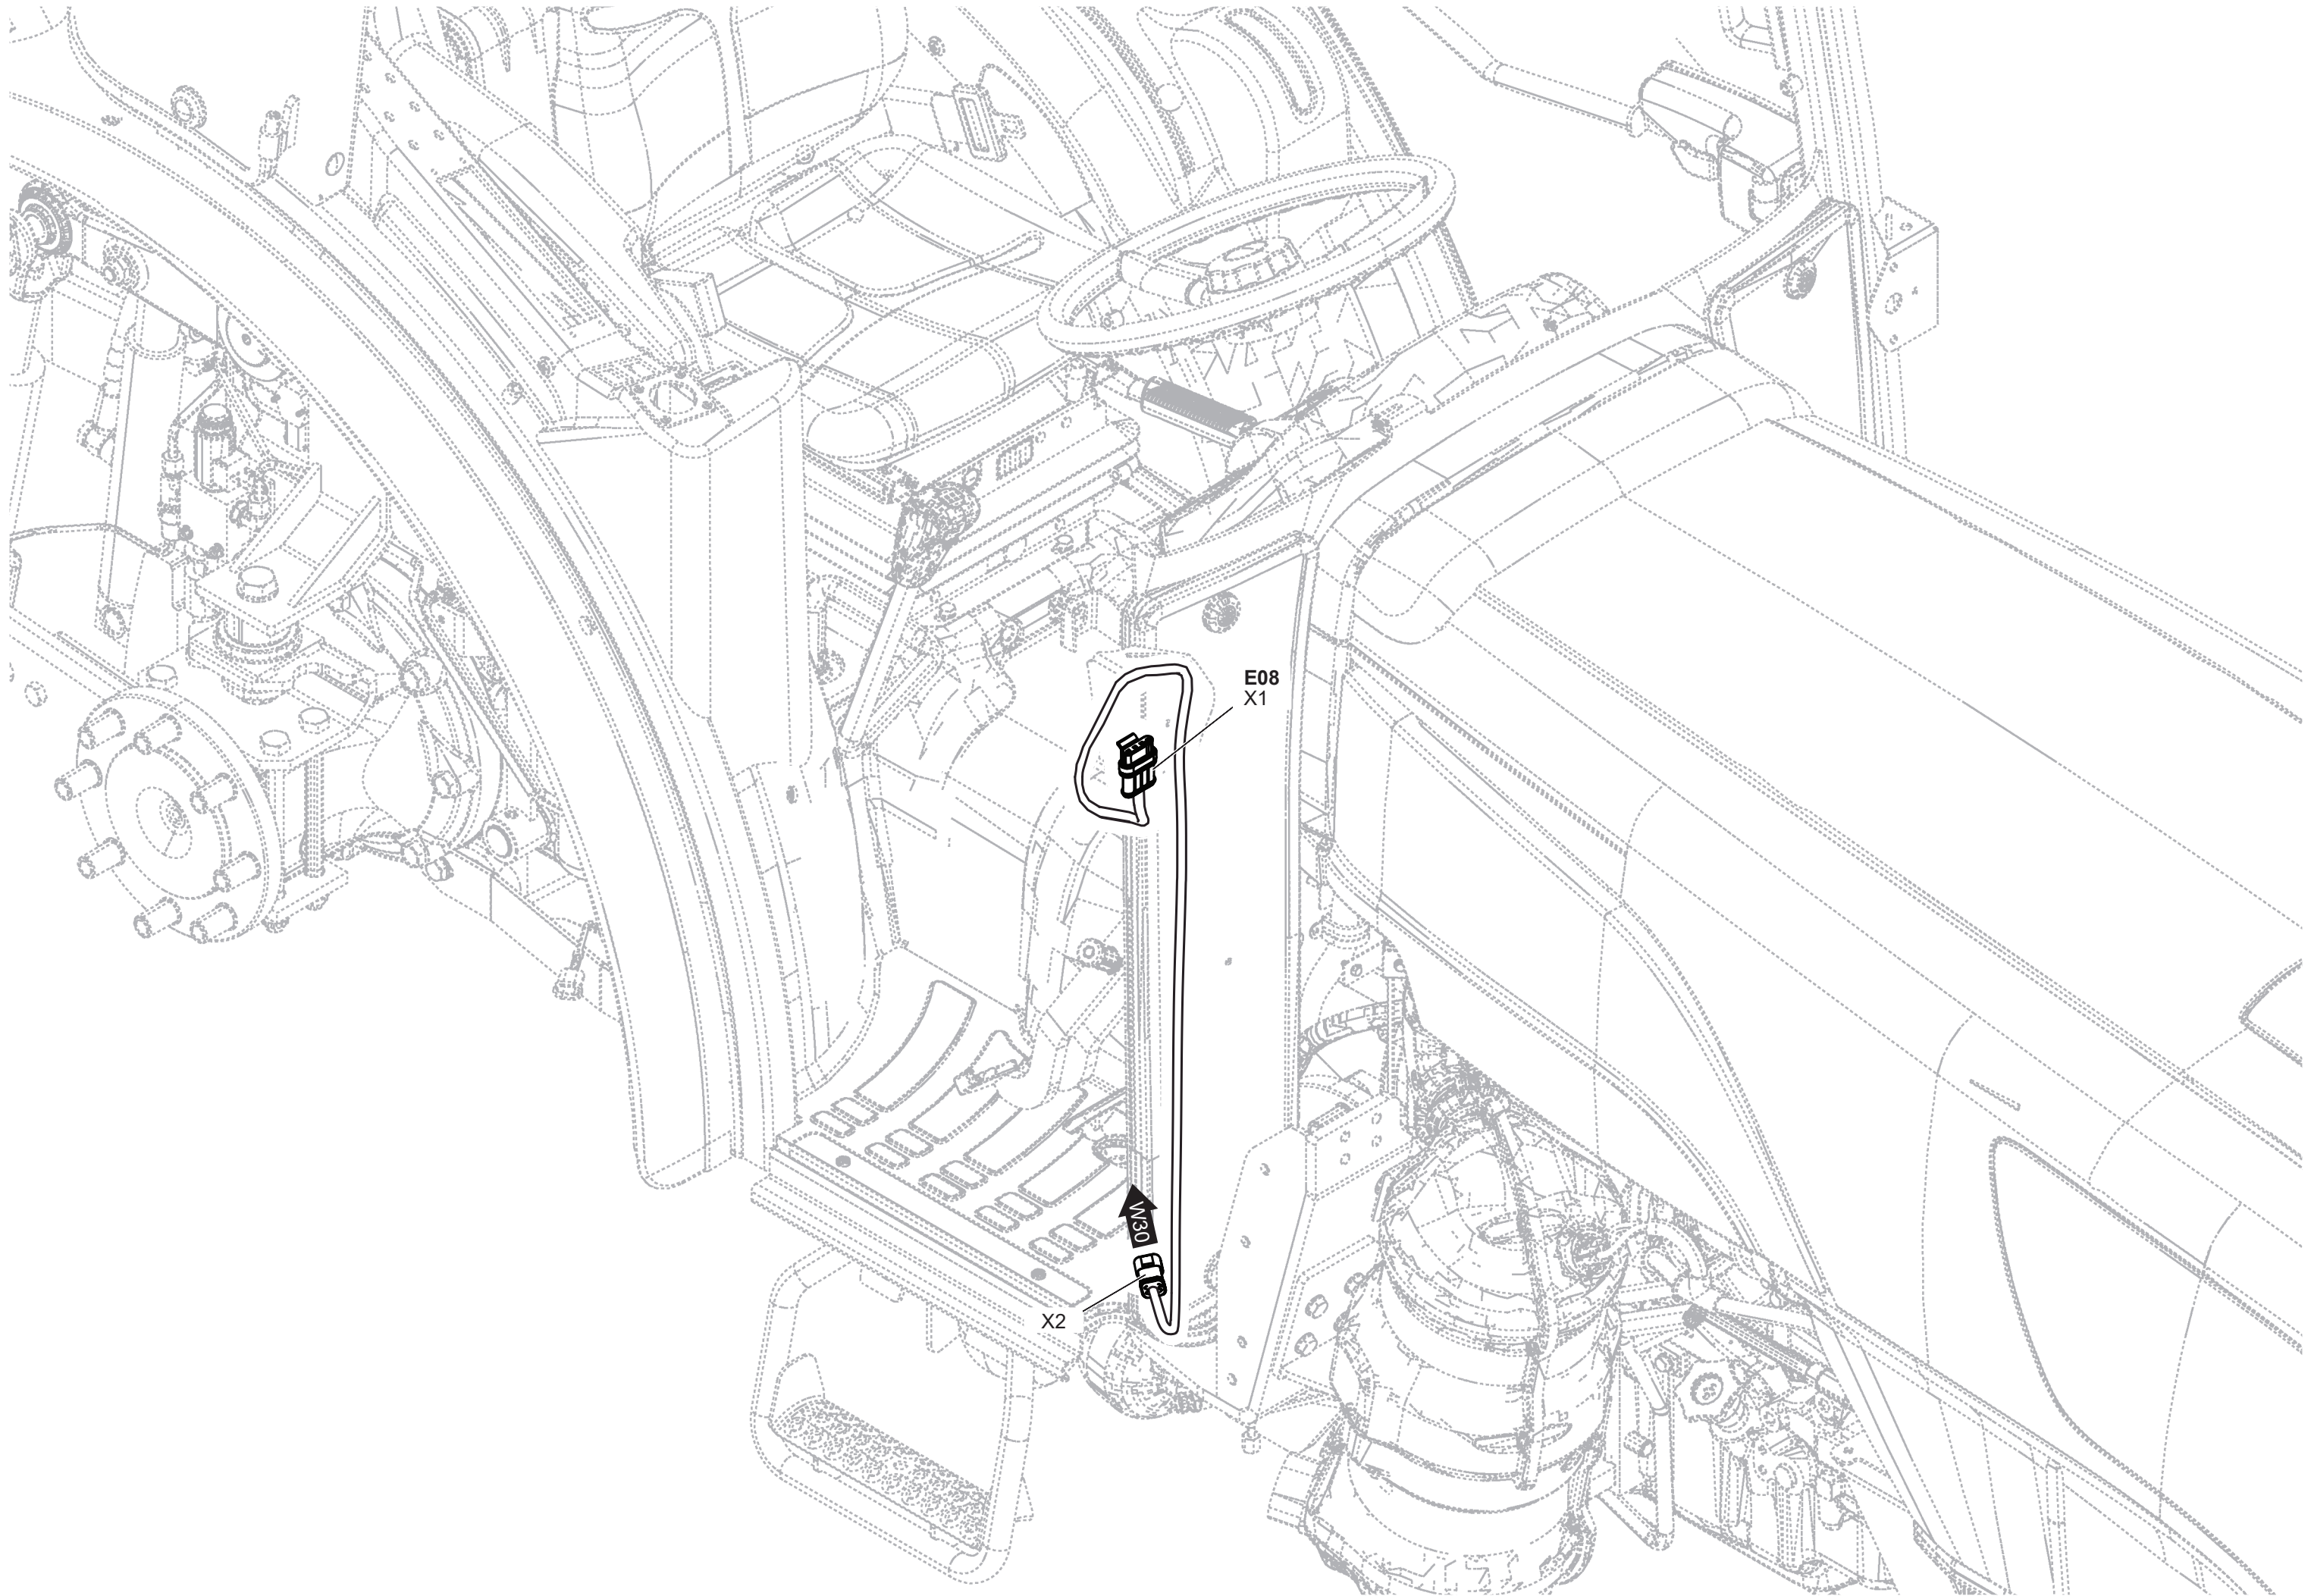


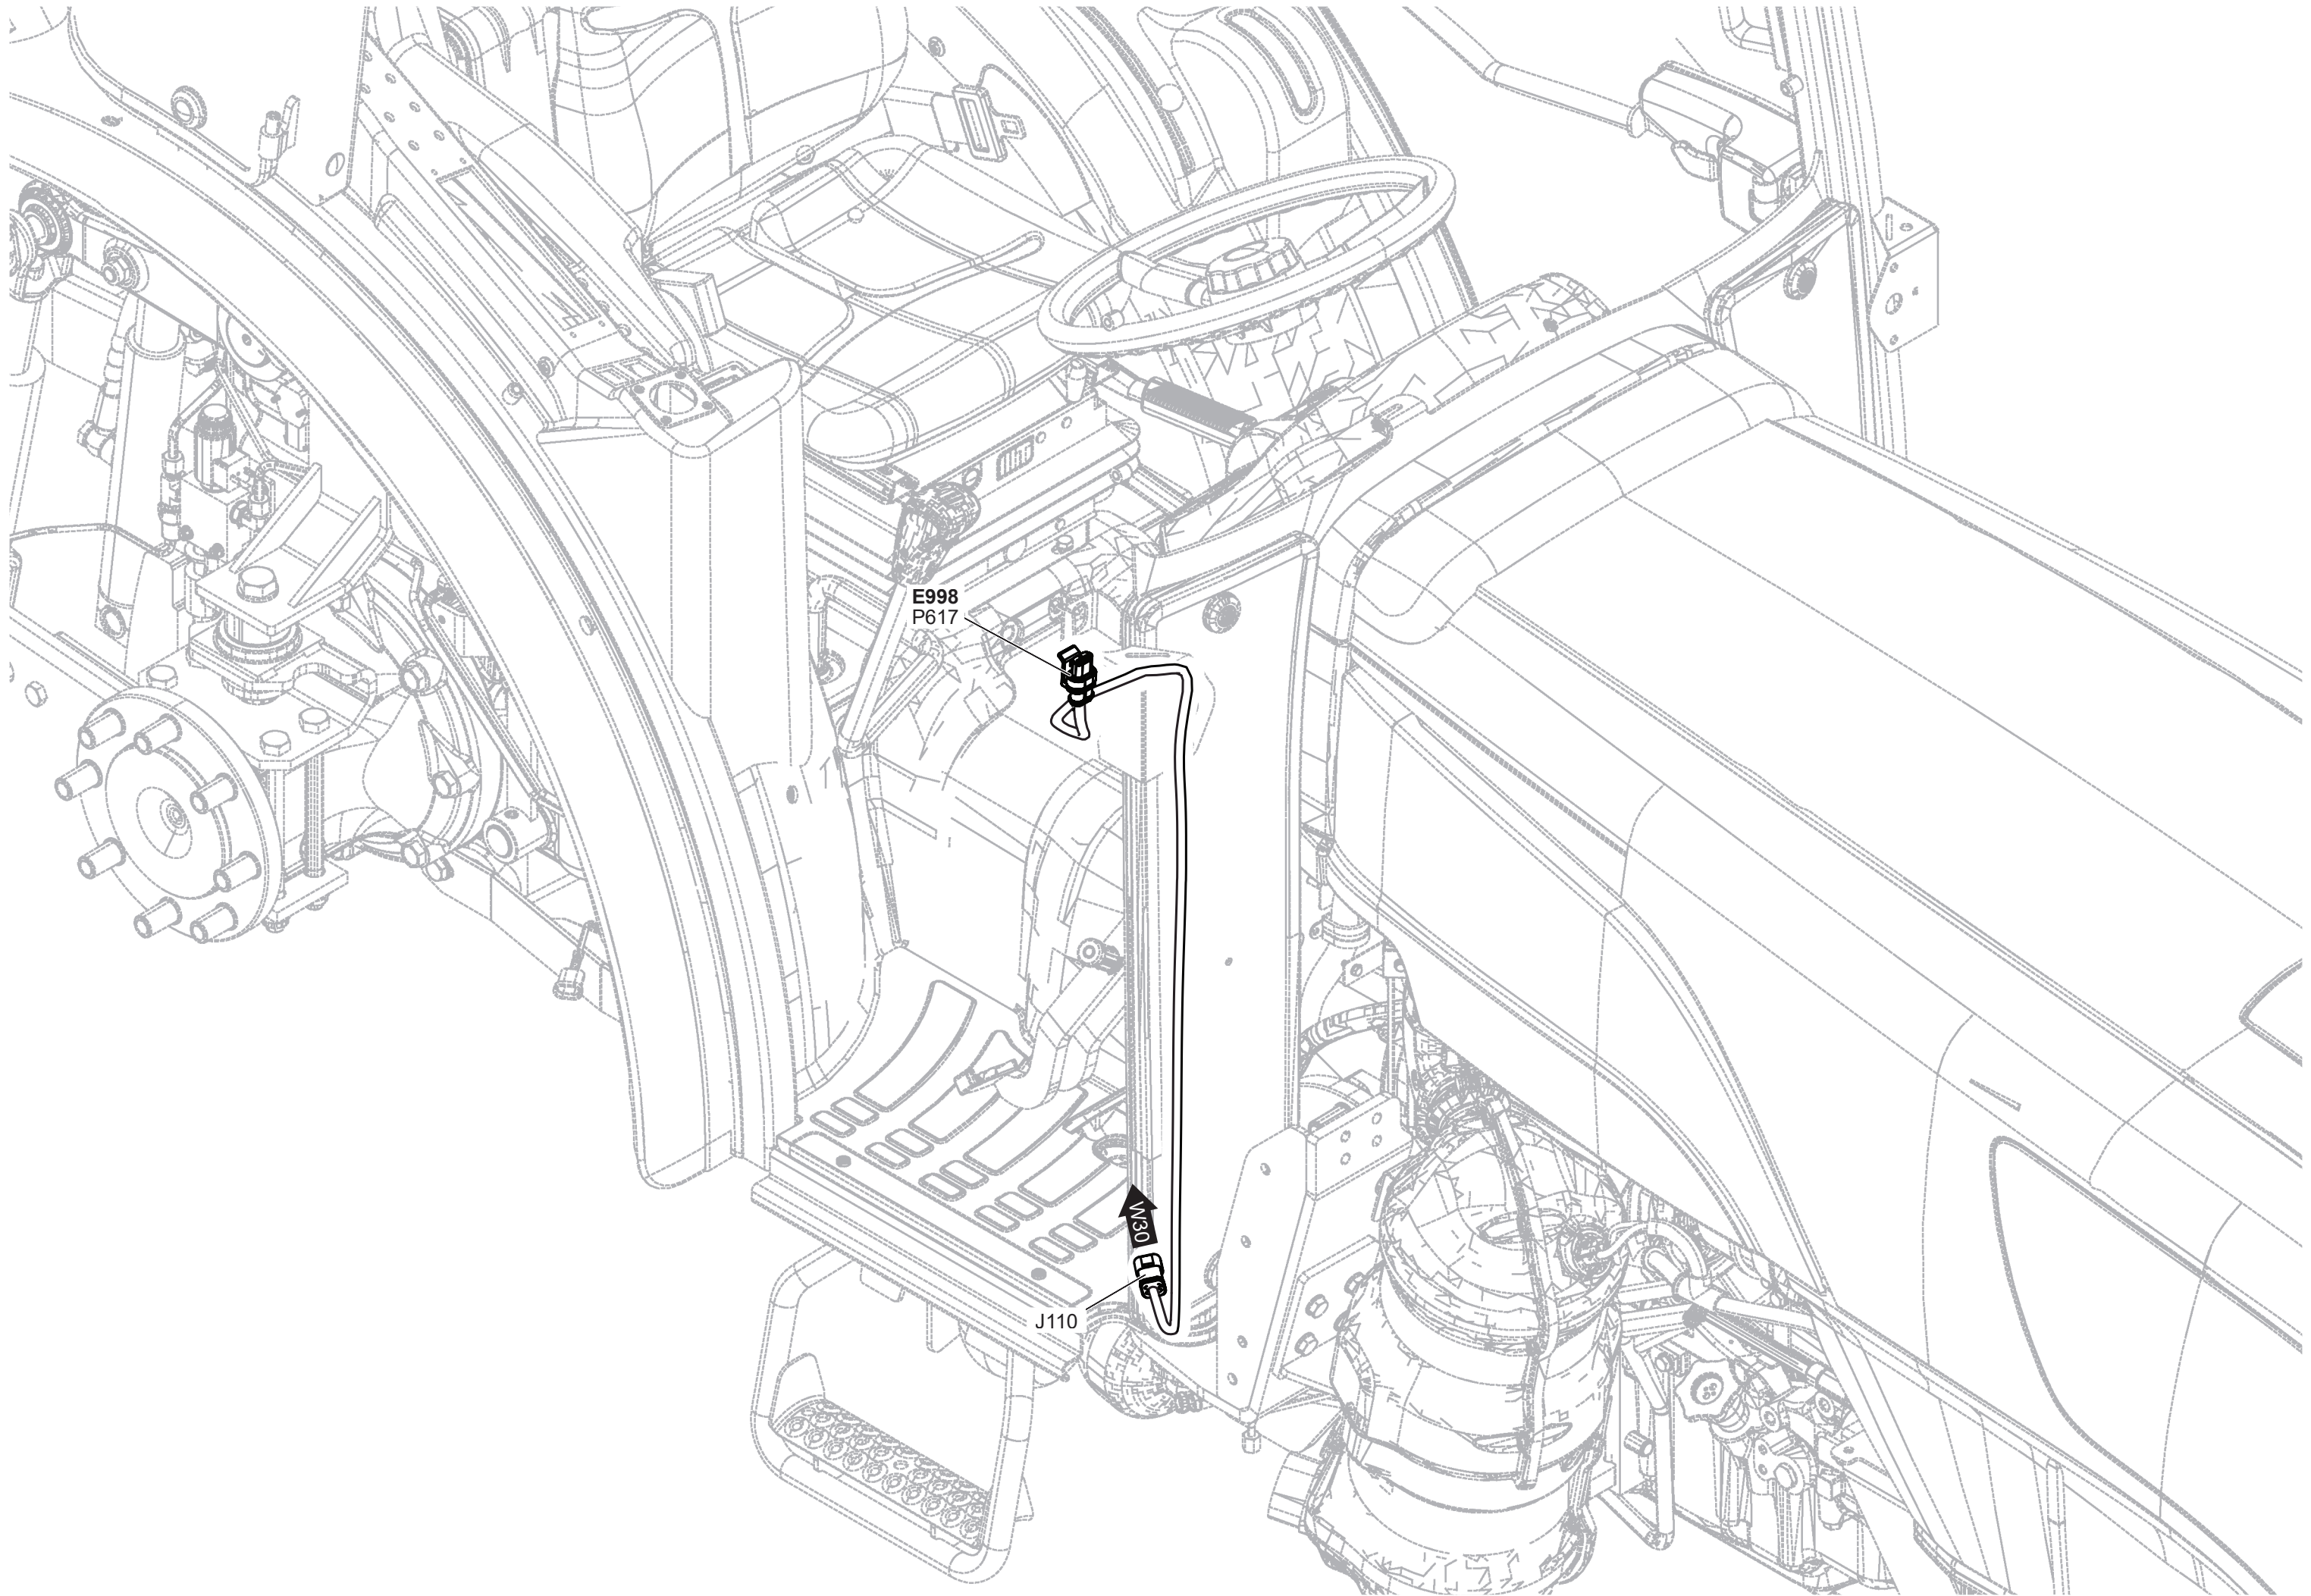


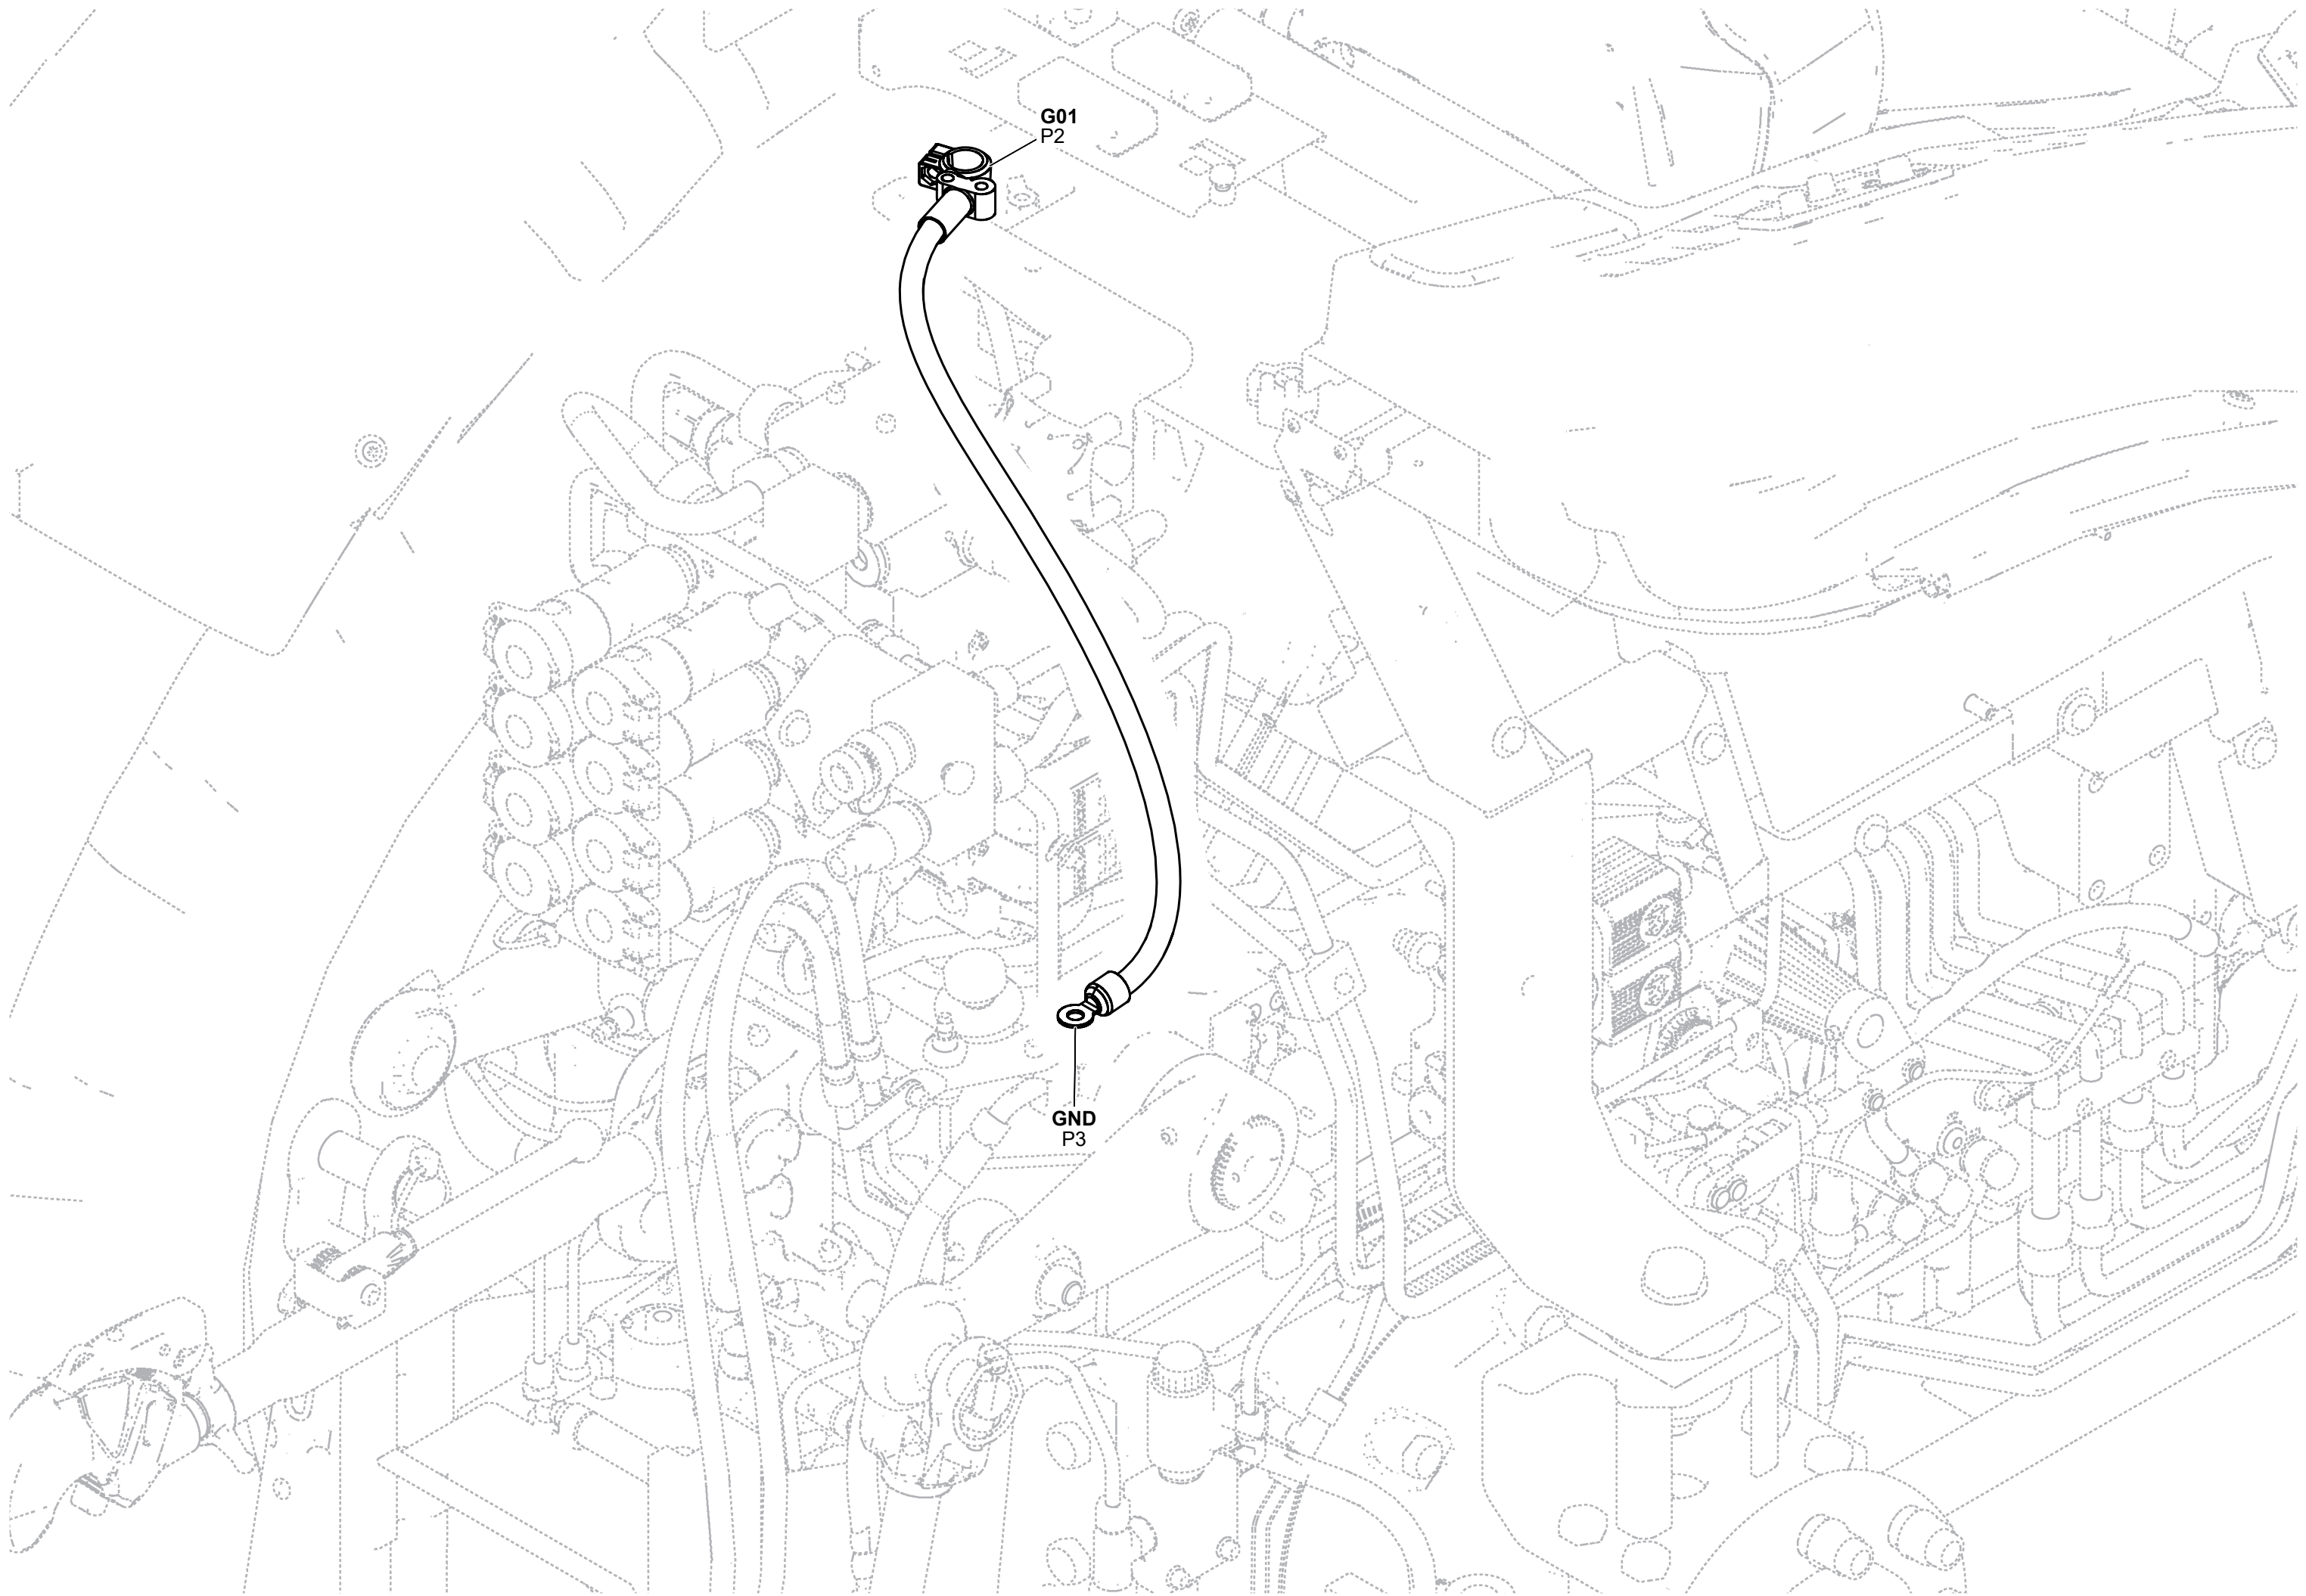


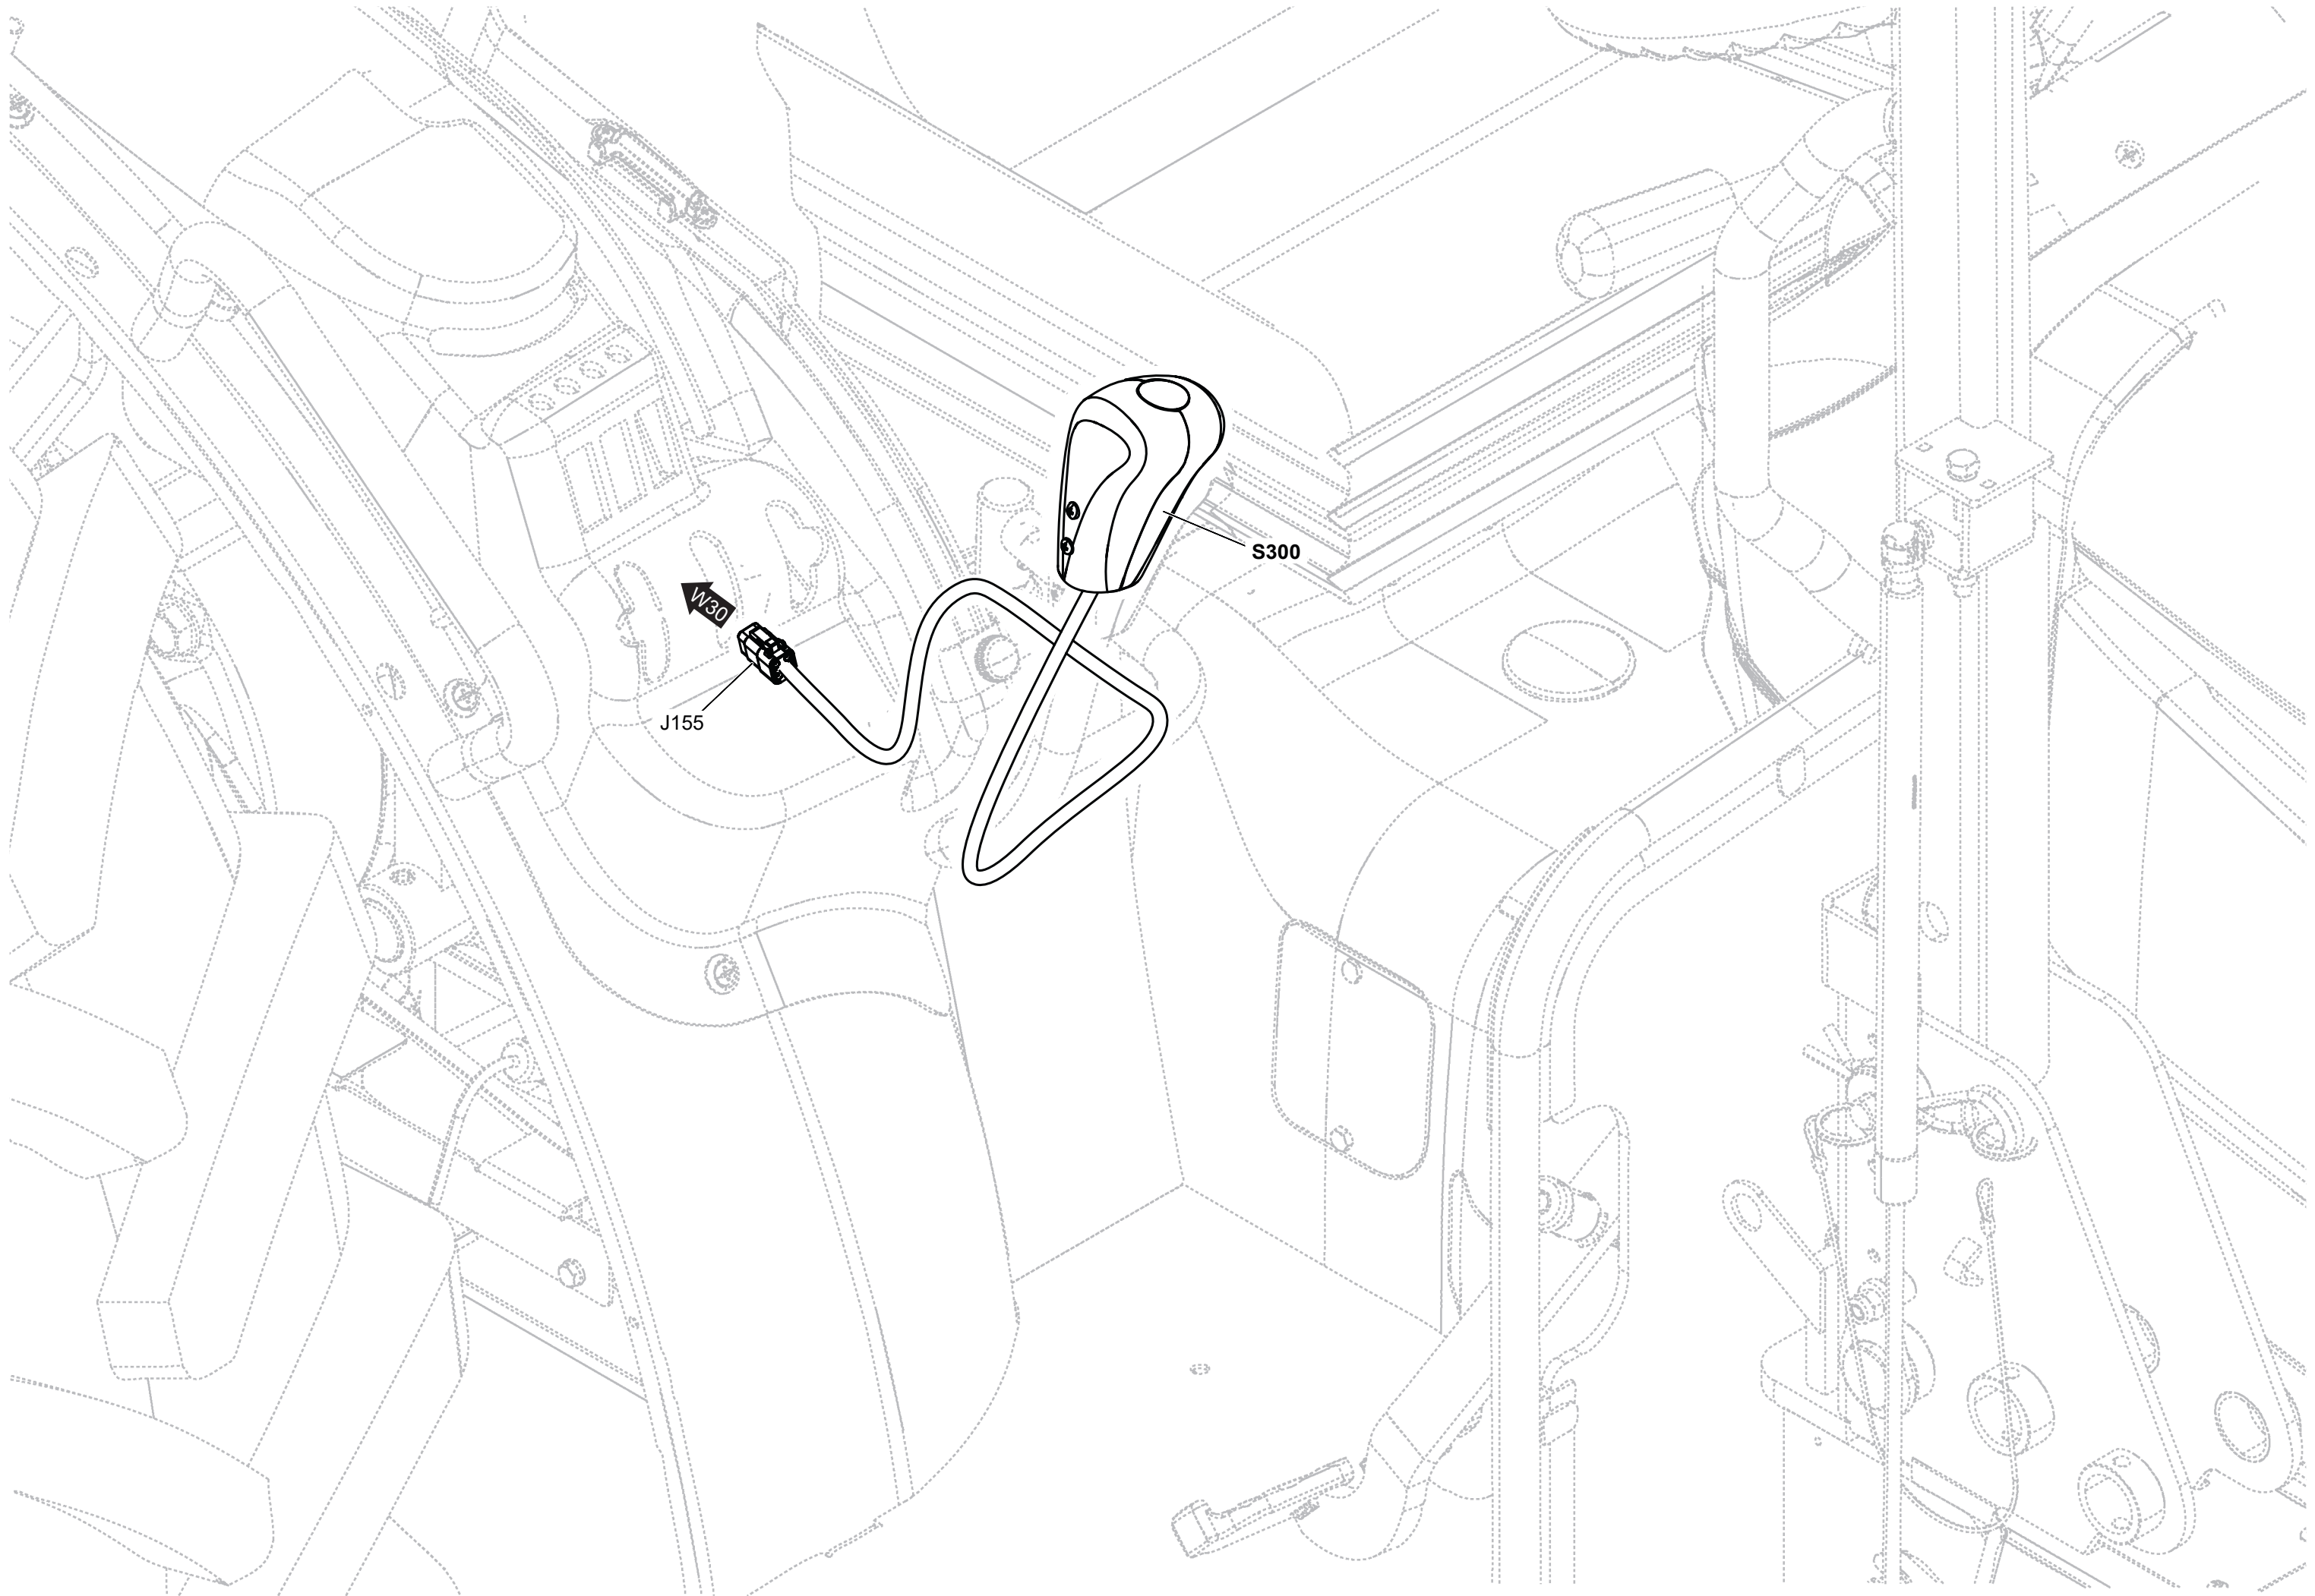


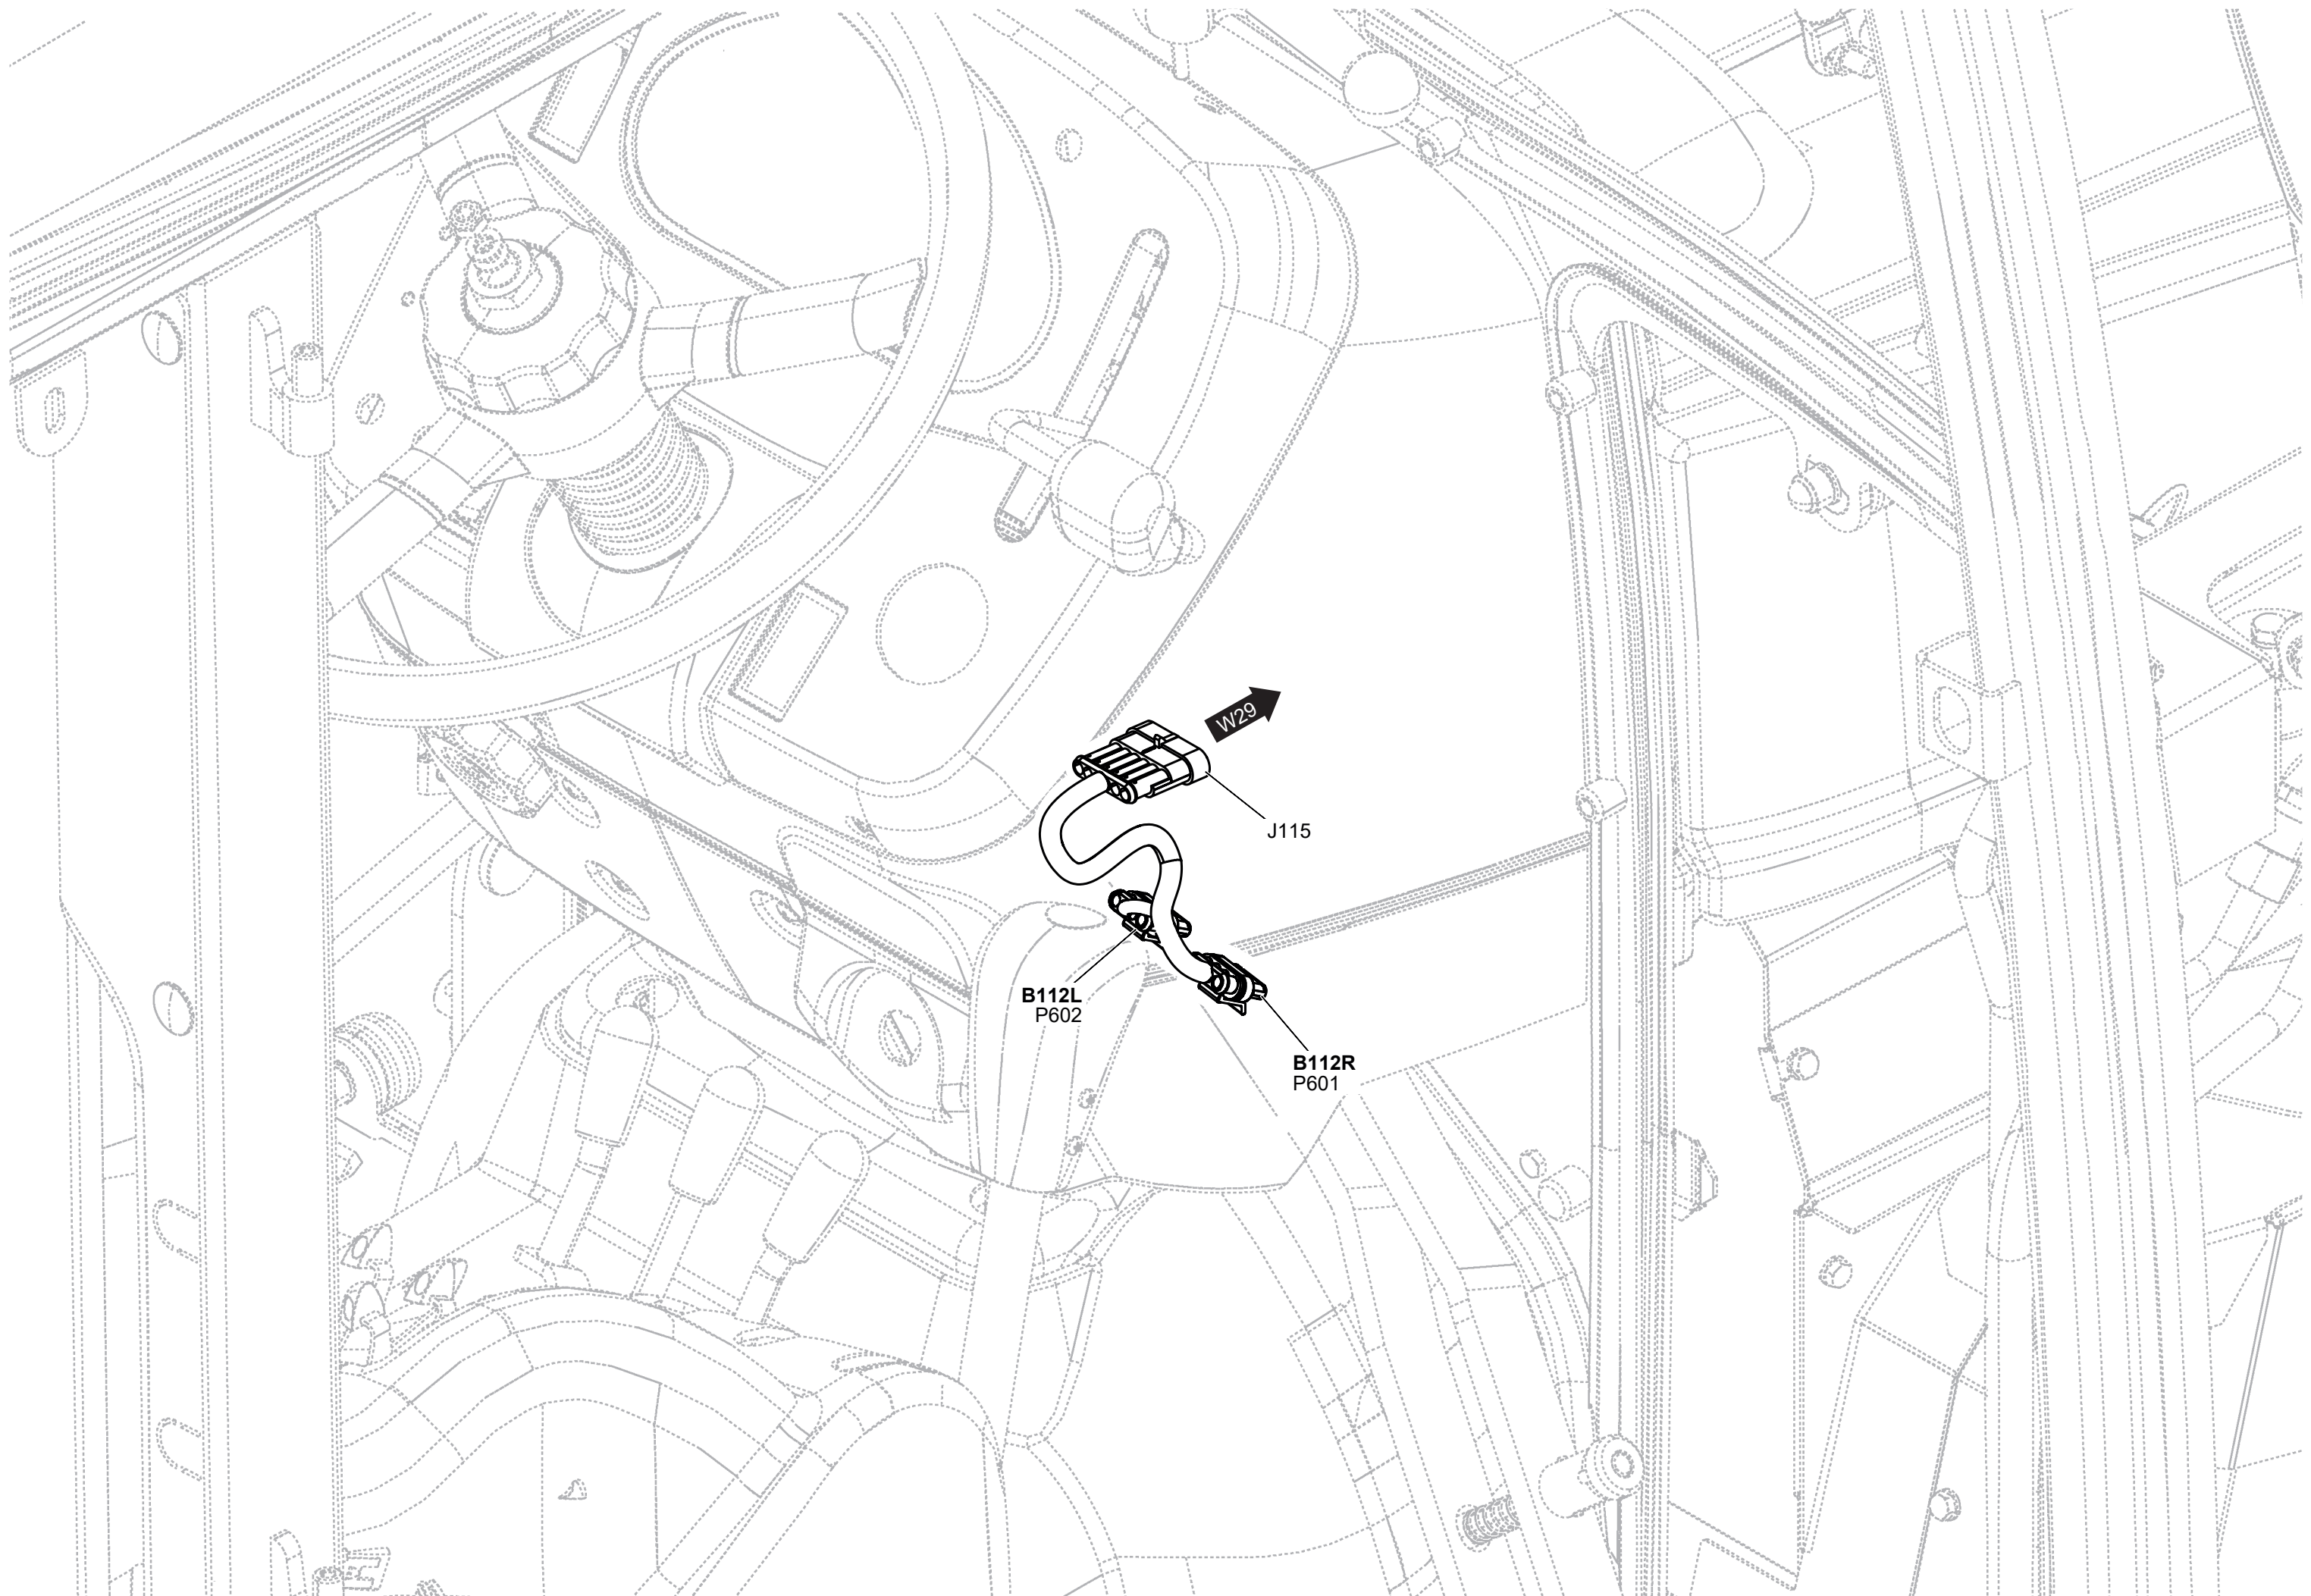


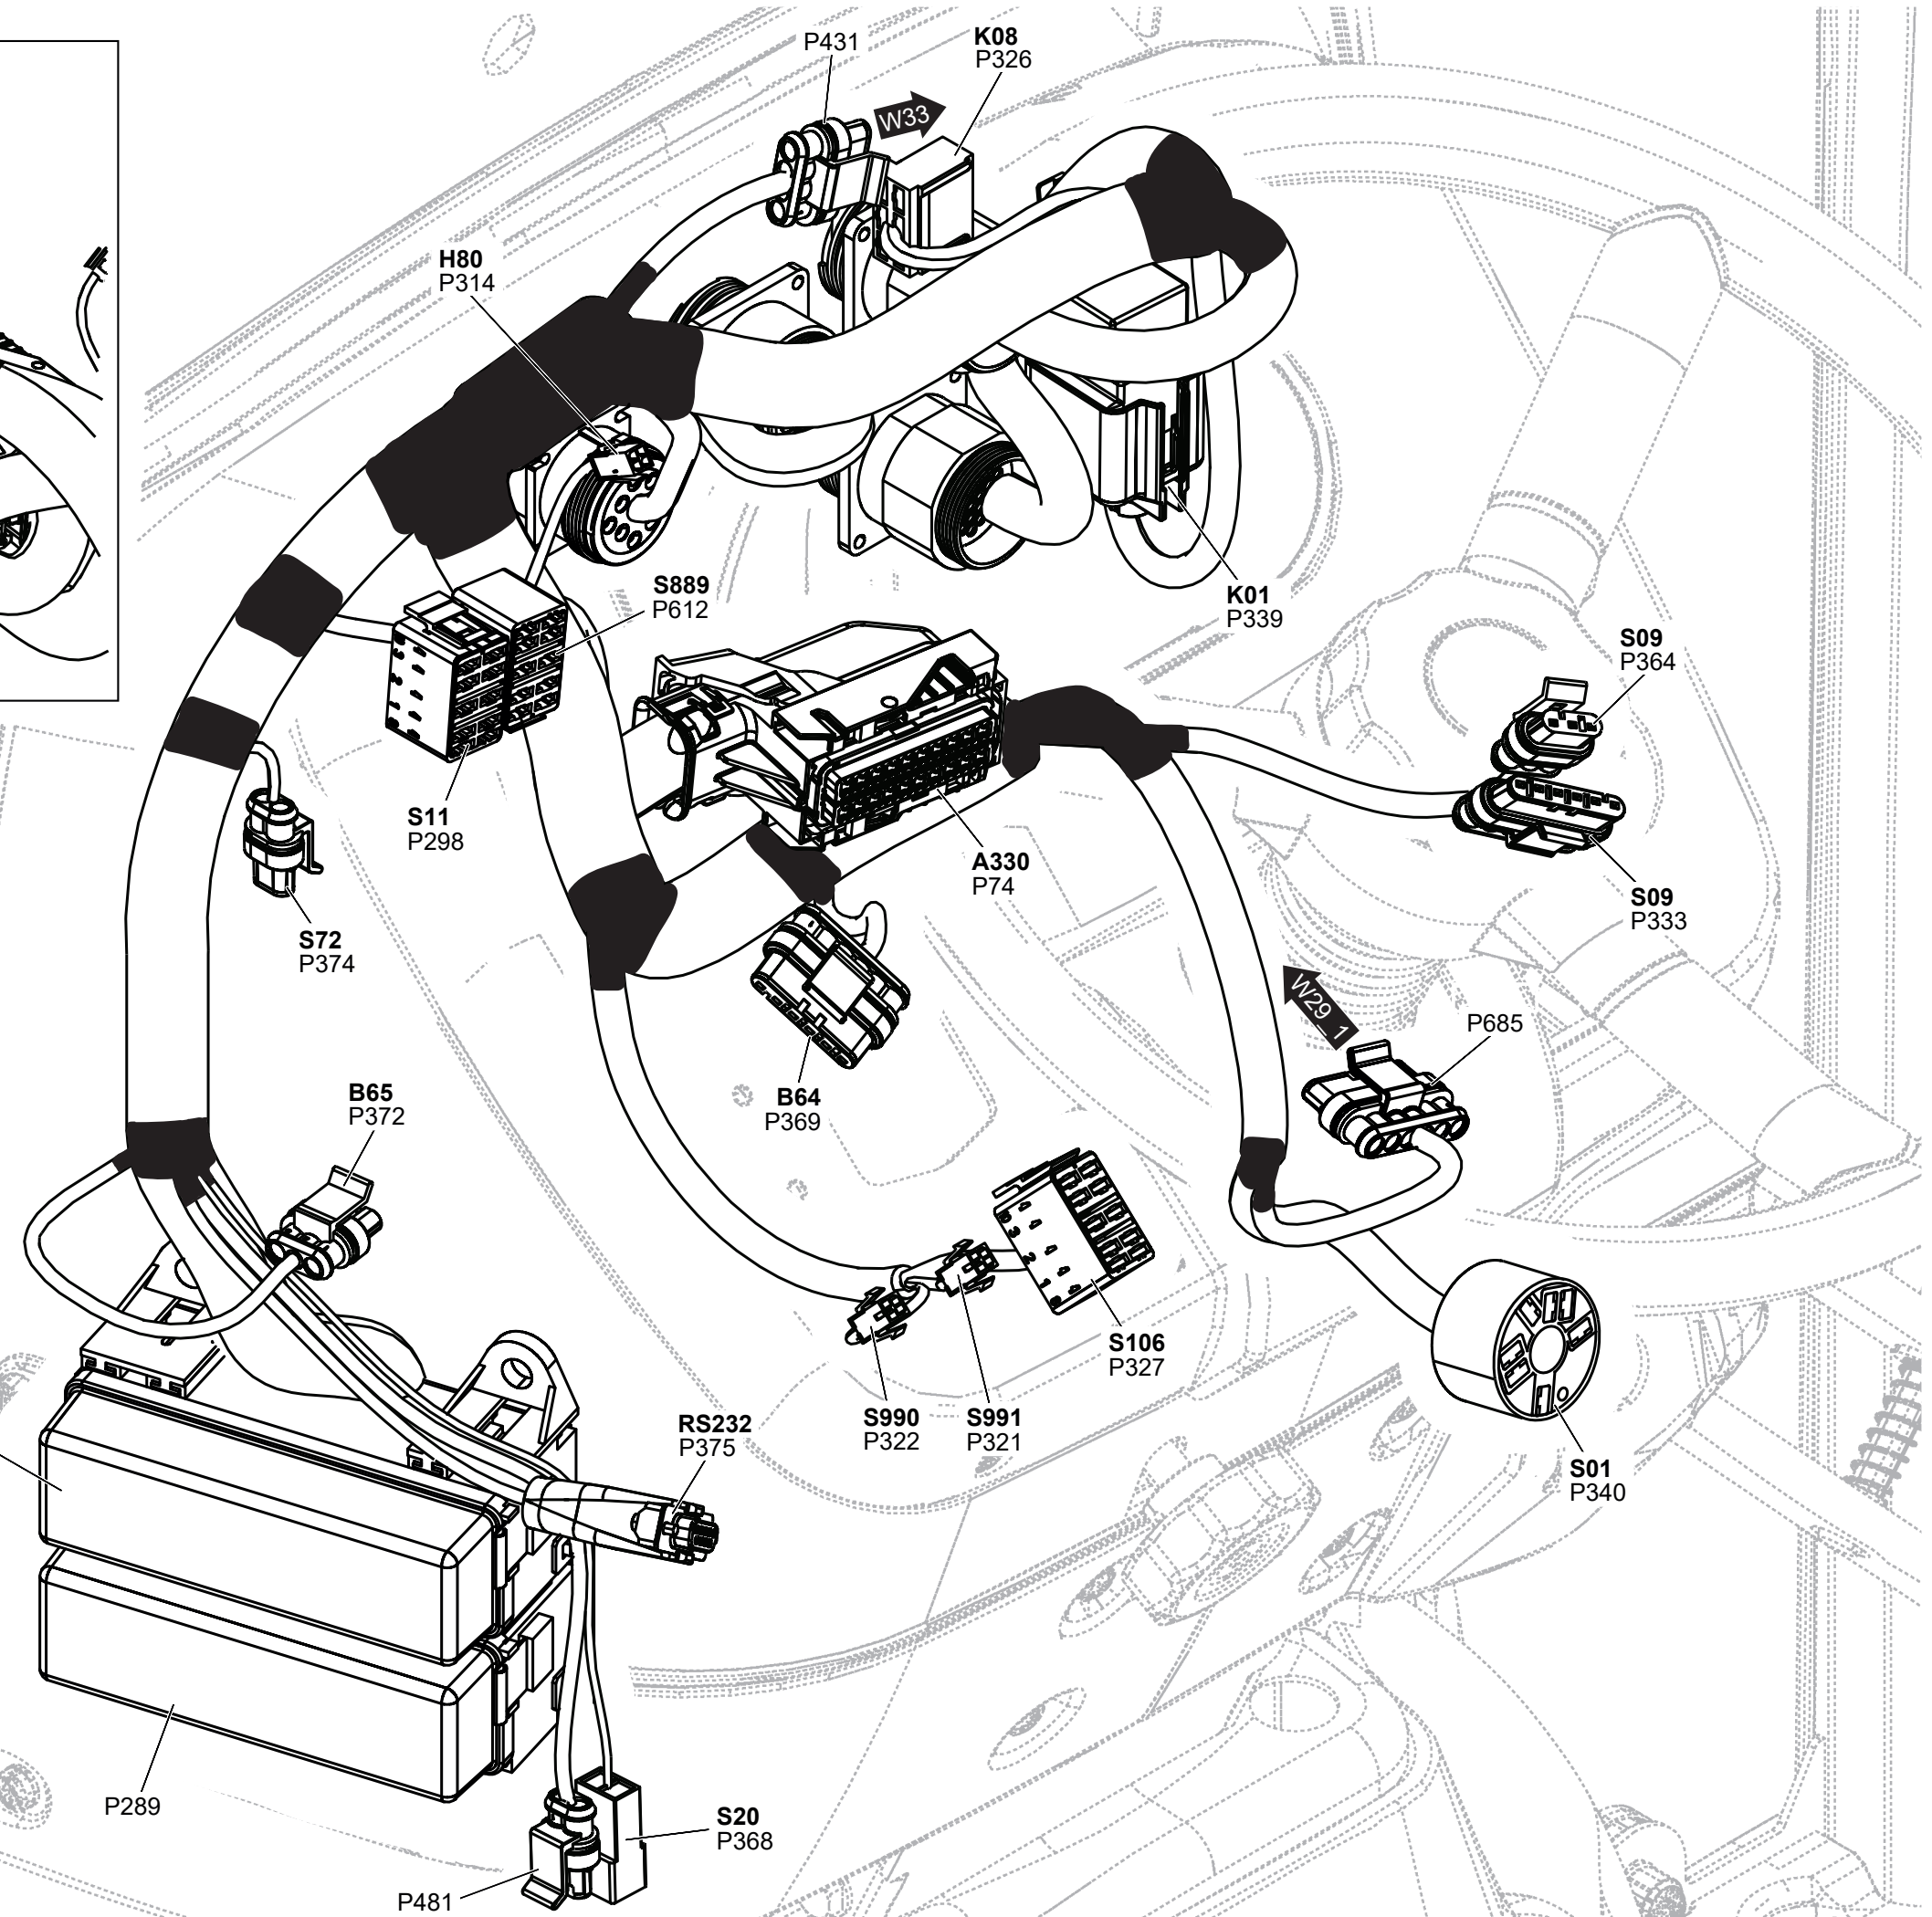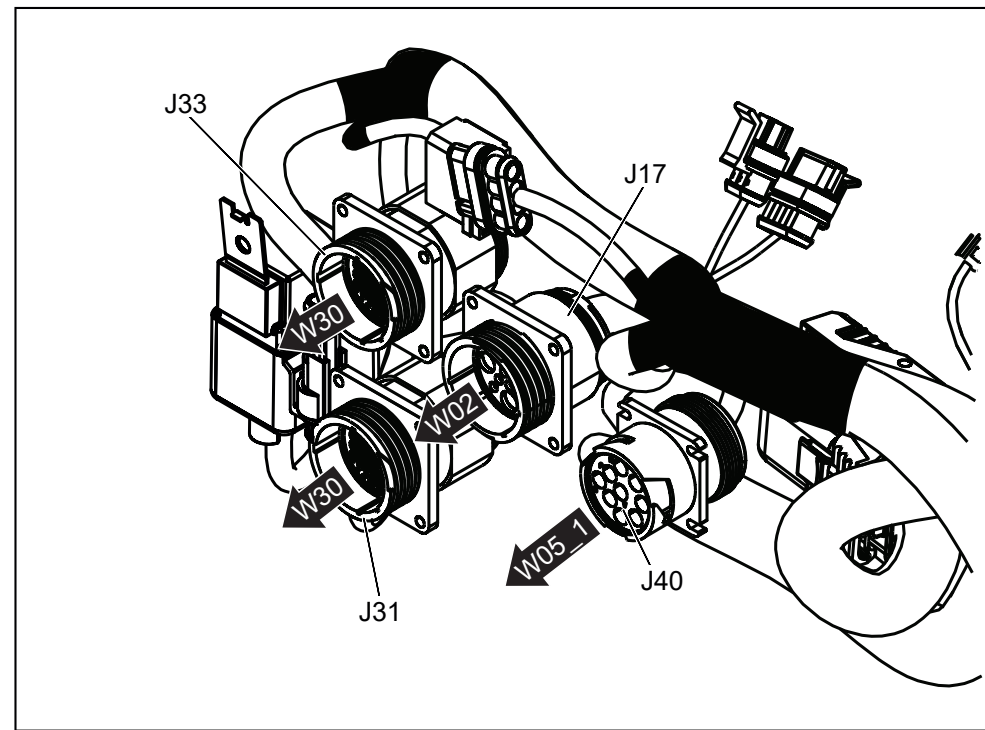


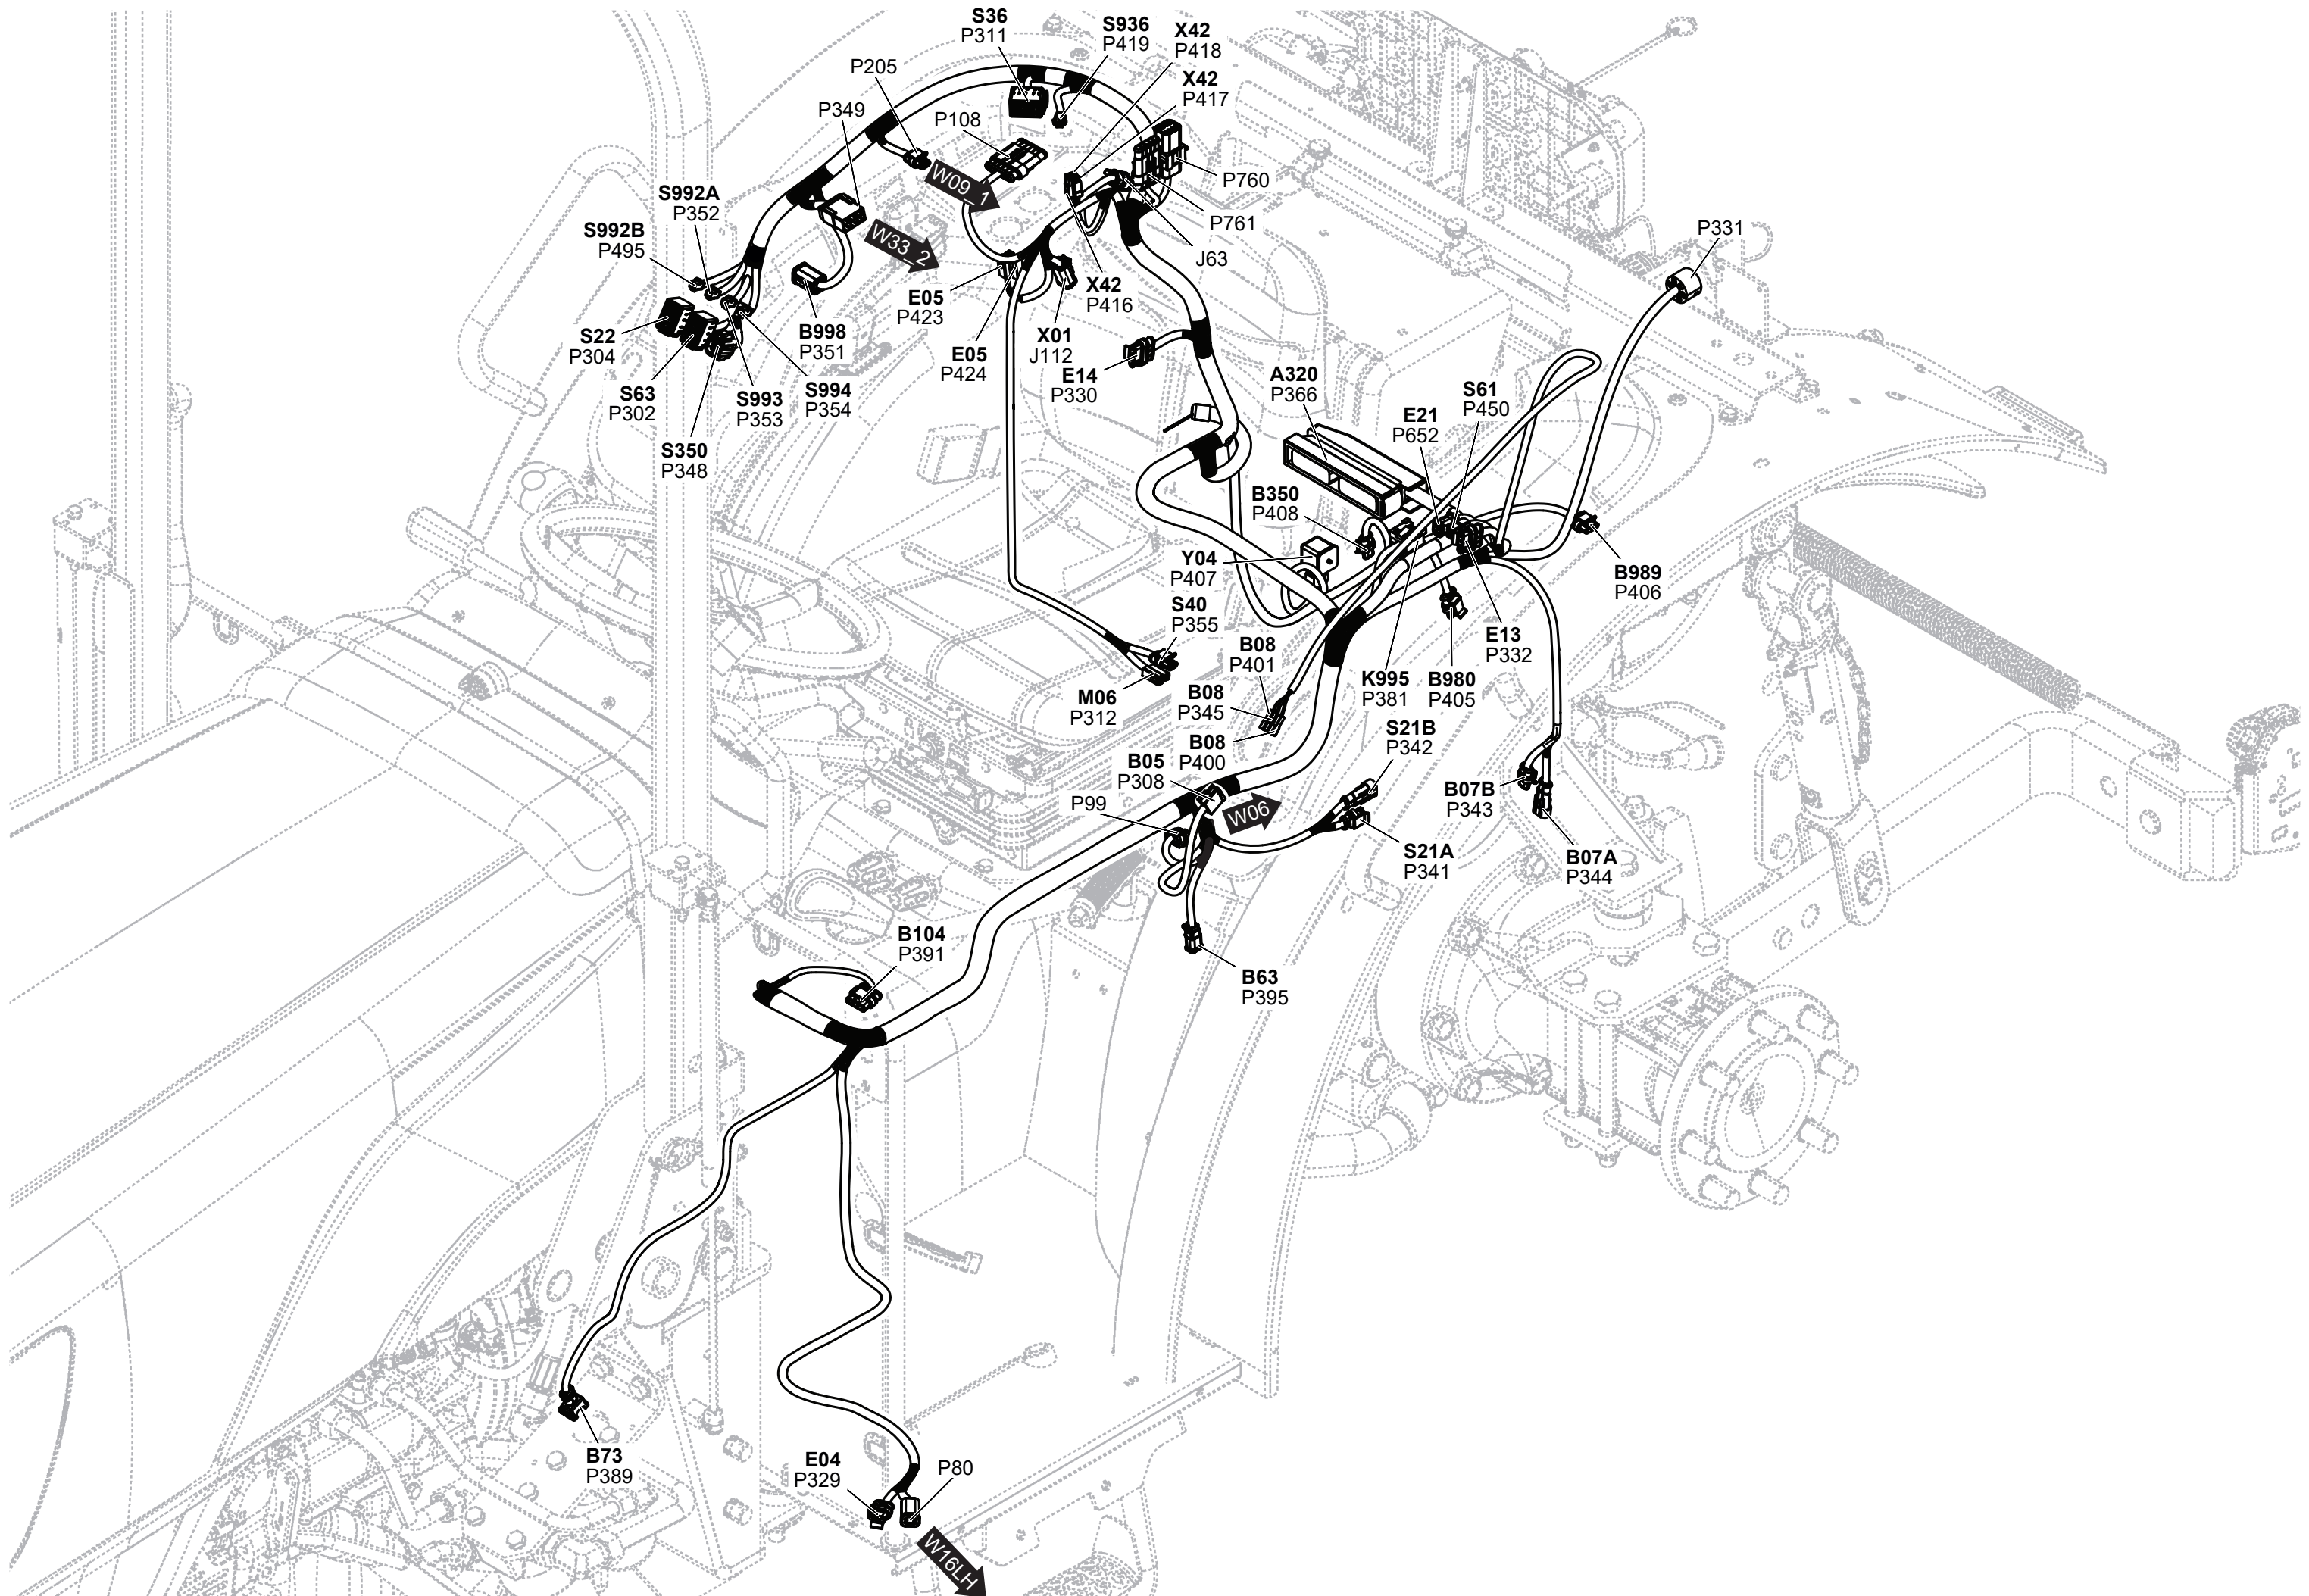


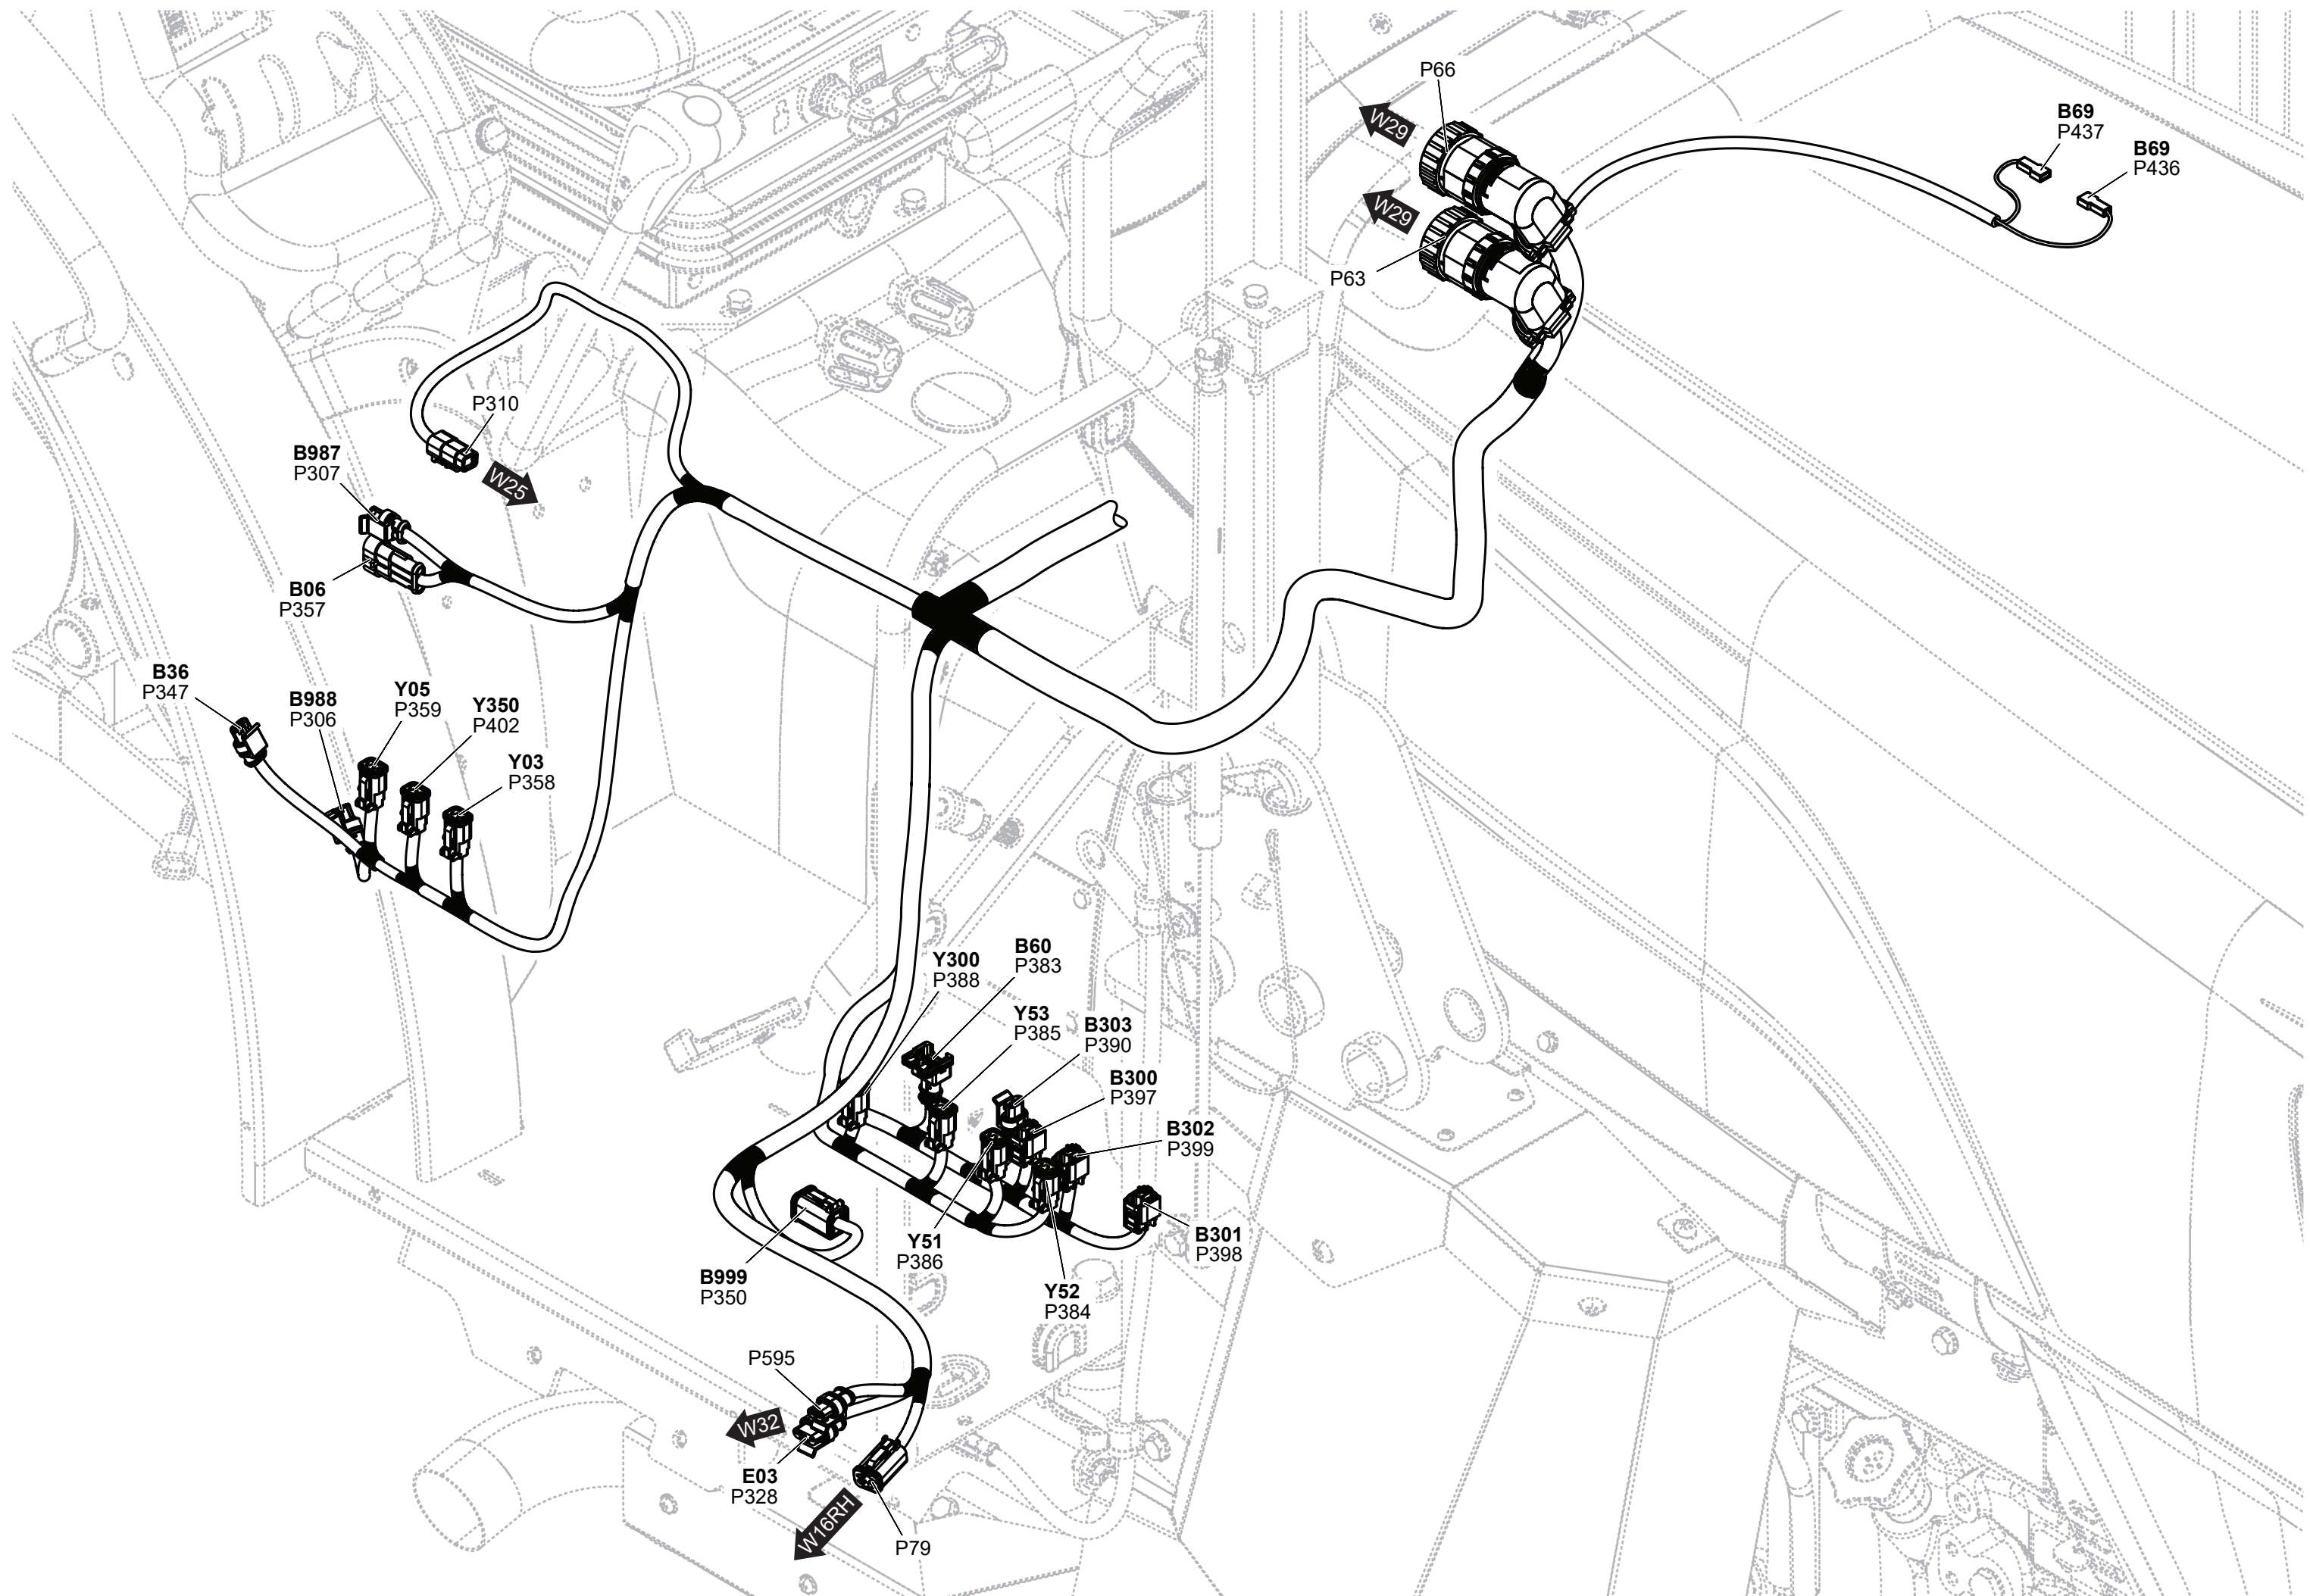


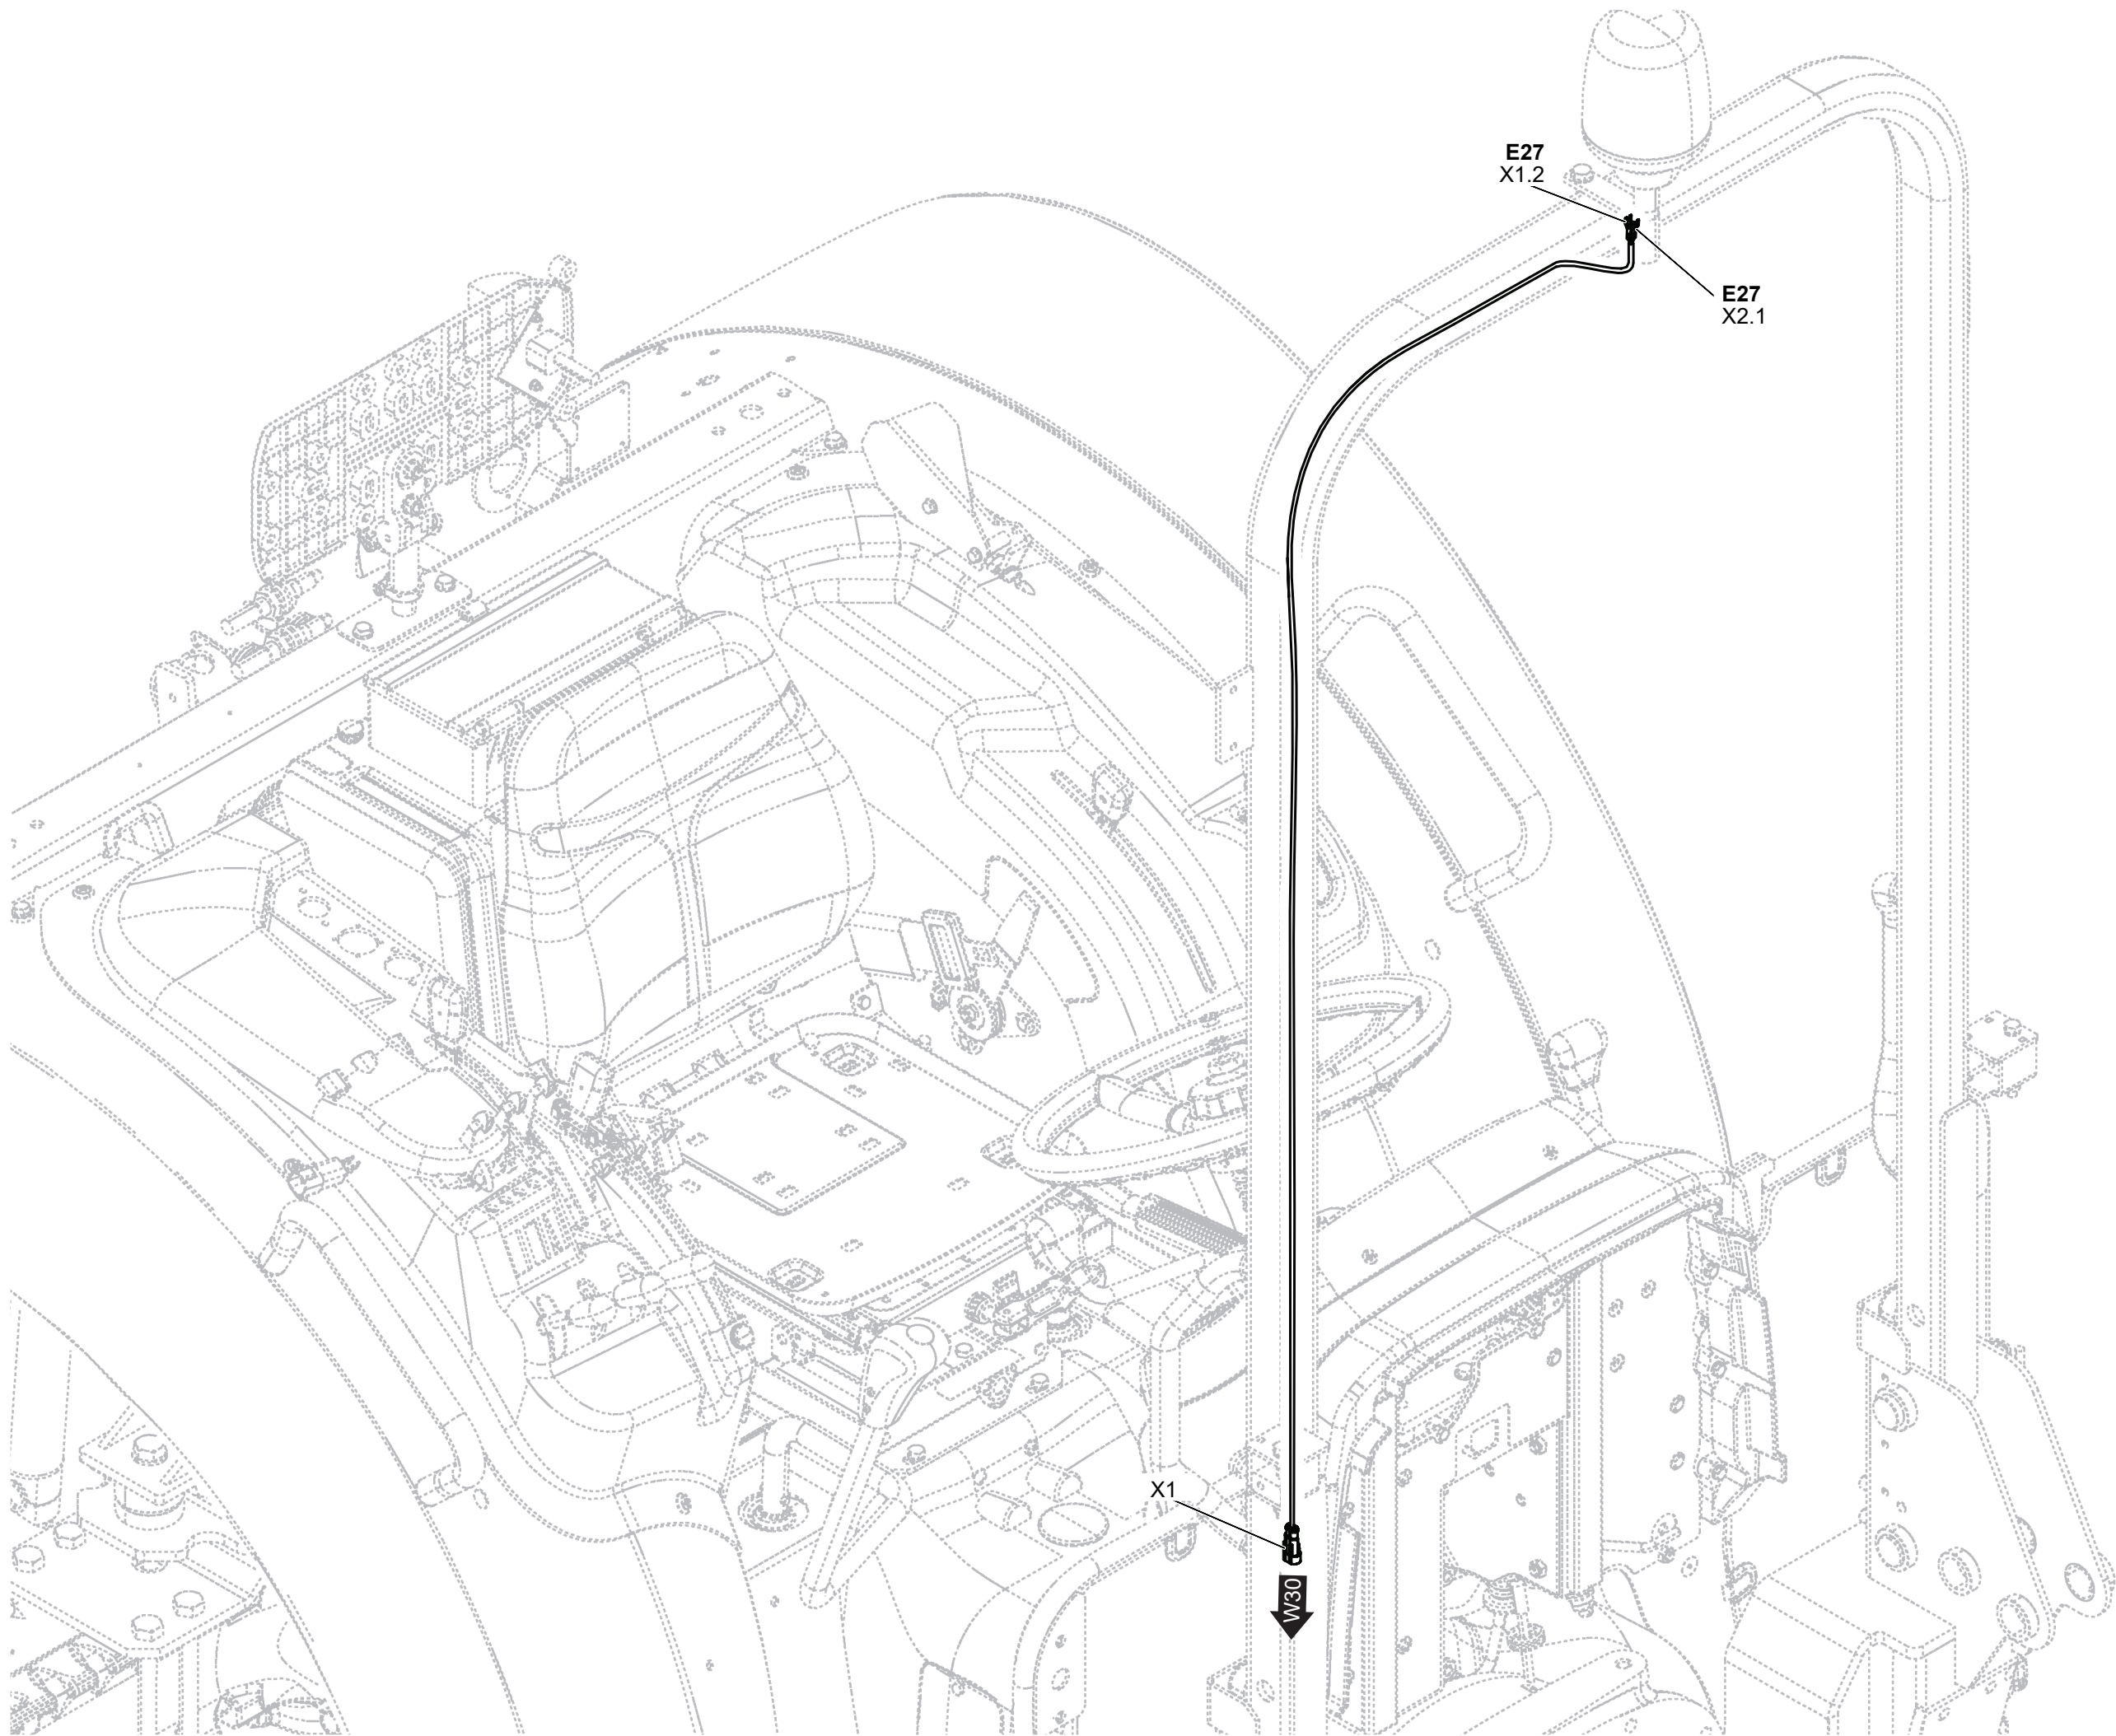

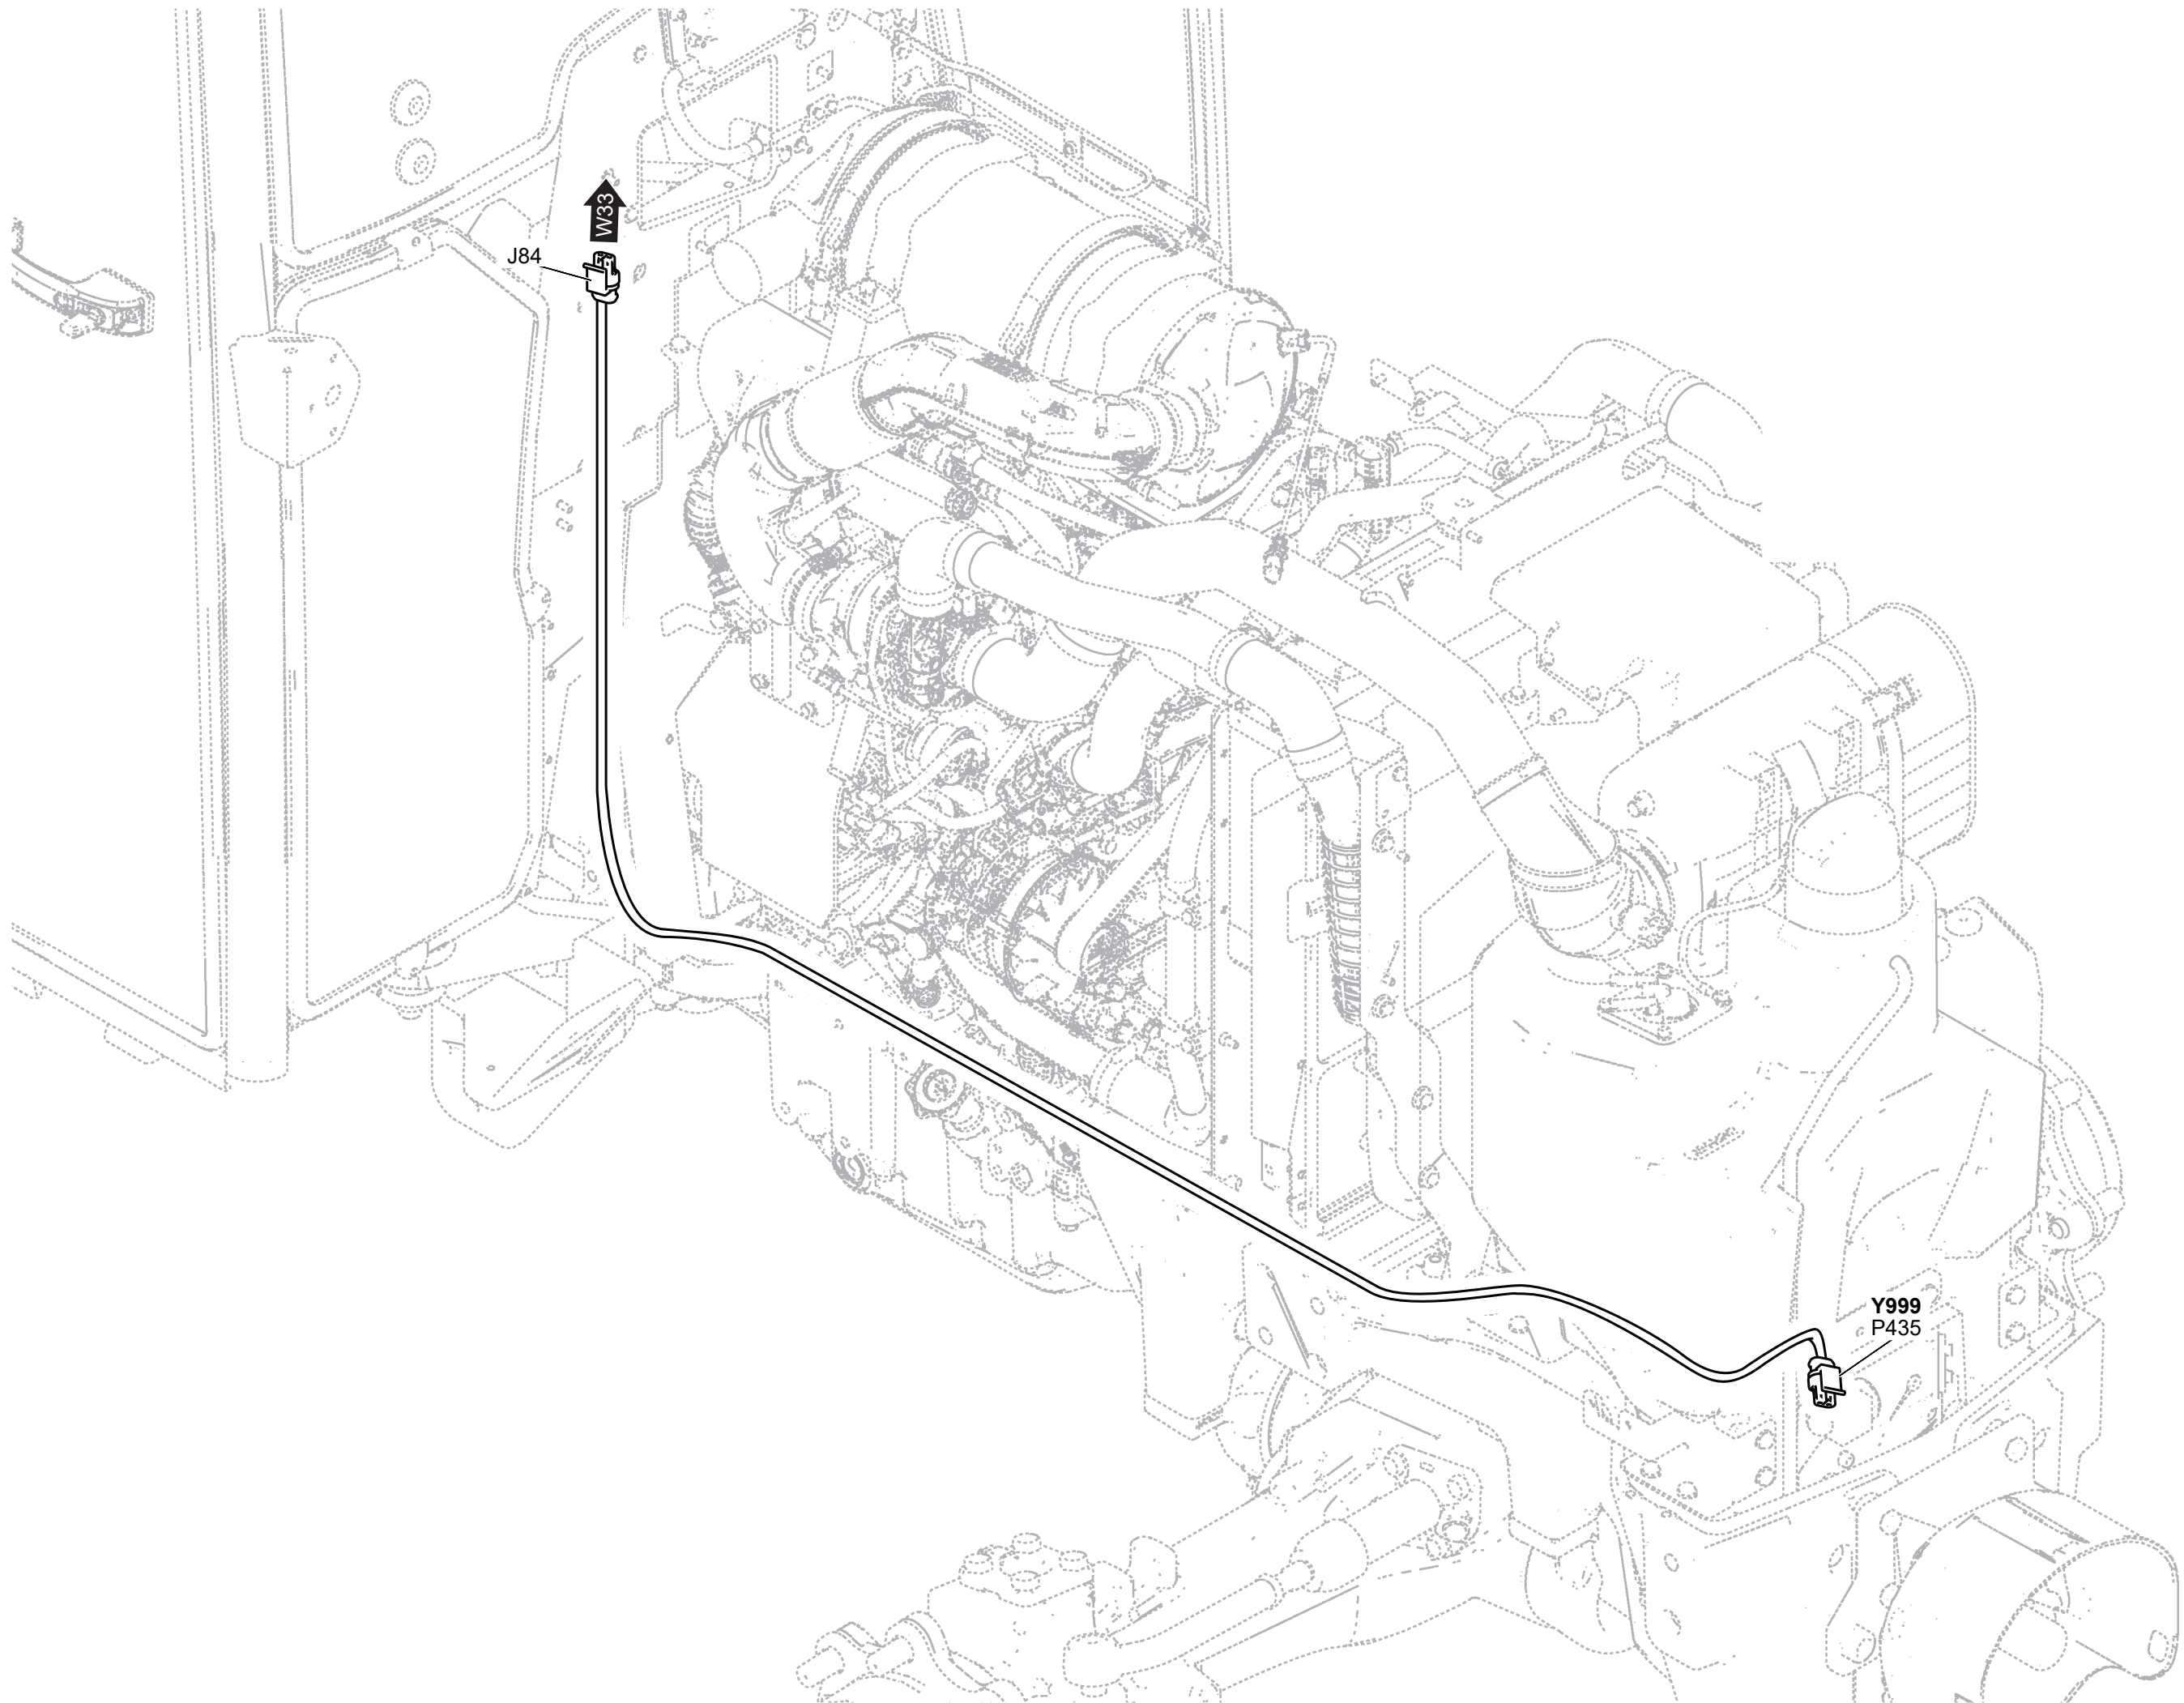

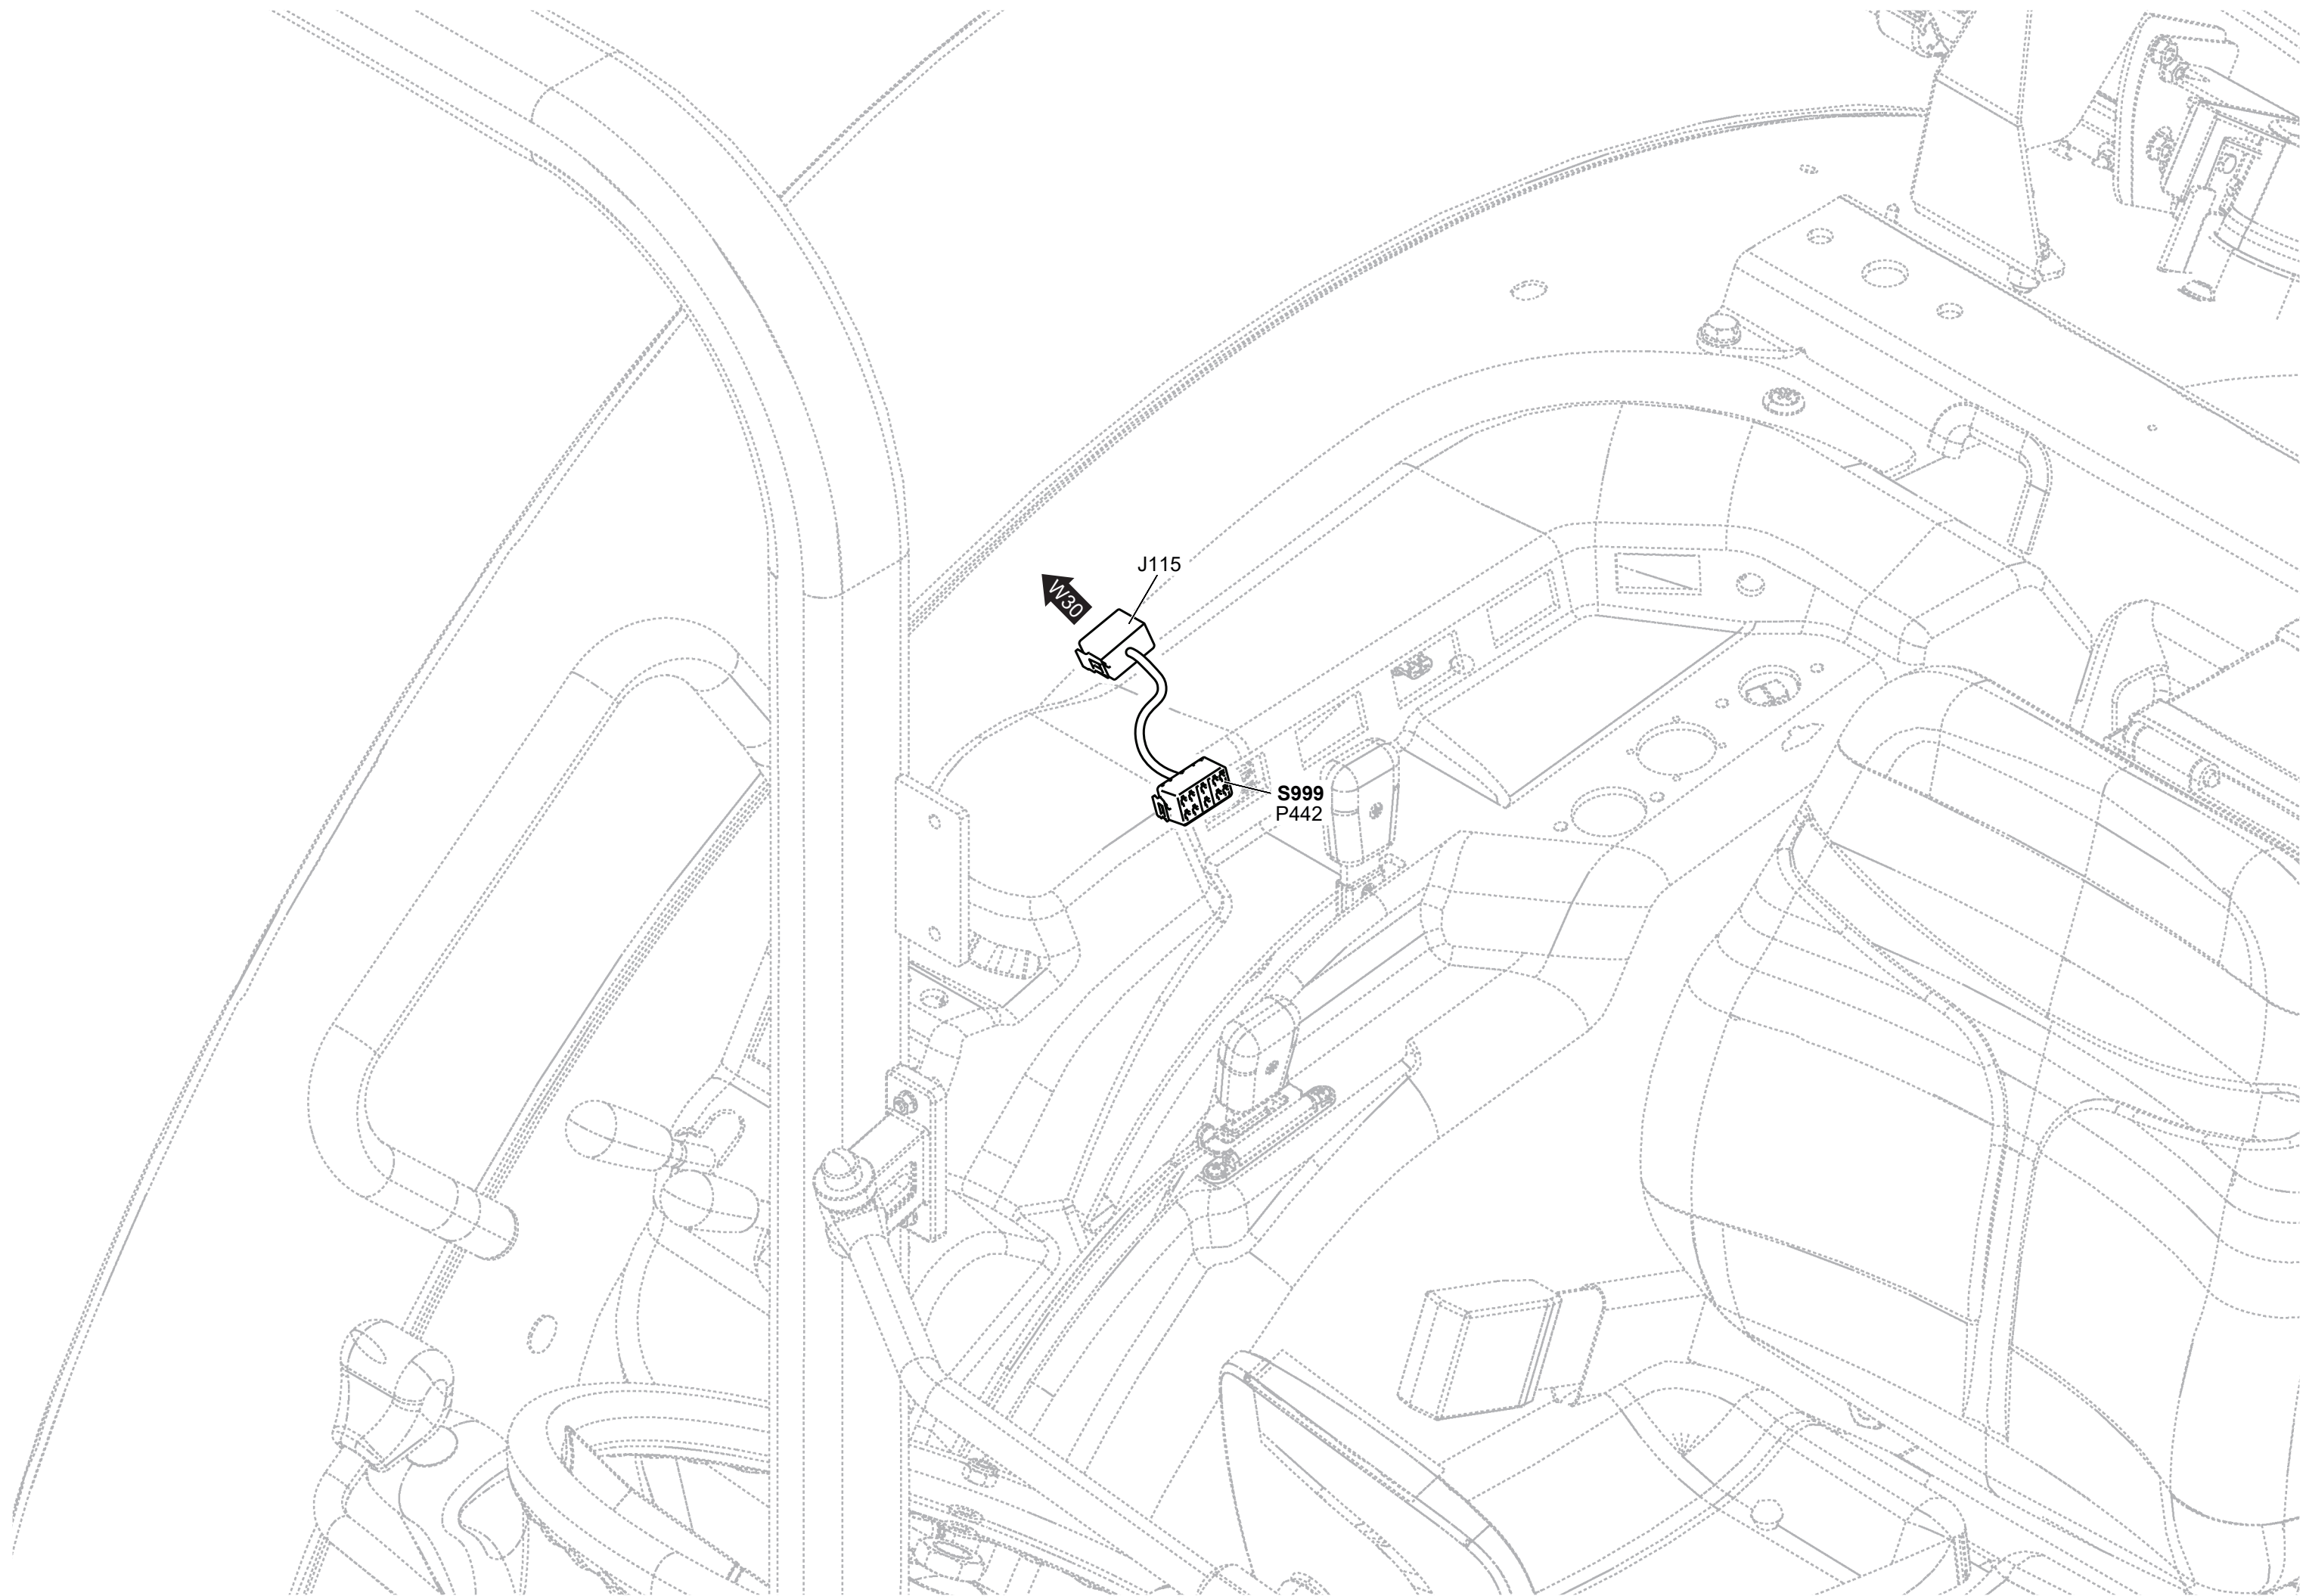

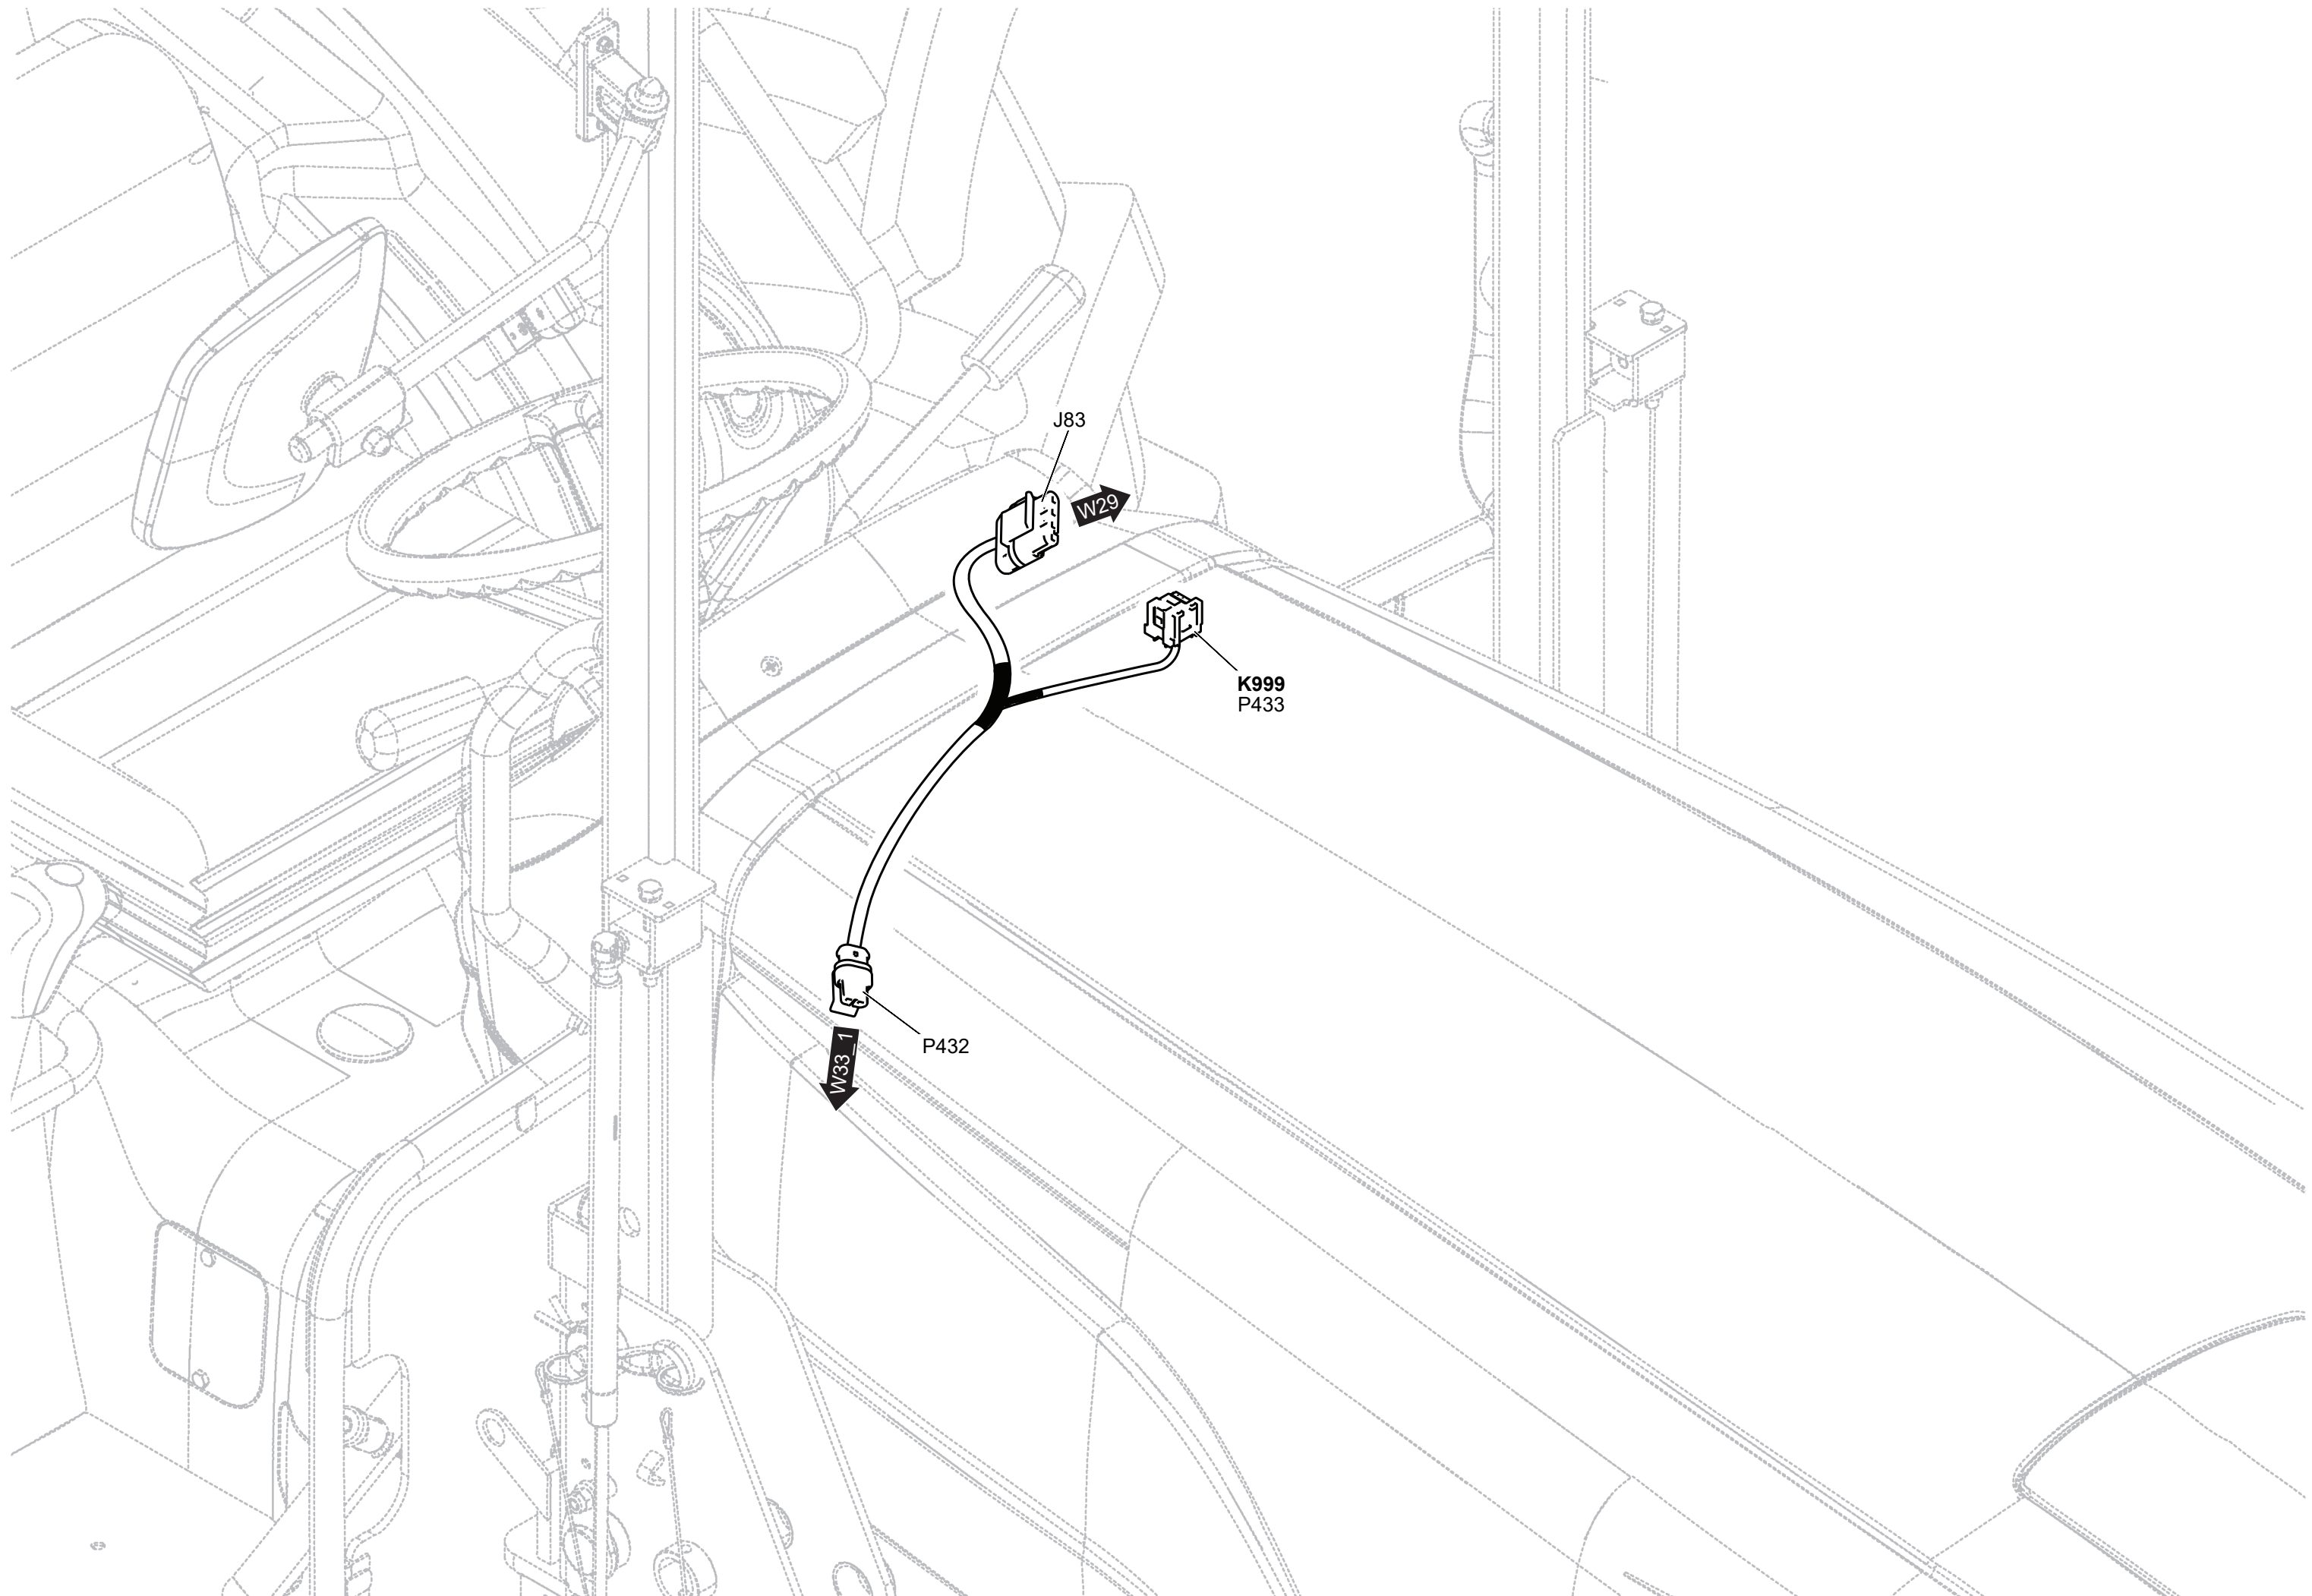

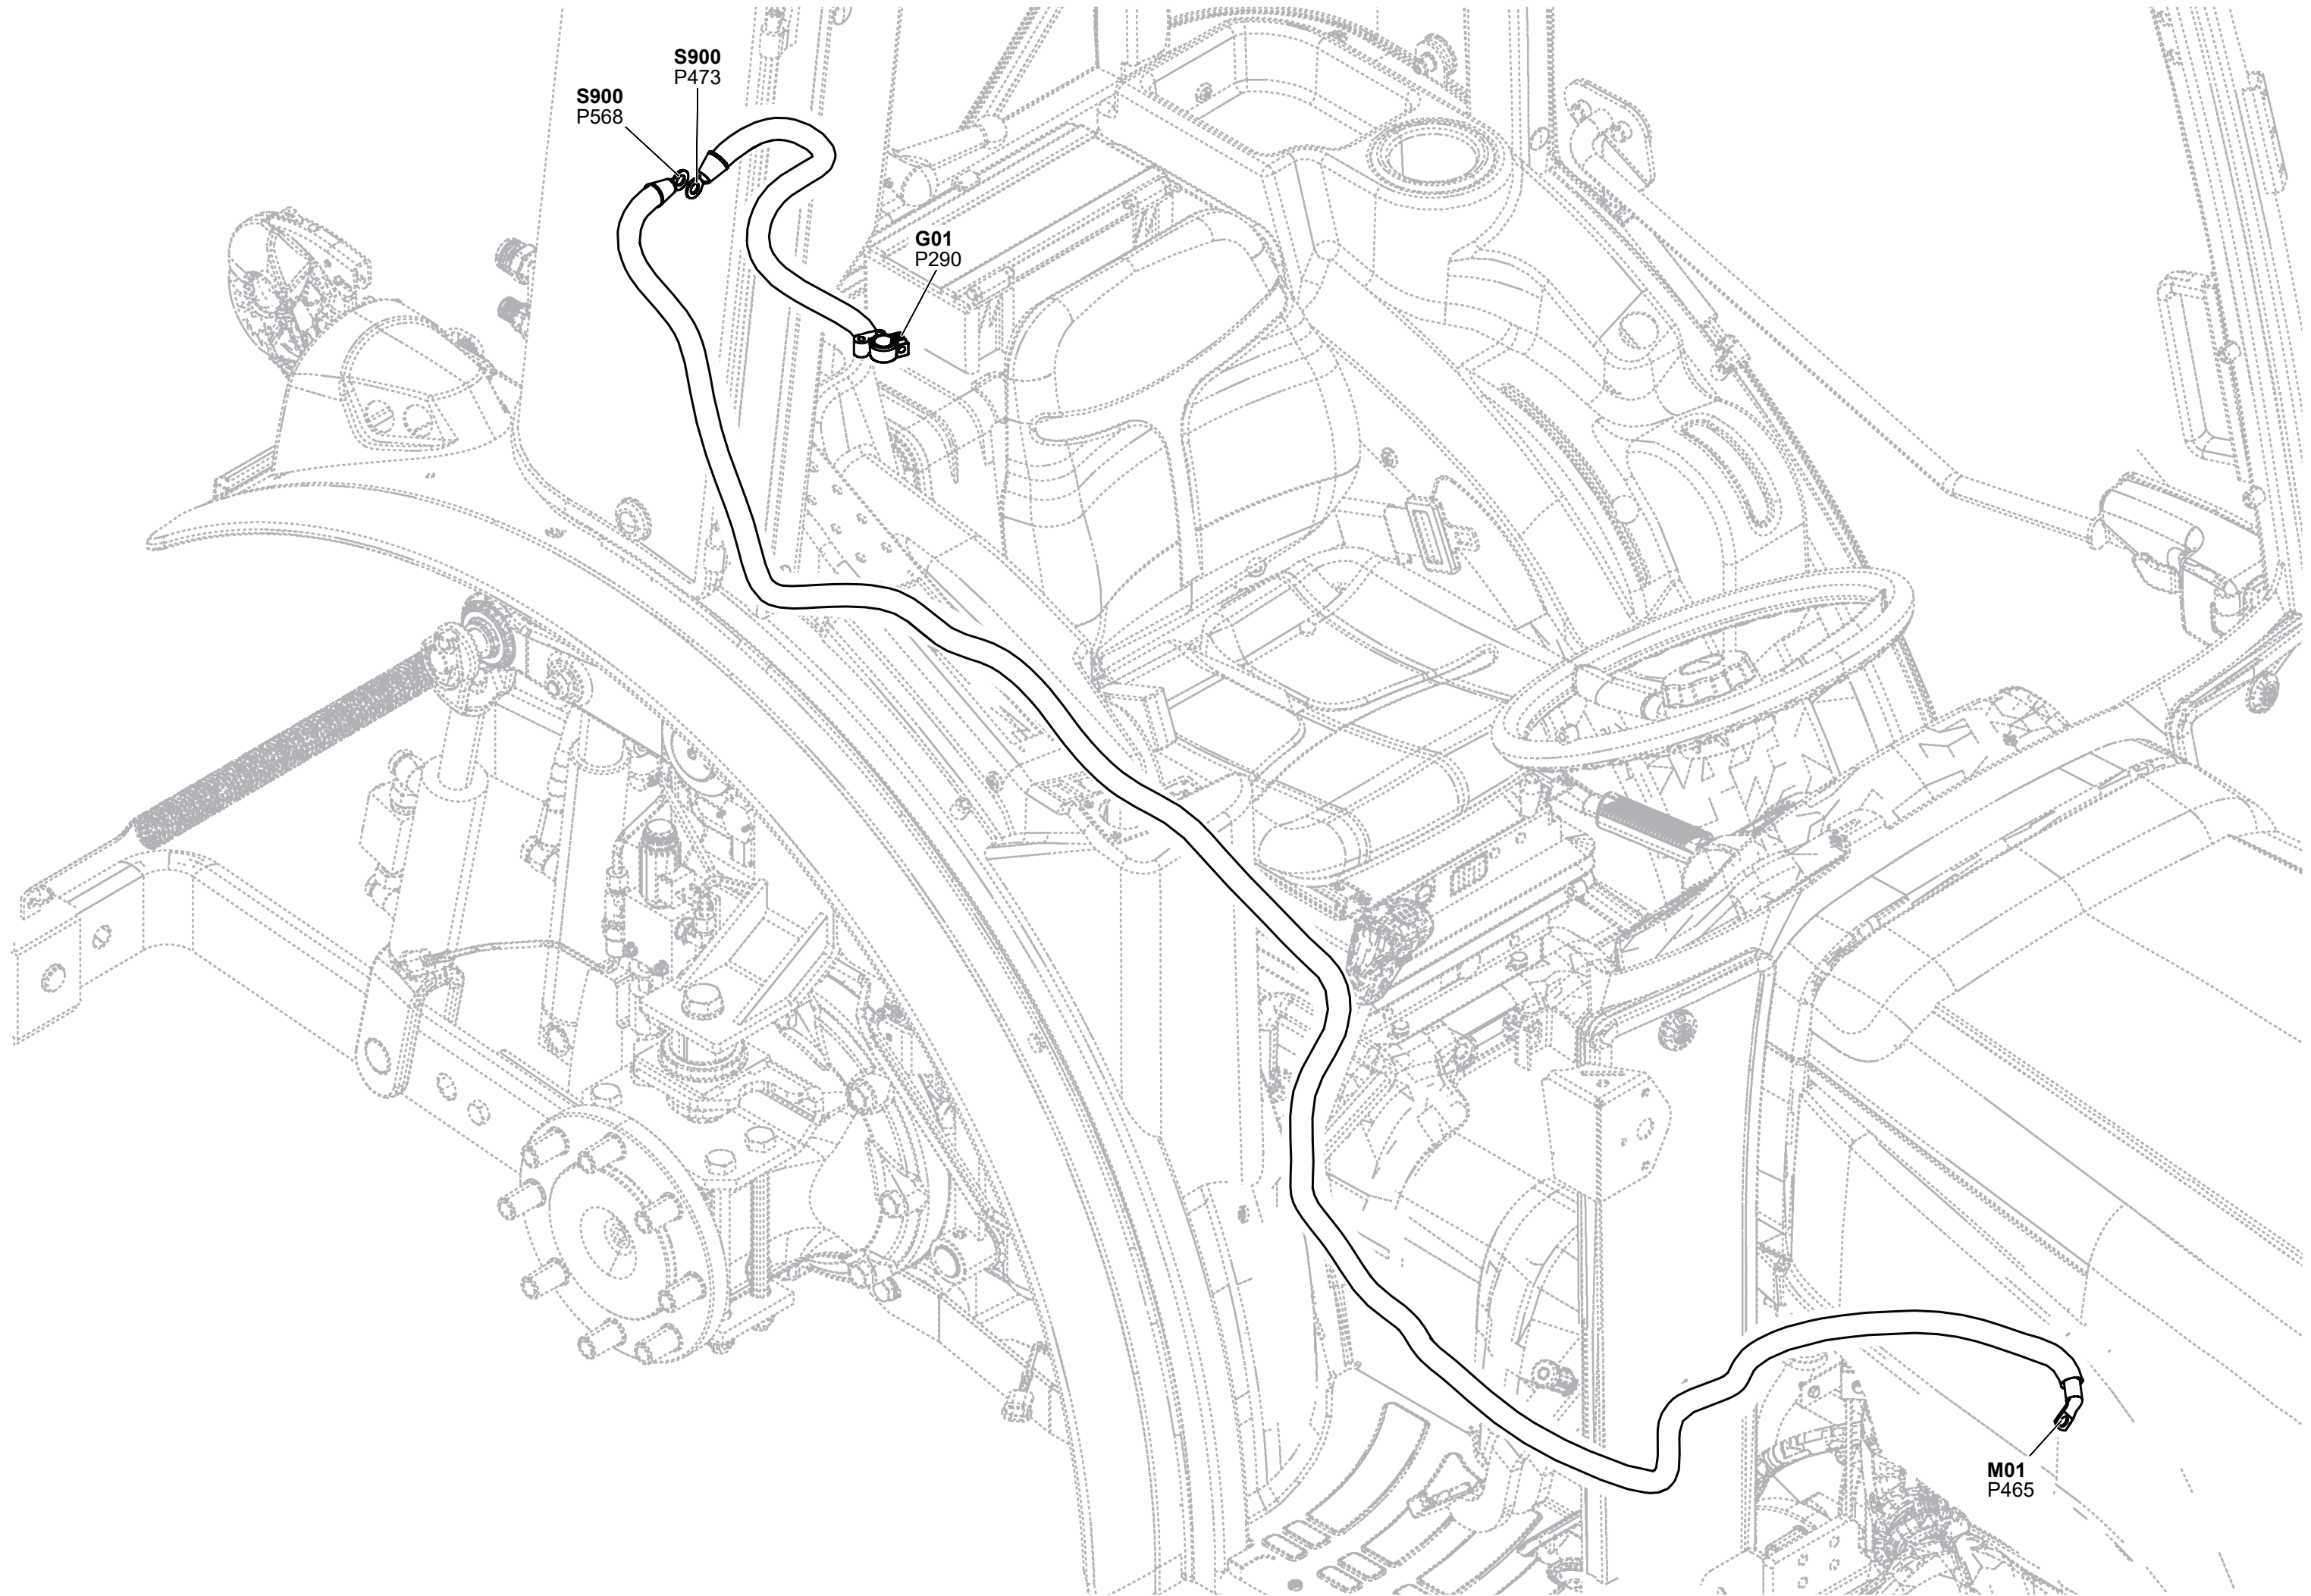



S900
P568

S900
P473


G01
P290

M01
P465

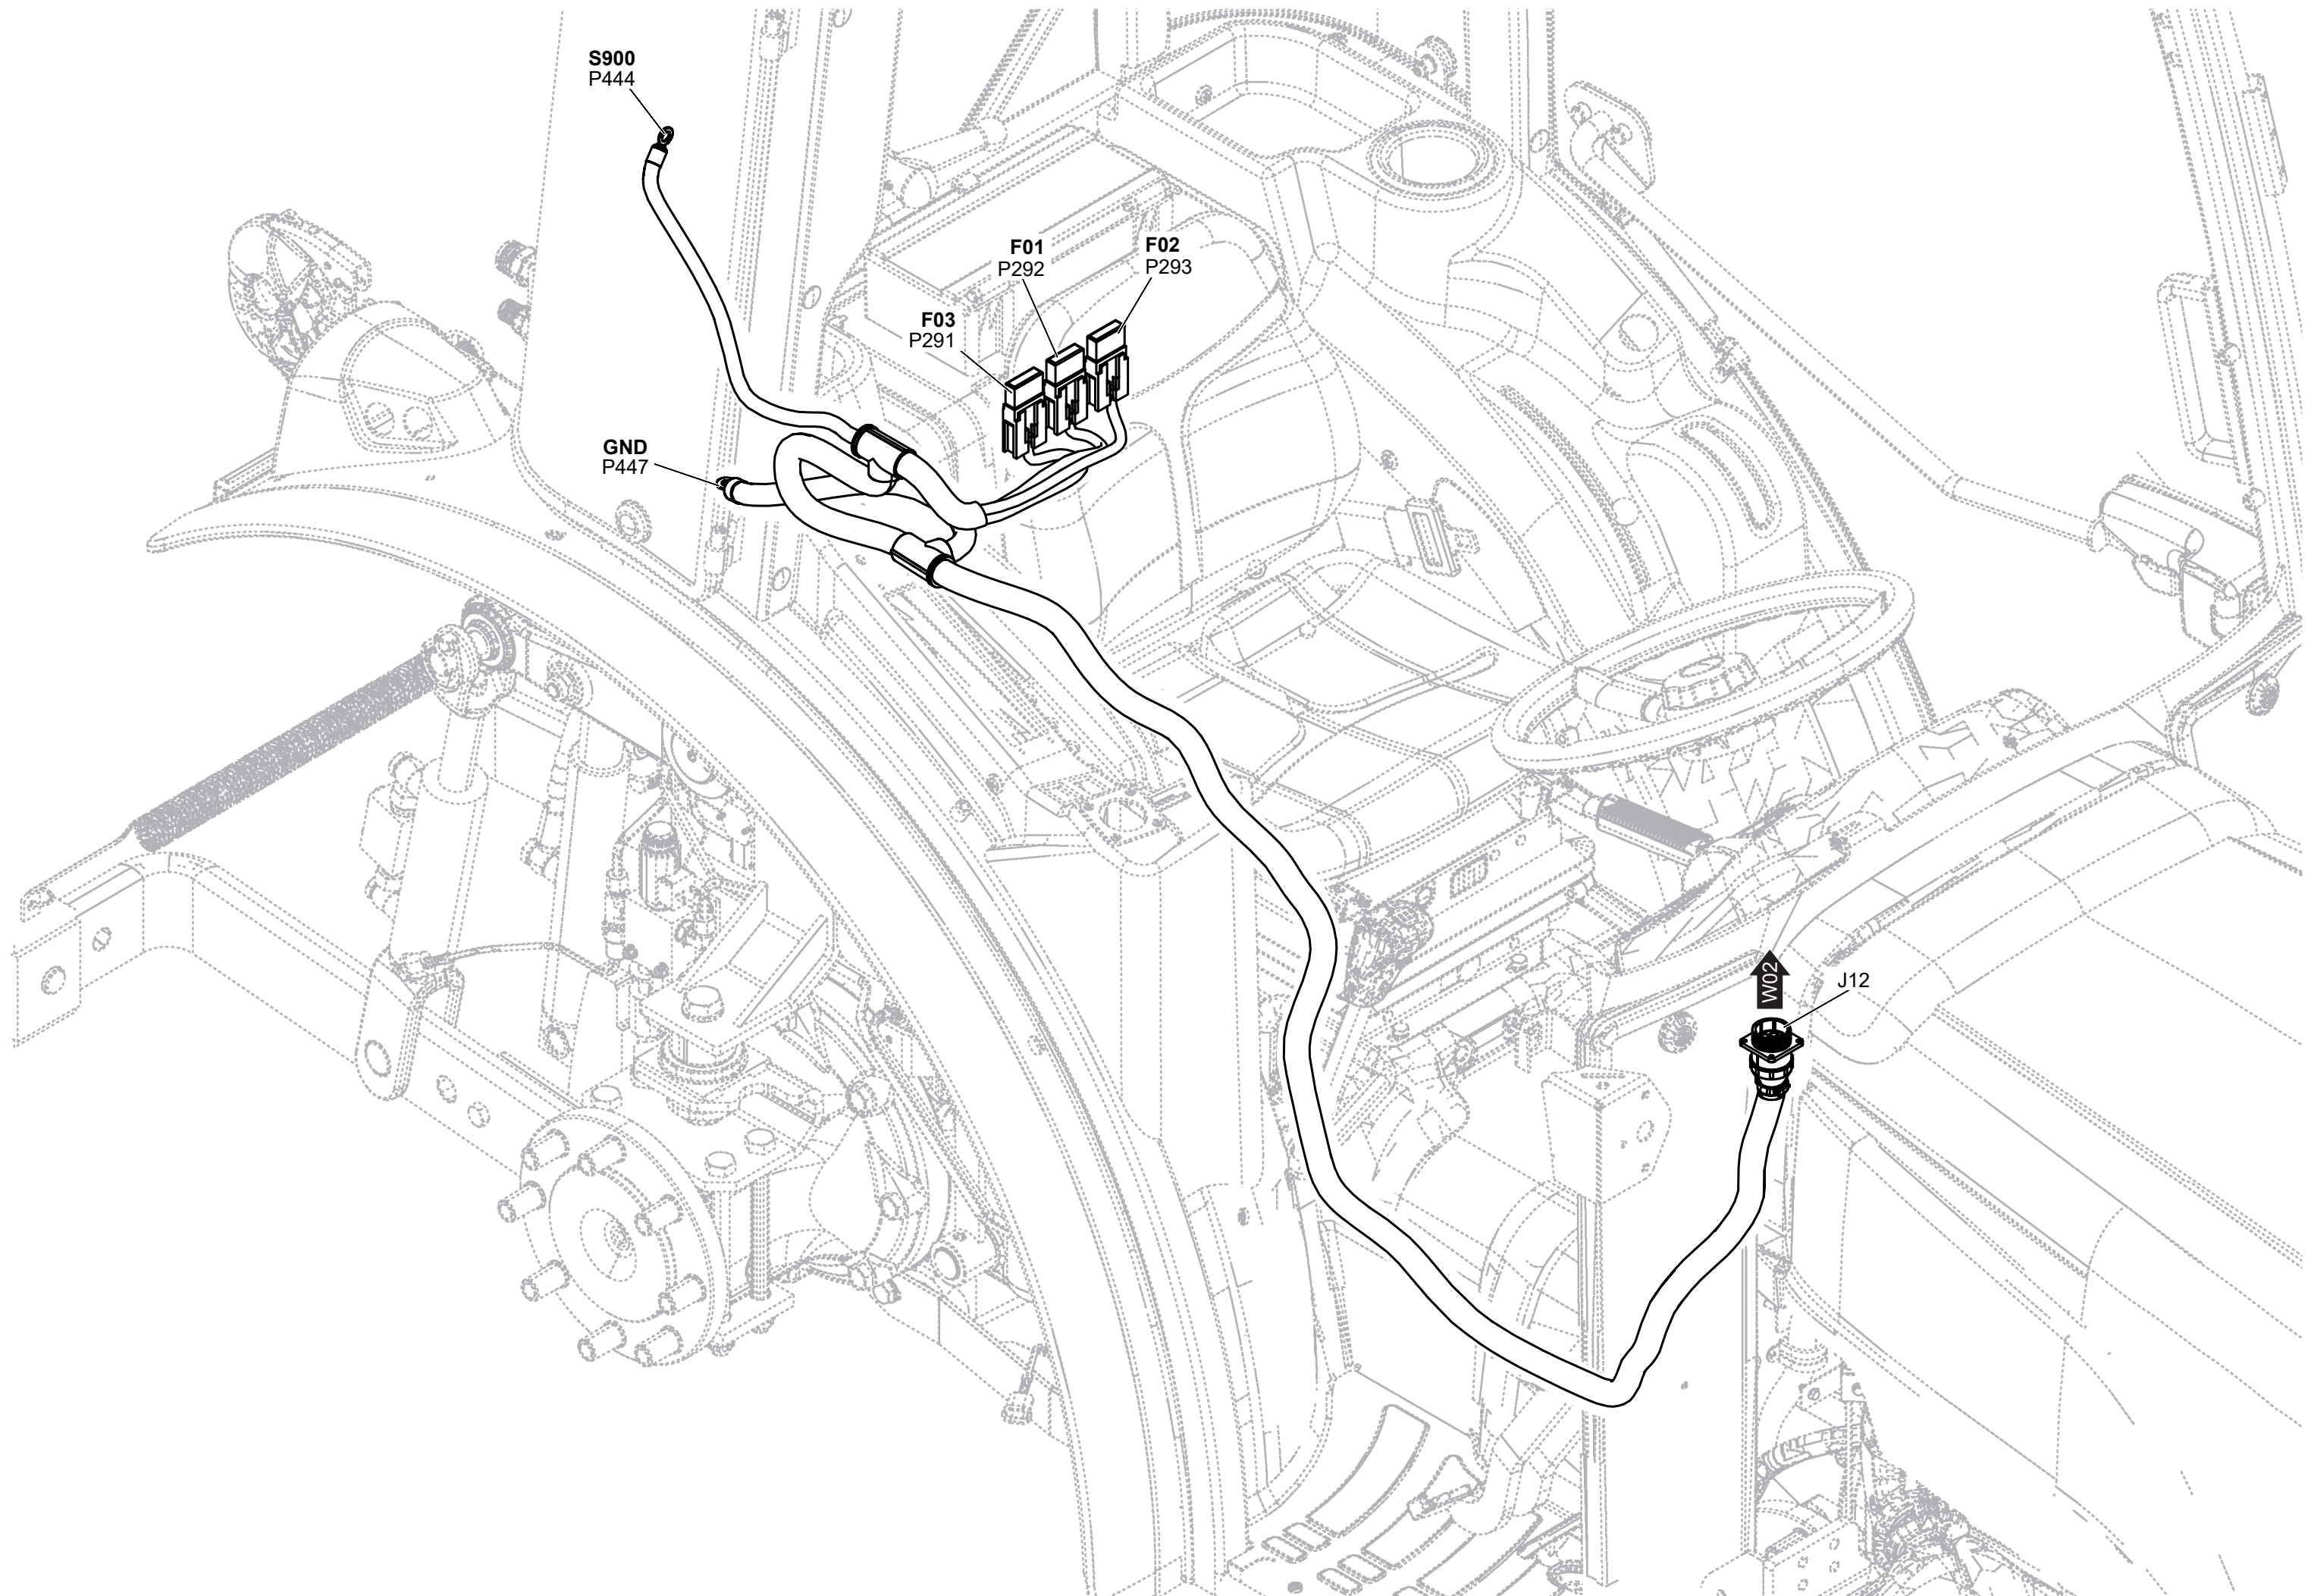


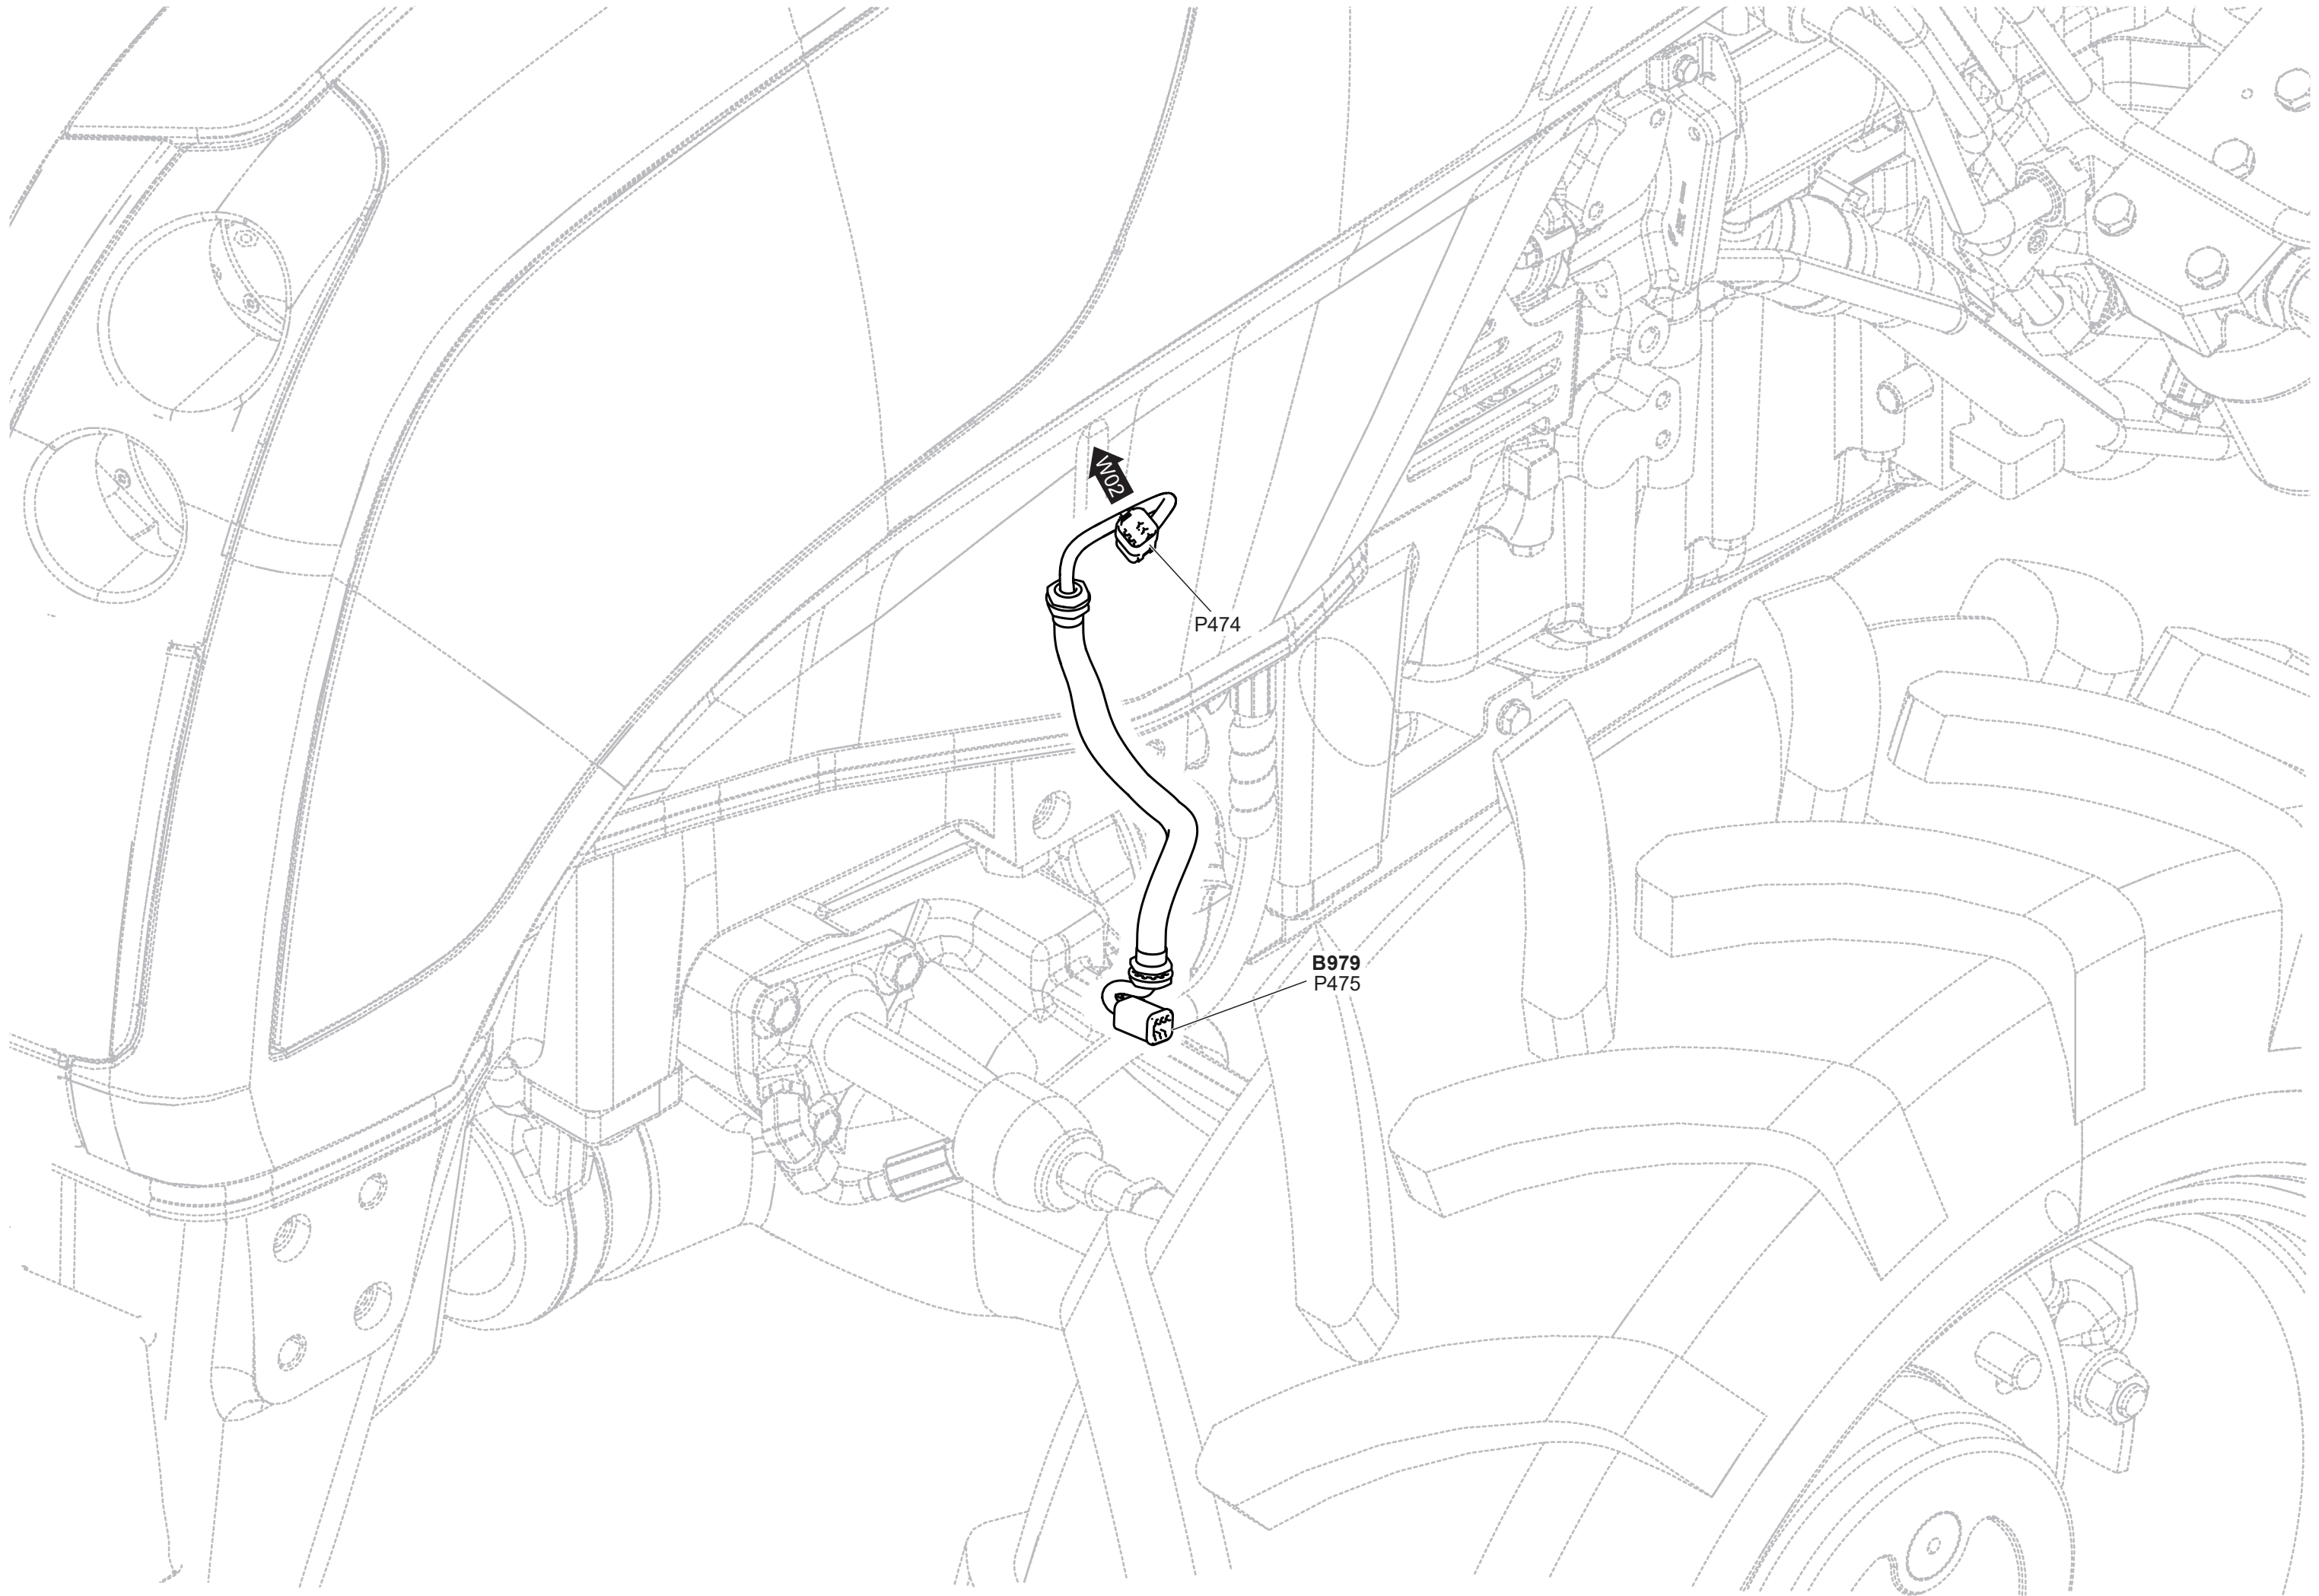


A051 - E-SCVS CAN Bus resistor

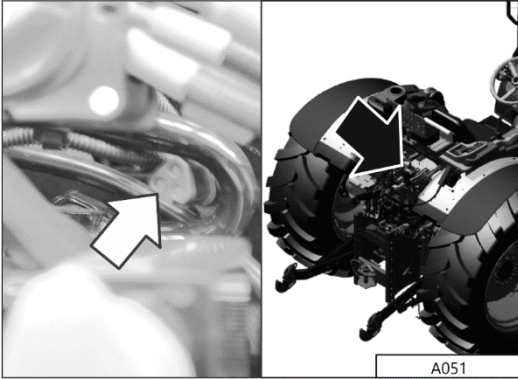


A320 - Transmission control unit

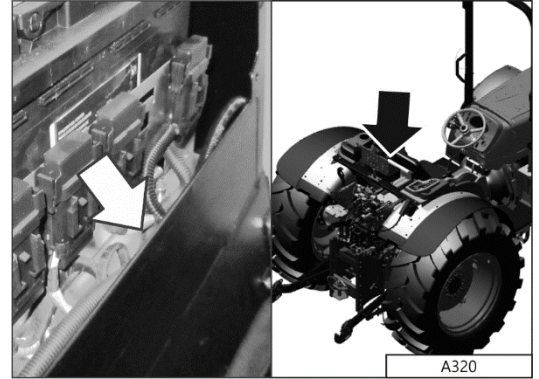


A330 - Instrument panel

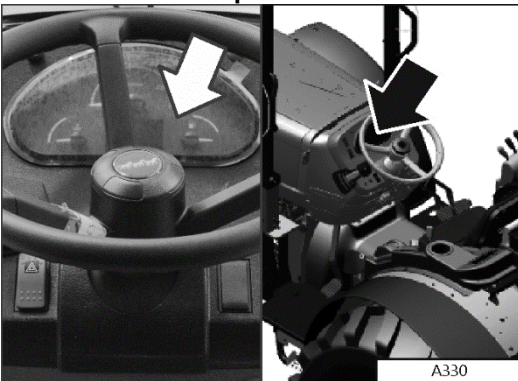


A500 - Engine control unit

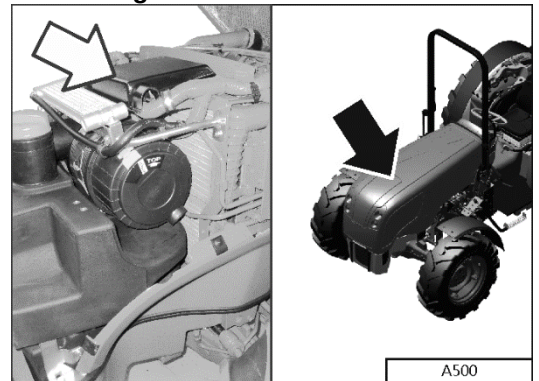


A510 - Glow plug ECU

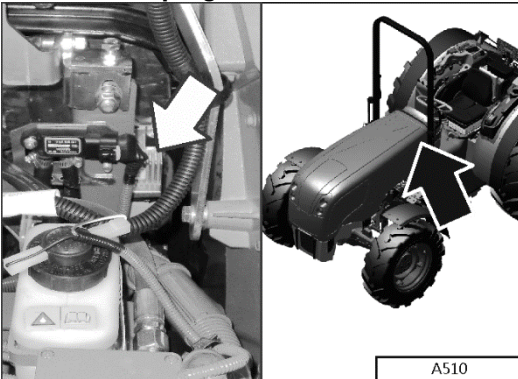


B02 - Air filter switch

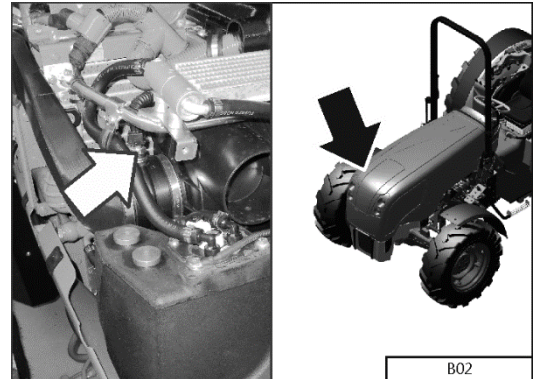


B03 - Fuel level sensor

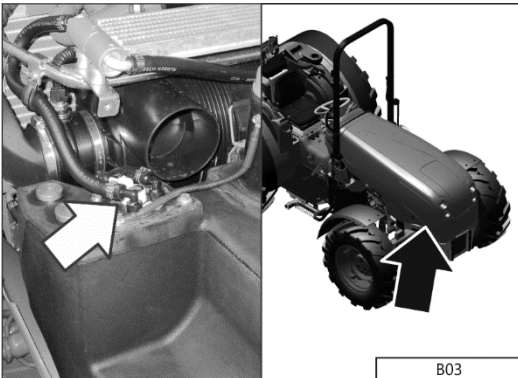


B05 - Hand brake switch

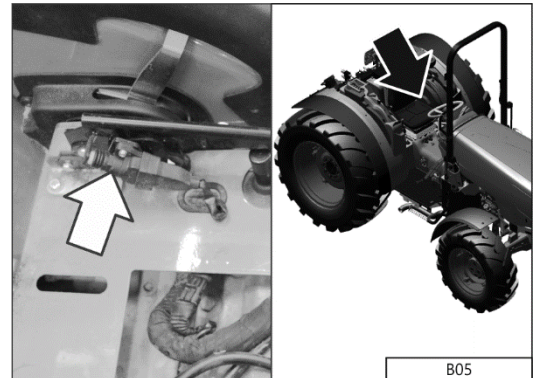


B06 - Speed Sensor

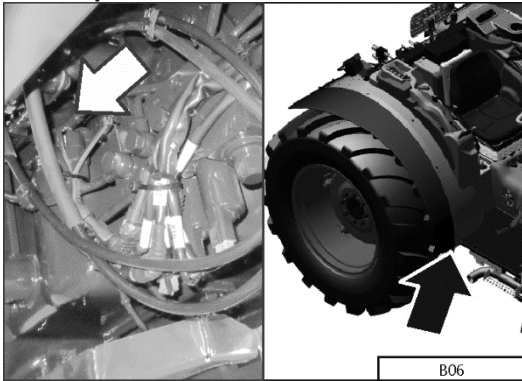


B07A - 540E/1000 PTO speed selector switch

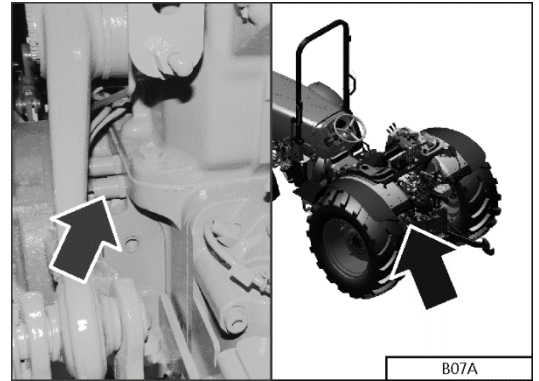


B07B - 540 PTO speed selector switch

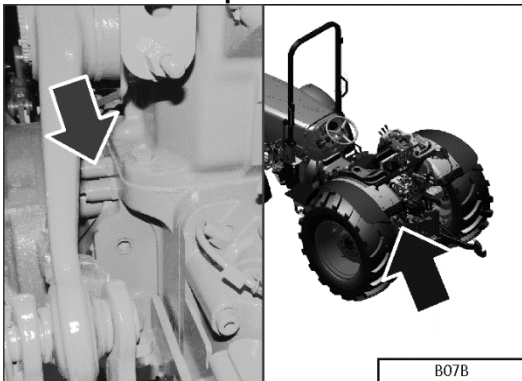


B08 - Mechanical PTO switch

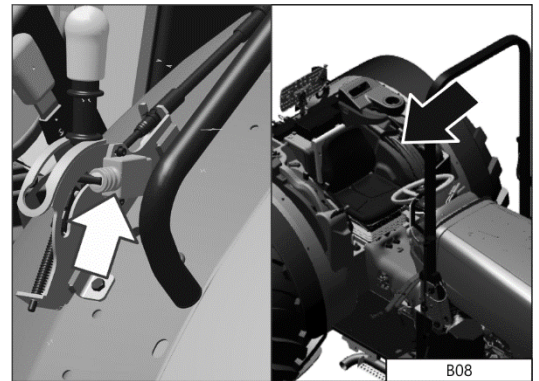


B31 - Trailer brake pressure sensor

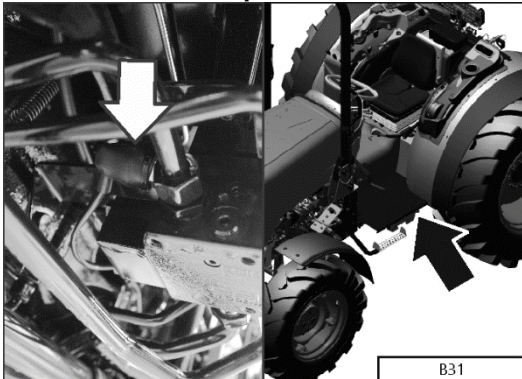


B36 - Neutral start switch

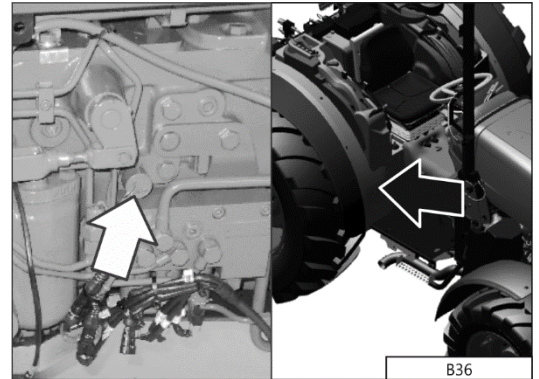


B60 - Transmission oil temperature sensor

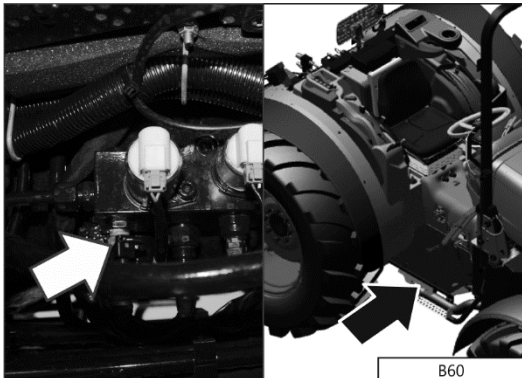


B63 - Ranges switch

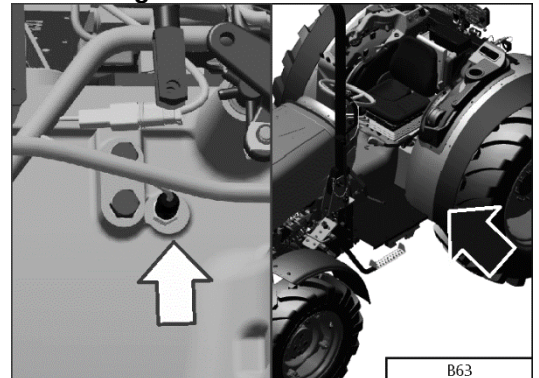


B64 - FNR lever

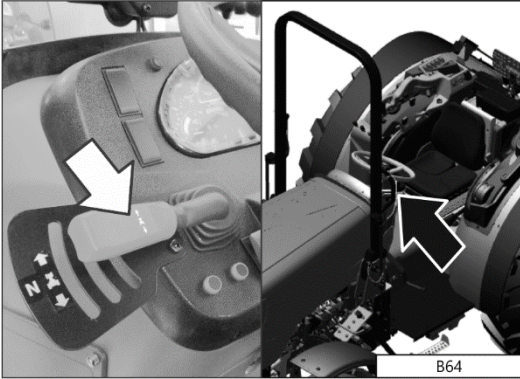


B65 - Clutch pedal position sensor

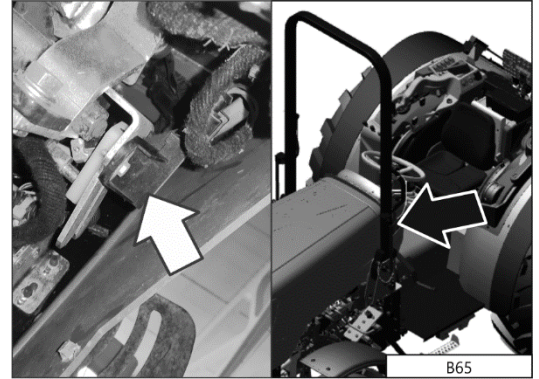


B69 - Brakes oil level switch

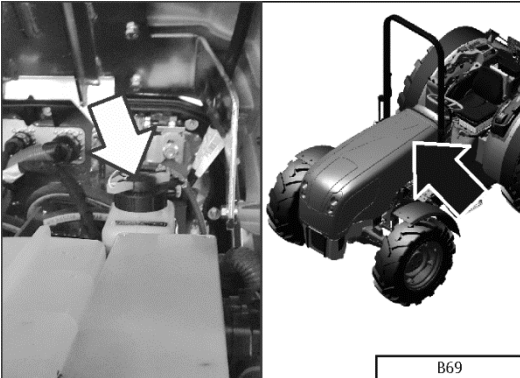


B73 - Transmission oil filter clogged switch

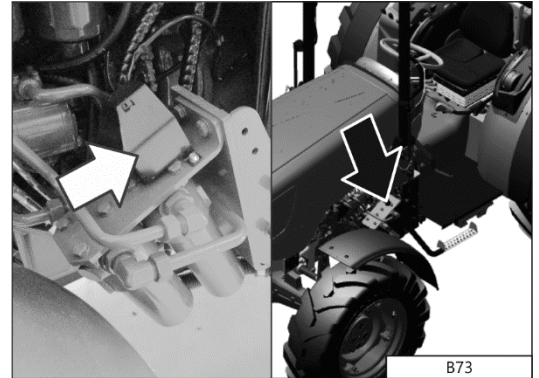


B104 - Transmission out speed signal

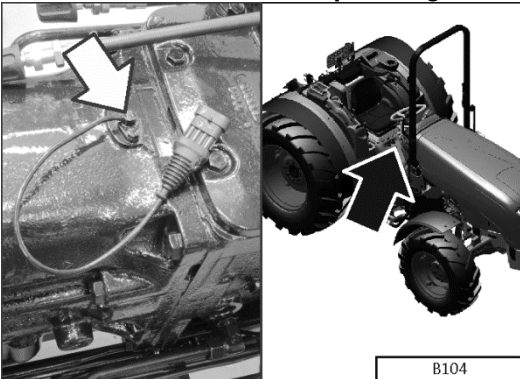


B112L - LHS brake pedal switch

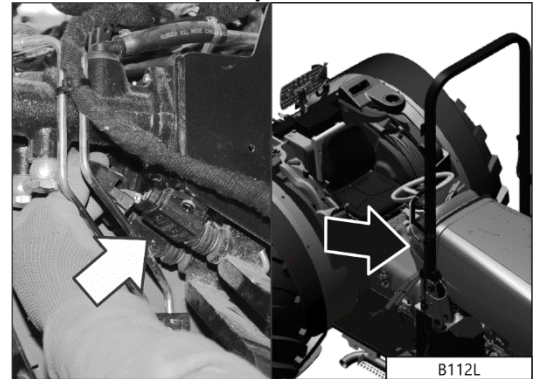


B112R - RHS brake pedal switch

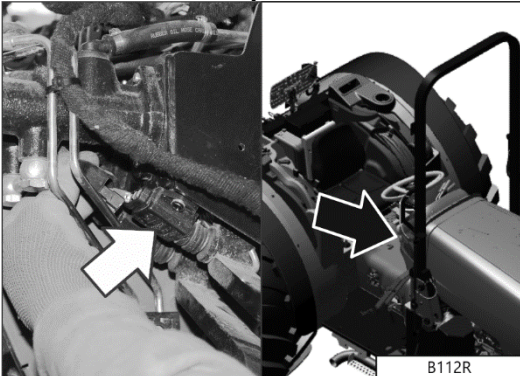


B300 - HI pressure sensor

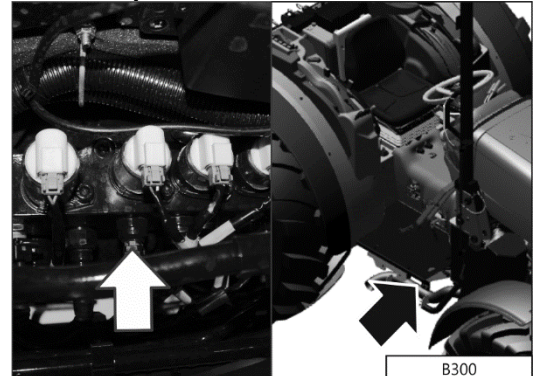


B301 - LO pressure sensor

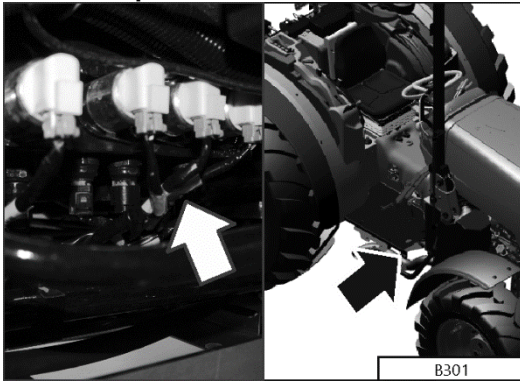


B302 - RV pressure sensor

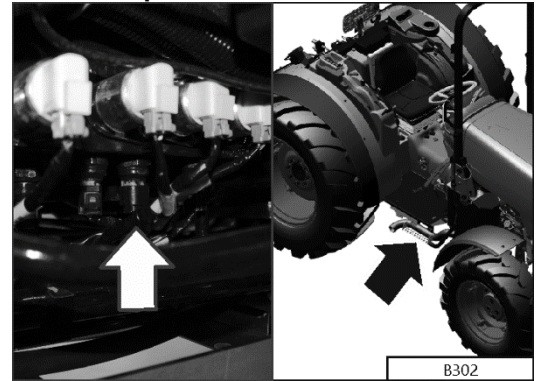


B303 - Transmission oil pressure switch

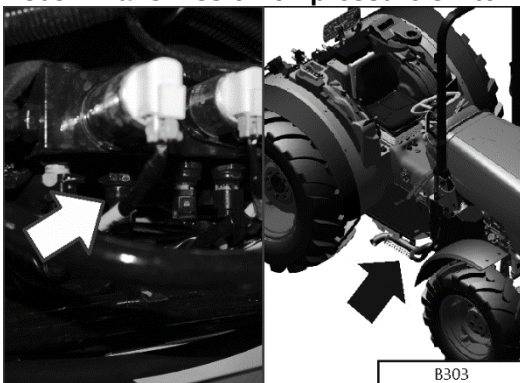


B350 - PTO pressure switch

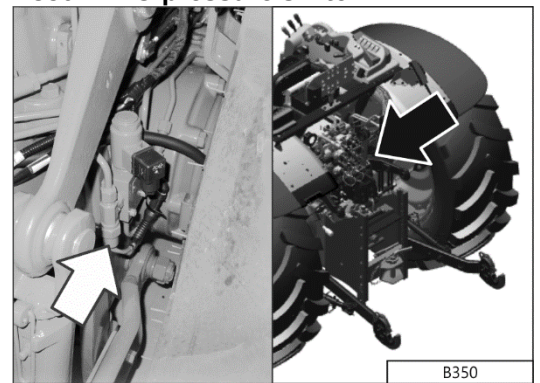


B501 - Lambda sond

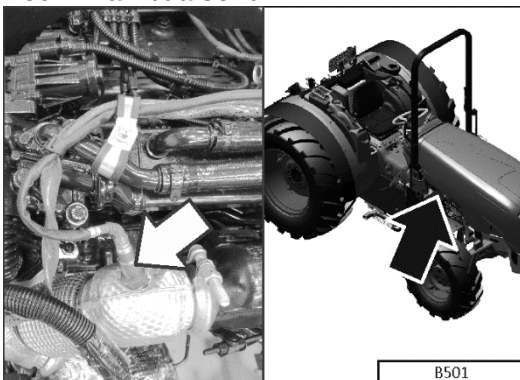


B509 - Air temperature sensor

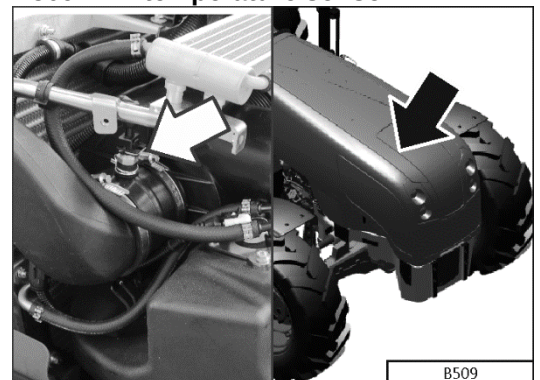


B510 - Water in fuel switch

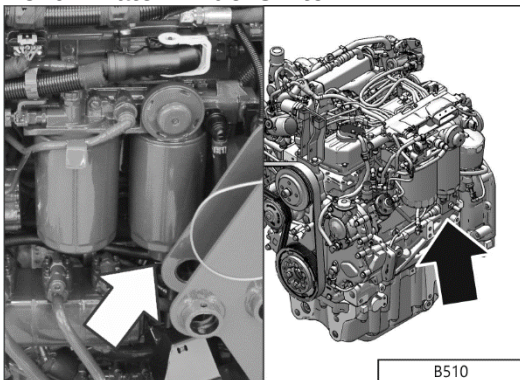


B511 - Delta pressure sensor

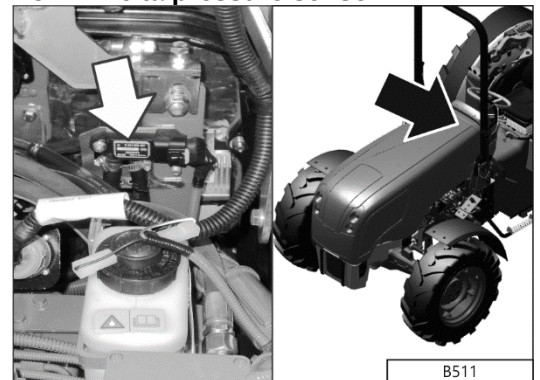


B512 - Exhaust gas temperature sensor 1

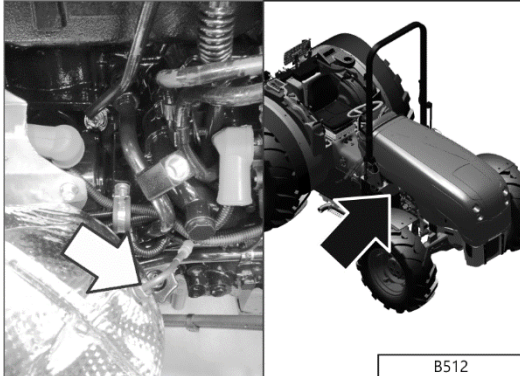


B513 - Exhaust gas temperature sensor 2

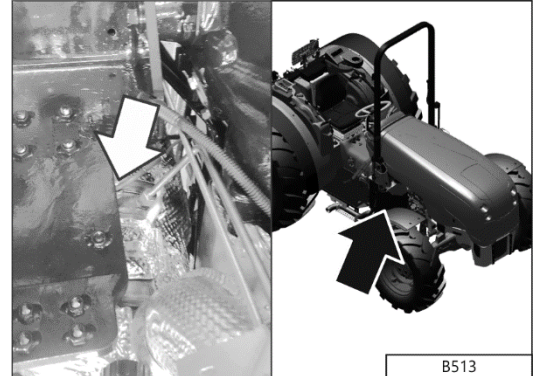


B979 - Steering angle sensor

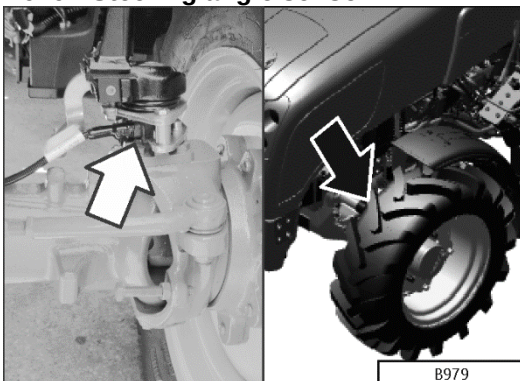


B980 - PTO shaft output sensor

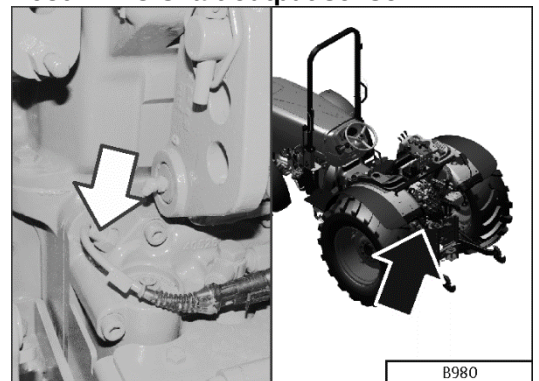


B987 - Diff-lock pressure switch

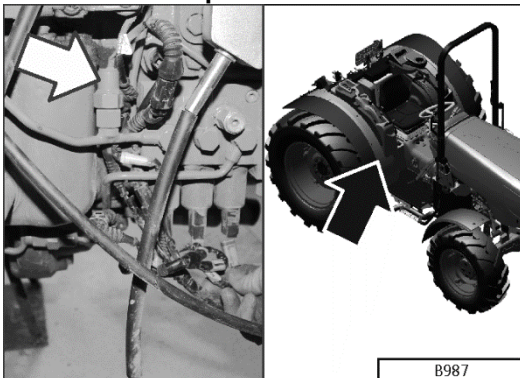


B988 - 4WD pressure switch

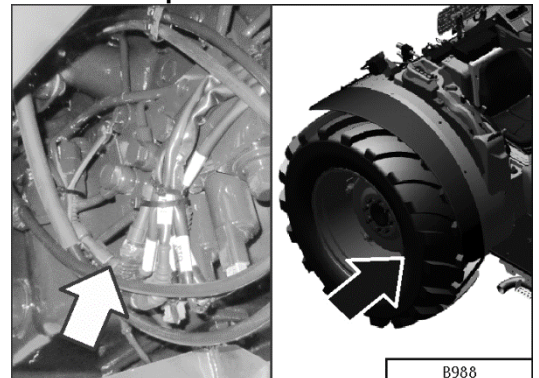


B989 - PTO signal 2

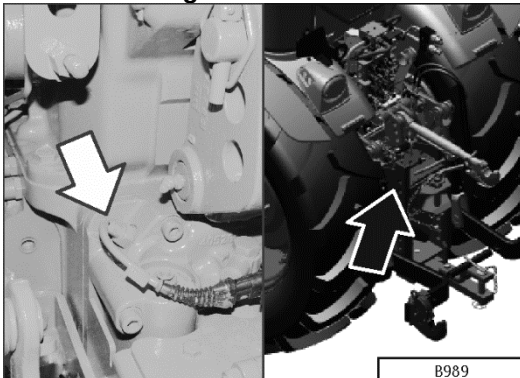


B990 - PTO signal 1

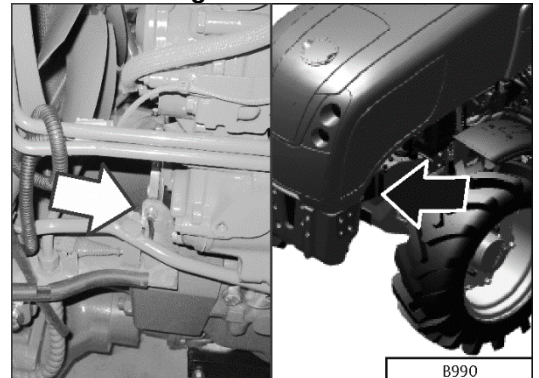


B998 - Hand throttle sensor

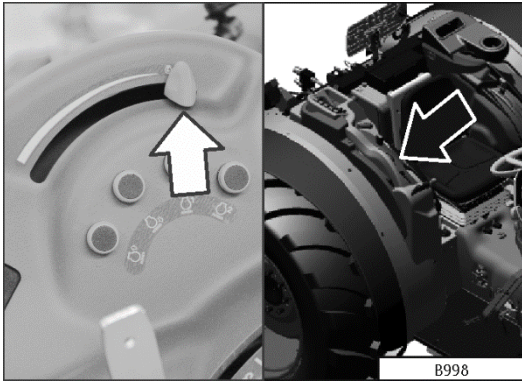


B999 - Foot throttle sensor

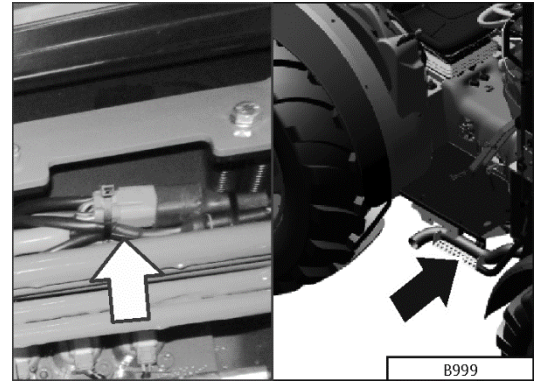


E01A - RHS Low beam

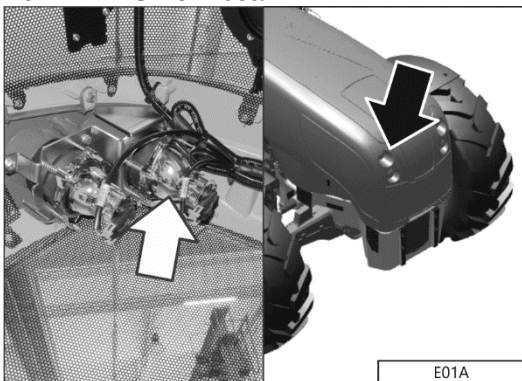


E01B - RHS High beam

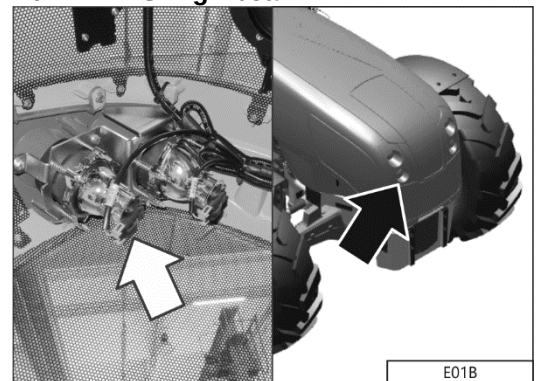


E02A - LHS Low beam

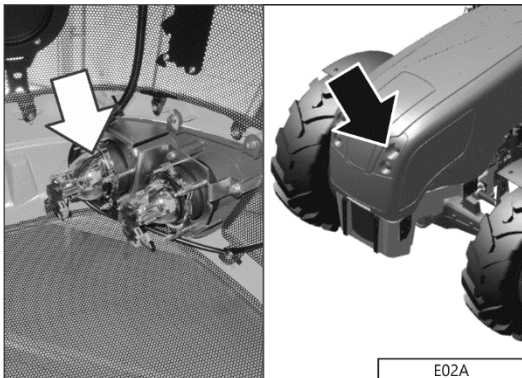


E02B - LHS High beam

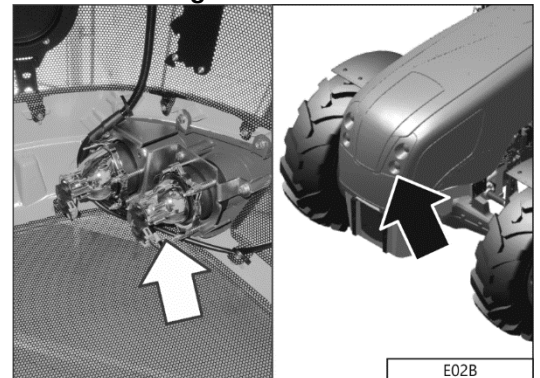


E03 - RH grabrail light

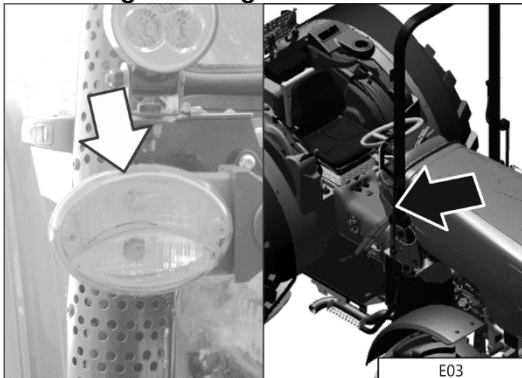


E04 - LH grabrail light

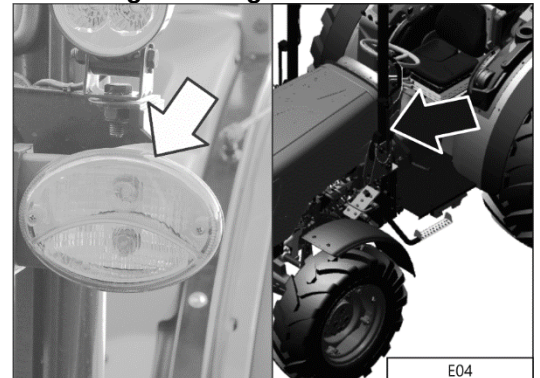


E05 - Cigarette lighter

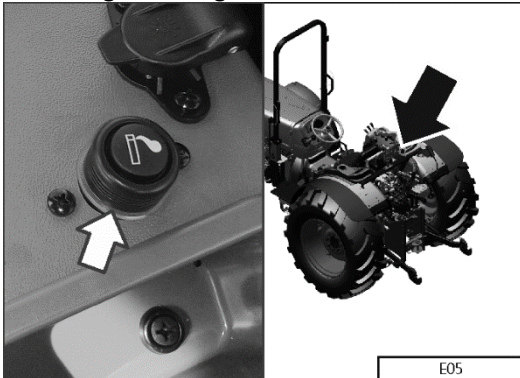


E07 - LH Front H4 light

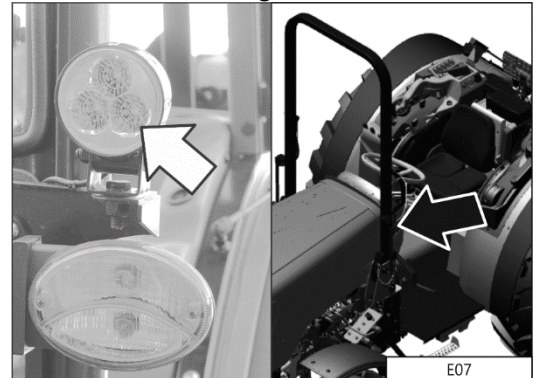


E08 - RH Front H4 light

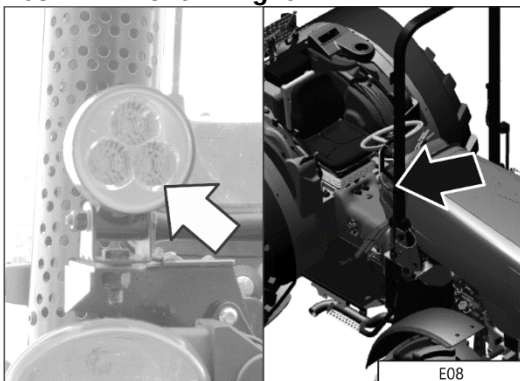


E13 - LH Rear road light

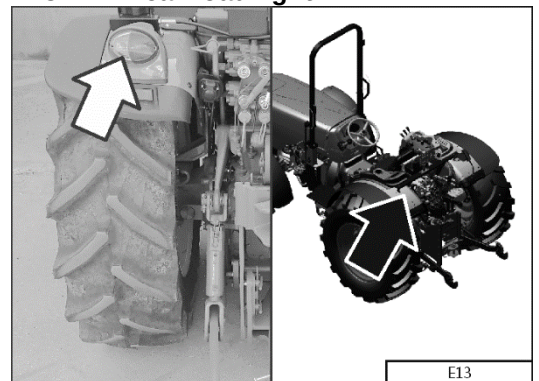


E14 - RH Rear road light

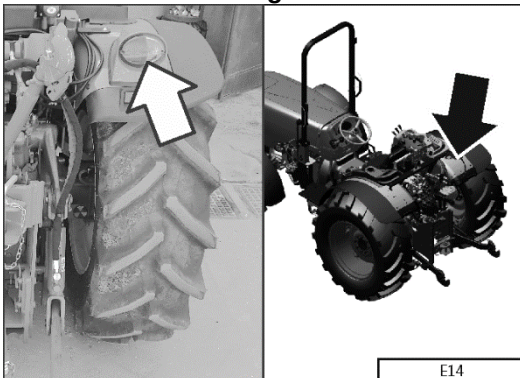


E21 - Licence plate light

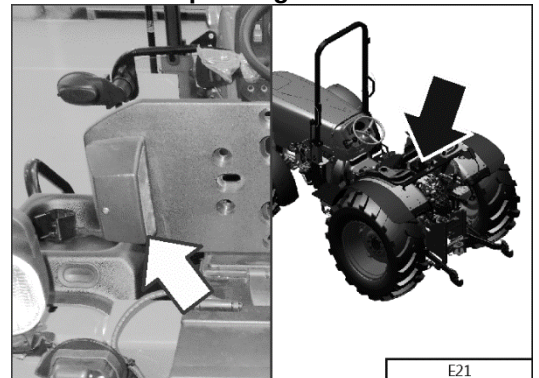


E27 - Beacon light

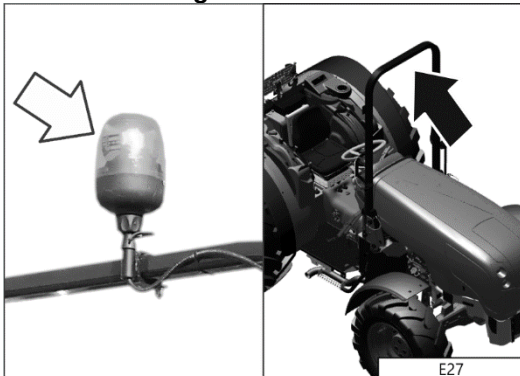


E997 - LH Front H3 light

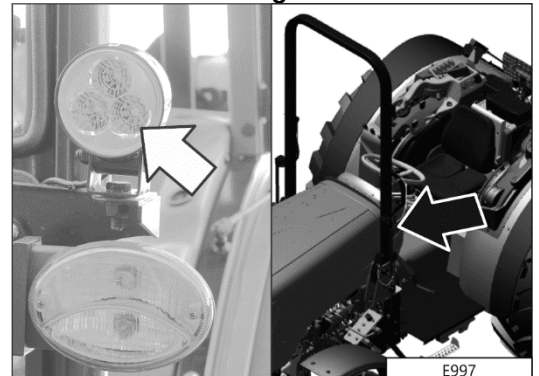


E998 - RH Front H3 light

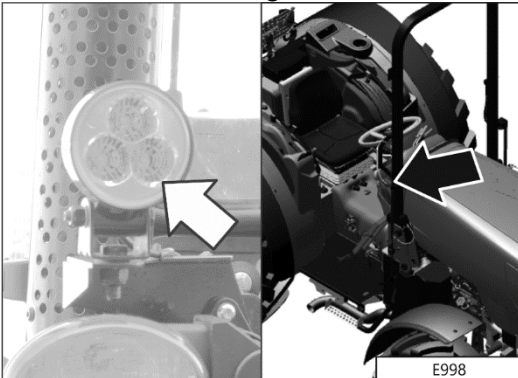


F01 - Glow plug fuse

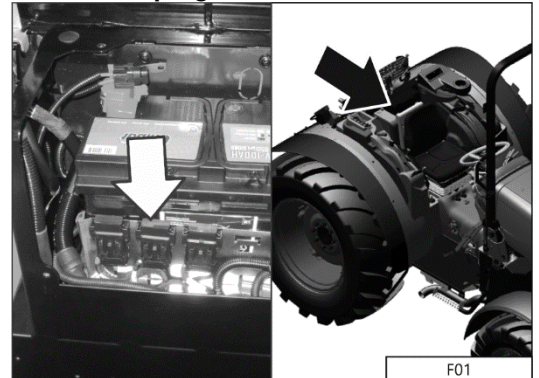


F02 - Engine ECU fuse

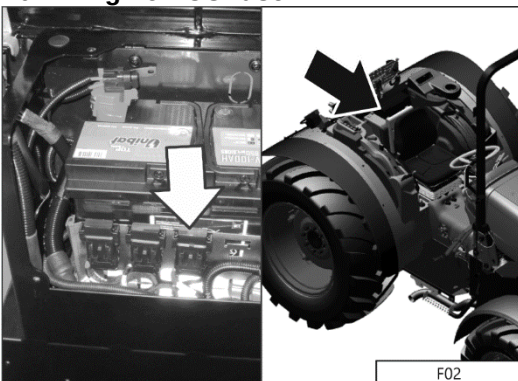


F03 - Main fuse

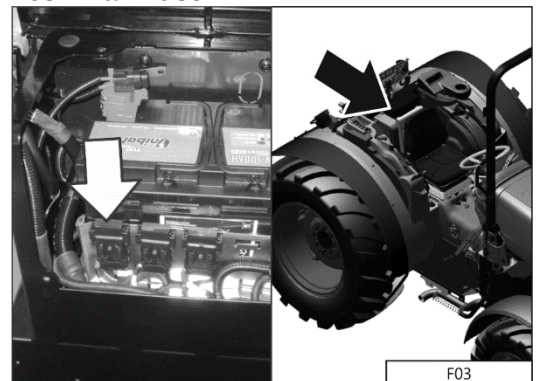


G01 - Battery

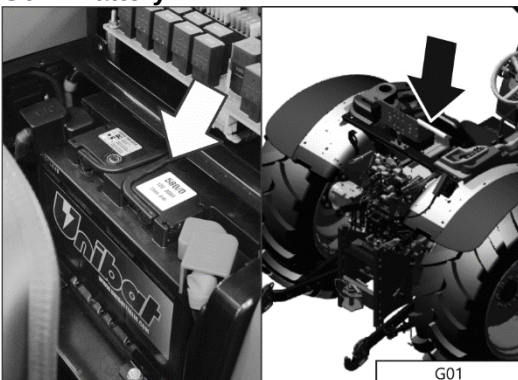


G02 - Alternator

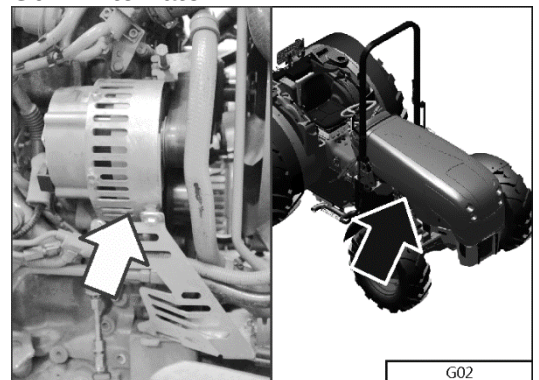


H01 - Claxon

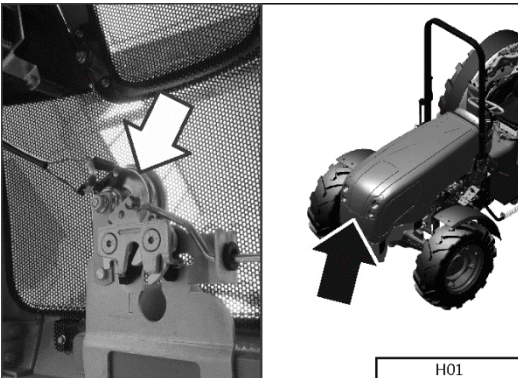


H80 - Trailer brake switch

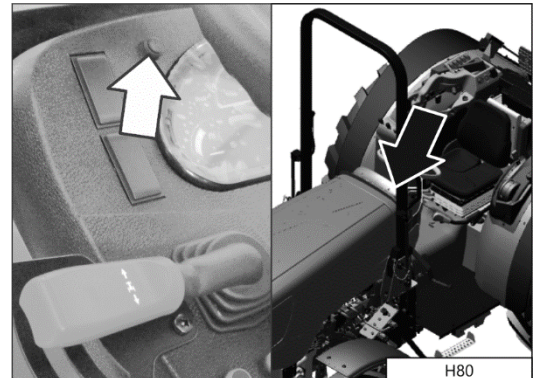


K01 - Starter relay

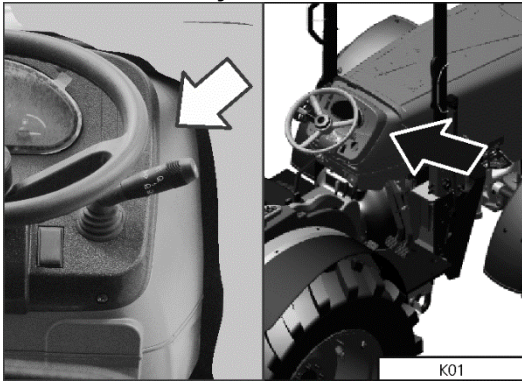


K08 - Flasher unit

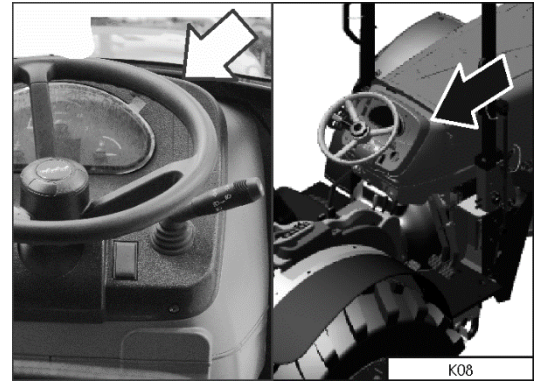


M01 - Starter motor

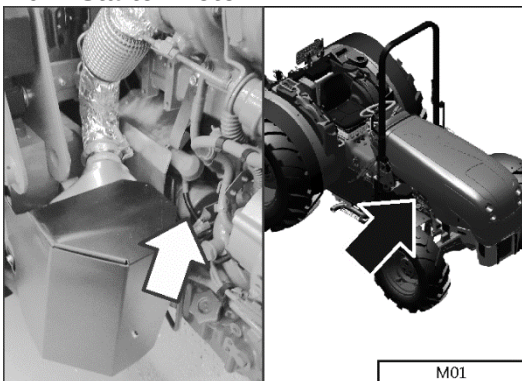


M06 - Air seat

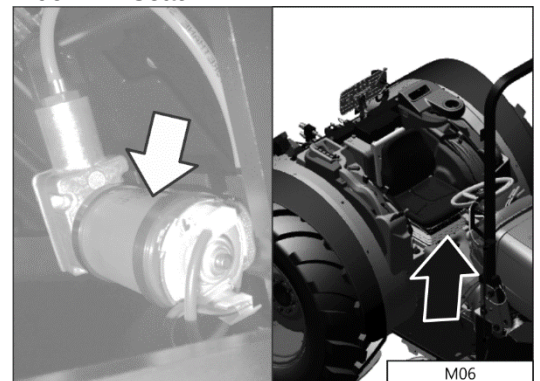


PCB

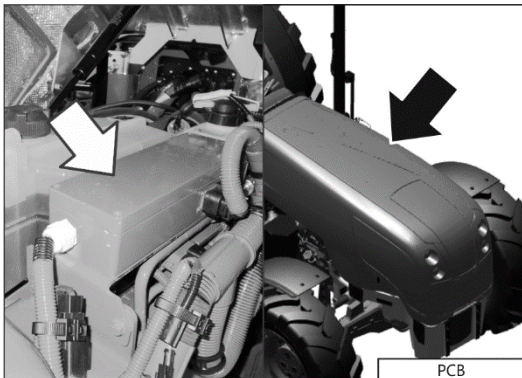


R505 - Fuel filter heating

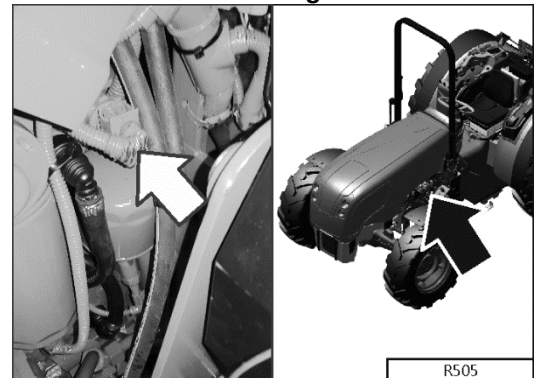


RS232 - Socket

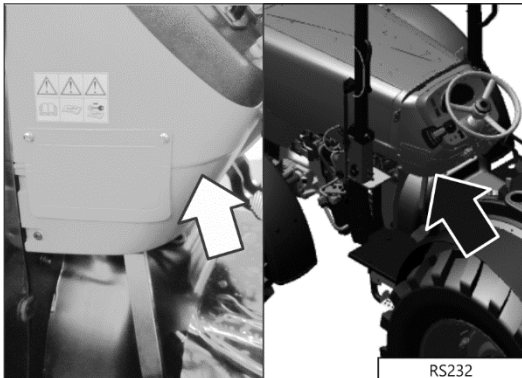


S01 - Ignition switch

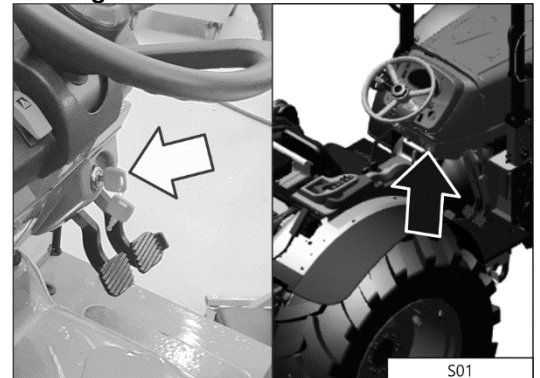


S09 - Blinker lever

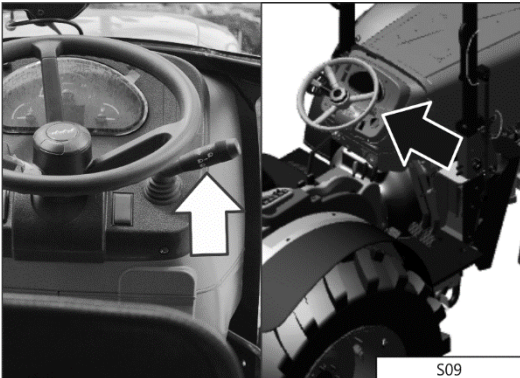


S11 - H4 lights switch

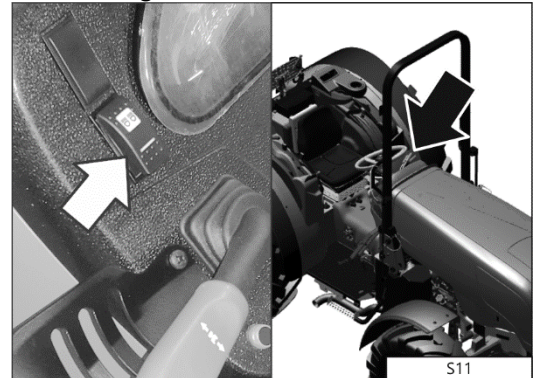


S20 - Calibration hidden button

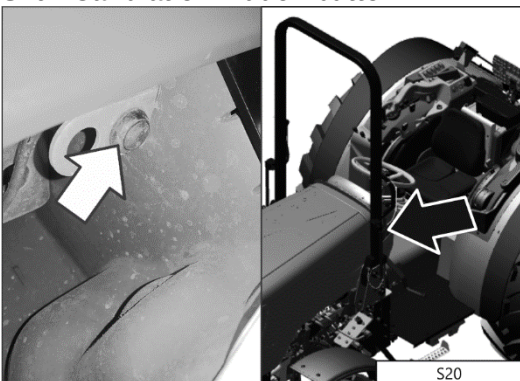


S21A - GD PTO selector switch

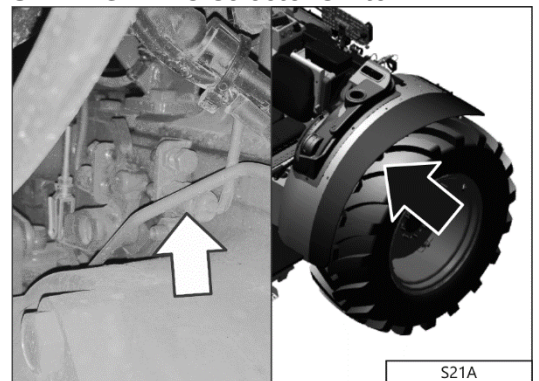


S21B - DIR PTO selector switch

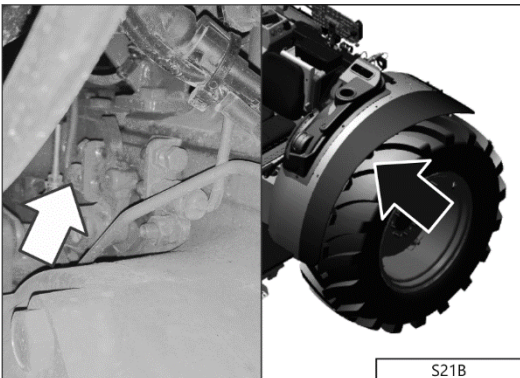


S22 - Diff-lock switch

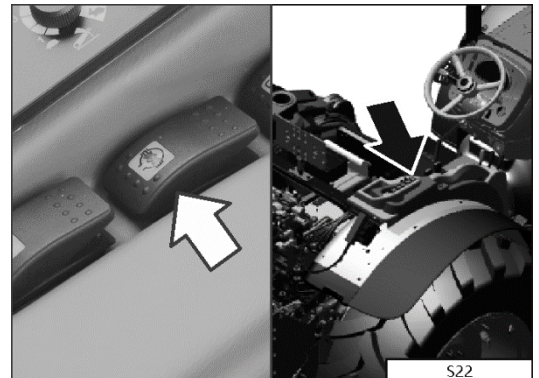


S36 - Beacon switch

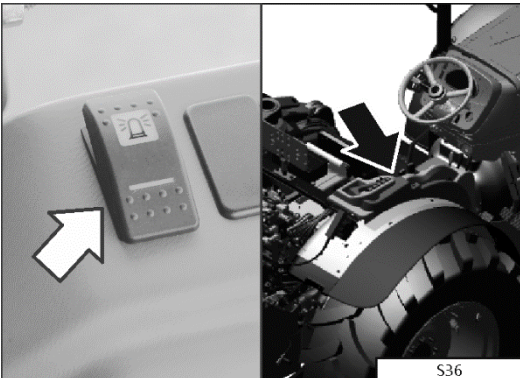


S40 - Seat switch

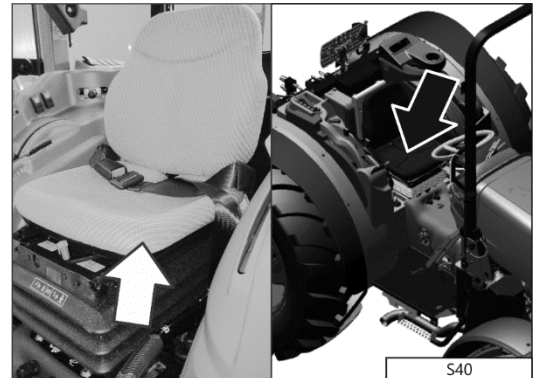


S61 - Rear work light

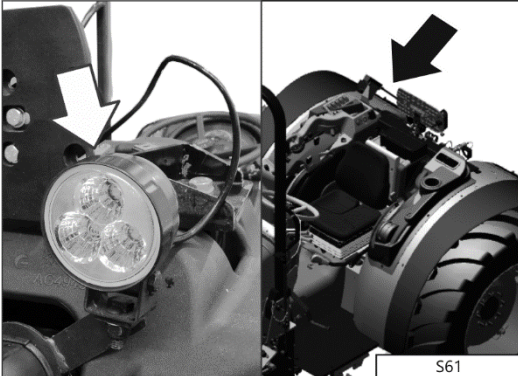


S63 - 4WD switch

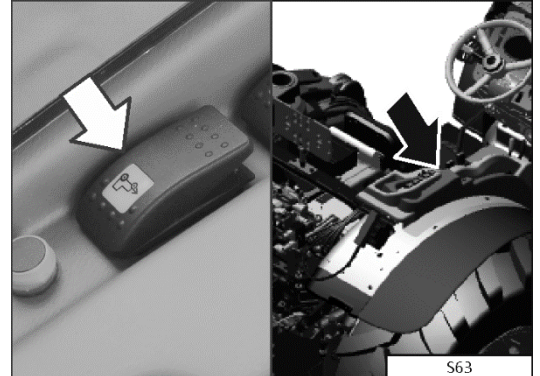


S72 - Clutch pedal end stroke switch

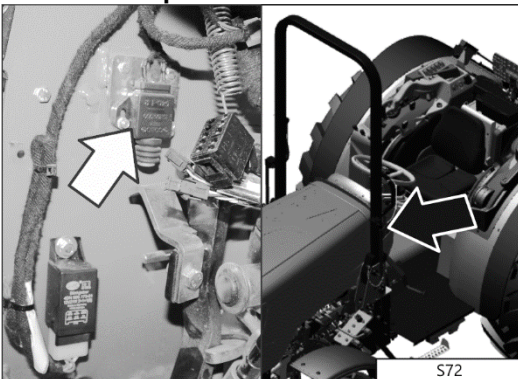


S106 - Hazard switch

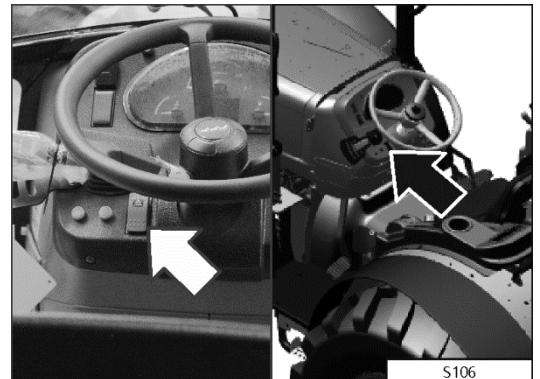


S300 - HI-LO switch

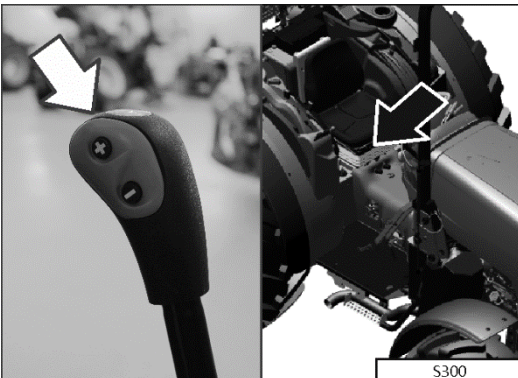


S350 - Rear hydraulic PTO switch

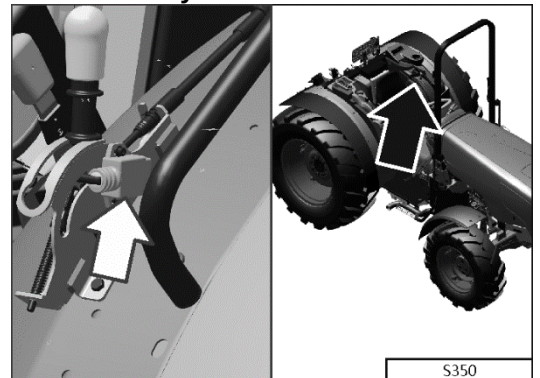


S900 - Battery cutt-off switch

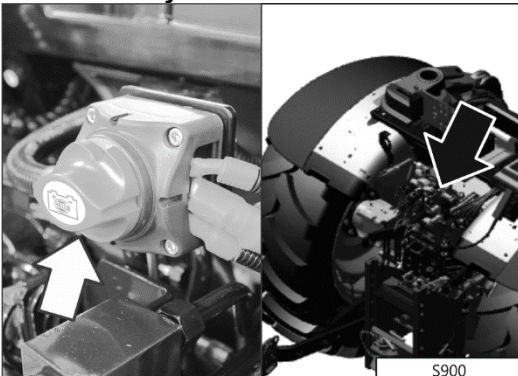


S987 - RIGID-FLOTT switch

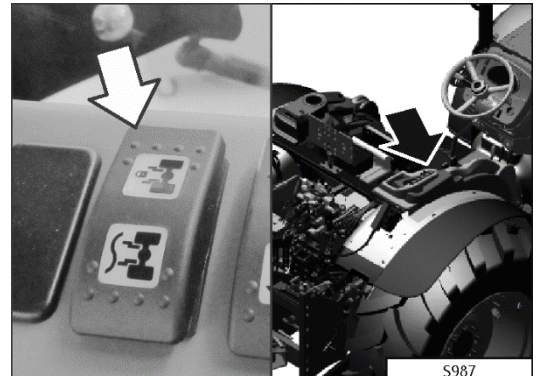


S988 - LEFT-RIGHT switch

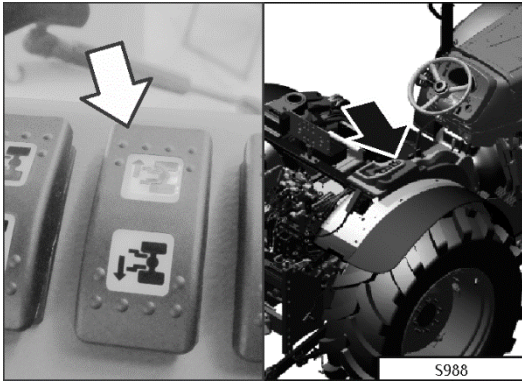


S989 - UP-DOWN switch

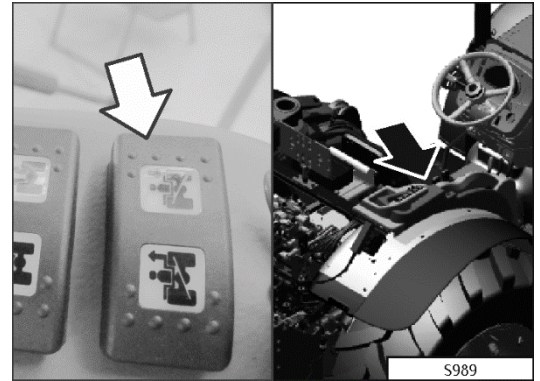


S990 - Button menu

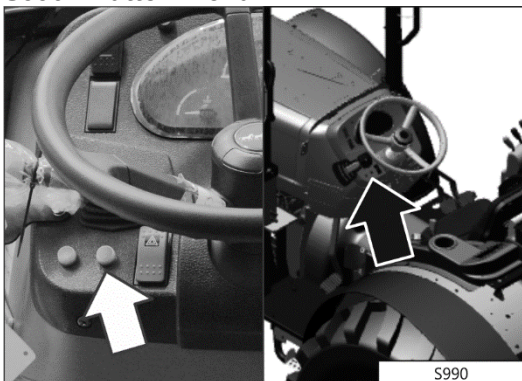


S991 - Button set

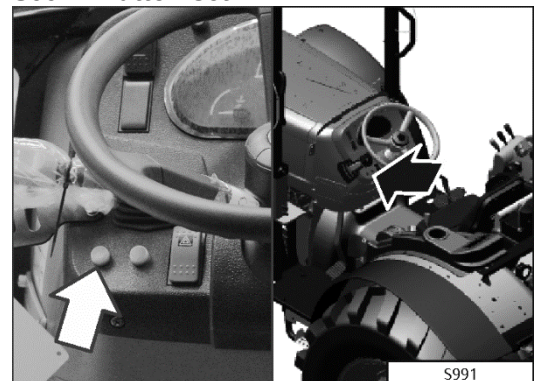


S992A - Cruise control MEM1

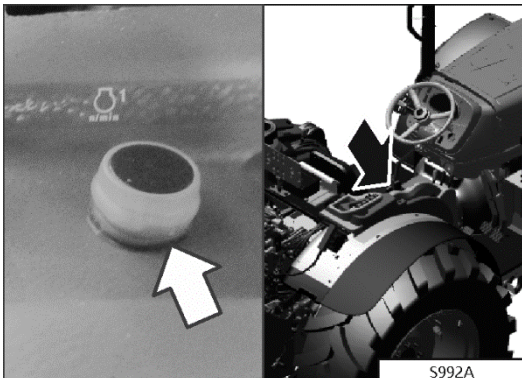


S992B - Cruise control MEM2

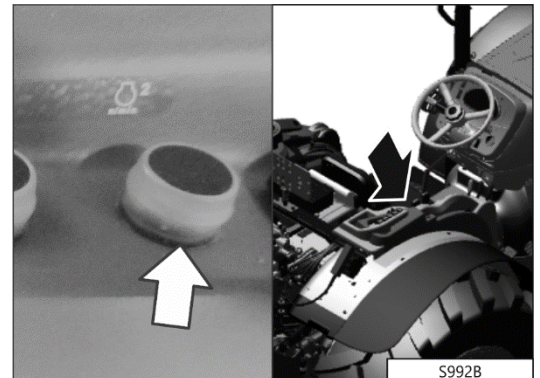


S993 - Cruise control DW

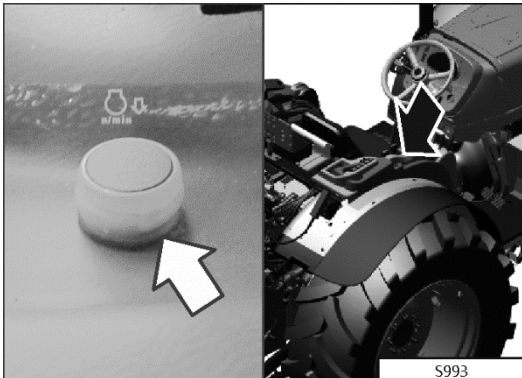


S994 - Cruise control UP

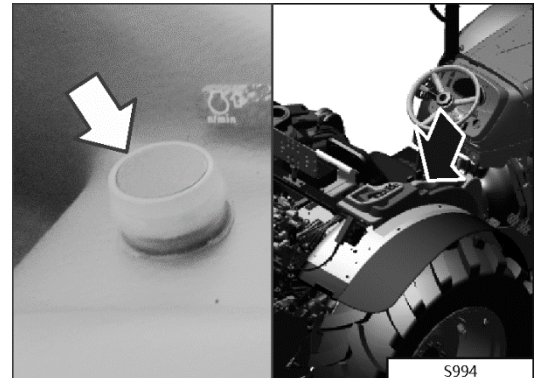


S999 - Front PTO switch

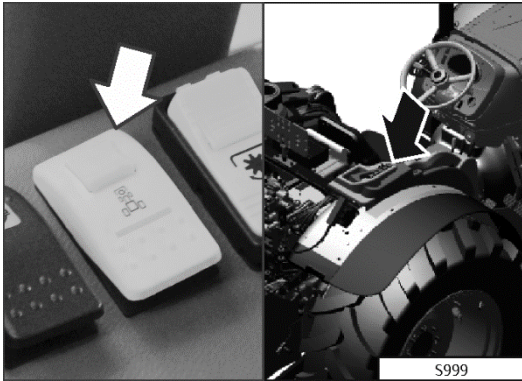


X42 - 3 Pole socket

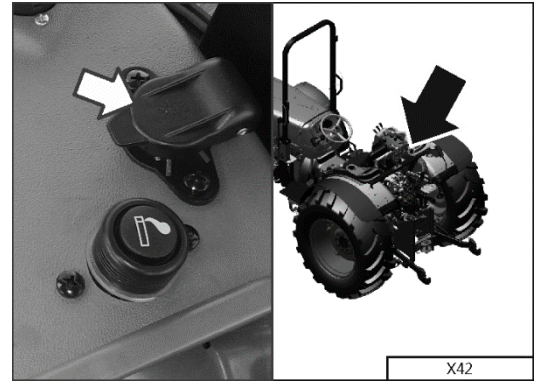


Y03 - 4WD solenoid valve

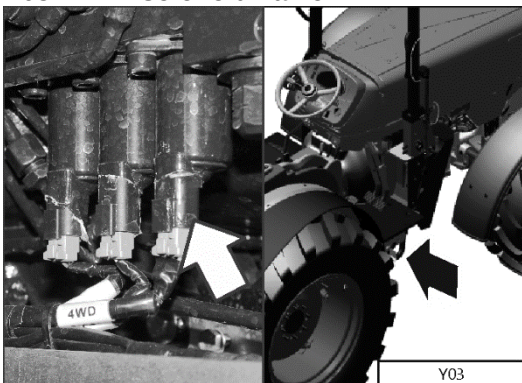


Y04 - PTO main valve connection

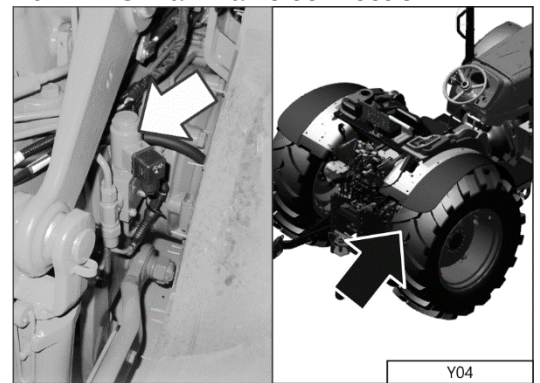


Y05 - Diff-lock solenoid valve

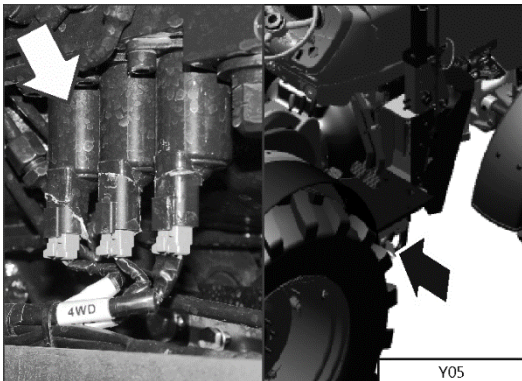


Y31 - Trailer brake solenoid valve

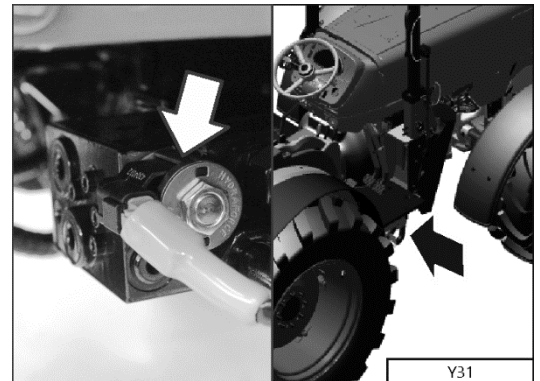


Y51 - RV solenoid valve

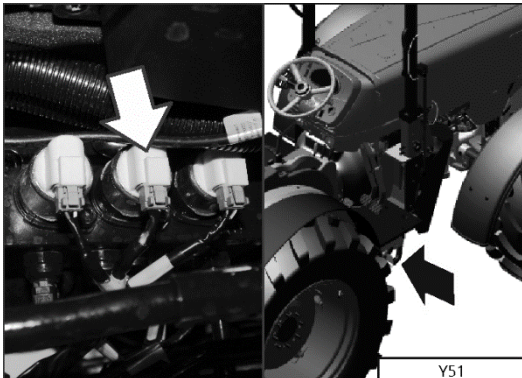


Y52 - FL solenoid valve

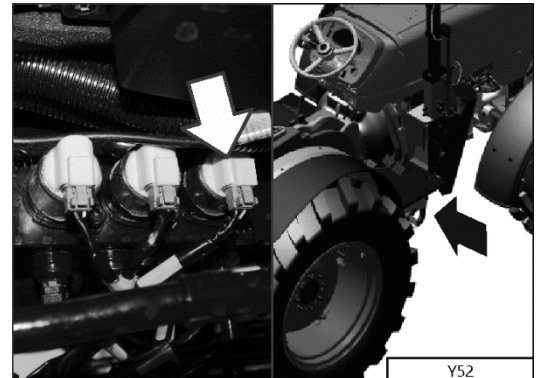


Y53 - FH solenoid valve

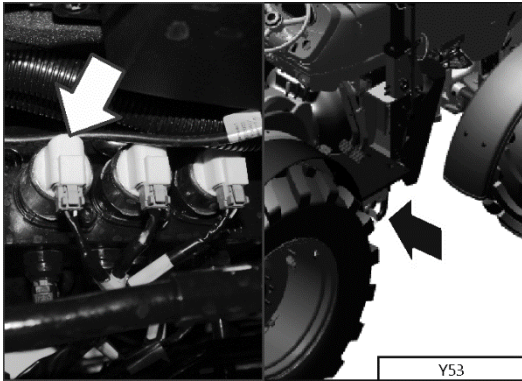


Y300 - Main ring solenoid valve

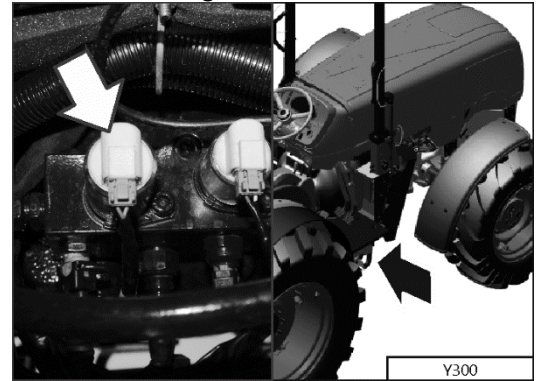


Y350 - PTO safety solenoid valve

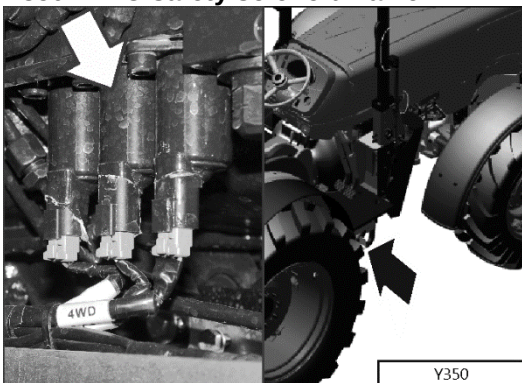


Y986 - Deport solenoid valve 7

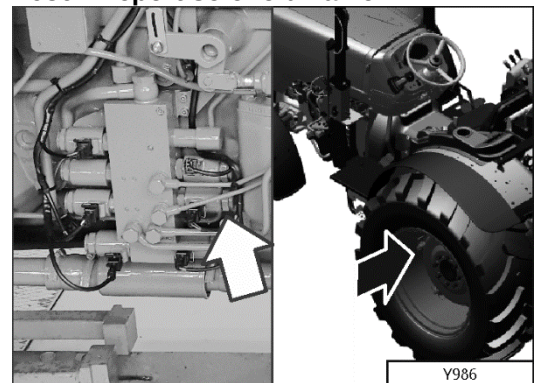


Y987 - Deport solenoid valve 6

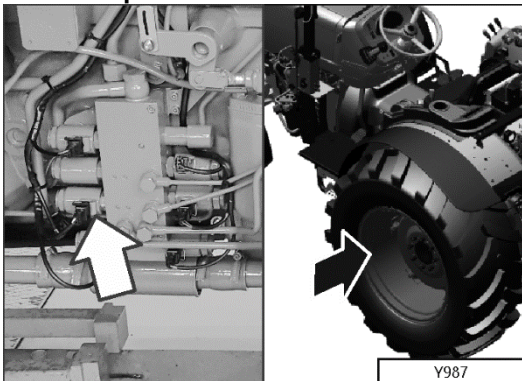


Y988 - Deport solenoid valve 5

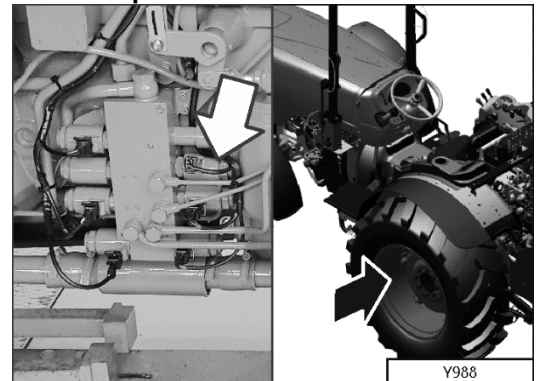


Y989 - Deport solenoid valve 4

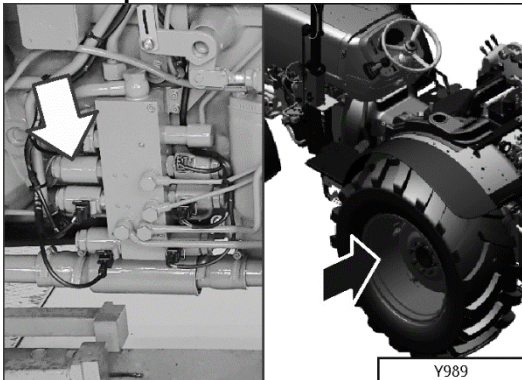


Y990 - Deport solenoid valve 3

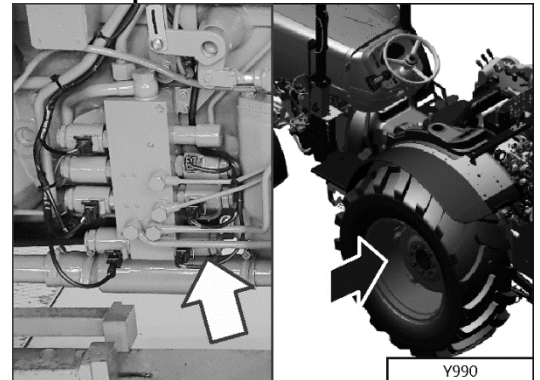

Y991 - Deport solenoid valve 2

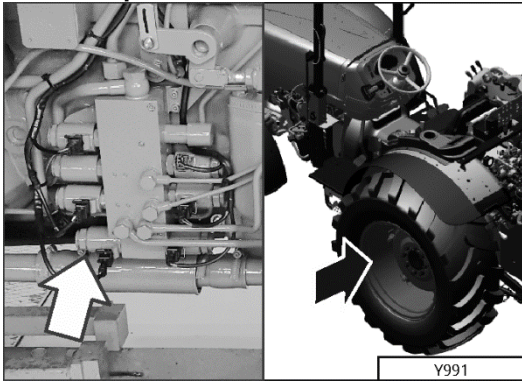

Y992 - Deport solenoid valve 1

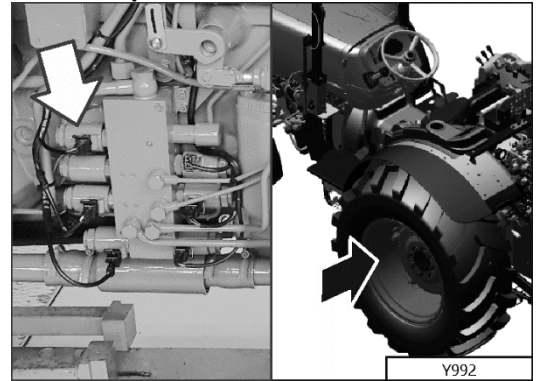

Y999 - Front PTO solenoid valve

